



Multi-Protocol On-board Ethernet Print Server

Network User's Guide

TD-series

Read this guide thoroughly before using the machine. Keep the CD-ROM in a convenient place so you can use it quickly if you need to.

Visit us at <http://solutions.brother.com> where you can get product support, the latest driver updates and utilities, and answers to frequently asked questions (FAQs) and technical questions.

Definition of Symbols in this manual

We use the following icon throughout this Network User's Guide:



Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.

Trademarks

Brother and the Brother logo are registered trademarks and BRAdmin Light and BRAdmin Professional are trademarks of Brother Industries, Ltd.

UNIX is a registered trademark of The Open Group.

Microsoft, Windows Vista, Windows Server and Windows are registered trademarks of Microsoft Corporation, in the United States and/or other countries.

All other terms, brand and product names mentioned in this manual are registered trademarks or trademarks of their respective companies.

Compilation and publication notice

Under the supervision of Brother Industries Ltd., this guide has been compiled and published, covering the latest product's descriptions and specifications.

The contents of this guide and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

The screen images in this guide may differ depending on your OS or printer.

©2010 Brother Industries Ltd.

IMPORTANT NOTE:

- Windows® XP in this document represents Windows® XP Professional, and Windows® XP Home Edition. In addition, Windows® XP in this document does not represent Windows XP x64 Edition.
- Windows Vista® in this document represents all editions of Windows Vista®.
- Windows® 7 in this document represents all editions of Windows® 7.
- Windows Server® 2003 in this document does not represent Windows Server® 2003 x64 Edition.
- Windows Server® 2008 in this document represents all editions of Windows Server® 2008.

Brother Numbers

For technical and operational assistance, you must call the country where you purchased the machine. Calls must be made **from within** that country.

In USA

1-800-255-0415

In Europe

Visit <http://www.brother.com> for contact information on your local Brother office.

Internet addresses

Brother Global Web Site: <http://www.brother.com>

(In USA Only) Brother Mobile Solutions Web Site: <http://www.brothermobilesolutions.com>

For Frequently Asked Questions (FAQs), Product Support and Technical Questions, and Driver Updates and Utilities: <http://solutions.brother.com>

(In USA Only) For Brother Accessories & Supplies: 1-800-543-6144

Table of Contents

1	Introduction	1
	Overview	1
	Network function features	2
	Network printing	2
	Management utility	2
	Types of network connection	3
	Network connection example	3
	Protocols	5
	TCP/IP protocols and functionalities	5
2	Configuring your network printer	7
	Overview	7
	IP addresses, subnet masks and gateways	8
	IP address	8
	Subnet mask	9
	Gateway (and router)	9
	Setting the IP address and subnet mask	10
	Using the BRAdmin Light utility to configure your network printer	10
	Using other methods to configure your machine for a network	11
	Changing the print server settings	12
	Using the BRAdmin Light utility to change the print server settings	12
	Using Web Based Management (web browser) to change the print server settings	12
	Printing the Printer Settings	13
	How to print the Printer Settings Page	13
3	Network printing: basic TCP/IP Peer-to-Peer printing	14
	Overview	14
	Configuring the standard TCP/IP port	15
	Printer driver not yet installed	15
	Printer driver already installed	17
	Other sources of information	17
4	Driver Deployment Wizard	18
	Overview	18
5	Troubleshooting	19
	Overview	19
	General problems	20
	Network print software installation problems	21
	Printing problems	22
	Protocol-specific troubleshooting	23
	Web Based Management (web browser) troubleshooting (TCP/IP)	23

A	Appendix A	24
	Using services	24
	Other ways to set the IP address (for advanced users and administrators)	24
	Using DHCP to configure the IP address	24
	Using BOOTP to configure the IP address	24
	Using RARP to configure the IP address	25
	Using APIPA to configure the IP address	26
	Using ARP to configure the IP address	26
	Using the Telnet console to configure the IP address	27
	Using the Brother Web BRAdmin server software for IIS* to configure the IP address	28
B	Appendix B	29
	Print server specifications	29
	Ethernet wired network	29
	Computer requirements	29
	Management utilities	30
C	Index	31

Overview

The Brother printer can be shared on a 10/100Mb wired Ethernet network using the internal network print server. The print server provides printing services for Windows® XP, Windows Vista®, Windows® 7, Windows Server® 2003/2008/2008 R2 supporting the TCP/IP protocols. The following chart shows which network features and connections are supported by each operating system.

Operating Systems	10/100 BASE-TX Wired Ethernet (TCP/IP)	Printing	BRAdmin Light	BRAdmin Professional ¹	Status Monitor	Driver Deployment Wizard	Web BRAdmin ¹
Windows® XP	✓	✓	✓	✓	✓	✓	✓
Windows Vista®							
Windows® 7							
Windows Server® 2003/2008							
Windows Server® 2008 R2 ²	✓	✓	✓		✓	✓	

¹ BRAdmin Professional and Web BRAdmin are available as a download from <http://solutions.brother.com>

² For news and information regarding BRAdmin Professional and Web BRAdmin for Windows Server 2008 R2, please visit <http://solutions.brother.com>

To use the Brother printer through a network, you need to configure the print server, and set up the computers you use.

Network function features

The Brother TD-4100N has the following basic network functions.

Network printing

The print server provides printing services for Windows® XP, Windows Vista®, Windows® 7 and Windows Server® 2003/2008/2008 R2 supporting the TCP/IP protocols.

Management utility

BRAdmin Light

BRAdmin Light is a utility for initial setup of Brother network connected devices. This utility can search for Brother products on your network, view the status and configure basic network settings, such as IP address. The BRAdmin Light utility is available for Windows® XP, Windows Vista®, Windows® 7, Windows Server® 2003/2008/2008 R2. For installing BRAdmin Light, see the User's Guide we provided with the machine.

For details on BRAdmin Light, visit us at <http://solutions.brother.com>

BRAdmin Professional

BRAdmin Professional is a utility for more advanced management of network connected Brother devices. This utility can search for Brother products on your network, view the status and configure the network settings from a computer running Windows®. BRAdmin Professional has additional features to BRAdmin Light. For details and to download, visit us at <http://solutions.brother.com>

Web BRAdmin

Web BRAdmin is a utility for managing network connected Brother devices. This utility can search for Brother products on your network, view the status and configure the network settings. Unlike BRAdmin Professional, which is designed for Windows® only, the Web BRAdmin server utility can be accessed from any client PC with a web browser that supports JRE (Java Runtime Environment). By installing the Web BRAdmin server utility on a PC running IIS¹, administrators can connect to the Web BRAdmin server with a web browser, which then communicates with the device itself.

For details and to download, visit us at <http://solutions.brother.com>

¹ Internet Information Server 4.0 or Internet Information Services 5.0 / 5.1 / 6.0 / 7.0 / 7.5
(7.5 is the current version, for Windows 7)


Types of network connection

Network connection example

Generally there are two types of network connections: Peer-to-Peer and Network Shared environment.

Peer-to-Peer printing using TCP/IP

In a Peer-to-Peer environment, each computer directly sends and receives data to each device. There is no central server controlling file access or printer sharing.

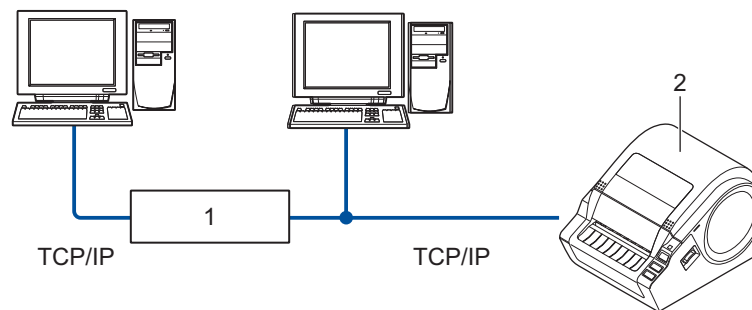


1 Router

2 Network printer

- In a smaller network of 2 or 3 computers, we recommend the Peer-to-Peer printing method as it is easier to configure than the Network Shared printing method described on the following page. See *Network Shared printing* on page 4.
- Each computer must use the TCP/IP Protocol.
- The Brother machine needs to have an appropriate IP address configuration.
- If you are using routers, the Gateway address must be configured on the computers and the Brother machine.

Network Shared printing

In a Network Shared environment, each computer sends data via a centrally controlled computer. This type of computer is often called a “Server” or a “Print Server”. Its job is to control the printing of all print jobs.

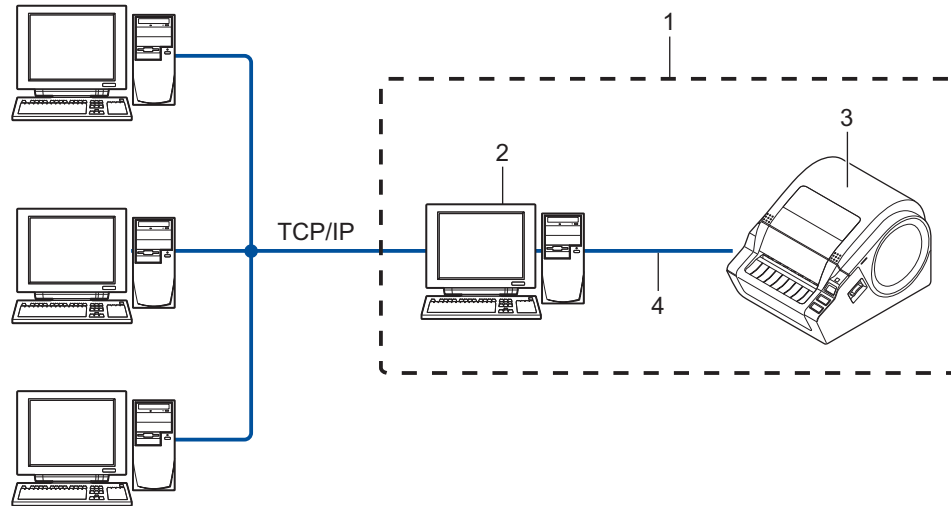

- 1 Network Shared environment
- 2 Also known as “Server” or “Printer server”
- 3 Network printer
- 4 TCP/IP, USB

- In a larger network, we recommend a Network Shared printing environment.
- The BRAdmin application and Bi-directional printing from other client workstations are not supported for Network Shared Printing via USB.
- The “server” or the “print server” must use the TCP/IP protocol.
- The Brother machine needs to have an appropriate IP address configuration unless the machine is connected via the USB interface at the server.
- For more information, visit us at <http://solutions.brother.com>

Protocols

TCP/IP protocols and functionalities

Protocols are the standardized sets of rules for transmitting data on a network. Protocols allow users to gain access to network connected resources.

The print server used on this Brother product supports the TCP/IP (Transmission Control Protocol/Internet Protocol) protocol.

TCP/IP is the most popular set of protocols used for communication such as Internet and E-mail. This protocol can be used in almost all operating systems such as Windows® and Linux.

The following TCP/IP protocols are available on this Brother product.

**Note**

You can configure the protocol settings by using HTTP (web browser). See *Using Web Based Management (web browser) to change the print server settings* on page 12.

DHCP/BOOTP/RARP

By using the DHCP/BOOTP/RARP protocols, the IP address can be automatically configured.

**Note**

To use the DHCP/BOOTP/RARP protocols, contact your network administrator.

APIPA

If you do not assign an IP address manually (using the BRAdmin software) or automatically (using a DHCP/BOOTP/RARP server), the Automatic Private IP Addressing (APIPA) protocol will automatically assign an IP address from the range 169.254.0.1 to 169.254.255.254.

DNS client

The Brother print server supports the Domain Name Service (DNS) client function. This function allows the print server to communicate with other devices by using its DNS name.

LPR/LPD

Commonly used printing protocols on a TCP/IP network.

Port9100

Another commonly used printing protocol on a TCP/IP network.

Telnet

The Brother print server supports Telnet server for command line configuration.

SNMP

The Simple Network Management Protocol (SNMP) is used to manage network devices including computers, printers and terminals in a TCP/IP network.

Web server (HTTP)

The Brother print server is equipped with a web server that allows you to monitor its status or change some of its configuration settings.



Note

We recommend Microsoft Internet Explorer 6.0[®] (or higher), Firefox[®] 2.0 (or higher) for Windows[®]. Make sure that JavaScript and Cookies are always enabled in whichever browser you use.

Overview

Before using your Brother printer in a network environment, you must configure the TCP/IP settings. In this chapter, you will learn the basic steps required to print over the network using the TCP/IP protocol.

We recommend that you use the automatic installer application on the CD-ROM we have provided with the machine. By using this application, you can easily connect your machine to your network and install the network software and printer driver which you need to complete the network configuration. You will be guided by the on-screen instructions until you are able to use your Brother network printer. Follow the instructions in the supplied User's Guide.

If you want to configure your machine without using the automatic installer application, refer to the remainder of this chapter for more information.

IP addresses, subnet masks and gateways

To use the machine in a networked TCP/IP environment, you need to configure the IP address and subnet mask. The IP address you assign to the print server must be on the same logical network as your host computers. If it is not, you must properly configure the subnet mask and the gateway address.

IP address

An IP address is a series of numbers that identifies each computer connected to a network. An IP address consists of four numbers separated by dots. Each number is between 0 and 255.

■ Example: In a small network, you would normally change the final numbers.

- 192.168.1.1
- 192.168.1.2
- 192.168.1.3

How the IP address is assigned to your print server:

If you have a DHCP/BOOTP/RARP server in your network (typically a Windows® XP, Windows Vista®, Windows® 7, Windows Server® 2003/2008/2008 R2, or UNIX®/Linux network) the print server will automatically obtain its IP address from the server and register its name with any RFC 1001 and 1002-compliant dynamic name services.



Note

On smaller networks, the DHCP server may be the router.

For details on DHCP, BOOTP and RARP, see *Using DHCP to configure the IP address* on page 24, *Using BOOTP to configure the IP address* on page 24 and *Using RARP to configure the IP address* on page 25.

If you do not have a DHCP/BOOTP/RARP server, the Automatic Private IP Addressing (APIPA) protocol will automatically assign an IP address from the range 169.254.0.1 to 169.254.255.254. For details on APIPA, see *Using APIPA to configure the IP address* on page 26.

If the APIPA protocol is disabled, the IP address of a Brother print server is 192.0.0.192. However, you can easily change this IP address number to match with the IP address details of your network. For details on how to change the IP address, see *Setting the IP address and subnet mask* on page 10.

Subnet mask

Subnet masks restrict network communication.

■ Example: Computer 1 can talk to Computer 2

- Computer 1

IP Address:192.168.1.2

Subnet Mask:255.255.255.0

- Computer 2

IP Address:192.168.1.3

Subnet Mask:255.255.255.0



Note

0 denotes that there is no limit to communication at this part of the address.

In the above example, we can communicate with any device that has an IP address that begins with 192.168.1.1 - 192.168.1.254.

Gateway (and router)

A gateway is a network point that acts as an entrance to another network and sends data transmitted via the network to an exact destination. The router knows where to direct data that arrives at the gateway. If a destination is located at an external network, the router transmits data to the external network. If your network communicates with other networks, you may need to configure the Gateway IP address. If you do not know the Gateway IP address then contact your Network Administrator.

Setting the IP address and subnet mask

Using the BRAdmin Light utility to configure your network printer

BRAdmin Light

The BRAdmin Light utility is designed for initial setup of Brother network connected devices. It can also search for Brother products in a TCP/IP environment, view the status and configure basic network settings, such as IP address. The BRAdmin Light utility is available for Windows® XP, Windows Vista®, Windows® 7, Windows Server® 2003/2008/2008 R2.



Note

- Use the BRAdmin Light utility version that was supplied on the CD-ROM with your Brother product. You can also download the latest version of BRAdmin Light utility from <http://solutions.brother.com>
- If you require more advanced printer management, use the latest version of BRAdmin Professional utility that is available as a download from <http://solutions.brother.com>. This utility is only available for Windows® users.
- If you are using personal firewall software (e.g. Windows Firewall), disable it. Once you are sure that you can print, re-start your personal firewall software.
- Node name: Node name appears in current BRAdmin Light. The default Node name is "BRNxxxxxxxxxxx" ("xxxxxxxxxxx" is the Ethernet address.).
- The default password for Brother print servers is `access`.

1


Start the BRAdmin Light utility.

Click **Start / All Programs / Brother / BRAdmin Light / BRAdmin Light**.

2

BRAdmin Light will search for new devices automatically.


- 3 Double-click the unconfigured device.

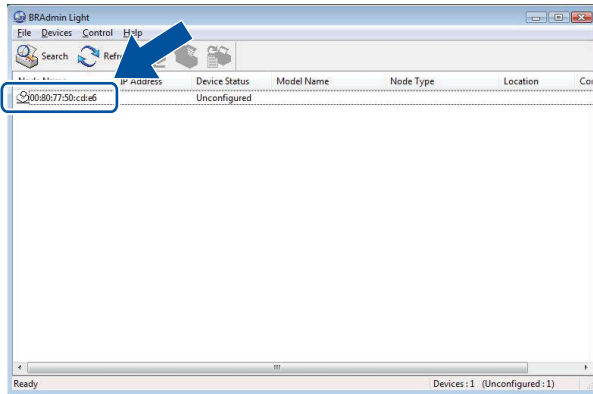

Note

- If the print server is set to its factory default settings without using a DHCP/BOOTP/RARP server, the device will appear as **Unconfigured** in the BRAdmin Light utility screen.
- If the device requires a password, the default password is `access`.
- You can find the node name and Ethernet address by printing out the Printer Settings Page. See *Printing the Printer Settings* on page 13.

- 4 Choose **STATIC** from **Boot Method**. Enter the **IP address**, **Subnet Mask** and **Gateway** (if needed) of your print server.

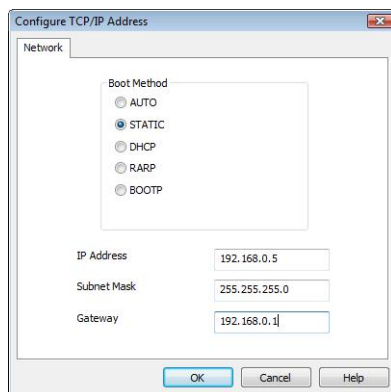

- 5 Click **OK**.
- 6 With the correctly programmed IP address information you will see the Brother print server in the device list.

Using other methods to configure your machine for a network

You can configure your network printer using other methods. See *Other ways to set the IP address (for advanced users and administrators)* on page 24.

Changing the print server settings

Using the BRAdmin Light utility to change the print server settings

2

- 1 Start the BRAdmin Light utility.
Click **Start / All Programs / Brother / BRAdmin Light / BRAdmin Light**.
- 2 Choose the print server which you want to change the settings.
- 3 Choose **Network Configuration** from the **Control** menu.
- 4 Enter a password. The default Password is `access`.
- 5 You can now change the print server settings.

**Note**

If you want to change more advanced settings, use the BRAdmin Professional utility that is available as a download from <http://solutions.brother.com>

Using Web Based Management (web browser) to change the print server settings

A standard web browser can be used to change your print server settings using the HTTP (Hyper Text Transfer Protocol).

**Note**

We recommend Microsoft Internet Explorer 6.0[®] (or higher), Firefox[®] 2.0 (or higher) for Windows[®]. Make sure that JavaScript and Cookies are always enabled in whichever browser you use. To use a web browser, you will need to know the IP address of the print server.

- 1 Type `http://printer_ip_address/` into your browser. (Where `printer_ip_address` is the IP address or the print server.)

■ For example:

`http://192.168.1.2/` (if the printer's IP address is 192.168.1.2.)



Note

If you have edited the hosts file on your computer or are using a Domain Name System, you can also enter the DNS name of the print server. As the print server supports TCP/IP and NetBIOS, you can also enter the NetBIOS name of the print server. The NetBIOS name can be seen on the Printer Settings Page. The NetBIOS name assigned is the first 15 characters of the node name and by default it will appear as "BRNxxxxxxxxxx" where "xxxxxxxxxx" is the Ethernet address.

- 2 Click **Network Configuration**.
- 3 Enter a user name and a password. The User Name is `admin` and the default Password is `access`.
- 4 Click **OK**.
- 5 You can now change the print server settings.

Printing the Printer Settings

The Printer Settings Page prints a report listing the network settings, etc. You can print the Printer Settings Page using the Cut button of the printer.



Note

Node name: Node name appears in the Printer Settings Page. The default Node name of the network card in the printer is "BRNxxxxxxxxxx" where "xxxxxxxxxx" is the Ethernet address.

How to print the Printer Settings Page

- 1 Make sure that the Roll is set and the front cover is closed.
To print the Printer Settings Page, we recommend to use 101.6 mm Roll.
- 2 Turn on the printer.
- 3 Press and hold the Cut button.
You can check the IP address, etc.



Note

- To reset network setting and turn APIPA ON

Press the ON/OFF button to switch the machine OFF. Then, hold down the ON/OFF button for two seconds. Continue holding down the ON/OFF button, and press the Cut button twice. All the network settings will be reset.

- To reset network setting and turn APIPA OFF

Press the ON/OFF button to switch the machine OFF. Then, hold down the ON/OFF button for two seconds. Continue holding down the ON/OFF button, and press the Cut button four times. All the network settings will be reset.

Overview

If you are a user and want to print using the TCP/IP protocol in a Peer-to-Peer environment, follow the instructions in this chapter. This chapter explains how to install the network software and the printer driver which you will need in order to use your network printer. These can be installed from the included CD-ROM.



Note

- You must configure the IP address on your printer before you proceed with this chapter. If you need to configure the IP address, see *Chapter 2* first.
- Verify the host computer and print server are either on the same subnet, or that the router is properly configured to pass data between the two devices.
- The default password for Brother print servers is `access`.

Configuring the standard TCP/IP port

Printer driver not yet installed

For Windows Vista®, Windows® 7, Windows Server® 2008/2008 R2

3

- 1 For Windows Vista® / Windows Server® 2008:
Click the  (Windows Vista®) / **Start** (Windows Server® 2008), **Control Panel**, go to **Hardware and Sound** and open **Printers**.

For Windows® 7 / Windows Server® 2008 R2:
Click the  (Windows® 7) / **Start** (Windows Server® 2008 R2), and open **Devices and Printers**.
- 2 Click **Add a printer**.
- 3 Choose **Add a local printer**.
- 4 You must now choose the correct Network printing port. Choose **Create a new port** and choose **Standard TCP/IP Port** from the pull-down window, then click **Next**.
- 5 Enter the IP address, or the print server name you wish to configure. The Wizard will automatically enter the Port name information for you, then click **Next**.
- 6 Windows Vista®, Windows® 7 and Windows® 2008/2008 R2 will now contact the printer that you specified. If you did not specify the correct IP address or name then an error dialog will appear.
- 7 Now that you have configured the port, you must specify which printer driver you wish to use. Choose the appropriate driver from the list of supported printers. If you are using a driver supplied with the printer on CD-ROM then choose the **Have Disk** option to browse to the CD-ROM.
- 8 For example, choose the “X:\your language\Drivers\TD-XXXX\x86\Driver\i386” or “X:\your language\Drivers\TD-XXXX\x64\Driver\x64” folder (where X is your drive letter. XXX is your model name). Click **Open**, and then **OK**. Choose your printer model, then click **Next**.
- 9 Specify a name and click **Next**.



Note

- When the **User Account Control** screen appears, click **Continue**.
- If the printer driver that you are installing does not have a Digital Certificate you will see a warning message. Click **Install this driver software anyway** to continue with the installation.

- 10 Continue through the Wizard clicking **Finish** when complete.

For Windows® XP and Windows Server® 2003

- 1 Click the **Start** button and choose **Printers and Faxes**.
- 2 For Windows® XP:
Click **Add a printer** to start the **Add Printer Wizard**.

For Windows Server® 2003:
Double-click **Add Printer** to start the **Add Printer Wizard**.
- 3 Click **Next** when you see the **Welcome to the Add Printer Wizard** screen.
- 4 Choose **Local printer** and deselect the **Automatically detect and install my Plug and Play printer** option, then click **Next**.
- 5 You must now choose the correct Network printing port. Choose **Create a new port** and choose **Standard TCP/IP Port** from the pull-down window, then click **Next**.
- 6 The **Add Standard TCP/IP Printer Port Wizard** will now appear. Click **Next**.
- 7 Enter the IP address, or the print server name you wish to configure. The Wizard will automatically enter the Port name information for you, then click **Next**.
- 8 Windows® XP and Windows Server® 2003 will now contact the printer that you specified. If you did not specify the correct IP address or name then an error dialog will appear.
- 9 Click **Finish** to complete the Wizard.
- 10 Now that you have configured the port, you must specify which printer driver you wish to use. Choose the appropriate driver from the list of supported printers. If you are using a driver supplied with the printer on CD-ROM then choose the **Have Disk** option to browse to the CD-ROM.
- 11 For example, choose the "X:\your language\Drivers\TD-XXXX\x86\Driver\i386" or "X:\your language\Drivers\TD-XXXX\x64\Driver\x64" folder (where X is your drive letter. XXX is your model name). Click **Open**, and then **OK**. Choose your printer model, then click **Next**.
- 12 Specify a name and click **Next**.
- 13 Continue through the Wizard clicking **Finish** when complete.

Printer driver already installed

If you have already installed the printer driver and wish to configure it for network printing, follow these steps:

- 1 For Windows® XP and Windows Server® 2003:
Click the **Start** button and choose **Printers and Faxes**.

For Windows Vista®:
Click the , **Control Panel**, go to **Hardware and Sound** and open **Printers**.

For Windows® 7:
Click the , and open **Devices and Printers**.

For Windows Server® 2008:
Click the **Start** button, **Control Panel**, **Hardware and Sound**, and then **Printers**.

For Windows Server® 2008 R2:
Click the **Start** button, and open **Devices and Printers**.
- 2 Right click on the printer driver you wish to configure, and then choose **Properties** (Windows® XP/ Windows Vista®/ Windows Server® 2003/ Windows Server® 2008/ Windows Server® 2008 R2)/ **Printer Properties** (Windows® 7).
- 3 Click the **Ports** tab and click **Add Port...**
- 4 Choose the port that you wish to use. Typically this would be **Standard TCP/IP Port**. Then click the **New Port...** button.
- 5 The **Add Standard TCP/IP Printer Port Wizard** will start.
- 6 Enter the IP address of your network printer. Click **Next**.
- 7 Click **Finish**.
- 8 Close the **Printer Ports** and **Properties** dialog boxes.

Other sources of information

See *Chapter 2* of this manual to learn how to configure the IP address of the printer. For more information, visit us at <http://solutions.brother.com>

Overview

The Driver Deployment Wizard software can be used to ease the installation or even automate the installation of a locally connected or network connected printers. The Driver Deployment Wizard can also be used to create self running executable files which when run on a remote PC, completely automates the installation of a printer driver. The remote PC does not have to be connected to a network.

For details and to download, visit us at <http://solutions.brother.com>

Overview

This chapter explains how to resolve typical network problems you may encounter when using the Brother network printer. If, after reading this chapter, you are unable to resolve your problem, please visit the Brother Solutions Center at: <http://solutions.brother.com>

This chapter is divided into the following sections:

- General problems
- Network print software installation problems
- Printing problems
- Protocol-specific troubleshooting
- Others

General problems

CD-ROM is inserted, but does not start automatically

If your computer does not support Autorun, the menu will not start automatically after inserting the CD-ROM. In this case, execute **Setup.exe** in the root directory of the CD-ROM.

My computer can not find the printer/print server.

I can not make a necessary connection to the printer/print server.

My printer/print server does not appear in the window of BRAdmin Light.

The Firewall setting on your computer may be rejecting the necessary network connection. In this case, you will need to disable the Firewall on your computer and re-install the drivers.

Windows® XP SP2/SP3 users:

- 1 Click the **Start** button, and then click **Control Panel**.
- 2 Click **Network and Internet Connections**, and then click **Windows Firewall**.
- 3 Click the **General** tab. Verify that **Off (not recommended)** is selected.
- 4 Click **OK**.

Windows Vista® users:

- 1 Click the , **Control Panel**, and then select **Allow a program through Windows Firewall** under **Security**.
- 2 When the **User Account Control** screen appears, do the following.
 - Users who have administrator rights: Click **Continue**.
 - For users who do not have administrator rights: Enter the administrator password and click **OK**.
- 3 Click the **General** tab. Make sure that **Off (not recommended)** is selected.
- 4 Click **OK**.

Windows® 7 users:

- 1 Click the , **Control Panel**, **System and Security** and **Windows Firewall**.
- 2 On the LEFT menu click **Turn Windows Firewall On or Off**.
- 3 When the **User Account Control** screen appears, do the following.
 - For users who do not have administrator rights: Type an administrator password and click **Yes**.
- 4 Select **Turn off Windows Firewall (not recommended)** under **Home or work (private) network location settings** and **Public network location settings**.
- 5 Click **OK**.



Note

After the Brother software package is installed, turn your Firewall back on.

Network print software installation problems

The Brother print server is not found during the setup of the network print software or from the installation of the Brother printer driver.

Make sure you have completed the IP address setting of the Brother print server according to Chapter 2 of this Guide before installing the network print software or printer driver.

Check the following:

- 1 Make sure that the printer is powered on, is on-line and ready to print.
- 2 Print the Printer Settings Page and check if the settings such as IP address settings are correct for your network. The problem may be the result of a mismatched or duplicate IP address. Verify that the IP address is correctly loaded into the print server, and make sure that no other nodes on the network have this IP address. For details on how to print the Printer Settings Page, see *Printing the Printer Settings* on page 13.
- 3 Verify that the print server is on your network as follows:
Try pinging the print server from the host operating system command prompt with the command:
`ping ipaddress`
Where `ipaddress` is the print server IP address (note that in some instances it can take up to two minutes for the print server to load its IP address after setting the IP address).
- 4 If the installation failed, the Firewall on your computer may be blocking the necessary network connection to the printer. In this case, you will need to disable the Firewall on your computer and re-install the drivers. For details on how to disable the Firewall, see *General problems* on page 20.

Printing problems

Print job is not printed

Make sure the status and configuration of the print server. Check the following:

- 1 Make sure that the printer is powered on, is on-line and ready to print.
- 2 Print the Printer Settings Page of the printer and check if the settings such as IP address settings are correct for your network. The problem may be the result of a mismatched or duplicate IP address. Verify that the IP address is correctly loaded into the print server, and make sure that no other nodes on the network have this IP address.
- 3 Verify that the print server is on your network as follows:
Try pinging the print server from the host operating system command prompt with the command:
`ping ipaddress`
Where `ipaddress` is the print server IP address (note that in some instances it can take up to two minutes for the print server to load its IP address after setting the IP address).

Error during printing

If you try to print while other users are printing large amounts of data (e.g. many pages or pages with a large amount of graphics at high resolution), the printer is unable to accept your print job until the ongoing printing is finished. If the waiting time of your print job exceeds a certain limit, a time out situation occurs, which causes the error message. In such situations, execute the print job again after the other jobs are completed.

Protocol-specific troubleshooting

Web Based Management (web browser) troubleshooting (TCP/IP)

- 1 If you can not connect to the print server using your web browser it may be worth checking the Proxy Settings of your browser. Look in the Exceptions setting and if necessary, type in the IP address of the print server. This will stop your computer from trying to connect to your ISP or proxy server every time you wish to look at the print server.
- 2 Make sure that you are using the correct web browser, we recommend Microsoft Internet Explorer 6.0[®] (or higher), Firefox[®] 2.0 (or higher) for Windows[®]. Make sure that JavaScript and Cookies are always enabled in whichever browser you use.

5

Others

When you use BRAdmin, you will see 6 different Status indicators in English. (For non-English users, refer to the following chart for the definition.)

Display	Deutsch	Français	Nederlands	Español	Português
READY	BEREIT	PRÊT	GEREED	LISTO	PRONTO
COOLING	ABKÜHLUNG	REFROIDIT	AFKOELEN	ENFRIANDO	A ARREFECER
PRINTING	DRUCKT	IMPRIME	PRINTEN	IMPRIMIENDO	A IMPRIMIR
BUSY	BESCHÄFTIGT	OCCUPE	BEZIG	OCUPADO	OCUPADO
COVER OPEN	ABDECKUNG OFFEN	CAPOT OUVERT	KLEP OPEN	CUBIERTA ABIERTA	TAMPA ABERTA
ERROR	FEHLER	ERREUR	FOUT	ERROR	ERRO

Display	Italiano	Dansk	Svenska	Suomi	Norsk
READY	PRONTO	KLAR	REDO	VALMIS	KLAR
COOLING	RAFFREDAMENTO	KØLING	SVALNAR	JÄÄHTYY	KJØLING
PRINTING	STAMPA	UDSKRIVNING	SKRIVER	TULOSTAA	SKRIVER
BUSY	OCCUPATO	OPTAGET	UPPTAGEN	VARATTU	OPPTATT
COVER OPEN	COPERCHIO APERTO	LÅGE ÅBEN	LUCKA ÖPPEN	KANSI AUKI	DEKSEL ÅPENT
ERROR	ERRORE	FEJL	FEL	VIRHE	FEIL

Using services

A service is a resource that can be accessed by computers that wish to print to the Brother print server. The Brother print server provides the following predefined services (do a `SHOW SERVICE` command in the Brother print server remote console to see a list of available services): enter `HELP` at the command prompt for a list of supported commands.

Service (Example)	Definition
BINARY_P1	TCP/IP binary

Other ways to set the IP address (for advanced users and administrators)

For details on how to configure your network printer using the BRAdmin Light utility or Web Based Management (web browser), see *Setting the IP address and subnet mask* on page 10.

Using DHCP to configure the IP address

The Dynamic Host Configuration Protocol (DHCP) is one of several automated mechanisms for IP address allocation. If you have a DHCP server in your network, the print server will automatically obtain its IP address from the DHCP server and register its name with any RFC 1001 and 1002-compliant dynamic name services.



Note

If you do not want your print server configured via DHCP, BOOTP or RARP, you must set the boot method to static so that the print server has a static IP address. This will prevent the print server from trying to obtain an IP address from any of these systems. To change the boot method, use BRAdmin application or Web Based Management (web browser).

Using BOOTP to configure the IP address

BOOTP is an alternative to RARP that has the advantage of allowing configuration of the subnet mask and gateway. In order to use BOOTP to configure the IP address make sure that BOOTP is installed and running on your host computer (it should appear in the `/etc/services` file on your host as a real service; type `man bootpd` or see your system documentation for details). BOOTP is usually started up via the `/etc/inetd.conf` file, so you may need to enable it by removing the “#” in front of the bootp entry in that file. For example, a typical BOOTP entry in the `/etc/inetd.conf` file would be:

```
#bootp dgram udp wait /usr/etc/bootpd bootpd -i
```

Depending on the system, this entry might be called BOOTPS instead of BOOTP.

**Note**

In order to enable BOOTP, simply use an editor to delete the “#” in the `/etc/inetd.conf` file (if there is no “#”, then BOOTP is already enabled). Then edit the BOOTP configuration file (usually `/etc/bootptab`) and enter the name, network type (1 for Ethernet), Ethernet address and the IP address, subnet mask and gateway of the print server. Unfortunately, the exact format for doing this is not standardized, so you will need to see your system documentation to determine how to enter this information (many UNIX® systems also have template examples in the `bootptab` file that you can use for reference). Some examples of typical `/etc/bootptab` entries include:

```
BRN008077310107 1 00:80:77:31:01:07 192.168.1.2
```

and:

```
BRN008077310107:ht=ethernet:ha=008077310107:\
ip=192.168.1.2:
```

Certain BOOTP host software implementations will not respond to BOOTP requests if you have not included a download filename in the configuration file. If this is the case, simply create a null file on the host and specify the name of this file and its path in the configuration file.

As with RARP, the print server will load its IP address from the BOOTP server when the machine is powered on.

Using RARP to configure the IP address

The Brother print server’s IP address can be configured using the Reverse ARP (RARP) facility on your host computer. This is done by editing the `/etc/ethers` file (if this file does not exist, you can create it) with an entry similar to the following:

```
00:80:77:31:01:07 BRN008077310107
```

Where the first entry is the Ethernet address of the print server and the second entry is the name of the print server (the name must be the same as the one you put in the `/etc/hosts` file).

If the RARP daemon is not already running, start it (depending on the system the command can be `rarpd`, `rarpd -a`, `in.rarpd -a` or something else; type `man rarpd` or see your system documentation for additional information). To verify that the RARP daemon is running on a Berkeley UNIX®-based system, type the following command:

```
ps -ax | grep -v grep | grep rarpd
```

For AT&T UNIX®-based systems, type:

```
ps -ef | grep -v grep | grep rarpd
```

The Brother print server will get the IP address from the RARP daemon when the printer is powered on.

Using APIPA to configure the IP address

The Brother print server supports the Automatic Private IP Addressing (APIPA) protocol. With APIPA, clients automatically configure an IP address and subnet mask when a DHCP server is not available. The device chooses its own IP address in the range 169.254.0.1 through to 169.254.255.254. The subnet mask is automatically set to 255.255.0.0 and the gateway address is set to 0.0.0.0.

By default, the APIPA protocol is enabled.

If the APIPA protocol is disabled, the IP address of a Brother print server is 192.0.0.192. However, you can easily change this IP address number to match with the IP address details of your network.

Using ARP to configure the IP address

If you are unable to use the BRAdmin application and your network does not use a DHCP server, you can also use the ARP command. The ARP command is available on Windows® systems that have TCP/IP installed as well as UNIX® systems. To use ARP enter the following command at the command prompt:

```
arp -s ipaddress ethernetaddress
```

```
ping ipaddress
```

Where `ethernetaddress` is the Ethernet address (MAC address) of the print server and `ipaddress` is the IP address of the print server. For example:

Windows® systems

Windows® systems require the dash “-” character between each digit of the Ethernet address.

```
arp -s 192.168.1.2 00-80-77-31-01-07
```

```
ping 192.168.1.2
```

UNIX®/Linux systems

Typically, UNIX® and Linux systems require the colon “:” character between each digit of the Ethernet address.

```
arp -s 192.168.1.2 00:80:77:31:01:07
```

```
ping 192.168.1.2
```



Note

You must be on the same Ethernet segment (that is, there can not be a router between the print server and operating system) to use the `arp -s` command.

If there is a router, you may use BOOTP or other methods described in this chapter to enter the IP address. If your administrator has configured the system to deliver IP addresses using BOOTP, DHCP or RARP your Brother print server can receive an IP address from any one of these IP address allocation systems. In which case, you will not need to use the ARP command. The ARP command only works once. For security reasons, once you have successfully configured the IP address of a Brother print server using the ARP command, you can not use the ARP command again to change the address. The print server will ignore any attempts to do this. If you wish to change the IP address again, use Web Based Management (web browser), Telnet (using the SET IP ADDRESS command) or factory reset the print server (which will then allow you to use the ARP command again).

Using the Telnet console to configure the IP address

You can also use the Telnet command to change the IP address.

Telnet is an effective method to change the printer's IP address. But a valid IP address must already be programmed into the print server.

Type `TELNET ipaddress` at the command system command prompt, where `ipaddress` is the IP address of the print server. When you are connected, push the Return or Enter key to get the “#” prompt, enter the password `access` (the password will not appear on the screen).

You will be prompted for a user name. Enter anything in response to this prompt.

You will then get the `Local>` prompt. Type `SET IP ADDRESS ipaddress`, where `ipaddress` is the desired IP address you wish to assign to the print server (check with your network administrator for the IP address to use). For example:

```
Local> SET IP ADDRESS 192.168.1.3
```

You will now need to set the subnet mask by typing `SET IP SUBNET subnet mask`, where `subnet mask` is the desired subnet mask you wish to assign to the print server (check with your network administrator for the subnet mask to use). For example:

```
Local> SET IP SUBNET 255.255.255.0
```

If you do not have any subnets, use one of the following default subnet masks:

255.0.0.0 for class A networks

255.255.0.0 for class B networks

255.255.255.0 for class C networks

The leftmost group of digits in your IP address can identify the type of network you have. The value of this group ranges from 1 through 127 for Class A networks (e.g., 13.27.7.1), 128 through 191 for Class B networks (e.g., 128.10.1.30), and 192 through 255 for Class C networks (e.g., 192.168.1.4).

If you have a gateway (router), enter its address with the command `SET IP ROUTER routeraddress`, where `routeraddress` is the desired IP address of the gateway you wish to assign to the print server. For example:

```
Local> SET IP ROUTER 192.168.1.4
```

Type `SET IP METHOD STATIC` to set the method of IP access configuration to static.

To verify that you have entered the IP information correctly, type `SHOW IP`.

Type `EXIT` or `CTRL-D` (i.e., hold down the control key and type “D”) to end the remote console session.

Using the Brother Web BRAdmin server software for IIS* to configure the IP address

The Web BRAdmin server software is designed to manage all LAN/WAN Brother network connected devices. By installing the Web BRAdmin server software on a computer running IIS¹, Administrators with a web browser can connect to the Web BRAdmin server, which then communicates with the device itself. Unlike the BRAdmin Professional utility - which is designed for Windows[®] systems only - the Web BRAdmin server software can be accessed from any client computer with a web browser that supports Java.

Note this software is not included on the CD-ROM that was supplied with your Brother product.

Visit <http://solutions.brother.com> for details and to download.

¹ Internet Information Server 4.0 or Internet Information Services 5.0 / 5.1 / 6.0 / 7.0 / 7.5
(7.5 is the current version, for Windows 7)

Print server specifications

Ethernet wired network

Network node type	TD-4100N	NC-13004h
Operating system support	Windows® XP, Windows Vista®, Windows® 7, Windows Server® 2003/2008/2008 R2	
Protocol support	TCP/IP: IPv4	ARP, RARP, BOOTP, DHCP, APIPA (Auto IP), WINS, NetBIOS name resolution, DNS Resolver, LPR/LPD, Custom Raw Port/Port9100, FTP Server, TELNET, SNMPv1, HTTP server, TFTP client and server, ICMP Web services
	Other	LLTD responder
Network type	10/100BASE-TX Wired Ethernet network	
Network printing	Windows® XP, Windows Vista®, Windows® 7 and Windows Server® 2003/2008/2008 R2: TCP/IP printing	

Computer requirements

Computer Platform & Operating System Version		Processor Minimum Speed	Minimum RAM	Recommended RAM	Available Hard Disk Space
Windows® Operating System	XP Home Edition	Intel® Pentium® or equivalent	128 MB	256 MB	50 MB
	XP Professional				
	Windows Vista®	Intel® Pentium® 4 or equivalent 64-bit supported CPU (Intel® 64/AMD64)	512 MB	1 GB	50 MB
	Windows® 7	Intel® Pentium® 4 or equivalent 64-bit supported CPU (Intel® 64/AMD64)	1 GB (32-bit) or 2 GB (64-bit)	1 GB (32-bit) or 2 GB (64-bit)	50 MB
	Windows Server® 2003	Intel® Pentium® III or equivalent	256 MB	512 MB	50 MB
	Windows Server® 2008	Intel® Pentium® 4 or equivalent 64-bit supported CPU (Intel® 64/AMD64)	512 MB	2 GB	50 MB
	Windows Server® 2008 R2	Equivalent 64-bit supported CPU (Intel® 64/AMD64)	512 MB	2 GB	50 MB

Management utilities

BRAdmin Light	Windows® XP, Windows Vista®, Windows® 7, Windows Server® 2003/2008/2008 R2
BRAdmin Professional ¹	Windows® XP, Windows Vista®, Windows® 7, Windows Server® 2003/2008
Web BRAdmin ¹	Windows® XP Professional, Windows Vista®, Windows® 7, Windows Server® 2003/2008

¹ BRAdmin Professional and Web BRAdmin are available as a download from <http://solutions.brother.com>



Note

For news and information regarding BRAdmin Professional and Web BRAdmin for Windows Server 2008 R2, please visit <http://solutions.brother.com>

A

APIPA5, 26
 ARP26

B

BINARY_P124
 BOOTP5, 24
 BRAdmin Light2, 10, 12
 BRAdmin Professional2
 Brother Solutions Center2, 10

C

Computer requirements29

D

DHCP5, 24
 DNS Client5
 Domain13
 Driver Deployment Wizard18

G

Gateway9

H

HTTP6
 Hyper Text Transfer Protocol12

I

IIS28
 IP Address8

L

LPR/LPD5

N

Network Printing14
 Network Shared Printing4

P

Password14
 Peer-to-Peer3
 Ping21, 22
 Port91005
 Print Server Setting12, 13
 Protocol5

R

RARP5, 25
 RFC 10018, 24
 Router9

S

Service24
 SNMP6
 Specifications29
 Subnet Mask9

T

TCP/IP5
 TCP/IP Printing14
 Telnet5, 27
 Trademarksi
 Troubleshooting19

W

Web Based Management (web browser)12
 Web BRAdmin2, 28
 Web Server6