

USER'S GUIDE MFC-8440 MFC-8840D







THIS EQUIPMENT IS DESIGNED TO WORK WITH A TWO WIRE ANALOGUE PSTN LINE FITTED WITH THE APPROPRIATE CONNECTOR.

APPROVAL INFORMATION

Brother advises that this product may not function correctly in a country other than where it was originally purchased, and does not offer any warranty in the event that this product is used on public telecommunication lines in another country.

Compilation and Publication Notice

Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

"EC" Declaration of Conformity

Manufacturer Brother Industries, Ltd. 15-1, Naeshiro-cho, Mizuho-ku, Nagoya 467-8561, Japan

Plant Brother Corporation (Asia) Ltd., Brother Buji Nan Ling Factory, Gold Garden Ind., Nan Ling Village, Buji, Rong Gang, Shenzhen, China

Herewith declare that:	
Products description	: Facsimile Machine
Туре	: Group 3
Model Name	: MFC-8440, MFC-8840D

are in conformity with provisions of the R & TTE Directive (1999/5/EC) and we declare compliance with the following standards :

Standards applied : Harmonized : Safety : EN60950:2000

> EMC : EN55022:1998 Class B EN55024:1998 / A1: 2001 EN61000-3-2: 2000 EN61000-3-3: 1995

Year in which CE marking was first affixed : 2004

:

Issued by

: Brother Industries, Ltd.

Date

: 2nd February, 2004

Place

: Nagoya, Japan

Signature


Jakashi) Maeda

 
Takashi Maeda Manager Quality Management Group Quality Management Dept. Information & Document Company

Safety precautions


To use the MFC safely

Save these instructions for later reference.

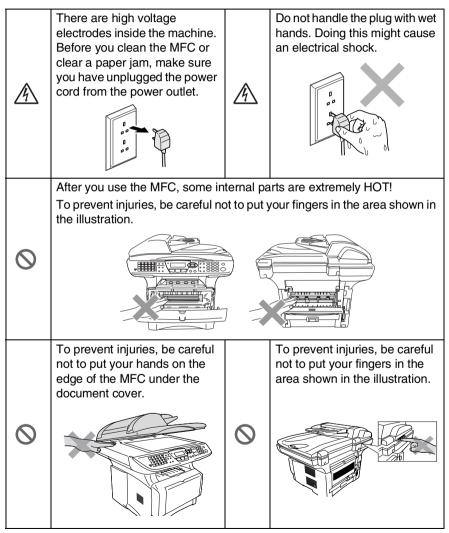





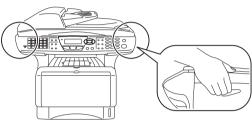

- When you move the MFC, grasp the side handholds that are under the scanner. Do NOT carry the MFC by holding it at the bottom.
- Use caution when installing or modifying telephone lines. Never touch telephone wires or terminals that are not insulated unless the telephone line has been disconnected at the wall socket. Never install telephone wiring during a lightning storm. Never install a telephone socket in a wet location.
- Install equipment with a power cord near a socket/outlet that is easily accessible.
- Do not use a telephone in the vicinity of gas leak to report leak.
- Do not use this product near appliances that use water, in a wet basement or near a swimming pool.
- There may be a remote risk of electric shock from lightning.

Caution

Lightning and power surges can damage this product! We recommend that you use a quality surge protection device on the AC power line and on the telephone line, or unplug the lines during a lightning storm.

Choosing a location

Place your MFC on a flat, stable surface that is free of vibration and shocks, such as a desk. Put the MFC near a telephone socket and a standard, grounded power outlet. Choose a location where the temperature remains between 10° and 32.5° C.

Caution

- Avoid placing your MFC in a high-traffic area.
- Do not place near heaters, air conditioners, water, chemicals, or refrigerators.
- Do not expose the MFC to direct sunlight, excessive heat, moisture, or dust.
- Do not connect your MFC to electrical outlets controlled by wall switches or automatic timers.
- Disruption of power can wipe out information in the MFC's memory.
- Do not connect your MFC to electrical outlets on the same circuit as large appliances or other Equipment that might disrupt the power supply.
- Avoid interference sources, such as speakers or the base units of cordless phones.



Quick Reference Guide

Sending faxes Automatic Transmission

- 1 If it is not illuminated in green, press (Fax).
- 2 Place the document face up in the ADF, or face down on the scanner glass.
- **3** Enter the fax number using One-Touch, Speed-Dial, Search or the dial pad.
- 4 Press Start.
- **5** If you are using the scanner glass, press **2** or **Start**.

Real Time Transmission

You can send faxes in real time.

- 1 If it is not illuminated in green, press (Fax).
- **2** Place the document face up in the ADF, or face down on the scanner glass.
- **3** Press **Menu**, **2**, **2**, **5**.
- 4 Press or to select on, and then press Set.

For the next transmission only, press reference or reference to select Next Fax Only, and then press **Set**.

5 For the next fax only, press or to select Next Fax: On, and then press Set. 6 Press 1 if you want to choose more settings and the LCD will return to the Setup send menu.

-OR-

Press 2 to fax.

- 7 Enter the fax number.
- 8 Press Start.

Receiving faxes

Select Receive Mode

- **1** Press **Menu**, **0**,**1**.

Storing numbers

Storing One-Touch Dial numbers

- **1** Press **Menu**, **2**, **3**, **1**.
- **2** Press the One-Touch key where you want to store the number.
- **3** Enter a number (up to 20 digits), and then press **Set**.
- **4** Enter a name (up to 15 characters or leave it blank), and then press **Set**.
- 5 Press Stop/Exit.

Storing Speed-Dial numbers

- 1 Press Menu, 2, 3, 2.
- 2 Enter a three-digit Speed-Dial number, and then press **Set**.
- 3 Enter a number (up to 20 digits), and then press Set.
- 4 Enter a name (up to 15 characters or leave it blank), and then press **Set**.
- 5 Press Stop/Exit.

Dialling operations

One-Touch Dialling / Speed-Dialling

- 1 If it is not illuminated in green, press (S) (Fax).
- **2** Place the document face up in the ADF, or face down on the scanner glass.
- **3** Press the One-Touch key of the number you want to call.

-OR-

Press **Search/Speed Dial**, press **#**, and then press the three-digit Speed-Dial number.

4 Press Start.

Using Search

- 1 If it is not illuminated in green, press (Fax).
- 2 Press Search/Speed Dial, and then enter the first letter of the name you're looking for.

- 4 Press Start.

Making copies

Single copy

- 1 Press (Copy) to illuminate it in green.
- **2** Place the document face up in the ADF, or face down on the scanner glass.
- 3 Press Start.

Sorting multiple copies (Using the ADF)

- 1 Press (Copy) to illuminate it in green.
- **2** Place the document face up in the ADF.
- **3** Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press Sort.
- 5 Sort 1 icon appears on the LCD.
- 6 Press Start.

Table of Contents

Introduction	. 1-1
Using this Guide	. 1-1
Finding information	. 1-1
Symbols used in this Guide	
MFC part names and operations	. 1-2
Control panel overview	. 1-5
Status LED indications	1-10
About fax machines	
Fax tones and handshake	1-12
ECM (Error Correction Mode)	
Connecting the MFC	
Connecting an external telephone	1-14
Connecting an external telephone answering	
device (TAD)	
Sequence	
Connections	1-16
Recording outgoing message (OGM) on	
an external TAD	
Using extension telephones (For U.K. only)	
Multi-line connections (PBX)	1-20
If you are installing the MFC to work	
with a PBX	
Custom features on your phone line	1-20
Paper	2-1
About paper	
Type and size of paper	
Recommended paper	
Choosing acceptable paper	
Paper capacity of the paper trays	
Paper specifications for each paper tray	
How to load paper	
To load paper or other media in the paper tray	. 2-5
To load paper or other media in the manual feed	
tray (For MFC-8440)	. 2-7
To load paper or other media in the multi-purpose	
tray (MP tray) (For MFC-8840D)	. 2-9
To use Automatic Duplexing for fax, copy and print	

operations (For MFC-8840D)2-11

viii

2		
J	On-screen programming	
	User-friendly programming	
	Menu table	
	Memory Storage	
	Navigation keys	3-2
4	Getting started	4-1
	Initial Setup	
	Setting the Date and Time	
	Setting the Station ID	
	Entering text	
	Inserting spaces	
	Making corrections	
	Repeating letters	
	Special characters and symbols	
	PABX and TRANSFER	
	Setting PABX	
	General Setup	
	Setting the Mode Timer	4-6
	Setting the Paper Type	4-7
	Setting the Paper Size	4-8
	Setting the Ring Volume	4-9
	Setting the Beeper Volume	4-9
	Setting the Speaker Volume	4-10
	Turning on Automatic Daylight Savings Time	4-10
	Toner Save	
	Sleep Time	4-11
	Turning off the Scanner Lamp	
	Power Save	
	Setting the Tray Use for Copy mode	
	Setting the Tray Use for Fax mode	
	Setting the LCD Contrast	
	Initial Setup depending on Your Country	4-15
	Setting Tone or Pulse dialling mode	
	(Except for the Nordic Countries)	4-15
5	Setup Receive	5-1
	Basic receiving operations	
	Choosing the Receive Mode	
	To select or change your Receive Mode	
	Setting the Ring Delay	
	Setting the F/T Ring Time (Fax/Tel mode only)	
	Fax Detect	
	Printing a reduced incoming fax (Auto Reduction).	

4

	Reception into memory	5-6
	Printing a fax from the memory	5-7
	Setting the Print Density	5-7
	Advanced receiving operations	
	Operation from extension telephones	5-8
	For FAX/TEL mode only	
	Using a cordless external handset	
	Changing the remote codes	
	Polling	
	Secure Polling	
	Setup for Polling Receive (Standard)	
	Setup for Polling Receive with Secure Code	
	Setup Delayed Polling Receive	
	Sequential Polling	. 5-12
	Setting Duplex printing for Fax mode	
	(For MFC-8840D)	
	Telephone services	
	BT Call Sign (For U.K. Only)	
	To enable the machine to work with BT Call Sign	
	(Only with your external phone)	. 5-14
6	Setup Send	6-1
	How to Fax	
	Enter Fax mode	
	Faxing from the automatic document feeder (ADF)	
	Faxing from the ADF	
	Faxing from the scanner glass	
	Faxing legal size documents from the scanner glass	
	Out of Memory message	
	Manual transmission	
	Automatic transmission	
	This is the easiest way to send a fax	6-6
	Sending a fax at the end of a conversation	6-6
	Basic sending operations	6-7
	Sending faxes using multiple settings	6-7
	Contrast	6-8
	Fax Resolution	6-9
	Manual and automatic fax Redial	
	Dual Access	
	Real Time Transmission	
	Checking job status	
	Cancelling a job while scanning the document	
	Cancelling a scheduled job	. 6-13

Advanced sending operations	6-14
Composing the electronic Cover Page	
Composing your own comments	
Cover page for the next fax only	
Send a cover page for all faxes	
Using a printed cover page	
Broadcasting	
Overseas Mode	
Delayed Fax	
Delayed Batch Transmission	
Setup for Polled Transmit (Standard)	
Setup for Polled Transmit with Secure Code.	
Memory Security	
Setting up the password	
Turning Memory Security on	
Turning Memory Security off	6-24
uto Dial numbers and dialling options	
Storing numbers for easy dialling	
Storing One-Touch Dial numbers	
Storing Speed-Dial numbers	
Changing One-Touch and Speed-Dial number	
Setting up Groups for Broadcasting	
Dialling options	
Search	
One-Touch Dialling	
Speed-Dialling	
Manual dialling	
Using an external telephone	
Access codes and credit card numbers	
Pause	
Tone or Pulse	7-10
Nometa Fou Ontiona	A 4
Remote Fax Options	
Fax Forwarding	
Programming a Fax Forwarding number	
Setting Fax Storage	8-2
Setting your Remote Access Code	
Remote retrieval	
Using your Remote Access Code	
Remote commands	
Retrieving fax messages	
Changing your Fax Forwarding number	8-6

7 AL

8 в

9	Printing reports	9-1
	MFC settings and activity	
	Customizing the Transmission Verification Repor	
	Setting the Journal Period	
	Printing reports	
	To print a report	
10	Making copies	10-1
	Using the MFC as a copier	10-1
	Enter Copy mode	10-1
	Temporary copy settings	10-2
	Making a single copy from the ADF	10-3
	Making multiple copies from the ADF	
	Single or multiple copies using the scanner glass	
	Out of Memory message	
	Using the Copy keys (Temporary settings)	
	Enlarge/Reduce	
	Quality (type of document)	
	Sorting copies using the ADF	
	Contrast	10-10
	Tray Select	10-11
	Duplex/N in 1	
	Duplex/N in 1 copy	10-14
	N in 1 copy	10-14
	Poster	10-16
	Duplex (1 in 1) (For MFC-8840D)	10-17
	Duplex (2 in 1) and Duplex (4 in 1)	
	(For MFC-8840D)	10-19
	Changing the default copy settings	
	Quality	10-20
	Contrast	10-20
11	Using the MFC as a printer	11-1
	Using the Brother MFC-8440, MFC-8840D	
	printer driver	11-1
	How to print your document	11-2
	Simultaneous printing and faxing	11-3
	Two-sided printing (Duplex Printing)	11-3
	Automatic Duplex Printing (For MFC-8840D)	
	Manual Duplex Printing	
	Face-down output tray	
	Printing on plain paper	
	The manual feed tray (For MFC-8440)	
	The MP tray (For MFC-8840D)	

Printing on thicker paper and card stock	11-8
The manual feed tray (For MFC-8440)	11-8
The multi-purpose tray (MP tray)	
(For MFC-8840D)	11-10
Printing on envelopes	11-12
Printer operation keys	
Job Cancel	11-17
Secure key	11-17
Setting the Emulation Selection	
Printing the Internal Font List	11-19
Printing the Print Configuration List	
Restoring factory default settings	11-19
Printer driver settings	
Printer driver settings	12-1
How to access the printer driver settings	12-1
Features in the Brother Native Driver	12-2
Basic tab	12-2
Paper Size	12-3
Multiple Page	12-3
Orientation	12-3
Copies	12-4
Media Type	12-4
Advanced tab	12-5
Print Quality	
Duplex Printing	12-6
Watermark	12-8
Page Setting	12-10
Device Options	12-11
Secure Print	12-11
Accessories tab	12-14
Support tab	12-16
Features in the PS printer driver (For Windows [®])	12-17
Ports tab	12-18
Device Settings tab	12-19
Layout tab	12-20
Booklet (For MFC-8840D)	
(For Windows [®] 2000/XP)	12-20
Paper/Quality tab	12-21
Advanced Options	12-22

12

13 How

v to scan using Windows [®]	13-1
Scanning a document	13-1
TWAIN compliant	13-1
How to access the Scanner	13-2
Scanning a document into the PC	13-3
Scanning a whole page	13-3
Pre-Scanning to crop a portion you want to scan	
Settings in the Scanner window	13-6
Image Type	13-6
Resolution	13-6
Scan Type	13-7
Brightness	13-7
Contrast	13-7
Document Size	
Scanning a document (For Windows® XP only)	13-10
WIA compliant	
How to access the scanner	13-10
Scanning a document into the PC	13-11
Scanning a document using the ADF	13-11
Pre-Scanning to crop a portion you want to	
scan using the scanner glass	13-13
Brother Scanner Utility	13-15
Using the scan key (For USB or Parallel interface	
cable users)	13-16
Scan to E-mail	13-17
Scan to Image	
Scan to OCR	13-18
Scan to File	
Using ScanSoft® PaperPort® and OmniPage® OCR	13-19
Viewing items	
Organizing your items in folders	13-21
Quick links to other applications	13-21
ScanSoft [®] OmniPage [®] OCR lets you convert	
image text into text you can edit	
You can Import items from other applications	
You can Export items in other formats	
Exporting an image file	13-23
How to Uninstall PaperPort® and ScanSoft®	
OmniPage [®]	13-24

sing the Brother Control Center	
Brother MFL-Pro Control Center	14-1
AutoLoad the Brother Control Center	14-2
How to turn off AutoLoad	14-2
Brother Control Center features	14-3
Auto Configuration	14-3
Scan key operations	14-4
Copy operations	14-4
PC-Fax operation	14-4
Scanner settings for Scan, Copy and PC-Fax	
buttons	14-5
Global settings	14-5
Setting up the scanner configurations	14-6
Perform an operation from the Control Center	
screen	14-7
Scan to File	
To access Scan to File Configurations screen	
Scanner settings	
Destination folder	
Scan to E-mail	
To access Scan to E-mail Configurations screen	
Scanner settings	
E-mail application	
Send to Options	
Scan to OCR (Word Processor)	
To access Scan to OCR Configurations screen	
Scanner settings	
Word Processor	
Scan to Image	
To access Scan to Image Configurations screen	
Scanner Settings	
Target Application	
Copy	
To access the Copy Configurations screen	
Scanner settings	
Number of copies Send a fax	
To access the Send a fax Configurations screen	
Scanner settings	
PC-FAX Settings	
FU-FAA Sellings	. 14-19

14 Us

15 Using the Windows[®]-Based Brother SmartUI

	Control Center	15-1
	Brother SmartUI Control Center	15-1
	AutoLoad the Brother Control Center	15-2
	How to turn off Auto Load	
	Brother Control Center features	15-3
	Auto Configuration	
	Hardware Section: Changing the Scan to button	
	configuration	15-5
	Scan to E-mail	15-6
	Scan to File	15-7
	Scan to Image	15-8
	Scan to OCR	15-10
	Software Section	15-12
	Scan	15-13
	Сору	15-13
	Fax	15-14
	Custom	15-14
	Scan to File	15-15
	Scan to E-mail	15-17
	File attachments	
	Scanner settings	15-20
	Scan to OCR (Word Processing program)	15-21
	Scan to Graphics application	
	(example: Microsoft Paint)	15-23
	Сору	15-25
	Fax setting (PC-Fax using the Brother Fax Driver)	15-27
	FAX settings	15-28
	Custom: User-defined buttons	15-29
	Customizing a user-defined button	15-29
	1. Select the Scan Action	
	Select Configuration for the Scan Type	15-30
	3. Select Scan Settings	15-34
16	Using MFC Remote Setup	16_1
	MFC Remote Setup	
	Mi o henole delup	
17	Using Brother PC-FAX software	17-1
	PC-FAX sending	
	Setting up user information	17-2
	Sending setup	
	Outside line access	
	Include header	17-4
	Address Book file	17-4

User interface	17-5
Simple style	17-5
Facsimile style	17-5
Speed-Dial setup	17-6
The Address Book	17-7
Setting up a Member in the Address Book	17-8
Setting up a Group for Broadcasting	17-9
Editing Member information	17-10
Deleting a Member or Group	17-10
Exporting the Address Book	
Importing to the Address Book	
Setting up a Cover Page	
You can enter information in each field	17-15
Sending a file as a PC-FAX using the Facsimile	
style	17-16
Redial	17-17
Sending a file as a PC-FAX using the Simple	
style	17-17
Setting up PC-FAX receiving	
(Windows [®] 98/98SE/Me/2000 Professional and	
Windows NT [®] WS 4.0 only)	
Running PC-FAX Receiving	
Setting up your PC	
Viewing new PC-FAX messages	17-20
Receiving a fax into the PC	
(Windows [®] XP only)	17-21
How to receive a fax automatically	
How to view the received faxes	17-26
Using your MFC with a Macintosh®	
Setting up your USB-equipped Apple® Macintosh® .	18-1
Using the Brother printer driver with your Apple [®]	
Macintosh [®] (Mac OS [®] 8.6 - 9.2)	18-2
Using the Brother Printer Driver with Your Apple®	
Macintosh [®] (Mac OS [®] X)	
Choosing page setup options	
Specific settings	18-5
Using the PS driver with your Apple [®] Macintosh [®]	18-6
For Mac OS [®] 8.6 to 9.2 Users	18-7
For Mac OS [®] X users	18-11
Sending a fax from your Macintosh [®] application	
For Mac OS [®] 8.6 - 9.2 users	18-14

18

For Mac OS [®] X users	18-16
Drag a vCard from the Mac OS [®] X Address	
Book application	18-18
Using the Brother TWAIN scanner driver with your	
Macintosh [®]	18-20
Accessing the scanner	
Scanning an image into your Macintosh [®]	
Scanning a whole page	
Pre-Scanning an image	
Settings in the Scanner window	
Image	
Scanning Area	
Business Card Size	18-25
Adjusting the Image	18-26
Using Presto!® PageManager®	
Highlights	18-27
System requirements	18-28
Technical Support	18-28
MFC Remote Setup (Mac OS® X)	18-30
	10 1
Network Scanning	
Network License	19-1
Network License Registering your PC with the MFC	19-1 19-1
Network License Registering your PC with the MFC Using the Scan key	19-1 19-1 19-5
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC)	19-1 19-1 19-5 19-5
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server)	19-1 19-1 19-5 19-5 19-6
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image	19-1 19-1 19-5 19-5 19-6 19-8
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image Scan to OCR	19-1 19-1 19-5 19-5 19-6 19-8 19-9
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image	19-1 19-1 19-5 19-5 19-6 19-8 19-9
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image Scan to OCR Scan to File	19-1 19-5 19-5 19-6 19-8 19-9 19-10
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image Scan to OCR Scan to File Brother Network PC-FAX software	19-1 19-5 19-5 19-6 19-8 19-9 19-10 20-1
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image Scan to Image Scan to OCR Scan to File Brother Network PC-FAX software Enable Network PC-FAX	19-1 19-5 19-5 19-6 19-8 19-9 19-10 20-1
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image Scan to Image Scan to OCR Scan to File Brother Network PC-FAX software Enable Network PC-FAX Sending setup	19-1 19-5 19-5 19-5 19-6 19-8 19-9 19-10 20-1 20-2
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image Scan to Image Scan to OCR Scan to File Brother Network PC-FAX software Enable Network PC-FAX Sending setup Extra options in Address Book	19-1 19-5 19-5 19-5 19-6 19-8 19-9 19-10 20-1 20-2 20-3
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image Scan to OCR Scan to OCR Scan to File Brother Network PC-FAX software Enable Network PC-FAX Sending setup Extra options in Address Book Using the Brother Network PC-FAX software	19-1 19-5 19-5 19-6 19-8 19-8 19-9 19-10 20-1 20-2 20-3 20-4
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image Scan to OCR Scan to OCR Scan to File Brother Network PC-FAX software Enable Network PC-FAX Sending setup Extra options in Address Book Using the Brother Network PC-FAX software Quick Tips:	19-1 19-5 19-5 19-6 19-8 19-8 19-9 19-10 20-1 20-2 20-3 20-4 20-4
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image Scan to OCR Scan to OCR Scan to File Brother Network PC-FAX software Enable Network PC-FAX Sending setup Extra options in Address Book Using the Brother Network PC-FAX software Quick Tips: Sending a Network PC-FAX from your Macintos	19-1 19-5 19-5 19-5 19-6 19-8 19-8 19-10 20-1 20-2 20-3 20-4 20-4 20-4
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image Scan to OCR Scan to OCR Scan to File Brother Network PC-FAX software Enable Network PC-FAX Sending setup Extra options in Address Book Using the Brother Network PC-FAX software Quick Tips: Sending a Network PC-FAX from your Macintos application	19-1 19-5 19-5 19-5 19-6 19-8 19-8 19-10 20-1 20-2 20-3 20-4 20-5
Network License Registering your PC with the MFC Using the Scan key Scan to E-mail (PC) Scan to E-mail (E-mail server) Scan to Image Scan to OCR Scan to OCR Scan to File Brother Network PC-FAX software Enable Network PC-FAX Sending setup Extra options in Address Book Using the Brother Network PC-FAX software Quick Tips: Sending a Network PC-FAX from your Macintos	

21		
	Important information	
	IEC 60825 Specification	
	Laser Diode	
	Caution	
	For your safety	
	Disconnect device	
	IT power system (For Norway only)	
	LAN connection	21-2
	International ENERGY STAR [®] Compliance	
	Statement	
	Important safety instructions	
	Trademarks	21-5
22		
	Troubleshooting and routine maintenance	
	Troubleshooting	
	Error messages	
	Document jams	
	Document is jammed in the top of the ADF	
	Document is jammed inside the ADF unit	
	Paper jams	
	Paper is jammed in the duplex tray	
	(For MFC-8840D)	
	If you are having difficulty with your MFC	
	Improving the print quality	
	Packing and shipping the MFC	
	Routine maintenance	
	Cleaning the scanner	
	Cleaning the printer	
	Cleaning the drum unit	
	Replacing the toner cartridge	
	How to replace the toner cartridge	
	Replacing the drum unit	
	Checking the drum life	
	Page Counter	

l	23	

G S

Optional accessories2	23-1
Memory board2	23-1
Installing the optional memory board	23-2
Network (LAN) board	
Before starting installation2	
Step 1: Hardware installation2	
Step 2: Connecting the NC-9100h to an Unshielded	
Twisted Pair 10BASE-T or 100BASE-TX Ethernet	
Network	2.9
LED	
TEST SWITCH	
Paper Tray #2	
Taper Tray #220)-11
Glossary	G-1
	u .
Specifications	S-1
Product description	.S-1
General	S-1
Print media	S-2
Сору	
General (continued)	
Fax	
Scanner	
Printer	
Interfaces	
Computer requirements	
Consumable items	
Network (LAN) board (NC-9100h)	
Optional External Wireless Print/Scan Server	00
(NC-2200w)	S-0
(110-2200w)	0-9
Index	. -1
Remote Retrieval Access card	R-1



Using this Guide

Thank you for buying a Brother Multi-Function Center (MFC). Your MFC-8440, MFC-8840D is simple to use, with LCD screen instructions to guide you through programming it. You can make the most of your MFC by taking a few minutes to read this Guide.

Finding information

All the chapter headings and subheadings are listed in the Table of Contents. You will be able to find information about a specific feature or operation by checking the Index at the back of this Guide.

Symbols used in this Guide

Throughout this Guide you'll see special symbols alerting you to important warnings, notes and actions. To make things clearer and to help you press the correct keys, we used special fonts and added some of the messages that will appear in the LCD.

Bold	Bold typeface identifies specific keys on the MFC control panel.
Italics	Italicized typeface emphasizes an important point or refers you to a related topic.
Courier New	Courier New typeface identifies the messages on the LCD of the MFC.



Warnings inform you what to do to avoid possible personal injury or damage to the MFC.



Cautions specify procedures you must follow or avoid to prevent possible damage to the machine.




⁹ Notes tell you how you should respond to a situation that may arise or give tips about how the current operation works with other features.



Improper Setup alerts you to devices and operations that are not compatible with the MFC.


MFC part names and operations

Front view

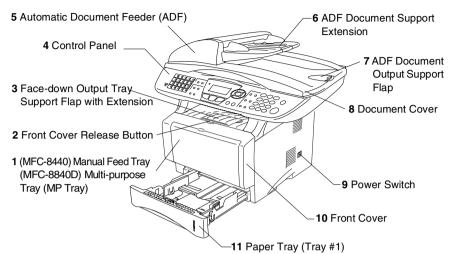


No.	Name	Description
1	(MFC-8440) Manual Feed Tray (MFC-8840D) Multi-purpose Tray (MP Tray)	Load paper here.
2	Front Cover Release Button	Press it to open the front cover.
3	Face-down Output Tray Support Flap with Extension (Support Flap)	Unfold it to prevent the printed paper from sliding off the MFC.
4	Control Panel	Use the keys and display to control the MFC.
5	Automatic Document Feeder (ADF)	Use the ADF unit for multiple page documents.
6	ADF Document Support Extension	Place the document here to use the ADF unit.
7	ADF Document Output Support Flap	Unfold to prevent the scanned pages from sliding off the MFC.
8	Document Cover	Open to place the document on the scanner glass.
9	Power Switch	Switch it on or off.
10	Front Cover	Open to install a toner cartridge or drum unit.
11	Paper Tray (Tray #1)	Load paper here.

Back view

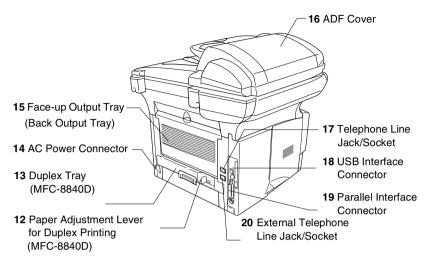

No.	Name	Description
12	Paper Adjustment Lever for Duplex Printing (MFC-8840D)	Use to match your paper size for duplex printing.
13	Duplex Tray (MFC-8840D)	Slide out to remove paper jammed inside the MFC.
14	AC Power Connector	Connect the AC Power Connector here.
15	Face-up Output Tray (Back Output Tray)	Open it when thicker paper is placed in the MP tray or Manual feed tray.
16	ADF Cover	Open to remove paper jammed inside the ADF unit.
17	Telephone Line Jack/Socket	Plug the line cord supplied with the machine here.
18	USB Interface Connector	Connect the USB Cable here.
19	Parallel Interface Connector	Connect the Parallel Cable here.
20	External Telephone Line Jack/Socket (Not for the UK)	Plug in the modular plug on the external telephone line here.

Inside view (Document cover open)

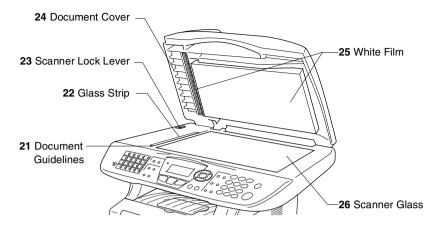


No.	Name	Description
21	Document Guidelines	Use to center the document on the scanner glass.
22	Glass Strip	This is used to scan documents when using the ADF.
23	Scanner Lock Lever	Use to lock/unlock the scanner when relocating the MFC.
24	Document Cover	Open to place the document on the scanner glass.
25	White Film	Clean it for good quality copying and scanning.
26	Scanner Glass	Place the document to be scanned here.

Control panel overview

MFC-8440 and MFC-8840D have similar control panel keys.



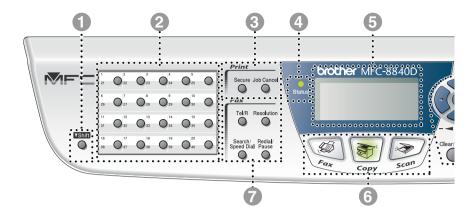

Shift

To access memory locations 21 through 40 in the One-Touch keys hold down the Shift key.

One-Touch keys

These 20 keys give you instant access to 40 previously stored dial numbers.

8 Print keys:

Secure

Lets you print out data saved in memory by entering your four-digit password.

Job Cancel

Clears data from the printer memory.

4 - - Status LED

(Light-Emitting Diode)

The LED will flash and change color depending on the MFC status.

5-Line Liquid Crystal Display (LCD)

Displays messages on the screen to help you to set up and use your MFC.

6 Mode keys:



Lets you access Fax mode.



Lets you access Copy mode.



Lets you access Scan mode.

Fax and telephone keys:

Tel/R

This key is used to have a telephone conversation having picked up the external handset in F/T pseudo-ringing etc. Also, use this key to gain access to an outside line and/or to recall the operator or transfer a call to another extension when it is connected to a PABX.

Resolution


Sets the resolution when you send a fax.

Search/Speed Dial

Lets you look up numbers that are stored in the dialling memory. It also lets you dial stored numbers by pressing # and a three-digit number.

Redial/Pause

Redials the last number you called. It also inserts a pause in auto dial numbers.

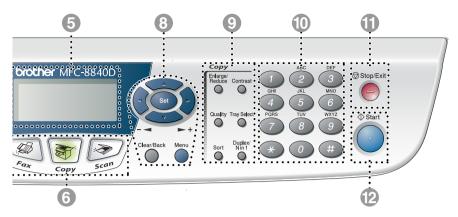

8 Navigation keys:

Menu

Lets you access the Menu to program.

Set

Lets you store your settings in the MFC.

Clear/Back

Deletes entered data or lets you exit the menu by pressing repeatedly.



Press to scroll forward or backward to a menu selection.

When using the speaker or ring, you can press these keys to adjust the volume in fax mode.

or 💎

Press to scroll through the menus and options.

Also, you can use these keys to do a numeral search for the names of stored numbers in fax mode.

Copy keys (Tomporary sotting)

(Temporary settings):

Enlarge/Reduce

Lets you reduce or enlarge copies depending upon the ratio you select.

Contrast

Lets you make a copy that is lighter or darker than the document.

Quality

Lets you select the copy quality for your type of document.

Tray Select

You can select which tray you would like to use for the next copy.

Sort

Lets you sort multiple copies using the ADF.

N in 1 (For MFC-8440)

N in 1 lets you copy 2 or 4 pages onto one page.

Duplex/N in 1 (For MFC-8840D) You can choose Duplex to copy on both sides of the paper or N in 1 to copy 2 or 4 pages onto one page.

Dial Pad

Use these keys to dial telephone and fax numbers and as a keyboard for entering information into the MFC.

The **#** key lets you temporarily switch the dialling mode during a telephone call from Pulse to Tone.

1 Stop/Exit

Stops a fax, copy and scan operation or exits from the menu.

⇔Start 12 Start

Lets you start sending faxes, making copies or scanning.

INTRODUCTION 1-9

Status LED indications

The **Status** LED (Light Emitting Diode) will flash and change color depending on the MFC status.



The LED indications shown in the table below are used in the illustrations in this chapter.

LED			LED status	
\bigcirc				LED is off.
		<u> </u>		LED is on.
	Green	Yellow	Red	
				LED is blinking.
	Green	Yellow	Red	

LED	MFC status	Description
\bigcirc	Sleep Mode	The power switch is off or the MFC is in Sleep mode or Power save mode.
- Green	Warming Up	The MFC is warming up for printing.
Green	Ready	The MFC is ready to print.
- Ýellow	Receiving Data	The MFC is either receiving data from the computer, processing data in memory or printing data.
Yellow	Data Remaining in Memory	Print data remains in the MFC memory.

LED	MFC status	Description	
	Service error	Follow the steps below.	
		1. Turn off the power switch.	
		2. Wait a few seconds, and then turn it back on and try to print again.	
Red		If you cannot clear the error and see the same service call indication after turning the MFC back on, call your dealer or Brother authorized service center.	
	Cover open	The cover is open. Close the cover. (See <i>Error messages</i> on page 22-1.)	
	Toner empty	Replace the toner cartridge with a new one. (See <i>Replacing the toner cartridge</i> on page 22-27.)	
Bed	Paper error	Put paper in the tray or clear the paper jam. Check the LCD message. (See <i>Troubleshooting</i> <i>and routine maintenance</i> on page 22-1.)	
Tiou	Scan lock	Check that the scanner lock lever is released. (See <i>Scanner Lock Lever</i> on page 1-4.)	
	Others	Check the LCD message. (See <i>Troubleshooting</i> and routine maintenance on page 22-1.)	
	Out of memory	Memory is full. (See <i>Error messages</i> on page 22-1.)	

When the power switch is off or the MFC is in Sleep mode, the LED is off.

About fax machines

Fax tones and handshake

When someone is sending a fax, the MFC sends fax calling tones (CNG tones). These are quiet, intermittent beeps every 4-seconds. You'll hear them after you dial and press Start and they will continue for about 60 seconds after dialling. During that time, the sending machine must begin the "handshake", or connection, with the receiving machine.

Each time you use automatic procedures to send a fax, you are sending CNG tones over the phone line. You'll soon learn to listen for these guiet beeps each time you answer a phone on your fax line, so you will know if you are receiving a fax message.

The receiving fax responds with fax receiving tones, which are loud, chirping sounds. A receiving fax chirps for about 40 seconds over the phone line, and the LCD shows Receiving.

If your MFC is set to the Fax Only mode, it will answer every call automatically with fax receiving tones. If the other person hangs up, your MFC will continue to send the "chirps" for about 40 seconds, and the LCD continues to show Receiving. To cancel receiving, press Stop/Exit.

The fax 'handshake' is the time in which the sending machine's CNG tones and the receiving machines "chirps" overlap. This must be for at least 2 to 4 seconds, so both machines can understand how each is sending and receiving the fax. The handshake cannot begin until the call is answered, and the CNG tones only last for about 60 seconds after the number is dialled. So it is important for the receiving machine to answer the call in as few rings as possible.

When you have an external Telephone Answering Device (TAD) on your fax line, your TAD will decide the number of rings before the call is answered.

Pay special attention to the directions for connecting a TAD in this chapter. (See Connecting an external telephone answering device (TAD) on page 1-15.)

ECM (Error Correction Mode)


The Error Correction Mode (ECM) is a way for the MFC to check a fax transmission while it is in progress. If the MFC detects errors during fax transmission, it resends the pages of the fax that had an error. ECM transmissions are only possible between fax machines that both have this feature. If they do, you may send and receive fax messages that are continuously being checked by the MFC.

Your MFC must have enough memory for this feature to work.

Connecting the MFC

Connecting an external telephone

Although your MFC does not have a handset, you can connect a separate telephone (or telephone answering device) directly to your MFC as shown in the diagram below.

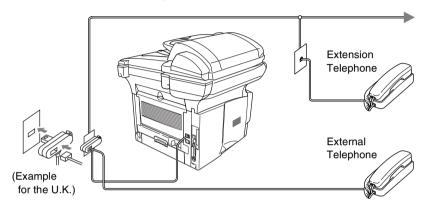

Whenever this phone (or TAD) is in use, the LCD shows Telephone.

Connecting an external telephone answering device (TAD)


Sequence

You may choose to connect an answering device. However, when you have an **external** TAD on the same telephone line as the MFC, the TAD answers all calls and the MFC "listens" for fax calling (CNG) tones. If it hears them, the MFC takes over the call and receives the fax. If it doesn't hear CNG tones, the MFC lets the TAD continue playing your outgoing message so your caller can leave you a voice message.

The TAD must answer within four rings (the recommended setting is two rings). The MFC cannot hear CNG tones until the TAD has answered the call, and with four rings there are only 8 to 10 seconds of CNG tones left for the fax "handshake". Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.

If you do not receive all your faxes, reduce the Ring Delay setting on your external TAD.

Do not connect a TAD elsewhere on the same phone line.

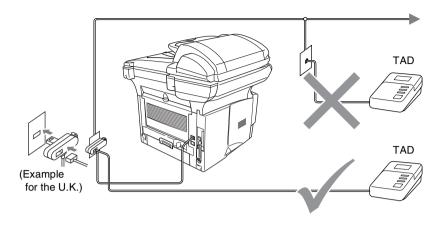

Connections

- **1** Plug the telephone line cord from the wall socket into the back of the MFC, in the socket labelled LINE.
- **2** Plug the telephone line cord from your external TAD into the correct socket on the machine. (Make sure this cord is connected to the TAD at the TAD's telephone *line* socket, and not its telephone socket.)
- **3** Set your external TAD to one or two rings. (The MFC's Ring Delay setting does not apply.)
- **4** Record the outgoing message on your external TAD.
- 5 Set the TAD to answer calls.
- 6 Set the Receive Mode to External TAD. (See *Choosing the Receive Mode* on page 5-1.)

1 - 16 INTRODUCTION

Recording outgoing message (OGM) on an external TAD

Timing is important in recording this message. The message sets up the ways to handle both manual and automatic fax reception.

- Record 5 seconds of silence at the beginning of your message. (This allows your MFC time to listen for the fax CNG tones of automatic transmissions before they stop.)
- **2** Limit your speaking to 20 seconds.
- 3 End your 20-second message by giving your Remote Activation Code for people sending manual faxes. For example:
 "After the beep, leave a message or send a fax by pressing + 51 and Start."
- We recommend beginning your OGM with an initial 5-second silence because the MFC cannot hear fax tones over a resonant or loud voice. You may try omitting this pause, but if your MFC has trouble receiving, then you must re-record the OGM to include it.

Using extension telephones (For U.K. only)


It may be that your premises are already wired with parallel extension telephones, or you intend to add extension telephones to your line, in addition to your machine. While the simplest arrangement is straightforward parallel connection, there are some reasons as to why this arrangement will cause unsatisfactory service, the most obvious of which is inadvertent interruption of a facsimile transmission by someone picking up an extension telephone in order to make an outgoing call. Additionally, remote activation may not operate reliably in such a simple configuration.

This machine may also be set to make a delayed transmission (i.e. a transmission at a pre-set time). This pre-set job may coincide with someone picking up an extension handset.

Such problems can easily be eliminated however, if you arrange modification of your extension wiring circuit, such that extension devices are connected "downstream" of your machine, in a master/slave configuration. In such a configuration, this machine can always detect whether a telephone is in use, thus it will not attempt to seize the line during that time. This is known as "telephone off-hook detection."

The inadvisable configuration is shown in figure 1 below, and the recommended master/slave configuration is shown in figure 2.

This new connection configuration can be arranged by contacting BT, Kingston upon Hull Telecommunications, your PABX maintainer or a qualified telephone installation company as appropriate. Simply explained, the extension telephone circuit should be terminated on a normal modular plug (BT 431A style), which in turn should be inserted into the modular socket of the white "T"-shaped connector provided as part of the line cord assembly.

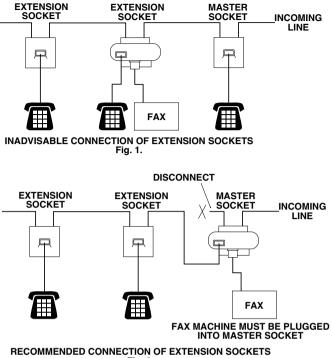



Multi-line connections (PBX)

Most offices use a central telephone system. While it is often relatively simple to connect the MFC to a key system or a PBX (Private Branch Exchange), we suggest that you contact the company that installed your telephone system and ask them to connect the MFC for you. It is advisable to have a separate line for the MFC. You can then leave the Receive Mode set to Fax Only to receive faxes any time of the day or night.

If the MFC is to be connected to a multi-line system, ask your installer to connect the unit to the last line on the system. This prevents the unit from being activated each time a telephone call is received.

If you are installing the MFC to work with a PBX

- 1 It is not guaranteed that the unit will operate correctly under all circumstances with a PBX. Any cases of difficulty should be reported first to the company that handles your PBX.
- 2 If all incoming calls will be answered by a switchboard operator, it is recommended that the Receive Mode be set to Manual. All incoming calls should initially be regarded as telephone calls.

Custom features on your phone line

If you have Voice Mail, Call Waiting, RingMaster, an answering service, an alarm system or other custom feature on one phone line it may create a problem with the operation of your MFC. (See *Custom features on a single line.* on page 22-13.)



About paper

Type and size of paper

The MFC loads paper from the installed paper tray, manual feed tray, multi-purpose tray or optional lower tray.

Тгау Туре	Model name
Paper tray (Tray #1)	MFC-8440 and MFC-8840D
Manual feed tray	MFC-8440
Multi-purpose tray (MP tray)	MFC-8840D
Optional lower tray (Tray #2)	Option for MFC-8440 and MFC-8840D

Recommended paper

Plain Paper:	Xerox Premier 80 g/m ²
	Xerox Business 80 g/m ²
	Mode DATACOPY 80 g/m ²
	IGEPA X-Press 80 g/m ²
Recycled paper:	Xerox Recycled Supreme
Transparency:	3M CG 3300
Labels:	Avery laser label L7163

- Before you buy a large amount of paper, please test some to make sure that the paper is suitable.
- Use paper that is made for plain-paper copying.
- Use paper that is 75 to 90 g/m².
- Use neutral paper. Do not use acidic or alkaline paper.
- Use long-grain paper.
- Use paper with a moisture content of approximately 5%.

Caution

Do not use ink iet paper. It may cause a paper iam and damage your MFC.



The output quality depends on the paper type and paper brand. Visit us at http://solutions.brother.com and check the latest recommendations for paper that can be used with the MFC-8440 and MFC-8840D.

Choosing acceptable paper

We recommend that you test paper (especially special sizes and types of paper) on the MFC before purchasing large quantities.

- Avoid feeding label sheets that are partly used or your MFC will be damaged.
- Avoid using coated paper, such as vinyl coated paper.
- Avoid using preprinted or highly textured paper, or paper with an embossed letterhead.

For optimum printing, use a recommended type of paper, especially for plain paper and transparencies. For more information on paper specifications, call your nearest authorized sales representative or the place where you purchased your MFC.

- Use label or transparencies that are designed for use in *laser* printers.
- For the best print quality, we recommend using long-grained paper.
- If you are using special paper and the paper has problems feeding from the paper tray, try again using the manual feed tray or Multi-purpose tray.
- You can use recycled paper in this MFC.

Paper capacity of the paper trays

	Paper size	Number of sheets
Multi-purpose tray (MP tray) (MFC-8840D)	Width: 69.8 to 220 mm Height: 116 to 406.4 mm	50 sheets (80 g/m ²)
Manual feed tray (MFC-8440)	Width: 69.8 to 220 mm Height: 116 to 406.4 mm	Single sheet
Paper tray (Tray #1)	A4, Letter, Legal, B5 (ISO), B5 (JIS), Executive, A5, A6, B6 (ISO)	250 sheets (80 g/m ²)
Optional lower tray (Tray #2)	A4, Letter, Legal, B5 (ISO), B5 (JIS), Executive, A5, B6 (ISO)	250 sheets (80 g/m ²)
Duplex printing	A4, Letter, Legal	—

Paper specifications for each paper tray

Model		MFC-8440	MFC-8840D	
Paper types	Multi- purpose tray	N/A	Plain paper, Bond paper, Recycled paper, Envelope ^{*1} , Labels ^{*2} , and Transparency ^{*2}	
	Manual feed tray	Plain paper, Bond paper, Recycled paper, Envelope, Labels, and Transparency	N/A	
	Paper tray	Plain paper, Recycled paper, and Transparency*2		
	Optional Lower tray	Plain paper, Recycled pape	r, and Transparency* ²	
Paper weights	Multi- purpose tray	N/A	60 to 161 g/m ²	
	Manual feed tray	60 to 161 g/m ²	N/A	
	Paper tray	60 to 105 g/m ²		
	Optional Lower tray	60 to 105 g/m ²		
Paper	Multi-	N/A	Width: 69.8 to 220 mm	
sizes	purpose tray		Height: 116 to 406.4 mm	
Manual feed tray		Width: 69.8 to 220 mm Height: 116 to 406.4 mm	N/A	
	Paper tray	A4, Letter, Legal, B5 (ISO), B6 (ISO)	B5 (JIS), Executive, A5, A6,	
	Optional Lower Tray	A4, Letter, Legal, B5 (ISO), B6 (ISO)	B5 (JIS), Executive, A5,	


*1 Up to 3 envelopes

*2 Up to 10 sheets

When printing transparencies, remove each one from the face-down output tray after it exits the MFC.


To load paper or other media in the paper tray

1 Pull the paper tray completely out of the MFC.

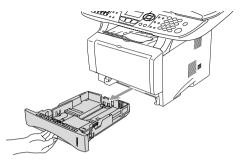


2 While pressing the paper guide release lever, slide the adjusters to fit the paper size.

Check that the guides are firmly in the slots.

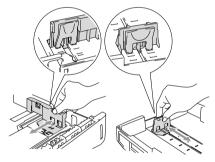


For Legal size paper, press the universal guide release button and pull out the back of the paper tray.

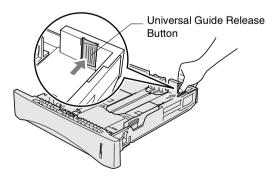


- **3** Fan the stack of paper well to avoid paper jams and misfeeds.
- **4** Put paper in the paper tray.

Check that the paper is flat in the tray, below the maximum paper mark, and that the paper guide is flush against the paper stack.

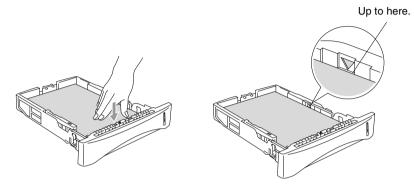

5 Put the paper tray firmly back in the MFC and unfold the support flap before you use the MFC.

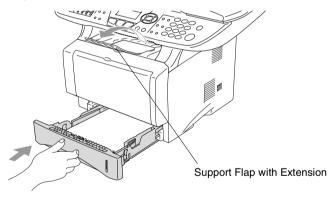

- When you put paper in the paper tray, please remember the following:
 - The side to be printed on must be face down.
 - Put the leading edge (top of the paper) in first and push it gently into the tray.
 - To copy or receive faxes on Legal size paper, unfold the support flap extension, too.

To load paper or other media in the manual feed tray (For MFC-8440)



When printing envelopes and labels you should only use the manual feed tray.

1 Open the manual feed tray. Slide the paper guides to fit the paper size.



2 Using both hands put paper in the manual feed tray until the front edge of the paper touches the paper feed roller. Hold the paper in this position until the MFC automatically feeds the paper in for a short distance, and then let go of the paper.



When you put paper in the manual feed, please remember the following:

- The side to be printed on must be face up.
- Put the leading edge (top of the paper) in first and push it gently into the tray.
- Make sure that the paper is straight and in the proper position on the manual feed tray. If it is not, the paper may not be fed properly, resulting in a skewed printout or a paper jam.
- Do not put more than one sheet of paper or envelope in the manual feed tray at any one time, or it may cause a jam.

To load paper or other media in the multi-purpose tray (MP tray) (For MFC-8840D)



When printing envelopes and labels you should only use the multi-purpose tray.


1 Open the MP tray and lower it gently.



2 Pull out and unfold the MP tray support flap.




3 When loading paper in the MP tray, make sure it touches the back of the tray.

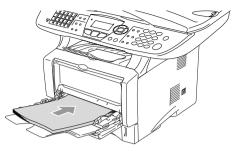

Make sure that the paper is straight and in the proper position on the MP tray. If it is not, the paper may not be fed properly, resulting in a skewed printout or a paper jam.

You can place up to 3 envelopes or up to 50 sheets of 80 g/m² paper in the MP tray.

4 While pressing the paper-guide release lever, slide the paper guide to fit the paper size.

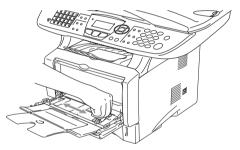


- When you put paper in the MP tray, please remember the following:
 - The side to be printed on must be face up.
 - During printing, the inside tray rises to feed paper into the MFC.
 - Put the leading edge (top of the paper) in first and push it gently into the tray.

To use Automatic Duplexing for fax, copy and print operations (For MFC-8840D)

If you want to print on both sides of the paper using the Duplex feature for fax, copy or print, you will need to set the Paper Adjustment Lever to the size of paper you are using.

This feature is available for A4, Letter or Legal size paper. (See *Setting Duplex printing for Fax mode (For MFC-8840D)* on page 5-13, *Duplex/N in 1* on page 10-12 and *Two-sided printing (Duplex Printing)* on page 11-3.)

- 1 Load paper in the Paper Tray or Multi-purpose Tray.
- **2** Set the Paper Adjustment Lever for Duplex Printing, in the back of the MFC, to match your paper size.

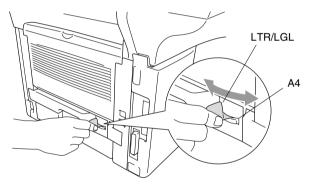

3 Your MFC is now ready to print two-sided pages.

3 On-screen programming

User-friendly programming

Your MFC is designed to be easy to use with LCD on-screen programming using the navigation keys. User-friendly programming helps you take full advantage of all the menu selections your MFC has to offer.

Since your programming is done on the LCD, we have created step-by-step on-screen instructions to help you program your MFC. All you need to do is follow the instructions as they guide you through the menu selections and programming options.

Menu table

You can probably program your MFC without the User's Guide. But to help you understand the menu selections and options that are found in the MFC programs, use the Menu table on page 3-4.



Memory Storage

If there is a power failure, you will not lose your menu settings because they are stored permanently. Temporary settings (such as Contrast, Overseas Mode, and so on) will be lost. You may also have to reset the date and time.

Navigation keys	Menu	
		*Access the menu
	Set	*Go to the next menu level
⊲ Set >		*Accept an option
	Clear/Back	*Exit the menu by pressing repeatedly
		*Go back to the previous menu level
Clear/Back Menu	× v	* Scroll through the current menu level
		*Go back to the previous menu level
	♥ Stop/Exit	*Go forward to the next menu level
	Stop/Exit	*Exit the menu

You can access the menu mode by pressing **Menu**. When you enter the menu, the LCD scrolls.

Press 1 for General Setup menu

__OR__

Press 2 for Fax menu

---OR---

Press 3 for Copy menu

__OR__

Press 4 for Printer menu

---OR---

Press 5 for Print Reports menu

__OR__

Press 6 for LAN menu

Select ▲▼ & Set .Printer 5.Print Reports

1.General Setup

2.Fax 3.Copy

4.Printer

6.LAN 0.Initial Setup Select **▲▼** & Set

(Only if the optional LAN board (NC-9100h) is installed.) ---OR---

Press 0 for Initial Setup menu

---OR---

You can scroll more quickly through each menu level by pressing the arrow for the direction you want: - or -

Then set an option by pressing **Set** when that option appears on the LCD.

The LCD will then show the next menu level.


Press 🗢 or 🗢 to scroll to your next menu selection.

Press Set.

When you finish setting an option, the LCD shows ${\tt Accepted}.$


Use — to scroll backward if you passed your choices or want to save keystrokes.

The current setting is always the option with " \star ".

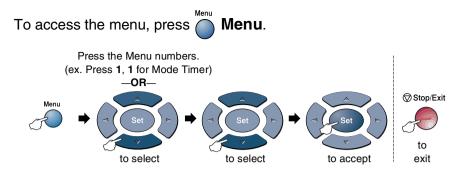


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1.General Setup	1.Mode Timer	_	0 Sec 30 Sec 1 Min 2 Mins * 5 Mins Off	Sets how long the MFC will stay in Copy or Scan mode before returning to Fax mode.	4-6
	2.Paper Type	1.MP Tray (MFC-8840D)	Thin Plain * Thick Thicker Transparency	Sets the type of paper in the Multi-purpose tray.	4-7
		2.Tray #1 (For MFC-8440, this menu doesn't appear.) 3.Tray #2 (option)	Thin Plain * Thick Thicker Transparency	Sets the type of paper in paper tray #1.	4-7
			Thin Plain * Thick Thicker Transparency	Sets the type of paper in paper tray #2.	4-7
	3.Paper Size	1.Tray #1 (This menu only appears if you have the optional tray #2.)	A4 * Letter Legal Executive A5 A6 B5 B6	Sets the size of paper in paper tray #1.	4-8



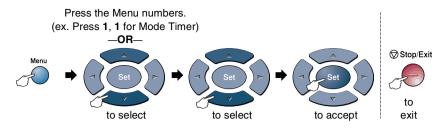


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1.General Setup (Continued)	3.Paper Size (Continued)	2.Tray #2 (option)	A4 * Letter Legal Executive A5 B5 B6	Sets the size of paper in paper tray #2.	4-8
	4.Volume	1.Ring	High Med X Low Off	Adjusts the ring volume.	4-9
		2.Beeper	High Med X Low Off	Adjusts the volume level of the beeper.	4-9
		3.Speaker	High Med X Low Off	Adjusts the speaker volume.	4-10
	5.Auto Daylight	_	On X Off	Change for Daylight Savings Time automatically.	4-10
	6.Ecology	1.Toner Save	On Off X	Increases life of toner cartridge.	4-10
		2.Sleep Time	(00-99) 05Min X	Conserves power	4-11
		3.Power Save	On Off X	Power Save Mode	4-12




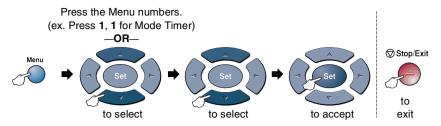


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1.General Setup (Continued)	7.Tray Use: Copy (For MFC-8440, this menu doesn't appear.) (If you have optional tray #2, see page 3-17.)	_	Tray#1 Only MP Only Auto*	Selects the tray that will be used for copy.	4-13
	8.Tray Use: Fax (This setting only appears if you have the optional tray #2, see page 3-17.)	_		Selects the tray that will be used for fax.	4-14
	7.LCD Contrast (MFC-8440) 8.LCD Contrast (MFC-8840D) 9.LCD Contrast (With optional tray #2)	_	+ + + + 	Adjusts the contrast of LCD.	4-14
2.Fax	1.Setup Receive (In Fax mode only)	1.Ring Delay	00 - 04 (02 *) (UK only) 00 - 05 (02 *) (Nordic countries only)	Sets the number of rings before the MFC answers in FAX or FAX/TEL mode.	5-2
		2.F/T Ring Time	70 40 30★ 20	Sets the pseudo/double-ring time in FAX/TEL mode.	5-3

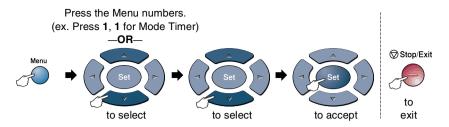

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2.Fax (Continued)	1.Setup Receive (In Fax mode only)	3.Fax Detect	On X Off	Receives fax messages without pressing the Start key.	5-4
(Continued)	4.Remote Code	On (*51, #51) Off*	You can answer all calls at an extension or external phone and use codes to turn the MFC on or off. You can personalize these codes.	5-9	
		5.Auto Reduction	On X Off	Reduces the size of incoming faxes.	5-5
		6.Memory Receive	On X Off	Automatically stores any incoming faxes in its memory if it runs out of paper.	5-6
		7.Print Density	+ + + * + *	Makes printouts darker or lighter.	5-7
		8.Polling RX	Standard X Secure Timer	Sets up your MFC to poll another fax machine.	5-10
		9.Duplex (MFC-8840D)	On Off X	Receives faxes printed on both sides of the paper.	5-13

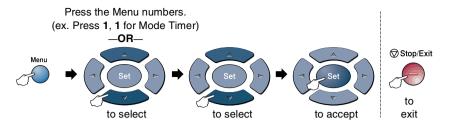


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page	
2.Fax (Continued)	2.Setup Send (In Fax mode only)	1.Contrast	Auto* Light Dark	Changes the lightness or darkness of faxes you send.	6-8	
		2.Fax Resolution	Standard * Fine S.Fine Photo	Sets the default resolution for outgoing faxes.	6-9	
		3.Delayed Fax	_	Set the time of day in 24 hour format that the delayed faxes will be sent.	6-20	
		4.Batc	4.Batch TX	On Off*	Combines delayed faxes to the same fax number at the same time of day into one transmission.	6-21
		5.Real Time TX	Off * On Next Fax Only	You can send a fax without using the memory.	6-11	
		6.Polled TX	6.Polled TX	Standard* Secure	Sets up the document on your MFC to be retrieved by another fax machine.	6-21
		7.Coverpg Setup	Next Fax Only On Off* Print Sample	Automatically send a Cover Page you have programmed.	6-14	

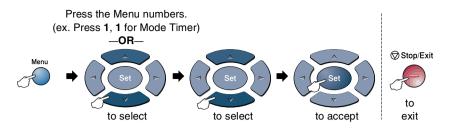


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2.Fax (Continued)	2.Setup Send (In Fax mode only)	8.Coverpage Note	—	You can set up your own comments for the fax Cover Page.	6-15
	(Continued)	9.0verseas Mode	On Off *	Adjusts for overseas transmissions, which can sometimes cause problems.	6-19
		0.Glass Fax Size	A4/Letter* Legal	Adjusts the scan area of the scanner glass to the size of the document.	6-5
	3.Set Quick-Dial 4.Report Setting	1.One-Touch Dial		Stores One-Touch Dial numbers, so you can dial by pressing one key (and Start).	7-1
		2.Speed-Dial	_	Stores Speed-Dial numbers, so you can dial by pressing only a few keys (and Start).	7-3
		3.Setup Groups	—	Sets up a Group number for Broadcasting.	7-5
		1.XMIT Report	On On+Image X Off Off+Image	Initial setup for Transmission Verification Report and Journal Report.	9-1
		2.Journal Period	Every 7 Days Every 2 Days Every 24 Hours Every 12 Hours Every 6 Hours Every 50 Faxes X Off		9-2

 \mathbb{P} The factory settings are shown in Bold with *.

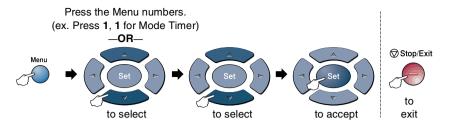


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2.Fax (Continued)	5.Remote Fax Opt	1.Fax Forward	On Off X	Sets the MFC to forward fax messages.	8-1
		2.Fax Storage	On Off*	Stores incoming faxes in the memory so you can retrieve them while you are away from your MFC.	8-2
		3.Remote Access	*	You must set your own code for Remote Retrieval.	8-3
		4.Print Document	_	Prints incoming faxes stored in the memory.	5-7
	6.Remaining Jobs	_	_	Checks which jobs are in the memory or cancels a delayed fax or polling job.	6-12
	0.Miscellaneous	1.Mem Security	_	Prohibits most functions except receiving faxes into memory.	6-23
		2.Drum Life	_	You can check the percentage of drum life that remains available.	22-35
		3.Page Counter	Total Copy Print List/Fax	Lets you check number of total pages the MFC has printed so far.	22-35
		4.BT Call Sign (U.K. Only)	On Off*	Use with BT Call Sign.	5-14



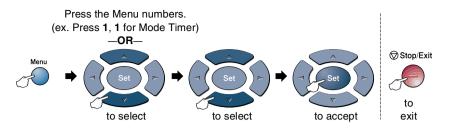


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
3.Сору	1.Quality		Text Photo Auto X	Selects the Copy resolution for your type of document.	10-20
	2.Contrast	_	+ + + X +	Adjusts the contrast for copies.	10-20
4.Printer	1.Emulation	—	Auto X HP LaserJet BR-Script 3	Selects the Emulation mode.	11-18
	2.Print Options	1.Internal Font	—	Prints a list of the MFC's internal fonts	11-19
		2.Configuration	_	or current printer settings.	11-19
	3.Reset Printer	—	—	Returns the MFC to the original factory default settings.	11-19
5.Print	1.Help List	—	—	You can print these	9-3
Reports	2.Quick-Dial	—	—	lists and reports.	
	3.Journal	_	—		
	4.XMIT Verify	_	_		
	5.System Setup	—	—		
	6.Order Form	—	—		

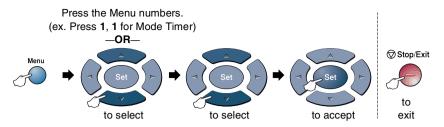

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
0.Initial Setup	1.Receive Mode	_	Fax Only* Fax/Tel External TAD Manual	You can choose the receive mode that best suits your needs.	5-2
	2.Date/Time	_	_	Puts the date and time on the LCD and in headings of faxes you send.	4-1
	3.Station ID	—	Fax Tel Name	Program your name, fax and telephone number to appear on each page you fax.	4-2
	4.Tone/Pulse	_	Tone X Pulse	Selects the dialling mode.	4-15
	5.PBX	_	On Off*	Turn on this function if the machine is connected to PABX (private automatic Branch Exchange.)	4-5
	6.Local Language (For Czech and Hungarian)	_	Czech Hungarian English	Allows you to change the LCD Language for your country.	See Quick Setup Guide
	6.Local Language (For Norwegian, Swedish, Danish and Finnish)	_	Norwegian Swedish Danish Finnish English	Allows you to change the LCD Language for your country.	See Quick Setup Guide




6.Local Language menu is not available on UK machine.

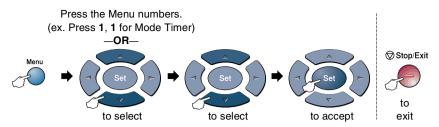


If you installed optional LAN board (NC-9100h), the LCD shows the following LAN menu.


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
6.LAN (option)	1.Setup TCP/IP	1.BOOT Method	Auto X Static RARP BOOTP DHCP	You can choose the BOOT method that best suits you needs.	
		2.IP Address	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.	
		3.Subnet Mask	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.	See Network User's Guide
		4.Gateway	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.	on the CD-ROM
		5.Host Name	BRN_XXXXXX	Enter the Host name.	
		6.WINS Config	Auto X Static	You can choose the WINS configuration mode.	
		7.WINS Server	Primary Secondary	Specifies the IP address of the primary or secondary server.	



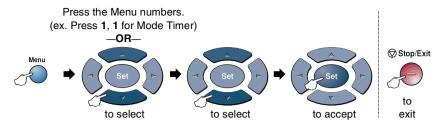


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
6.LAN (option) (Continued)	1.Setup TCP/IP (Continued)	8.DNS Server	Primary Secondary	Specifies the IP address of the primary or secondary server.	
		9.APIPA	On★ Off	Automatically allocates the IP address from the link-local address range.	
	2.Setup Internet	1.Mail Address	(60 characters)	Enter the mail address.	
		2.SMTP Server	[000-255].[000- 255].[000-255]. [000-255]	Enter the SMTP server address.	See Network
		3.POP3 Server	[000-255].[000- 255].[000-255]. [000-255]	Enter the POP3 server address.	User's Guide on the CD-ROM
		4.Mailbox Name	(up to 20 characters)	Enter the mail box name.	
		5.Mailbox Pwd	Password:*****	Enter the password to login to the POP3 server.	
	3.Setup Mail RX	1.Auto Polling	On X Off	Automatically checks the POP3 server for new messages.	
		2.Poll Frequency	10 Min	Sets the interval for checking for new messages on the POP3 server.	

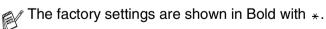

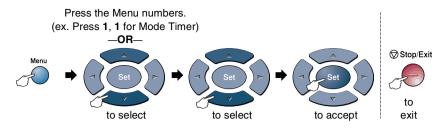

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
6.LAN (option) (Continued)	3.Setup Mail RX (Continued)	3.Header	All Subject+From+To None X	Selects the contents of the mail header to be printed.	
		4.Del Error Mail	On X Off	Deletes error mails automatically.	
		5.Notification	On MDN Off X	Sends notification messages.	
	4.Setup Mail TX	1.Sender Subject	_	Displays the subject that is attached to the Internet Fax data.	See Network User's
		2.Size Limit	On Off X	Limits the size of E-mail documents.	Guide on the CD-ROM
		3.Notification	On Off X	Sends notification messages.	CD-NOIVI
	5.Setup Relay	1.Rly Broadcast	On Off X	Relays a document to another fax machine.	
		2.Relay Domain	Relay XX:	Registers the Domain name.	
		3.Relay Report	On Off X	Prints the Relay Broadcast Report.	

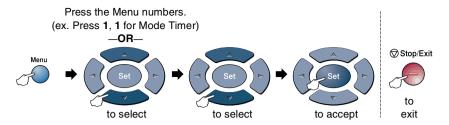

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
6.LAN (option) (Continued)	6.Setup Misc.	1.Netware	On X Off	Select On to use the MFC on a Netware network.	
		2.Net Frame	Auto X 8023 ENET 8022 SNAP	Lets you specify the frame type.	
		3.AppleTalk	On X Off	Select on to use the MFC on a Macintosh network.	
		4.DLC/LLC	On X Off	Select On to use the MFC on a DLC/LLC network.	See Network User's
		5.Net BIOS/IP	On X Off	Select On to use the MFC on a Net BIOS/IP network.	Guide on the CD-ROM
		6.Ethernet	Auto * 1008-FD 1008-HD 108-FD 108-HD	Selects Ethernet link mode.	
		7.Time Zone	GMT-XX:XX	Sets the time zone for your country.	
	7.Scan to E-Mail	1.Color	PDF X JPEG	Selects the file type.	
		2.B/W	PDF X TIFF		

If you have the optional paper tray, the LCD displays these options. (**Menu**, **1**, **7**/**Menu**, **1**, **8**)

(For MFC-8440 with the optional paper tray #2)

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1.General Setup	7.Tray Use: Copy	—	Tray#1 Only Tray#2 Only Auto*	Select the tray that will be used for copying.	4-13
	8.Tray Use: Fax	—	Tray#1 Only Tray#2 Only Auto*	Select the tray that will be used for faxing.	4-14

(For MFC-8840D with the optional paper tray #2)

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1.General Setup	7.Tray Use: Copy	_	Tray#1 Only Tray#2 Only MP Only Auto *		4-13
	8.Tray Use: Fax	—	Tray#1 Only Tray#2 Only Auto*	Select the tray that will be used for faxing.	4-14



Initial Setup

Setting the Date and Time

Your MFC displays the date and time and if you set up the Station ID it prints on every fax you send. If there is a power failure, you may have to reset the date and time. All other settings will not be affected.

- **1** Press **Menu**, **0**, **2**.
- 2 Enter the last two digits of the year. Press Set.

02.Date/Time	
Year:20XX	
Enter & Set Key	

3 Enter two digits for the month. Press **Set**.

(For example, enter 09 for September, or 10 for October.)

4 Enter two digits for the day. Press **Set**.

(For example, enter 06 for 6th.)

5 Enter the time in 24-Hour format. Press **Set**.

(For example, enter 15:25 for 3:25 P.M.)

6 Press Stop/Exit.

The LCD now shows the date and time whenever the MFC is in Standby mode.

Setting the Station ID

You should store your name or company name and fax number and telephone number to be printed on all fax pages that you send.

It is important that you enter the fax and telephone numbers in the internationally standardised format, i.e. in accordance with the following strict sequence:

- The "+" (plus) character (by pressing ★ key)
- Your Country Code (e.g. "44" for the United Kingdom, "41" for Switzerland)
- Your local area code minus any leading "0" ("9" in Spain)
- A space
- Your number on the local exchange, using spaces to aid readability as appropriate.

As an example, if the machine is installed in the United Kingdom and the same line is to be used for both fax and voice calls, and your national telephone number is 0161-444 5555, then you must set the fax and telephone number parts of your station ID as: +44 161-444 5555.

- **1** Press **Menu**, **0**, **3**.
- 2 Enter your fax number (up to 20 digits).

03.Sta	tion	ID	
Fax:			
Enter	& Set	: Key	

Press Set.

3 Enter your telephone number (up to 20 digits). Press **Set**.

(If your telephone number and fax number are the same, enter the same number again).

The telephone number you enter is only used for Cover Page features. (See *Composing the electronic Cover Page* on page 6-14.)



You cannot enter a hyphen.

- **4** Use the dial pad to enter your name (up to 20 characters). Press **Set**.
- **5** Press **Stop/Exit**.

The LCD will show the date and time.

If the Station ID has already been programmed, the LCD will ask you to press **1** to make a change or **2** to exit without changing.

Entering text

When you are setting certain functions, such as the Station ID, you may need to type text into the MFC. Most number keys have three or four letters printed above them. The keys for 0, # and \times do not have printed letters because they are used for special characters.

By pressing the appropriate number key repeatedly, you can access the character you want.

Press Key	one time	two times	three times	four times
2	А	В	С	2
3	D	E	F	3
4	G	Н	I	4
5	J	К	L	5
6	М	Ν	0	6
7	Р	Q	R	S
8	Т	U	V	8
9	W	Х	Y	Z

Inserting spaces

To enter a space, press **>** once between numbers and twice between characters.

Making corrections

If you entered a letter incorrectly and want to change it, press to move the cursor under the incorrect character. Then press **Clear/Back**. The letter above the cursor will be deleted. Re-enter the correct character.

Repeating letters

If you need to enter a character that is on the same key as the previous character, press to move the cursor to the right before you press the key again.

Special characters and symbols

Press \star , # or **0**, and then press \bullet or \bullet to move the cursor under the special character or symbol you want. Then press **Set** to select it.

Press X	for	(space) ! " # \$ % & ' () ★ + , /€
Press #	for	:;<=>?@[]^_
Press 0	for	Ä Ë Ö Ü À Ç È É 0

GETTING STARTED 4-5

PABX and TRANSFER

The machine is initially set to be connected with PSTN (Public Switched Telephone Network) lines. However, many offices use a central telephone system or Private Automatic Branch Exchange (PABX). Your fax can be connected to most types of PABX. The recall facility on the machine supports timed break recall only (TBR), PBXS normally can work with this for gaining access to an outside line, or for transferring a call to another extension: The feature works when the **Tel/R** key is pressed.

Setting PABX

If the machine is connected to a PABX system, set PBX to On. If not, set it to Off.

05.PBX

On

Off

Select ▲▼ & Set

- **1** Press **Menu**, **0**, **5**.
- 2 Press or to select On (or Off).

Press Set.

3 Press Stop/Exit.

You can program a **Tel/R** keypress as part of a number stored in a One-Touch or Speed-Dial location. When programming the One-Touch or Speed-Dial number (Function menu 2-3-1 or 2-3-2) press **Tel/R** first (the screen displays "!"), then enter the telephone number. If you do this, you do not need to press **Tel/R** each time before you dial using a One-Touch or Speed-Dial location. (See *Storing numbers for easy dialling* on page 7-1.)

However, if PBX is set to Off, you cannot use the One-Touch or Speed-Dial number that a **Tel/R** key press is programmed into.



General Setup

Setting the Mode Timer

The MFC has three temporary mode keys on the control panel: Fax, Copy and Scan. You can change the number of seconds or minutes the MFC takes after the last Copy or Scan operation before it returns to Fax mode. If you select <code>Off</code>, the MFC stays in the mode you used last.



- **1** Press **Menu**, **1**, **1**.
- 2 Press 🗢 or 🗢 to select
 - 0 Sec,30 Secs,1 Min,2 Mins,
 - 5 Mins **or** Off.

11.Mode Timer	
▲ 0 Sec	
30 Secs	
▼ 1 Min	
Select ▲▼ & Set	

3 Press Set.

Setting the Paper Type

To get the best print quality, set the MFC for the type of paper you are using.

For MFC-8440

1 Press Menu, 1, 2.

__OR__

If you have the optional paper tray, press Menu, 1, 2, 1 to set the paper type for Tray #1 or Menu, 1, 2, 2 to set the paper type for Tray #2.

- 2 Press or to select Thin, Plain, Thick, Thicker or Transparency.
- 3 Press Set.
- 4 Press Stop/Exit.

For MFC-8840D

1 Press **Menu**, **1**, **2**, **1** to set the paper type for MP Tray.

-OR-

Press **Menu**, **1**, **2**, **2** to set the paper type for Tray #1.

—OR—

If you have the optional paper tray, press **Menu**, **1**, **2**, **3** to set the paper type for Tray #2.

- 2 Press or or to select Thin, Plain, Thick, Thicker or Transparency.
- 3 Press Set.
- 4 Press Stop/Exit.

You can select Transparency for Tray #1 and Tray #2 only when A4, Letter or Legal is selected in Menu, 1, 3.

ay,	▼			nic				
[Se	lec	ct	\	•	&	Se	t
nu, ´	12	.Pa	pe	er	Τ	ур	е	
in, -	2	г.1 2.1	ra	ay	#	2		
± 11, [Se	lec	:t	\	•	&	Se	t

12.Paper Type ▲ Plain

Thick

12.Paper Type
1.MP Tray
2.Tray #1
3.Tray #2
Select ▲▼ & Set



4-8 GETTING STARTED

Setting the Paper Size

You can use eight sizes of paper for printing copies: A4, letter, legal, executive, A5, A6, B5 and B6 and three sizes of paper for printing faxes: A4, letter and legal. When you change the size of paper in the MFC, you will need to change the setting for Paper Size at the same time so your MFC can fit an incoming fax or reduced copy on the page.

- **1** Press **Menu**, **1**, **3**.
- 13.Paper Size ▲ A4 Letter ▼ Legal Select ▲▼ & Set

With optional paper trav

3 Press Stop/Exit.

1 Press Menu, 1, 3, 1 to set the paper size for Tray #1.

-OR-

Press **Menu**, **1**, **3**, **2** to set the paper size for Tray #2.

13.Paper Size 1.Tray #1 2.Tray #2 Select ▲▼ & Set

Press Set.

- *3* Press Stop/Exit.
- If you are using the optional paper tray, paper size A6 is not available.
 - If you select Transparency in Menu, 1, 2, you can only select A4, Letter or Legal.

Setting the Ring Volume

You can adjust the ring volume when your MFC is idle (not being used). You can turn the ring <code>Off</code> or you can select the ring volume level.

1 Press **Menu**, **1**, **4**, **1**.

```
2 Press or to select
(Low, Med, High or Off).
Press Set.
```

```
3 Press Stop/Exit.
```

14.Volume 1.Ring ▲ Med ▼ High Select ▲▼ & Set

-OR-

In Fax mode, press or b to adjust the volume level. Every time you press these keys, the MFC will ring so you can hear the active setting as the LCD shows it. The volume changes with each key press. The new setting will stay until you change it again.

Setting the Beeper Volume

You can change the beeper volume. The default (factory) setting is Med. When the beeper is on, the MFC beeps every time you press a key or make a mistake and after a fax is sent or received.

- 1 Press Menu, 1, 4, 2.
- 2 Press or to select your option.

(Low, Med, High **or** Off)

Press Set.

3 Press **Stop/Exit**.

14.Volume
2.Beeper
▲ Med
▼ High
Select ▲▼ & Set

Setting the Speaker Volume

You can adjust the MFC's one-way speaker volume.

- **1** Press **Menu**, **1**, **4**, **3**.
- 2 Press or to select (Low, Med, High or Off).
 Press Set.
- *3* Press Stop/Exit.

14.Volume	
3.Speaker	
▲ Med	
▼ High	
Select ▲▼ & Set	

Turning on Automatic Daylight Savings Time

You can set the MFC to change automatically for Daylight Savings Time. It will reset itself forward one hour in the Spring and backward one hour in the Autumn. Make sure you have set the correct day and time in the Date/Time setting. The default setting is On.

- **1** Press **Menu**, **1**, **5**.
- 2 Press or to select on (or off).
 Press Set.



3 Press Stop/Exit.

Toner Save

You can conserve toner using this feature. When you set Toner Save to On, print appears somewhat lighter. The default setting is Off.

- **1** Press **Menu**, **1**, **6**, **1**.
- 2 Press or to select On (or Off).
- 3 Press Set.
- 4 Press Stop/Exit.



Sleep Time

Setting the Sleep Time reduces power consumption by turning off the fuser inside the MFC, while it is idle. You can choose how long the MFC is idle (from 00 to 99 minutes) before it goes into sleep mode. The timer is automatically reset when the MFC receives a Fax or PC data, or makes a copy. The factory setting is 05 minutes. While the MFC is in sleep mode, you will see *Sleep* on the LCD. If you try to print or copy in sleep mode, there will be a short delay while the fuser warms up to working temperature.

- **1** Press **Menu**, **1**, **6**, **2**.
- **2** Use the dial pad to enter the length of time the MFC is idle before it goes into sleep mode (00 to 99).
- 3 Press Set.
- 4 Press Stop/Exit.



- If you want to turn sleep mode off, press Secure and Job Cancel simultaneously in Step 2.
- If the MFC is in Sleep Mode when you change the Sleep Time, the new setting will take effect the next time the MFC copies or prints is restarted.

Turning off the Scanner Lamp

The scanner lamp stays on for 16 hours before automatically switching off to preserve the life of the lamp. You can turn off the scanner lamp manually if you wish by pressing the and keys simultaneously. The scanner lamp will remain turned off until the next time you use the scanning feature.

Turning off the scanner lamp will also reduce the power consumption.



Please note that turning the lamp off regularly will reduce the lamp's life. Some people prefer to turn the lamp off as they leave the office, or late at night at home. This is not necessary for normal day to day use.

If the MFC is in Sleep Mode when you change the Sleep Time, the new setting will take effect the next time the MFC copies, prints or is restarted.

Power Save

Setting Power Save mode reduces power consumption. If Power Save Mode is switched On, when the MFC is idle and the scanner lamp is turned off, it drops into power save mode in approx. 10 minutes automatically. In the Power Save Mode, you cannot use the fax detect function or remote activation.

The MFC will not display the date and time in this condition.

- **1** Press **Menu**, **1**, **6**, **3**.
- 2 Press or to select On (or Off).
- **3** Press **Set** when the screen displays your selection.
- 4 Press Stop/Exit.

16.Ecology			
3.Power Save			
▲ On			
▼ Off			
Select ▲▼ & Set			

Setting the Tray Use for Copy mode

If your MFC is a MFC-8440 without the optional tray #2, you can skip this setting.

MFC-8440

The default setting of Auto allows *1your MFC to choose the optional Tray #2 when paper is out in Tray #1 or *2when the size of the document will fit best on the paper in Tray #2.

- **1** Press **Menu**, **1**, **7**.
- 3 Press Set.
- 4 Press Stop/Exit.

MFC-8840D

The default setting of Auto allows *¹your MFC to choose the optional Tray #2 or the MP tray when paper is out in Tray #1 or and *²when the size of the document will fit best on the paper in Tray #2.

 Press Menu, 1, 7.
 Press or to select Tray#1 Only, MP Only, or Auto.
 OR—
 If you have the optional paper tray. Press or to select

```
Tray#1 Only, Tray#2 Only, MP
Only, Of Auto.
```

 
- 3 Press Set.
- 4 Press Stop/Exit.

*1 Copies will automatically be printed from Tray #2 only if the Paper Size setting for Tray #2 is the same as Tray #1.

*2 When using the ADF, copies will automatically be printed from Tray #2 if the Paper Size setting for Tray #2 is different than Tray #1 and this paper size is more suitable for the scanned original.

17.Tray Use: Copy	
▲ Tray#1 Only	
Tray#2 Only	
▼ Auto	
Select ▲▼ & Set	
	_






17.Tray Use: Copy Tray#1 Only Tray#2 Only MP Only Select ▲▼ & Set

Setting the Tray Use for Fax mode

If your MFC doesn't have the optional tray #2, you can skip this setting.

The default setting of Auto allows your MFC to choose the optional Tray #2 if Tray #1 is out of paper or if incoming faxes will fit best on the paper in Tray #2.

 - 1 Press Menu, 1, 8.
- 2 Press or to select Tray#1 Only, Tray#2 Only, or Auto.
- **3** Press Set.
- 4 Press Stop/Exit.



If Auto Reduction is turned on, incoming faxes will be printed from the tray that is set for Auto Reduction. (See Printing a reduced incoming fax (Auto Reduction) on page 5-5.)

Setting the LCD Contrast

You can change the contrast to help the LCD look lighter or darker.

1 (MFC-8440) Press Menu, 1, 7. (MFC-8840D) Press Menu, 1, 8. -OR-

 
If you have the optional tray #2, press Menu, 1, 9.

2 Press b to increase the contrast.

---OR---

Press C to decrease the contrast. Press Set.

3 Press Stop/Exit.



Initial Setup depending on Your Country

Setting Tone or Pulse dialling mode (Except for the Nordic Countries)

Your machine comes set for Tone dialling service (multi-frequency). If you have Pulse dialling service (rotary), you need to change the dialling mode.

- 1 Press Menu, 0, 4.
- 2 Press or to select Pulse (or Tone).
 Pross Set

Press Set.

04.Tone/Pulse ▲ Tone ▼ Pulse Select ▲▼ & Set

3 Press Stop/Exit.

5 Setup Receive

Basic receiving operations

Choosing the Receive Mode

There are four different Receive Modes for your MFC. You can choose the mode that best suits your needs.

LCD	How it works	When to use it
Fax Only* (automatic receive)	The MFC automatically answers every call as a fax.	For dedicated fax lines.
Fax/Tel (fax and telephone) (with an external or extension telephone)	The MFC controls the line and automatically answers every call. If the call is a fax it will receive the fax. If the call is not a fax it will ring (pseudo/double ring) for you to pick up the call.	Use this mode if you expect to receive lots of fax messages and few telephone calls. You cannot have an answering machine on the same line, even if it is on a separate wall socket/phone socket on the same line. You cannot use the telephone company's Voice Mail in this mode.
External TAD (with an external answering machine)	The external answering machine (TAD) automatically answers every call. Voice messages are stored on the external TAD. Fax messages are printed.	Use this mode if you have an external answering machine on your phone line. The TAD setting works only with an external answering machine. Ring Delay and F/T Ring Time do not work in this setting.
Manual (manual receive) (with an external or extension telephone or with Distinctive Ring)	You control the phone line and must answer every call yourself.	Use this mode when you are using a computer modem on the same line or if you don't receive many fax messages or with Distinctive Ring. If you hear fax tones, wait until the MFC takes over the call, then hang up. (See <i>Fax Detect</i> on page 5-4.)

* In <code>Fax/Tel</code> mode you must set the Ring Delay and F/T Ring Time.

The MP tray is not available with Fax Receive.

To select or change your Receive Mode

 
1 Press Menu, 0, 1.

01.Receive Mode
▲ Fax Only
Fax/Tel
▼ External TAD
Select ▲▼ & Set

Press Set.

3 Press Stop/Exit.

If you are changing the Receive Mode while in another operation, the LCD will return to that operation.



Fax Only Fax/Tel External TAD Manual

Setting the Ring Delay

The Ring Delay sets the number of times the MFC rings before it answers in Fax only or Fax/Tel mode. If you have extension phones on the same line as the MFC or subscribe to the telephone company's Distinctive Ring service, keep the Ring Delay setting of 4.

(See Fax Detect on page 5-4 and Operation from extension telephones on page 5-8.)

- 1 If it is not illuminated in green, press
- 2 Press Menu, 2, 1, 1.
- 3 Press or to select how many times the line rings before the MFC answers.



Press Set.

(If you select 00, the line won't ring at all.)

 
4 Press Stop/Exit.

Setting the F/T Ring Time (Fax/Tel mode only)

If you set the Receive Mode to Fax/Tel, you'll need to decide how long the MFC will signal you with its special pseudo/double-ring when you have a *voice* call. (If it's a fax call, the MFC prints the fax.)

This pseudo/double-ring happens after the initial ringing from the phone company. Only the MFC rings (for 20, 30, 40 or 70 seconds) and no other phones on the same line will ring with the special pseudo/double-ring. However, you can still answer the call on any extension phone (in a separate wall socket/phone socket) on the same line as the MFC. (See *Operation from extension telephones* on page 5-8.)

1 If it is not illuminated in green, press



(Fax). 21.Setup Receive 2.F/T Ring Time ▲ 20

& Set

30

Select

3 Press — or — to select how

long the MFC will ring to alert you that you have a voice call. Press **Set**.

4 Press Stop/Exit.

2

^e Even if the caller hangs up during the pseudo/double-ringing, the MFC will continue to ring for the set time.

Fax Detect

When you use this feature, you don't have to press Start or the Remote Activation Code * 51 when you answer a fax call. Selecting On allows the MFC to receive fax calls automatically, even if you lift the handset of an extension or external phone. When you see Receiving on the LCD or when you hear 'chirps' through the handset of an extension phone connected to another wall socket/phone socket, just replace the handset and your MFC will do the rest. Selecting Off means you'll have to activate the MFC yourself by lifting the handset of an external or extension phone, and then press Start on the MFC-OR-by pressing + 51 if you are not at your MFC. (See Operation from extension telephones on page 5-8.)

If this feature is set to On, but your MFC doesn't connect a fax call when you lift a extension or external phone handset, press the Remote Activation Code + 51.

If you send faxes from a computer on the same phone line and the MFC intercepts them, set Fax Detect to Off.

- If it is not illuminated in green, press 1
- (Fax).

- 2 Press Menu, 2, 1, 3.
- 3 Use or to select On (or Off).

Press Set

4 Press Stop/Exit.



Printing a reduced incoming fax (Auto Reduction)

If you choose On, the MFC automatically reduces an incoming fax to fit on one page of letter, legal or A4 size paper, regardless of the paper size of the document. The MFC calculates the reduction ratio by using the page size of the document and your Paper Size setting (Menu, 1, 3).

- 1 If it is not illuminated in green, press
- **2** Press **Menu**, **2**, **1**, **5**.
- 3 If you have the optional paper tray #2, press or to select Tray #1 or Tray #2.

Press Set.

21.Setup Receive 5.Auto Reduction ▲ On ▼ Off Select ▲▼ & Set

(Fax).

4

4 Use lose or loselect on (or off).

Press Set.

- 5 Press Stop/Exit.
- If you receive faxes that are split onto two pages, turn on this setting.

Reception into memory

As soon as the paper tray becomes empty during fax reception, the screen will display Check Paper; please put some paper in the paper tray. (See Quick Setup Guide.)

If the Memory Receive switch is ON at this time...

The current fax reception will continue, with the remaining pages being stored in memory, if it is available. Subsequent incoming faxes will also be stored into memory until the memory is full, following with no further incoming fax calls will be automatically answered. To print all data, put paper in the paper tray.

If the Memory Receive switch is OFF at this time...

The current fax reception will continue, with the remaining page(s) being stored in memory, subject to available memory. Subsequent incoming fax calls will not be automatically answered until fresh paper is put in the paper tray. To print the last fax received, load paper in the paper tray.

- 1 If it is not illuminated in green, press
- 2 Press Menu, 2, 1, 6.
- 3 Use rot to select on (or off).

Press Set.

4 Press Stop/Exit.



Printing a fax from the memory

If you set Fax Storage to ON for Remote Retrieval, you can still print a fax from the memory when you are at your MFC. (See Setting Fax Storage on page 8-2.)

- 1 Press Menu. 2. 5. 4.
- 2 Press Start
- 3 After printing has finished, press Stop/Exit.


25.Remote 4.Print	Fax Opt Document
Press Star	`F

Setting the Print Density

You can adjust print density, making your printed pages darker or lighter.

- 1 If it is not illuminated in green, press
- 2 Press Menu, 2, 1, 7.
- 3 Press b to make the print darker. -OR-

 Press d to make the print lighter. Press Set.



4B

4 Press Stop/Exit.

Advanced receiving operations

Operation from extension telephones

If you answer a fax call on an extension telephone, or an external telephone into the correct socket on the machine, you can make your MFC take the call by using the Remote Activation Code. When you press the Remote Activation Code ± 51 , the MFC starts to receive a fax.

(See Fax Detect on page 5-4.)

If the MFC answers a voice call and pseudo/double-rings for you to take over, use the Deactivation Code **#51** to take the call at an extension phone. (See *Setting the F/T Ring Time (Fax/Tel mode only)* on page 5-3.)

If you answer a call and no one is on the line, you should assume that you're receiving a manual fax.

- At an extension phone (on a separate telephone wall socket/phone socket), press * 51, wait for fax-receiving tones (chirps), and then hang up.
- At an external phone (connected to the MFC's EXT socket), press + 51 and wait for the phone to be disconnected before you hang up (the LCD shows Receiving).

Your caller will have to press Start to send the fax.

For FAX/TEL mode only

When the MFC is in FAX/TEL mode, it will use the F/T Ring Time (pseudo/double-ringing) to alert you to pick up a voice call.

Lift the external telephone's handset, and then press **Tel/R** to answer.

If you're at an extension phone, you'll need to lift the handset during the F/T Ring Time and then press **#51** between the double rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the MFC by pressing $\times 51$.

Using a cordless external handset

If your cordless telephone is connected to the correct socket on the MFC and you typically carry the cordless handset elsewhere, it is easier to answer calls during the Ring Delay. If you let the MFC answer first, you will have to go to the MFC so you can press **Tel/R** to transfer the call to the cordless handset.

Changing the remote codes

Remote Codes might not work with some telephone systems. The preset Remote Activation Code is ± 51 . The preset Deactivation Code is # 51.

If you are always disconnected when accessing your external TAD remotely, try changing the Remote Activation Code and Deactivation Code to another three-digit code (such as ### and 999).

- 1 If it is not illuminated in green, press
- 2 Press Menu, 2, 1, 4.

Press Set.



(Fax).

- 4 If you want to, enter a new Remote Activation Code. Press **Set**.
- **5** If you want to, enter a new Deactivation Code. Press **Set**.
- 6 Press Stop/Exit.

Polling

Polling is the process of retrieving faxes from another fax machine. You can use your machine to 'poll' other machines, or you can have someone poll your machine.

Everyone who is involved in Polling needs to set up their fax machines for Polling. When someone polls your machine to receive a fax, they pay for the call. If you poll someone's fax machine to receive a fax, you pay for the call.

Some fax machines do not respond to the Polling feature.

Secure Polling

Secure Polling is a way to keep your documents and others from falling into the wrong hands while the machine is set up for polling. You can use Secure Polling only with another Brother fax machine. Anyone who polls to receive a fax must enter the polling secure code.

Setup for Polling Receive (Standard)

Polling Receive is when you call another fax machine to receive a fax from it.

- 1 If it is not illuminated in green, press (Fax).
- 2 Press Menu, 2, 1, 8.
- 3 Press or or to select Standard. Press Set.
- 4 Enter the fax number you are polling. Press Start.

Setup for Polling Receive with Secure Code

You need to make sure you are using the same secure code as the other party.

- 1 If it is not illuminated in green, press (S) (Fax).
- 2 Press Menu, 2, 1, 8.

Press Set.

4 Enter a four-digit secure code.

This is the same as the security code of the fax machine you are polling.

- 5 Press Set.
- 6 Enter the fax number you are polling.
- 7 Press Start.

Setup Delayed Polling Receive

You can set the MFC to begin Polling Receive at a later time.

- 1 If it is not illuminated in green, press
- 2 Press Menu, 2, 1, 8.
- 3 Press 🗢 or 🗢 to select

 
Timer.

Press Set.

- **4** The screen prompts you to enter the time you want to begin polling.
- **5** Enter the time (in 24-hour format) you want to begin polling. For example, enter 21:45 for 9:45 PM.
- 6 Press Set.
- 7 The screen prompts you to enter the fax number you are polling and then to press **Start**.

The MFC makes the polling call at the time you entered.

You can set up only one Delayed Polling.



21.Setup Receive
8.Polling RX
▲ Standard
▼ Secure
Select ▲▼ & Set



(Fax).

S

Sequential Polling

The MFC can request documents from several fax units in a single operation. You just specify several destinations in Step 4. Afterward, a Sequential Polling Report will be printed.

- 1 If it is not illuminated in green, press (IFax).
- 2 Press Menu, 2, 1, 8.
- 3 Press 🗢 or 🗢 to choose Standard, Secure or Timer.

Press Set when the screen displays the setting you want.

- 4 If you selected Standard, go to Step 5.
 - If you selected Secure, enter a four-digit number and press Set, and then go to Step 5.
 - If you selected Timer, enter the time (in 24-hour format) you want to begin polling and press **Set**, and then go to Step 5.
- 5 Specify the destination fax machines (up to 390), which you wish to poll by using Speed-Dial, Search, a Group (see Setting up Groups for Broadcasting on page 7-5) or the dial pad. You must press Set between each location.

6 Press Start.

The MFC polls each number or group in turn for a document.

Press **Stop/Exit** while the MFC is dialling to cancel the polling process.

To cancel all sequential polling receive jobs, press **Menu**, **2**, **6**. (See *Cancelling a scheduled job* on page 6-13.)

Setting Duplex printing for Fax mode (For MFC-8840D)

If you set Duplex to ${\tt On}$ for fax receive, the MFC prints received faxes on both sides of the paper.

You can use three sizes of paper for this function - letter, legal and A4.

- 1 If it is not illuminated in green, press \square
- **2** Press **Menu**, **2**, **1**, **9**.
- **3** Press or to select On (or Off).

21.	Seti	лр К	lec	eıve	
9	.Dup	plex	:		
	(Dn			
•		Dff			
Sel	ect		δc	Set	

(Fax).

- Press Set.
- 4 Press Stop/Exit.

While the Duplex printing for fax is working, auto reduction is also on temporarily.

Telephone services

BT Call Sign (For U.K. Only)

This machine feature lets you use the BT Call Sign subscriber service which allows you to have at least two separate telephone numbers on one phone line. Each phone number has its own distinctive ringing pattern, so you know which phone number is ringing. This is one way you can have a separate phone number for your machine.

Your machine has a BT Call Sign compatible distinctive ringing function, allowing you to dedicate a second phone number (on the same phone line) just for receiving faxes.

You can switch it off temporarily, then turn it back on. When you get a new fax number, make sure you reset this function.



When you set the BT Call Sign feature to ON, the receive mode is set to Manual automatically. Manual mode will never pick up a call by itself since it is <<Neutral>>. You can not change the receive mode to the other mode while the BT Call Sign is set to on.

To enable the machine to work with BT Call Sign (Only with your external phone)

1 Press **Menu**, **2**, **0**, **4**.

The screen displays the current setting of this feature.


- 2 Press 🗪 or 🕶 to select On (or Off).
- 3 Press Set.
- 4 Press Stop/Exit.
- If you turn off the BT Call Sign, receive mode stays Manual. You need to set receive mode again.



How to Fax

You can send faxes from the ADF (Automatic Document Feeder) or from the scanner glass.

Enter Fax mode

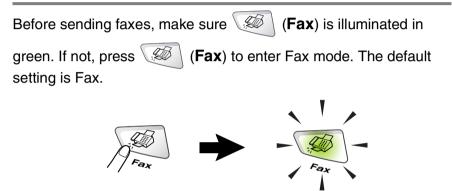

Faxing from the automatic document feeder (ADF)

The ADF can hold up to 50 pages and feeds each sheet individually. Use standard (75 g/m²) paper and always fan the pages before putting them in the ADF.

DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, pasted or taped.

DO NOT use cardboard, newspaper or fabric. (To fax this kind of document, see *Faxing from the scanner glass* on page 6-3.)

Make sure documents written with ink are completely dry.

The documents to be faxed must be from 148 to 216 mm wide and 148 to 356 mm long.

Faxing from the ADF


1 If it is not illuminated in

green, press

(**Fax**). Pull out the ADF Document Support Extension.

2 Unfold the ADF Document Output Support Flap. ADF Document Support Extension ADF Document Output Support Flap

- **3** Fan the pages well and stagger them at an angle. Make sure you put the documents **face up**, **top edge first** in the ADF until you feel them touch the feed roller.
- **4** Adjust the paper guides to fit the width of your documents.

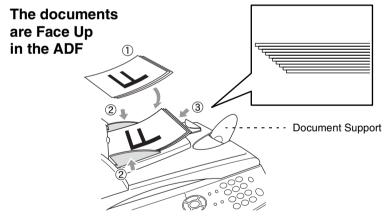


5 Dial the fax number. Press **Start**. The MFC starts scanning the first page.

Faxing from the scanner glass

You can use the scanner glass to fax pages of a book or one page at a time. The documents can be up to letter, A4 or legal size (216 mm to 356 mm). To cancel, press **Stop/Exit**.

1 If it is not illuminated in green, press (Fax). Lift the document cover.

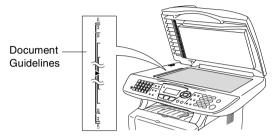

The documents are Face Down on the Scanner Glass

- **2** Using the document guidelines on the left, center the document face down on the scanner glass.
- 3 Close the document cover.
 - If the document is a book or is thick, do not slam the cover or press on it.
- **4** Dial the fax number.

Press Start.

The MFC starts scanning the first page.

5 To send a single page, press **2** (or press **Start** again). The MFC starts sending the document.

-OR-

To send more than one page, press **1** and go to Step 6.

6 Place the next page on the scanner glass.

Press Set.

The MFC starts scanning. (Repeat Steps 5 and 6 for each additional page.)

Flatbed Fax: Next Page?	
Next Page?	
▼ 1.Yes	
▲ 2.No(Send)	
Select ▲▼ & Set	

Flatbed Fax:	
Set Next Page	
Then Press Set	

- If the memory is full and you are faxing a single page, it will be sent in real time.
 - If you need to cancel before the fax is sent, press Stop/Exit.

Faxing legal size documents from the scanner glass

When documents are legal size, you need to set the size to Legal. If you do not, the bottom portion of the faxes will be missing.

1 If it is not illuminated in green, press

(**Fax**).

- **2** Press **Menu**, **2**, **2**, **0**.
- 4 Press Stop/Exit.

Out of Memory message

If you get an Out of Memory message while scanning the first page of a fax, press **Stop/Exit** to cancel the scan. If you get an Out of Memory message while scanning a subsequent page, you will have the option to press **Start** to send the pages scanned so far, or to press **Stop/Exit** to cancel the operation.

Manual transmission

Manual transmission lets you hear the dialling, ringing and fax-receiving tones while sending a fax.

- 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
- **2** Pick up the handset of the external phone and listen for a dial tone.
- **3** On the external phone, dial the fax number you want to call.
- 4 When you hear the fax tone, press Start.

If you are using the ADF, go to Step 6. If you are using the scanner glass, go to Step 5.



- **5** Press **1** to send a fax.
- 6 Replace the handset of the external phone.

This is the easiest way to send a fax.

- 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
- 2 Enter the fax number using the dial pad, One-Touch, Speed-Dial or Search.
 (See One-Touch Dialling on page 7-7 and Speed-Dialling on page 7-8.)
- 3 Press Start.
- 4 If you are using the scanner glass, press 2 or Start.

Sending a fax at the end of a conversation

At the end of a conversation you can send a fax to the other party before you both hang up.

- **1** Ask the other party to wait for fax tones (beeps) and then to press **Start** before hanging up.
- 2 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.

Press Start.

The LCD shows:

- **3** Press **1** to send the fax.
- **4** Replace the external handset.

Send or Receive?	
▲ 1.Send	
▼ 2.Receive	
Select ▲▼ & Set	

Basic sending operations

Sending faxes using multiple settings

When you send a fax you can choose any combination of these settings: cover page, contrast, resolution, overseas mode, delayed fax timer, polling transmission or real time transmission. If it is not

illuminated in green, press (Fax) before pressing Menu.

After each setting is accepted, the LCD will ask if you want to enter more settings:

Press 1 to select more settings. The LCD will return to the Setup Send menu.

__OR__

Press **2** if you have finished choosing settings and go to the next step.

22.Setup Send
Next?
▲ 1.Yes
▼ 2.No
Select ▲▼ & Set

Contrast

If your document is very light or very dark, you may want to set the contrast.

Use Light to make the fax darker.

Use Dark to make the fax lighter.

- 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
- **2** Press **Menu**, **2**, **2**, **1**.



4 Press **1** if you want to choose more settings and the LCD will return to the Setup Send menu.

```
-OR-
```

Press **2** if you have finished choosing settings for this page, and then go to Step 5.

- **5** Enter a fax number.
- 6 Press Start to send the fax from the ADF.

The MFC starts scanning the first page.

If you are using the scanner glass, go to Step 7.

7 To send a single page, press 2 (or press Start again).The MFC starts sending the document.

-OR-

To send more than one page, press **1** and go to Step 8.

8 Place the next page on the scanner glass.

Press Set.

The MFC starts scanning and returns to Step 7. (Repeat Step 7 and 8 for each additional page).

Fax Resolution

When you have a document in the ADF or on the scanner glass you can use the **Resolution** key to change the setting temporarily (for

this fax only). If it is not illuminated in green, press (Fax).

Press **Resolution** repeatedly until the LCD shows the setting you want.

-OR-

You can change the default setting.

- 1 If it is not illuminated in green, press
- 2 Press Menu, 2, 2, 2.
- 3 Press or to select the resolution you want.
 Press Set.
- 4 Press Stop/Exit.



2.Fax Resolution ▲ Standard ▼ Fine Select ▲▼ & Set

- Standard: Suitable for most typed documents.
- Fine: Good for small print and transmits a little slower than Standard resolution.
- S.Fine: Good for small print or artwork and transmits slower than Fine resolution.
- Photo: Use when the document has varying shades of gray. This has the slowest transmission time.

Manual and automatic fax Redial

If you are sending a fax manually and the line is busy, press **Redial/Pause**, and then press **Start** to try again. If you want to make a second call to the last number dialled, you can save time by pressing **Redial/Pause** and **Start**.

Redial/Pause only works if you dialled from the control panel. If you are sending a fax automatically and the line is busy, the MFC will automatically redial up to three times at five minutes intervals.

Dual Access

You can dial a number, and begin scanning the fax into memory even when the MFC is receiving, sending or printing a fax from memory. The LCD shows the new job number.

- If you get a Out of Memory message while scanning the first page of a fax, press **Stop/Exit** to cancel scanning. If you get a Out of Memory message while scanning a subsequent page, you can press **Start** to send the pages scanned so far, or press **Stop/Exit** to cancel the operation.
- 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
- 2 Enter the fax number.
- *3* Press **Start** to send the fax.

The MFC starts scanning the first page and the LCD shows the job number (#XXX) of the fax. You can repeat Steps 1 to 3 for the next fax.

----OR----

If you are using the scanner glass, go to Step 4.

```
4 To send a single page,
press 2 (or press Start again).
The MFC starts sending the
```

document.

—OR—

To send more than one page, press **1** and go to Step 5.

5 Place the next page on the scanner glass.Press **Set**.

The MFC starts scanning, and then returns to Step 4. (Repeat Steps 4 and 5 for each additional page). To send the next fax, go to Step 1.



Flatbed Fax:	
Set Next Page	
Then Press Set	

Real Time Transmission

When you are sending a fax, the MFC will scan the documents into the memory before sending. Then, as soon as the phone line is free, the MFC will start dialling and sending.

If the memory becomes full, the MFC will send the document in real time (even if Real Time TX is set to Off).

Sometimes, you may want to send an important document immediately, without waiting for memory transmission. You can set Real Time TX to On for all documents or for the next fax only.

If you want to fax multiple pages, use ADF.

- 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
- **2** Press **Menu**, **2**, **2**, **5**.
- **3** To change the default setting, press or to select On (or Off).

22.Setup Send 5.Real Time TX ▲ Next Fax Only	
▼ On	
Select ▲▼ & Set	

Press Set.

Go to Step 5.

-OR-

Press Set.

Fax:011).

Press Set.

5 Press **1** if you want to choose more settings and the LCD will return to the Setup Send menu.

—OR—

Press **2** if you have finished choosing settings for this page, and then go to Step 6.

- 6 Enter the fax number.
- 7 Press **Start** to send the fax.

In Real Time Transmission using the scanner glass, the auto redial function doesn't work.

Checking job status

Check which jobs are still waiting in the memory to be sent. (If there are no jobs, the LCD shows No Jobs Waiting.)

- 1 Press Menu, 2, 6.
- 3 Press Stop/Exit.

		aining	
	#001	12:34	BROTHER
	#002	15:00	BIC
▼	#003	17:30	ABCDEFG
Se	elect	▲▼ &	Set

Cancelling a job while scanning the document

You can cancel a job while you are scanning it into memory by pressing **Stop/Exit**.

Cancelling a scheduled job

You can cancel a fax job that is stored and waiting in memory.

1 Press **Menu**, **2**, **6**.

Any jobs that are waiting will appear on the LCD.

If you have more than two jobs waiting, press or to select the job you want to cancel.
 Press Set.

26.Rema		
▲ #001	12:34	BROTHER
#002	15:00	BIC
▼ #003	17:30	ABCDEFG
Select	▲▼ &	Set

-OR-

If you only have one job waiting, go to Step 3.

3 Press **1** to cancel.

-OR-

Press 2 to exit without cancelling.

To cancel another job go to Step 2.

4 Press Stop/Exit.

Advanced sending operations

Composing the electronic Cover Page

The Cover Page is created at the receiving machine. Your Cover Page includes the name stored in the One-Touch or Speed-Dial memory. If you're dialling manually, the name is left blank.

The Cover Page shows your Station ID and the number of pages you're sending. (See *Setting the Station ID* on page 4-2.) If you have Cover Page set to ON (**Menu**, **2**, **2**, **7**), the number of pages is left blank.

You can select a comment to include on your Cover Page.

- 1.Comment Off
- 2.Please Call
- 3.Urgent
- 4.Confidential

Instead of using one of the preset comments, you can enter two personal messages of your own, up to 27 characters long. Use the chart on page 4-3 for help entering characters.

(See Composing your own comments on page 6-15.)

```
5.(User Defined)
```

6.(User Defined)

Most of the Setup Send settings are temporary to allow you to make changes for each fax you send.

However, when you set up your Cover Page and Cover Page Comments, you are changing the default settings so they will be available while faxing.

Composing your own comments

You can set up two comments of your own.

- 1 If it is not illuminated in green, press
- **2** Press **Menu**, **2**, **2**, **8**.
- Press or to choose 5 or
 6 for your own comment.
 Press Set.



▲▼ & Set

5.

6.

Select

4 Use the dial pad to enter your customized comment.

Press Set.

(See Entering text on page 4-3.)

5 Press **1** if you want to choose more settings and the LCD will return to the Setup Send menu.

__OR__

Press 2 to exit.

Cover page for the next fax only

This feature does not work without the Station ID. So make sure it has been set. (See *Setting the Station ID* on page 4-2.) If you only want to send a Cover Page with a particular fax, this Cover Page will include the number of pages in your document.

1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner

glass.

- **2** Press **Menu**, **2**, **2**, **7**.
- When LCD shows Next Fax Only.
 Press Set.

22.Setup Send 7.Coverpg Setup ▲ Next Fax Only ▼ On Select ▲▼ & Set

4 Press or to select Next Fax:On (or Next Fax:Off).

Press Set.

5 Press or to select one of the standard or your own comments.

Press Set.

6 Enter two digits to show the number of pages you are sending. Press **Set**.

(For example, press **0**, **2** for 2 pages or enter **0 0** to leave the number of pages blank. If you make a mistake, press to back up and re-enter the number of pages.)

7 Press 1 if you want to choose more settings and the LCD will return to the Setup Send menu.

```
__OR__
```

Press 2 if you have finished choosing settings.

- 8 Enter the fax number you're calling.
- 9 Press Start.

Send a cover page for all faxes

This feature does not work without the Station ID. Please be sure it has been set before continuing. (See *Setting the Station ID* on page 4-2.)

You can set the MFC to send a cover page whenever you send a fax. The number of pages in your fax is not included when you use this setting.

- 1 If it is not illuminated in green, press
- **2** Press **Menu**, **2**, **2**, **7**.
- 3 Press or to select on.Press Set.



(**Fax**).

- 4 If you selected On, Press or Select ▲▼ & Set
 ✓ to select one of the standard or your own comments.
 Press Set.
- **5** Press **1** if you want to choose more settings and the LCD will return to the Setup Send menu.

-OR-

Press **2** to exit if you have finished choosing settings.

Using a printed cover page

If you prefer to use a printed cover page that you can write on, you can print the sample page and attach it to your fax.

- 1 If it is not illuminated in green, press
- **2** Press **Menu**, **2**, **2**, **7**.

Press Set.

- **4** Press **Start**. Your MFC prints a copy of your cover page.
- **5** Press **Stop/Exit**.

Broadcasting



(Fax).

Broadcasting is when the same fax message is automatically sent to more than one fax number. Using the **Set** key, you can include Groups, One-Touch, Speed-Dial numbers and up to 50 manually dialled numbers. If you did not use up any of the numbers for Groups, access codes or credit card numbers, you can 'broadcast' faxes to as many as 390 different numbers. However, the available memory will vary depending on the types of jobs in the memory and the number of locations used for broadcasting. If you broadcast to the maximum numbers available, you will not be able to use Dual Access and Delayed fax.

To include One-Touch or Speed-Dial numbers and manually dialled numbers in the same broadcast, you must press **Set** between each of the numbers. Use **Search/Speed Dial** to help you choose the numbers easily.

(See Setting up Groups for Broadcasting on page 7-5.)

After the broadcast is finished, a Broadcast Report will be printed to let you know the results.

Enter the long dialling sequence numbers as you would normally, but remember that each One-Touch and Speed-Dial number counts as one number, so the number of locations you can store becomes limited.

- If the memory is full, press Stop/Exit to stop the job or if more than one page has been scanned, press Start to send the portion that is in the memory.
 - 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
 - Enter a number using One-Touch, Speed-Dial, a Group number, Search or manual dialling using the dial pad.
 (Example: Group number)
 - *3* When the LCD displays the fax number of the other party, press **Set**.

You will be asked to press the next number.

- 4 Enter the next number.(Example: Speed-Dial number)
- **5** When the LCD displays the fax number of the other party, press **Set**.
- 6 Enter another fax number.

(Example: Manual dialling using the dial pad.)

7 Press Start.

If you are using the scanner glass, go to Step 8.

8 To send a single page, press 2 (or press Start again).The MFC starts sending the fax.

-OR-

To send more than one page, press **1** and go to Step 9.

9 Place the next page on the scanner glass.

Press Set.

The MFC starts scanning and returns to Step 8. (Repeat Step 8 and 9 for each additional page.)

Overseas Mode

If you are having difficulty sending a fax overseas due to possible interference on the phone line, we recommend that you turn on the Overseas Mode. After you send a fax using this feature, the feature will turn itself off.

- 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
- **2** Press **Menu**, **2**, **2**, **9**.
- **3** Press or to select On (or Off).



Press Set.

4 Press 1 if you want to choose more settings and the LCD will return to the Setup Send menu.

-OR-

Press **2** if you have finished choosing settings, and then go to Step 5.

- **5** Enter the fax number you're calling.
- 6 Press Start.

If you are using the scanner glass, go to Step 7.

7 To send a single page, press 2 (or press **Start** again). The MFC starts sending the fax.

-OR-

To send more than one page, press 1 and go to Step 8.

8 Place the next page on the scanner glass.

Press Set.

The MFC starts scanning and returns to Step 7. (Repeat Steps 7 and 8 for each additional page.)

Delayed Fax

During the day you can store up to 50 faxes in the memory to be sent within 24 hours. These faxes will be sent at the time of day you enter in Step 3. Press **Set** to accept it, or enter another time for the faxes to be sent.

- 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
- **2** Press **Menu**, **2**, **2**, **3**.
- 3 Enter the time you want the fax to be sent (in 24-hour format).
 Press Set.

22.Setup Send 3.Delayed Fax Set Time=00:00 Enter & Set Key

(For example, enter 19:45 for 7:45 PM.)

4 Press **1** if you want to choose more settings and the LCD will return to the Setup Send menu.

__OR__

Press **2** if you have finished choosing settings, and then go to Step 5.

- **5** Enter the fax number.
- 6 Press Start.

If you are using the scanner glass, go to Step 7.

7 To send a single page, press 2 (or press **Start** again). The MFC starts scanning the document.

-OR-

To send more than one page, press **1** and go to Step 8.

8 Place the next page on the scanner glass.

Press Set.

The MFC starts scanning and returns to Step 7. (Repeat Step 7 and 8 for each additional page.)



The number of pages you can scan into the memory depends on the amount of data that is printed on each page.

Delayed Batch Transmission

Before sending the delayed faxes, your MFC will help you economize by sorting all the faxes in the memory by destination and scheduled time. All delayed faxes that are scheduled to be sent at the same time to the same fax number will be sent as one fax to save transmission time.

- 1 If it is not illuminated in green, press (Fax).
- **2** Press **Menu**, **2**, **2**, **4**.
- 3 Press or to select On (or Off).

Press Set.

22.Setup Send
4.Batch TX
▲ On
▼ Off
Select ▲▼ & Set

4 Press Stop/Exit.

Setup for Polled Transmit (Standard)

Polled Transmit is when you set up the machine to wait with a document so another fax machine can retrieve it.

- 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
- **2** Press **Menu**, **2**, **2**, **6**.
- 4 Press 1 if you want to select additional settings. The display returns to the Setup Send menu.

-OR-

Press 2 if you finished selecting settings, and go to Step 5.

5 Press **Start**.

The MFC starts scanning the document.

6 If you placed the document in the ADF, wait for the fax to be polled.

-OR-

If you placed it on the scanner glass, go to Step 7.

7 To send a single page, press 2 (or press Start again), wait for the fax to be polled.

—OR—

To send more than one page, press **1** and go to Step 8.

8 Place next page on the scanner glass.

Press Set.

The MFC starts scanning and returns to Step 7. (Repeat Step 7 and 8 for each additional page.)

The document will be stored and can be retrieved from any other fax machine until you delete the fax in memory by using the Cancelling a Job function. (See *Cancelling a scheduled job* on page 6-13.)

Setup for Polled Transmit with Secure Code

When you choose Secure, anyone who polls the machine must enter the polling secure code.

- 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
- 2 Press Menu, 2, 2, 6.
- **3** Press or \checkmark to select Secure.

Press Set.

- 4 Enter a four-digit number. Press **Set**.
- **5** Press **1** if you want to select additional settings. The display returns to the Setup Send menu.

-OR-

Press 2 if you finished selecting settings, and go to Step 6.

6 Press Start.

The MFC starts scanning the document.

7 If you placed the document in the ADF, wait for the fax to be polled.

__OR__

If you placed it on the scanner glass, go to Step 8.

8 To send a single page, press 2 (or press Start again), wait for the fax to be polled.

-OR-

To send more than one page, press **1** and go to Step 9.

9 Place next page on the scanner glass.

Press Set.

The MFC starts scanning and returns to Step 8. (Repeat Step 8 and 9 for each additional page.)



You can use Secure Polling only with another Brother fax machine.

Memory Security

Memory Security lets you prevent unauthorized access to the MFC. You will not be able to continue to schedule Delayed Faxes or Polling jobs. However, any pre-scheduled Delayed Faxes will be sent when you turn Memory Security On, so they won't be lost.

If Fax Storage is On before you turn Memory Security On, then Fax Forwarding and Remote Retrieval will continue to work.

While Memory Security is On the following operations are available:

- Receiving faxes into memory (limited by memory capacity)
- Fax Forwarding (If Fax Storage was already On)
- Remote Retrieval

While Memory Security is On the following operations are NOT available:

- Sending faxes
- Printing received faxes
- Сору
- PC printing
- PC scanning

To print the faxes in memory, turn Memory Security Off.

Setting up the password

JI you forget the Memory Security password, please call your Brother dealer for service.

- **1** Press **Menu**, **2**, **0**, **1**.
- 2 Enter a 4-digit number for the password.

Press Set.

20.Miscellaneous 1.Mem Security New Passwd:xxxx Enter & Set Kev

If you are entering the password for the first time, the LCD shows Verify:.

3 Re-enter the password. Press Set

Turning Memory Security on

- 1 Press Menu. 2. 0. 1.
- 2 Press 🗪 or 🕶 to select Set Security.



Press Set

3 Enter the registered 4-digit password.

Press Set.

The MFC goes offline and the LCD shows Secure Mode.

⁹ If there is a power failure, the data in the memory will remain for up to 4 days.

Turning Memory Security off

1 Press Menu

Enter the registered 4-digit password and press Set.

2 Memory Security is automatically turned off and the LCD shows the Date and Time.



M/ If you enter the wrong Password, the LCD shows Wrong Password and stays offline. The MFC will stay in Secure Mode until the registered password is entered.

7 Auto Dial numbers and dialling options

Storing numbers for easy dialling

You can set up your MFC to do three types of easy dialling: One-Touch, Speed-Dial and Groups for Broadcasting faxes.

If you lose electrical power, the auto dial numbers that are in the memory will not be lost.

Storing One-Touch Dial numbers

Your MFC has 20 One-Touch keys where you can store 40 fax or phone numbers for automatic dialling. To access numbers 21 to 40, hold down **Shift** as you press the One-Touch key. When you press a One-Touch key the LCD



shows the name, if you stored it, or the number. (See One-Touch Dialling on page 7-7.)

One-Touch keys are the 20 keys (numbers 01–40) located on the left side of the control panel.

- **1** Press **Menu**, **2**, **3**, **1**.
- **2** Press the One-Touch key where you want to store a number.

If you have not installed the optional LAN board (NC-9100h), go to Step 4.

23.Set Quick-Dial 1.One-Touch Dial One-Touch: Select One-Touch

-OR-

If you have installed optional LAN board (NC-9100h), the MFC will ask you if the One-Touch key is for a fax/telephone number or an e-mail address. Go to Step 3.

3 Press or to select Fax/Tel. Press Set.

23.Set Quick-Dial *007
▲ Fax/Tel
▼ E-Address
Select ▲▼ & Set

4 Enter a number (up to 20 digits).

Press Set.

- If you want to enter a pause in the dialling sequence (for example, to access an outside line), press Redial/Pause as you are entering the digits. Each key press of Redial/Pause enters a 3.5 second pause when the number is dialled, and a dash appears on the screen.
- **5** Use the dial pad to enter the name (up to 15 characters). Press **Set**.

(You can use the chart on page 4-3 to help you enter letters.) —**OR**—

Press **Set** to store the number without a name.

6 Go to Step 2 to store another One-Touch number.

----OR----

Press Stop/Exit.

When you dial an auto dial number, the LCD shows the name and number you've stored, or, if you haven't stored a name, only the number you've stored.

Storing Speed-Dial numbers

You can store Speed-Dial numbers, so that when you dial you will only have to press a few keys (**Search/Speed Dial**, **#**, the three-digit number, and **Start**). The MFC can store 300 Speed-Dial numbers.

1 Press **Menu**, **2**, **3**, **2**.

2 Use the dial pad to enter a three-digit Speed-Dial number (001-300).

23.Set Quick-Dial 2.Speed-Dial Speed-Dial? # Enter & Set Key

(For example, press **005**.) Press **Set**

If you have not installed the optional LAN board (NC-9100h), go to Step 4.

-OR-

If you have installed optional LAN board (NC-9100h), the MFC will ask you if have the Speed-Dial is for a fax/telephone number or an e-mail address. Go to Step 3.

3 Press or to select Fax/Tel. Press Set.

23.Set	Quick-Dial
#100	
▲ Fa	ax/Tel
	-Address
Select	▲▼ & Set

- Enter the phone or fax number (up to 20 digits).
 Press Set.
- **5** Use the dial pad to enter the name (up to 15 characters). Press **Set**.

(You can use the chart on page 4-3 to help you enter letters.) — **OR**—

Press Set to store the number without a name.

6 Go to Step 2 to store another Speed-Dial number.

```
-OR-
```

Press Stop/Exit.

Changing One-Touch and Speed-Dial numbers

If you try to store a One-Touch or Speed-Dial number where a number has already been stored, the LCD will show the name that has been stored there (or number) and will ask you to do one of the following:

1 Press **1** to change the stored number.

—OR—

Press **2** to exit without making a change.

23.Set Quick-Dial *005:MIKE ▲ 1.Change ▼ 2.Exit Select ▲▼ & Set

2 Enter a new number.

Press Set.

To erase the whole number or whole name, press Clear/Back repeatedly until all digits or letters are deleted.

To erase one digit or letter, use or b to position the cursor under it, and then press **Clear/Back**.

- If you want to insert characters, use or to position the cursor where you want to insert them, and then type.
- **3** Follow the directions beginning at Step 4 in Storing One-Touch Dial numbers and Storing Speed-Dial numbers. (See *Storing One-Touch Dial numbers* on page 7-1 and *Storing Speed-Dial numbers* on page 7-3.)

Setting up Groups for Broadcasting

Groups, which can be stored on a One-Touch key or a Speed-Dial location, allow you to send the same fax message to many fax numbers by pressing only a One-Touch key and **Start** or **Search/Speed Dial**, **#**, the three-digit location and **Start**.

First, you'll need to store each fax number as a One-Touch or Speed-Dial number. Then, you can combine them into a Group, Each Group uses up a One-Touch key or a Speed-Dial location. Finally, you can have up to six small Groups, or you can assign up to 339 numbers to one large Group.

(See *Storing Speed-Dial numbers* on page 7-3 and *Changing One-Touch and Speed-Dial numbers* on page 7-4.)

- **1** Press **Menu**, **2**, **3**, **3**.
- **2** Decide where you wish to store the Group.

Pr

23.Set Quick-Dial 3.Setup Groups Group Dial: Press Speed Dial ...

-AND-

Press a One-Touch key.

-OR-

Press **Search/Speed Dial** and enter the three-digit location, and then press **Set**.

(For example, press One-Touch key 2 for Group 1.)

3 Use the dial pad to enter the Group number.

Press Set.

(For example, press **1** for Group 1.)

23.Set *002	Quick-Dial	
Grou	p#:0	
Enter 1	No. & Set	

4 To include One-Touch or Speed-Dial numbers in the Group, enter them as if you were dialling.

For example, for One-Touch key **05**, press One-Touch key **05**. For Speed-Dial location 009, press **Search/Speed Dial**, then press **009** on the dial pad. The LCD shows $\times 005, \#009$.

- **5** Press **Set** to accept the numbers for this Group.
- **6** Use the dial pad and the chart on page 4-3 to enter a name for the Group.

Press Set.

(For example, NEW CLIENTS)

- 7 Press Stop/Exit.
- You can print a list of all One-Touch and Speed-Dial numbers. (See *Printing reports* on page 9-3.) Group numbers will be marked in the column of "GROUP".

Dialling options

When you dial using an auto dial number, the LCD shows the name and fax number you've stored.

Search

You can search for names you have stored in the One-Touch and Speed-Dial memory.

(See *Storing One-Touch Dial numbers* on page 7-1 and *Storing Speed-Dial numbers* on page 7-3.)

- 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
- 2 Press Search/Speed Dial.
- 3 Press or 2.

-OR-

Press 🗪 or 🤝.

To search for numbers numerically, press 🖛 or 🐲.

4 When the LCD shows the name you want to call, Press Start.

One-Touch Dialling

- 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
- **2** Press the One-Touch key of the location you want to call.
- **3** Press Start.

- 1 If it is not illuminated in green, press (Fax). Place the document face up in the ADF, or face down on the scanner glass.
- **2** Press **Search/Speed Dial**, #, and then the three-digit Speed-Dial number. (See *Storing Speed-Dial numbers* on page 7-3.)
- **3** Press Start.
- If you try to use a One-Touch or Speed-Dial location with no number stored in it, you hear a warning sound, and LCD shows Not Registered. The LCD returns to normal after 2 seconds.

Manual dialling

Manual dialing means pressing all of the digits of the phone number.

Using an external telephone

The easiest way to use your external telephone is to pick up the handset and dial the number on the external telephone as you normally would.

- **1** Pick up the handset of the external telephone.
- **2** Dial the number on the external telephone.
- *3* To hang up, replace the handset.

Access codes and credit card numbers

Sometimes you may want to choose from several long distance carriers when you make a call. Rates may vary depending on the time and destination. To take advantage of low rates, you can store the access codes or long-distance carriers and credit card numbers as One-Touch and Speed-Dial numbers. You can store these long dialling sequences by dividing them and setting them up on separate keys in any combination. You can even include manual dialling using the dial pad.

The combined number will be dialled in the order that you entered it as soon as you press **Start**.

(See Storing One-Touch Dial numbers on page 7-1.)

For example, you can store '555' on One-Touch key 03 and '7000' on One-Touch key 02. If you press One-Touch key **03**, One-Touch key **02**, and **Start**, you will dial '555-7000'.

To temporarily change a number, you can substitute part of the number with manual dialling using the dial pad.

For example, to change the number to 555-7001 you could press One-Touch key **03** and then press **7001** using the dialling pad.

If you must wait for another dial tone or signal at any point in the dialling sequence, store a pause there in the number by pressing **Redial/Pause**. Each key press adds a 3.5-second delay.

Pause

Press **Redial/Pause** to insert a 3.5-second pause between numbers. If you are dialling overseas, you can press **Redial/Pause** as many times as needed to increase the length of the pause.

Tone or Pulse

If you have a Pulse dialling service, but need to send Tone signals (for example, for telephone banking), follow the instructions below. If you have Touch Tone service, you will not need this feature to send tone signals.

- 1 Lift the handset of an external phone.
- **2** Press **#** on the control panel of your MFC. Any digits dialled after this will send tone signals.
- *3* When you hang up, the MFC will return to the Pulse dialling service.

8 Remote Fax Options

Fax Forwarding

After you have selected Fax Forwarding, Fax Storage is set to On automatically.

Programming a Fax Forwarding number

When Fax Forwarding is set to On, your MFC stores the received fax in the memory. Then it dials the fax number you've programmed and forwards the fax message.

- **1** Press **Menu**, **2**, **5**, **1**.
- 2 Press or to select on (or Off).

25.Remote Fax Opt 1.Fax Forward ▲ On ♥ Off Select ▲♥ & Set

Press Set.

The LCD will ask you to enter the fax number to which faxes will be forwarded.

- *3* Enter the forwarding number (up to 20 digits). Press **Set**.
- 4 Press Stop/Exit.

Setting Fax Storage

If you set Fax Storage to ON, you will be able to retrieve fax messages from another location using Fax Forwarding, Remote Retrieval operations. The LCD will show when you have a fax stored in memory.

1 Press **Menu**, **2**, **5**, **2**.

The LCD will ask you to choose a fax setting.

2 Press or to select On (or Off).



Press Set.

3 Press Stop/Exit.

If there are faxes in the memory when you turn Fax Storage OFF, the LCD will ask if you want to erase the faxes in the memory.

If you press 1, all fax data is erased and Fax Storage is turned off.

If you press **2**, faxes are not erased and Fax Storage stays on. (See *Polling* on page 5-10.)

- After you have selected Fax Forwarding feature, Fax Storage is set to On automatically. If you bring Fax Forwarding feature back to Off, Fax Storage stays on.
 - If there is a power failure, you will not lost the data in memory up to 4 days.

Setting your Remote Access Code

The remote access code lets you access the Remote Retrieval features when you are away from your MFC. Before you use the remote access and retrieval features, you have to set up your own code. The default code is inactive code (--- \star).

- **1** Press **Menu**, **2**, **5**, **3**.
- 2 Enter a three-digit code using numbers 0-9, * or #.

25.Remote Fax Opt 3.Remote Access Access Code:---* Enter & Set Key

Press **Set**. (The preset ' ***** ' cannot be changed.)

- Do not use the same digits that appear in your Remote Activation Code (***51**) or Deactivation Code (**#51**). (See *Operation from extension telephones* on page 5-8.)
- 3 Press Stop/Exit.
- You can change your code at any time by entering a new one. If you want to make your code inactive, press **Clear/Back** in Step 2 to restore the inactive setting (--- *).

Remote retrieval

You can call your MFC from any telephone or fax machine using touch tone, then use the Remote Access Code and remote commands to retrieve fax messages. Be sure to cut out the Remote Retrieval Access Card on the last page and keep it with you at all times.

Using your Remote Access Code

- **1** Dial your fax number from a telephone or another fax machine using touch tone.
- 2 When your MFC answers, immediately enter your Remote Access Code (3 digits followed by *).
- **3** The MFC signals if it has received fax messages:

1 long beep — Fax messages No beeps — No fax messages

- **4** The MFC gives two short beeps, which tells you to enter a command. The MFC will hang up if you wait longer than 30 seconds to enter a command. The MFC will beep three times, if you enter an invalid command.
- **5** Press **90** to reset the MFC when you've finished.
- 6 Hang up.

Remote commands

Follow the commands below to access features when you are away from the MFC. When you call the MFC and enter your Remote Access Code (3 digits followed by \star), the system will give two short beeps and you must enter a remote command.

Ren	note commands	Operation details	
95	Change the Fax Forwarding settings	1	
	1 OFF	If you hear one long beep, the change has	
	2 Fax Forwarding	been accepted. If you hear three short beeps, you cannot change it because the conditions	
	4 Fax Forwarding number	have not been met. You can register your Fax Forwarding number by entering 4. (See <i>Changing your Fax Forwarding number</i> on page 8-6). Once you have registered the number, Fax Forwarding will be set to On.	
	6 Fax Storage ON	You can turn Fax Storage to On (or Off after you have retrieved or erased all your messages).	
	7 Fax Storage OFF		
96	Retrieve a fax		
	2 Retrieve all faxes	Enter the number of a remote fax machine to receive stored fax messages. (See <i>Retrieving fax messages</i> on page 8-6.)	
	3 Erase faxes from the memory	If you hear one long beep, you can erase fax messages from the memory.	
97	Check the receiving status		
	1 Fax	You can check whether your MFC has received any faxes. If it has, you will hear one long beep. If it hasn't, you will hear three short beeps.	
98	Change the Receive Mode		
	1 External TAD	If you hear one long beep, you can change	
	2 Fax/Tel	the Receive Mode.	
	3 Fax Only		
90	Exit	After a long beep, you can exit Remote Retrieval.	

Retrieving fax messages

- 1 Dial vour fax number.
- 2 When your MFC answers, immediately enter your Remote Access Code (3 digits followed by \star). If you hear one long beep, you have messages.
- **3** As soon as you hear two short beeps, use the dial pad to press 962
- 4 Wait for the long beep, and then use the dial pad to enter the number of the remote fax machine where you want your fax messages sent to followed by ## (up to 20 digits).




- 🛒 You cannot use Ӿ and # as dial numbers. However, press # if you want to store a pause.
- **5** Hang up after you hear your MFC beep. Your MFC will call the other machine, which will then print your fax messages.

Changing your Fax Forwarding number

You can change the default setting of your fax forwarding number from another telephone or fax machine using Touch Tone.

- 1 Dial your fax number.
- 2 When your MFC answers, immediately enter your Remote Access Code (3 digits followed by \star). If you hear one long beep, you have messages.
- *3* When you hear two short beeps, use the dial pad to press **954**.
- 4 Wait for the long beep, and then use the dial pad to enter the new number of the remote fax machine where you want your fax messages forwarded followed by ## (up to 20 digits).

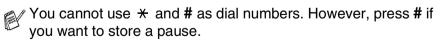

5 Hang up after you hear your MFC beep.

 


MFC settings and activity

You need to set up the Transmission Verification Report and Journal Period in the menu table.

Press Menu, 2, 4, 1. —OB—

Press Menu, 2, 4, 2.



Customizing the Transmission Verification Report

You can use the Transmission Report as proof that you sent a fax. This report lists the time and date of transmission and whether the transmission was successful (OK). If you select On or On+Image, the report will print for every fax you send.

If you send a lot of faxes to the same place, you may need more than the job numbers to know which faxes you must send again. Selecting On+Image or Off+Image will print a section of the fax's first page on the report to help you remember.

When the feature is Off, the Report will only print it there is a transmission error. (NG).

- **1** Press **Menu**, **2**, **4**, **1**.
- 2 Press or to select Off, Off+Image, On or On+Image. Press Set.
- 24.Report Setting 1.XMIT Report ▲ On ♥ On+Image Select ▲♥ & Set

 
3 Press **Stop/Exit**.

Setting the Journal Period

You can set the MFC to print a journal at specific intervals (every 50 faxes, 6, 12 or 24 hours, 2 or 7 days). If you set the interval to Off, you can print the report by following the Steps on the next page.

The default setting is Every 50 Faxes.

- 1 Press Menu, 2, 4, 2.
- 2 Press or to choose an interval.



Press Set.

(If you choose 7 days, the LCD will ask you to choose a day on which to begin the 7-day countdown.)

3 Enter the time to begin printing in 24-hour format.

Press Set.

(For example: enter 19:45 for 7:45 PM.)

- 4 Press Stop/Exit.
 - If you select 6, 12, 24 hours, 2 or 7 days, the MFC will print the report at the selected time and then erase all jobs from its memory. If the MFC's memory becomes full with 200 jobs before the time you selected has passed, the MFC will print the Journal early and then erase all jobs from memory. If you want an extra report before it is due to print, you can print it without erasing the jobs from memory.



If you select Every 50 Faxes, the MFC will print the Journal when the MFC has stored 50 jobs.

Printing reports

Five reports are available:

1.Help List	Prints the Help List so you can see at-a-glance how to quickly program your MFC.
2.Quick-Dial	Lists names and numbers stored in the One-Touch and Speed-Dial memory, in numerical order.
3.Journal	Lists information about the last incoming and outgoing faxes. (TX means Transmit.) (RX means Receive.)
4.XMIT Verify	Prints a Transmission Verification Report for your last transmission.
5.System Setup	Lists your settings.
6.Order Form	You can print an accessories order form to fill out and send to Brother dealer.

To print a report

- **1** Press Menu, **5**.
- 2 Press or to select the report you want.

Press Set.

-OR-

Enter the number of the report you want to print.

For example, press **1** to print the Help List.

3 Press Start.




Using the MFC as a copier

You can use your MFC as a copier, making up to 99 copies at a time.

Enter Copy mode

Before making copies, make sure that (Copy) is illuminated in green. If it is not, press (Copy) to enter Copy mode. The default setting is Fax. You can change the number of seconds or minutes that the MFC stays in Copy mode after a copy operation. (See Setting the Mode Timer on page 4-6.)


The printable area of your MFC begins at approximately 2 mm from the both ends and 3 mm from the top or bottom of the paper.

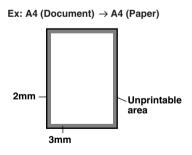

Temporary copy settings

You can improve your copies by using the Temporary Copy Keys: Enlarge/Reduce, Contrast, Quality, Tray Select, Sort and N in 1 (For MFC-8440) or Duplex/N in 1 (For MFC-8840D). These settings are temporary, and the MFC returns to Fax mode 1 minute after it finishes copying. If you want to use these temporary settings again, place the next document in the ADF or on the scanner glass within that time.

However, if you have set the Mode Timer for Copy and Scan modes to 0 or 30 seconds, the MFC returns to the default settings after the number of seconds that has been set for Mode Timer. (See *Setting the Mode Timer* on page 4-6 and *Using the Copy keys (Temporary settings)* on page 10-6.)

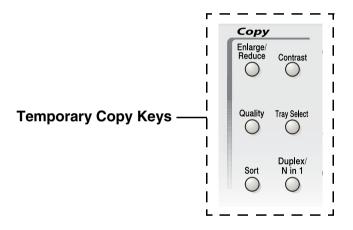

While the MFC is copying, incoming faxes will be received into the memory instead of being printed.

Making a single copy from the ADF

- **1** Press (Copy) to illuminate it in green. Place the document face up in the ADF.
- 2 Press Start.

Do NOT pull on the document while copying is in progress.

To stop copying and eject the document, press Stop/Exit.

Making multiple copies from the ADF

- **1** Press (Copy) to illuminate it in green. Insert the document face up in the ADF.
- **2** Use the dial pad to enter the number of copies you want (up to 99).
- 3 Press Start.

To sort the copies, press the **Sort** key.

Single or multiple copies using the scanner glass

You can make multiple copies using the scanner glass. Multiple copies will be stacked (all copies of page 1, then all copies of page 2, and so on). Use the Temporary Copy keys to choose more settings. (See *Using the Copy keys (Temporary settings)* on page 10-6.)

1 Press (Copy) to illuminate it in green. Lift the Document Cover.



- **2** Using the document guidelines on the left, center the document face down on the scanner glass and close the document cover.
- **3** Using the dial pad, enter the number of copies you want (up to 99).

For example, press **3 8** for 38 copies.

4 Press Start.

The MFC will start scanning the document.

If you want to sort multiple copies, use the ADF.

(See Making a single copy from the ADF on page 10-3.)

Out of Memory message

If the Out of Memory message appears, press **Stop/Exit** to cancel or press **Start** to copy scanned pages. You will need to clear some jobs from the memory before you can continue.

Out of Memory Copy:Press Start Quit:Press Stop

To gain extra memory, you can turn off Fax Storage. (See *Setting Fax Storage* on page 8-2.)


Print the faxes that are in the memory. (See *Printing a fax from the memory* on page 5-7.)

When you get an Out of Memory message, you may be able to make copies if you first print incoming faxes in the memory to restore the memory to 100%.


Then if this error message appears more than once you may wish to consider increasing the memory size. For more information on how to increase the memory size, see *Memory board* on page 23-1.

Using the Copy keys (Temporary settings)

When you want to change the settings only for the next copy, use the Temporary Copy keys.

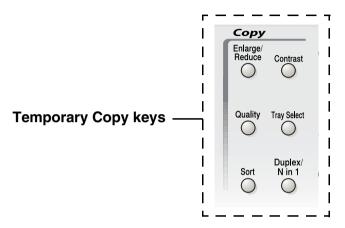

 You can use different combinations. The large LCD shows your current Copy mode settings.




Example of Copy mode LCD

Enlarge/Reduce

You can select the following enlargement or reduction ratios.


 $\tt Auto$ sets the MFC to calculate the reduction ratio that fits the size of your paper.

Custom allows you to enter a ratio from 25% to 400%.

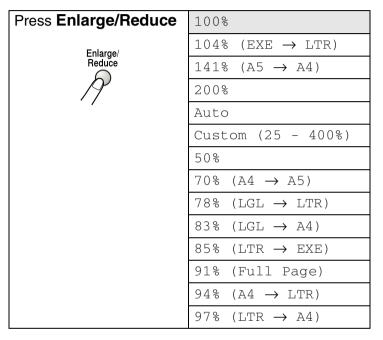

Auto appears only when you place the document in the ADF.

 - 1 Press (Copy) to illuminate it in green. Place the document face up in the ADF, or face down on the scanner glass.
- **2** Use the dial pad to enter the number of copies you want (up to 99).
- *3* Press Enlarge/Reduce.
- 4 Press Enlarge/Reduce or 2.



Press Set.

-OR-

You can select Custom and press Set.

Use the dial pad to enter an enlargement or reduction ratio from 25% to 400%.

Press Set.

(For example, press 5 3 to enter 53%.)

6 Press Start.

-OR-

Press other temporary copy keys for more settings.

- Special Copy Options (2in1, 4in1 or Poster) are not available with **Enlarge/Reduce**.
 - Auto is not available with the scanner glass.

Quality (type of document)

You can select the Quality for your type of document. The default setting is Auto, which is used for documents that contain both text and photographs. Text is used for documents containing only text. Photo is used for copying photographs.

- **1** Press (**Copy**) to illuminate it in green. Place the document face up in the ADF, or face down on the scanner glass.
- **2** Use the dial pad to enter the number of copies you want (up to 99).
- 3 Press Quality.
- 4 Press or b to choose the type of document (Auto, Text or Photo).

Press Set.

5 Press Start.

----OR----

Press other Temporary Copy keys for more settings.

Sorting copies using the ADF

If you want to sort multiple copies, use the ADF. Pages will be printed in the order 123, 123, 123, and so on.

- 1 Press (Copy) to illuminate it in green. Place the document face up in the ADF.
- **2** Use the dial pad to enter the number of copies you want (up to 99).
- 3 Press Sort.
- 4 Press Start.

-OR-

Press other Temporary Copy keys for more settings.

Contrast

You can adjust copy contrast to make copies darker or lighter.

- 1 Press (Copy) to illuminate it in green. Place the document face up in the ADF, or face down on the scanner glass.
- **2** Use the dial pad to enter the number of copies you want (up to 99).
- 3 Press Contrast.
- 4 Press 🔹 to make a copy lighter.


-OR-

Press **b** to make a copy darker.

Press Set.

- 5 Press Start.
 - -OR-

Press other Temporary Copy keys for more settings.

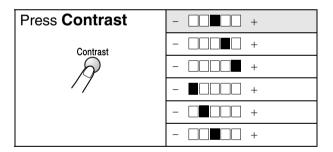

Tray Select

 
You can change the tray use only for the next copy.

- 1 Press (Copy) to illuminate it in green. Place the document face up in the ADF, or face down on the scanner glass.
- **2** Use the dial pad to enter the number of copies you want (up to 99).
- 3 Press Tray Select.
- 4 Press or b to select the tray usage. Press **Set**.
- 5 Press Start.

-OR-

Press other Temporary Copy keys for more settings.

(For MFC-8440 with the optional paper tray #2)



(For MFC-8840D with the optional paper tray #2)

Press Tray Select	Auto	
Tray Select	#1 (XXX) *	
	#2 (XXX) *	
	MP Tray	

* XXX is the paper size you set in Menu, 1. 3.

For MFC-8440 the LCD displays the tray use selections only if the optional paper tray is installed.

Duplex/N in 1

'Duplex' prints on both sides of the paper.

Temporary key	Level 1	Level 2	Option	document $ ightarrow$ Finished Layout
Press Duplex/N in 1 (MFC-8840D)	N in 1	—	2 in 1 (P)	$1_2 \rightarrow 1_2$
(MFC-8840D) N in 1 (MFC-8440)			2 in 1 (L)	$\begin{array}{c}1\\2\end{array} \rightarrow \begin{array}{c}1\\2\end{array}$
Duplex/ N in 1			4 in 1 (P)	$1 2 \rightarrow 12$
A			4 in 1 (L)	$\begin{array}{c}1\\2\end{array}\rightarrow\end{array}\begin{array}{c}1\\2:4\end{array}$
,	Duplex(1 in 1) (MFC-8840D)	Portrait1	-	$1_2 \rightarrow 1_2$
		Portrait2	Single Sided	$\begin{bmatrix} 1 \\ 2 \end{bmatrix} \rightarrow \begin{bmatrix} 1 \\ 2 \end{bmatrix}$
			Double Sided	$\begin{bmatrix} 1 \\ 2 \end{bmatrix} \rightarrow \begin{bmatrix} 1 \\ 2 \end{bmatrix}$
		Landscape1	Single Sided	$1 2 \rightarrow 1 2^{2}$
			Double Sided	$\begin{bmatrix} 1 \\ 2 \end{bmatrix} \rightarrow \begin{bmatrix} 1 \\ 2 \end{bmatrix}^2$
		Landscape2	_	$\begin{bmatrix} 1 \\ 2 \end{bmatrix} \rightarrow \begin{bmatrix} 1 \\ 2 \end{bmatrix}$

Temporary key	Level 1	Level 2	Option	document $ ightarrow$ Finished Layout		
Press Duplex/N in 1	Duplex(2 in 1) (MFC-8840D)	—	Portrait1	$\begin{bmatrix} 1 \\ 2 \end{bmatrix} \rightarrow \begin{bmatrix} 1 \\ 2 \\ 3 \end{bmatrix}$		
(MFC-8840D) N in 1 (MFC-8440)			Portrait2	$\begin{bmatrix} 1 \\ 2 \end{bmatrix} \rightarrow \begin{bmatrix} 1 \\ 2 \end{bmatrix}$		
Duplex/ N in 1			Landscape1	$\begin{array}{c} 1 \\ 2 \end{array} \rightarrow \begin{array}{c} 1 \\ 3 \end{array}$		
R			Landscape2	$1 \xrightarrow{2} \rightarrow \qquad \overbrace{\varepsilon}^{1}$		
,	Duplex(4 in 1) (MFC-8840D)	—	Portrait1	$\begin{bmatrix} 1 \\ 2 \end{bmatrix} \rightarrow \begin{bmatrix} 1 \\ 2 \\ 3 \\ 5 \end{bmatrix}$		
			Portrait2	$1_2 \rightarrow \frac{1_2}{g_4}$		
			Landscape1	$1 \xrightarrow{2} \rightarrow 1 \xrightarrow{1 \\ 2 \\ 5}$		
			Landscape2	$1 \xrightarrow{2} \rightarrow \qquad \begin{array}{c} 1 & 3 \\ g & 1 \\ g & 1 \end{array}$		
	Poster	-		1 →		
	Off	—	-	—		

Duplex/N in 1 copy

N in 1 copy

You can save paper by copying either two or four pages onto one page. Please make sure paper size is set to A4, Letter or Legal.

- Press (Copy) to illuminate it in green. Place the document face up in the ADF, or face down on the scanner glass.
- **2** Use the dial pad to enter the number of copies you want (up to 99).
- 3 Press Duplex/N in 1.

Press Set to select ${\tt N}$ in 1.

Press Set.

- **5** If you are ready to copy, go to Step 7.
 - -OR-

```
Enlg/Red:100%
Quality :Auto
Contrast:- □□□□□ +
Tray :#1(LTR)
Press▲▼ or Start 01
```

Quality, Contrast **Or** Tray.

Pres Set.

6 Press or b to select a new setting. Press Set.

7 Press Start.

If you are using the ADF, the MFC scans the originals and prints the copies.

-OR-

If you are using the scanner glass, the MFC scans the page. Place the next original on the scanner glass.


Flatbed Copy:	
Next Page?	
▲ 1.Yes	
▼ 2.No	
Select▲▼ & Set	

- 8 Select 1 and press Set, or press 1, to copy next page.
- **9** Repeat Step 7 and 8 for each page of the layout.

- 10 After all the pages of the document have been scanned, select 2 and press **Set**, or press 2, to print the copies.
- \swarrow (P) means Portrait and (L) means Landscape.
- You can also combine the N in 1 and Duplex operations. (See *Duplex (2 in 1) and Duplex (4 in 1) (For MFC-8840D)* on page 10-19.)
- For 2 in 1 (P), 2 in 1 (L), 4 in 1 (P) or 4 in 1 (L), you can not use the Enlarge/Reduce setting.

Poster

You can make a poster size copy of a photograph. You must use the scanner glass.

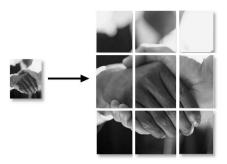

- **1** Place the original face down on the scanner glass.
- 2 Press Duplex/N in 1 and or to select Poster. Press Set.
- 3 Press Start.

The MFC starts scanning the original and prints the pages for the poster.

For Poster copies, you cannot make more than one copy or use the Enlarge/Reduce setting.

Duplex (1 in 1) (For MFC-8840D)

Make a double-sided copy from a single-sided document



- **1** Press (Copy) to illuminate it in green. Place the document face up in the ADF, or face down the scanner glass.
- **2** Use the dial pad to enter the number of copies you want (up to 99).
- **3** Press Duplex/N in 1 and row or row to select Duplex(1 in 1).

Press Set.

-OR-

Press Set.

6 Press **Start** to scan the document.

If you placed the document in the ADF, the MFC starts printing. —**OR**—

If you placed the document on the scanner glass, go to Step 7.

7 Place the next document on the scanner glass.

Select 1 and press **Set** or press 1 to copy next page.

After all the pages of the document have been scanned, select **2** and press **Set**, or press **2** to print.

Make a double-sided copy from a double-sided document



- **1** Press (Copy) to illuminate it in green. Place the document face up in the ADF.
- 2 Press Duplex/N in 1 and row or row to select Duplex(1 in 1).

Press Set.

- **5** Press **Start**.
- **6** Make sure that you have put the documents in the ADF as shown on the LCD and press **Start**.
- 7 After all the pages of the document have been scanned on one side, turn the other side of the document face up in the ADF.Press Start.

Duplex (2 in 1) and Duplex (4 in 1) (For MFC-8840D)

- 1 Press (Copy) to illuminate it in green. Place the document face up in the ADF, or face down on the scanner glass.
- **2** Use the dial pad to enter the number of copies you want (up to 99).
- 3 Press Duplex/N in 1 and or or to select Duplex(2 in 1) or Duplex(4 in 1).
 Press Set.

Press Set.

5 Press **Start** to scan the document.

If you placed the document in the ADF, the MFC starts printing. —**OR**—

If you placed the document on the scanner glass, go to Step 6.

- 6 Place the next document on the scanner glass.Select 1 and press Set or press 1 to copy next page.
- 7 After all the pages of the document have been scanned, select 2 and press **Set** or press 2 to print.

Changing the default copy settings

You can adjust the copy settings that are shown in the chart. These settings will stay until you change them again.

Submenu	Menu Selections	Options	Factory Settings
1.Quality	—	Text	Auto
		Photo	
		Auto	
2.Contrast	—	+	+
		+	
		+	
		+	
		+	

Quality

- **1** Press **Menu**, **3**, **1**.
- 2 Press or to select Text, Photo or Auto.
 Press Set.

31.Qu	
▲ .	Auto
	Text
V	Photo
Selec	t ▲▼ & Set

3 Press Stop/Exit.

Contrast

 
You can change the contrast to help an image look lighter or darker.

- **1** Press **Menu**, **3**, **2**.
- 2 Press 🔹 to make lighter.
 - -OR-

Press 👂 to make darker.

Press Set.

3 Press Stop/Exit.



11 Using the MFC as a printer

Using the Brother MFC-8440, MFC-8840D printer driver

A Printer Driver is software that translates data from the format used by a computer into the format required by a particular printer, using a printer command language or page description language.

The printer drivers are on the CD-ROM we have supplied. Install the drivers first by following the Quick Setup Guide. Also, the latest printer driver can be downloaded from the Brother Solutions Center at:

http://solutions.brother.com

or visit the support site at:

http://www.brother-uk.com

Windows[®] Printing

The dedicated printer driver and TrueType[™] compatible fonts for Microsoft[®] Windows[®] 98/98SE/Me/2000 Professional/XP and Windows NT[®] workstation 4.0 are available on the CD-ROM supplied with your MFC. You can install them easily into your Windows[®] system using our installer program. The driver supports our unique compression mode to enhance printing speed in Windows[®] applications, and allows you to set various printer settings, including economy printing mode and custom paper size.

Popular Printer Emulation Support

The MFC supports HP LaserJet (PCL level 6) and BR-Script 3 (Post Script 3) printer emulation mode. If you use DOS application software, you can use HP LaserJet (PCL level 6) and BR-Script 3 (Post Script 3) emulation mode for printer operations.

How to print your document

When the MFC receives data from your computer, it begins printing by picking up paper from the paper tray. The paper tray can feed many types of paper and envelopes.

From your computer select the Print command.

If your computer is also connected to any other printers, select **Brother MFC-8440** or **MFC-8840D (USB) Printer** as your printer driver from the Print or Print Settings menu in your software application, and then click on OK to begin printing.

- 2 Your computer sends a print command and data to the MFC.
- **3** The LED blinks in yellow and the MFC starts to print.

You can select the paper size, and orientation in your application software.

If your application software does not support your custom paper size, select the next largest paper size.

Then adjust the print area by changing the right and left margins in your application software.

Simultaneous printing and faxing

Your MFC can print from your computer while sending or receiving a fax, and scanning the document into the computer. Fax sending will not be stopped during PC printing.

Two-sided printing (Duplex Printing)

The supplied printer driver supports duplex printing. (For more information, see *Duplex Printing* on page 12-6.)

Automatic Duplex Printing (For MFC-8840D)

In this mode, the MFC prints on both sides of the $\tt A4$, $\tt Letter$ or $\tt Legal$ paper automatically.

- 1 Open the Properties dialog box in the printer driver.
- 2 Select Duplex Printing mode in the Advanced tab, make sure that 'Use Duplex Unit' has been selected, and then click the OK button. (See Duplex Printing on page 12-6.) The printer will print on both sides of the paper automatically.




When you select **Use Duplex Unit**, HQ1200 is not available.

I If you also want to use Duplex Printing for fax and copy operations, see *To use Automatic Duplexing for fax, copy and print operations (For MFC-8840D)* on page 2-11.

Manual Duplex Printing

The MFC prints all the even-numbered pages on one side of the paper first.


Then, the Windows[®] driver instructs you (with a pop-up message) to reinsert the paper. Before reinserting the paper, straighten it well, or you may get a paper jam. Very thin or very thick paper is not recommended. We recommend 75 to 90 g/m² paper.

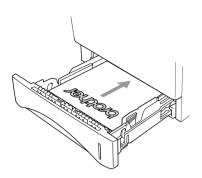

Face-down output tray

The MFC ejects paper with printed surfaces *face down* into the output tray in the front of the MFC. Unfold the support flap to support the printed pages.

When printing transparencies, remove each one from the support flap after it exits the MFC.

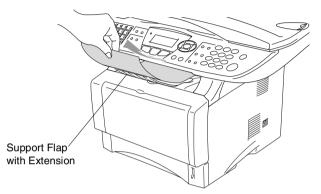


Printing on plain paper

The manual feed tray (For MFC-8440)

- The MFC automatically turns on the Manual Feed mode when you put paper in the manual feed tray.
- Select the Paper Size, Media Type, Paper Source, and other settings in the printer driver.
 Media Type: Plain Paper
 Paper Source: Manual
- **2** Send the print data to the MFC.
- **3** Open the manual feed tray. Slide the paper guides to fit the paper size.

4 Using both hands put paper in the manual feed tray until the front edge of the paper touches the paper feed roller and the MFC grips the paper.

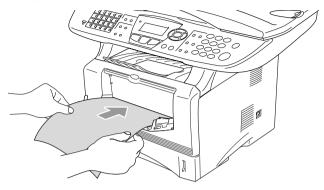

- Make sure that the paper is straight and in the proper position on the manual feed tray. If it is not, the paper may not be fed properly, resulting in a skewed printout or a paper jam.
 - Do not put more than one piece of paper in the manual feed tray at any one time, or it may cause a jam.
- **5** After the printed page comes out of the MFC, put in the next sheet of paper as in Step 4 above. Repeat for each page that you want to print.


The MP tray (For MFC-8840D)

 Select the Paper Size, Media Type, Paper Source, and other settings in the printer driver.
 Media Type: Plain Paper

Paper Source: MP Tray

- **2** Open the MP tray and lower it gently.
- *3* Pull out the MP tray support flap.

4 When loading paper in the MP tray, make sure it touches the back of the tray.

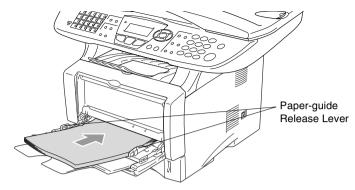

- Make sure that the paper is straight and in the proper position on the MP tray. If it is not, the paper may not be fed properly, resulting in a skewed printout or a paper jam.
- **5** While pressing the paper-guide release lever, slide the paper guide to fit the paper size.
- When you put paper in the MP tray, please remember the following:
 - The side to be printed on must be face up.
 - During printing, the inside tray rises to feed paper into the MFC.
 - Put the leading edge (top of the paper) in first and push it gently into the tray.
- 6 Send the print data to the MFC.

Printing on thicker paper and card stock


When the back output tray is pulled down, the MFC has a straight paper path from the manual feed tray or the MP tray through to the back of the MFC. Use this paper feed and output method when you want to print on thicker (106 - 161 g/m²) paper or card stock.

The manual feed tray (For MFC-8440)

1 Select the **Paper Size**, **Media Type**, **Paper Source**, and other settings in the printer driver.

Media Type: Thick paper or Thicker paper Paper Source: Manual

2 Open the back output tray.

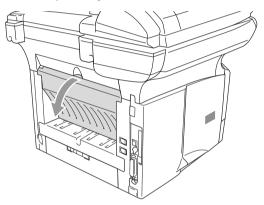


3 Open the manual feed tray. Slide the paper guides to fit the paper size.

- **4** Using both hands put the paper in the manual feed tray until the front edge of the paper touches the paper feed roller and the MFC grips the paper.
 - Make sure that the paper is straight and in the proper position in the manual feed tray. If it is not, the paper may not be fed properly, resulting in a skewed printout or a paper jam.
 - Do not put more than one piece of paper in the manual feed tray at any one time, or it may cause a jam.
- **5** Send the print data to the MFC.
- **6** After the printed page comes out of the MFC, put in the next sheet of paper as in Step 4 above. Repeat for each page that you want to print.
- 7 When you have finished the print job, close the back output tray.

Caution

Remove each sheet immediately after printing. Stacking the sheets may cause a paper jam or the paper to curl.

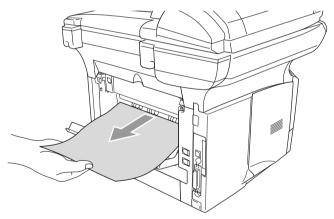


The multi-purpose tray (MP tray) (For MFC-8840D)

1 Select the **Paper Size**, **Media Type**, **Paper Source**, and other settings in the printer driver.

Media Type: Thick paper or Thicker paper

Paper Source: MP Tray

2 Open the back output tray, and then pull out the face-up output tray support if necessary.

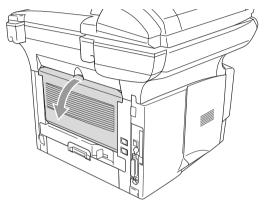

- **3** Open the MP tray and lower it gently.
- **4** Pull out the MP tray support flap.
- **5** When putting paper in the MP tray, make sure it touches the back of the tray.
- Make sure that the paper is straight and in the proper position in the MP tray. If it is not, the paper may not be fed properly, resulting in a skewed printout or a paper jam.


6 While pressing the paper-guide release lever, slide the paper guide to fit the paper size.

When you put paper in the MP tray, please remember the following;

- During printing, the inside tray rises to feed paper into the MFC.
- The side to be printed on must be face up.
- Put the leading edge (top of the paper) in first and push it gently into the tray.
- **7** Send the print data to the MFC.
- $\boldsymbol{\delta}$ When you have finished the print job, close the back output tray.


Caution

Remove each sheet immediately after printing. Stacking the sheets may cause a paper jam or the paper to curl.

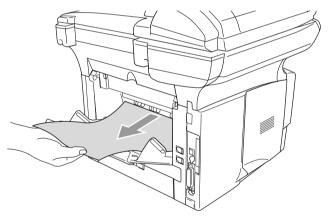

Printing on envelopes

 To print on envelopes use manual feed tray or multi-purpose tray.




- All sides should be properly folded without any wrinkles or creases.
- **1** Select the **Paper Size**, **Media Type**, **Paper Source**, and other settings in the printer driver.

Media Type: Envelope, Env.thin or Env.thick

For MFC-8440:


2 Open the back output tray.

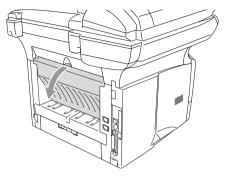

3 Open the manual feed tray. Slide the paper guides to fit the envelope size.

If envelopes are creased after they have been printed:

At the back of the MFC, open the back output tray and push down the blue tabs at the left and right hand sides (as shown in the figure on the next page). When you have finished printing your envelopes, close the back output tray to reset the two blue tabs back to their original position.

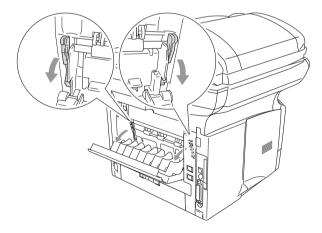


4 Using both hands put the envelope in the manual feed tray until the front edge of the envelope touches the paper feed roller and the MFC will grip the envelope.



- Make sure the envelope is straight as you insert it in the manual feed tray. If it is not, the envelope may not be fed properly, resulting in a skewed printout or a jam.
 - Do not put more than one envelope in the manual feed tray at any one time, or it may cause a jam.
 - Put the envelope in the manual feed tray, making sure that the side to be printed on is face up in the tray.
- **5** After the printed envelope comes out of the MFC, the MFC will wait until you put in the next envelope. Repeat Step 4 for each envelope you want to print.
- 6 Send the print data to the MFC.
- 7 After you finish the print job, close the back output tray.


For MFC-8840D:

2 Open the back output tray, and then unfold the face-up output tray support if necessary.

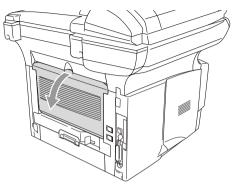


- **3** Open the MP tray and lower it gently.
- **4** Pull out the MP tray support flap.
- If envelopes are creased after they have been printed:

At the back of the MFC, open the back output tray and push down the blue tabs at the left and right hand sides (as shown in the figure on the next page). When you have finished printing your envelopes, close the back output tray to reset the two blue tabs back to their original position.

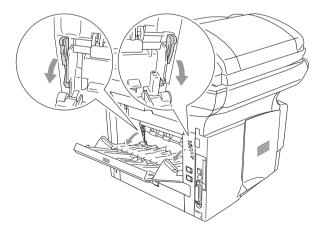

5 Put the envelopes in the MP tray so that they touch the back of the tray. Do not put more than 3 envelopes in the MP tray at any one time, or it may cause a jam.

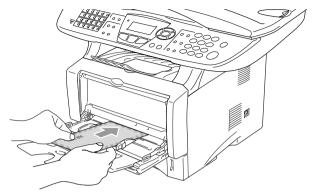

- Make sure that the envelopes are neatly stacked and in the proper position in the MP tray. If they are not, the envelopes may not be fed properly, resulting in a skewed printout or a jam.
- **6** Press and slide the paper-width guide to fit the envelope size.
- When you put envelopes in the MP tray, please remember the following;
 - During printing, the inside tray rises to feed envelopes into the MFC.
 - The side to be printed on must be face up.
 - Put the leading edge (top of the envelope) in first and push it gently into the tray.
- 7 Send the print data to the MFC.
- 8 After you finish the print job, close the back output tray.

Printer operation keys

Job Cancel

You can clear data from the memory.



Secure key

Secured data is protected by a password. Only those people that know the password will be able to print the data. The MFC will not print secure data until the password is entered. After the document is printed, the data will be cleared from the memory. To use this function, you need to set your password in the printer driver dialog box. (See *Device Options* on page 12-11.)



The **Secure** Key function is not available when using the Brother BR-Script driver.

1 Press Secure.


-OR-

The LCD displays ${\tt No}~{\tt Data}~!$ if there is no secured data in the memory.

2 Press or to select the user name.

Press **Set**. The LCD displays job selections.

Press **Set**. The LCD prompts you to enter your four-digit password.

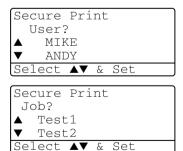

4 Enter your password using the control panel.

Press Set.

Secure Print Test1 Password:XXXX Enter & Set Key

5 Press or to select Print.

Press Set. The MFC prints the data.

-OR-

If you want to delete the secured data press $<\!\!>$ or $<\!\!<\!\!>$ to select <code>Delete</code>.

Press Stop/Exit.



If you turn the power switch Off, the secured data saved in memory will be cleared.

 After you print the secured data it will be cleared from memory.

Setting the Emulation Selection

This MFC has an Automatic Emulation Selection function. When the MFC receives information from the PC, it automatically chooses the emulation mode. This function has been set at the factory to AUTO.

You can change the default emulation mode manually by using the control panel.

- **1** Press **Menu**, **4**, **1**.

41.	Emulation
	Auto
	HP LaserJet
▼	BR-Script 3
Sel	lect ▲▼ & Set

- *3* Press Stop/Exit.
- Try this function with your application software or network server. If the function does not work properly, either select the required emulation mode manually using the MFC panel buttons or use the emulation selection commands in your software.

Printing the Internal Font List

You can print a list of the MFC's internal (or resident) fonts to see how each font looks before you select it.

- 1 Press Menu, 4, 2, 1.
- **2** Press **Start**. The MFC prints the list.
- *3* Press **Stop/Exit**.

Printing the Print Configuration List

You can print a list of current printer settings.

- 1 Press Menu, 4, 2, 2.
- **2** Press **Start**. The MFC prints the settings.
- 3 Press Stop/Exit.

42.Print Options 1.Internal Font Press Start

42.Print Options 2.Configuration Press Start

Restoring factory default settings

You can return the MFC to the original factory settings. Fonts and macros in the temporary settings are cleared.

- 1 Press Menu, 4, 3.
- **2** Press **1** to restore the factory settings.



-OR-

Press 2 to exit without making a change.

3 Press Stop/Exit.

Only the printer settings will be returned to the original factory settings.



Printer driver settings

You can change the following printer settings when you print from your computer:

- Media Type
- Multiple Page
- Duplex
- Watermark*1*2
- Scaling*2
- Print Date & Time*1*2
- Quick Print Setup*1*2
- Secure Print*¹
- *1 These settings are not available with the BR-Script driver.
- *² These settings are not available with the Universal printer driver.

How to access the printer driver settings

- **1** Select **Print** from the **File** menu in your application software.
- 2 Select Brother MFC-8440 or MFC-8840D (USB) Printer as your printer and click Properties (Preference). The Printing Preferences^{*3} dialog box will appear.
- The way you access the printer driver settings depends on your operating system and software applications.
 - *³ The screens shown in this section are from Windows[®] XP. The screens on your Computer may vary depending on your Windows[®] Operating System.
 - Some descriptions in this chapter are based on the MFC-8840D. These descriptions also apply to the MFC-8440.

Features in the Brother Native Driver

The Brother Native driver is a printer driver developed exclusively by Brother. This driver includes more features than the Microsoft[®] Windows[®] Universal printer driver.

Basic tab

Second Se			? 🛛	
Basic Advanced Support				
A4	Paper Size	A4		
210 x 297 mm	Multiple Page	Normal	✓ \	
	Border Line		-	1
	Orientation	 Portrait 		
10m			$\leq $	
		1 🛃 🗌 Collat <u>e</u>)_	2
	Media Type	Plain Paper		_
	Paper Source			
	<u>F</u> irst Page	Auto Select	,	3
	Other Pages			
	(Default Abo	au	4
L		K Cancel	Help	

- 1 Select the Paper Size, Multiple Page, Border Line (if any) and Orientation.
- 2 Select number of **Copies** and **Media Type**.
- 3 Select Paper Source (First Page and Other Pages).

Auto Select allows the printer driver to select a suitable tray for Paper Size automatically.

You can set the paper size for each tray in the Accessories tab. (See *Accessories tab* on page 12-14.)

4 To return to the default settings, click the **Default** button.

Paper Size

From the drop-down box select the Paper Size you are using.

Multiple Page

The Multiple Page selection can reduce the image size of a page allowing multiple pages to be printed on one sheet of paper or enlarging the image size for printing one page on multiple sheets of paper.





Ex. 1 in 2×2 pages

Border Line

When printing multiple pages on one sheet with the Multiple Page feature you can select to have a solid border, dash border or no border around each page on the sheet.

Orientation

Orientation selects the position of how your document will be printed (**Portrait** or **Landscape**).

 


Copies


The copies selection sets the number of copies that will be printed.

Collate

With the **Collate** check box selected, one complete copy of your document will be printed and then repeated for the number of copies you selected. If the **Collate** check box is not selected, then each page will be printed for all the copies selected before the next page of the document is printed.



Collate box checked

 

Collate box not checked

Media Type

You can use the following types of media in your MFC. For the best print quality, select the type of media that you wish to use.

Plain Paper Thin Paper

Thick Paper

Thicker Paper

Bond Paper


Transparencies

Envelopes

Env. Thick

Env. Thin

When using ordinary plain paper (70 to 95g/m²), select **Plain Paper**. When using heavier weight paper, envelopes or rough paper select **Thick Paper** or **Thicker Paper**. For bond paper, select **Bond Paper** and for OHP transparencies, select **Transparencies**.

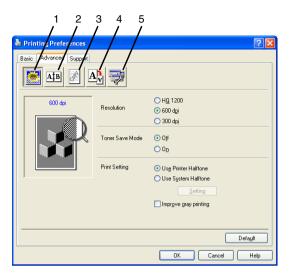

To return to the default settings, click the **Default** button.

Change the tab settings by selecting one of the following icons:

- 1 Print Quality
- 2 Duplex
- 3 Watermark
- 4 Page Setting
- **5 Device Options**

Print Quality

Resolution

You can change the resolution as follows:

- HQ 1200
- 600 dpi
- 300 dpi

When you select **Use Duplex Unit**, HQ1200 is not available.

Toner Save Mode

You can save running costs by turning on the Toner Save Mode, which reduces the print density.

Print Setting

For Windows® 98/98SE/Me

Print Setting is used for optimizing your print quality for the type of document being printed (Photos, Graphics or Scanned Images). When you choose **Auto (Recommended)**, the printer automatically prints with the most suitable print settings.


With the Print Setting set to Manual, you can change the Brightness, Contrast and Graphics Quality options manually.

For Windows® 2000/XP/NT® WS 4.0

- Check **Use Printer Halftone** to print using Halftone.
- Check Use System Halftone to print using Halftone of the system. To change the setting, press Setting.
- If the halftone cannot be printed correctly, check Improve gray printing.

Duplex Printing

Choosing the Duplex Printing icon displays the Duplex features available.

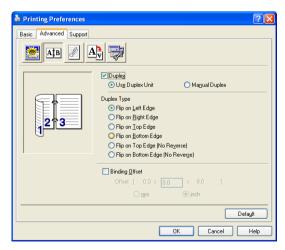

Use Duplex Unit (For MFC-8840D)

Check the Duplex box and then select **Use Duplex Unit**. In this mode the MFC prints on both sides of the paper automatically.

Manual Duplex

Check the Duplex box and then select **Manual Duplex**. In this mode, the MFC prints all the even numbered pages first. Then the printer driver stops and shows the instructions required to re-install the paper. When you click OK the odd numbered pages are printed.

Duplex Type

You can select **Duplex Type**. There are six types of duplex directions available for each orientation.

Flip on Left Edge
Flip on Right Edge
Flip on Top Edge
Flip on Bottom Edge
Flip on Top Edge (No Reverse)
Flip on Bottom Edge (No Reverse)

Binding Offset

Check the Binding Offset option, you can specify the offset value of the binding side in inches or millimeters (0 - 8 inches) [0 - 203.2 mm].

Watermark

You can place a logo or text into your document as a Watermark. You can select one of the preset Watermarks, or you can use a bitmap file or text file that you have created.

Check **Use Watermark**, and then select the watermark you want to use.

Printing Preferences			?
Basic Advanced Support			
AB AB			
Letter 8 ½ x 11 in	V U <u>s</u> e Watermark Select <u>W</u> atermark	✓ In background In Outline Text	
Configuration	CONFIDENTIAL COPY DRAFT VERTRAULICH KOPIE	▲ Edit Dejete ▶ New	
Print Watermark	Custo <u>m</u> Page Setting Page T	itle Deleje	
On all pages			
Apply from second copy (collate only)	Page	Title Add	~
		Defaul	t
		OK Cancel H	elp

In background

Check **In background** to print the watermark image in the background of your document. If this feature is not checked then the Watermark will be printed on top of your document.

In Outline Text

(Window[®] 2000 Professional/XP/NT[®] WS 4.0 Only)

Check **In Outline Text** if you only want to print an outline of the watermark.

Print Watermark

The Print Watermark feature offers the following print choices:

- On all pages
- On first page only
- From second page
- Custom

Watermark Setting

You can change the Watermark's size and position on the page by selecting the Watermark, and clicking the **Edit** button. If you want to add a new Watermark, click the **New** button, and then select **Text** or **Bitmap** in the **Watermark Style**.

Watermark Setting	
Preview Letter	Title
8½ x 11 in	
	Watermark Style
	O I ext O Bitmap
	Watermark Text
	Text
	Fogt Arial 🗸
	Size 72 🖆 Darkness 20 🚰 %
Position	Style Regular 🗸
Automatically centered	
× 0 🖨 × 0 🖨	Watermark Bitmap
x 0 🖨 x 0 🖨	Eile
Angle 0°	Scaling 100 🚔 % Browse
	Cancel Help
	Cancel <u>H</u> elp

Title

You can select the **CONFIDENTIAL**, **COPY** or **DRAFT** as the standard title or enter a title you like in the field.

Watermark Text

Enter your Watermark text into the **Text** Box, and then select the **Font**, **Size**, **Darkness** and **Style**.

Watermark Bitmap

Enter the file name and location of your bitmap image in the **File** box, or **Browse** for the file location. You can also set the scaling size of the image.

Position

This setting offers you the control for where the Watermark is to be positioned on the page.

12 - 9 PRINTER DRIVER SETTINGS

Page Setting

You can change the print size of your document with the Scaling feature.

Printing Preferences		? 🗙
Basic Advanced Support		
AB 🖉 A		
Leter 85x11 in	Scaling Off Fit to Paper Size Fige Output Paper Size Fige (25 - 400 %) Mirror Print Reverse Print	
	Defa	
	OK Cancel	Help

- Check Off if you want to print the document as it appears on your screen.
- Check Fit to Paper Size, if your document has an unusual size, or if you have only the standard size paper.
- Check the Free box if you want to manually reduce or enlarge the output.
- You can also use the Mirror Print or Reverse Print feature for your page setting.

Device Options

Lets you set the following Printer Functions:

Drinting Preferences	? 🛛
Basic Advanced Support	Secure Print Secure Print Secure Print User Mame Job Name V Use System Default Name Parsword
	Default OK Cancel Help

Secure Print

Secure documents are documents that are password protected when they are sent to the MFC. Only the people who know the password will be able to print them. Since the documents are secured at the MFC, you must use the control panel of the MFC (with the password) to print them.

To send a secured document:

- 1 Select Secure Print from Printer Function and check Secure Print.
- 2 Enter your password, user name and job name and click OK.
- **3** You must print the secured documents from the control panel of the MFC. (See *Secure key* on page 11-17.)

To delete a secured document:

1 You need to use the control panel of the MFC to delete a secured document. (See *Secure key* on page 11-17.)

You can store up to 8 MB of secured data in the MFC's memory.

Quick Print Setup

The Quick Print Setup feature allows you to quickly select driver settings. To view setting, simply click your mouse button on the task tray icon. This feature can be set to ON or OFF from the Device Options section.

The factory setting is OFF

Second Se	? 🛛
Baic Advanced Support	Quick Pint Setup ⊙0g ⊙ 0ff
	Defa <u>u</u> lt
	OK Cancel Apply Help

Administrator (For Windows® 98/98SE/Me Users Only)

The administrator selection permits the Copy, Scaling and Watermark features to be locked and password protected.

Brother MFC-8840D Printer Properties	? X
General Details Basic Advanced Accessories	Support
AIB 🛃 🗛	
Printer Function Secure Print Quick Print Stepp Administrator Print Date & Time	nimistrator
	Administration X
	Copy Lock Seeing Lock
	☐ <u>Watermark Look</u>
	Password
	Set password Set OK

Record your password and keep it in a safe place for future reference. If you forget your password these settings can not be accessed.

Print Date & Time

When enabled the **Print Date and Time** feature will automatically print the date and time from your computers system clock on your document.

lacktriang Preferences			? 🛛		
Basic Advanced Support					
AB A					
Printer Function	Date & Time				
Secure Print Quick Print Setup Print Date & Time					
Print Date & Lime	✓ Enable				
	Setting				
	Date & Time				X
		Format			
		Date	Mon,16 Apr 200	1 🗸	
		Time	19:49:43	· · · · · · · · · · · · · · · · · · ·	
			10.10.10		
			Font	ן	
	Date & Time	Position			
	Background		O Center	Bight	
	Dar <u>k</u> ness 0 🖆 %		<u>B</u> ottom	0.25	_
	O Opague	O Tob	C Dottom		
	⊙ Transgarent				
	OK	Cancel	Defa	ault	

Click the **Setting** button to change the **Date** and **Time** Format. You can change the Font by clicking the Font button or the Position. To include a background with the Date and Time select Opaque. When Opaque is selected you can set the Darkness of the Date and Time background by changing the percentage.



The Date and Time indicated in the selection box represents the format that will be printed. The actual Date and Time printed on your document is automatically retrieved from the settings of your computer.

Accessories tab


The **Accessories** Tab includes the settings for configuring the printer driver for the size of paper loaded in each paper source. This tab also installs any additional options into the driver settings.

Paper Source Setting

To configure the paper size for each paper source, highlight the source in the **Paper Source Setting** list. Select the **Paper Size** from the pull-down box and click **Update**. When Auto Select (default Paper Source) is set in the Basic tab of the printer driver (See *Basic tab* on page 12-2), the printer driver will automatically use the **Paper Source Setting** to select a tray which matches the **Paper Size** setting in the printer driver.

Default Source

The **Default Source** allows you to choose the paper source that will be used when the paper size of the document being sent does not match the Paper Source settings.

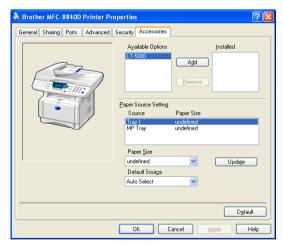

Available Options

In order to access the optional 2nd paper tray the option must be installed in the driver. Highlight the model number from the **Available Options** list and click **Add**. The optional tray will then be listed in the **Installed** box, **Paper Source Setting** list and the screen illustration will display the 2nd tray.

🍓 Brother MFC-8840D Printer Pr	operties	? 🛛
General Sharing Ports Advanced	Security Accessories	
	Ayailable Options Add Bemove	Installed LT-5000 (Tray2)
	Paper Source Setting Source Paper Size Tray 1 Letter Tray 2 undefined MP Tray undefined	
	Paper Size Letter V Default Source Auto Select V	Update
	OK Cancel A	Dgfault

Support tab

The **Support** Tab provides driver version and setting information. In addition there are links to the **Brother Solutions Center** and the Driver Update Web sites.

Click the **Support** tab to display the following screen:



Brother Solutions Center

The **Brother Solutions Center** is a Web site offering information about your Brother product including FAQs (Frequently Asked Questions), User Guides, Driver Updates and Tips for using your MFC.

Web Update

Web Update checks the Brother web site for updated drivers, and automatically downloads and updates the printer driver on your computer.

Check Setting

The **Check Setting** selection displays a list of your current driver settings.

Features in the PS printer driver (For Windows[®])

The Windows[®] 98/98SE/Me/2000 Professional/XP and Windows NT[®] 4.0 utilizes BR-Script 3(PostScript[®] 3 language emulation) driver.

To install the PS driver

If you have already installed the printer driver following the instruction in the Quick Setup Guide, insert the CD-ROM into the CD-ROM drive on your PC and click **Install Software**. Choose **MFL-Pro Suite** and follow the on-screen instructions. When the **Select Components** screen appears, check **PS Printer Driver**, and then continue following the on-screen instructions.

If you have not previously installed the driver and software, insert the CD-ROM into the CD-ROM drive on your PC and click **Install Software**. Choose **MFL-Pro Suite** and follow the on-screen instructions. When the **Setup Type** screen appears, select **Custom** and check the **PS Printer Driver**. Then continue following on-screen instructions.

You can download the latest driver by accessing the Brother Solutions Center at http://solutions.brother.com

 prod The screens in this section are from Windows $^{\ensuremath{\mathfrak{B}}}$ XP.


The screens on your PC will vary depending on your Operating System.

Ports tab


Select the port where your printer is connected or the path to the network printer you are using.

S	Brother	MFC-88	40D BR-Scrip	ot3		
Print to checke		ng port(s). Documents	will print to	o the first free	
Port	De	escription		Printer		~
	PT1: Prir	nter Port		Brother MF	C-8840D BR-Scri	
	T2: Prir	nter Port				
		nter Port				
	0M1: Sei					-
)M2: Sei					
) M3: Sei) M4: Sei					~
	JM4: Sel	ial Port				
A	dd Por <u>t</u>		Delete F	Port	Configure Port.	
					<u>.</u>	_
Enab	le bidirect	tional sup	port			
E <u>n</u> at	le printer	pooling				

Select the options you installed.

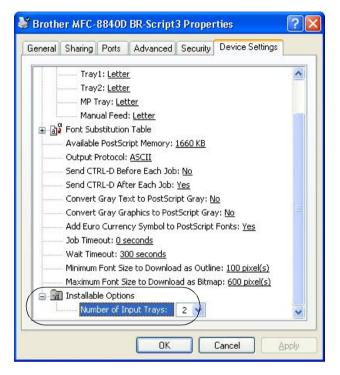

Layout tab

 

You can change the Layout setting by selecting the setting in the **Orientation**, **Page Order** and **Pages Per Sheet**.

In the second se	? 🔀
Layout Paper/Quality	
Orientation Portrait Landscape Rotated Landscape Print on Both Sides Flip on Short Edge Flip on Long Edge None 	
Page Order ● Front to Back ● Back to Front	
Pages Per Sheet: 1	Advanced
	OK Cancel

Booklet (For MFC-8840D) (For Windows[®] 2000/XP)

You can print a booklet by selecting **Booklet** from **Pages Per Sheet** list.

Paper/Quality tab

If you are using Windows NT[®] 4.0, Windows[®] 2000 or XP, you can access the **Paper/Quality** tab by clicking **Printing Preferences...** in the **General** tab of the **Brother BR-Script3 Properties** screen.

Select the Paper Source.

🎍 Printing Prefer	ences	? 🛛
Layout Paper/Quali	ty .	
Tray Selection		
Paper <u>S</u> ource:	Automatically Select	~
	Automatically Select	
	Auto Select	
	Tray1	
	Tray2	
	MP Tray Manual Feed	
	Manual Feeu	
		Ad <u>v</u> anced
L	ſ	OK Cancel

Advanced Options

If you are using Windows NT[®] 4.0, Windows[®] 2000 or XP, you can access the **Advanced Options** tab by clicking **Advanced...** button in the **Layout** tab or the **Paper/Quality** tab.

Brother MEC-8840D BR-Script3 Advanced Document Settings	
😑 🛃 Paper/Output	
Paper Size: Letter	
Copy Count: <u>1 Copy</u>	
Graphic	
Print Quality: 600dpi	
Scaling: 100 %	
TrueType Font: Substitute with Device Font	
Document Options	
Advanced Printing Features: Enabled	
PostScript Options	
🖻 💏 Printer Features	
Media Type: <u>Plain Paper</u>	
Toner Save: Off	
BR-Script Level: <u>3</u>	
as south	
OK Cancel	

- **1** Select the **Paper Size** and **Copy Count**.
- 2 Set the **Print Quality**, **Scaling** and **TrueType Font** setting.
- **3** You can change settings by selecting the setting in the Printer Features list:
 - Media Type
 - Toner Save
 - BR-Script Level

13 How to scan using Windows[®]

The scanning operations and drivers will be different depending on your operating system.

For Windows[®] 98/98SE/Me/2000 Professional and Windows NT[®] Workstation 4.0

The MFC uses a TWAIN Compliant driver for scanning documents from your applications. (See *Scanning a document*, *TWAIN compliant* on page 13-1.)

For Windows[®] XP

The MFC uses Windows[®] Imaging Acquisition (WIA) for scanning documents. (See *Scanning a document (For Windows[®] XP only)* on page 13-10.)

For ScanSoft[®], PaperPort[®] and OmniPage[®] OCR Go to Using ScanSoft[®] PaperPort[®] and OmniPage[®] OCR on page 13-19.

Scanning a document

TWAIN compliant

The Brother MFL-Pro Suite software includes a TWAIN compliant scanner driver. TWAIN drivers meet the standard universal protocol for communicating between scanners and software applications. This means that not only can you scan images directly into the PaperPort[®] viewer that Brother included with your MFC, but you can also scan images directly into hundreds of other software applications that support TWAIN scanning. These applications include popular programs like Adobe[®] Photoshop[®], Adobe[®] PageMaker[®], CorelDraw[®] and many more.

How to access the Scanner

- 1 Open the software application (ScanSoft[®] PaperPort[®]) to scan a document.
- The instructions for scanning in this Guide are for when you use $ScanSoft^{\mathbb{R}}$ PaperPort[®] 8.0SE.
- 2 Select Scan from the File drop-down menu or select the Scan button. The Scan pane appears in the left panel.
- 3 Select Brother MFC-8840D, Brother MFC-8840D USB or Brother MFC-8840D LAN from the Scanner drop-down list box.

If the MFC is connected via: Parallel-use Brother MFC-8840D USB-use Brother MFC-8840D USB LAN-use Brother MFC-8840D LAN

4 Click Scan.

The Brother MFC-8840D, Brother MFC-8840D USB or Brother MFC-8840D LAN Scanner Setup dialog box will appear:

Brother MFC-8840D USB Scanner S	etup - 3.0 -	×
Scan : Photo Veb Est Resolution 300 x 300 dpi Scan Type 24bit Color Photo Text Scan Type 24bit Color Type 24bit Color Type 24bit Color Type 24bit Color		PreScan Width : 210.1 mm 2481 pixels Height : 290.3 mm 3422 pixels Data Size : 24.3 MB
Contrast		<u>S</u> tart
Dgcument Size A4 210 x 297 mm 💌		Help Default Cancel

Scanning a document into the PC

You can scan a whole page

__OR__

Scan a portion of the page after pre-scanning the document.

Scanning a whole page

- **1** Place the document face up in the ADF (automatic document feeder), or face down on the scanner glass.
- **2** Adjust the following settings, if required, in the Scanner window:
 - Image Type
 - Resolution
 - Scan Type
 - Brightness
 - Contrast
 - Document Size
- After you select a document size, you can adjust the scanning area further by clicking the left mouse button and dragging it. This is required when you want to crop an image when scanning.


See Settings in the Scanner window on page 13-6.

Click the Start button in the scanner window.
 When scanning is completed, click Cancel to return to the PaperPort[®] window.

Pre-Scanning to crop a portion you want to scan

The **PreScan** button is used to preview an image for cropping any unwanted areas from the image. When you are satisfied with the preview, click the **Start** button in the scanner window to scan the image.

1 Place the document face up in the ADF, or face down on the scanner glass.

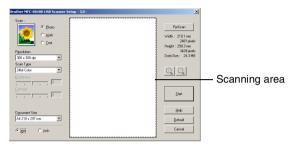

- 2 Select the settings for Image Type, Resolution, Scan Type, Brightness and Contrast, as needed.
- 3 In the Brother MFC-8840D, Brother MFC-8840D USB or Brother MFC-8840D LAN Scanner Setup dialog box, click the PreScan button.

The entire document will be scanned into the PC and will appear in the Scanning Area.



Scanning area

4 Select the portion you want to scan by clicking the left mouse button and dragging it.

You can enlarge the portion you selected by pressing 到 to check it. If you want to select the different portion, use 🔍 to undo the image.

- **5** If you have used the ADF in Step 1, please place the document face up in the ADF again.
- 6 Click Start. This time only the selected area of the document will appear in the PaperPort[®] window (or your software application window).
- 7 In the PaperPort[®] window, use the options available to refine the image.

Image Type

Select the image type of output from **Photo**, **Web** or **Text**. **Resolution** and **Scan Type** will be altered for each default setting.

The default settings are:

Image Type		Resolution	Scan Type
Photo	Select for scanning photo images.	300 x 300 dpi	24-bit color
Web	Select for attaching the scanned image to web pages.	100 x 100 dpi	24-bit color
Text	Select for scanning text documents.	200 x 200 dpi	Black & White

Resolution

You can change the scanning resolution from the **Resolution** drop down list. Higher resolutions take more memory and transfer time, but can achieve a finer scanned image. The following table shows the resolution you can choose and the available colors.

Resolution	Black & White / Gray (Error Diffusion)	256 color	True Gray / 24 bit color
100 x 100 dpi	Yes	Yes	Yes
150 x 150 dpi	Yes	Yes	Yes
200 x 200 dpi	Yes	Yes	Yes
300 x 300 dpi	Yes	Yes	Yes
400 x 400 dpi	Yes	Yes	Yes
600 x 600 dpi	Yes	Yes	Yes
1200 x 1200 dpi	Yes	No	Yes
2400 x 2400 dpi	Yes	No	Yes
4800 x 4800 dpi	Yes	No	Yes
9600 x 9600 dpi	Yes	No	Yes

Scan Type

Black & White:Set the Scan Type to Black & White for text or line art.Gray Scale:Set the Scan Type to Gray (Error Diffusion) or
True Gray for photographic images.Colors:Set either:256 Color, which scans up to 256 colors, or 24 bit
Color which scans up to 16.8 million colors.
Although using 24 bit Color creates an image with
the most accurate colors, the image file will be
approximately three times larger than a file
created with 256 Color.

Brightness

Adjust this settings (-50 to 50) to obtain the best image. The default value is 0, representing an 'average'.

You can set the level by dragging the slide bar to the right or left to lighten or darken the image. You can also type a value in the box for the setting.

If the scanned image is too light, set a lower brightness value and scan the document again. If the image is too dark, set a higher brightness value and scan the document again.

Contrast

This setting is adjustable only when you have selected one of the gray scale settings. It is not available when **Black & White** and **Color** settings are selected as the **Scan Type**.

You can increase or decrease the contrast level by moving the slide bar to the left or right. An increase emphasizes dark and light areas of the Image, while a decrease reveals more detail in gray areas. You can also type a value in the box for the setting.

Document Size

Set the Size to one of the following:

- Letter (8 1/2 x 11 in.)
- A4 (210 x 297 mm)
- Legal (8 1/2 x 14 in.)
- A5 (148 x 210 mm)
- B5 (182 x 257 mm)
- Executive (7 1/4 x 10 1/2 in.)
- Business Card (90 x 60 mm)
- Photo 3.5 x 5 in. (9 x 13 cm)
- Photo 5 x 7 in. (13 x 18 cm)
- APS C 4 x 6 in. (10 x 15 cm)
- Custom (User adjustable from 0.35 x 0.35 in. to 8.5 x 14 in or 8.9 x 8.9 mm to 215.9 x 355.6 mm.)


To scan photographs or business cards, select the document size, and then place the document face down at the center of scanner glass. When scanning photographs or other images for use in a word processor or other graphics application. You should try different settings for the contrast and resolution modes to see which best suits your needs. If you selected **Custom** as the size, The **Custom Document Size** dialog box will appear.

C	ustom Doc	ume	ent Size		×
	Custom Do	cum	ent Size <u>N</u> ame		
				-	
	<u>W</u> idth	[8.9 - 215.9]	215.9	
	<u>H</u> eight	[8.9 - 355.6]	279.4	
	Unit		• <u>m</u> m	O jnch	
			<u>S</u> ave	Delete	
	<u> </u>		<u>C</u> ancel	<u>H</u> elp	

Type the Name, Width and Height for the document.

You can choose "mm" or "inch" as the unit for Width and Height.

 You can see the actual paper size you selected on the screen.



- Width: shows the width of scanning area
- Height: shows the height of scanning area
- Data Size: shows the approximate data size calculated in a Bitmap format. The size will be different for other file formats such as JPEG.

Scanning a document (For Windows[®] XP only)

WIA compliant

Windows[®] XP uses Windows[®] Image Acquisition (WIA) for scanning images from the MFC. You can scan images directly into the PaperPort[®] viewer that Brother included with your MFC or you can scan images directly into any other software application that supports WIA or TWAIN scanning.

How to access the scanner

- Open your software application to scan a document.
- The instructions for scanning in this Guide are for when you use ScanSoft[®] PaperPort[®] 8.0. The steps for scanning from another application may vary.
- **2** Select **Scan** from the **File** drop-down menu or select the Scan button.

The Scan pane appears in the left panel.

- **3** Select the scanner you are using from the **Scanner** drop-down list box.
- 4 Click Scan.

The Scan dialog box will appear:



Scanning a document into the PC

There are two ways in which you can scan a whole page. You can either use the ADF or the Flatbed scanner glass.

If you would like to scan and then crop a portion of the page after pre-scanning the document you will need to use the scanner glass (Flatbed).

Scanning a document using the ADF

1 Place the document face up in the ADF (automatic document feeder).

	Scan using Brother MFC-8840D		? 🔀
а —	What do you want to scan? Paper source Document Feeder		
в —	Select an option below for the type of picture you want to scan.		
0	Black and white picture or text		
с —	Adjust the quality of the scanned picture		
D —	Page size: A4 210 x 297 mm (8.3 x 11.7 inc 💌	<u>Preview</u> <u>S</u> can Ca	ancel .::

- **2** Select the **Document Feeder** from the **Paper source** drop-down list box (A).
- *3* Select the picture type (B).
- **4** Select the **Paper size** from the drop-down list box (D).

5 If you require advanced settings, click on the tab Adjust the quality of the scanned picture (C). You can select Brightness, Contrast, Resolution and Picture Type from the Advanced Properties. Click the OK button after you choose your settings.


Advanced Propertie	s 🔹 🛛 🔁
Advanced Properties	
Appearance	Brightness: Coptrast: 0
Resolution (DPI):	Picture type: Color picture
	Reset
	OK Cancel

- The scanner resolution you can select is up to 1200×1200 dpi.
 - For resolutions greater than 1200dpi, use the Brother Scanner Utility. (See Brother Scanner Utility on page 13-15.)
- **6** To start scanning your document, click the **Scan** button in the Scan dialog box.

Pre-Scanning to crop a portion you want to scan using the scanner glass


The **Preview** button is used to preview an image for cropping any unwanted portions from the image. When you are satisfied with the preview, click the **Scan** button from the scanner window to scan the image.

- 1 Place the document face down on the scanner glass.
- **2** Make sure you selected **Flatbed** in the Paper source pull-down box (A).

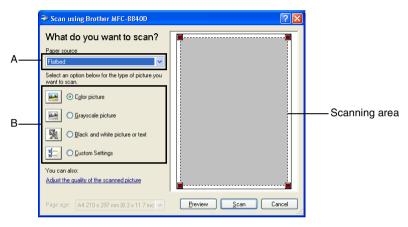

- **3** Select the picture type (B).
- **4** In the Scan dialog box, click the **Preview** button. The entire document will be scanned into the PC and will appear in the scanning area.

5 Select the portion you want to scan by clicking the left mouse button and dragging it over the area.

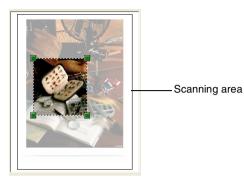

6 If you require advanced settings, click Picture Type from the Adjust the quality of the scanned picture (C). You can select Brightness, Contrast, Resolution and Advanced Properties. Click the OK button after you choose your settings.



Advanced Properties	? 🔀
Advanced Properties	
Appearance	Brightness: Cogtrast:
Resolution (DPI):	Picture type: Color picture
	Rgset OK Cancel

7 To start scanning your document, click the **Scan** button in the Scan dialog box.

This time only the selected area of the document will appear in the PaperPort[®] window (or your software application window).

Brother Scanner Utility

The Brother Scanner Utility is used for configuring the scanner driver for resolutions greater than 1200dpi and for changing the paper size. If you want to set Legal size as the default size, change the setting using this utility. You must restart your PC for the new settings to take effect.

To run the utility:

You can run the utility by selecting the **Scanner Utility** located in the **Start/All Programs/Brother/MFL-Pro Suite MFC-8840D** menu.

🕏 Scanner Utility 📃 🗖 🔀
WIA Device Brother MFC-8840D
Max Resolution(dpi)
C 600x600 © 1200x1200
C 2400x2400 C 4800x4800 C 9600x9600
Maximum Scanning Size
A4/Letter C Legal
OK Cancel

If you scan the original at resolution of greater than 1200dpi, the file size maybe very large. Please make sure that you have sufficient memory and hard disk space for the size of the file you are trying to scan. If the memory & hard disk is not sufficient then your computer may freeze and you could lose your file.

13 - 15 HOW TO SCAN USING WINDOWS®

Using the scan key (For USB or Parallel interface cable users)

You can use // (Scan) on the control panel to scan documents into your word processing, graphics or E-mail applications or your computer folder. The advantage of using (Scan) is that you avoid the mouse clicks required to scan from your computer.



For Scan to E-mail, Scan to Image, Scan to OCR and Scan to File

Before you can use (Scan) on the control panel, you

must have connected the MFC to your Windows® based computer and loaded the appropriate Brother Drivers for your version of Windows[®]

When you are ready to use / (Scan), make sure the

Brother Control Center application is running on your computer. For details about how to configure the Brother Control Center buttons to launch the application of your choice using



(Scan), go to the appropriate chapter:

- For Windows[®] 98/98SE/Me/2000 Professional and Windows NT[®] WS 4.0, see Using the Brother Control Center on page 14-1.
- For Windows[®] XP, see Using the Windows[®]-Based Brother SmartUI Control Center on page 15-1.
- If your MFC is connected with both a USB and a Parallel cable, you need to select USB or Parallel as the destination in each step.

Scan to E-mail

You can either scan a black and white or color document into your E-mail application as a file attachment. You can change the

(Scan) configuration. (See Scan to E-mail on page 14-10 to

14-11.) (For Windows[®] XP: See *Hardware Section: Changing the Scan to button configuration* on page 15-5 to 15-11.)

- **1** Place the document face up in the ADF, or face down on the scanner glass.
- **2** Press (Scan).
- **3** Press **(Second Second Seco**

▲Scan	to	E-Mail
		Image
Scan	to	OCR
▼Scan	to	File
Select	: \ '	V & Set

Press Set.

The MFC will scan the document, create a file attachment, and launch your E-mail application, displaying the new message waiting to be addressed.

Scan to Image

You can scan a color picture into your graphics application for

viewing and editing. You can change the (Scan)

configuration. (See *Scan to Image* on page 14-14.) (For Windows[®] XP: See *Hardware Section: Changing the Scan to button configuration* on page 15-5 to 15-11.)

- **1** Place the document face up in the ADF, or face down on the scanner glass.
- 2 Press (Scan).
- 3 Press or to select Scan to Image.

▲Scan	to	E-Mail
Scan	to	Image
Scan		
▼Scan	to	File
Select	: ▲'	▼ & Set

Press Set.

The MFC will start the scanning process.

Scan to OCR

If your document is text, you can have it converted by ScanSoft[®] OmniPage[®] to an editable text file and then have the result displayed in your word processing application for viewing and editing. You can

change the (Scan) configuration. (See Scan to OCR (Word

Processor) on page 14-12 to 14-13.) (For Windows[®] XP: See *Hardware Section: Changing the Scan to button configuration* on page 15-5 to 15-11.)

- Place the document face up in the ADF, or face down on the scanner glass.
- 2 Press (Scan).
- 3 Press 🗢 or 🗢 to select Scan

to OCR.

▲Scan to E-Mail Scan to Image Scan to OCR ▼Scan to File Select ▲▼ & Set

Press Set.

The MFC will start the scanning process.

Scan to File

You can scan a black and white or a color document into your computer and save it as a file in the folder you choose. The file type and specific folder are based on the settings you have chosen in the Scan to File screen of the Brother MFL-Pro Control Center. (See *Scan to File* on page 14-8 to 14-9.) (For Windows[®] XP: See *Hardware Section: Changing the Scan to button configuration* on page 15-5 to 15-11.)

- **1** Place the document face up in the ADF, or face down on the scanner glass.
- 2 Press (Scan).

▲Scan	to	E-Mail	
Scan	to	Image	
Scan	to	OCR	
▼Scan	to	File	
Select	: •	V & Set	

Press Set.

The MFC will start the scanning process.

Using ScanSoft[®] PaperPort[®] and OmniPage[®] OCR

ScanSoft[®] PaperPort[®] for Brother is a document management application. You will use PaperPort[®] to view scanned documents.

PaperPort[®] has a sophisticated, yet easy-to-use, filing system that will help you organize your graphics and text documents. It allows you to combine or "stack" documents of different formats for printing, faxing or filing.

ScanSoft[®] PaperPort[®] can be accessed through the ScanSoft[®] PaperPort[®] program group.

See Documentation for ScanSoft® PaperPort® on the CD-ROM.



The complete ScanSoft[®] PaperPort[®] Users Guide, including ScanSoft[®] OmniPage[®] OCR, is in the documentation on the CD-ROM.

This chapter is only an introduction to the basic operations.

When you install MFL-Pro Suite, ScanSoft[®] PaperPort[®] for Brother and ScanSoft[®] OmniPage[®] OCR are installed with it automatically.



Viewing items

ScanSoft[®] PaperPort[®] provides several ways to view items:

Desktop View displays a thumbnail (a small graphic that represents each item in a Desktop or folder).

Items in the selected folder appear on the PaperPort[®] Desktop. You can see PaperPort[®] items (MAX files) and non-PaperPort[®] items (files created using other applications).

Non-PaperPort[®] items include an icon that indicates the application that was used to create the item; a non-PaperPort[®] item is represented by a small rectangular thumbnail and not an actual image.



Desktop View displays items as thumbnails

Page View displays a close-up of a single page and you can open a PaperPort[®] item by double-clicking on it.

As long as you have the appropriate application on your computer to display it, you can also double-click a non-PaperPort[®] item to open it.



Page View displays each item as a full page

Organizing your items in folders

PaperPort[®] has an easy-to-use filing system for organizing your items. The filing system consists of folders and items that you select to view in Desktop View. An item can be a PaperPort[®] item or a non-PaperPort[®] item:

- Folders are arranged in a "tree" structure in the Folder View. You use this section to select folders and view their items in Desktop View.
- You can simply drag and drop an item onto a folder. When the folder is highlighted, release the mouse button and the item is stored in that folder.
- Folders can be "nested"—that is, stored in other folders.
- When you double-click a folder, its items (both PaperPort[®] MAX files and non paperport[®] files) appear on the Desktop.
- You can also use Windows[®] Explorer to manage the folders and items shown in Desktop View.

 
Quick links to other applications

ScanSoft[®] PaperPort[®] automatically recognizes many other applications on your computer and creates a "working link" to them.

The Send To Bar at the bottom of the Desktop view shows icons of those linked applications.

To use a link, drag an item onto one of the icons to start the application represented by the icon. A typical use of the Send To Bar is to select an item and then fax it.

This sample Send To Bar shows several applications with links to $PaperPort^{\$}$.



If PaperPort[®] does not automatically recognize one of the applications on your computer, you can manually create a link using the **Add to Send To Bar...** command.

(See PaperPort[®] in the Documentation section on the CD-ROM for more information about creating new links.)

ScanSoft[®] OmniPage[®] OCR lets you convert image text into text you can edit

Software by:



ScanSoft[®] OmniPage[®] OCR is installed automatically with PaperPort[®] when you install MFL-Pro Suite on your computer.

ScanSoft[®] PaperPort[®] can quickly convert the text on a ScanSoft[®] PaperPort[®] item (which is really just a picture of the text) into text that you can edit with a word processing application.

PaperPort[®] uses the optical character recognition application ScanSoft[®] OmniPage[®], which comes with PaperPort[®]

__OR__

PaperPort[®] can use your prefered OCR application if it is already on your computer. You can convert the entire item, or by using the **Copy Text** command, you can select only a portion of the text to convert.

Dragging an item onto a word-processing link icon starts PaperPort[®]'s built-in OCR application, or you can use your own OCR application.

<u>e</u>	×	W	X	W			FTP	a	8
----------	---	---	---	---	--	--	-----	----------	---

You can Import items from other applications

In addition to scanning items, you can bring items into PaperPort[®] in a variety of ways and convert them to PaperPort[®] (MAX) files in several different ways:

- Print to the Desktop View from another application, such as Microsoft[®] Excel.
- Import files saved in other file formats, such as Windows[®] Bitmap (BMP) or Tag Image File Format (TIFF).

You can Export items in other formats

You can export or save PaperPort[®] items in several popular file formats, such as BMP, JPEG, TIFF, or self-viewing.

For example, to create a file for an Internet Web site, export it as a JPEG file. Web pages often use JPEG files for displaying images.

Exporting an image file

- 1 Select the Save As command from the File pull-down menu in the PaperPort[®] window. The Save 'XXXXX' as dialog box will be displayed.
- 2 Select the drive and directory where you want to store the file.
- **3** Enter the new file name and choose the file type or select a name from the File Name text box. (You can scroll through the Directories and File Name listing for prompting.)
- 4 Select the OK button to save your file, or Cancel to return to the PaperPort[®] without saving it.

How to Uninstall PaperPort[®] and ScanSoft[®] OmniPage[®]

For Windows[®] 98/98SE, and Windows $NT^{\mathbb{R}}$ Workstation 4.0 and Windows[®] Me:

Select Start, Settings, Control Panel, Add/Remove Programs and the Install/Uninstall tab.

Select Brother Extensions for Paperport[®] and click the Add/Remove button.

Select **PaperPort[®] 8.0 SE** from the list and click the **Add/Remove** button.

For Windows[®] 2000 Professional:

Select Start, Settings, Control Panel and Add/Remove Programs.

Select Brother Extensions for Paperport[®] and click the Change/Remove button.

Select PaperPort[®] 8.0 SE from the list and click the Change button.

For Windows® XP:

Select Start, Control Panel, Add or Remove Programs and the Change or Remove Programs icon.

Select PaperPort[®] 8.0 SE from the list and click the Change button.

14 Using the Brother Control Center

(For Windows $^{\ensuremath{\mathbb{R}}}$ 98/98SE/Me/2000 Professional and Windows $\ensuremath{\mathsf{NT}}^{\ensuremath{\mathbb{R}}}$ WS 4.0)

If you are using Windows[®] 2000 Professional or Windows NT[®] 4.0, we recommend that you are logged on with administrator rights.

Brother MFL-Pro Control Center

The Brother Control Center is a software utility that pops up on the PC screen whenever paper is put in the ADF of the MFC. This allows you to quickly and with very few mouse clicks, to access the most frequently used scanning applications. Using the Control Center stops the need to manually startup any specific applications.

The Brother Control Center provides three operations (Scan, Copy and PC-Fax):

- Scan directly to a file, E-mail, word processor or graphic application of your choice
- Сору
- PC Faxing using the Brother PC-FAX software



AutoLoad the Brother Control Center

The Control Center is loaded every time Windows[®] is started.

When the Control Center is loaded, the **Control Center** icon will appear on the task bar.

If you don't want the Control Center to load automatically, you can turn off AutoLoad.

If the **Control Center** icon does not appear on your task bar, you will have to launch the software.

Double-click the **Control Center** icon on the desktop or from the **Start** menu, select **Programs**, **ScanSoft® PaperPort® 8.0**, and then click **Brother SmartUI POPUP**.

How to turn off AutoLoad

1 Left-click the Control Center

icon and click **Show**.

2 When the Control Center window appears, left click the

Configuration Control Center button.

A dialog box will appear:

Pop-Up Setting
AutoLoad Pop-Up
Global Scanner Settings
Text for OCR
Resolution: 200x200
Color Mode: Black & White
Scan Size: д
Brightness:
Contrast:
Save Settings Restore Defaults
Ok

3 Uncheck the 'AutoLoad' Pop-Up check box.

Brother Control Center features

Auto Configuration

During installation the Control Center will check your system to set up the default applications for E-mail, word processing and the graphics viewer/editor.

For example, if you are using Outlook as your default E-mail application, the Control Center will create a link and a scanning application button for Outlook.

You can change a default application. Right-click the appropriate Control Center button to display *Configurations* and then click it. Select a different application.

For example, you can change a scan button from MS Word Pad

Microsoft WordPad	to MS Word	by changing the application
	or the Word Processor.	

Microsoft WordPad		
Scanner Setting		
Text for OCR		•
Modify Settings		
Word Processor		
Word Processor:	Microsoft WordPad	•
	Link Settings	
)K

Scan key operations

Scan to File—Allows you to scan directly to a file on your computer. You can change the file type and directory for the document you are scanning.

Scan to E-mail—Allows you scan a picture or text document directly into an E-mail application as a standard attachment. You can choose the file type and resolution for the attachment.

Scan to OCR (Word Processor)—Allows you to scan a text document, run ScanSoft[®] OmniPage[®] OCR, and insert the text document (not a graphic image) into a word processing file. You can choose the word processing application, such as Word Pad, MS Word, and so on.

Scan to Image—Allows you to scan an image directly into any graphic viewer/editor application. You can choose the graphics application, such as Microsoft Paint.

Copy operations

Copy—Allows you use the PC and any Windows[®] printer driver for enhanced copy operations.

You can scan the page on the Brother MFC and print the copies using any of the features of the Brother MFC printer driver.

-OR-

You can send the copy output to any standard Windows $^{\ensuremath{\text{e}}}$ printer driver that is on your PC.

PC-Fax operation

Send a Fax—Allows you scan a picture or text document and send the image as a fax from the PC using the Brother PC-FAX software.

Scanner settings for Scan, Copy and PC-Fax buttons

When the Pop-Up screen appears, you can access the Scanner Settings window.

Click the **Configuration** Control Center icon at the top right of the Brother Control Center screen —OB—

Click the Modify Settings button on any of the Configuration screens.



Global settings

AutoLoad Pop-Up—Select this checkbox if you want Brother MFL Control Center to load when you turn on your computer.

Setting up the scanner configurations

The Pop-Up application stores eight different scanning modes. Each time you scan a document, you can choose the most appropriate scanning mode from the following:

Faxing, Filing and Copying Text for OCR Photos Photos (High Quality) Photos (Quick Scan) Custom Draft Copy Fine Copy

Each mode has its own set of stored settings. You can keep the factory default settings or change them at any time:

Resolution—From the pull-down list, select the scanning resolution you most often use.

Color Mode—From the pull-down list, select the color settings you most often use.

Scan Size—From the pull-down list, select the scan size you most often use.

Brightness—Slide the adjuster from 0% to 100%

Contrast—Slide the adjuster from 0% to 100%

Click **OK** to save your changes. If you make a mistake or want the original default setting, just click the **Restore Defaults** button when the scanning mode is displayed.

Perform an operation from the Control Center screen

If you see this screen it means you left-clicked a button in the Control Center window without first placing a document in the ADF.



Place the document in the MFC's ADF, and then click **OK** to go to the Control Center screen.

 $\operatorname{\rm pol}$ If you want to scan the document from the scanner glass, please

use (Scan) on the control panel of the MFC.

Scan to File

Scan To File
Photos (High Quality)
Destination Folder
C PaperPort Folder C Other Folder
File: PaperPort Image Item (*.max)
Folder: C:\My Documents\My PaperPort Documents
Browse

To access Scan to File Configurations screen

- **1** Place the document face up in the ADF. The Brother Control Center screen will pop up.
- 2 Right-click Scan to File and click on *Configuration*. Click the Modify Settings button to view the configuration screen of the Control Center.
- *3* To save your settings, click **OK**.

-OR-

To go back to the factory default settings, click the **Restore Defaults** button.

Scanner settings

From the pull-down list, select the scanning mode that is appropriate for the type of file: Faxing, Filing and Copying; Text for OCR; Photos; Photos (High Quality); Photos (Quick Scan); Custom; Draft Copy or Fine Copy.

To change any of the settings for the mode, click Modify Settings.

Destination folder

PaperPort[®] Folder—Select this checkbox to scan the document into your PaperPort[®] folder.

Other Folder—Select this checkbox, to scan the document as another file type or to store it in another directory/folder.

File—If you selected Other folder from the pull-down list, select the type of file:

PaperPort[®] Image Item (*.max) PaperPort[®] Self-Viewing (*.exe) PaperPort[®] Browser-Viewable (*.htm) PaperPort[®] 5.0 Image Item (*.max) PaperPort[®] 4.0 Image Item (*.max) PaperPort[®] 3.0 Image Item (*.max) Windows Bitmap (*bmp) PC Paintbrush (*.pcx) PCX Multi-page (*.dcx) JPEG (*.jpg) TIFF-Uncompressed (*.tif) TIFF-Group 4 (*.tif) TIFF-Class F (*.tif) TIFF Multi-page - Uncompressed (*.tif) TIFF Multi-page - Group 4 (*.tif) TIFF Multi-page - Class F (*.tif) Portable Network Graphics (*.png) FlashPix (*.fpx)

To Search your system for the directory and folder you want, click the **Browse** button. Click **OK** to save your settings.

Scan to E-mail

Outlook Express	
Scanner Setting	
FAXing, Filing and Copy	ing 💌
Modify Settings	
EMail Application	
EMail Application:	Outlook Express
ĺ	EMail Settings
	ОК

To access Scan to E-mail Configurations screen

- **1** Place the document face up in the ADF. The Brother Control Center screen will pop up.
- **2** Right-click the E-mail application button and click on *Configuration*. Click the **Modify Settings** button to view the configuration screen of the **Control Center**.
- *3* To save your settings, click **OK**.

-OR-

To go back to the factory default settings, click the **Restore Defaults** button.

Scanner settings

From the pull-down list, select the scanning mode that is appropriate for the type of file: Faxing, Filing and Copying; Text for OCR; Photos; Photos (High Quality); Photos (Quick Scan); Custom; Draft Copy or Fine Copy.

To change any of the settings for this mode, click **Modify Settings**.

E-mail application

E-mail Application—From the pull-down list, select your E-mail application.

E-mail Settings—Click the E-Mail Settings button to set up links.

The Send To Options window will appear:



Send to Options

Convert attachments to specified file type—Converts items to the type in the **File type** box. Clear this check box to keep files in their source format; for example, to keep Word documents in the .doc format and JPEG images in the .jpg format.

All documents and image items—Converts all items regardless of the program in which the item was created; for example, converts all Word (doc) files and JPEG (.jpg) files to the file type.

PaperPort[®] image items (MAX) only—Converts only PaperPort[®] image items (.max) files. PaperPort[®] does not convert other file types, such as JPEG images and Word documents.

File type—Identifies the format in which to convert items; for example, JPEG or TIFF.

Combine items into single file, if possible—Combines all selected items into a single file that contains multiple pages. This option is available only when the file type supports multiple pages, such as multi-page TIFF.

Scan to OCR (Word Processor)

Microsoft WordPad		
Scanner Setting		
Text for OCR		•
Modify Settings		
Word Processor		
Word Processor:	Microsoft WordPad	•
	Link Settings	
-		
		OK

To access Scan to OCR Configurations screen

- **1** Place the document face up in the ADF. The Brother Control Center screen will pop up.
- **2** Right-click the word processor application button and click on *Configuration*. Click the **Modify Settings** button to view the configuration screen of the **Control Center**.
- *3* To save your settings, click **OK**.

__OR__

To go back to the factory default settings, click the **Restore Defaults** button.

Scanner settings

From the pull-down list, select the scanning mode that is appropriate for the type of file: Faxing, Filing and Copying; Text for OCR; Photos; Photos (High Quality); Photos (Quick Scan); Custom; Draft Copy or Fine Copy.

To change any of the settings for this mode, click **Modify Settings**.

Word Processor

Word Processor—From the pull-down list, select the word processor you want to use.

Click the **Link Settings** button to display the screen to set up the document format you want to use and identify the OCR program:

Send To Options	- Microsoft WordPad	×
Program Links		
	Send Image Item As <u>File type:</u> Windows Write,wri	
	Convert Image to Text with QCR: PaperPort OCR Settings	
	☑ Include icon on Send To bar	
	OK Cancel Help	

File type—From the pull-down list, select the file type you want to use for your word processor or text documents.

OCR—Identify the OCR program to use to convert scanned document images to editable documents. This option is available only when you have an OCR program other than the one provided with PaperPort[®]. (PaperPort[®] 8.0 SE uses the same OCR engine that is in ScanSoft[®]'s OmniPage[®] Pro Millennium product.)

Click the **Settings** button to choose how the OCR application will read the pages that you scan into your word processor application.

The OCR Settings window will appear:

OCR Settings	×
☐ Auto orient page ✓ Single column output	OK)
Jengle column output	Cancel

Select your setting and click OK.

- Auto orient page—Click this checkbox to automatically rotate pages so that the text is upright.
- Single column output—Click this checkbox if you want to remove columns from multi-column documents so that converted text appears in a one-column format.

Scan to Image

Microsoft Paint	
Scanner Setting	
Photos (High Quality)	•
Modify Settings	
Target Application	
Application:	Microsoft Paint
	Custom Link Settings
	[K

To access Scan to Image Configurations screen

- **1** Place the document face up in the ADF. The Brother Control Center screen will pop up.
- **2** Right-click the graphic application button and click on *Configuration*. Click the **Modify Settings** button to view the configuration screen of the **Control Center**.
- **3** To save your settings, click **OK**.

__OR__

To go back to the factory default settings, click the **Restore Defaults** button.

Scanner Settings

From the pull-down list, select the scanning mode that is appropriate for the type of file: Faxing, Filing and Copying; Text for OCR; Photos; Photos (High Quality); Photos (Quick Scan); Custom; Draft Copy or Fine Copy.

To change any of the settings for this mode, click **Modify Settings**.

Target Application

Application—From the pull-down list, select the application you want to add to this Pop-Up screen.

Click the **Custom Link Settings** button to set up links for your user-defined application.

Сору

Copy - Scanner Setting		
Draft Copy		•
Modify Settings		_
Copy Settings Brother MFC-8840D Copies: 1	Copy Options	
		Ok

To access the Copy Configurations screen

- **1** Place the document face up in the ADF. The Brother Control Center screen will pop up.
- 2 Right-click the Copy and click on *Configuration*. Click the **Modify Settings** button to view the configuration screen of the **Control Center**.
- **3** To save your settings, click **OK**.

__OR__

To go back to the factory default settings, click the **Restore Defaults** button.

Scanner settings

From the pull-down list, select the scanning mode that is appropriate for the type of file: **Draft Copy** or **Fine Copy**.

To change any of the settings for this mode, click **Modify Settings**.

Number of copies

Copies—Enter the number of copies you want to print. To change the copy options, click the **Copy Options** button. Click **OK** to save your Copy settings.

Send a fax

Send a FAX
Scanner Setting
FAXing, Filing and Copying
Modify Settings
FAX Settings
Brother PC-FAX
FAX Resolution: Fine (200x200)
FAX Options
l]
ОК

To access the Send a fax Configurations screen

- **1** Place the document face up in the ADF. The Brother Control Center screen will pop up.
- 2 Right-click the Send a fax and click on *Configuration*. Click the Modify Settings button to view the configuration screen of the Control Center.
- *3* To save your settings, click **OK**.

---OR---

To go back to the factory default settings, click the **Restore Defaults** button.

Scanner settings

From the pull-down list, select the scanning mode that is appropriate for the type of file: Faxing, Filing and Copying; Text for OCR; Photos; Photos (High Quality); Photos (Quick Scan); Custom; Draft Copy or Fine Copy.

To change any of the settings for this mode, click Modify Settings.

PC-FAX Settings

Brother PC-Fax

FAX Resolution—Fine (200 × 200)

1 To change the fax options, click the FAX Options button. The Brother PC-FAX Properties screen appears: For Windows[®] 98/98SE/Me and Windows NT[®] WS 4.0

Brother PC-FAX on BRMFC: Pr	operties	? X
Device Options		
Letter 8 ½ x 11 in	Paper Size Letter 8 % x 11 in Orientation © Potrait © Landicope Resolution © 200x200 dpi © 200x100 dpi	R
	Restore Defaults Abou	ut
OK	Cancel <u>Apply</u>	Help

For Windows[®] 2000 Professional

Brother PC-FAX P	roperties	<u>? ×</u>
Basic		
	Paper Size	Letter
1	Orientation	Portrait Landscape
Letter 8 ½ x 11 in	Resolution	 200x200 dpi 200x100 dpi
		Default About
		OK Cancel Help

2 Select the Paper Size and Orientation (Portrait or Landscape) and click **OK**.

To go back to the factory default settings, click the **Restore Defaults** or **Default** button.

15 Using the Windows[®]-Based Brother SmartUI Control Center

(For Windows[®] XP)

Brother SmartUI Control Center

The Brother Control Center is a software utility that allows you to quite easily, with very few mouse clicks, access the most frequently used scanning applications. Using the Control Center eliminates the need to manually launch the specific applications and allows you to scan a document directly to a folder on your computer. The Brother Control Center provides four categories of operations:

- **1** Scan directly to a file, E-mail, word processor or graphics application of your choice.
- **2** Enhanced copy functions, such as Four/Two or One-on-One Copying.
- **3** PC Faxing using the Brother PC-Fax software.
- **4** Custom buttons allow you to configure a button to meet your own application requirements.



In the Task Tray right-click on the Control Center 🍇 icon and select **Show** to have access to the Brother SmartUI Control Center window.

AutoLoad the Brother Control Center

The Control Center is initially configured to automatically load each time Windows[®] is started. When the Control Center is loaded the Control Center is icon will appear in the task bar. If you don't want the Control Center to load automatically, you can turn AutoLoad off.

How to turn off Auto Load

- 1 Right-click the Control Center 🖏 icon in the Task Tray and select **Show**.
- 2 The main SmartUI Control Center window appears. Please look at the bottom of the window for a check box labelled "AutoLoad Pop-up".



3 Uncheck the AutoLoad Pop-Up option to prevent the SmartUI from automatically loading every time Windows[®] is started.

Brother Control Center features

The SmartUI control center gives you the ability to configure the hardware **Scan** key on your MFC such as "Scan to File". The "Scan to File" feature allows you to scan a document directly to your hard disk and choose the file format and destination folder without having to run any other applications. Select which section you want by clicking on the appropriate tab.



Auto Configuration

During the installation process the Control Center checks your system to determine the default applications for E-mail, word processing and graphics viewer/editor.

For example, if you are using Outlook as your default E-mail application, the Control Center automatically will create a link and a scanning application button for Outlook.

You can change the default application by right-clicking on any of the scan buttons in the Control Center and then clicking *Configuration*. Select the Configuration tab and from the Application pull down menu select a different application. For example, you can change the E-mail scan button from Outlook Express to Outlook by changing the application that is listed.

Scan to OCR	×
Scan Action Configuration Scan Settings	
Application: Microsoft VordPad	
Link Preferences	
Format: PaperPort mage Item (".max)	
Folder:	
@ PaperPort	
C Other Folder	
F:Oocuments and Settings\CS Group\My Documents\My P	
Browse	
OK Car	.cel

Hardware Section: Changing the Scan to button configuration

When the SmartUI Control Center is displayed, you can access the

Hardware Section window to reconfigure the (Scan) button

on your MFC. Click the Hardware Section tab at the top left of the SmartUI Control Center screen. (See Using the scan key (For USB or Parallel interface cable users) on page 13-16.)

SmartUI	X
Hardware Section Software Section	
Hardware Buttons	<u>E</u> xit
Scan To E-mail	<u>U</u> ser Guide
	<u>R</u> estore
Scan To File	
Scan To Image	
Scan To OCR	
At your side.	
brother	
Brother MFC-8840D	

Scan to E-mail

To configure the Scan to E-mail feature left-click on the **Scan to E-mail** button and the following screen will appear. You have the ability to change the configuration that includes the destination E-mail application, attachment file and the scanner settings.

can to Email	
Scan Action Conliguration Scan Settings	
Application: Cutlook Express	
Link Preferences	
Fcrmal: FaperPor: Image Item (*.max)	
Folder:	
C PapePor	
C Other Folder	
F:\Documents and Settings\CS_Sroup\My_Documents\My_P	
Browse	
OK Car	cel

To change the destination E-mail application you use the Application pull down list to select the compatible E-mail application, which is installed on your system.

If you wish to change the attachment file type click on the **Link Preferences** button to display a list of file types.

Scan to File

SmartUJ	
Hardware Section Software Section	
Hardware Buttons	<u>E</u> xit
Scan To E-mail	<u>U</u> ser Guide
	<u>R</u> estore
Scan To File	
Scan To Image	
Scan to mage	
Scan To OCR	
brother	
Brother MFC-8840D	

To configure the Scan to File feature, left click on the Scan to File button and the following screen will appear.

Scan to File	×
Scan Action Configuration Scan Settings	
Link Preferences Eormat: PaperPort Image Item (".max)	
Folger: © PaperPort © <u>O</u> ther Folder	
C:\Documents and Settings\Administrator\My Documents\M	
Browse	
OK Can	icel

Select the file type for the saved image by selecting from the Format pull down list. You can save the file to the default PaperPort[®] folder so the file appears in PaperPort[®] or you can select another folder/directory by clicking the Browse button.

Scan to Image

SmartUI	\mathbf{X}
Hardware Section Software Section	
Hardware Buttons	<u>E</u> xit
Scan To E-mail	<u>U</u> ser Guide
	<u>R</u> estore
Scan To File	
Scan To Image	
Scan to mage	
Scan To OCR	
iii At your sidé.	
brother	
Ologioi.	
Brother MFC-8840D	
Druttlet MFC-004UP	

To configure the Scan to Image feature left-click on the **Scan to Image** button and the following screen will appear. You can change the configuration, which includes the destination image format or document application.

Scan Action Configuration Scan Settings Application: Microsoft Paint Microsoft Paint Microsoft Paint Pomat: PaperFort Polder: PaperFort © Differ Folder F:\Documents and Settings\CS Group\My Documents\My P Browse Browse	ican to Image		
Microsoft Paint Microsoft WodPad Notepad Quitook Express PaperPort Image Item ("max) Folder: © PaperPort © Other Folder F\Documents and Settings\CS Group\My Documents\My P	Scan Action C	Configuration Scan Settings	
C Other Folder F:\Documents and Settings\CS Group\My Documents\My P	Format:	Microsoft Plaint Microsoft VordPad Notepad Outlook Express PaperPort Image Item ("max)	
Browse	C Other	Folder its and Settings\CS Group\My Documents\My P	
		Browse	
		OK Ca	ncel

To change the default settings of the scan, click on the **Scan Settings** tab.

Scan to Ima	ge 🔀
Scan Action	Configuration Scan Settings
<u>C</u> olor Mode:	24-bit Color
<u>R</u> esolution:	200
Paper Size:	A4 - 210 x 297 mm
<u>B</u> rightness	J Darken Lighten
C <u>o</u> ntrast	· · · · · · · · · · · · · · · · · · ·
Restore De	faults
	OK Cancel

You can set the Color Mode to Black & White, 8-bit Gray or 24-bit Color.

The resolution can be changed from 100 to 1200 dpi. You can define the size of the paper you're using, and you can adjust the brightness and contrast of the image before scanning.

Scan to OCR

SmartUJ	×
Hardware Section Software Section	
Hardware Buttons	<u>E</u> xit
Scan To E-mail	<u>U</u> ser Guide
	<u>R</u> estore
Scan To File	
Scan To Image	
Scan To OCR	
brother	
UUU ICI.	
Brother MFC-8840D	

To configure the Scan to OCR feature left-click on the **Scan to OCR** button and the following screen will appear. You can change the configuration, which includes the destination applications.

	Microsoft VordPad
	Link Preferences
Format:	PaperPort mage Item (*.max)
Folder:	
Paper	
C Other	Folder
F:Vocumen	ts and Settings\CS Group\My Documents\My P
	Browse

You have the option to send your scan as a different file type. You can select the application from the File Type window according to your needs.

Send To Options	- Microsoft WordPad	X
Program Links		
	Send Image Item As File type: Windows Write,wri ISO Text.txt ASCII smart.txt Convert Ima ASCII std.txt Excels 0.uts OCR: Excels 0.uts HTML.txtm Settings	
	Include icon on Send To bar	
	OK Cancel Hel;	,

You have the option to choose your OCR setting from **Single column output** to **Auto orient page**.

OK
Cancel

Software Section

The Software Section contains four groups of scan to buttons. Each section has a number of different buttons which are predefined for the most frequently used applications. The **Scan** section contains four buttons for Scan to File, Scan to E-mail, Scan to Word Processor and Scan to Image applications. The **Copy** section contains four buttons for N to 1 copying. The **Fax** section button is for sending faxes using the Brother PC-FAX application and the **Custom** section contains three buttons with which you can assign your own function.



Scan

*1 *Scan to File* —enables you to scan directly to a disk file. You can change the file type and destination directory, as needed.

*2 *Scan to E-mail (Default: Outlook Express)* —enables you to scan a page or document directly into an E-mail application as a standard attachment. You have the option of selecting the file type and resolution for the attachment.

*3 *Scan to Word Processor (Default: MS WordPad)* —enables you to scan a page or document, automatically run ScanSoft[®] OmniPage[®] OCR and insert the text (not graphic image) into a word processing program. You have the option of selecting the destination word processing program, such as WordPad, MS Word, Word Perfect or whichever word processing program is installed on your computer.

*4 Scan to Graphic Application (Default: MS Paint) —enables you to scan a page directly into any graphic viewer/editor application. You can select the destination application, such as MS Paint, Corel PhotoPaint, Adobe PhotoShop, or any kind of image editor application you already have installed on your computer.

Сору

Copy (Copy one to one)—allows you to use the PC and any Windows[®] printer driver for enhanced copy operations. You can scan the page on the MFC and print the copies using any of the features of the MFC printer driver—**OR**—you can direct the copy output to any standard Windows[®] printer driver installed on the PC including network printers.

Four/Two to One Copy—enables you to use the Four/Two on One-page features of the Brother printer driver to copy four/two document pages onto a single output page.

Fax

Send a Fax (Brother PC-FAX)—enables you to scan a page or document and automatically send the image as a fax from the PC using the Brother PC-FAX software.

Custom

Scan to File—These buttons have been pre-programmed for the Scan to File feature. You can change the configuration of each of these buttons to meet your specific requirements by right-clicking on a button and following the configuration menus.

Scan to File

The Scan to File button allows you to scan an image and save it in a specific file type to any directory on your hard disk. This allows you to easily archive your paper documents. To configure the file type and save to directory right-click on the Scan to File button and click Configuration.

The Scan Action tab is set to File and should not be changed.

Scan to File 🛛 🗙
Scan Action Configuration Scan Settings Scan Type C Application C Elle C QCR C E-mail
OK Cancel

To change the configuration click on the Configuration tab.


Scan to File	
Scan Action Configuration Scan Settings	
Application: Microsoft WordPad	
Eormat: PaperPort Image Item (".max)	
Folder	
PaperPort	
O Other Folder	
C:\Documents and Settings\inbox\My Documents\My Paperf	
Browse	
OKCa	incel

Select the file type for the saved image by selecting from the Format pull down list. You can save the file to the default PaperPort[®] folder so the file appears in PaperPort[®], or you can select another folder/directory by clicking the Browse button.

You can change the default setting by selecting the Other Folder button and then clicking Browse and selecting the folder in which you wish to save your files.

Scan to E-mail


The Scan To E-mail is automatically configured to your default E-mail application. To change the default E-mail application or attachment file type, right-click on the E-mail button and select "Configuration". The Scan Action tab is set to E-mail and should not be changed.

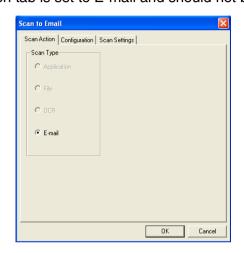

To change the E-mail application click on the Configuration tab. From the Application pull down list, select your preferred E-mail application.

ican to Email	×
Scan Action Conliguration Scan Settings	
Application: Cutlook Express	
Format FaperPor: Image Item (".max)	
C Other Folder F:\Documents and Settings\CS Group\My Documents\M/ P	
Browse	
OK Cance	el

To change the file type of the attachment click the **Link Preferences** button to set up links. Check the **Convert attachments to specified file type** box and then select the appropriate file type from the pull down list.

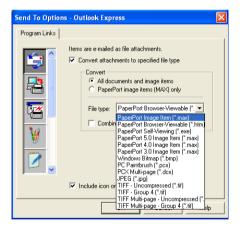

File attachments

Items are mailed as file attachments using the file type you have selected.

Convert attachments to specified file type—Click this check box if you want to change the file type of attachments.

All documents and image items—Click this check box if you want to convert all scanned images to the same file type.

PaperPort[®] image items (MAX) only—Click this check box if you want to convert only attachments that are PaperPort[®] MAX files.

Combine items into single file, if possible—Click this check box if you want to combine all the attachments into one file. With this box unchecked each scanned page will be saved in its own individual file.

File type—Select from the pull-down list the type of file you want the scanned images to be saved in.

PaperPort[®] Image Item (*.max) PaperPort[®] Browser-Viewable (*.htm) PaperPort[®] Self Viewing (*.exe) PaperPort[®] 5.0 Image Item (*.max) PaperPort[®] 4.0 Image Item (*.max) PaperPort[®] 3.0 Image Item (*.max) Windows Bitmap (*.bmp) PC Paintbrush (*.pcx) PCX Multi-page (*.dcx) JPEG (*.jpg) TIFF-Uncompressed (*.tif) TIFF Group 4 (*.tif) Multi-Page - Uncompressed (*.tif) Multi-Page - Group 4 (*.tif)

Scanner settings

You have the ability to change the scanner settings used to create the file attachments. Click on the Scan Settings tab and select the appropriate settings.

Scan to E-mail	
Scan Action Configuration Scan Settings	
Color Mode: Black & White	<u> </u>
Resolution: 200	<u> </u>
Paper Size: A4 - 210 x 297 mm	•
<u>B</u> rightness	, , , , , , , , , , , , , , , , , , ,
Contrast/	
Restore Defaults	
	OK Cancel

Scan to OCR (Word Processing program)

Scan to OCR converts the graphic page image data to text which can be edited by any word processor program. You can change the default word processor program (example: Word Pad instead of Word) and file type. You can also choose another OCR software package besides the OmniPage[®] OCR which is built into PaperPort[®].

To configure Scan to OCR right-click on the WordPad button and select Configuration. The Scan Action tab is set to OCR and should not be changed.

Scan to OCR
Scan Action Configuration Scan Settings
Scan Type
C Application
O File
○ OCR
C E-mail
OK Cancel

To change the word processing application click on the Configuration Tab. You can select the destination word processing application from the Application pull down list.

Scan to OCR	×
Scan Action Configuration Scan Settings	
Application: Microsoft VordPad	
Famat: PaperPort mage Item (".max)	
© Poper:	
F:Oocuments and Settings\CS Group\My Documents\My P Browse	
OK Cance	*

To change the program link preferences click the Link Preferences button.

Send To Option	s - Microsoft WordPad	×
Program Links		
	Send Image Item As File type: Windows Write,wri	
	Convert Image to Text with OCR: PaperPort OCR	
	Settings	
<u>₩</u>		
	✓ Include icon on Send To bar	
	OK Cancel Help	

File Type—From the pull-down list, select the file format you want to use for documents.

OCR—Select the OCR application from the OCR pull down list.

Scan to Graphics application (example: Microsoft Paint)

The Scan to Graphics Application allows you to scan an image so you can edit the image. To change the default graphics application right-click on the button and select Configuration.

The Scan Action tab is set to Application and should not be changed.


Scan to Application	X
Scan to Application Scan Action Scan Type	×
ок	Cancel

To change the configuration of the destination application click on the Configuration Tab.

Scan to Application	X
Scan Action Configuration Scan Settings	
Application: Microsoft Paint	
Format: PaperPort Image Item (**.max)	
Folder © PaperPort © Other Folder	
H\Documents and Settings\Administrator.IDEVD023.001\My Doc	
OK Can	el l

To change the destination application select the appropriate application from the Application pull down list.

To change the other configuration options click the Link Preferences button.

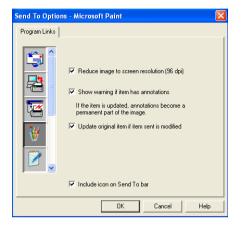

This option enables you to reduce image to screen resolution (96dpi), show a warning if the item has annotations, update the original item if sent item is modified, if needed.

Сору

The copy buttons can be customized to allow you to take advantage of the features built into the Brother printer drivers to do advanced copy functions such as n-in-1 printing.

The Copy buttons are automatically linked to the default Windows[®] printer driver. You can set any printer as the default printer including non-Brother printers. Before you can use the Copy buttons you must first configure the printer driver by right-clicking on a Copy button and selecting Configuration.

Copy one to	one 🗙
Scan Setting:	s
Color Mode:	Biblit Gray
Resolution:	100
Paper Size:	A4 - 210 x 297 mm
Brightness	Darken
Contrast	· · · · · · · · · · · · · · · · · · ·
Restore Del	faults Copy options
	OK Cancel

In the Scan Settings window you can select the color mode, resolution, paper size, brightness and contrast settings to be used.

To finish the Copy button configuration you must set the printer driver. Click the Copy options button to display the printer driver settings.

The copy options screen will vary depending upon which Brother model you purchased.

💩 Brother MFC-8840D Printing F	Properties	? 🛛
Basic Advanced Support		
Letter 8½×11 in	Paper Size	Letter
1	Multiple Page	Normal
	Border Line	
	Orientation	 Portrait
(COM)	Copies	Landscape
	<u>M</u> edia Type	Plain Paper 🗸
	Paper Source	
	<u>F</u> irst Page	Auto Select
	Other Pages	Same as First page 🗸 🗸
		Default About
		OK Cancel Help

Select the number of Pages Per Sheet from the Scaling selections. As an example to configure the section Copy button to copy two pages to one you must select 2 in 1.

You must configure each of the copy buttons before they can be used.

💩 Brother MFC-8840D Printing Pro	operties	? 🛛
Basic Advanced Support		
A4 210 x 297 mm	Paper Size	A4 · 🗸
1 2 ^{210 x 297 mm}	Multiple Page	2 in 1 💌
	Border Line	v
	Orientation	Optrait
12m	Copies	O Landscape
		1 🖨 🗆 Collate
1 control	<u>M</u> edia Type	Plain Paper 👻
	Paper Source	
	<u>F</u> irst Page	Auto Select 💌
	Other Pages	Same as First page 🛛 👻
		Default About
		OK Cancel Help

Fax setting (PC-Fax using the Brother Fax Driver)

The MFC includes a PC-Fax driver, which allows any Windows[®] Application to send a Fax as simply as printing a document. The Brother SmartUI automatically configures the Fax button to use the Brother PC-FAX driver no user configuration is required.

The Scan Action tab is set to Application and should not be changed.

Scan to Fax	×
Scan Action Configuration Scan Settings	
Scan Type	
C <u>Fi</u> le	
C <u>D</u> CR	
· <u>o</u> un	
C E-mail	
OK Cancel	

To change the PC-FAX settings click the Link Preferences button, found in the Configuration tab.

Link Preferences Format: PaperPort Teger C. DeperPort C. DeperPort C. DeperPort C. DeperPort C. Decuments and Settings \Administrator\My Documents\M	Application: B	rother PC-FAX
EaperPort Differ Folder C.\Documents and Settings\Administrator\My Documenta\M	Eormat:	aperPort Image Item (*.max)
	EaperPort	
Diomse	C:\Documents a	and Settings\Administrator\My Documents\M Browse


FAX settings

Brother PC-FAX



To change the driver settings, click on the Setup button.

Select the *Paper Size*, *Paper Source*. If you need more customized setup, click on the Options button.

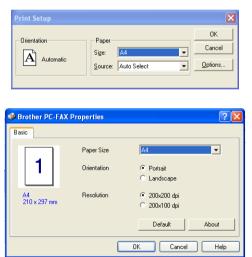

Select the *Paper Size*, Orientation (Portrait or Landscape) and Resolution (200x200 dpi or 200x100 dpi), and click **OK**. To return to the factory default settings, click the **Default** button.

Custom: User-defined buttons

There are up to three Custom buttons on the Brother SmartUI Control Center. (NOTE: The number of Custom buttons depends on which Brother model you purchased.) You can set your own preferences and configuration to fit your required application.

To configure a Custom Button right click on the button and then click Configuration. The configuration window will appear. You have four function choices Application, File, OCR and E-mail.

Application: This setting will link the Control Panel button to any button which appears on the PaperPort[®] Send to Bar. Please see the PaperPort[®] help file for more information regarding PaperPort[®] compatible applications.

File: This setting allows you to save a scanned image to any directory on local or network hard disk. You can also select the file format to be used.

OCR: Scanned documents will be converted to editable text files. If you have a third party OCR software package installed on your PC you can select it. The default OCR software is OmniPage[®] which is built into PaperPort[®] 8.0 SE. You can also select the destination word processor and file format for the editable text.

E-mail: Scanned images will be attached to an E-mail message. You can choose which E-mail package to use if you have more than one installed on your system. You can also select the file type for the attachment and create a quick send list of E-mail addresses chosen from your default E-mail address book.

Customizing a user-defined button

To configure a Custom button right-click on the button and then click Configuration. Please follow the following guide lines for Custom Button configuration.

1. Select the Scan Action

Select the type of scan by clicking the appropriate button.

Custom button1	
Scan Action Configuration Scan Settings	
<u>S</u> can Type	
C Application	
© Ele	
C <u>o</u> cr	
⊂ <u>E</u> -mail	
ОК	Cancel

2. Select Configuration for the Scan Type.

To configure the scan operation click on the Configuration Tab. Depending upon which Scan Type button you selected you will see a different Configuration Tab list of settings.

Application:

Select the destination application program from the pull down list.

Custom button1	×
Scan Action Configuration Scan Settings	
Application: Microsoft WordPad	
Link Preferences	
Eormat: PaperPort Image Item (*.max)	
Folder:	
C Deher Port	
C:\Documents and Settings\Dwner\My Documents\My Pape	
Browse	
OK Canc	el

Click on Link Preferences to set the Send to options. You can select the application from the scroll menu on the left.



File:

Select the file format from the Format pull down list. You can either send the file to the default PaperPort[®] directory or select your own destination directory by selecting Other Folder. Use the Browse button to select the destination directory.

Scan to File
Scan Action Configuration Scan Settings
Application: Microsoft WordPad
Eormat PaperPort Image Item (".max)
C Dither Folder
C:\Documents and Settings\inbox\My Documents\My Paperf
Browse
OKCancel

OCR:

Select the destination word processing application program from the pull down list.

Custom button1
Scan Action Configuration Scan Settings
Application: Microsoft WordPad
Eormat: PaperPort Image Item (".max)
Folder:
Dither Folder C:\Documents and Settings\Owner\My Documents\My Pape
OK Cancel

Click on Link Preferences and select the destination Application from the scroll menu on the left. Select the File Type from the File Type pull down list. You can also choose another OCR application from the OCR pull down list if another is installed on you system. Scansoft[®] OmniPage[®] is installed as part of the PaperPort[®] 8.0 SE application.


Send To Option	s - Microsoft WordPad	×	
Program Links			
	Send Image Item As File type: Windows Write,wri		
	Convert Image to Text with OCR: PaperPort OCR		
	Settings		
<u>₩</u>			
🔽 Include icon on Send To bar			
	OK Cancel Help		

E-mail:

Select the destination E-mail application program from the pull down list.

<u>Applicatio</u>	n: Outlook Express
	Link Preferences
<u>F</u> ormat:	PaperPort Image Item (*.max)
Folder:	
© Eap	
C Othe	er Folder ents and Settings\Owner\My Documents\My Pape
C. Obcum	
	Browse

Click on the **Link Preferences** button to configure the Send To E-mail options. You can select the File type and Quick Send E-mail address list.

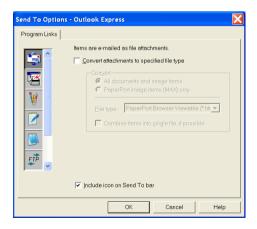

3. Select Scan Settings.

You can select the scanner settings from each of the Scan Type options for the Custom buttons. You have the option to select Color Mode, Resolution, Paper Size and Brightness and Contrast settings.

Custom button1	×			
Scan Action Configuration Scan Settings				
Color Mode: 24-bit Color	3			
Resolution: 200	.			
Paper Size: A4 - 210 x 297 mm				
<u>B</u> rightness ∮ Darken Lighten	,			
Contrast / / /				
Restore Defaults				
OKCanc	el			



MFC Remote Setup

The MFC Remote Setup application lets you set up your MFC by using the ease and speed of programming on your PC. When you access this application, the settings on your MFC will be downloaded to your PC and displayed on your computer screen. If you change the settings, you can upload them directly to the MFC.

You can't use the MFC Remote Setup application if your MFC is only connected to a Network with the optional Network LAN board (NC-9100h). (See Web Based Management in the NC-9100h User's Guide.)

🛃 Brother MFC Remote Setup Pro	gram		X
HFC-88400 General Setup Face Setup Send Setup Send Set Duck-Dail Remote Fac Opt Copy Initial Setup	Setup Receive Ring Delay F/T Ring Time Fax Detect Remote Code Deact Cod Deact Cod Nato Reduction Memory Receive Print Density Duples	2 _ 30 Sec _ C n C Off de: F51 de: F51 C 0n C Off C 0n C Off	
Export Import	Print	0K Cancel	Apply

OK button

When you click **OK**, the process of uploading the data to the MFC begins. The MFC Remote Setup program is closed if an error message is displayed, enter the correct data again and then click **OK**.

Cancel button

The **Cancel** button clears your changes and exits the MFC Remote Setup application without uploading any data to the MFC.

Apply button

The Apply button uploads the data to the MFC, but stays in the Remote Setup application so you can make more changes.

Print button

The **Print** button prints the selected items on the MFC. You cannot print the MFC Remote Setup changes until you click the Apply button to upload the new data to the MFC. Then you can click the **Print** button to get an up-to-date printout.

Export button

Click the **Export** button to save your current settings to a file.

Import button

Click the **Import** button to read the settings from your saved file into the MFC Remote Setup screen.



You can use the Export and Import buttons to save and use several sets of settings for your MFC.

17 Using Brother PC-FAX software

(For Windows®)

PC-FAX sending

The Brother PC-FAX feature lets you send a file from your PC.

You can create a file in any application on your PC, and then send it as a PC-FAX. You can even attach a cover page note.

All you have to do is set up the receiving parties as Members or Groups in your PC-FAX Address Book. Then you can use the Address Book Search feature to quickly find them to address your fax.



- PC-FAX is available in Black & White only.
- I If you are using Windows[®] XP, Windows NT[®] 4.0 or Windows[®] 2000 Professional, we recommend that you are logged on with administrator rights.

Setting up user information



You can access the User Information from the FAX Sending dialog box by clicking 🔛.

(See Sending a file as a PC-FAX using the Facsimile style on page 17-16.)

Brother PC-FAX Set	up	? 🔀
User Information Sen	ding Speed Dial (Facsimile style only)	
<u>N</u> ame:	John Doe	
<u>C</u> ompany:	International Spring Board Assoc.	
Department:	U56	
<u>P</u> hone Number:	908-555-1212	
Eax Number:	908-555-1212	
<u>E</u> -mail:	JD oe springboad.org	
Address <u>1</u> :	123 Rose Hill Driver	
Address <u>2</u> :	Potsville, NJ 08888	
	OK	Cancel

- 1 From the Start menu, select Programs, Brother, MFL-Pro Suite MFC-8840D, and then select PC-FAX Setup. The Brother PC-FAX Setup dialog box will appear:
- 2 You must enter this information to create the Fax Header and Cover Page.
- **3** Click **OK** to save the **User Information**.

Sending setup

From the **Brother PC-FAX Setup** dialog box, click the **Sending** tab to display the screen below.

Brother PC-FAX Setup	? 🗵			
User Information Sending Speed Dial (Facsimile style only)				
Dial Setting				
<u>O</u> utside line access:				
Header	Network PC-FAX			
Include header	Enable			
Addressbook file D:\Program Files\Brother\BRMFLPRO\address.ba2 Browse The location of the address book can be changed from the PC-FAX Setup window. This can be accessed from the main PC-FAX transmission screen.				
User interface				
Simple style				
Eacsimile style				
	OK Cancel			

The include header option sends an additional page of information along with fax or E-mail data which contains user and subject information.

The user has the choice of two user interfaces: Simple style or Facsimile style. To change the user interface select the interface setting you want: Simple style or Facsimile style.

Outside line access

If you need to enter a number to access an outside line, enter it here. This is sometimes required by a local PBX telephone system (for example, if you must dial 9, to get an outside line in your office).

Include header

To add header information to the top of the fax pages you send, check the Include header box.

Address Book file

You can select more than one database file to use with the Address Book. To select you must enter the path and file name of the database file.

—OR—


Use the Browse button to find the database to select.

User interface

In the **Sending** tab, select user interface.

You can choose the Simple Style or the Facsimile Style.

Simple style

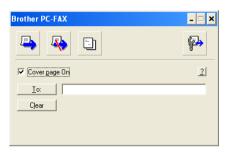

Facsimile style

broth	
	Cover Page On (P)
	0
	Speed Dial
	1 2 3 1 2 3 4 5 1 2 3 4 5 1 1 2 3 1 1 2 3 1 1 2 3 1 1 5 1 1 1 1 1 1 1 1 1 1
	4 5 6 Pause (-) Redial (R)
	7 8 9 Clear (L) Address Book
	★ 0 # ■ Stop (X) ■ Start (D)

Speed-Dial setup

From the **Brother PC-FAX Setup** dialog box, click the **Speed Dial** tab. (To use this feature you must select the **Facsimile Style** user interface.)

Brother PC-FAX Setup)				? 🔀
User Information Sending Speed Dial (Facsimile style only)					
Address <u>B</u> ook <u>S</u> peed Dial					
Name	Fax		No.	Name	Fax
😰 Sales			<u>9</u> 1	John Roller	908-704-2
፼ John Roller ፼ Joe Smith	908-704-231 908-555-123	»	2 2 3 4 5 6 7 8 9 10	Joe Smith Sales	908-555-
<	>		<		
Add >>				<u>C</u> lear	
				ОК	Cancel

You can register a Member or Group on each of the ten Speed-Dial buttons.

To register an address in a Speed-Dial button:


- 1 Click the Speed-Dial button you want to program.
- **2** Click the Member or Group you want to store on the Speed-Dial button.
- *3* Click **Add** >> to save it.

To clear a Speed-Dial button:

- 1 Click the Speed-Dial button you want to clear.
- **2** Click **Clear** to erase it.

From the Start menu, select Programs, Brother, MFL-Pro Suite MFC-8840D, and then click PC-FAX Address Book.

The Brother Address Book dialog box will appear:

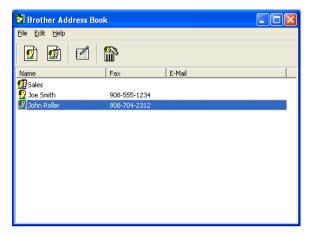

Setting up a Member in the Address Book

In the **Brother Address Book** dialog box you can add, edit and delete stored information of Members and Groups.

1 In the Address Book dialog box, click the 🙍 icon to add a Member.

The **Brother Address Book Member Setup** dialog box will appear:

Brother Address B	ook Member Setup						
<u>N</u> ame: <u></u>	Joe Smith		<u>T</u> itle:		Mr.		
Company:	Brother International Cop.						
<u>D</u> epartment:	Sales	Job Title:		Sales	Rep.		
<u>S</u> treet Address:	100 Some Street						
<u>C</u> ity:		State/Pro <u>v</u> ince	¢	N.J.			
Zip Code/Post Code:	08807	Country/ <u>R</u> egior	n:	USA			
<u>B</u> usiness Phone:	908-555-1234	Home Phone:					
<u>F</u> ax:	908-555-1234	Mobile <u>P</u> hone:					
<u>E</u> -Mail:	joe.smith@*****.com						
MFC E-Mail Address:	[
			OK		Cano	el	

2 In the Member Setup dialog box, type the Member's information. Name is a required field. Click **OK** to save the information.

Setting up a Group for Broadcasting

If you often send the same PC-FAX to several Members, you can combine them in a Group.

1 In the Brother Address Book dialog box, click the icon to create a Group.

The Group Setup dialog box appears:

Brother Address Book Group Setup		
Group <u>N</u> ame	1	Sales
Ayailable Names		Group Members
		John Roller Joe Smith
<u>A</u> dd >>		<< <u>R</u> emove
		OK Cancel

- **2** Type the name of the new Group in the **Group Name** field.
- In the Available Names box, select each Member to be included in the Group, and then click Add >>.
 Members you add to the Group will be added to the Group Members box.
- 4 After all the members you want have been added, click **OK**.

Editing Member information

- 1 Select the Member or Group you want to edit.
- 2 Click the edit 📝 icon.
- 3 Change the Member or Group information.
- **4** Click **OK** to save your changes.

Deleting a Member or Group

- 1 Select the Member or Group you want to delete.
- 2 Click the delete 🕋 icon.
- 3 When the Confirm Item Delete dialog box appears, click OK.

Exporting the Address Book

You can export the whole Address Book to an ASCII text file (*.csv). Or if you wish, you can select and create a Vcard that will be attached to that Member's outgoing E-mail. (A Vcard is an electronic business card that contains the sender's contact information.)

To export the whole current Address book:

If you are creating a Vcard, you must first select the member.

If you select Vcard in Step 1, Save as type: will be Vcard (*.vcf).

1 From the Address Book select **File**, point to **Export**, and then click **Text**.

-OR-

Click Vcard and go to Step 5.


2 From the **Available Items** column, select the data fields you wish to Export and then click **Add** >>.

Select the items in the order you want them listed.

- 3 If you are exporting to an ASCII file, select the Divide Character
 Tab or Comma. This selects between a Tab or Comma to separate the data fields.
- 4 Select **OK** to save the data.

Select Items	X
Select items in the order you wa You can select the separator ch	int them to be listed. aracter to be insetted between items.
Available <u>I</u> tems	Selected Items
Name Title Company Department Job Title Street Address City State/Province Zip Code/Post Code Country/Region Business Phone	<u>A</u> dd>> << <u>R</u> emove
Divide Character	
● <u>I</u> ab	
C <u>C</u> omma	OK Cancel

5 Type the name of the file, and then select **Save**.

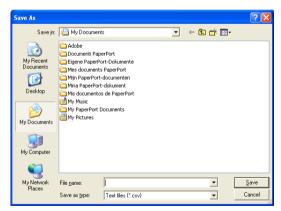

Importing to the Address Book

You can import ASCII text files (*.csv) or Vcards (electronic business cards) into your Address Book.

To import an ASCII text file:

1 From the Address Book select File, point to Import, and then click Text.


-OR-

Click Vcard and go to Step 5.

Select Items		<
Import text file.	able Items list in the same order they are listed in the character used in the Import text file.	
Available <u>I</u> tems	Selected Items	
Name Title Company Department Job Title Street Address City State/Province Zip Code/Post Code Country/Region Business Phone	Add >>	
Divide Character © Iab © Comma		
	OK Cancel	

- **2** From the **Available Items** column select the data fields you want to Import, and click **Add** >>.
- From the Available Items list select the fields in the same order they are listed in the Import text file.
- **3** Select the **Divide Character Tab** or **Comma** based on the file format you are importing.
- **4** To import the data click **OK**.

5 Type the name of the file, and then select **Open**.

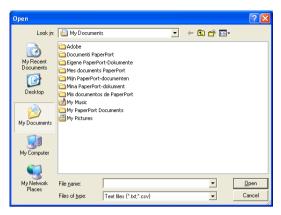

If you selected a text file in Step 1, the **Files of type**: will be **Text file (*.csv)**.

Setting up a Cover Page

From the PC-FAX dialog box click . To access the PC-Fax Cover page setup screen. (See *Sending a file as a PC-FAX using the Facsimile style* on page 17-16.)

The Brother PC-FAX Cover Page Setup dialog box will appear:

Brother PC-F#	X Cover Page Setup	×
☑ Co <u>v</u> er page On		
То		Comment Clear
<u>N</u> ame :	Taro Nagoya	
Department :	Sales	
Company :	Brother International Corp	
-		
From		Form
Na <u>m</u> e :	John Doe	• Type 1 C Type 2
<u>T</u> EL :	908-555-1212	→ TThe t
FA <u>X</u> :	908-555-1212	✓ Import BMP file Browse
<u>E</u> -Mail :	JDoe springboad.org	File name Cvrpage
Department :	U56	Alignment © Le <u>f</u> t
Company :	International Spring Board Ass	C Center C Right
Address <u>1</u> :	123 Rose Hill Driver	C <u>W</u> allpaper
Addre <u>s</u> s2 :	Potsville, NJ 08888	Count cover page
	Preview <u>.</u>	Default OK Cancel

You can enter information in each field

If you are sending a fax to more than one recipient, the recipient information will not be printed on the Cover Page.

То

From

Comment

Type the comment you want to add to the cover page.

Select Cover Page Form

Select the cover page format you want to use.

Import BMP file

You can insert a bitmap file, such as your company logo, in the cover page.

Use the browse button to select the BMP file, and then select the alignment style.

Count cover page

When the Count Cover Page box is checked, the Cover Page will be included in the page numbering. When this box is not checked, the Cover Page will not be included.

Sending a file as a PC-FAX using the Facsimile style

- 1 Create a file in Word, Excel, Paint, Draw or any other application on your PC.
- 2 From the File menu, select Print.

The **Print** dialog box will appear:

🌢 Print	? 🔀
General Select Plinter Add Printer Add Printer C-890 USB Printer PoperPo Rother PC-FAX	
Status: Ready Location: Comment:	Print to file Preferences
Page Range ● All ○ Selection ○ Larrent Page ● Pages: 1-65535 Enter either a single page number or a single page range. For example, 5-12	Number of gopies: 1
<u>P</u> riv	nt Cancel <u>A</u> pply

3 Select **Brother PC-FAX** as your printer, and then click **OK**. The Fax Sending dialog box will appear.



- **4** Enter the fax number using any of the following methods:
 - Using the dial pad enter the number.
 - Click any of the 10 **Speed-Dial** buttons.
 - Click the Address Book button, and then select a Member or Group from the Address Book.

If you make a mistake you can click **Clear** to delete all the entries.

- **5** To include a Cover Page, click O Cover Page On, and then click the Cover Page icon to enter or edit the Cover Page information.
- 6 Click Start to send the fax.

If you want to cancel the fax, click Stop.

Redial

If you want to redial a number, click **Redial** to scroll through the last five fax numbers, and then click **Start**.


Sending a file as a PC-FAX using the Simple style

- 1 Create a file in Word, Excel, Paint, Draw or any other application on your PC.
- **2** From the **File** menu, select **Print**.

The Print dialog box will appear:

Print	?
Select Printer	
Add Printer Sector MFC-890 USB Printer Brother MFC-890 USB Printer Brother PC-FAX	
Status: Ready Location:	Print to file Preferences
Comment: Page Range	Find Printer
⊙ AļI	Number of copies: 1
O Selection O Current Page	
O Pages: 1-65535	
Enter either a single page number or a single page range. For example, 5-12	
	int Cancel Apply

3 Select **Brother PC-FAX** as your printer, and then click **OK**. The FAX Sending dialog box will appear:

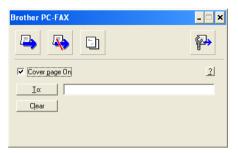

- 4 In the To: field, type the fax number of the recipient. You can also use the Address Book to select destination fax numbers by clicking the To: button. If you made a mistake entering a number, click the Clear button to delete all the entries.
- **5** To send a Cover Page and note, click the **Cover Page On** check box.
- You can also click the 🔄 icon to create or edit a cover page.
- 6 When you are ready to send your fax, click the Send 📥 icon.
- 7 If you wish to cancel the fax, click the Cancel 🌄 icon.

Setting up PC-FAX receiving (Windows[®] 98/98SE/Me/2000 Professional and Windows NT[®] WS 4.0 only)

Running PC-FAX Receiving

From the Start menu, select Programs, Brother, MFL-Pro Suite MFC-8840D and then select 'PC-FAX Receiving'.

Setting up your PC

- **2** The PC-Fax RX Setup dialog box will appear:

PC-Fax RX Setup	X
Ring Delay 1	
Save file to C:\PROGRAM FILES\BROTHER\ Browse	
File Format Cmax(Default Required for use with PaperPort)	
Play wave file when receiving FAX	
Wave File Browse	
Add to Startup folder	
Cancel	

- **3** In **Ring Delay**, select the number of rings before you want your PC to answer Incoming calls.
- **4** In **Save file to**, use the Browse button if you want to change the path where PC-FAX files will be saved.

- **5** In **File Format**, select **.tif** or **.max** for the format the received document will be saved in. The default format is **.tif**.
- 6 If you want to, you can check the **Play wave file when** receiving FAX check box, and then enter the path.
- 7 To load PC FAX receiving automatically when you start up Windows[®], select the **Add to Startup folder** check box.

Viewing new PC-FAX messages

Each time you start to receive a PC-FAX, the icon will flash here is a plue and red. Once the fax has been received the icon will remain red. The red icon will change to green once the received fax has been received.

- **1** Run PaperPort[®].
- **2** Open the Fax Received folder.
- **3** Double-click any of the new faxes to open and view them.

The title of your unread PC message will be the date and time until you assign a file name. For example "Fax 2-20-2002 16:40:21.tif"

Receiving a fax into the PC (Windows[®] XP only)


How to receive a fax automatically

Before you can start receiving faxes, please install the appropriate Windows[®] XP driver (Windows[®] XP In-box driver or Brother Windows[®] XP driver). After the driver is installed, refer to the following information to configure your Windows[®] XP PC for Fax receiving.

1 To activate Faxing receiving, click **Set up faxing** in the **Printer Tasks** menu.



2 The FAX services will be installed on your PC.

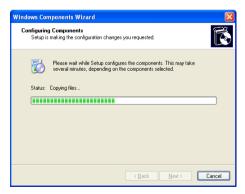

3 A Fax icon will then appear in the Printers and Faxes folder. If the Fax icon does not appear, click Install a local fax printer in the Printer Tasks menu.



4 Select the Start, All Programs, Accessories, Communications, Fax, Fax Console.

If you have not configured your fax connection, the following screen will be displayed.

Enter your details, ensuring you specify the outside line access number if necessary and click **OK**.

Select the **My location** radio button if it is not selected and then click **OK**.

5 The Fax Configuration Wizard starts. Click Next.



6 Enter the sender information, and then click Next.

Fax Configuratio	n Wizard		
Sender Informa Enter sender	tion information that will appear or	n fax cover pages.	S#
Your full name:		Fax number:	
E-mail address:			
Title:		Company:	Brother
Office location:		Department:	
Home phone:		Work phone:	
Address:			
		1	
Billing code:			
		< Back	Next > Cancel

7 Select Brother MFC-8440 or MFC-8840D in the Please select the fax device pull-down list. Click to select the Enable Receive check box. Specify the number of rings before your MFC will attempt to answer the fax. Click Next.

Fax Configuration Wizard	×
Select Device for Sending or Receiving Faxes Select the device that you want to use to send or receive faxes.	()
Please select the fax device	
Brother MFC-8840D	
Enable Send	
Enable Beceive	
○ Manual answer	
<u>A</u> utomatically answer after 2	
< <u>Back</u>	Cancel

8 Enter the Transmitting Subscriber Identification (TSID), and then click Next.

Fax Configuration V	Vizard	
	toriber Identification (TSID) antiing Subscriber Identification (TSID) to be used to identify your x recipient.	
	namited when you send a fax, and usually consists of a a business name.	
	< Back Next >	Cancel

9 Enter the Called Subscriber Identification (CSID), and then click Next.

x Configuration	Wizard
	I Identification (CSID) Subscriber Identification (CSID) to be used to identify your ex sender.
The CSID is tra	ismitted when you receive a fax, and usually consists of
a fax number ar	d a business name.
CSID:	Fax
	<pre></pre>

10 Select if you print a received fax or save it in a folder, and then click **Next**.



11 Click Finish.

Fax Configuration Wizard		×
	Completing the Fax Configuration Wizard You have successfully completed the Fax Configuration Wizard.	
	Configuration Summary: Devices configured to seen faves: Brother MRC-8840D The TSID of these devices is Fax. Devices configured to automatically answer incoming fac coles after 2 ring. The CSID of these devices is Fax. To close this wizard, click Finish.	
	< Back Finish Cancel	

When PC-FAX Receiving is active, you cannot run the Remote Setup utility. To use Remote Setup, check off **Enable Receive** in Step 7.

For information on how to use PC-FAX Sending and Receiving, please refer to Help in the **Fax Console**.


The PC-FAX installation is now complete.

How to view the received faxes

Faxes that are received into the PC will appear in the Fax Console.

Click Start, point to All Programs, Accessories,

Communications, **Fax**, and then click **Fax Console** to open the **Fax Console**. In the left pane, expand the Fax folder (if it is not already expanded).

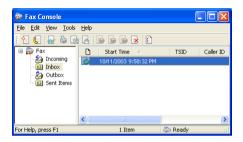

The Fax folder contains the following folders:

- The Incoming folder contains faxes that are currently being received.
- The Inbox folder contains faxes that have been received.
- The Outbox folder contains faxes that are scheduled to be sent.
- The Sent Items folder contains faxes that have been successfully sent.

18 Using your MFC with a Macintosh[®]

Setting up your USB-equipped Apple[®] Macintosh[®]



- Before you can connect the MFC to your Macintosh[®], you must buy a USB cable that is not longer than 1.8 metres.
 Do not connect the MFC to a USB port on a key board or a non-powered USB hub.
- Some descriptions in this chapter are based on the MFC-8840D. These descriptions also apply to the MFC-8440.

The features supported by the MFC will depend on the operating system you are using. The chart below shows which features are supported.

Feature	Mac OS [®]		Mac OS [®] X	
	8.6	9.X	10.1	10.2.1 or greater ^{*1}
Printing	Yes	Yes	Yes	Yes
Scanning (TWAIN)	Yes	Yes	No	Yes
PC-FAX sending	Yes	Yes	Yes	Yes
Remote Setup	No	No	Yes	Yes

*1 For Mac $OS^{\textcircled{B}} X$ 10.2 users, please upgrade to Mac $OS^{\textcircled{B}} X$ 10.2.1 or greater. (For the latest information for Mac $OS^{\textcircled{B}} X$, please visit at: http://solutions.brother.com)

Using the Brother printer driver with your Apple[®] Macintosh[®] (Mac OS[®] 8.6 - 9.2)

To select a Printer:

1 Open the **Chooser** from the Apple menu.

			cilot	oser			
	AppleShare	Brother Laser		Connect to:	:		
L	.aserWriter 8			Background AppleTalk	I Printing: Active I nactive	 ♥ Off	

2 Click the **Brother Laser** icon. On the right side of the **Chooser** window, click the printer you want to print to. Close the **Chooser**.

To print a document:

1 From the application software such as Presto![®] PageManager[®], click File menu and select Page Setup. You can change the settings for Paper Size, Orientation, and Scaling, and then click OK.

brother MF	C-8840D	1.9.6	ОК
Paper Size :	🔘 Letter 🔘 Legal	● A4 ○ Executive	Cancel
	🔘 Com-10	© <u></u> B5 ▼	Paper
Orientation :		Scaling: 100 %	Help
			Default

2 From application software such as Presto![®] PageManager[®], click **File** menu and select **Print**. Click **Print** to start printing.

brother MF	C-8840D 1	.9.6 Print
Output :	Printer 🔻	Cancel
Copies :	1	Option
Pages :	All From : To :	Address
Resolution :	🔾 300 dpi 🛛 600 dpi 🔾 HQ 1200	Help
Paper Source	e: Auto Select 🔻	<u> </u>
Media Type :	Plain Paper 🔻	Default
	🔲 Toner Save Mode 🛛 🗹 Gray Scale 🗍	Save Settings

If you want to change **Copies**, **Pages**, **Resolution**, **Paper Source** and **Media Type**, select your settings before clicking **Print**.

Device Options allows you to select **Duplex**.

Device 0	ptions	ОК
Layout :	1 🗢 Pages per Sheet	Cancel
	$ \begin{array}{c c} \hline 1 \\ \hline 2 \\ \hline 3 \\ \hline 4 \\ \hline 4 \\ \hline 3 \\ \hline 4 \\ \hline 3 \\ \hline 4 \\ \hline 3 \\ \hline 4 \\ \hline 2 \\ \hline 4 \\ \hline 4 \\ \hline 2 \\ \hline 2 \\ \hline 4 \\ \hline 2 \\ \hline 2 \\ \hline 4 \\ \hline 2 \\ \hline 2 \\ \hline 2 \\ \hline 2 \\ \hline 4 \\ \hline 2 \\ \hline $	Help
	Border: None 🗢	
Duplex :	Print on Both Sides	
	🔘 Use Duplex Unit 🛛 🔘 Manual Duplex	
	II B	
	Binding Offset	

Automatic Duplex is only available with the MFC-8840D.

Using the Brother Printer Driver with Your Apple[®] Macintosh[®] (Mac OS[®] X)

Choosing page setup options

From application software such as Presto![®] PageManager[®], click the File menu and select Page Setup. Make sure *MFC-8440* and *MFC-8840D* is selected in the Format for pop-up menu. You can change the settings for Paper Size, Orientation and Scaling, then click OK.

Settings:	Page Attributes	+
Format for:	MFC-8840D	•
	Brother MFL Pro Color	
Paper Size:	Letter	+
	8.50 in. x 11.00 in.	
Orientation:		
Scale:	100 %	
?	Cancel	ОК

2 From application software such as Presto![®] PageManager[®], click **File** menu and select **Print**. Click **Print** to start printing.

Printer:	MFC-8840D 🗘
Presets:	Standard 🗧
Copies & Pages	•
Copies	s: 1 🗹 Collated
Pages	: • All • From: 1 to: 1
?	(Preview) (Cancel) (Print

Set the Media Type, Resolution, and other settings.

Press Copies & Pages to select settings you want to change.

Printer: MFC-8840D	•
Presets: Standard	*
✓ Copies & Pages Layout Output Options	Collated
Duplex Paper Feed Print Settings Send Fax	1 to: 1
Summary Save Custom Setting	Preview Cancel Print

Duplex

Printer:	MFC-8840D +
Presets:	Standard
Duplex	•
🗹 Duplex	
💿 Use Duj	olex Unit 🔘 Manual Duplex
	 Flip on Long Edge Flip on Short Edge
0	Preview Cancel Print

Automatic Duplex is only available with the MFC-8840D.

Print settings

Presets: Stand	ard	+
Print Settings	+	
Quality		
🔘 Normal (300 dpi)		
💿 Fine (600 dpi)		
O Super Fine (HQ120	00)	
Media Type : Plain Pa	per ;	
Toner Save Mode		

Using the PS driver with your Apple[®] Macintosh[®]


- To use the PS driver on a Network, see the NC-9100h Network User's Guide on CD-ROM.
- To use the PS driver with a USB cable, you need to set the Emulation to BR-Script 3 (Menu, 4, 1) before connecting the USB cable. (See Setting the Emulation Selection on page 11-18.)
- The PS driver does not support the following functions:
 - HQ 1200
 - Secure Print
 - PC-Fax Sending

1 For Mac OS[®] 8.6 to 9.04 Users:


Open the **Apple Extras** folder. Open the **Apple LaserWriter Software** folder.

For Mac OS[®] 9.1 to 9.2 Users:

Open the Applications (Mac $OS^{\ensuremath{\mathbb{B}}}$ 9) folder. Open the Utilities folder.*

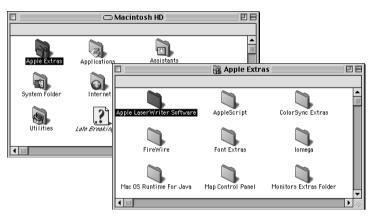

- * The screens are based on Mac $OS^{\textcircled{R}}$ 9.04.
- 2 Open the **Desktop Printer Utility** icon.

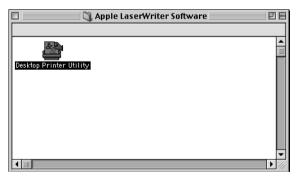

3 Select Printer (USB), and then click OK.

New Desktop Printer
With LaserWriter 8 💠
Create Desktop
Printer (AppleTalk)
Printer (LPR) Printer (no printer connection)
Printer (USB)
Translator (PostScript)
Create desktop printer for printer using USB connection.
Cancel OK

4 Click **Change...** in the PostScript[™] Printer Description (PPD) file.

Select Brother MFC-8840D, and then click Select.

Untitled 1		E	
PostScript [™] Printer Description (PPD) File			
Generio	Auto S Chang		
USB Printer Selection			
 	Chang	je	
Desktop Printer Usage: Print to printer "< <unspecified>>"</unspecified>		Select	 a PostScript™ Printer Description File:
With Printer Driver : LaserWriter 8			Printer Descriptions 🗢 🗆 Macintosh H
	Creat	Bro	ther MFC-8840D
			r Model: er MFC-8840D BR-Script3


5 Click Change... in the USB Printer Selection. Select Brother MFC-8840D, and then click OK.

Untitled 1	E
PostScript™ Printer Description (PPD) File	
Brother MF C-68400	
USB Printer Selection	ge
Desktop Printer Usage : Print to printer "Brother MFC-6840D "	USB Printer
Desktop Printer Usage: Print to printer "Brother NFC-6840D" With Printer Driver: LaserWriter 8	Select a USB Printer:
With Printer Driver : LaserWriter 8	Select a USB Printer:

6 Click Create....

Untitled 1	
\lceil PostScript [™] Printer Description (PPD) File	
Brother MF C-88 40D	Auto Setup Change
USB Printer Selection	
Brother/MFC-6840D	Change
Lesktop Printer Usage : Print to printer "BrotherMFC-88400 With Printer Driver : LaserWriter 8) <i>"</i>
	Create

7 Enter your MFC name (MFC-8840D), and then click **Save**.

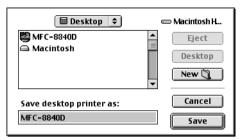

8 Select Quit from the File menu.

	File Edit	Help	
	New Open	ЖN Ж0	
8	Close Save Save As	₩W ₩5	
$\bigcirc - \bullet \bigcirc$	Revert Quit	₩Q ⊾	

9 Click the **MFC-8840D** icon on the Desktop.



10 Select Set Default Printer from the Printing menu.



For Mac OS[®] X users


You need to install the PS driver using the following instructions.

If you use a USB cable and your Macintosh is "Mac OS[®] X", only one printer driver for an MFC can be registered in Print Center.

If a Brother Native Driver (MFC-8440/8840D) is already listed in Printer list, you will need to delete it and then install the PS driver.

To use the PS driver with a USB cable, you need to set the Emulation to BR-Script 3 (Menu, 4, 1) before connecting the USB cable. (See Setting the Emulation Selection on page 11-18.)

1 Select Applications from the Go menu.

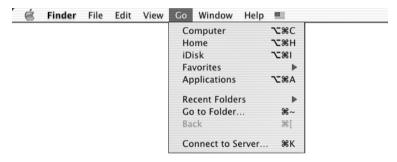

2 Open the Utilities folder.



3 Open the **Print Center** icon.



4 Click Add Printer....

000	Prir	nter List		
O Name	A	Kind	Status	
				_
	Delete	Add Printe	r)	
				11.

5 Select USB.



6 Select MFC-8840D, and then click Add.



7 Select Quit Printer Center from the Print Center menu.

Ś.	Print Center Edit	Printers	Queue	Window	Help	
	About Print Center Preferences	·				
	Hide Print Center Hide Others Show All	₩Н				
	Quit Print Center	жQ				

Sending a fax from your Macintosh[®] application

For Mac OS[®] 8.6 - 9.2 users

You can send a fax directly from a ${\rm Macintosh}^{\rm @}$ application by doing the following:

- 1 Create a document in a Macintosh application.
- 2 To send a fax, select **Print** from the **File** menu.

The Printer dialog box will appear:

brother MI	C-8840D	1.9.6 Print
Output :	Printer 🔻	Cancel
Copies :	1	Option
Pages :	All From : To :	Address
Resolution :	🔵 300 dpi 🛛 💿 600 dpi 🕥 HQ 1200	Help
Paper Sourc	e: Auto Select 🔻	
Media Type :	Plain Paper 🔹 🔻	Default
	🗌 Toner Save Mode 🛛 🗹 Gray Scale	Save Settings

When *Printer* is selected, the top button shows **Print** and the **Address** button is grayed.

3 From the Output pull-down menu, select Facsimile.

	C-884QD			1.9.6	Send Fax
Output :	Facsimile	•		Ì	Cancel
Copies :				1	Option
Pages :	🖲 All) From :	To :	1	Address
Resolution :	🔵 300 dpi	🖲 600 dpi	O HQ 1200	l l	Help
Paper Source	e: Auto Se	lect	▼	l	
Media Type :	Plain Pa	per	▼]	(Default
	Toner Sa	ve Mode	🗹 Gray Scale	Save	e Settings

When *Facsimile* is selected, the top button changes to **Send Fax** and the **Address** button will be available.

4 Click Send Fax.

The Send Fax dialog box appears:


nput Fax Number :		Destination Fax Numbers :
tored Fax Number	s:	**
Barble	908-477-8888	***
3ob	908-869-8888	
Frank	908-236-8888	
Tony	908-569-8888	

The **Send Fax** dialog box has two list boxes. The left box shows all the previously **Stored Fax Numbers** and the right box shows the **Destination Fax Numbers** as you select them.

- **5** To address the fax, type a fax number in the **Input Fax Number** box.
- *6* When you are finished addressing your fax, click **Send Fax**.

To select and only send certain pages of the document, click **OK** to go to the Print dialog box.

If you click **Send Fax** without addressing your fax, the following error message will appear:

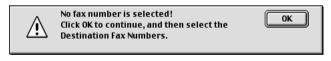


Click OK to go to the Send Fax dialog box.

For Mac OS[®] X users

You can send a fax directly from a Macintosh[®] application by doing the following:

- **1** Create a document in a Macintosh application.
- 2 To send a fax, select **Print** from the **File** menu.

The Printer dialog box will appear:

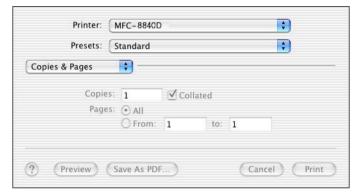

3 Select Send Fax from the pull-down menu.

	FC-8840D
Layout Output Options Paper Feed Print Settings	Collated All From: 1 to: 1
? Preview Sa	ve As PDF Cancel Print

4 Select **Facsimile** from the **Output** pull-down menu.

Pri	nter: MFC-8840D	•
Pre	sets: Standard	•
end Fax	•	
Output :	Facimile 🛟	
Input Fax N	umber :	
		Add
Stored Fax	Numbers :	
	work fax	Address Book
Destination	Fax Numbers :	
Name	FAX#	
	***********) 4 ►
		Delete

- **5** To address the fax, type a fax number in the **Input Fax Number** box, and the click **Print**.
- If you want to send a fax to more than one number, click **Add** after entering the first fax number. The destination fax numbers will be listed in the dialog box.

ne	sets: Standard	\$
end Fax	4 7	
Output :	Facimile 🛟	
Input Fax N	umber :	
		Add
Stored Fax	Numbers :	
	work fax	Address Book
Destination	Fax Numbers :	
Name	FAX#	
)++
) ↓ ► Delete

Drag a vCard from the Mac $\ensuremath{\mathsf{OS}}^\ensuremath{^{\ensuremath{\mathsf{R}}}}$ X Address Book application

- 1 Click Address Book button.
- **2** Drag a vCard from the Mac OS[®] X Address Book application to the **Destination Fax Numbers** filed.

When you are finished addressing your fax, click Print.

Printer: MFC-8840D				
Presets: Standard				
Send Fax	000	A	ddress Book	
Output : Facimile			Search:	
Input Fax Number :	Group All Directories	Name Barble Bob	Bob	
Stored Fax Numbers : work fax Address Book Destination Fax Numbers :			work 999-888-0001 work fax 999-888-0000 work bob⊛xxx.yyy.com	
Name FAX#	+	+	Note: Edit	••//
Delete				
(Preview) (Save As PDF) (Cancel (Print				

	iter: MFC-8840D	•
Pres	ets: Standard	÷
end Fax	*)	
Output :	(Facimile 🛟	
Input Fax Ni	umber :	
		Add
Stored Fax M	lumbers :	
	work fax	Address Book
Destination	Fax Numbers :	
Name	FAX#	
-)4.2
		Delete

The vCard used must contain a work fax or home fax number.

When you choose **work fax** or **home fax** from the **Stored Fax Numbers** pull-down list, only the fax number stored in the Mac OS[®] X Address Book for the selected category will be used. If the fax number is stored in only one of the Mac OS[®] X Address Book categories, the number will be retrieved no matter which category you have selected (work or home).

Using the Brother TWAIN scanner driver with your Macintosh®

The Brother MFC software includes a TWAIN Scanner driver for Macintosh[®]. You can use this Macintosh[®] TWAIN Scanner driver with any applications that support the TWAIN specifications.



Mac OS[®] X Scanning is supported in Mac OS[®] X 10.2.1 or greater.

Accessing the scanner

Run your Macintosh® TWAIN-compliant application software. The first time you use the Brother TWAIN driver (MFL Pro/P2500), set it as the default by choosing Select Source (or the other menu name to select the device). Afterwards, for each document you scan choose Acquire Image or Scan. The scanner setup dialog box will appear.



 Me The screen shown in this section are from Mac OS[®] 9. The screen on your Macintosh® may vary depending on your Operating System.

The method of selecting the source or choosing to scan may vary depending on the application software you are using.

Brother MFL	Pro Scanner
Image 21.5 Resolution: 200 x 200 dpi Color Type: Black & White	Scanning Area
Scanning Area Letter 8.5 x 11 in + Width: 8.5 Height: 11 Unit: mm Adjust	
O Custom Adjust Image O Custom Adjust Image O Custom Adjust Image ColorSync Intent: Perceptual (Images) Scanner Profile: MFC-8840D O See Photo Paper	6.5
Default	Cancel Start Prescan

(OS 8.6–9.2)

Scanning an image into your Macintosh[®]

You can scan a whole page

-OR-

scan a portion after pre-scanning the document.

Scanning a whole page

- **1** Place the document face up in the ADF, or face down on the scanner glass.
- **2** Adjust the following settings, if needed, in the Scanner Setup dialog box:

Resolution Color Type Scanning Area Brightness Contrast

3 Click Start.

When scanning has finished, the image will appear in your graphics application.


Pre-Scanning an image

Pre-Scanning allows you to scan an image quickly at a low resolution. A thumbnail version will appear in the **Scanning Area**. This is only a preview of the image, so you can see how it will look. The **PreScan** button will allow you to crop unwanted areas from the images. When you are satisfied with the preview, click **Start** to scan the image.

- **1** Insert the document face up in the ADF, or face down on the scanner glass.
- 2 Click PreScan.

The whole image will be scanned into your Macintosh[®] and will appear in the **Scanning Area** of the Scanner dialog box:

3 To scan a portion of the prescanned image, click and drag the mouse to crop it.

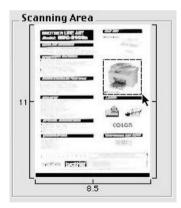

- **4** Insert document in the ADF, if you are using ADF.
- 5 Make your adjustments to the settings for Resolution,
 Color Type (Gray Scale), Brightness, Contrast, and Size in the Scanner Setup dialog box.
- 6 Click Start.


This time only the cropped area of the document will appear in the Scanning Area.

7 In your editing software, you can refine the image.

Image

Resolution

From the **Resolution** pop-up menu choose the scanning resolution. Higher resolutions use more memory and transfer time, but produce a finer scanned image.

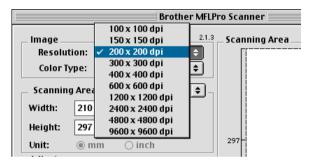

Color Type

Black & White—Set the image Type to *Black and White* for text or line art. For photographic images, set the image type to Gray (Error diffusion) or True Gray.

Gray (Error Diffusion)—is used for documents with photographic images or graphics. (Error Diffusion is a method for creating simulated gray images by placing black dots instead of the true gray dots in a specific matrix instead of true gray dots.)

True Gray—is used for documents with photographic images or graphics. This mode is more exact because it uses up to 256 shades of gray. It requires the most memory and takes the longest transfer time.

Colors—Choose either 8-bit Color, which scans up to 8-bit Color or 24-bit color which scans up to 16.8 million colors. Although using 24-bit color creates an image with the most accurate colors, the image file will be about three times larger than a file created with 8-bit Color.

Scanning Area

Set the Size to one of the following:

- Letter 8.5 x 11 in
- A4 210 x 297 mm
- Legal 8.5 x 14 in
- A5 148 x 210 mm
- B5 182 x 257 mm
- Executive 7.25 x 10.5 in
- Business Card 90 x 60 mm
- Custom (User adjustable from 0.35 x 0.35 in. to 8.5 x 14 in. or 8.9 x 8.9 mm to 216 x 356 mm)

After you choose a custom size, you can adjust the scanning area. Click and hold the mouse button as you drag the mouse to crop the image.

Width: Enter the width of the custom size.

Height: Enter the height of the custom size.

Business Card Size

To scan business cards, select the Business Card size $(90 \times 60 \text{ mm})$ and place the business card at the center of scanner glass.

When you are scanning photographs or other images to use in a word processor or other graphics application, it is a good idea to try different settings for the Contrast, Mode and Resolution to determine which settings look the best.

Adjusting the Image


Brightness

Adjust the **Brightness** setting to get the best image. The Brother TWAIN Scanner driver offers 100 Brightness levels (-50 to 50). The default value is 0, representing an 'average' setting.

You can set the **Brightness** level by dragging the slide bar to the right to lighten the image or to the left to darken the image. You can also type a value in the box to set the level. Click **OK**.

If the scanned image is too light, set a lower Brightness level and scan the image again.

If the image is too dark, set a higher Brightness level and scan the image again.

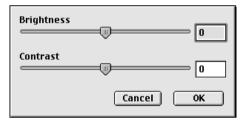

Contrast

You can only adjust the **Contrast** level when you have selected one of the Gray Scale settings, it is not available when you have selected Black & White as the selected **Color Type**.

Increasing the **Contrast** level (by dragging the slide bar to the right) emphasizes dark and light areas of the image, while reducing the **Contrast** level (by dragging the slide bar to the left) reveals more detail in the gray areas. Instead of using the slide bar, you can type a value in the box to set the Contrast. Click **OK**.

Using Presto![®] PageManager[®]

Presto![®] PageManager[®] is application software for managing the documents in your computer. Since it is compatible with most image editors and word processing programs, Presto![®] PageManager[®] gives you unmatched control over your computer files. You can easily manage your documents and edit your E-mail and files and read documents with the OCR software built into Presto![®] PageManager[®].

If you use the MFC as a scanner, we recommend that you install Presto![®] PageManager[®]. To install Presto![®] PageManager[®], see the Quick Setup Guide.

The complete NewSoft Presto![®] PageManager[®] 4.0 User's Guide can be found on the Macintosh CD-ROM supplied with your MFC.

Highlights

- OCR: In one step scan an image, recognize the text, and edit it with a word processor.
- Scan Buttons: Scan documents and open them with a designated program in one step.
- Image Editing: Enhance, crop and rotate images, or open them with an image-editing program of your choice.
- Annotation: Add removable notes, stamps and drawings to images.
- Treeview Window: View and arrange your folder hierarchy for easy access.
- Thumbnail Window: View files as thumbnails for easy identification.

System requirements

- PowerPC processor
- System 8.6, 9X, 10.1, or greater
- CD-ROM drive
- Hard disk drive with at least 120 MB of free disk space

Recommended:

- 8-bit Color or higher video adapter.
- Eudora Mail, or Outlook Express electronic mail software

Technical Support

[Germany]

		NewSoft Europe Regus Center Fleethof Stadthausbrucke 3 20355 Hamburg, Germany 49-40-37644530
	Fax:	49-40-37644500
	E-mail Address:	contact@newsoft.eu.com
	URL:	http://de.newsoft.eu.com/
	Company name:	SoftBay GmbH
	Postal Address:	
		D-52531 Ubach-Palenberg
	Telephone:	49(0)2451/9112647
	Fax:	49(0)2451/409642
	E-mail Address:	newsoft@softbay.de
	URL:	http://de.newsoft.eu.com/
[Uł	<]	
	Company name:	Guildsoft Ltd
	Postal Address:	Not Open
	Telephone:	44-01752-201148
	Fax:	44-01752-894833
	E-mail Address:	Tech@guildsoft.co.uk
	URL:	http://uk.newsoft.eu.com/

[France]

Company name: Partners In Europe

Postal Address:Unit 14, Distribution Center,
Shannon Ind. Est
Shannon, Co. Clare
IrelandTelephone:0800-917171E-mail Address:Newsoft@pie.ie

[Italy]

Company name:	V.I.P
Postal Address:	Not Open
Telephone:	166821700
Fax:	532786999
E-mail Address:	supporto@gensoftonline.com

[Spain]

Company name: Atlantic Devices				
Postal Address:	Caputxins, 58, 08700 Igualada			
Telephone:	938040702-33			
Fax:	938054057			
E-mail Address:	support@atlanticdevices.com			


[Other countries]

E-mail Address: tech@newsoft.eu.com

MFC Remote Setup (Mac OS[®] X)

The MFC Remote Setup application allows you to quickly set up your MFC by taking advantage of the ease and speed of programming on your Macintosh[®]. When you access this application, the settings on your MFC will be downloaded automatically to your Macintosh[®] and displayed on your computer screen. If you change the settings, you can upload them directly to the MFC.

The 'MFC Remote Setup' application icon is in Macintosh HD/Library/Printers/Brother/Utility.

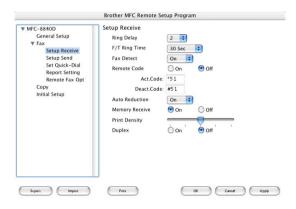

OK

This starts the process of uploading the data to the MFC and exiting the remote setup program. If an error message is displayed enter the correct data again. Click **OK**.

Cancel

This exits the remote setup application without uploading the data to the MFC.

Apply

This uploads the data to the MFC, but does not exit the remote setup application.

Print

This command prints the selected items on the MFC. You can not print the data until it is uploaded to the MFC. Click **Apply** to upload the new data to the MFC and click **Print**.

Export

This command saves the current configuration settings to a file. **Import**

This command reads the settings from a file.



To use the MFC as a Network Scanner, the NC-9100h Network board should be installed into the MFC and configured with TCP/IP and mail server settings if you use Scan to E-mail (E-mail server). You can set or change NC-9100h settings from the control panel or with the Professional utility or Web Management BRAdmin. (Please see the NC-9100h User's Guide on the CD-ROM.)

Network License

This product includes a single PC license. If you purchase an optional Network LAN board NC-9100h that includes the license for up to 4 additional Users, you can install the MFL-Pro Software Suite including ScanSoft[®] PaperPort[®] on up to 5 PC's for use on a network. If you want to use more than 5 PCs with ScanSoft[®] PaperPort[®] installed, please purchase NL-5 which is a multiple PC license agreement pack for up to an additional 5 Users. To purchase NL-5, please contact your Brother Sales Office.


Registering your PC with the MFC

If you need to change the MFC that was registered to your PC during the installation of MFL-Pro (see the Quick Setup Guide), follow the steps below.

1 For Windows[®] 98/Me/2000

From the Start menu, select **Control Panel**, **Scanners and Cameras**, and then right-click Scanner Device icon and select **Properties** to view the Network Scanner Properties dialog box. *For Windows[®] XP*

From the Start menu, select Control Panel, Printers and Other Hardware, Scanner and Cameras (or Control Panel, Scanners and Cameras).

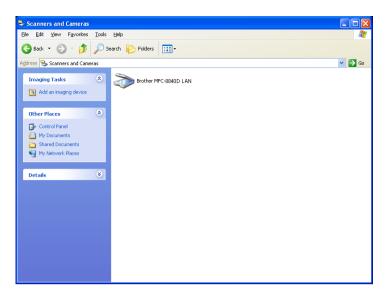

Right-click Scanner Device icon and select properties to view the Network Scanner Properties dialog box.

2 Click the Network Setting tab in the dialog box and select a method to specify the MFC as a Network scanner for your PC.

Brother XXX-XXXX LAN Properties					
General Events Color Management Network Setting Scan To Button					
C Specify your MFC by address					
IP Address 192 . 168 . 0 . 105					
Specify your MFC by Name					
Node Name BRN_XXXXX					
During					
Browse					
OK Cancel Apply					

Specify your MFC by address

Enter the actual IP address of the MFC in the IP Address field.

Click **Apply** and then **OK**.

Specify your MFC by Name

Enter the MFC Node name in the Node Name field.

Click **Apply** and then **OK**.

Search from a list of available device

Click Browse and select the appropriate device you want to use. Click $\ensuremath{\text{OK}}$

Click **Apply** and then **OK**.

s	Search for DCP Devices					
		IP Address XXX.XXX.X.XXX XXX.XXX.X.XXX	Model Name Brother MFC-XX Brother DCP-XX	Location		
	BRN_XXXXXX	XXX.XXX.X.XXX	Brother MFC-XX			
					~	
			0	K	Cancel	

3 Click the **Scan To Button** tab in the dialog box and enter your PC Name in the Display Name field. The MFC's LCD displays the Name you enter. Default setting is your PC Name. You can enter a name if you like.

Brother XXX-XXXX LAN Properties	? 🗙
General Events Color Management Network Setting Scan To Bu	utton
✓ Register your PC with the "Scan To" functions at the MFC. Display Name (Max15 characters) This name wil appear when the "Scan to" menu is selected at the MFC.	
"Scan To" Button Pin number for this PC. ☐ Enable Pin number protection Pin number ('0''9', 4 digits)	
	oply

4 You can avoid receiving unwanted documents by setting a 4-digit PIN Number. Enter your PIN Number in the PIN Number and Retype PIN Number field. To send data to a PC protected by a PIN Number, the LCD prompts to enter the PIN Number before the document can be scanned and sent to the MFC. (See Using the Scan key on page 19-5 to 19-10.)

Using the Scan key

Scan to E-mail (PC)

When you select Scan to E-mail (PC) your document will be scanned and sent directly to the PC you designated on your network. The Brother SmartUI will activate the default E-mail application on the designated PC for addressing to the recipient. You can scan a black and white or color document and it will be sent with the E-mail from the PC as an attachment.



For Network Scanning the Brother Control Center (SmartUI) selections are used only for configuring the Scan button. You will not be able to initiate a Network scan from the Brother Control Center (SmartUI).

You can change the (Scan) configuration. For Windows[®] 98/98SE/Me/2000: (See Scan to E-mail on page 14-10 to 14-11.) (For Windows[®] XP: See Hardware Section: Changing the Scan to button configuration on page 15-5 to 15-9.)

- 1 Place the document face up in the ADF, or face down on the scanner glass.
- 2 Press (Scan).
- 3 Press 🗢 or 🗢 to select Scan to E-Mail.

Press Set

▲Scan	to	E-Mail
Scan	to	Image
Scan		
▼Scan	to	File
Select	: \ '	V & Set

4 Press or to select PC. Press Set.

```
__OR__
```

If there is not other selection, go to Step 5.

Press Set.


If the LCD prompts you to enter a PIN Number, enter the 4-digit PIN Number for the destination PC on the control panel.

Press Set.

The MFC will start the scanning process.

Scan to E-mail (E-mail server)

When you select Scan to E-mail (E-mail server) you can scan a black and white or color document and send it directly to an E-mail address from the MFC. You can choose PDF or TIFF for Black and White and PDF or JPEG for color.

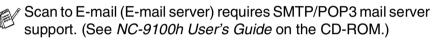

- **1** Place the document face up in the ADF, or face down on the scanner glass.
- **2** Press (Scan).

Press Set.

-OR-

▲Scan	to	E-Mail	
Scan	to	Image	
Scan	to	OCR	
▼Scan	to	File	
Select	: 🔺	🗸 & Set	

If there is not other selection, go to Step 5.

Press Set.

If you select Color 150 dpi, Color 300 dpi or Color 600 dpi in Step 6, go to Step 7.

-OR-

If you select ${\tt B/W}$ 200 dpi or ${\tt B/W}$ 200×100 dpi in Step 6, go to Step 8.

7 Press or to select PDF or JPEG.

Press Set.

8 Press or to select PDF or TIFF.

Press Set.

- 9 The LCD prompts you to enter an address. Enter the destination E-mail address from the dial pad or use the One-Touch key or Speed-Dial key.
- 10 Press Start.

The MFC will start the scanning process.

Scan to Image

When you select Scan to Image your document will be scanned and sent directly to the PC you designated on your network. The Brother SmartUI will activate the default graphics application on the designated PC. You can change the **Scan** configuration. (For Windows[®] 98/Me/2000: See *Scan to Image* on page 14-14.) (For Windows[®] XP: See *Hardware Section: Changing the Scan to button configuration* on page 15-5 to 15-10.)

- For Network Scanning the Brother Control Center (SmartUI) selections are used only for configuring the Scan button. You will not be able to initiate a network scan from the Brother Control Center (SmartUI).
- **1** Place the document face up in the ADF, or face down on the scanner glass.
- **2** Press (Scan).
- 3 Press or to select Scan to Image.

▲Scan	to	E-Mail	
Scan	to	Image	
Scan	to	OCR	
▼Scan	to	File	
Select	: •	▼ & Set	

Press **Set**.

4 Press reference or reference to select a destination you want to send.

Press Set.

If the LCD prompts you to enter a PIN Number, enter the 4-digit PIN Number for the destination PC on the control panel.

Press Set.

The MFC will start the scanning process.

Scan to OCR

When you select Scan to OCR your document will be scanned and sent directly to the PC you designated on your network. The Brother SmartUI will activate ScanSoft[®] OmniPage[®] and convert your document into text for viewing and editing from a word processing application on the designated PC. You can change the **Scan** configuration.

(For Windows[®] 98/Me/2000: See *Scan to OCR (Word Processor)* on page 14-12 to 14-13.) (For Windows[®] XP: See *Hardware Section: Changing the Scan to button configuration* on page 15-5 to 15-11.)

- For Network Scanning the Brother Control Center (SmartUI) selections are used only for configuring the Scan button. You will not be able to initiate a network scan from the Brother Control Center (SmartUI).
- **1** Place the document face up in the ADF, or face down on the scanner glass.
- 2 Press (Scan).

Press Set.

▲Scan	to	E-Mail
Scan	to	Image
Scan		
▼Scan	to	File
Select		

Press Set.

If the LCD prompts you to enter a PIN Number, enter the 4-digit PIN Number for the destination PC on the control panel.

Press Set.

The MFC will start the scanning process.

Scan to File

When you select Scan to File you can scan a black and white or color document and send it directly to a PC you designate on your network. The file will be saved in the folder and file format that you have configured in the Brother SmartUI on the designated PC. You can change the **Scan** configuration.

(For Windows[®] 98/Me/2000: See *Scan to File* on page 14-8 to 14-9.) (For Windows[®] XP: See *Hardware Section: Changing the Scan to button configuration* on page 15-5 to 15-11.)

- For Network Scanning the Brother Control Center (SmartUI) selections are used only for configuring the Scan button. You will not be able to initiate a network scan from the Brother Control Center (SmartUI).
- **1** Place the document face up in the ADF, or face down on the scanner glass.
- 2 Press (Scan).
- - Press Set.

- AScan to E-Mail Scan to Image Scan to OCR ▼Scan to File Select ▲▼ & Set

Press Set.

If the LCD prompts you to enter a PIN Number, enter the 4-digit PIN Number for the destination PC on the control panel.

Press Set.

The MFC will start the scanning process.

Max. 25 clients can be connected to one MFC on a Network. For example, if 30 clients try to connect at a time, 5 clients will not be shown on the LCD.

20 Brother Network PC-FAX software

Enable Network PC-FAX

To use the MFC as a Network PC-FAX, the NC-9100h Network board should be installed into the MFC and configured with TCP/IP and mail server settings if you use Scan to E-mail (E-mail server). (See *Using Brother PC-FAX software* on page 17-1.)

Note: The items described in this chapter are specific items relating to the Network version of PC-FAX software that is installed from the "Optional network applications" on the CD-ROM supplied with your MFC.

Brother Network PC-FAX can be configured through PC-FAX Setup, Sending tab.

Sending setup

In order to use the full functionality of Network PC-FAX it is strongly recommended that you enable the Network PC-FAX Setup option on the Sending tab Brother PC-FAX Setup.

Access the Sending Tab from the PC-FAX dialog box by clicking

-OR-

From the Start menu, select **All programs**, **Brother**, **MFL-Pro Suite MFC-8840D**, and then select **PC-FAX Setup**.

2 Check **Enable** box.

Brother PC-FAX Setup	? 🛛	
User Information Sending Speed	Dial (Facsimile style only)	
Dial Setting Outside line access:		
Header V Include <u>h</u> eader	Network PC-FAX	
Addressbook file D:\Program Files\Brother\BRMF	LPRO\address.ba2	
The location of the address book can be changed from the PC-FAX Setup window. This can be accessed from the main PC-FAX transmission screen.		
User interface <u>S</u> imple style <u>E</u> acsimile style		
	OK Cancel	

This software can be used in a network environment and with a locally connected machine. It is important that when used in a network environment the Network PC Fax is set to enable.

Extra options in Address Book

When the Enable Network PC-FAX option is selected, three additional options appear in the address book contact window.

1 In the Address Book dialog box, click the 👩 icon to add a member.

The Brother Address Book Member Setup dialog box will appear:

Brother Address Book Member Setu	P
Name:	
Company:	
Department:	Job Title:
Street Address:	
<u>C</u> ity:	State/Province:
⊒ip Code/Post Code:	Country/ <u>R</u> egion:
Business Phone:	Home Phone:
Mobile <u>P</u> hone:	
Eax:	
🔲 E-Mail:	
☐ MFC E-Mail Address:	
	OK Cancel

2 In the **Brother Address Book Member Setup** dialog box, type the member's information.

Name is required field. You can also enter an E-mail contact address and MFC address for the address book member.

- **3** To send to this contact it is necessary to specify which is the preferred method of sending a document to this contact by checking the Fax, E-mail or MFC E-mail Address box next to the contact.
- **4** Click the OK button to save the member's information.
- If you wish to send a document to this contact by more than one method you must create a second contact and select a different option, Fax, E-Mail or MFC Address.

To use the MFC for Network PC-FAX, see *Using Brother PC-FAX software* on page 17-1.

Using the Brother Network PC-FAX software

The Brother Network PC-FAX feature allows you to use your PC to send any application or document file as a standard fax. You can create a file in any application on your PC, and then send it as a Network PC-FAX. You can even attach a cover page note. All you have to do is set up the receiving parties as Members or Groups in your PC-FAX Address Book or simply enter the destination address or fax number into the User Interface. You can use the Address Book Search feature to quickly find members to send your fax.



Quick Tips:

Please see *Enable Network PC-FAX* on page 20-1 before using Brother Network PC-FAX.

- 1 Ensure that Network PC-FAX is set to "Enable" in the Sending tab of Setup. (See *Enable Network PC-FAX* on page 20-1.)
- 2 To send an E-mail from Brother Network PC-FAX you can either enter the E-mail address in the To: field or in the display for Facsimile Style using the PC keyboard or select the member from the Address Book. The member must have E-mail selected as the chosen destination for that member.
- **3** To send an Internet Fax from Brother Network PC-FAX you can either enter the Internet Fax address in the To: field or in the display for Facsimile style using the PC keyboard or select the member from the Address Book. The member must have MFC Mail Address selected as the chosen destination for that member.
- **4** To send a Network Fax simply select a member from the address book or enter the fax number into the User Interface with the PC keyboard. The member must have Fax selected as the chosen destination for that member.

Sending a Network PC-FAX to an E-mail address or sending an Internet Fax requires SMTP/POP3 mail server support.

Sending a Network PC-FAX from your Macintosh[®] application

You can send a fax directly from your ${\sf Macintosh}^{\it @}$ application using the following steps:

For Mac OS[®] 8.6 - 9.2 users

- **1** Follow the steps in the Quick Setup Guide.
- **2** Follow the steps on pages 18-14.

For Mac OS[®] X users

- **1** Follow the steps in the Quick Setup Guide.
- **2** Follow the steps on page 18-16.

21 Important information

IEC 60825 Specification

This machine is a Class 1 laser product as defined in IEC 60825 specifications. The label shown below is attached in countries where required.



This machine has a Class 3B Laser Diode which emits invisible laser radiation in the Scanner Unit. The Scanner Unit should not be opened under any circumstances.

Laser Diode

Wave length:	760 - 810 nm
Output:	5 mW max.
Laser Class:	Class 3B

Caution

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

For your safety

To ensure safe operation the three-pin plug supplied must be inserted only into a standard three-pin power point which is effectively grounded through the normal household wiring.

The fact that the equipment operates satisfactorily does not imply that the power is grounded and that the installation is completely safe. For your safety, if in any doubt about the effective grounding of the power, consult a qualified electrician.

Disconnect device

This product must be installed near a socket outlet that is easily accessible. In case of emergencies, you must disconnect the power cord from the socket outlet in order to shut off power completely.

IT power system (For Norway only)

This product is also designed for IT power system with phase to phase voltage 230V.

LAN connection

Caution: Connect this product to the LAN connection which is not subjected to overvoltages.

International ENERGY STAR[®] Compliance Statement

The purpose of the International ENERGY STAR[®] Program is to promote the development and popularization of energy-efficient office equipment.

As an ENERGY STAR[®] Partner, Brother Industries, Ltd. has determined that this product meets the ENERGY STAR[®] guidelines for energy efficiency.



Important safety instructions

- **1** Read all of these instructions.
- 2 Save them for later reference.
- **3** Follow all warnings and instructions marked on the product.
- **4** Switch off before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- **5** Do not use this product near water.
- **6** Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 7 Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should never be placed in a built-in installation unless proper ventilation is provided.
- 8 This product should be operated from the type of power source indicated on the label. If you are not sure of the type of power available, call your dealer or local power company.

Use only the power cord supplied with this MFC.

- **9** This product is equipped with a 3-wire grounded plug, a plug having a third (grounded) pin. This plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, call your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounded plug.
- **10** Do not allow anything to rest on the power cord. Do not place this product where people can walk on the cord.
- **11** Do not place anything in front of the MFC that will block received faxes. Do not place anything in the path of received faxes.
- **12** Wait until pages have exited the MFC before picking them up.

- **13** Unplug this product from the wall outlet and refer servicing to Authorized Service Personnel under the following conditions:
 - When the power cord is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.
- **14** To protect your product against power surges, we recommend the use of a power protection device (Surge Protector).
- **15** To reduce the risk of fire, electric shock and injury to persons, note the following:
 - Do not use this product near appliances that use water, a swimming pool or in a wet basement.
 - Do not use the MFC's telephone during an electrical storm (there is the remote possibility of an electrical shock) or to report a gas leak in the vicinity of the leak.
 - Use only the power cord indicated in this manual.

Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd. Brother is a registered trademark of Brother Industries, Ltd.

Multi-Function Link is a registered trademark of Brother International Corporation.

© Copyright 2003 Brother Industries, Ltd. All rights reserved.

Windows, Microsoft and Windows NT are registered trademarks of Microsoft in the U.S. and other countries.

Macintosh, QuickDraw, iMac and iBook are trademarks or registered trademarks of Apple Computer, Inc.

Postscript and Postscript Level 3 are registered trademarks or trademarks of Adobe Systems Incorporated.

PaperPort and OmniPage are registered trademarks of ScanSoft, Inc.

Presto! PageManager is a registered trademark of NewSoft Technology Corporation.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

All other brand and product names mentioned in this User's Guide are registered trademarks of their respective companies.

22 Troubleshooting and routine maintenance

Troubleshooting

IMPORTANT

For technical help, you must call the country where you bought the MFC. Calls must be made *from within* that country.

Error messages

As with any sophisticated office product, errors may occur. If this happens, your MFC identifies the problem and displays an error message. The most common error messages are shown below.

ERROR MESSAGES		
ERROR MESSAGE	CAUSE	ACTION
BT Call Sign On	The machine is set BT Call Sign to ON. You cannot change the ReceiveMode from Manual to another mode.	Set BT Call Sign to OFF. (See <i>BT</i> <i>Call Sign (For U.K. Only)</i> on page 5-14.)
Change Drum Soon	The drum unit is near the end of its life.	Use the drum unit until you have a print quality problem; then replace the drum unit with a new one.
	The drum counter was not reset.	 Open the front cover, and then press Clear/Back. Press 1 to reset.
Check Original	The documents were not inserted or fed properly, or document scanned from ADF was longer than about 90cm.	See <i>Document jams</i> on page 22-5.
Check Paper Check Paper #1 Check Paper #2	The MFC is out of paper or paper is not properly loaded in the paper tray.	Refill the paper in the paper tray or MP tray. — OR — Remove the paper and load it again.
Check Paper MP	Paper in the MP tray runs out.	Reload paper. (See <i>To load paper or</i> other media in the multi-purpose tray (MP tray) (For MFC-8840D) on page 2-9.)

ERROR MESSAGES		
ERROR MESSAGE	CAUSE	ACTION
Check Paper Size	When you see this error, the paper in the paper tray does not match the paper size you set in Menu , 1 , 3 .	Load the appropriate size paper or change the default setting. (See <i>Setting the Mode Timer</i> on page 4-6).
Check Scan Lock	The scanner lock is locked.	Release the scanner lock lever, and then press Stop/Exit .
Comm.Error	Poor phone line quality caused communication error.	Try the call again. If problem continues, call Telephone Company to check your phone line.
Connection Fail	You tried to poll a fax machine that is not in Polled Waiting mode.	Verify the other party's polling setup.
Cooling Down Wait for a while	The temperature of the drum unit or toner cartridge is too hot. The MFC will pause its current print job and go in to cooling down mode. During the cooling down mode, you will hear the cooling fan running while the display on the MFC shows Cooling Down, and Wait for a while.	You must wait 20 minutes for it to cool.
Cover Open Pls Close Cover	The front cover was not completely closed.	Close the front cover for the drum unit.
Disconnected	The other party or other party's fax machine terminated the call.	Try to transmit or receive again.
DX Lever Error	The paper adjustment lever for duplex printing is not correctly set for the paper size.	Set the duplex lever to the correct position. (See <i>To use Automatic</i> <i>Duplexing for fax, copy and print</i> <i>operations (For MFC-8840D)</i> on page 2-11.)
Face Up Open	The face-up output tray is open.	Please close the face-up output tray.
Fuser Open	The fuser cover is open.	Please close the jam clear cover. (See <i>Paper jams</i> on page 22-6.)
Machine Error XX	MFC has a mechanical problem.	Call Brother or your dealer for service.
No DX Tray	You tried to make duplex printing with duplex cover open.	Install the duplex tray correctly. (See Paper is jammed in the duplex tray (For MFC-8840D) on page 22-10.)
No Response/Busy	The number you dialled does not answer or is busy.	Verify the number and try again.

ERROR MESSAGES		
ERROR MESSAGE	CAUSE	ACTION
Not Registered	You tried to access a One-Touch or Speed-Dial number that is not programmed.	Set up the One-Touch or Speed-Dial number. (See <i>Storing One-Touch</i> <i>Dial numbers</i> on page 7-1 and <i>Storing Speed-Dial numbers</i> on page 7-3.)
Out of Memory	You can't store data in the memory.	(Fax sending in process) Press Stop/Exit and wait until the other operations in progress finish and then try again. —OR— Clear the data in the memory. (See <i>Out of Memory message</i> on page 10-5.) (Copy operation in process) Press Stop/Exit and wait until the other operations in process finish and then try again. —OR— Clear the data in the memory. (See <i>Out of Memory message</i> on page 10-5.) —OR— Add an optional memory. (See <i>Memory board</i> on page 23-1.) (Printing operation in process) Reduce print resolution. (See <i>Print</i> <i>Quality</i> on page 12-5.) —OR— Clear the data in the memory. (See <i>Out of Memory message</i> on page 10-5.) —OR— Clear the data in the memory. (See <i>Out of Memory message</i> on page 10-5.) —OR— Add an optional memory. (See <i>Memory board</i> on page 23-1.)
Paper Jam	The paper is jammed in the MFC.	See Paper jams on page 22-6 and Paper is jammed in the duplex tray (For MFC-8840D) on page 22-10.

ERROR MESSAG	ERROR MESSAGES		
ERROR MESSAGE	CAUSE	ACTION	
Pls Open Cover	A page, piece of paper or paper clip, etc. may be jammed inside the MFC.	Open the front cover. If you see any jammed paper or other item, gently pull it out, then close the front cover. If the error message remains, open and close the front cover again. If the MFC cannot reset itself and return to the date and time prompt, it will display Machine Error XX. Then contact your Brother dealer for service.	
Toner Empty	Toner cartridge is not installed. — OR — Toner is used up and printing is not possible.	Reinstall the toner cartridge. — OR — Replace the toner cartridge with a new one. (See <i>Replacing the toner</i>	
		<i>cartridge</i> on page 22-27.)	
Toner Low	If the LCD shows Toner Low, you can still print. But the toner is depleted and the MFC is telling you that the toner will soon run out.	Order a new toner cartridge now.	

Document jams

Based upon where the document is jammed, follow the appropriate set of instructions to remove it.

Document is jammed in the top of the ADF unit.

- Take out any paper from the ADF that is not jammed.
- **2** Lift the ADF cover.
- **3** Pull the jammed document out to the right.
- **4** Close the ADF cover.
- 5 Press Stop/Exit.


Document is jammed inside the ADF unit.

- Take out any paper from the ADF that is not jammed.
- 2 Lift the document cover.
- **3** Pull the jammed document out to the right.
- 4 Close the document cover.
- **5** Press **Stop/Exit**.

-OR-

- **1** Take the ADF support out of the ADF unit.
- 2 Pull the jammed document out to the right.
- 3 Press Stop/Exit.



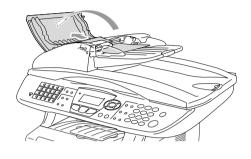




Paper jams

To clear paper jams, please follow the steps in this section.

After you have just used the MFC, some parts inside the MFC are extremely hot. When you open the front cover or back output tray of the MFC, never touch the shaded parts shown in the following diagram.

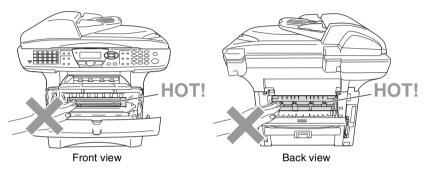


Clear the jammed paper as follows.

If the jammed paper is removed completely by using the information in the following steps, you can install the paper tray first, and then close the front cover and the MFC will resume printing automatically.




- If a paper jam occurs when using the optional lower tray unit, check for correct installation of the upper paper tray.
- Always remove all paper from the paper tray and straighten the stack when you add new paper. This helps prevent multiple sheets of paper from feeding through the MFC at one time and reduces paper jams.

- 1 Pull the paper tray completely out of the MFC.
- 2 Pull the jammed paper up and out of the MFC.

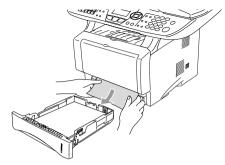


- **3** Press the cover release button and then open the front cover.
- **4** Pull out the drum unit assembly. Pull the jammed paper up and out of the MFC. If you cannot remove the drum unit assembly easily at this time, do not use extra force. Instead, pull the edge of the jammed paper from the paper tray.

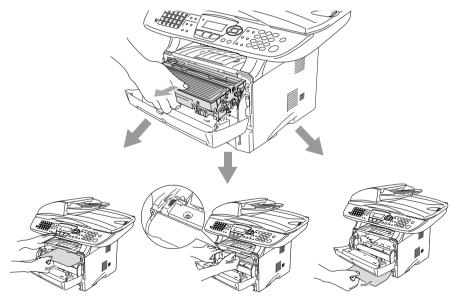




To prevent damage to the MFC caused by static electricity, do not touch the electrodes shown in the following diagram.

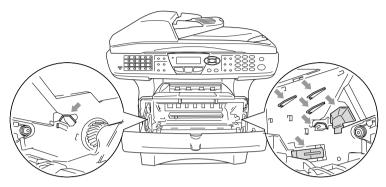


5 Open the back output tray. Pull the jammed paper out of the fuser unit. If the paper jam can be cleared, go to Step 7.

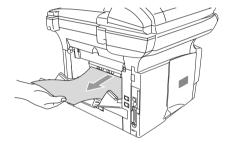


If you have to pull the paper toward the back of the MFC, the fuser may get dirty with toner powder and it may scatter on the next printouts. Print a few copies of the test page until the scattering of toner stops.


After you have just used the MFC, some internal parts of the MFC are extremely **HOT!** Wait for the MFC to cool down before you touch the internal parts of the MFC.

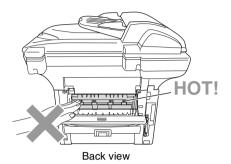


6 Open the jam clear cover (fuser cover). Pull the jammed paper out of the fuser unit.

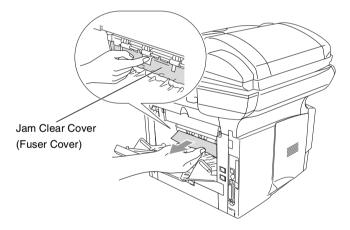

7 Close the jam clear cover. Close the back output tray.

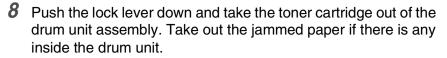


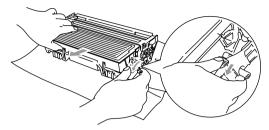


- **9** Put the drum unit assembly back in the MFC.
- 10 Put the paper tray in the MFC.
- **11** Close the front cover.

Paper is jammed in the duplex tray (For MFC-8840D)


1 Pull the duplex tray and paper tray out of the MFC.

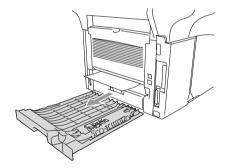

2 Pull the jammed paper out of the MFC.

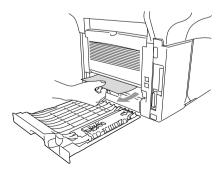

3 Put the duplex tray and paper tray back into the MFC.

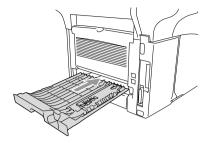

- The Jam Duplex message appears if you remove a sheet of paper from the Face Down Output Tray after only one side has printed.
 - If the Paper Adjustment Lever for Duplex Printing is not set correctly for the paper size, paper jams may occur and the printing will be out of position on the page.

If you are having difficulty with your MFC

If you think there is a problem with the way your faxes look, *make a copy first*. If the copy looks good, the problem is probably not your MFC. Check the chart below and follow the troubleshooting tips.

DIFFICULTY	SUGGESTIONS
Printing or Receiving Faxes	
Condensed print and horizontal streaks or the top and bottom of sentences are cut off.	If your copy looks good, you probably had a bad connection, with static or interference on the telephone line. If the copy looks bad, clean the scanner area. If there is still problem, call Brother or your dealer for service.
Poor quality print.	See Improving the print quality on page 22-17.
Vertical black lines when receiving.	Sometimes you may see vertical streaks/black lines on the faxes you receive. Your MFC's primary corona wire for printing may be dirty, or the sending party's fax scanner may be dirty. Clean your primary corona wire (See <i>Cleaning the drum unit</i> on page 22-26), or ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine. If the problem continues call your dealer for service.
Horizontal streaks; lines are missing.	You may get a fax with horizontal streaks or with missing lines. Usually this is caused by a poor telephone connection. Ask the other party to send the fax again.
Received faxes appear as split or blank pages.	If the received data is divided and printed on two pages or if you get an additional blank page, your Paper Size setting may not be correct for the paper you are using (See <i>Type and size of paper</i> on page 2-1). Make sure that auto reduction function setting is turned on. (See <i>Printing a reduced incoming fax (Auto Reduction)</i> on page 5-5.)
Phone Line or Connections	
Dialling does not work	Check for a dial tone. Change Tone/Pulse setting. (See Setting Tone or Pulse dialling mode (Except for the Nordic Countries) on page 4-15.) Check all line cord connections. Check power cord connection. Send a manual fax by lifting the external handset and dialling the number. Wait to hear fax receiving tones before pressing Start .
The MFC does not answer when called.	Make sure the MFC is in the correct receiving mode for your setup. (See <i>Basic sending operations</i> on page 6-7.) Check for a dial tone. If possible, call your MFC to hear it answer. If there is still no answer, check the telephone line cord connection. If there is no ringing when you call your MFC, ask your telephone company to check the line.

DIFFICULTY	SUGGESTIONS		
Sending Faxes			
Poor sending quality.	Try changing your resolution to Fine or S. Fine. Make a copy to check your MFC's scanner operation. If copy quality is not good, clean the scanner. (See <i>Cleaning the scanner</i> on page 22-24.)		
Transmission Verification Report says 'RESULT:NG' or 'RESULT:ERROR'.	There is probably temporary noise or static on the line. Try sending the fax again. If you send a PC FAX message and get 'RESULT:NG' or, on the Transmission Verification Report, your MFC may be out of memory. To gain extra memory, you can turn off Fax Storage (see <i>Setting Fax Storage</i> on page 8-2), print fax messages in memory (see <i>Polling</i> on page 5-10) or cancel a Delayed Fax or Polling Job (see <i>Cancelling a job while scanning the document</i> on page 6-12). If the problem continues, ask the telephone company to check your phone line.		
Vertical black lines when sending.	If the copy you made shows the same problem, your scanner is dirty. (See <i>Cleaning the scanner</i> on page 22-24.)		
Handling Incoming Calls			
MFC 'Hears' Voice as CNG Tone.	If your MFC is set to Fax Detect ON, it is more sensitive to sounds. Your MFC may mistakenly interpret certain voices or music on the line as a calling fax machine and respond with fax receiving tones. Deactivate the fax by pressing Stop/Exit . Try avoiding this problem by turning Fax Detect to OFF. (See <i>Fax Detect</i> on page 5-4.)		
Sending a Fax Call to the MFC.	If you answered at the MFC, press Start and hang up immediately. If you answered on an external or extension phone, enter your Remote Activation Code (default setting is (\times 51). When your MFC answers, hang up.		
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, RingMaster, Voice Mail, an answering machine, an alarm system or other custom feature on a single phone line with your MFC, it may create a problem sending or receiving fax data.		
Menu Setting Difficulties	Menu Setting Difficulties		
The MFC beeps when you try to access the Setup Receive and Setup Send menu.	Make sure that MFC is in Fax mode. If the Fax key is not illuminated, press it to turn on Fax mode. Setup Receive Setting (Menu, 2, 1) and Setup Send Setting (Menu, 2, 2) are available only when the MFC is in Fax mode.		
Copy Quality Difficulties			
Vertical streaks appear in copies.	Sometimes you may see vertical streaks on your copies. Either the scanner or the primary corona wire for printing is dirty. Clean them both. (See <i>Cleaning the scanner</i> on page 22-24 and <i>Cleaning the drum unit</i> on page 22-26.)		

DIFFICULTY	SUGGESTIONS
Printer Difficulties	
The MFC does not print.	 Check the following: The MFC is plugged in and the power switch turned On. (See the Quick Setup Guide.) The toner cartridge and drum unit are installed properly. (See <i>Replacing the drum unit</i> on page 22-32.) The interface cable is securely connected between the MFC and computer. (See the Quick Setup Guide.) Check to see if LCD is showing an error message. (See <i>Error messages</i> on page 22-1.)
The MFC prints unexpectedly or it prints garbage.	Reset the MFC or turn it off and then on again. Check the primary settings in your application software to make sure it is set up to work with your MFC.
The MFC prints first couple of pages correctly, then some pages have text missing.	Your computer is not recognizing the printer's input buffer full signal. Please make sure to connect the MFC cable correctly.
The MFC cannot print full pages of a document. Out of Memory message occurs.	Reduce the printing resolution. Reduce the complexity of your document and try again. Reduce the graphic quality or the number of font sizes within your application software.
My headers or footers appear when I view my document on the screen but do not appear when I print them.	Most laser printers have a restricted area that will not accept print. Usually these are the first two lines and last two lines, leaves 62 printable lines. Adjust the top and bottom margins in your document to allow for this.
Scanning Difficulties	
TWAIN errors appear while scanning.	Make sure the Brother TWAIN driver is selected as the primary source. In PaperPort [®] , click Scan in the File menu and select the Brother TWAIN driver.
Software Difficulties	
Cannot install software or print.	Run the MFL-Pro Suite Repair and Install program on the CD-ROM. This program will repair and reinstall the software.
Cannot perform '2 in 1 or 4 in 1' printing.	Check that the paper size setting in the application and in the printer driver are the same.
Cannot print when using Adobe Illustrator.	Try to reduce the print resolution.
When using ATM fonts, some characters are missing or some characters are printed in their place.	If you are using Windows [®] 98/98SE/Me, select 'Printer Settings' from the 'Start' menu. Select the properties of the 'Brother MFC-8440 or MFC-8840D (USB) Printer'. Click 'Spool Setting' on the 'Details' tab. Select 'RAW' from 'Spool Data Format.'


DIFFICULTY	SUGGESTIONS
"Unable to write to LPT1" or "LPT1 already in use" Error Message appears. "MFC is Busy" or "MFC Connect Failure" Error Message appears.	 Make sure the MFC is on (plugged into the AC power outlet and turned the power switch on) and that it is connected directly to the computer using the bundled IEEE-1284 bi-directional parallel cable. The cable must not go through another peripheral device (such as a Zip Drive, External CD-ROM Drive, or Switch box). Make sure the MFC is not displaying an error message on the LCD Display. Make sure no other device drivers, which also communicate through the parallel port, are running automatically when you boot up the computer (such as, drivers for Zip Drives, External CD-ROM Drive, etc.) Suggested areas to check: (<i>Load=, Run=command lines in the win.ini file or the Statup Group</i>) Check with you computer manufacturer to confirm that the computer's parallel port settings in the BIOS are set to support a bi-directional machine; i.e. (Parallel Port Mode – ECP)
"MFC Connect Failure"	If the MFC is not connected to your PC and you have loaded the Brother software, the PC will show 'MFC Connect Failure' each time you restart Windows [®] . You can ignore this message or you can turn it off as follows. Double-click "\tool\WarnOFF.REG" from the supplied CD-ROM. The Scan key on the MFC's control panel will not work unless you restart your PC with the MFC connected. To turn it back on, Double-click "\tool\WarnON.REG" from the supplied CD-ROM.
Paper Handling Difficulties	
The MFC does not load paper. The LCD shows Check Paper or Paper Jam.	Check to see if the Check Paper or Paper Jam message appears on the LCD. If it is empty, load a new stack of paper into the paper tray. If there is paper in the paper tray, make sure it is straight. If the paper is curled, you should straighten it. Sometimes it is helpful to remove the paper, turn the stack over and put it back into the paper tray. Reduce the amount of paper in the paper tray, and then try again. Check that the manual feed mode or MP tray or MP mode is not selected in the printer driver.
The MFC does not feed paper from the manual feed tray.	Reinsert the paper firmly, load one sheet at a time. Make sure that manual feed mode or MP mode is selected in the printer driver.
How can I load envelopes?	You can load envelopes from the manual feed or MP tray. Your application software must be set up to print the envelope size you are using. This is usually done in the Page Setup or Document Setup menu of your software. Refer to your software application manual.
What paper can I use?	You can use plain paper, envelopes, transparencies and labels that are made for laser machines. (For information on paper you can use, see <i>Printer operation keys</i> on page 11-17.)
How can I clear paper jams?	See Paper jams on page 22-6.

DIFFICULTY	SUGGESTIONS	
Print Quality Difficulties		
Printed pages are curled.	Thin or thick paper below the standard can cause this problem. Make sure you select the Paper Type that suits the media type you use. (See <i>Setting the Paper Type</i> on page 4-7 and <i>Media Type</i> on page 12-4.)	
Printed pages are smeared.	The Paper Type setting may be incorrect for the type of print media you are using— OR —The print media may be too thick or have a rough surface. (See <i>Setting the Paper Type</i> on page 4-7 and <i>Media Type</i> on page 12-4.)	
Printouts are too light.	Set Toner Save mode to off in the Advance tab in the printer driver. (See <i>Toner Save Mode</i> on page 12-6.)	
Network Difficulties		
I cannot print over the Network	Make sure that your MFC is powered on and is On Line and in Ready mode. Press the Test switch. Then the current settings of the NC-9100h are printed.Verify that the cabling and Network connections are good. If possible, try connecting the MFC to a different port on your hub using a different cable. Check to see if there is any LED activity. The NC-9100h has a two color LED for diagnosing problems.	

Improving the print quality

This section provides information on the following topics:

Examples of poor print quality	Recommendation
ABCDEFGH abcdefghijk A B C D a b c d e 0 1 2 3 4 Faint	Check the printer's environment. Conditions such as humidity, high temperatures, and so on may cause this print fault. (See <i>Choosing a</i> <i>location</i> on page v.) If the whole page is too light, Toner Save mode may be on. Turn off Toner Save mode in the printer Properties tab of the driver. — OR — If your MFC is not connected to a computer, turn off Toner Save mode in the MFC itself. (See <i>Toner Save</i> on page 4-10.) Try installing a new toner cartridge. (See <i>Replacing the toner cartridge</i> on page 22-27.) Try installing a new drum unit. (See <i>Replacing the drum unit</i> on page 22-32.)
ABCDEFGH abcdefghijk A B C D ab c de 01234 Gray background	Make sure that you use paper that meets the recommended specifications. (See <i>About paper</i> on page 2-1.) Check the printer's environment - high temperatures and high humidity can increase the amount of background shading. (See <i>Choosing a location</i> on page v.) Use a new toner cartridge. (See <i>Replacing the toner cartridge</i> on page 22-27.) Use a new drum unit. (See <i>Replacing the drum unit</i> on page 22-32.)
B B B Ghost	Make sure you use paper that meets our specifications. Rough-surfaced paper or thick print media may cause this problem. Make sure that you choose the appropriate media type in the printer driver. (See <i>About paper</i> on page 2-1.) Try using a new drum unit. (See <i>Replacing the drum unit</i> on page 22-32.)
ABQUEGH aboutshik A B C D a bic de 0 1234 Toner specks	Make sure that you use paper that meets our specifications. Rough-surfaced paper may cause the problem. (See <i>About paper</i> on page 2-1.) The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing</i> <i>the drum unit</i> on page 22-32.)
B Hollow print	Make sure that you use paper that meets our specifications. (See <i>About paper</i> on page 2-1.) Choose Thick Paper mode in the printer driver, or use thinner paper than you are currently using. Check the printer's environment because conditions such as high humidity can cause hollow print. (See <i>Choosing a location</i> on page v.)
All black	You may clear the problem by cleaning the primary corona wire inside the drum unit by sliding the blue tab. Make sure you return the blue tab to the home position (\blacktriangle). (See <i>Cleaning the drum unit</i> on page 22-26.) The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing</i> <i>the drum unit</i> on page 22-32.)

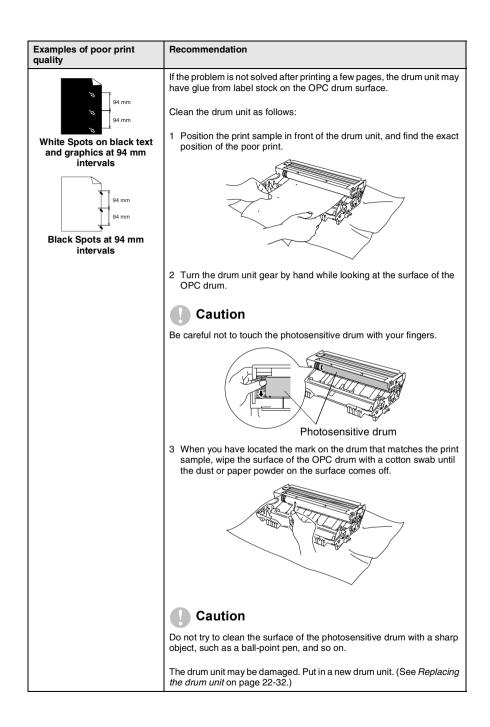

Examples of poor print quality	Recommendation
ABCDEFGH abcdetghijk A B C D a b c d e 0 1 2 3 4 Black toner marks across the page	The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 22-32.) Make sure that you use paper that meets our specifications. (See <i>About paper</i> on page 2-1.) If you use label sheets for laser printers, the glue from the sheets may sometimes stick to the OPC drum surface. Clean the drum unit. (See <i>Cleaning the drum unit</i> on page 22-26.) Do not use paper that has clips or staples because they will scratch the surface of the drum. If the unpacked drum unit is in direct sunlight or room light, the unit may be damaged.
→BCDEFGH abdefghijk - AB C D a b c de -01234 White lines across the page	Make sure that you use paper that meets our specifications. A rough surfaced paper or thick print media can cause the problem. Make sure that you select the appropriate media type in the printer driver. The problem may disappear by itself. Try printing multiple pages to clear this problem, especially if the printer has not been used for a long time. The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing</i> <i>the drum unit</i> on page 22-32.)
Lines across the page	Clean the inside of the printer and the primary corona wire in the drum unit. (See <i>Cleaning the drum unit</i> on page 22-26.) The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing</i> <i>the drum unit</i> on page 22-32.)
AB¢DEFGH ab¢defghijk A B ¢ D a b ¢ de 0 1 2 3 4 Black lines down the page Printed pages have toner stains down the page.	Clean the primary corona wire of the drum unit. Make sure the primary corona wire cleaner is at the home position (▲). The drum unit may be damaged. Install a new drum unit. (See <i>Replacing</i> <i>the drum unit</i> on page 22-32.) The toner cartridge may be damaged. Put in a new toner cartridge. (See <i>Replacing the toner cartridge</i> on page 22-27.) Make sure that a torn piece of paper is not inside the printer covering the scanner window. The fixing unit may be smudged. Call Customer Service. You may clear the problem by wiping the scanner window with a soft
AB¢DEFGH abs/bfghilk ABCD abcde 01234 White lines down the page	You may clear the problem by wiping the scanner window with a soft cloth. (See <i>Cleaning the printer</i> on page 22-25.) The toner cartridge may be damaged. Put in a new toner cartridge. (See <i>Replacing the toner cartridge</i> on page 22-27.)
ABCDEFGH abcdefghijk A B C D a b c de 0 1 2 3 4 Page skewed	Make sure the paper or other print media is loaded properly in the paper tray and that the guides are not too tight or too loose against the paper stack. Set the paper guides correctly. If you are using the manual feed tray (or the multi-purpose tray). (See <i>How to load paper</i> on page 2-5.) The paper tray may be too full. Check the paper type and quality. (See <i>About paper</i> on page 2-1.)

Examples of poor print quality	Recommendation
ABCDEFGH abcdetghlik A B C D abcde 01234 Curl or wave	Check the paper type and quality. High temperatures and high humidity will cause paper to curl. If you don't use the printer very often, the paper may have been in the paper tray too long. Turn over the stack of paper in the paper tray. Also, try fanning the paper stack and then rotating the paper 180° in the paper tray. Try printing using the straight-through output path. (See <i>How to load paper</i> on page 2-5.)
ABCDEFGH abcdefghijk A B C D a b c d e 0 1 2 3 4 Wrinkles or creases	Make sure that paper is loaded properly. Check the paper type and quality. (See <i>About paper</i> on page 2-1.) Try printing using the straight-through output path. (See <i>How to load paper</i> on page 2-5.) Turn over the stack of paper in the tray or try rotating the paper 180° in the input tray.

The drum unit is a consumable item and it is necessary to replace it periodically.


Packing and shipping the MFC

Whenever you transport the MFC, use the packing materials that came with your machine. If you do not pack the MFC correctly, you may void your warranty.

- **1** Turn the MFC power switch off.
- 2 Unplug the MFC from the telephone wall socket.
- **3** Unplug the MFC from the AC outlet.


Lock the Scanner Lock

4 Push the Scanner Lock Lever up to lock the scanner. This lever is located on the left of the scanner glass.

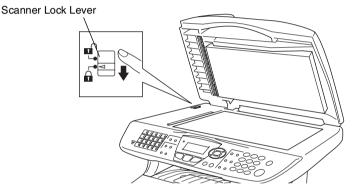


Caution

 Damage caused to your MFC by failure to lock the scanner before moving and shipping may void your warranty.




6 Remove the drum unit and toner cartridge assembly. Leave the toner cartridge installed in the drum unit.

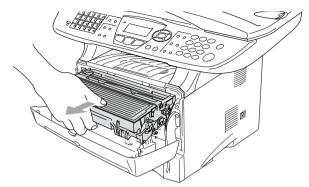


7 Place the drum unit and toner cartridge assembly into the plastic bag and seal the bag.




- 8 Close the front cover. Fold down the face-down output tray flap. Remove the telephone line cord.
- **9** Wrap the MFC in the plastic bag and place it in the original carton with the original packing material.

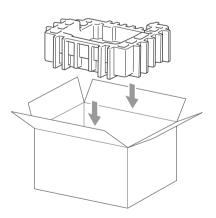

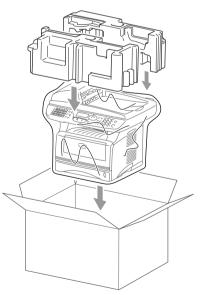

10 Pack the drum unit and toner cartridge assembly, telephone line cord, AC cord and printed materials in the original carton as shown below:

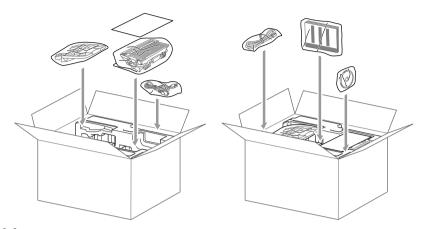


11 Close the carton and tape it shut.

Routine maintenance

Cleaning the scanner

Turn the MFC power switch off and lift the document cover. Clean the scanner glass and glass strip with dry cloth and the white film with isopropyl alcohol on a lint free cloth.

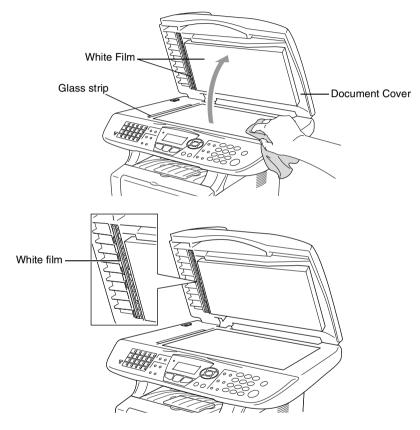


Cleaning the printer


Caution

- Do not use isopropyl alcohol to remove dirt from the control panel. It may crack the panel.
- Do not use isopropyl alcohol to clean the laser scanner window.
- Do *not* touch the scanner window with your finger.
- The drum unit contains toner, so handle it carefully. If toner scatters and your hands or clothes get dirty, immediately wipe or wash it off with cold water.
- **1** Turn the MFC power switch off and open the front cover.
- **2** Remove the drum unit and toner cartridge assembly.

Just after you have used the MFC, some internal parts of the machine are extremely **HOT!** When you open the front cover of the MFC, never touch the shaded parts shown in the diagram below.

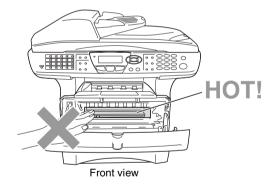


3 Gently clean the scanner window by wiping it with a clean soft dry cloth. Do *not* use isoproply alcohol.

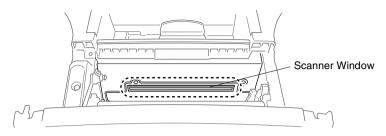

Cleaning the drum unit

We recommend placing the drum unit and toner cartridge assembly on a cloth or large disposable paper to avoid spilling and scattering toner.

- 1 Clean the primary corona wire inside the drum unit by gently sliding the blue tab from right to left several times.
- **2** Return the blue tab and snap it into the Home position $(\mathbf{\nabla})$.

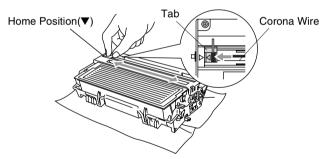

Caution

If the blue tab is not at Home position ($\mathbf{\nabla}$), printed pages may have vertical stripes.

- **3** Reinstall the drum unit and toner cartridge assembly into the MFC. (See *Replacing the drum unit* on page 22-32.)
- **4** Close the front cover.
- **5** Plug in the power cord *first*, then the telephone cord.

Replacing the toner cartridge

The MFC can print up to 6,700 pages using a high yield toner cartridge. When the toner cartridge is running low, the LCD shows Toner Low. The MFC is supplied with a standard toner cartridge that must be replaced after approximately 3,500 pages. Actual page count will vary depending on your average type of document (i.e., standard letter, detailed graphics).



It is a good idea to keep a new toner cartridge ready for use when you see the Toner Low warning.


Discard the used toner cartridge according to local regulations, keeping it separate from domestic waste. Be sure to seal the toner cartridge tightly so toner powder does not spill out of the cartridge. If you have questions, call your local waste disposal office.

We recommend that you clean the MFC when you replace the toner cartridge.


How to replace the toner cartridge

🛕 WARNING

Just after you use the MFC, some internal parts of the machine will be extremely **HOT!** So, never touch the shaded parts shown in the illustration.

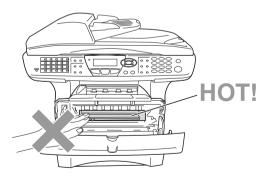


1 Open the front cover and pull out the drum unit.

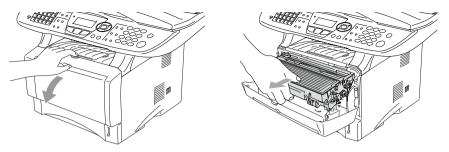


Caution

- Place the drum unit on a drop cloth or large piece of disposable paper to avoid spilling and scattering the toner.
- To prevent damage to the MFC from static electricity, do not touch the electrodes shown below.

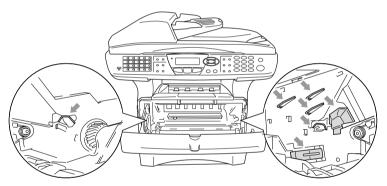

2 Hold down the lock lever on the right and pull the toner cartridge out of the drum unit.

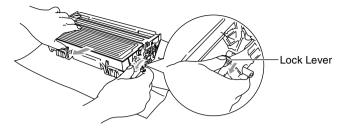

Caution


Handle the toner cartridge carefully. If toner scatters on your hands or clothes, immediately wipe it off or wash it with cold water.

3 Unpack the new toner cartridge. Place the used toner cartridge into the aluminum bag and discard it according to local regulations.

Caution

- Wait to unpack the toner cartridge until immediately before you install it in the MFC. If a toner cartridge is left unpacked for a long period of time, the toner life is shortened.
- Brother multifunction machines are designed to work with toner of a particular specification and work to a level of optimum performance, when used with genuine Brother toner cartridges. Brother cannot guarantee this optimum performance if toner or toner cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than genuine Brother cartridges with this machine nor does it recommend the refilling of empty cartridges with toner from other sources. If damage is caused to parts of this machine as a result of the use of toner or toner cartridges other than genuine Brother nor toner cartridges other than genuine Brother products due to the incompatibility or lack of suitability of those products with the machine, any repairs required as a result will not be covered by the warranty.


4 Gently rock the toner cartridge from side to side five or six times to distribute the toner evenly inside the cartridge.

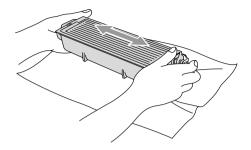


5 Remove the protective cover.




6 Insert the new toner cartridge in the drum unit until it clicks into place. If you put it in properly, the lock lever will lift automatically.

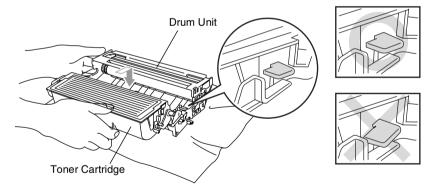

7 Clean the primary corona wire inside the drum unit by gently sliding the blue tab from right to left several times. Return the blue tab to the Home position (▼) before reinstalling the drum unit and toner cartridge assembly.

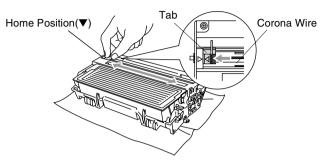

8 Reinstall the drum unit and toner cartridge assembly and close the front cover.

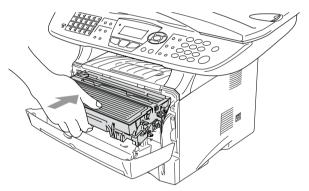

Replacing the drum unit

The MFC uses a drum unit to create print images on paper. If the LCD shows Change Drum Soon, the drum unit is near the end of its life and it is time to purchase a new one.

Even if the LCD shows Change Drum Soon, you may be able to continue printing without having to replace the drum unit for a while. However, if there is a noticeable deterioration in the output print quality (even before Change Drum Soon appears), then the drum unit should be replaced. You should clean the MFC when you replace the drum unit. (See Cleaning the drum unit on page 22-26.)


Caution

When removing the drum unit, handle it carefully because it contains toner. If toner scatters and your hands or clothes get dirty. immediately wipe or wash with cold water.

The actual number of pages your drum will print may be significantly less than these estimates. Because we have no control over the many factors that determine the actual drum life, we cannot guarantee a minimum number of pages that will be printed by your drum.


WARNING

Just after you have used the MFC, some internal parts of the MFC are extremely HOT! So please be careful.

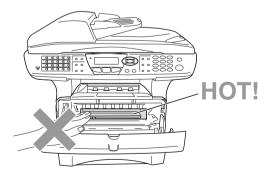


Follow these steps to replace the drum unit:

- **1** Press the cover release button and then open the front cover.
- **2** Remove the old drum unit and toner cartridge assembly. Place it on a drop cloth or disposable paper to avoid scattering toner.

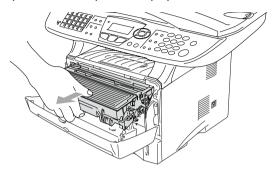


Caution


To prevent damage to the printer from static electricity, do not touch the electrodes shown below.

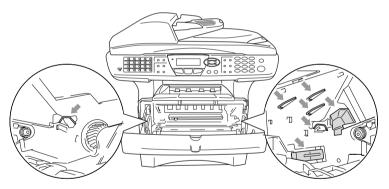

3 Hold down the lock lever on the right and pull the toner cartridge out of the drum unit. (See *Replacing the toner cartridge* on page 22-27.)

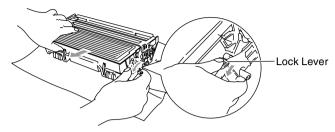

- Discard the used drum unit according to local regulations, keeping it separate from domestic waste. Be sure to seal the drum unit tightly so toner powder does not spill out of the unit. If you have questions, call your local waste disposal office.
- **4** Wait to unpack the new drum unit until immediately before installing it. Place the old drum unit into the plastic bag and discard it according to local regulations.
- **5** Reinstall the toner cartridge into the new drum unit. (See *Replacing the toner cartridge* on page 22-27.)
- 6 Reinstall the new drum unit, keeping the front cover open.
- 7 Press Clear/Back.
- 8 Press 1 and when the LCD shows Accepted, and close the front cover.

 

Caution

If toner scatters and your hands or clothes get dirty, immediately wipe off or wash with cold water.

Checking the drum life

You can see the percentage of the drum's life that remains available.

- 1 Press Menu, 2, 0, 2.
- **2** For five seconds, the LCD shows the available percentage of drum life.

```
20.Miscellaneous
2.Drum Life
```

Remaining:100%

Even if the remaining drum life is 0%, you may continue to use the drum unit until you have a print quality problem.

Page Counter

You can see number of total pages, copy pages, print pages and List/Fax (total fax print + total list print) pages that your MFC has printed.

- 1 Press Menu, 2, 0, 3.
- 2 The LCD shows number of pages for Total and Copy.

Press 🖝 to see Print and List/Fax.

3 Press Stop/Exit.

20.Miscellaneous		
3.Page Counter		
▲ Total	:123456	
▼ Сору	:120002	



Memory board

The memory board is installed on the main controller board inside the MFC. When you add the optional memory board, it increases the performance for both copier and printer operations.

Model Name	Optional Memory
MFC-8440 (32 MB Standard Memory)	32MB TECHWORKS 12457-0001
MFC-8840D (32 MB Standard Memory)	64MB TECHWORKS 12458-0001
	128MB TECHWORKS 12459-0001

In general, the DIMM must have the following specifications:


Туре:	100 pin and 32 bit output
CAS Lantency:	2 or 3
Clock Frequency:	100MHz or more
Capacity:	32, 64, 128MB
Height:	35mm or less
Parity:	NONE
DRAM Type:	SDRAM 4 Bank

Some DIMMs might not work with this MFC. For the latest information from Brother visit:


http://solutions.brother.com

- DO NOT touch the surface of the main board within 15 minutes after turning off the power.
- Before installing the optional memory board, make sure there are no faxes in the memory.
 - **1** Disconnect the telephone line cord, turn the MFC power switch off, unplug the MFC power cord from the AC outlet, and then disconnect the interface cable.

Turn the MFC power switch off, before installing (or removing) the memory board.

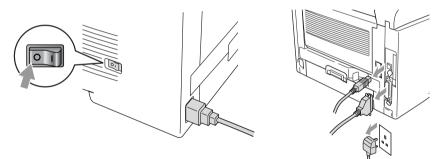

2 Remove the side cover. Loosen the two screws, and then remove the metal shield plate.

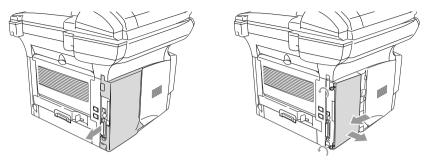

3 Unpack the DIMM and hold it by the edges.

DIMM boards can be damaged by even a small amount of static electricity. Do not touch the memory chips or the board surface. Wear an antistatic wrist strap when you install or remove the board. If you do not have an antistatic wrist strap, frequently touch the bare metal on the printer.

4 Hold the DIMM with your fingers on the side edges and your thumb on the back edge. Line up the notches on the DIMM with the DIMM slot. (Check that the locks on each side of the DIMM slot are open or facing outwards.)



- **5** Press the DIMM straight into the slot (press firmly). Make sure the locks on each side of the DIMM click into place. (To remove a DIMM, you must release the locks.)
- 6 Put the metal plate back on and secure the metal plate with the two screws.
- 7 Put the side cover back on.
- 8 Reconnect the telephone line cord.
- **9** Reconnect any additional interface cables that you removed.
- **10** Reconnect the power cable and then turn on the MFC power switch.
- To check that you have installed the DIMM correctly, print the printer settings by using the selection in the driver and check the printout to make sure it shows the additional memory.
 - You can check the current memory size in the user setting list. (See the NC-9100h Network User's Guide on the CD-ROM.)


If the Status LED turns Red for a Service Error, please call your dealer or Brother authorized service center.

Network (LAN) board

When you add the optional Network (LAN) Board (NC-9100h), you can connect your MFC into the network to use the Internet FAX, Network Scanner, Network Printer and Network Management operations.

DO NOT touch the surface of the main board within 15 minutes after turning off the power.

For more details about how to configure the Network board, please see the NC-9100h Network User's Guide on the CD-ROM supplied with the MFC.

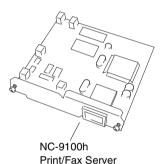

OPTIONAL ACCESSORIES 23 - 5

Before starting installation

Be careful when handling the NC-9100h. There are many delicate electronic components that are susceptible to damage from static electricity. To avoid such damage, use the following precautions when handling the board.

- Leave the NC-9100h in its anti-static bag until you are ready to install it.
- Make sure that you are adequately grounded before touching the NC-9100h. Use an anti-static wrist strap and a grounding mat if possible. If you do not have an anti-static wrist strap, touch the bare metal surface on the back of the machine before handling the NC-9100h.
- Avoid moving around the work area in order to eliminate static charge build-up.
- If possible, do not work on a carpeted area.
- Do not flex the board and do not touch the components on the card.

Tools Required:


Phillips Screwdriver

Step 1: Hardware installation


DO NOT touch the surface of the main boards within 15 minutes after turning off the power.

1 Disconnect the telephone line cord, turn the MFC power switch off, unplug the MFC power cord from the AC outlet, and then disconnect the interface cable.


Turn the MFC power switch off, before installing (or removing) the NC-9100h board.

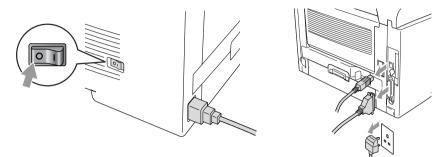


2 Remove the side cover. Loosen the two screws, and then remove the metal shield plate.

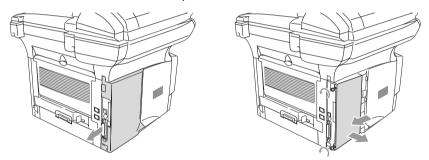

3 Loosen the two screws, and then remove the metal cover plate.

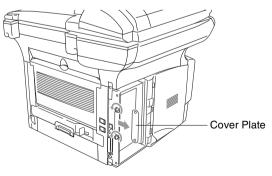


4 Plug the NC-9100h into connector P1 located on the main board as shown in the illustration (press firmly) and secure the NC-9100h with the two screws.

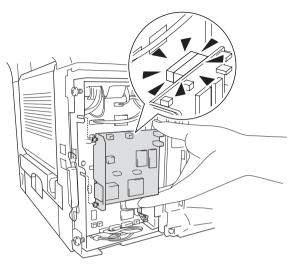

- **5** Put the metal shield plate back on and secure it with the two screws.
- 6 Put the side cover back on.
- **7** Reconnect the telephone line cord.
- 8 Reconnect any additional interface cables that you removed.
- **9** Reconnect the power cable and then turn on the MFC power switch.
- **10** Press the Test switch and print a network configuration page. (See *TEST SWITCH* on page 23-10.)

Step 2: Connecting the NC-9100h to an Unshielded Twisted Pair 10BASE-T or 100BASE-TX Ethernet Network

To connect the NC-9100h to a 10BASE-T or 100BASE-TX Network, you must have an Unshielded Twist Pair Cable. One side of the cable must be connected to a free port on your Ethernet hub and the other side must be connected to the 10BASE-T or 100BASE-TX connector (an RJ45 Connector) of the NC-9100h.

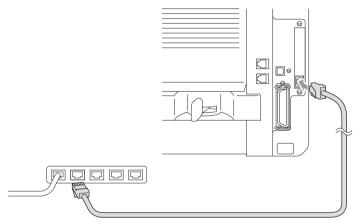

Verifying successful hardware Installation:

Plug in the AC power cord. After initialization and warm-up (this may take several seconds), the machine will come to a Ready state.

LED

No light:

If both of the two LEDs are off, then the print server is not connected to the network.

Link/Speed LED is orange: Fast Ethernet

This Link/Speed LED will be orange if the print server is connected to a 100BASETX Fast Ethernet network.

Link/Speed LED is green: 10 BASE T Ethernet

This Link/Speed LED will be green if the print server is connected to a 10 BASE T Ethernet.

Active LED is yellow:


The Active LED will blink if the print server is receiving or transmitting data.

If there is a valid connection to the network, the LED will blink orange or green.

TEST SWITCH

Short push: Prints the network configuration page.

Long push (more than 5 seconds): Reset the network configuration back to the factory default settings.

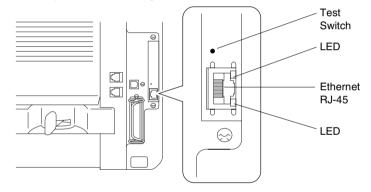

To set up the MFC on the Network, see the *NC-9100h Network* User's Guide on the CD-ROM.

Paper Tray #2

You can purchase the Paper Tray #2 accessory (LT-5000) to use as a third paper source. Tray #2 holds up to 250 sheets of 80 g/m² paper.

Paper Tray #2	Holds approx. 250 sheets of 80 g/m ²
Basis Weight	60 to 105 g/m ²
Moisture Content	4% to 6% by weight
We Recommend:	Xerox Premier 80 g/m ²
Cut sheet:	Xerox Business 80 g/m ²
	Mode DATACOPY 80 g/m ²
	IGEPA X-Press 80 g/m ²



- **ADF (Automatic Document Feeder)** The document can be placed in the ADF and scanned one page at a time automatically.
- Auto Reduction Reduces the size of incoming faxes.
- Automatic fax transmission Sending a fax without picking up the handset of an external phone.
- Automatic Redial A feature that enables your MFC to redial the last fax number if the fax did not go through because the line was busy.
- **Batch Transmission** As a cost savings feature, all delayed faxes to the same fax number will be sent as one transmission.
- **Beeper** The sound the keys make when they are pressed, an error occurs, or a fax has been received or sent.
- **Beeper volume** Volume setting for the beep when you press a key or make an error.
- **Broadcasting** The ability to send the same fax message to more than one location.
- **CNG tones** The special tones (beeps) sent by fax machines during automatic transmission to tell the receiving machine that they are from a fax machine.
- **Coding Method** Method of coding the information contained in the document. All fax machines must use a minimum standard of Modified Huffman (MH). Your MFC is capable of greater compression methods, Modified Read (MR), Modified Modified Read (MMR) and JBIG, if the receiving machine has the same capability.
- **Communication error (or Comm. Error)** An error during fax sending or receiving, usually caused by line noise or static.
- **Compatibility Group** The ability of one fax unit to communicate with another. Compatibility is assured between ITU-T Groups.
- **Contrast** Setting to compensate for dark or light documents, by making faxes or copies of dark documents lighter and light documents darker.

- **Cover Page** Prints a page at the other party's fax machine that contains the sender and recipient's name and fax number, number of pages and comment. You can generate an electronic cover page at the other end with pre-programmed information from memory or you can print a sample cover page to fax with your document.
- **Cover Page Message** The comment that is on the Cover Page. This is a programmable feature.
- **Deactivation Code (Fax/Tel mode)** When the MFC answers a voice call, it pseudo/double-ring. You can pick up at an extension phone by pressing this code (**#51**).
- Delayed Fax Sends your fax at a later time that day.
- Drum Unit A printing device for the MFC.
- **Dual Access** Your MFC can scan outgoing faxes or scheduled jobs into memory at the same time it is sending a fax or receiving or printing an incoming fax.
- **ECM (Error Correction Mode)** Detects errors during fax transmission and resends the pages of the fax that had an error.
- **Extension phone** A telephone on the fax number that is plugged into a separate wall socket.
- **External phone** A TAD (telephone answering device) or telephone that is plugged into the correct socket on the MFC.
- **F/T Ring Time** The length of time that the Brother MFC rings (when the Receive Mode setting is Fax/Tel) to notify you to pick up a voice call that it answered.
- **Fax Detect** Enables your MFC to respond to CNG tones if you interrupt a fax call by answering it.
- **Fax Forwarding** Sends a fax received into the memory to another preprogrammed fax number.
- **Fax Storage** You can print stored faxes later, or retrieve them from another location using Fax Forwarding, or Remote Retrieval operations.
- **Fax tones** The signals sent by sending and receiving fax machines while communicating information.

- **Fax/Tel** You can receive faxes and telephone calls. Do not use this mode if you are using a telephone answering device (TAD).
- Fine resolution Resolution is 203×196 dpi. It is used for small print and graphs.
- **Gray scale** The shades of gray available for copying and faxing photographs.
- **Group number** A combination of One-Touch, Speed-Dial numbers that are stored as a Speed-Dial number for Broadcasting.
- **Help list** A printout of the complete Menu that you can use to program your MFC when you do not have the User's Guide with you.
- **Journal** Lists information about the last 200 incoming and outgoing faxes. TX means Transmit. RX means Receive.
- **Journal Period** The preprogrammed time period between automatically printed Journal Reports. You can print Journal on demand without interrupting this cycle.
- **LCD (liquid crystal display)** The display screen on the MFC that shows interactive messages during On-Screen Programming and shows the date and time when the MFC is idle.
- Manual fax When you lift the handset of your external telephone or press **Tel/R** so you can hear the receiving fax machine answer before you press Start to begin transmission.
- Menu mode Programming mode for changing your MFC's settings.
- **MFL-Pro Suite** Turns your MFC into a printer and a scanner and enables PC faxing using the MFC.
- **OCR (optical character recognition)** The bundled ScanSoft[®] OmniPage[®] software application converts an image of text to text you can edit.
- **One-Touch** Keys on the MFC control panel where you can store numbers for easy dialling. You can store a second number on each key if you press **Shift** and the One-Touch Key together.
- **Out of Paper Reception** Receives faxes into the MFC's memory when the machine is out of paper.
- **Overseas Mode** Makes temporary changes to the fax tones to accommodate noise and static on overseas phone lines.

- **Pause** Allows you to place a 3.5 second delay in the dialling sequence stored on Speed-Dial numbers. Press **Redial/Pause** as many times as needed for longer pauses.
- **Photo resolution** A resolution setting that uses varying shades of gray for the best representation of photographs.
- **Polling** The process of a fax machine calling another fax machine to retrieve waiting fax messages.
- **Pulse** A form of rotary dialling on a telephone line.
- **Quick Dial List** A listing of names and numbers stored in Speed-Dial memory, in numerical order.
- **Real Time Transmission** When memory is full, you can send faxes in real time.
- **Remaining jobs** You can check which jobs are waiting in memory and cancel jobs individually.
- **Remote Access Code** Your own four-digit code that allows you to call and access your MFC from a remote location.
- **Remote Activation Code** Press this code $(\div 51)$ when you answer a fax call from an extension or external phone to transfer the call to the MFC.
- **Remote Retrieval Access** The ability to access your MFC remotely from a touch tone phone.
- **Resolution** The number of vertical and horizontal lines per inch. See: Standard, Fine, Super Fine and Photo.
- **Ring Delay** The number of rings before the MFC answers in FAX mode.
- **Ring Volume** Volume setting for the MFC's ring.
- **Scanning** The process of sending an electronic image of a paper document into your computer.
- **Search** An electronic, alphabetical listing of stored One-Touch, Speed-Dial and Group numbers.
- **Speed-Dial** A preprogrammed number for easy dialling. You must press the **Search/Speed Dial** key and then **#**, and the three digit code to start the dialling process.

- **Standard resolution** 203 x 97 dpi. It is used for regular size text and quickest transmission.
- **Station ID** The stored information that appears on the top of faxed pages. It includes the sender's name and fax number.
- Super fine resolution 203 x 391 dpi. Best for very small print and line art.
- **System Setup List** A printed report that shows the current settings of the MFC.
- **TAD (telephone answering device)** You can connect an external TAD to the EXT. socket of the MFC.
- **Temporary Settings** You can select certain options for each fax transmission and copy without changing the default settings.
- **Tone** A form of dialling on the telephone line used for Touch Tone telephones.
- **Toner cartridge** An accessory that holds toner for the drum unit on Brother laser models.
- **Toner Save** A process that causes less toner to be affixed to the page to extend the life of the toner assembly. This will make the receiving document significantly lighter.
- **Transmission** The process of sending faxes over the phone lines from your MFC to the receiving fax machine.
- **True Type fonts** The fonts that are used in the Windows[®] operating systems. If you install the Brother True Type fonts, more types of fonts will be available for Windows[®] applications.
- **Xmit Report (Transmission Verification Report)** A listing for each transmission, that shows its date, time and number.



Product description

The MFC-8440 and MFC-8840D are **5 in 1** Multi-Function Centers: Printer, Copier, Color Scanner, Fax, and PC-FAX (via your PC). The MFC-8840D includes Duplex Printing.

General

Memory Capacity Optional Memory Automatic Document Feeder (ADF)	32 MB 1 DIMM slot; Memory expandable up to 160 MB Up to 50 pages Temperature: 20°C - 30°C Humidity: 50% - 70% Paper: 75 g/m ² A4 size		
Paper Tray	250 Sheets (a	80 g/m ²)	
Multi-Purpose Tray	50 Sheets (8	0 g/m ²) (MFC-8840D only)	
Manual Feed Tray	Single sheet	(80 g/m ²) (MFC-8440 only)	
Printer Type	Laser		
Print Method	Electrophotography by semiconductor laser beam scanning		
LCD (Liquid Crystal Display)	22 characters \times 5 lines		
Warm-up	Max. 18 seco	nds at 23°C	
Power Source	220 - 240V AC 50/60Hz		
Power Consumption	Average Ope	rating (Copying): 450W or less (25°C)	
	Peak:	1090W or less	
	Sleep:	14W or less 16W or less (When Network LAN board (NC-9100h) is installed.)	
	Standby:	85W or less (25°C)	
Dimensions	$532 \times 444 \times 4$	169 (mm)	
Weight	Without Drum		
	MFC-8440: 16.6 kg MFC-8840D: 18.1 kg		
Noise		53 dB A or less	

General (continued)

Temperature	Operating:	10 - 32.5°C
	Storage:	0 - 40°C
Humidity	Operating:	20 to 80% (without condensation)
	Storage:	10 to 90% (without condensation)

Print media

Paper Input	Paper Tray			
raper input	Paper type:			
	Plain paper, recycled paper and transparencies, envelopes (Manual Feed/Multi-purpose Tray)			
	Paper size:			
	A4, Letter, Legal, B5 (ISO), B5 (JIS), Executive, A5, A6, B6 (ISO)			
	Weight: 60 - 105 g/m ² (Paper Tray)			
	For more details, see <i>Paper specifications for each paper tray</i> on page 2-4.			
	 Maximum paper tray capacity: Approx. 250 sheets of 80 g/m² plain paper 			
	 Maximum multi-purpose tray capacity: Approx. 50 sheets of 80 g/m² plain paper (MFC-8840D only) 			
	Manual Feed Tray/Multi-Purpose Tray			
	Paper size:			
	Width: 69.8 - 220.0 mm			
	Hight: 116.0 - 406.4 mm			
	Weight: 60 - 161 g/m ²			
Paper Output	Up to 150 sheets of plain paper (Face down print delivery to the output paper support)			
Сору				
Color/Monochrome	Monochrome			
Copy Speed	Up to 20 copies/minute (A4 paper)			

Stacks or Sorts up to 99 pages

25% to 400% (in increments of 1%)

Multiple Copies

Enlarge/Reduce

Resolution

Fax

Compatibility	ITU-T Group 3		
Coding System	MH/MR/MMR/JBIG		
Modem Speed	33600-2400 bps		
	Automatic Fallback		
Document Size	ADF Width: 148 mm to 216 mm		
	ADF Height: 148 mm to 356 mm		
	Scanner Width: Max. 212 mm		
	Scanner Height: Max. 356 mm		
Scanning Width	208 mm		
Printing Width	208 mm		
Gray Scale	64 levels		
Polling Types	Standard, Secure, Timer, Sequential		
Contrast Control	Automatic/Light/Dark		
	(manual setting)		
Resolution	 Horizontal 8 dot/mm 		
	Vertical		
	 Standard 3.85 line/mm 		
	Fine, Photo 7.7 line/mm		
	Superfine 15.4 line/mm		
One-Touch Dial	40 (20×2)		
Speed-Dial	300 stations		
Automatic Redial	3 times at 5 minute intervals		
Auto Answer	0, 1, 2, 3 or 4 rings		
	(0, 1, 2, 3, 4, or 5 rings - Nordic countries only)		
Communication Source	Public switched telephone network.		
Memory Transmission	Up to 600*1/500*2 pages		
Out of Paper Reception	Up to 600* ¹ /500* ² pages		

*1 "Pages" refers to the "Brother Standard Chart No. 1" (a typical business letter, Standard resolution, JBIG code). Specifications and printed materials are subject to change without prior notice.

*2 "Pages" refers to the "ITU-T Test Chart #1" (a typical business letter, Standard resolution, JBIG code). Specifications and printed materials are subject to change without prior notice.

Scanner

Color/Monochrome	Color/Monochrome	
TWAIN Compliant	Yes (Windows [®] 98/98SE/Me/2000 Professional and Windows NT [®] Workstation Version 4.0) Mac OS [®] 8.6-9.2/Mac OS [®] X 10.2.1 or greater	
WIA Compliant	Yes (Windows [®] XP)	
Resolution	Up to 9,600 × 9,600 dpi (interpolated)* Up to 600 × 2,400 dpi (optical) * Maximum 1200 x 1200 dpi scanning with Windows [®] XP (resolution up to 9600 x 9600 dpi can be selected by using the Brother scanner utility)	
Document Size	ADF Width: 148 mm to 216 mm ADF Height: 148 mm to 356 mm Scanner Glass Width: Max. 216 mm Scanner Glass Height: Max. 356 mm	
Scanning Width	212 mm	
Gray Scale	256 levels	

Scanning directly to a networked PC is available with Windows[®] 98/98SE/Me/2000 Professional and XP.

Mac OS[®] X scanning is supported in Mac OS[®] X 10.2.1 or greater.

Printer

Emulation	PCL6 (Brother Printing System for Windows [®] emulation mode of HP LaserJet) and BR-Script (PostScript [®]) Level 3
Printer Driver	Windows [®] 98/98SE/Me/2000 Professional/XP and Windows NT [®] Workstation Version 4.0 driver supporting Brother Native Compression mode and bi-directional capability Apple [®] Macintosh [®] QuickDraw [®] Driver and PostScript (PPD) for Mac OS [®] 8.6-9.2/Mac OS [®] X 10.1/10.2.1 or Greater
Resolution	HQ1200 (Max. 2400 × 600 dots/inch)
Print Quality	Normal printing mode Economy printing mode (saves toner usage)
Print Speed	Up to 20 pages/minute A4 size (when loading paper from paper tray)
Duplex Printing	Up to 8.5 pages/minute: (MFC-8840D only) (8.5 sides per minute, 4.25 sheets per minute)
First Print	Up to 12 seconds (using A4 size paper in paper tray)

Interfaces

Interface	Recommended Cable
Parallel	A bi-directional shielded parallel cable that is IEEE 1284 compliant and not longer than 2 m.
USB	A Hi-Speed USB 2.0 cable that is not longer than 2 m.

Please make sure that you use a Hi-Speed USB 2.0 certified cable if your computer uses a Hi-Speed USB 2.0 interface.

Even if your computer has a USB 1.1 interface you can connect the MFC.

Computer requirements

Minimum Sy	stem Requirements	S				
Computer P Operating S	latform & ystem Version	Processor Minimum	Minimum RAM	Recommended RAM	Available Hard Disk Space	
		Speed			Driver	Application Software* ¹
Windows [®] Operating	98, 98SE	Pentium 75MHz	24 MB	32 MB	80 MB	100 MB
System	Me	Pentium 150 MHz	32 MB	64 MB	Ī	
	NT [®] Workstation 4.0	Pentium 75MHz				
	2000 Professional	Pentium 133MHz	64 MB	128 MB	Ī	
	XP	Pentium 233MHz	128 MB	256 MB	1	180 MB
Apple [®] Macintosh [®] Operating System	Mac OS [®] 8.6 - 9.2 (Printing, Scanning and PC-FAX Send Only)	All base models meet minimum Requirements	32 MB	64 MB	50 MB	200 MB
	Mac OS [®] X 10.1/10.2.1 or greater (Printing, Scanning* ² , PC-FAX Send and Remote Setup Only)		128 MB	160 MB		
NOTE: USB All registered	is not supported und I trademarks referend	er Windows NT [®] ced herein are th	WS 4.0. e property of	their respectiv	e companies.	
For the latest	t drivers, go to the Br	other Solutions (Center at http	://solutions.bro	other.com/	



*1 Application Software is different for Windows[®] and Macintosh[®]

*² Scanning is supported in 10.2.1 or greater.

Consumable items

Toner Cartridge Life Expectancy

TN-3030: Standard Toner Cartridge - Up to 3,500* pages

TN-3060: High Yield Toner Cartridge - Up to 6,700* pages

*(when printing letter size or A4 paper at 5% print coverage)



Toner life expectancy will vary depending upon the type of average print job.

Drum Unit Life Expectancy Up to 20,000 pages/drum unit (DR-3000)



There are many factors that determine the actual drum life, such as temperature, humidity, type of paper, toner you use and number of pages per print job.

Network (LAN) board (NC-9100h)

MFC-8440 (Option) MFC-8840D (Option)

When you add the optional Network (LAN) Board (NC-9100h), you can connect your MFC into the network to use the Internet FAX, Network Scanner, Network Printer and Network Management software.



SMTP/POP3 E-mail Services are required for Internet Fax.

Support for:

Windows[®] 98/Me/NT[®] 4.0/2000/XP Novell NetWare 3.X, 4.X, 5.X Mac OS[®] 8.6 - 9.2, X 10.0-10.2.1 or Greater Ethernet 10/100 BASE-TX Auto Negotiation TCP/IP, IPX/SPX, AppleTalk, DLC/LLC RARP, BOOTP, DHCP, APIPA, NetBIOS, WINS LPR/LPD, Port9100, SMTP/POP3 SMB(NetBIOS/ IP), IPP, SSDP Apple Rendezvous[™], FTP MIBII as well as Brother private MIB TELNET, SNMP, HTTP, TFTP

Included Utilities:

BRAdmin Professional and Web Based Management



Scanning directly to a networked PC is not supported in Windows NT[®] and Mac OS[®].

BRAdmin Professional is not supported in Mac OS[®].

Optional External Wireless Print/Scan Server (NC-2200w)

NC-2200w External Wireless Print/Scan Server (Optional)	Connecting the optional External Wireless Print/Scan Server (NC-2200w) to your MFC will allow you to print and scan over a wireless network.
Network types	IEEE802.11b wireless LAN
Support for	Windows [®] 98/98SE/Me/2000/XP and Windows NT [®] Mac OS [®] X 10.2.4 or greater (Apple Rendezvous [™])*
Protocols	TCP/IP ARP, RARP, BOOTP, DHCP, APIPA (Auto IP), WINS/NetBIOS, DNS, LPR/LPD, Port9100, SMB Print, IPP, RawPort, Apple Rendezvous [™] , TELNET, SNMP, HTTP
Ē	* Network Scanning are not available for Mac. You can assign the scan key to one networked computer only.

Index

Α

Access codes, storing and dialling	9
Feeder) 6-*	1
ADF cover 22-5	5
Automatic	
fax receive 5-7	1
fax redial 6-9	9
transmission6-6	3

В

Broadcasting 6-17
setting up Groups for 7-5
Brother Control Center
using and configuring 14-1

С

Cancelling	
fax forwarding	8-5
fax jobs in memory	. 6-12
jobs awaiting redial	. 6-13
Cleaning (routine maintena	ance)
drum unit	22-26
printer	22-25
scanner	22-24
CNG tones	. 1-12
Combine items into single	file,
if possible	14-11
Connecting	
external TAD	. 1-15
external telephone	. 1-14
Control panel, overview	1-5

Сору

contrast 10-20
default settings, changing
Duplex/N in 1 10-12
Enlarge/Reduce
enter Copy mode 10-1
keys 10-6
multiple10-4
paper2-1
Quality (type of document)
scanner glass 10-4
single
Sort (ADF only) 10-9
temporary settings

D

Date and Time4-1
Delayed Batch Transmission
Delayed Fax6-20

Dialling

a pause7-10
access codes and credit card
numbers7-9
automatic fax redial6-9
Groups6-17
Search7-7
Speed Dial numbers7-8
Drivers
printer 12-1
TWAIN Compliant 13-1
Windows®
printer11-1
Drum unit
checking remaining life
replacing22-32
Dual Access6-10
Duplex/N in 1 key10-12
Duplex/1 in 1 10-17
Duplex/2 in 1 10-19
Duplex/4 in 1 10-19
•

Е

ECM (Error Correction Mode	e)
·······	1-13
Ecology	
Scanner lamp	4-11
Sleep Time	4-11
Entering text	. 4-3
Envelopes	
Error messages on LCD2	22-1
Check Paper	22-1
Comm. Error	22-2
Not Registered	22-3
Out of Memory	22-3
while scanning a docume	
······	10-5
Extension telephone, using	. 5-8

Extension Telephones1-18 External telephone1-14

F

Fax codes
Remote Access Code8-3
Remote Activation Code5-8
Remote Deactivation Code
Fax Detect5-4
Fax Forwarding
changing remotely 8-5, 8-6
Fax Storage8-2
printing from5-7
turning on8-2
Fax, stand-alone
receiving5-1 difficulty22-12
duplex printing5-13
forwarding8-5
reducing to fit on paper5-5
retrieving from a remote
site8-6
ring delay, setting5-2
sending
at end of conversation6-6
automatic transmission6-6
cancelling from memory
6-13
contrast6-8
delayed6-20
from ADF6-1
from memory (dual access)
6-10
from scanner glass6-3
legal size from scanner glass
6-5
manual transmission6-5
overseas6-19

Real Time Transmission

resolution6-9
Fax/Tel mode 5-1
answering at extension
phones 5-8
double-ringing (voice calls)
receiving faxes 5-8
Remote Activation Code 5-8
Remote Deactivation Code
Setting F/T Ring Time 5-3
Setting Ring Delay 5-2

G

Gray scale .	S	-3, S-4
Groups for B	Broadcasting	7-5

Н

HELP	3-1
Help List	9-3

J

Jams	
document	22-5
paper	22-6

L

LAN Configuration 3-13, 3-14
LCD (Liquid Crystal Display)
LCD Contrast 4-14

Μ

Maintenance, routine	. 22-24
Manual	
receive	5-1
transmission	6-5
Manual feed tray 11-	5, 11-8

Memory Security	. 6-23
Memory Storage	3-1
Menu table	3-1
Multi-line connections (PB)	<)
	. 1-20
Multi-purpose tray (MP tray	/)
	2-1

Ο

OCR, changing setting 15-11
One Touch numbers
storing7-1

Ρ

PABX	4-5
Page Counter	. 22-35
Paper	
capacity	
document size	
jam	22-5
Size	
PaperPort [®]	
accessing	13-2
exporting	. 13-23
importing	. 13-23
PC FAX (For Windows®)	17-1
receiving	. 17-19
sending	
address book	
cover page	. 17-14
facsimile style	. 17-16
group	17-9
setting up	
simple style	. 17-17
Phone line	
connections	
difficulties	. 22-12
multi-line (PBX)	1-20
Power	
failure	3-1

Print
area10-1
difficulty22-12
driver 12-1
emulation
Windows [®]
11-1, 11-18, 12-17
Emulation Selection11-18
envelopes11-12
fax from memory5-7
improving the print quality
22-17
jams22-6
manual feed tray11-5
multi-purpose tray 11-6
on thick paper11-8
reports and lists11-19
resolutionS-5
Secure key11-17
specificationsS-5
two-sided (duplex printing)
Print media2-1
Printer driver 12-17
PS printer driver12-17

Q

Quality key (copying)10-6

R

Receive mode	
External TAD	5-1
Fax Only	5-1
Fax/Tel	5-1
Manual	5-1
Redial/Pause1	-7, 6-9
Reducing	
copies	10-7
Incomig faxes	5-5

Remote Retrieval8-4
access code 8-3, 8-4
commands8-5
getting your faxes8-6
Reports9-1
Transmission Verification9-1
Resolution
fax (standard, Fine,
superFine, Photo)
print S-5
Scan13-6, S-4
setting for next fax6-9
Ring Delay, setting5-2

S

Safety Instructions iii, 21-3 Scanner Lamp4-11 Scanner Lock22-21
Scanning into PC13-3
Scansoft [®] OmniPage [®]
OCR13-22
ScanSoft [®] PaperPort [®] 13-19
Search, for stored numbers7-7
Setup
•
Date and Time4-1
Station ID (fax header)4-2
Shipping the machine22-21
Sockets
EXT. socket
external telephone1-14
TAD (answering machine)
1-15
Software
Brother Control Center14-1
ScanSoft [®] Paper Port [®] 13-19
Speed Dial1-7
dialling7-8
-
storing7-1


TAD (Telephone Answering
Device), external 1-15, 5-1
connecting 1-14
Receive Mode 5-1
Temporary Copy Settings 10-6
Text, entering 4-3
Special Characters 4-4
To change the default setting of
the scan, click on the Scan
Settings tab 15-9
Tone signals on Pulse line
Toner cartridge
replacing 22-27
Tray use, setting
copy 4-13 fax 4-14
Troubleshooting 22-1
error messages on LCD
if you are having difficulty
incoming calls 22-13
paper handling 22-15
phone line difficulties
printer difficulties 22-14
printing or receiving faxes


V

Volume, setting	4-9
beeper	4-9
ring	4-9
speaker	4-10

Remote Retrieval Access card

If you plan to receive fax messages while away from your MFC, carrying the Remote Retrieval Access Card printed below will serve as a convenient reminder of the retrieval procedures. Simply cut out the card and fold it to fit your wallet or organizer. Keeping it handy will help you derive the full benefit of your MFC's Fax Forwarding and Remote Retrieval features.

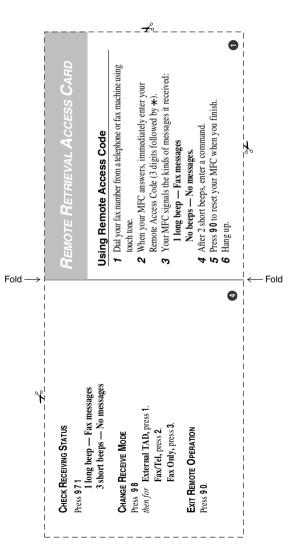

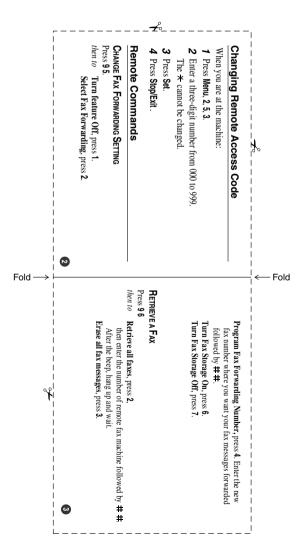



This machine is approved for use in the country of purchase only, local Brother companies or their dealers will only support machines purchased in their own countries.

UK/IRE/SAF/PAN NORDIC