


HL-5240
HL-5240L
HL-5250DN

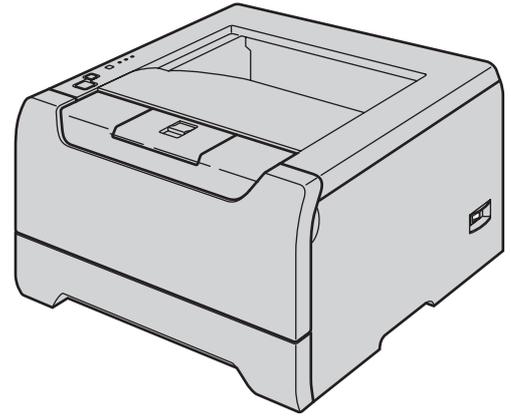

Before you can use the printer, you must set up the hardware and install the driver. Please read this 'Quick Setup Guide' for proper set up and installation instructions.

STEP 1

Setting Up the Machine



STEP 2

Installing the Printer Driver

Setup is Complete!



How to use the printer, see the User's Guide in the CD-ROM.

Keep this 'Quick Setup Guide' and the supplied CD-ROM in a convenient place for quick and easy reference at all times.

Symbols used in this guide

 Warning	 Electrical Hazard	 Hot Surface	 Caution
<p>Warnings tell you what to do to prevent possible personal injury.</p>	<p>Electrical Hazard icons alert you to a possible electrical shock.</p>	<p>Hot Surface icons warn you not to touch machine parts that are hot.</p>	<p>Cautions specify procedures you must follow or avoid to prevent possible damage to the printer or other objects.</p>
 Improper Setup	 Note	 User's Guide Network User's Guide	
<p>Improper Setup icons alert you to devices and operations that are not compatible with the printer.</p>	<p>Notes tell you how you should respond to a situation that may arise or give tips about how the current operation works with other features.</p>	<p>Indicates reference to the User's Guide or Network User's Guide which is on the CD-ROM we have supplied.</p>	

Safety Precautions	2
Regulations	3

Getting Started

What is in the box?.....	6
Control panel.....	7
Printer LED Indications	7
Supplied CD-ROM	8

STEP1– Setting Up the Machine

Put the CD-ROM into the CD-ROM drive.....	9
Install the drum unit and toner cartridge assembly	10
Load paper in the paper tray	11
Print a test page	12

STEP2– Installing the Printer Driver

Windows®

For USB interface cable users (Windows® 98/Me/2000/XP only).....	14
For parallel interface cable users	16
For network interface cable users (For HL-5250DN)	17
For Brother Peer-to-Peer network printer users (LPR/NetBIOS)	17
For shared network printer users	19

Macintosh®

For USB interface cable users	20
For Mac OS® X 10.2.4 or greater users.....	20
For Mac OS® 9.1 to 9.2 users.....	22
For network interface cable users (For HL-5250DN)	23
For Mac OS® X 10.2.4 or greater users.....	23
For Mac OS® 9.1 to 9.2 users.....	25

For Network Users (For HL-5250DN)

BRAdmin Professional configuration utility (For Windows® users)	26
BRAdmin Light configuration utility (For Mac OS® X users)	27
Web browser	28
Network default settings.....	28
Print the Printer Settings Page.....	28

Consumables and Options

Options.....	29
Consumables	29

Repacking Information

Shipment of the printer.....	30
------------------------------	----

Troubleshooting


Safety Precautions

To Use the Printer Safely


Warning




There are high voltage electrodes inside the printer. Before you clean the inside of the printer, make sure that you have turned off the power switch and unplugged the printer from the AC power outlet.

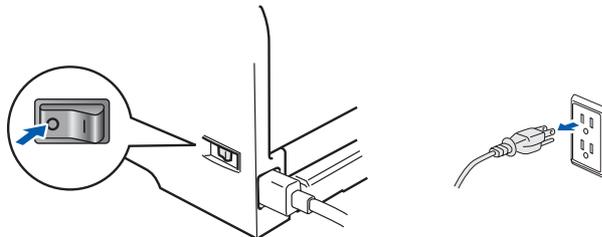


DO NOT handle the plug with wet hands. Doing this might cause an electrical shock.

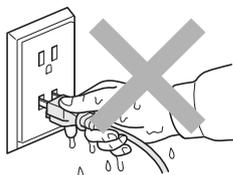

After you have just used the printer, some internal parts of the printer will be extremely hot. DO NOT touch the shaded parts shown in the illustration when you open the front or back cover of the printer.

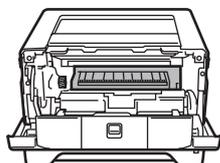


Inside the printer (Front View)

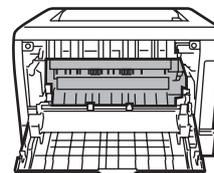

Open the back cover (Back View)



DO NOT remove or damage the caution labels located on or around the fuser.

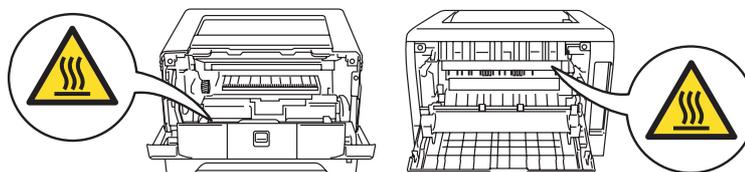

DO NOT use a vacuum cleaner to clean up scattered toner. Doing this might cause the toner dust to ignite inside the vacuum cleaner, potentially starting a fire. Please carefully clean the toner dust with a dry, lint-free cloth and dispose of it according to local regulations.



DO NOT use flammable substances near the printer. Doing this might cause a fire or electrical shock.

Regulations

Federal Communications Commission (FCC) Declaration of Conformity (For USA)

Responsible Party: Brother International Corporation
100 Somerset Corporate Boulevard
P.O. Box 6911
Bridgewater, NJ 08807-0911
USA
Telephone: (908) 704-1700

declares, that the products

Product name: Laser Printer HL-5240 and HL-5250DN
Model number: HL-52
Product option: Lower Tray Unit LT-5300

comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important

A shielded interface cable should be used in order to ensure compliance with the limits for a Class B digital device.

Changes or modifications not expressly approved by Brother Industries, Ltd. could void the user's authority to operate the equipment.

Industry Canada Compliance Statement (For Canada)

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Radio interference (220-240 volt model only)

This printer follows EN55022 (CISPR Publication 22)/Class B.

Before you use this product, make sure that you use one of the following interface cables.

- 1 A shielded parallel interface cable with twisted-pair conductors and that it is marked "IEEE 1284 compliant".
- 2 A USB cable.

The cable must not be more than 2 metres long.

EC Declaration of Conformity



EC Declaration of Conformity

Manufacturer
Brother Industries Ltd.,
15-1, Naeshiro-cho, Mizuho-ku,
Nagoya 467-8561, Japan

Plant
Brother Corporation (Asia) Ltd.,
Brother Buji Nan Ling Factory,
Gold Garden Ind., Nan Ling Village,
Buji, Rong Gang, Shenzhen, China

Herewith declare that:

Products description : Laser Printer
Product Name : HL-5240, HL-5250DN
Model Number : HL-52

are in conformity with provisions of the Directives applied : Low Voltage Directive 73/23/EEC (as amended by 93/68/EEC) and the Electromagnetic Compatibility Directive 89/336/EEC (as amended by 91/263/EEC and 92/31/EEC and 93/68/EEC).

Standards applied :
Harmonized : Safety : EN60950-1:2001

EMC : EN55022: 1998 +A1: 2000 +A2: 2003 Class B
EN55024: 1998 +A1: 2001 +A2: 2003
EN61000-3-2: 2000
EN61000-3-3: 1995 +A1: 2001

Year in which CE marking was first affixed : 2005

Issued by : Brother Industries, Ltd.

Date : 10th May, 2005

Place : Nagoya, Japan

Signature :



Takashi Maeda
Manager
Quality Management Group
Quality Management Dept.
Information & Document Company

Safety Precautions

Laser Safety (110 to 120 volt Model Only)

This printer is certified as a Class 1 laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the printer does not produce hazardous laser radiation.

Since radiation emitted inside the printer is completely confined within protective housings and external covers, the laser beam cannot escape from the machine during any phase of user operation.

FDA Regulations (110 to 120 volt Model Only)

The U.S. Food and Drug Administration (FDA) has implemented regulations for laser products manufactured on and after August 2, 1976. Compliance is mandatory for products marketed in the United States. One of the following labels on the back of the printer indicates compliance with the FDA regulations and must be attached to laser products marketed in the United States.

MANUFACTURED:
Brother Industries, Ltd.,
15-1 Naeshiro-cho Mizuho-ku Nagoya, 467-8561 Japan
This product complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No.50, dated July 26, 2001.

MANUFACTURED:
Brother Corporation (Asia) Ltd. Brother Buji Nan Ling
Factory Gold Garden Ind., Nan Ling Village, Buji, Rong
Gang, Shenzhen, CHINA
This product complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No.50, dated July 26, 2001.

⚠ Caution

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

IEC 60825-1 specification (220 to 240 volt model only)

This printer is a Class 1 laser product as defined in IEC 60825-1 specifications. The label shown below is attached in countries where it is needed.



This printer has a Class 3B laser diode which produces invisible laser radiation in the laser unit. You should not open the laser unit under any circumstances.

⚠ Caution

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

For Finland and Sweden
LUOKAN 1 LASERLAITE
KLASS 1 LASER APPARAT

⚠ Varoitus!

Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

⚠ Varning

Om apparaten används på annat sätt än i denna Bruksanvisning specificerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

Internal laser radiation

Maximum radiation power:	5 mW
Wave length:	770 - 810 nm
Laser class:	Class 3B

IMPORTANT - For Your Safety

To ensure safe operation, the supplied three-pin plug must be inserted only into a standard three-pin power outlet that is properly grounded through the normal household wiring.

Extension cords used with this printer must be three-pin plug type and correctly wired to provide proper grounding. Incorrectly wired extension cords may cause personal injury and equipment damage.

The fact that the equipment operates satisfactorily does not imply that the power is grounded and that the installation is completely safe. For your safety, if in any doubt about the effective grounding of the power, call a qualified electrician.

This product should be connected to an AC power source within the range indicated on the rating label. DO NOT connect it to a DC power source. If you are not sure, contact a qualified electrician.

Disconnect device

You must install this printer near a power outlet that is easily accessible. In case of an emergency, you must disconnect the power cord from the power outlet to shut off the power completely.

Caution for LAN connection (For model HL-5250DN only)

Connect this product to a LAN connection that is not subjected to over voltages.

IT power system (For Norway only)

This product is also designed for an IT power system with phase-to-phase voltage 230V.

Wiring information (for UK)**Important**

If you need to replace the plug fuse, fit a fuse that is approved by ASTA to BS1362 with the same rating as the original fuse.

Always replace the fuse cover. Never use a plug that does not have a cover.

Warning - This printer must be earthed.

The wires in the mains lead are coloured in line with the following code:


Green and Yellow:	Earth
Blue:	Neutral
Brown:	Live

If in any doubt, call a qualified electrician.


What is in the box?

Carton components may vary from one country to another.

Save all packing materials and the printer carton in case for any reason you must ship your printer.

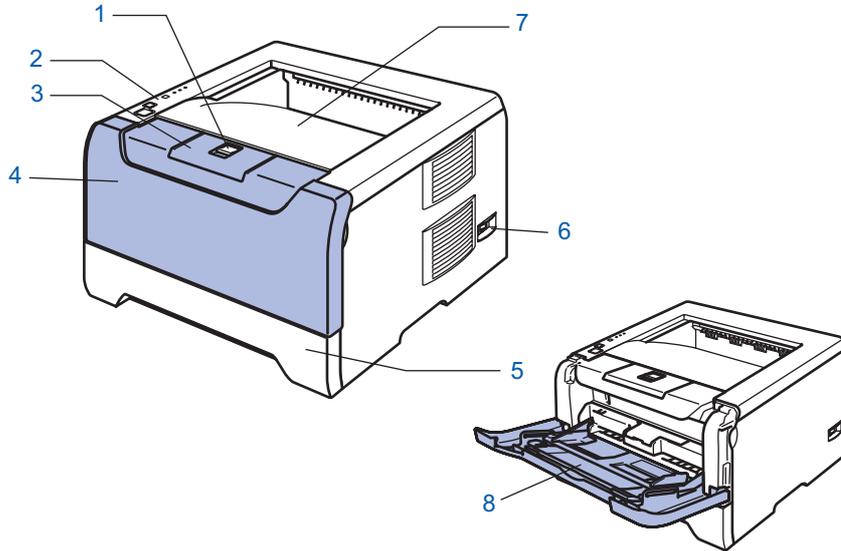

- | | |
|---|---------------------------------|
| 1 Front Cover Release Button | 5 Paper tray |
| 2 Control panel | 6 Power switch |
| 3 Face-down output tray support flap (Support flap) | 7 Face-down output tray |
| 4 Front cover | 8 Multi -purpose tray (MP tray) |

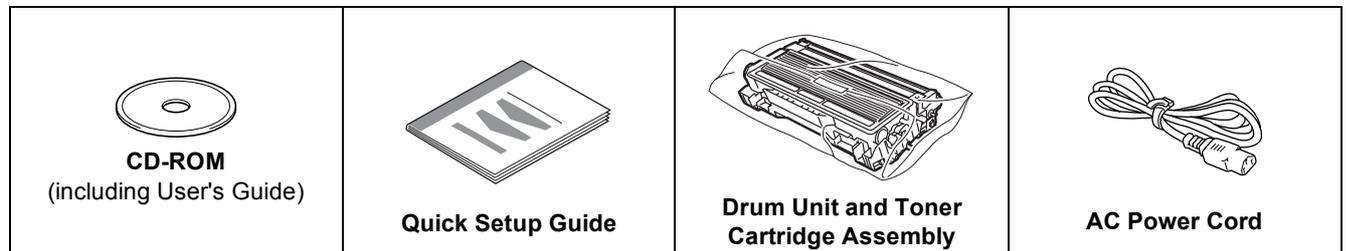

The interface cable is not a standard accessory. Buy the proper interface cable for the interface you want to use (USB, Parallel or Network).

■ **USB cable**

Do not use a USB interface cable that is longer than 6 feet (2.0 meters).

Do not connect the USB cable to a non-powered hub or a Macintosh® keyboard.

Make sure that you connect it to the USB connector of your PC.

USB is not supported under Windows® 95 or Windows NT® 4.0.

■ **Parallel interface**


Do not use a parallel interface cable that is longer than 6 feet (2.0 meters).

Use a shielded interface cable that is IEEE 1284-compliant.

■ **Network cable (for HL-5250DN)**

Use a straight-through Category5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.

Control panel

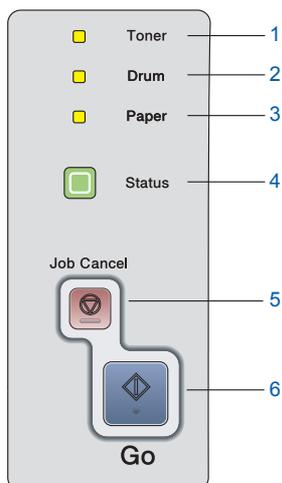

- 1 **Toner**
LED indicates when the Toner is low or at the end of its life.
- 2 **Drum**
LED indicates when the Drum is nearing the end of its life.
- 3 **Paper**
LED indicates when the paper tray is empty or there is a paper jam.
- 4 **Status**
LED will flash and change color depending on the printer status.
- 5 **Job Cancel button**
stops and cancels the print operation in progress.
- 6 **Go button**
Wake-up / Error recovery / Form feed / Reprint



For the details of the control panel, see Chapter 4 of the User's Guide on the CD-ROM.

Printer LED Indications

★ : Blinking

■ : ON

□ : OFF

Printer LED	Sleep / OFF	Warming up Cooling down	Ready	Receiving data	Print Data remaining
Toner	□	□	□	□	□
Drum	□	□	□	□	□
Paper	□	□	□	□	□
Status	□	★ Green ²	■ Green	★ Yellow ²	■ Yellow

Printer LED	Toner low	Toner life end	Drum near end of life	Cover open	No paper Paper jam	Service call
Toner	★ Yellow ¹	■ Yellow	□	□	□	★ Yellow ²
Drum	□	□	★ Yellow ¹	□	□	★ Yellow ²
Paper	□	□	□	□	★ Yellow ²	★ Yellow ²
Status	■ Green	■ Red	■ Green	■ Red	■ Red	★ Red ²
User's Guide	Chapter 6	Chapter 6	Chapter 6	Chapter 7	Chapter 7	Chapter 4


¹ The LED will blink in a pattern of ON for 2 seconds and then OFF for 3 seconds.

² The LED will blink fast.


Supplied CD-ROM

You can find a variety of information on the CD-ROM.

Windows®

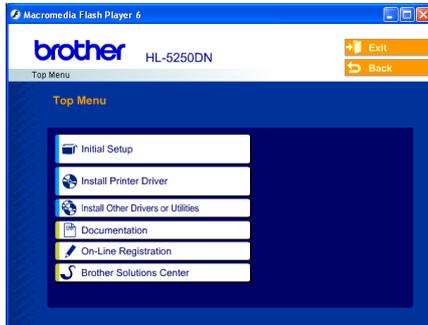

Macintosh®

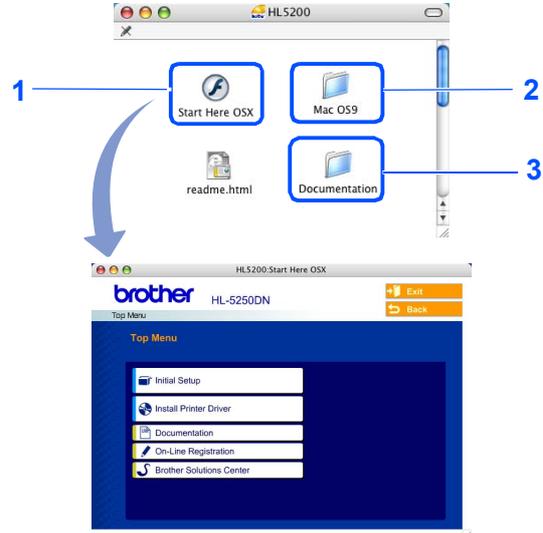

- 1 Mac OS® X 10.2.4 or greater Users
- 2 Mac OS® 9.1 to 9.2 Users
The menu screen is not supported by Mac OS® 9.1 to 9.2.
- 3 View the User's Guide and Network User's Guide in PDF format.
(See  Documentation below.)

Initial Setup

Instructional movie for printer setup.

Install Printer Driver

Install the printer driver.

Install Other Driver or Utilities (For Windows® users)

Install optional drivers, utilities and Network management tools (For HL-5250DN users).

Documentation

View the Printer User's Guide and Network User's Guide (For HL-5250DN) in PDF format (Viewer included). You can also view the User's Guide in HTML format by accessing the Brother Solutions Center.

The User's Guide in PDF format will be installed automatically when you install the driver. (For Windows® users only) Click the **Start** button, **Programs**¹, your printer (e.g. Brother HL-5250DN), and then User's Guide. If you do not want to install the User's Guide, choose **Custom setup** from **Install Printer Driver**, and uncheck **User's Guide in PDF format** when you install the driver.

¹ All Programs for Windows® XP users

On-Line Registration

Register your product on-line.

Brother Solutions Center

The Brother Solutions Center (<http://solutions.brother.com>) is a one-stop resource for all your printer needs. Download the latest drivers and utilities for your printers, read FAQs and troubleshooting tips, or learn about printer solutions.

Note


For visually impaired users, we have prepared an HTML file on the supplied CD-ROM: readme.html. This file can be read by Screen Reader text-to-speech software.

1 Put the CD-ROM into the CD-ROM drive

For Windows® users

⊘ Improper Setup

DO NOT connect the interface cable. Connecting the interface cable is done when installing the driver.

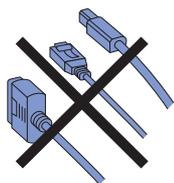


- 1 Put the supplied CD-ROM into your CD-ROM drive. The opening screen will appear automatically. Choose your printer model and the language.



- 2 Click **Initial Setup** on the menu screen.




- 3 You can view the initial setup instructions and follow along with the steps on pages 10 to 12.

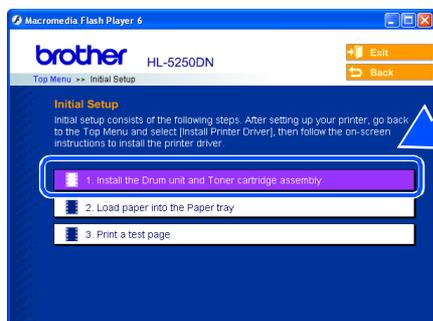

For Macintosh® users

⊘ Improper Setup

DO NOT connect the interface cable. Connecting the interface cable is done when installing the driver.

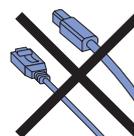


- 1 For Mac OS® 9.1 to 9.2 Users, go to next page. For Mac OS® 10.2.4 or greater Users, put the supplied CD-ROM into your CD-ROM drive, and then double-click the **HL5200** icon on your desktop. Double-click the **Start Here OS X** icon. Follow the on-screen instructions.



- 2 Click **Initial Setup** on the menu screen.




- 3 You can view the initial setup instructions and follow along with the steps on pages 10 to 12.

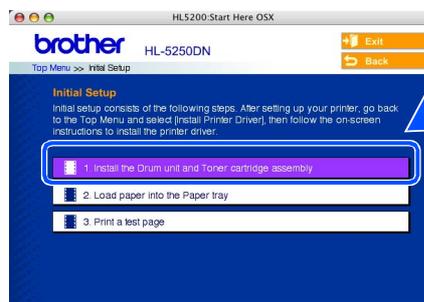


2 Install the drum unit and toner cartridge assembly

⊘ Improper Setup


DO NOT connect the interface cable yet.

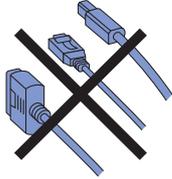


- 1 Press the front cover release button and open the front cover (1).

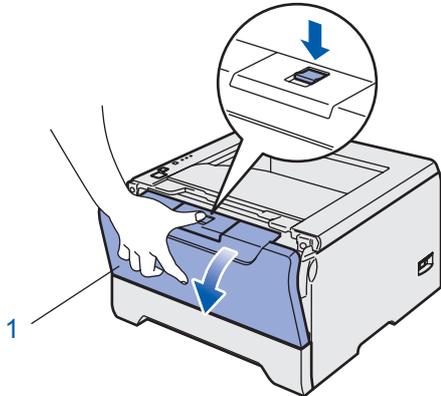


- 2 Unpack the drum unit and toner cartridge assembly.

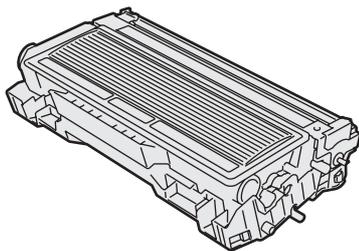


- 3 Rock it from side to side several times to distribute the toner evenly inside the assembly.

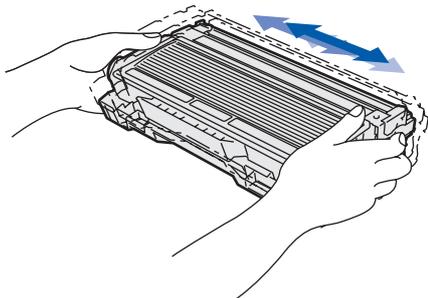

- 4 Put the drum unit and toner cartridge assembly into the printer.

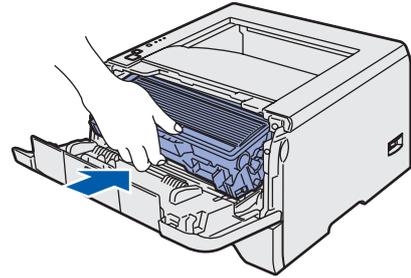


- 5 Close the front cover of the printer.

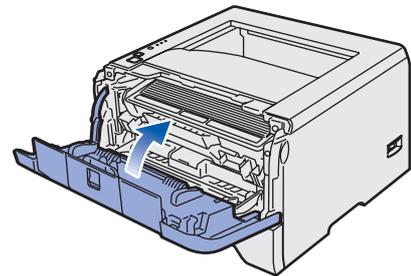


3 Load paper in the paper tray


1 Pull the paper tray completely out of the printer.

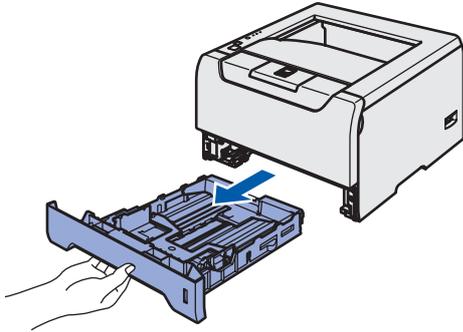


2 While pressing the blue paper-guide release lever (1), slide the paper guides to fit the paper size. Make sure that the guides are firmly in the slots.

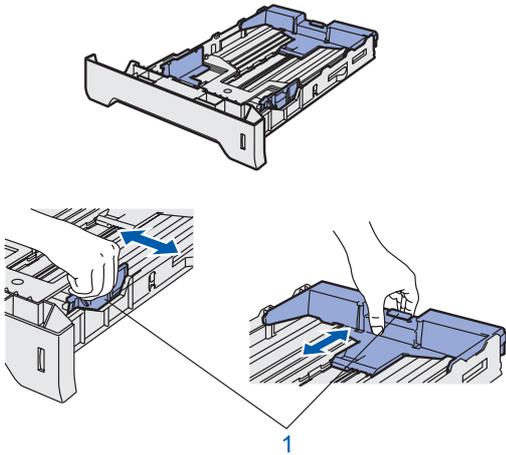


3 Fan the stack of paper well to avoid paper jams and misfeeds.

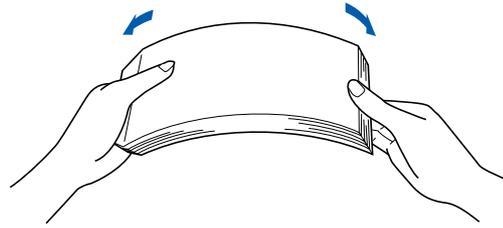

4 Put paper in the paper tray. Make sure that the paper is flat in the tray and below the maximum paper mark (1).

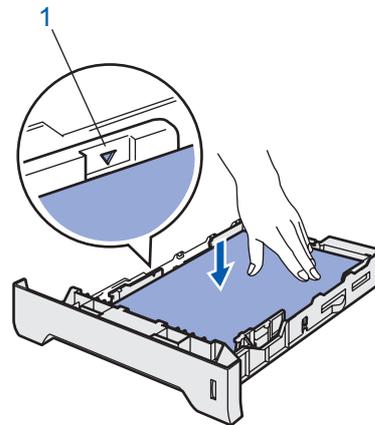


5 Put the paper tray firmly back in the printer.

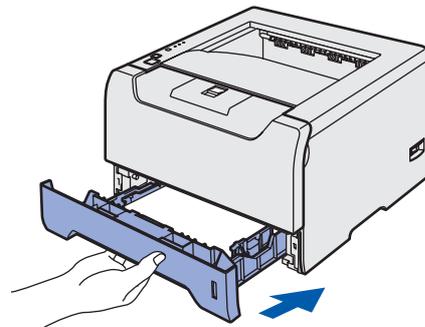

Note


*Not applicable for European countries
For Legal size paper, press the lever (1) located at the back of the tray and pull out the back of the paper tray. Move the tray lock button (2) to the lock position.
(Legal size paper is not available in some regions.)*

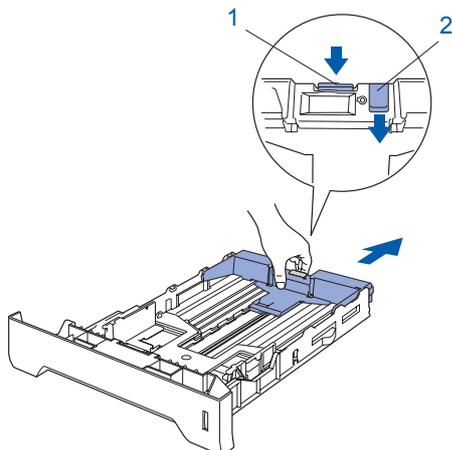


4 Print a test page

⊘ Improper Setup


DO NOT connect the interface cable yet.

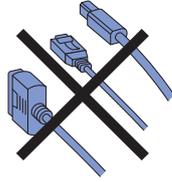


- 1 Make sure that the printer power switch is off. Connect the AC power cord to the printer.

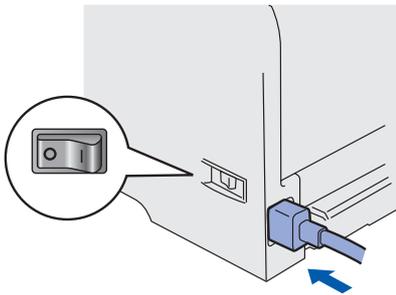


- 2 Plug the AC power cord into an AC power outlet. Turn on the printer power switch.

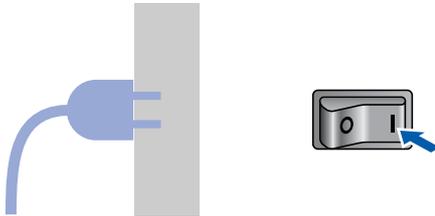

- 3 After the printer has finished warming up, the **Status** LED stops blinking and stays green.

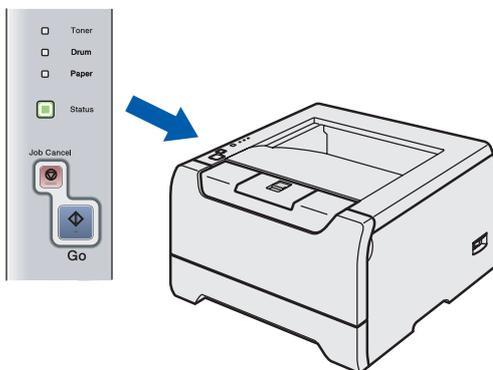

- 4 Press **Go**. The printer prints a test page. Check that the test page has printed correctly.

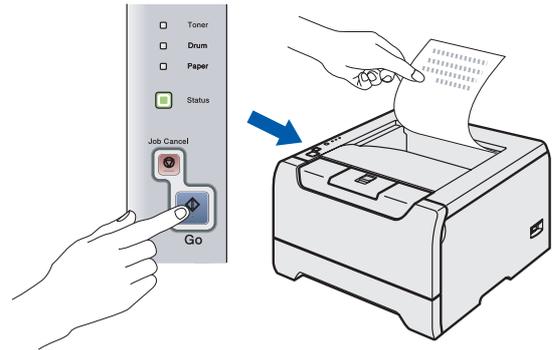

📝 Note


This function will not be available after the first print job you send from your PC.

Now go to

Go to the next page to install the driver.

Follow the instructions on this page for your operating system and interface cable.
For the latest driver and to find the best solution for your problem or question, access the Brother Solutions Center directly from the CD-ROM / Driver or visit <http://solutions.brother.com>.

Windows®

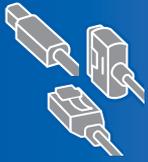

For Windows® XP Professional x64 Edition users, visit <http://solutions.brother.com> for driver downloads and installation steps.

For USB interface cable users (Windows® 98/Me/2000/XP only) 14



For parallel interface cable users 16



For network interface cable users (For HL-5250DN) 17

- For Brother Peer-to-Peer network printer users (LPR/NetBIOS) 17
- For shared network printer users 19



Macintosh®

For USB interface cable users 20

- For Mac OS® X 10.2.4 or greater users 20
- For Mac OS® 9.1 to 9.2 users 22



For network interface cable users (For HL-5250DN) 23

- For Mac OS® X 10.2.4 or greater users 23
- For Mac OS® 9.1 to 9.2 users 25



The screens for Windows® in this Quick Setup Guide are based on Windows® XP.
The screens for Mac OS® X in this Quick Setup Guide are based on Mac OS® X 10.4.

For USB interface cable users (Windows® 98/Me/2000/XP only)




Note

If the **Found New Hardware Wizard** appears on your PC, click **Cancel**.




4

When the License Agreement window appears, click **Yes** if you agree to the License Agreement.

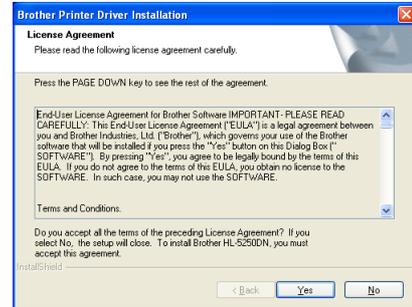

5


When this screen appears, make sure the printer power switch is on. Connect the USB interface cable to your PC, and then connect it to the printer. Click **Next**.

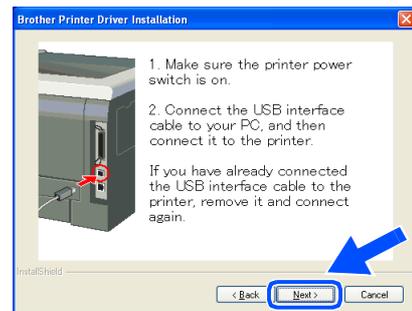

Installing the driver and connecting the printer to your PC

1

Make sure the USB interface cable is **NOT** connected to the printer, and then begin installing the driver. If you have already connected the cable, remove it.

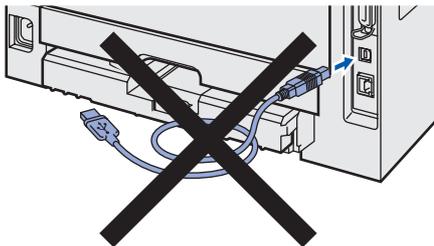

2

Click **Install Printer Driver** on the menu screen.





3

Click **USB cable users**.



6

Click **Finish**.

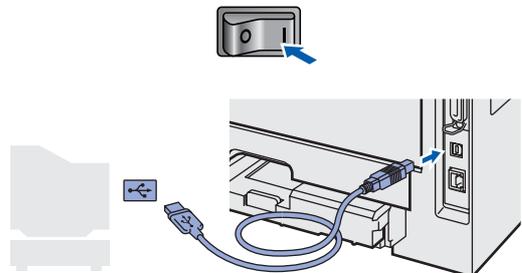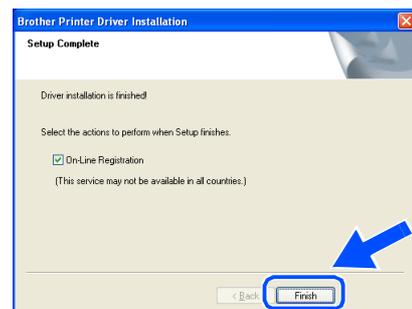



Note _____
If you want to register your product on-line, check **On-Line Registration**.




For Windows® 98/Me users, the setup is now complete.

Now go to


For Windows® 2000/XP users, go to 'Setting Your Printer as the Default Printer'.

Setting your printer as the default printer (For Windows® 2000/XP only)


- 1 Click the **Start** button and then **Printers and Faxes**.

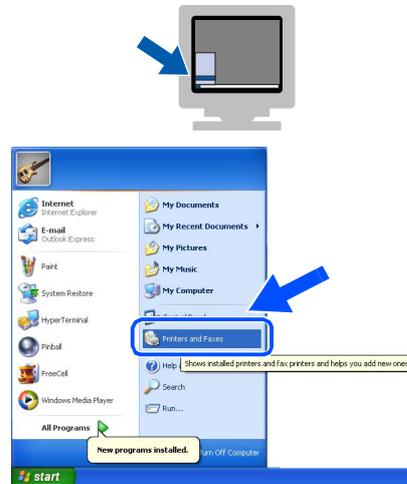

- 2 Choose the Brother Printer icon.

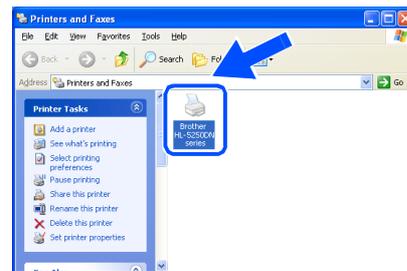

- 3 Click **File**, and then **Set as Default printer**.

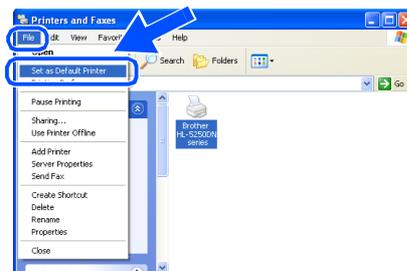

The setup is now complete.

Windows®
USB


For parallel interface cable users

Note

If the **Found New Hardware Wizard** appears on your PC, click **Cancel**.



4 Click **Finish**.

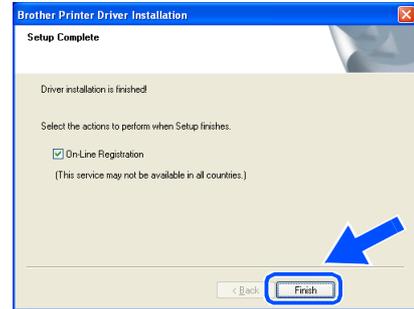

Note

If you want to register your product on-line, check **On-Line Registration**.

Connecting the printer to your PC and installing the driver


1 Click **Install Printer Driver** on the Menu screen.



2 Click **Parallel cable users**.




3 When the License Agreement window appears, click **Yes** if you agree to the License Agreement.

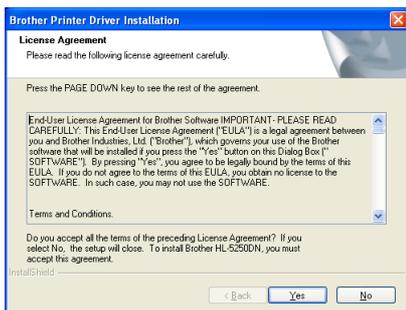

5 Turn off the printer power switch.



6 Connect the parallel interface cable to your PC, and then connect it to your printer.

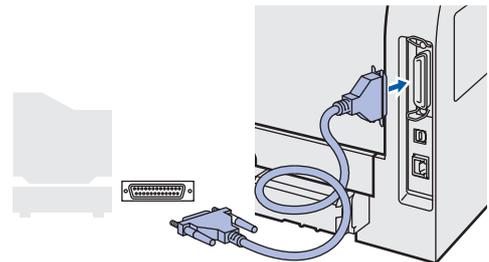

7 Turn on the printer power switch.



OK! The setup is now complete.

Windows®
Parallel

For network interface cable users (For HL-5250DN)

For Brother Peer-to-Peer network printer users (LPR/NetBIOS)

Note

- If you are going to connect the printer to your network, we recommend that you contact your system administrator prior to installation or see the Network User's Guide.
- Before installation, if you are using Personal Firewall software (e.g. the Internet Connection Firewall available in Windows XP), disable it. Once you are sure that you can print, restart your Personal Firewall software.
- Peer-to-peer print with NetBIOS is not available for Windows® XP x64 Edition.

Connecting the printer to your network and installing the driver

1 Click **Install Printer Driver** on the menu screen.




2 Click **Network cable users**.



3 Turn off the printer power switch.




4 Connect the network interface cable to the printer, and then connect it to a free port on your hub.

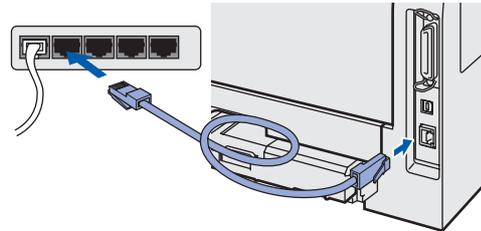


5 Turn on the printer power switch.



6 When the License Agreement window appears, click **Yes** if you agree to the License Agreement.

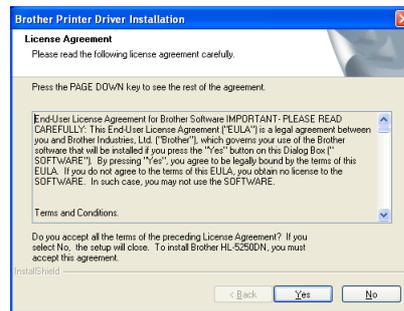


7 Choose **Brother Peer-to-Peer Network Printer**, and then click **Next**.

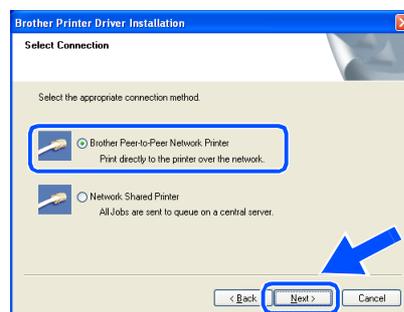


8 For LPR Users:
 Choose **Search the network for devices and choose from a list of discovered devices (Recommended)**. Or enter your printer's IP address or its node name. Click **Next**.

For NetBIOS Users:
 Choose **Search the network for devices and choose from a list of discovered devices (Recommended)**. Click **Next**.

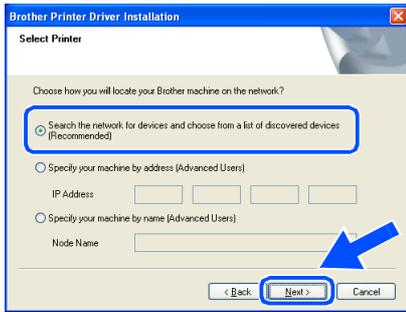


Note
 Contact your administrator if you do not know the printer's IP address or node name.


9 For LPR Users:
 Choose your printer and choose **LPR (Recommended)**, and then click **Next**.

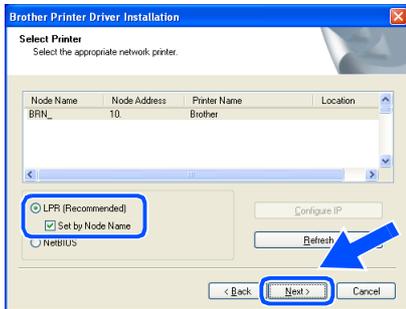

For NetBIOS Users:
 Choose your printer and **NetBIOS**, and then click **Next**.

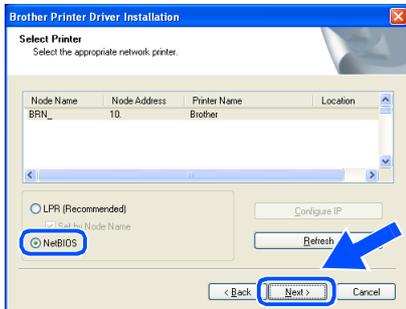

10 Click **Finish**.

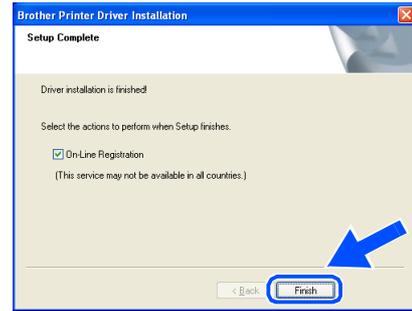

Note
 If you want to register your product on-line, check **On-Line Registration**.

OK! For Windows NT® 4.0 and Windows® 2000/XP users, the setup is now complete.

OK! For Windows® 95/98/Me users, the setup will be complete after your PC has restarted.

For shared network printer users

Note

If you are going to connect to a shared printer on your network, we recommend that you ask your system administrator about the queue or share name prior to installation.

Installing the driver and choosing the proper printer queue or share name


- 1 Click **Install Printer Driver** on the menu screen.




- 2 Click **Network cable users**.




- 3 When the License Agreement window appears, click **Yes** if you agree to the License Agreement.

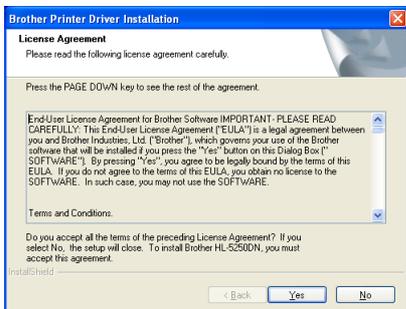

- 4 Choose **Network Shared Printer**, and then click **Next**.

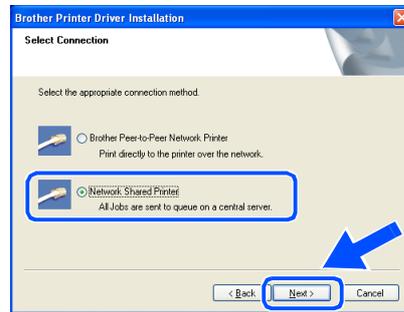


- 5 Choose your printer's queue, and then click **OK**.

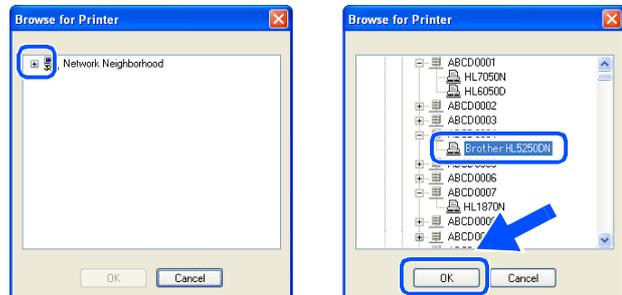

Note

Contact your administrator if you do not know about the location and name of the printer in the network.

- 6 Click **Finish**.

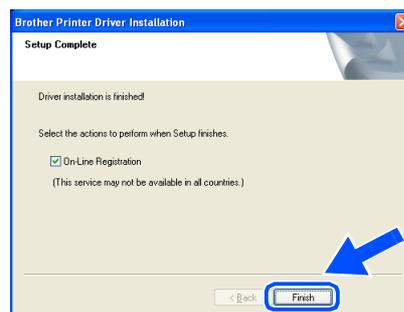

Note

If you want to register your product on-line, check **On-Line Registration**.



The setup is now complete.

For USB interface cable users

For Mac OS® X 10.2.4 or greater users

Connecting the printer to your Macintosh® and installing the driver


1 Click **Install Printer Driver** on the menu screen.



2 Click **USB cable users** and follow the on-screen instructions. Then, restart your Macintosh®.



3 Connect the USB interface cable to your Macintosh®, and then connect it to the printer.

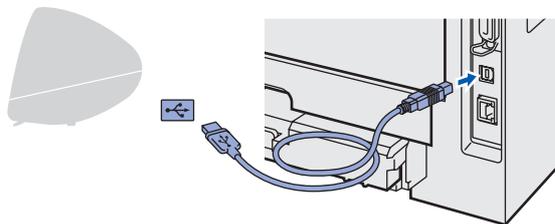


Improper Setup

DO NOT connect the printer to a USB port on a keyboard or a non-powered USB hub.

4 Make sure the printer power switch is on.



5 Click **Go**, then **Applications**.

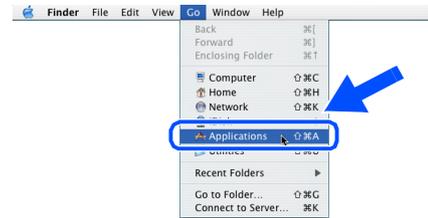

6 Double-click the **Utilities** folder.




7 Double-click the **Printer Setup Utility** icon.



Note

For Mac OS® X 10.2 users, open the **Print Center** icon.


8 Click **Add**.

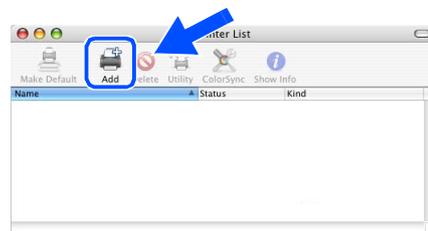


For Mac OS® 10.2.4 to 10.3 users:
Go to the next step.

For Mac OS® 10.4 or greater users:
Go to Step **10**.


9 Choose **USB**.

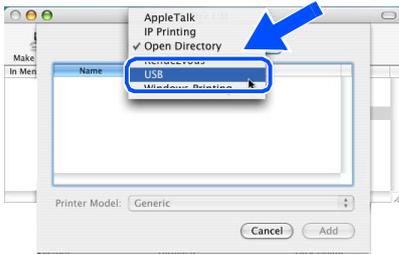


11 Click **Printer Setup Utility**, then **Quit Printer Setup Utility**.

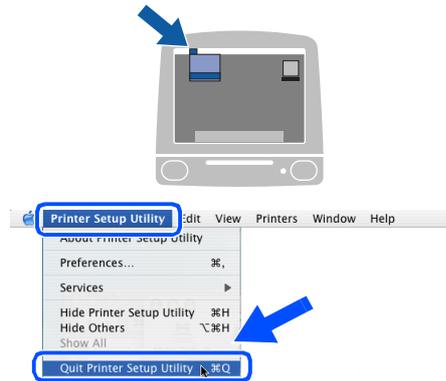


10 Choose the proper printer, and then click **Add**.
For Mac OS® 10.2 users:

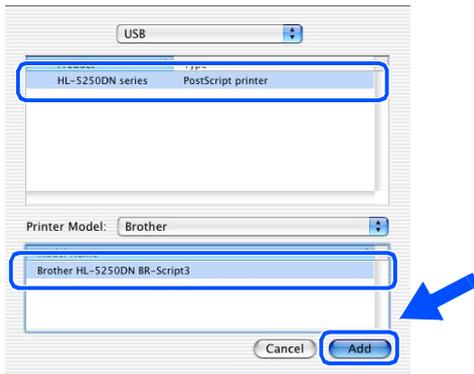

For Mac OS® 10.3 users:

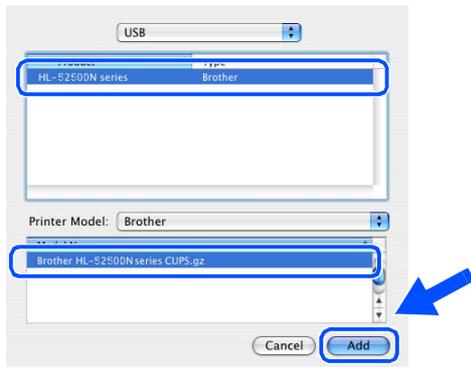

For Mac OS® 10.4 or greater users:

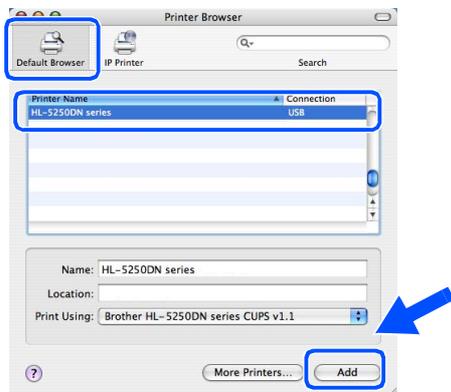


OK! The setup is now complete.

For Mac OS® 9.1 to 9.2 users

Connecting the printer to your Macintosh® and installing the driver

- 1 Put the supplied CD-ROM into your CD-ROM drive. Double-click the **Mac OS 9** folder.

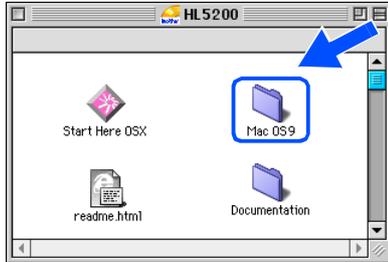


- 2 Double-click your language folder.



- 3 Double-click the **Printer Driver Installer** icon to install the printer driver. Follow the on-screen instructions and restart your Macintosh®.




- 4 Connect the USB interface cable to your Macintosh®, and then connect it to the printer.

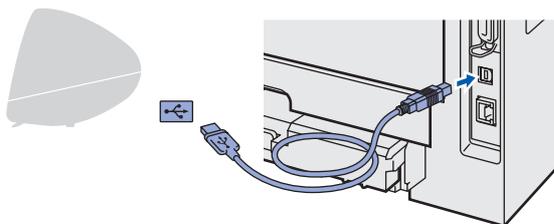


- 5 Make sure the printer power switch is on.



- 6 From the **Apple®** menu, click **Chooser**.

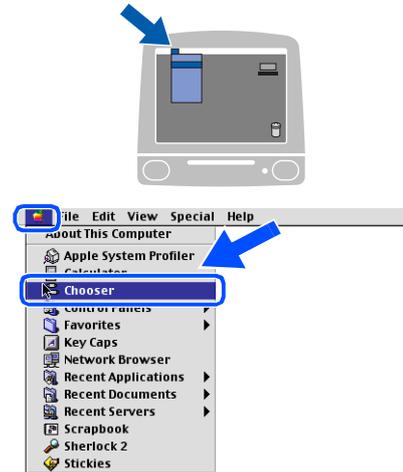

- 7 Click the **Brother Laser** icon. On the right side of the **Chooser**, choose the printer to which you want to print. Close the **Chooser**.

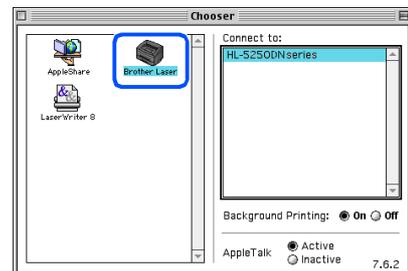

- OK!** The setup is now complete.

⊘ Improper Setup

DO NOT connect the printer to a USB port on a keyboard or a non-powered USB hub.

For network interface cable users (For HL-5250DN)

For Mac OS® X 10.2.4 or greater users

Connecting the printer to your Macintosh® and installing the driver

- 1 Click **Install Printer Driver** on the menu screen.




- 2 Click **Network cable users** and follow the on-screen instructions. Then, restart your Macintosh®.



- 3 Turn off the printer power switch.




- 4 Connect the network interface cable to the printer, and then connect it to a free port on your hub.

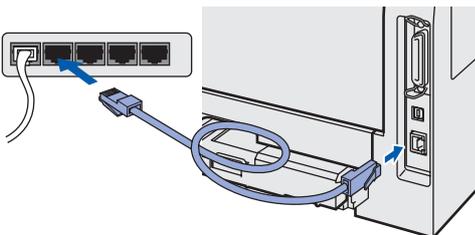

- 5 Turn on the printer power switch.




- 6 Click **Go**, then **Applications**.

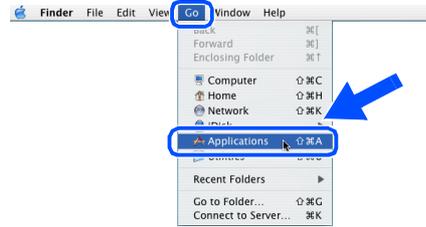

- 7 Double-click the **Utilities** folder.



- 8 Double-click the **Printer Setup Utility** icon.

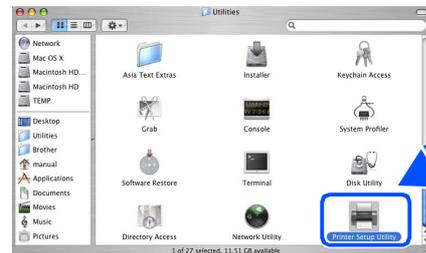

Note

For Mac OS® X 10.2 users, open the **Print Center** icon.


- 9 Click **Add**.




For Mac OS® 10.2.4 to 10.3 users:
Go to the next step.

For Mac OS® 10.4 or greater users:
Go to Step **12**.


10 Make the following selection.

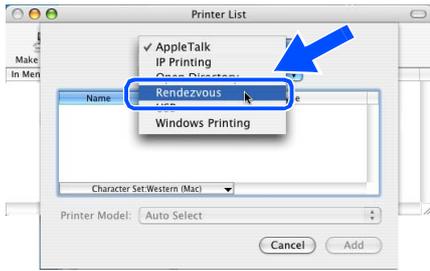

11 Choose **Brother HL-5250DN series**, and then click **Add**. Go to Step **13**.

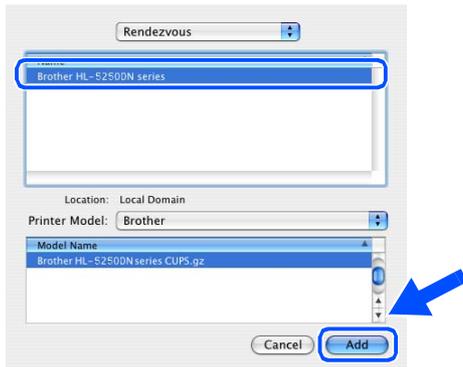


12 Choose **Brother HL-5250DN series**, and then click **Add**.

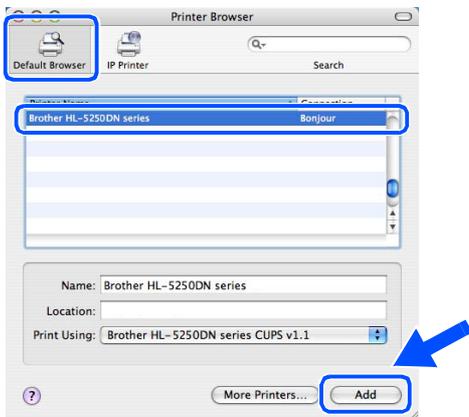

Note

If there is more than one of the same model printer (HL-5250DN) connected on your network, the Ethernet address (MAC address) will be displayed after the model name.

13 Click **Printer Setup Utility**, then **Quit Printer Setup Utility**.

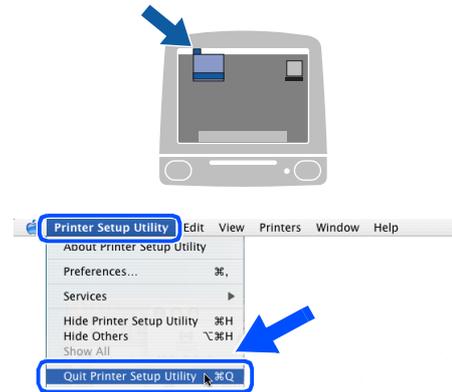

The setup is now complete.



Network User's Guide Chapter 6 .


For Mac OS® 9.1 to 9.2 users

Connecting the printer to your Macintosh® and installing the driver

1 Turn off the printer power switch.




2 Connect the network interface cable to the printer, and then connect it to a free port on your hub.

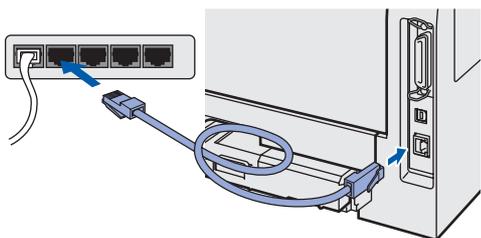

3 Turn on the printer power switch.



4 Put the supplied CD-ROM into your CD-ROM drive. Double-click the **Mac OS 9** folder.

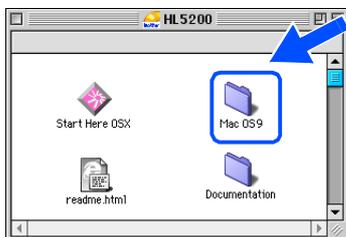


5 Double-click your language folder.




6 Double-click the **Printer Driver Installer** icon to install the printer driver. Follow the on-screen instructions.



7 From the **Apple®** menu, click **Chooser**.

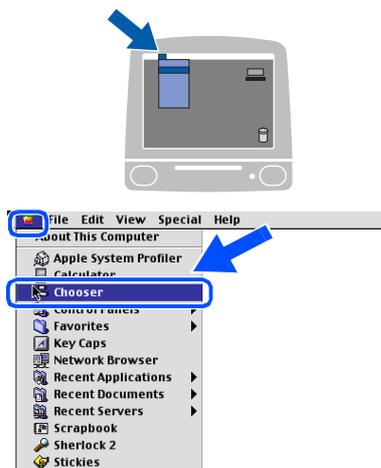


8 Click the **Brother Laser (IP)** icon, and then choose **BRN_XXXXXX** (where XXXXXX are the last six digits of the Ethernet address). Click **Setup...**

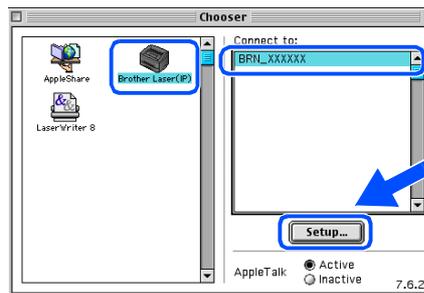

 *Network User's Guide Chapter 6.*

9 Click **OK**.
Close the **Chooser**.

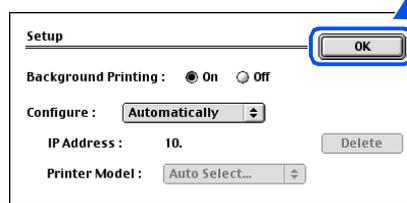

 **The setup is now complete.**

BRAdmin Professional configuration utility (For Windows® users)

The BRAdmin Professional utility for Windows® is designed to manage your Brother network connected devices in a Local Area Network (LAN) environment. For more information on BRAdmin Professional, visit us at <http://solutions.brother.com>.

Installing the BRAdmin Professional configuration utility

- 1 Click **Install Other Drivers or Utilities** on the menu screen.



- 2 Click **BRAdmin Professional** and follow the on-screen instructions.



Note

The default password for the print server is 'access'. You can use BRAdmin Professional to change this password.


Setting your IP address, Subnet Mask and Gateway using BRAdmin Professional





Note

If you have a DHCP/BOOTP/RARP server in your network, you don't have to do the following operation. Because the print server will automatically obtain its IP address.


- 1 Start BRAdmin Professional, and choose **TCP/IP**.

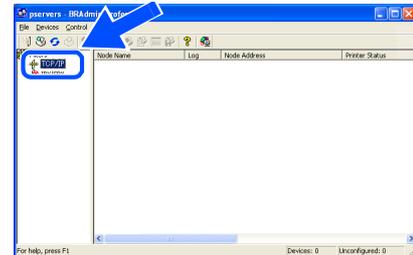


- 2 Click **Devices**, then **Search Active Devices**. BRAdmin searches for new devices automatically.

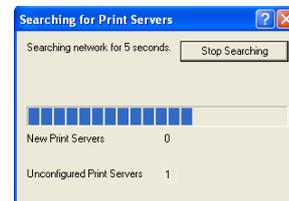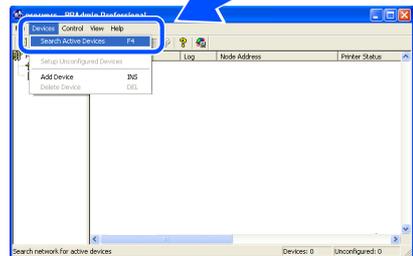

- 3 Double-click the new device.

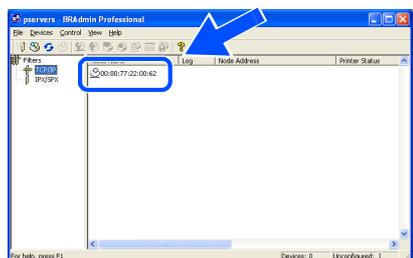

- 4 Enter the **IP Address**, **Subnet Mask** and **Gateway**, and then click **OK**.

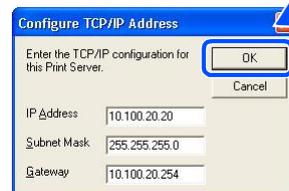

- 5 The address information will be saved to the printer.

BRAdmin Light configuration utility (For Mac OS® X users)

The Brother BRAdmin Light software is a Java™ application that is designed for the Apple Mac OS® X environment. It supports some of the features of the Windows BRAdmin Professional software. For example, using the BRAdmin Light software, you can change some network settings on Brother's network ready printers and multifunction devices.

The BRAdmin Light software will be installed automatically when you install the printer driver. If you have already installed the printer driver, you don't have to install it again.

For more information on BRAdmin Light, visit us at <http://solutions.brother.com>.

Setting your IP address, Subnet Mask and Gateway using BRAdmin Light


Note

- If you have a DHCP/BOOTP/RARP server in your network, you don't have to do the following operation. The print server will automatically obtain its own IP address. Make sure that version 1.4.1_07 or later of Java™ client software is installed on your computer.
- The default password for the print server is 'access'. You can use BRAdmin Light to change this password.

- 1 Double-click the **Macintosh HD** icon on your desktop.




- 2 Choose **Library, Printers, Brother** and then **Utilities**.

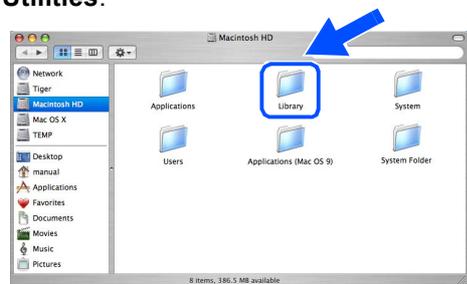


- 3 Double-click the **BRAdminLight.jar** file. Run the BRAdmin Light software. BRAdmin Light searches new devices automatically.



- 4 Double-click the new device.

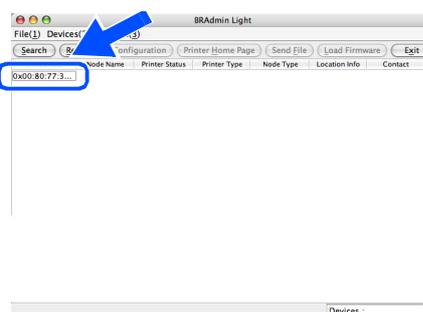

- 5 Enter the **IP Address, Subnet Mask** and **Gateway**, and then click **OK**.

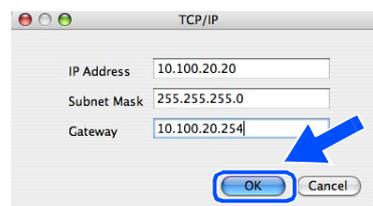

- 6 The address information will be saved to the printer.

Web browser

The Brother print server is equipped with a web server that allows you to monitor its status or change some of its configuration settings, using HTTP (Hyper Text Transfer Protocol).

Note

The User Name is '**admin**' and the default password is '**access**'. You can use a web browser to change this password.



See Chapter 2 of the Network User's Guide.


Network default settings

To restore all network settings of the internal print server to default, follow the steps below.

- 1** Turn off the printer.
- 2** Make sure that the front cover is closed and the power cord is plugged in.
- 3** Hold down **Go** as you turn on the power switch. All the LEDs will light up and then **Status** LED will turn off. Release **Go**. Make sure that all the LEDs turn off.
- 4** Press **Go** six times. Make sure that all the LEDs light up to indicate the print server has been reset to its default settings.

Print the Printer Settings Page




The Printer Settings Page lists all the current printer settings, including network settings. To print the printer settings page, press **Go** three times within 2 seconds.

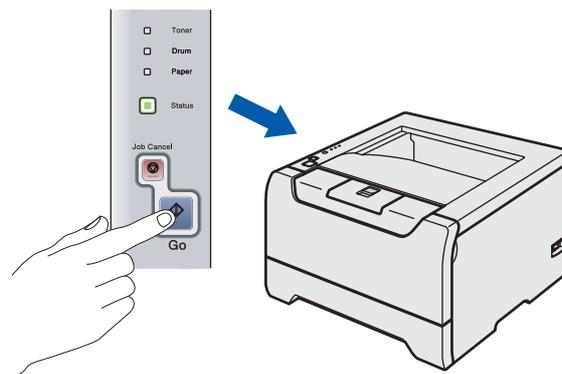

Options

The printer has the following optional accessories. You can expand the capabilities of the printer by adding these items.

 

 See Chapter 5 of the User's Guide.

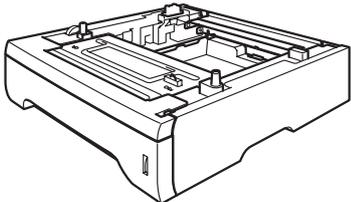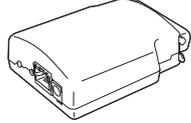Lower Tray Unit	DIMM Memory	External Print Server
<p align="center">LT-5300</p>		<p align="center">NC-2100p (For HL-5240/5240L only)</p>
 <p>Second or third lower paper tray unit can hold up to 250 sheets of paper. When both trays are installed, the printer expands total input capacity up to 800 sheets.</p>	 <p>You can expand the memory by installing the (144-pin DIMM) memory module.</p>	 <p>If you wish to connect the printer to your network, buy the optional Network device. The NC-2100p can be connected to the parallel interface port of your printer. For more information, visit us at http://solutions.brother.com.</p>

Consumables

When the time comes to replace consumables, an error will be indicated by the LED's on the control panel. For more information about the consumables for your printer, visit us at <http://solutions.brother.com> or contact your local Brother re-seller.

 See Chapter 6 of the User's Guide.

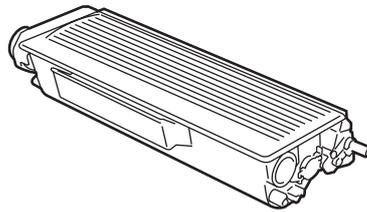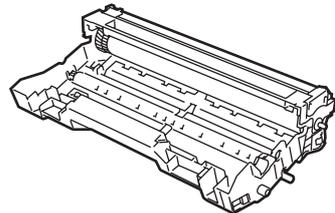Toner Cartridge	Drum Unit
	


Shipment of the printer

If for any reason you must ship your printer, carefully package the printer to avoid any damage during transit. We recommend that you save and use the original packaging. The printer should also be adequately insured with the carrier.


! Caution

When shipping the printer, the DRUM UNIT and TONER CARTRIDGE assembly must be removed from the printer and put in a plastic bag. Failure to remove the unit and put it in a plastic bag before shipping may cause severe damage to the printer and may VOID THE WARRANTY.


- 1 Turn off the printer power switch, and then unplug the AC power cord.

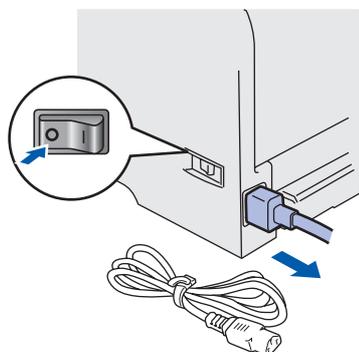

- 2 Remove the drum unit and toner cartridge assembly. Put it in a plastic bag and seal the bag completely.

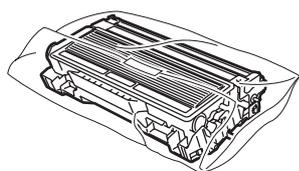

- 3 Repack the printer.

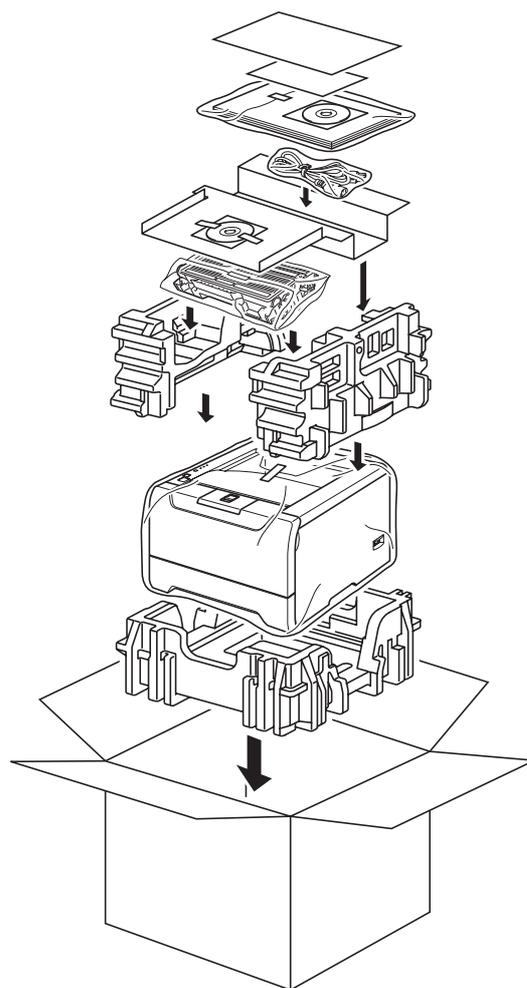

Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Apple, the Apple Logo, Macintosh and TrueType are registered trademarks of Apple Computer, Inc in the United States and other countries.

Epson is a registered trademark and FX-80 and FX-850 are trademarks of Seiko Epson Corporation.

Hewlett Packard is a registered trademark and HP LaserJet 6P, 6L, 5P, 5L, 4, 4L 4P, III, IIIP, II, and IIP are trademarks of Hewlett-Packard Company.

IBM, IBM PC, and Proprinter are registered trademarks of International Business Machines Corporation.

Microsoft, MS-DOS, Windows and Windows NT are registered trademarks of Microsoft Corporation in the U.S. and other countries.

PostScript and PostScript 3 are trademarks of Adobe Systems Incorporated.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

All other terms and brand and product names mentioned in this Quick Setup Guide are registered trademarks of their respective companies.

Compilation and Publication

This manual has been compiled and published, under the supervision of Brother Industries Ltd., covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

This product is designed for use in a professional environment.

brother®

EN