

Quick Setup Guide




Read the "Safety Sheet" first to ensure that you use this printer safely.
Read this "Quick Setup Guide" before you set up the printer.

Before you can use the printer, you must set up the hardware and install the driver.

- Identify the operating system on your computer (Windows® 95 / 98 / Me, Windows NT® 4.0, Windows® 2000 or Macintosh®).
- The interface cable is not a standard accessory. Some computers have both a USB and a parallel port. Please purchase the appropriate interface cable for the interface you intend to use (parallel, USB or Network).
- Follow the instructions in this guide for your operating system and interface.

Carton components

Carton components may differ from one country to another.
Save all packing materials and the printer carton. They should be used when shipping the printer.

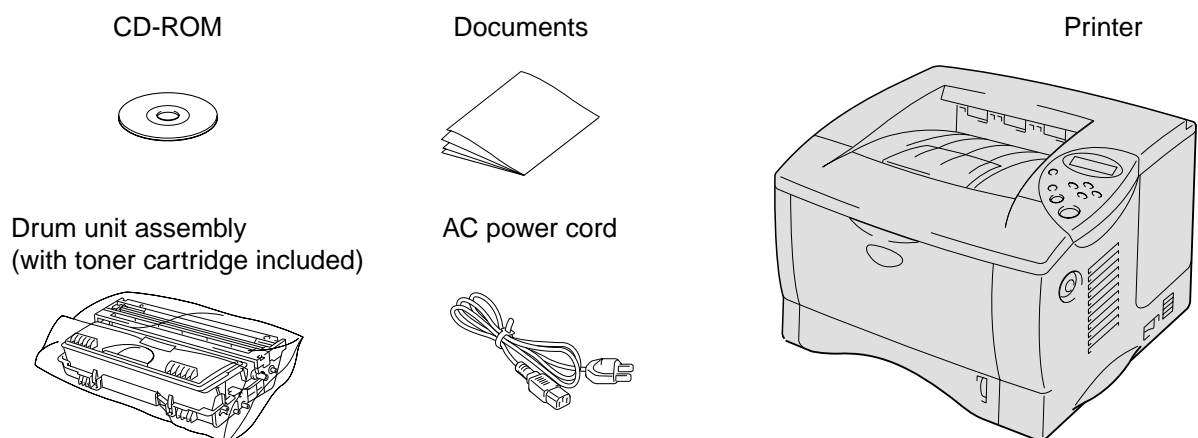

LJ5025001 Printed in China

What is included on the CD-ROM

You can get a variety of information from this CD-ROM.



Windows®



Macintosh®



Initial setup
See the complete setup process from hardware setup to driver installation on a movie. We recommend that you follow these instructions when you first setup the printer.



Install Software (only for Windows®)
You can install not only the printer driver but also the following utility items.

For all users
-Printer Driver
-Automatic E-mail Printing

For administrators
-BRAdmin Professional
-Network Printer Driver Wizard
-Network Print Software
-Storage Manager



Printer Driver Installer (only for Macintosh® with USB)



BR-Script PPD Installer (only for Macintosh® with Network)



Manual
View the Printer User's Guide, Network User's Guide and other documentation.



Brother Solutions Center
Introduction to the Brother user support web page. You can easily access it and receive the latest drivers and information for this printer.



Maintenance Tutorial
See the maintenance videos for this printer. We recommend that you view the videos before getting started.



Make Disk Sets (only for Windows®)

For all users

Step 1 Insert the CD-ROM into the CD-ROM drive

For Windows® users only

- 1 Insert the CD-ROM into the CD-ROM drive. The opening screen will appear automatically.
- 2 Select the language you want.
- 3 Click the Initial Setup icon.
- 4 You can view the Initial Setup instructions.

For Macintosh® users only

- 1 Insert the CD-ROM into the CD-ROM drive.
- 2 Double-click the Initial Setup icon.
- 3 Select the language you want.
- 4 You can view the Initial Setup instructions.

Step 2 Install the drum unit assembly

- 1 Press the cover release button, and then open the front cover.
- 2 Remove the protective part.
- 3 Unpack the drum unit assembly. Rock it from side to side 5 or 6 times to distribute the toner evenly inside the assembly.
- 4 Install the drum unit assembly into the printer.
- 5 Close the front cover.

Step 3 Load paper into the paper cassette

- 1 Pull the paper cassette completely out of the printer.
- 2 While pressing the paper guide release lever, slide the adjusters to fit the paper size. Check that they fit correctly into the slots.
Note: For Legal or 8.5 x 13 in. paper, press the universal guide release lever as you extend the rear of the paper cassette.
- 3 Load paper into the paper cassette. Check that the paper is flat in the tray and below the maximum paper mark.
- 4 Re-install the paper cassette into the printer.

Step 4 Print a test page

- 1 Make sure the printer power switch is off. Connect the AC power cord to the printer. Do not connect the interface cable.
- 2 Plug the AC power cord into an AC outlet. Turn the power switch on.
- 3 After the printer has finished warming up, the **READY** message appears.
- 4 Press the **Go** switch. The printer prints a test page. Check that the test page is printed correctly.
Note: When you want to set the control panel message language, refer to the control panel section on the reverse side of this sheet.

Follow the instructions for your interface cable and operating system.

For Parallel interface cable users (For Windows® users only)

Step 5 Connect the printer to your PC & Install the printer driver

- 1 Click "Connect the interface cable and install the printer driver / utilities".
 - 2 Select the parallel interface cable.
 - 3 Turn the printer power switch off.
 - 4 Connect the interface cable to your PC, and then connect it to the printer.
 - 5 Turn the printer power switch on.
- Note:** If "Add New Hardware Wizard" appears, click the Cancel button.
- 6 Click the Next button.
 - 7 Click the Finish button. **The setup is now complete.**

For USB interface cable users (For Windows® users only)

Step 5 Install the driver & Connect the printer to your PC

- Note:** When the "Add New Hardware Wizard" appears on your PC, click the Cancel button.
- Note:** Start installing the driver **before** you connect the USB interface cable to the printer. If you have already connected it, remove it.
- 1 Click "Connect the interface cable and install the printer driver / utilities".
 - 2 Select the USB cable.
 - 3 Click the Next button.
- 4 Click the OK button.
 - 5 Make sure the printer power switch is on.
 - 6 Connect the USB interface cable to your PC, and then connect it to the printer.
- For Windows® 98/Me users: The setup is now complete.**
For Windows® 2000 users: Go to Step 6.

For USB interface cable users (For Macintosh® users only)

Step 5 Install the Driver & Connect the Printer to your Macintosh®

- 1 Double-click the Printer Driver Installer icon, and then follow the instructions on the screen.
- 2 Make sure the printer power switch is on.
- 3 Connect the USB interface cable to your Macintosh®, and then connect it to the printer.
- 4 Open the Chooser from the Apple® menu on the Macintosh®.
- 5 Click the HL-1650/1670N icon and select it. **The setup is now complete.**


Step 6 Setting your PC printer port (For Windows® 2000 users only)

- 1 After your PC has restarted, click **Start, Setting and Printers**.
- 2 Select the Brother HL-1650/1670N series (copy2) icon.
- 3 Click on the File menu, and then select **Set as Default printer**. **The setup is now complete.**

For Network users

If you want to connect your printer using a Network cable, refer to the **Quick Network Setup Guide**. After the administrator has made the required settings, install the driver referring to the "Installing the Driver for Network users" section of the **Quick Network Setup Guide**.
 For HL-1650 user: Install the optional Network board (NC-4100h) referring to Chapter 4 of the printer.

Control Panel

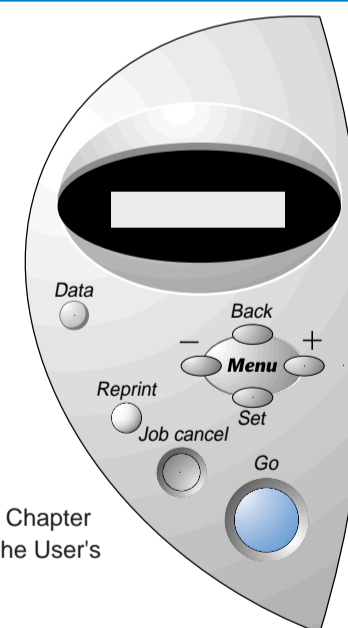

For more information, see Chapter 3 "CONTROL PANEL" in the User's Guide.

Data LED : Orange

On	Data remains in the printer buffer.
Blinking	Receiving or processing data.
Off	No remaining data.

Switches

Go	Exit from the control panel menu, reprint settings and clear error messages. Pause / Continue printing.
Job Cancel	Stop and cancel the printer operation in progress.
Reprint	Select the reprint menu.
Menu	+ Move forward and backward through menus.
	- Move forward and backward through selectable options.
	Set Select the control panel menu. Set the selected menus and the settings.
Back	Go back one level in the menu structure.

Language Setting (Default setting is English)

1. Select the **SETUP** mode by pressing the **+** switch, and press the **Set** switch.
2. Check that the **LANGUAGE** message appears, and press the **Set** switch.
3. Choose your language by pressing the **+** or **-** switch, and press the **Set** switch. An asterisk mark (*) appears at the end of the display.
 (You can return to the **READY** status by pressing the **Go** switch.)