

Driver Installation Guide


Windows® For Network Users

- Before you continue, please make sure that the administrator has configured the network printer settings correctly by referring to the **Network Quick Setup Guide**.
- Follow the instructions in this guide for your network type and operating system.

Steps 1 to 4 Follow these steps in the Quick Setup Guide first.

For All Network Users


Step 5 Connect the Printer to Your Network and Install the Driver

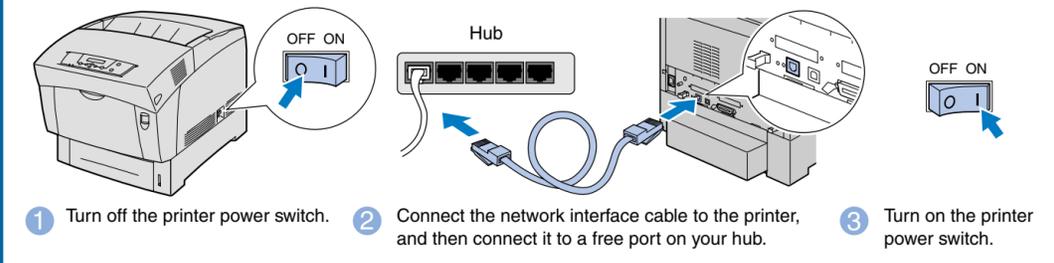

*1 Follow the instructions for the appropriate network connection style and your operating system.

For Network Shared Printer Users

Step 6 Select the Appropriate Printer Queue or 'Sharename'

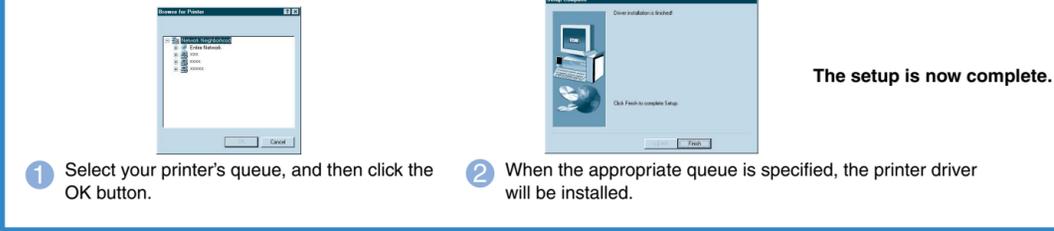


For Brother Peer-to-Peer Network Printer Users (LPR- Recommended Peer-to-Peer Printing Method)


Step 6 Configuring the LPR Port For Windows® 95/98/Me Users Only



For Windows NT® 4.0 Users Only

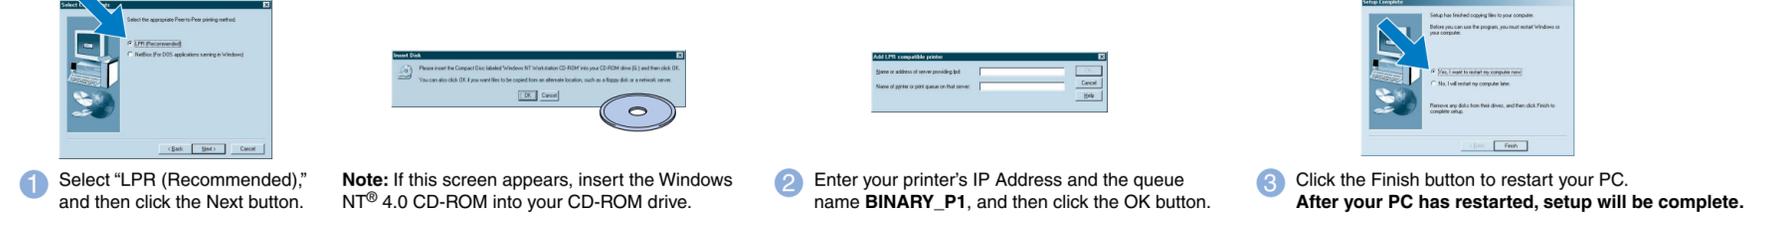

For Windows® 2000 Users Only

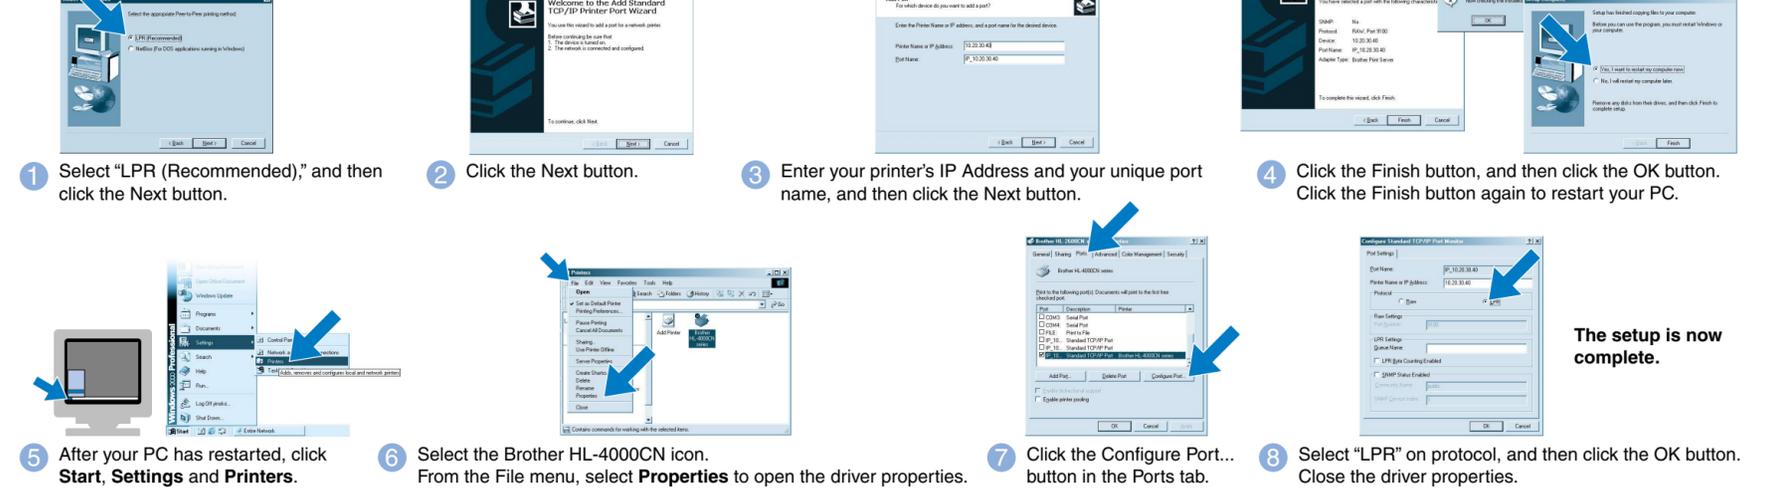


For Windows® XP Users Only



For Brother Peer-to-Peer Network Printer Users (NetBIOS)

Step 6 Configuring the NetBIOS Port

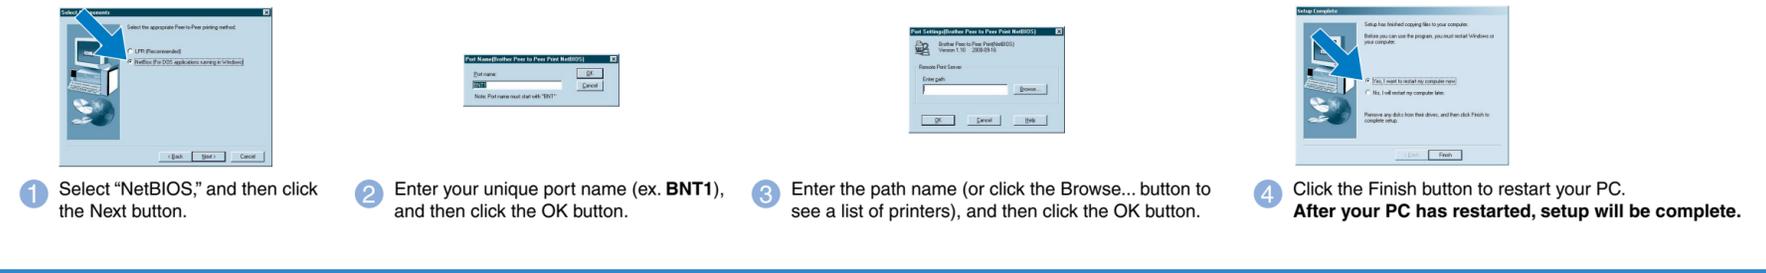

Driver Installation Guide


Windows® For non-Network Users

■ Follow the instructions in this guide for your interface cable.

Steps 1 to 4 Follow these steps in the **Quick Setup Guide** first.

For USB Interface Cable Users Only

Step 5 Install the Driver and Connect the Printer to Your PC

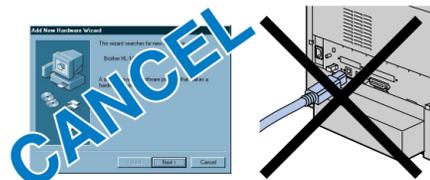

Note: When the "Add New Hardware Wizard" appears on your PC, click the Cancel button.
Note: Make sure the USB interface cable is **NOT** connected to the printer, and then begin installing the driver. If you have already connected the cable, remove it.



1 Insert the CD-ROM into your CD-ROM drive. The opening screen will appear automatically. Follow the instructions on the screen.



2 Click the Install Software icon on the Menu screen.



3 Select "PCL Driver (default A4)" or "PCL Driver (default Letter)."




4 Click the Next button. Follow the instructions on the screen.




5 Select "Standard Installation," and then click the Next button.



6 Select "Local Printer with USB cable," and then click the Next button.

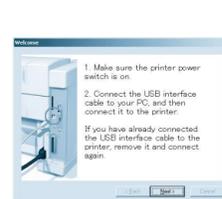

7 When this screen appears, make sure the printer power switch is on. Connect the USB interface cable to your PC, and then connect it to the printer. Click the Next button.

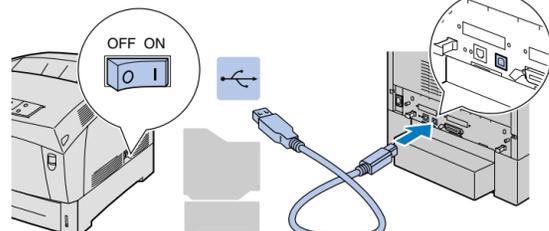


8 Click the Finish button. **The setup is now complete.** *1

*1 Please follow the steps below when the printer is not set as the default printer.


Note: Setting Your Printer as the Default Printer (For Windows® 2000/XP Users Only)



1 Click Start, Settings and Printers.

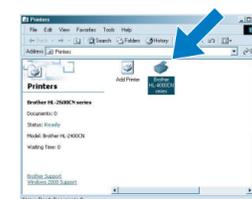


2 Select the Brother HL-4000CN icon.

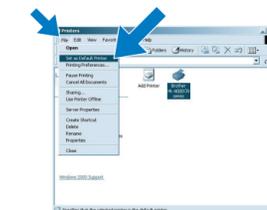


3 From the File menu, select Set as Default printer.

For Parallel Interface Cable Users Only

Step 5 Connect the Printer to Your PC and Install the Driver

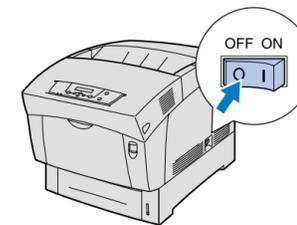

1 Turn off the printer power switch.

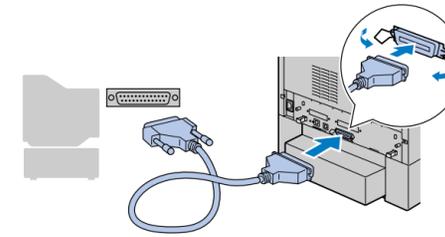

2 Connect the parallel interface cable to your PC, and then connect it to the printer.



3 Turn on the printer power switch.



Note: If the "Add New Hardware Wizard" appears on your PC, click the Cancel button.



4 Insert the CD-ROM into your CD-ROM drive. The opening screen will appear automatically. Follow the instructions on the screen.



5 Click the Install Software icon on the Menu screen.



6 Select "PCL Driver (default A4)" or "PCL Driver (default Letter)."



7 Click the Next button.



8 Select "Standard Installation," and then click the Next button.



9 Select "Local Printer," and then click the Next button.




10 Select the port where your printer is connected, and then click the Next button.



11 Click the Finish button. **The setup is now complete.**

Control Panel

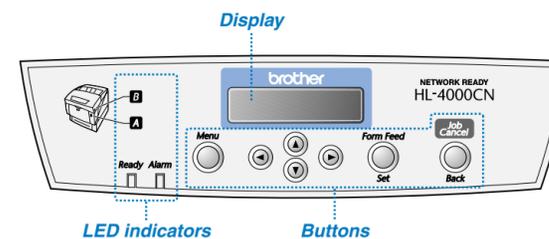

Language Setting (Default is English):

When you want to change the language of the control panel message, refer to "Setting Your Language on the Control Panel" in the Network Quick Setup Guide (the reverse side of the Quick Setup Guide).

For more information, see "CONTROL PANEL" in chapter 5 of the User's Guide on the supplied CD-ROM.

LEDs	
Ready (Green)	Lights when the printer is ready to print. Blinks when the printer is receiving data.
Alarm (Red)	Lights when the printer has a problem. Blinks when the printer has a problem that the user cannot rectify. Contact your dealer or Brother authorized service representative.
A B	Lights when the printer has paper jams. Open the front cover with the indicated button to clear the jammed paper.
Buttons	
Menu	Print screen mode Go back to the menu screen mode.
▲ ▼	Menu screen mode Close the menu screen mode and switch to the print screen mode. Scroll through menus and menu items.
◀ ▶	Menu screen mode ◀ Moves the displayed menu one level down. ▶ Moves the displayed menu one level up.
Form Feed / Set	Print screen mode Force the remaining print data to be output.
Job Cancel / Back	Menu screen mode Select menus and menu items. Moves the displayed menu one level down. Sets the displayed parameter. Moves the displayed menu one level up.