


FAX-2480C

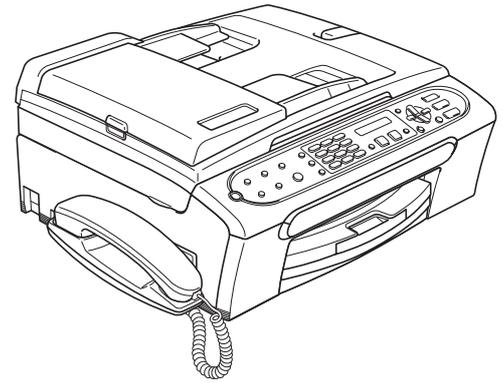

Before you can use the machine, you must set up the hardware.
Please read this Quick Setup Guide for the correct setup procedure.

Setting Up the Machine

Setup is Complete!

Keep this Quick Setup Guide and the User's Guide in a convenient place for quick and easy reference at all times.


Symbols used in this guide




 Warning	 Caution	 Improper Setup
Warnings tell you what to do to prevent possible personal injury.	Cautions specify procedures you must follow or avoid to prevent possible damage to the machine or other objects.	Improper Setup icons alert you to devices and operations that are not compatible with the machine.
 Note	 User's Guide	
Notes tell you how you should respond to a situation that may arise or give tips about how the current operation works with other features.	Indicates reference to the User's Guide we have supplied.	

Carton components

Carton components may vary from one country to another.

Save all packing materials and the carton in case for any reason you must ship your machine.

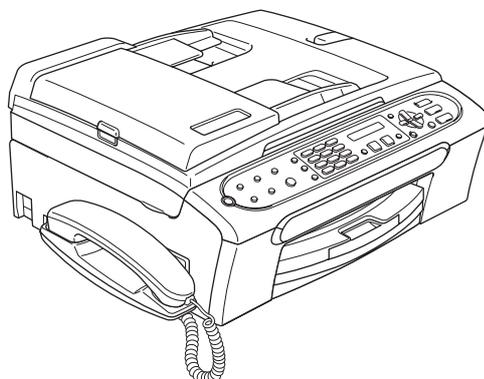


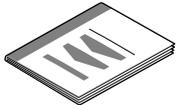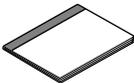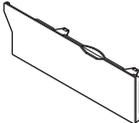 <p>Quick Setup Guide</p>	 <p>User's Guide</p>	 <p>Telephone Line Cord Adapter (For Australia only)</p>	 <p>Power Cord</p>
 <p>Telephone Line Cord</p>	 <p>Side Cover</p>	 <p>Telephone Handset</p>	 <p>One Touch Labels</p>
 <p>Black (LC57BK)</p>	 <p>Yellow (LC57Y)</p>	 <p>Cyan (LC57C)</p>	 <p>Magenta (LC57M)</p>

<p>Australia & New Zealand users:</p>  <p>The mains plug supplied with this machine is a grounded three pin plug. Make sure that the AC socket will accept this grounded three pin plug. This machine must be grounded, If in doubt, call a qualified electrician.</p>	<p>Hong Kong, Malaysia & Singapore users:</p>  <p>The mains plug supplied with this machine is a side grounded two pin plug. Make sure that the AC socket will accept this side grounded two pin plug. This machine must be grounded, If in doubt, call a qualified electrician.</p>
<p>Philippines & Thailand users:</p>  <p>The mains plug supplied with this machine is a side grounded two pin plug. Make sure that the AC socket will accept this side grounded two pin plug. This machine must be grounded, If in doubt, call a qualified electrician.</p>	


To ensure safe operation the supplied plug must be inserted only into a standard power outlet that is properly grounded through the standard electrical wiring. Non grounded equipment may cause an electrical shock hazard, and may cause excessive electrical noise radiation.

Control panel

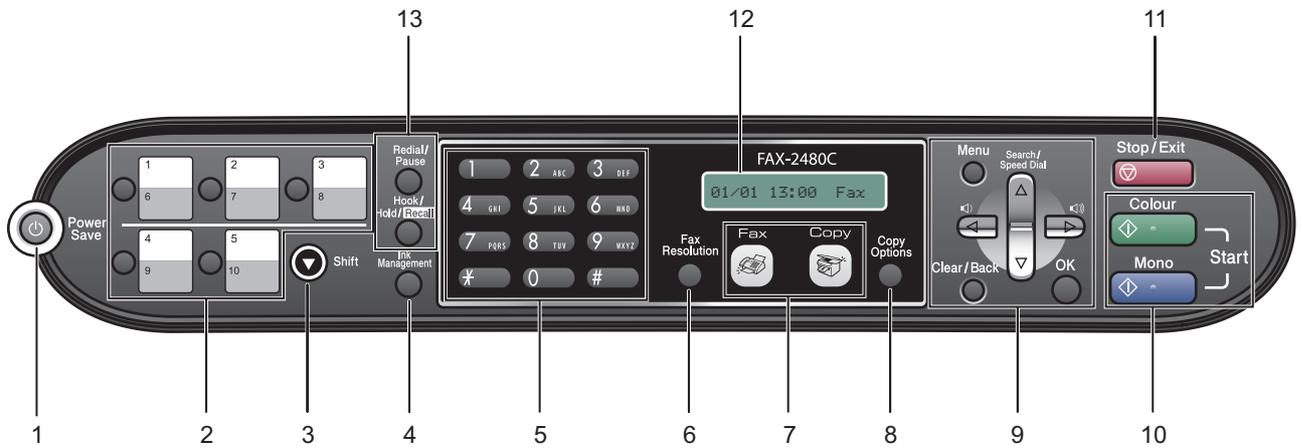

- 1 Power Save
- 2 One Touch keys
- 3 Shift
- 4 Ink Management key
- 5 Dial Pad
- 6 Fax Resolution key
- 7 Mode keys
- 8 Copy Options key
- 9 Menu keys
- 10 Start keys
- 11 Stop/Exit key
- 12 LCD (Liquid Crystal Display)
- 13 Fax and telephone keys

Note

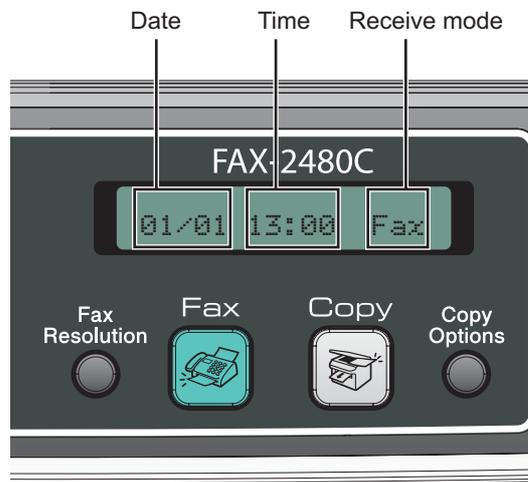

When the machine is idle (not being used) it will return to the default display shown above. The default display shows the date, time, and the current receive mode.




For the details of the control panel, see Control panel overview in Chapter 1 of the User's Guide.

1 Removing the protective parts

- 1 Remove the protective tape and film covering the scanner glass.
- 2 Remove the foam bag containing the ink cartridges from on top of the paper tray.

2 Connecting the handset



- 1 Connect the curled handset cord to the handset.

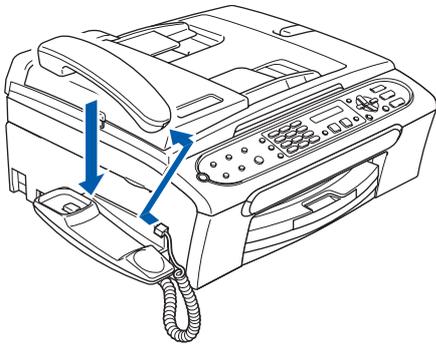


3 Loading paper

-  You can load up to 100 sheets of 80 gsm (20 lb) paper.
For details, see *Acceptable paper and other media* in Chapter 2 of the User's Guide.

- 1 Pull the paper tray completely out of the machine and lift the output paper tray cover (1).

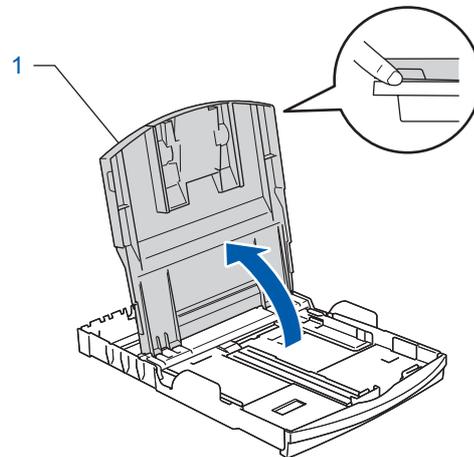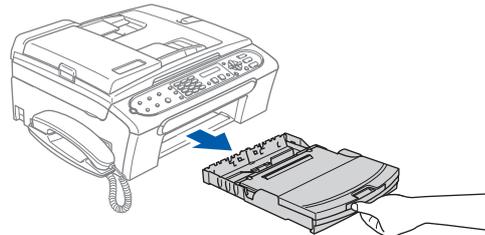


- 2 Press and slide the paper side guides (1) and paper length guide (2) to fit the paper size.

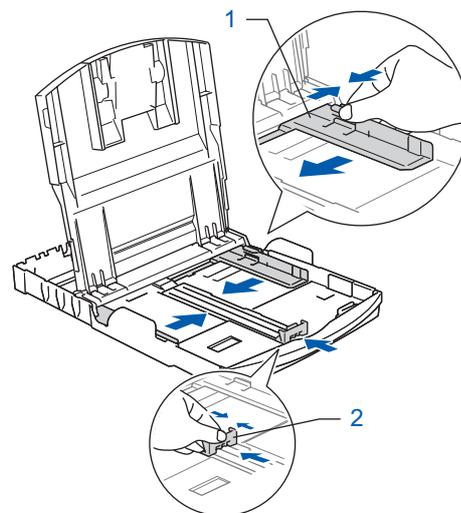


Setting Up the Machine


- 3** Fan the stack of paper well to avoid paper jams and misfeeds.

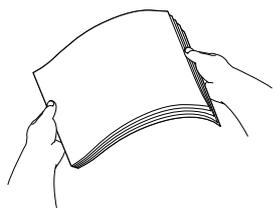

- 4** Gently put the paper into the paper tray print side down and top edge first. Check that the paper is flat in the tray.

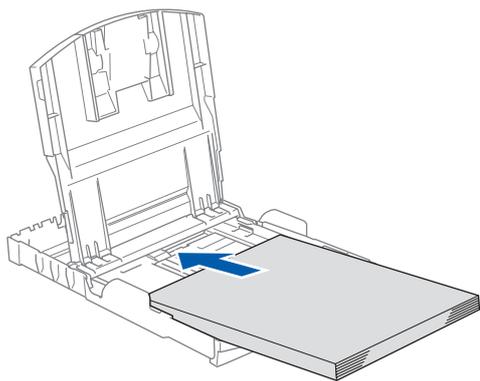


- 5** Gently adjust the paper side guides with both hands to fit the paper. Make sure that the paper guides touch the edges of the paper.

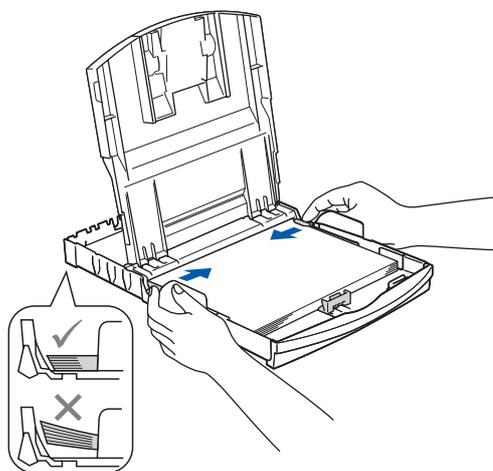


 **Note**

Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause paper feed problems.


- 6** Close the output paper tray cover.

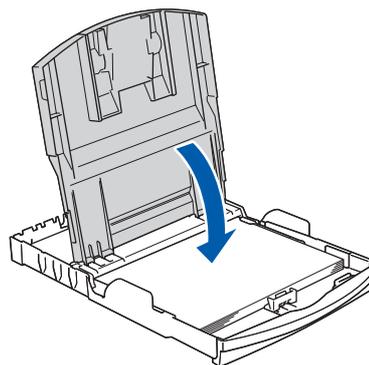

- 7** Slowly push the paper tray completely into the machine.

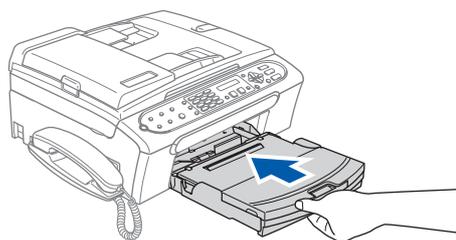

- 8** While holding the paper tray in place, pull out the paper support (①) until it clicks, and then unfold the paper support flap (②).

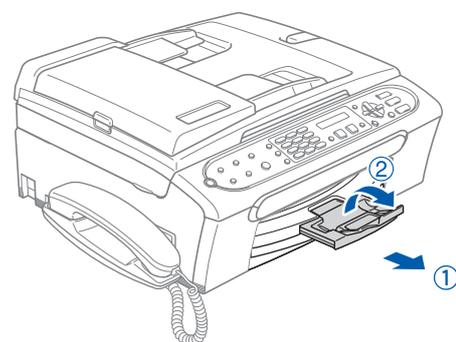


 **Note**

Do not use the paper support flap for Legal size paper.


4 Connecting the phone line

- 1 Connect the telephone line cord. Connect one end of the telephone line cord to the socket on the machine marked **LINE** and the other end to a modular wall socket.

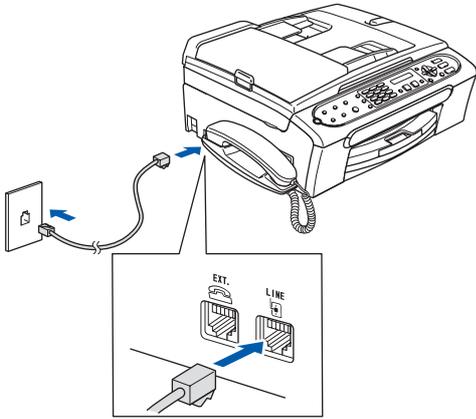

Note


If you are sharing one phone line with an external telephone, connect it as shown below.

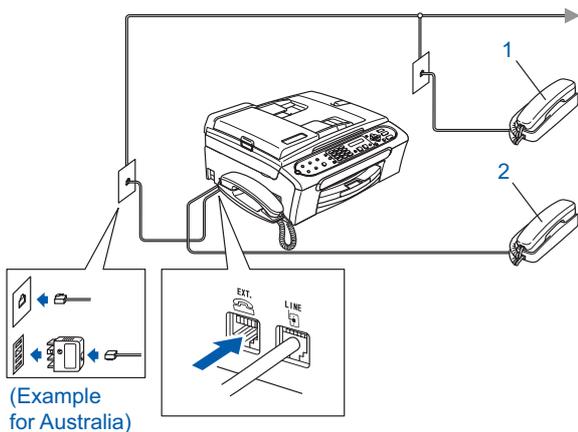

- 1 Extension telephone
- 2 External telephone

Note


If you are sharing one phone line with an external telephone answering machine, connect it as shown below.

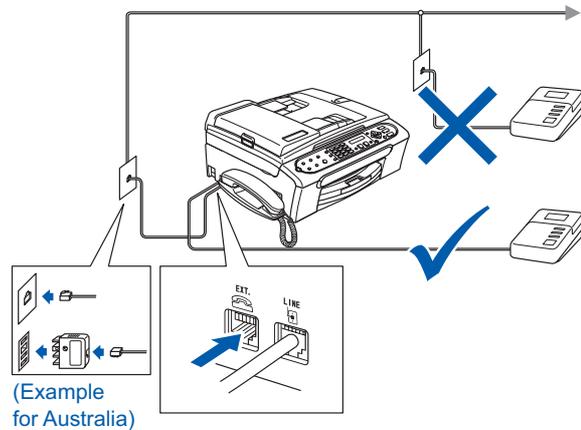

Set the receive mode to 'External TAD' if you have an external answering machine. For details, see *Connecting an external TAD (telephone answering device)* in Chapter 7 of the User's Guide.

5 Connecting the power cord

- 1 Connect the power cord.

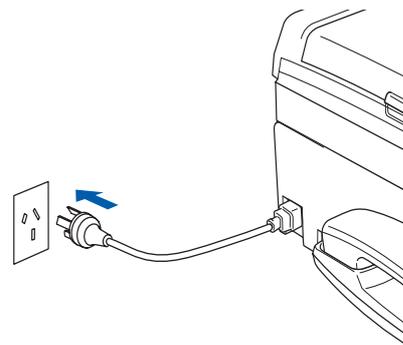

Warning

- The machine must be fitted with an earthed plug.
- Since the machine is grounded through the power outlet, you can protect yourself from potentially hazardous electrical conditions on the telephone network by keeping the power cord connected to your machine when you connect it to a telephone line. Similarly, you can protect yourself when you want to move your machine by disconnecting the telephone line first and then the power cord.

6 Set Your Country (For Australia / New Zealand Customer Only)

You must set your country so that the machine works correctly.

- 1 Check that the power is turned on by connecting the power cord.
The LCD shows:

Set Country



Press OK Key

- 2 Press **OK**.
The LCD shows:

Australia



Select ▲ ▼ & OK

- 3 Press **▲** or **▼** to select the country
(Australia or New Zealand).

- 4 Press **OK** when the LCD shows your country.

- 5 The LCD prompts you to make sure of the country again.

Australia?



1.Yes 2.No

- 6 Press **1** (Yes) to go to the next step.
---OR---

Press **2** (No) to go back to step **1** to select the country again.

- 7 After the LCD shows *Accepted* for two seconds, it shows; *Please Wait*.

7 Installing the ink cartridges

Warning

If ink gets in your eyes, wash them out with water at once, and if irritation occurs consult a doctor.



- 1 Make sure that the power is turned on.
The LCD shows:

No Cartridge

- 2 Open the ink cartridge cover (1).




- 3 Pull all the lock release levers down and remove the yellow protective part (1).

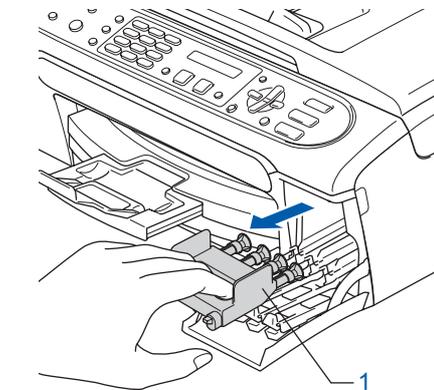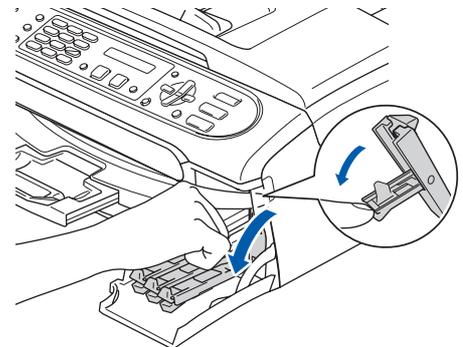


Note

Do not throw away the yellow protective part. You will need it if you transport the machine.

- 4** Take out the ink cartridge.

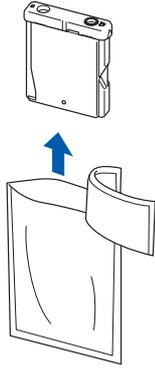


- 5** Carefully remove the protective yellow cap (1).

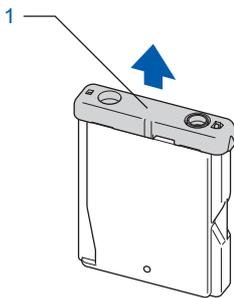

⊘ Improper Setup



DO NOT touch the area shown in the illustration below.

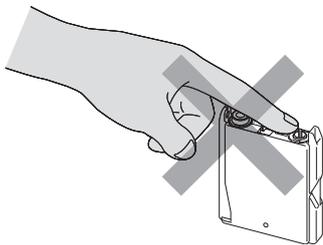


Note

If the protective yellow cap comes off when you open the bag, the cartridge will not be damaged.

- 6** Install each ink cartridge in the direction of the arrow on the label. Take care to match the colour of the lock release lever (1) with the cartridge colour (2), as shown in the diagram below.

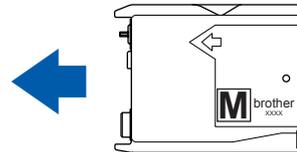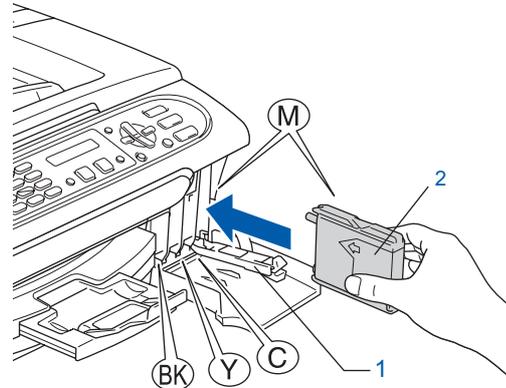

- 7** Lift each lock release lever and gently push until it clicks, and then close the ink cartridge cover.

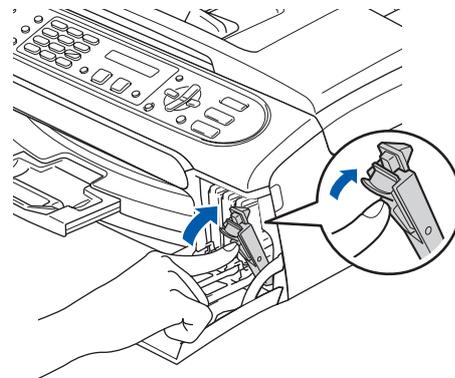


Note

*If the LCD shows **Install Black**, **Install Yellow**, **Install Cyan** or **Install Magenta** after you install the ink cartridges, check that the ink cartridges are installed correctly.*

Setting Up the Machine

The machine will clean the ink tube system for use for the first time. The cleaning process will last approximately four minutes.

The LCD shows:

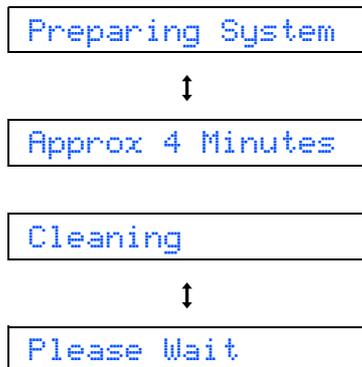


! Caution


- **DO NOT** take out ink cartridges if you do not need to replace them. If you do so, it may reduce the ink quantity and the machine will not know the quantity of ink left in the cartridge.
- **DO NOT** shake the ink cartridges. If ink stains your skin or clothing, wash with soap or detergent at once.
- **DO NOT** repeatedly insert and remove the cartridges. If you do so, ink may seep out of the cartridge.
- If you mix the colours by installing an ink cartridge in the wrong position, clean the print head several times after correcting the cartridge installation. (See *Cleaning the print head in Appendix B of the User's Guide.*)
- Once you open an ink cartridge, install it in the machine and use it up within six months of installation. Use unopened ink cartridges by the expiration date written on the cartridge package.
- **DO NOT** dismantle or tamper with the ink cartridge, this can cause the ink to leak out of the cartridge.
- Brother multifunction machines are designed to work with ink of a particular specification and will work to a level of optimum performance when used with genuine Brother branded ink cartridges. Brother cannot guarantee this optimum performance if ink or ink cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than genuine Brother branded cartridges with this machine or the refilling of empty cartridges with ink from other sources. If damage is caused to the print head or other parts of this machine as a result of using incompatible products with this machine, any repairs required as a result may not be covered by the warranty.

8 Print quality check

- 1 After the cleaning cycle is finished, the LCD shows:

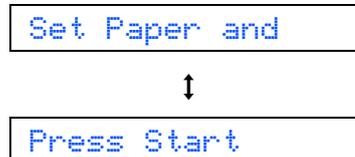

- 2 Make sure paper is loaded in the paper tray. Press **Colour Start**. The machine starts printing the Print Quality Check Sheet (only during initial ink cartridge installation).
- 3 Check the quality of the four colour blocks on the sheet.
(black/yellow/cyan/magenta)

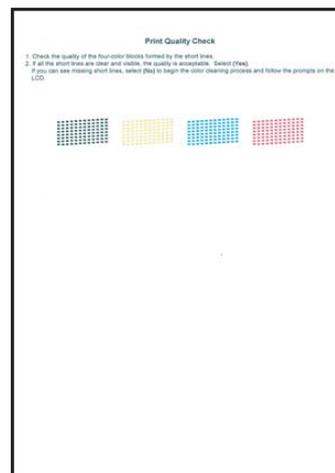

⊘ Improper Setup


Avoid touching the printed surface of the paper immediately after printing, the surface may not be completely dry and may stain your fingers.

- 4 The LCD shows:




- 5** Do one of the following:
- If all lines are clear and visible, press **1** (Yes) on the dial pad to finish the quality check.
 - If you can see missing short lines, press **2** (No) on the dial pad and go to step **6**.

OK

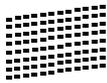

Poor

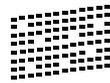

- 6** The LCD asks you if the print quality is OK for black and colour. Press **1** (Yes) or **2** (No) on the dial pad.

Black OK?



1.Yes 2.No

Color OK?



1.Yes 2.No

After pressing **1** (Yes) or **2** (No) for both black and colour, the LCD shows:

Start Cleaning?



1.Yes 2.No

- 7** Press **1** (Yes), the machine will then start cleaning the colours.

- 8** After cleaning is finished, press **Colour Start**. The machine starts printing the Print Quality Check Sheet again and goes back to step **3**.

9 Setting the LCD contrast

You can adjust the LCD contrast for a sharper and more vivid display. If you are having difficulty seeing the LCD from your position, we recommend changing the contrast setting for improved viewing.

- 1** Press **Menu**.
- 2** Press **1**.
- 3** Press **7**.
- 4** Press **▲** or **▼** to choose **Dark** or **Light**.
- 5** Press **OK**.
- 6** Press **Stop/Exit**.

Contrast:Light



Contrast:Dark



Setting Up the Machine

10 Setting the date and time

The machine displays the date and time, and if you set up the station ID, the date and time displayed on your machine will be printed on every fax you send.

- 1 Press **Menu**.
- 2 Press **0**.
- 3 Press **2**.
- 4 Enter the last two digits of the year on the dial pad, and then press **OK**.

Year: 2007

(e.g. Enter **0 7** for 2007.)

- 5 Enter the two digits for the month on the dial pad, and then press **OK**.

Month: 03

(e.g. Enter **0 3** for March.)

- 6 Enter the two digits for the day on the dial pad, and then press **OK**.

Day: 01

(e.g. Enter **0 1** for the first day of the month.)

- 7 Enter the time in 24-hour format on the dial pad, and then press **OK**.

Time: 15:25

(e.g. Enter **1 5, 2 5** for 3:25 P.M.)

- 8 Press **Stop/Exit**.



To confirm the current date and time, print out the Users Settings Report. See Printing Reports in Chapter 10 of the User's Guide.

11 Setting your station ID

You should store your name and fax number to be printed on all fax pages that you send.

- 1 Press **Menu**.
- 2 Press **0**.
- 3 Press **3**.
- 4 Enter your fax number (up to 20 digits) on the dial pad, and then press **OK**. To enter a "+" for international codes, press *****. For example, to enter the UK dialling code "+44", press *****, **4, 4** and then the rest of your number.

Fax: +44XXXXXXXXXX

- 5 Enter your name (up to 20 characters) using the dial pad, and then press **OK**.

Name: _



Note

- See the following chart for entering your name.
- If you need to enter a character that is on the same key as the last character, press to move the cursor to the right.
- If you entered a letter incorrectly and want to change it, press or to move the cursor under the incorrect character, press **Clear/Back**.

Press key	One time	Two times	Three times	Four times
2	A	B	C	2
3	D	E	F	3
4	G	H	I	4
5	J	K	L	5
6	M	N	O	6
7	P	Q	R	S
8	T	U	V	8
9	W	X	Y	Z

- 6 Press **Stop/Exit**.



Note

If you make a mistake and want to start again, press **Stop/Exit** and go back to step **1**.



For details, see Entering Text in Appendix C of the User's Guide.


12 Setting tone or pulse dialling mode (not available for New Zealand)

Your machine comes set for a Tone dialling service. If you have a Pulse dialling service (rotary), you need to change the dialling mode.

- 1 Press **Menu**.
- 2 Press **0**.
- 3 Press **4**.
- 4 Press **▲** or **▼** to choose *Pulse* (or *Tone*). Press **OK**.
- 5 Press **Stop/Exit**.

13 Choosing a Receive Mode

There are four possible receive modes: *Fax Only*, *Fax/Tel*, *Manual* and *External TAD*.

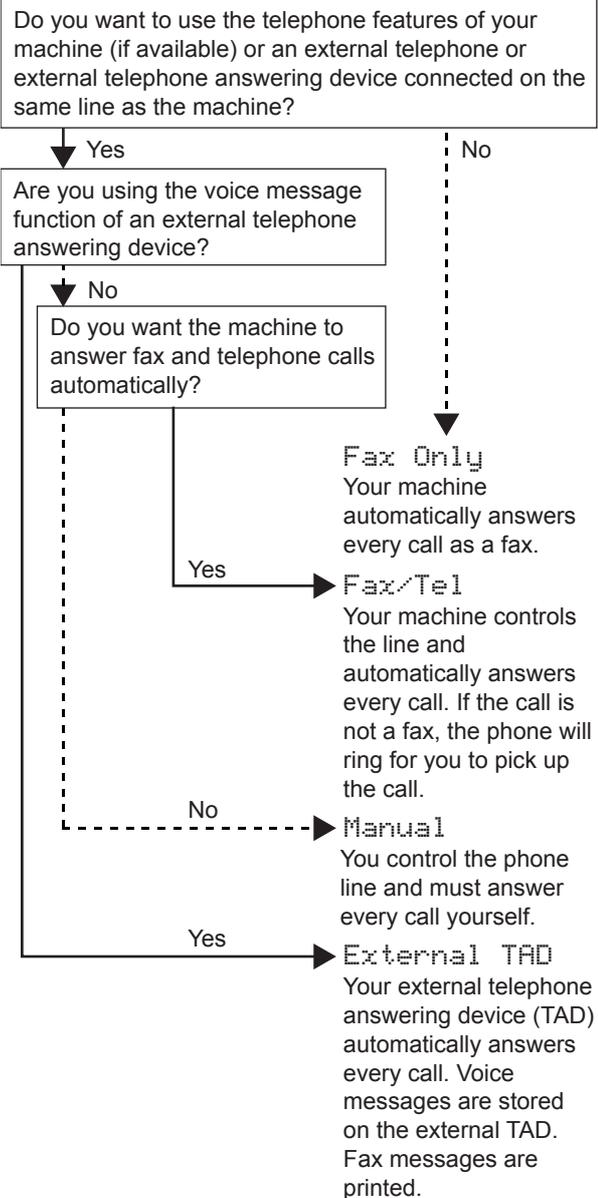

- 1 Press **Menu**.
- 2 Press **0**.
- 3 Press **1**.
- 4 Press **▲** or **▼** to choose the mode.
- 5 Press **OK**.
- 6 Press **Stop/Exit**.



For details, see *Using receive modes in Chapter 6 of the User's Guide*.

14 Using the Fax as a printer or for PC-Fax send

You can download the Brother printer driver and PC-Fax send driver from the Brother Solutions Center for use with FAX-2480C.

Visit us at: <http://solutions.brother.com>

Follow install instructions on the Driver download page.


Note

- Please download the printer driver first before connecting the machine to your computer with a USB cable.
- You must use an appropriate USB 2.0 interface cable. If you do not have it, please purchase a USB 2.0 interface cable that is no longer than 2 metres long (6 feet).


Note

Connecting the USB cable


- 1 Using both hands, use the plastic tabs on both sides of the machine to lift the scanner cover until it locks securely into the open position.

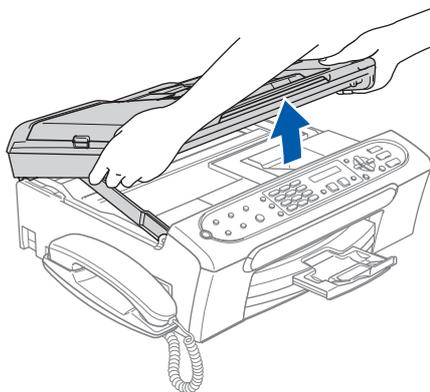

- 2 Connect the USB cable into the USB socket marked with a  symbol. You will find the USB socket inside the machine as shown below.

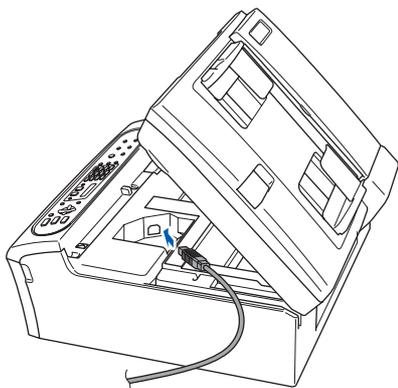


- 3 Carefully guide the USB cable into the trench as shown below, following the trench around and toward the back of the machine. Then, connect the cable to your computer.

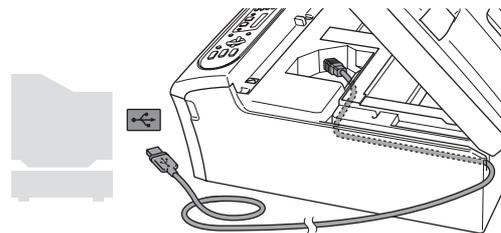

Improper Setup

- **DO NOT** connect the machine to a USB port on a keyboard or a non-powered USB hub. Brother recommends that you connect the machine directly to your computer.
- Make sure that the cable does not restrict the cover from closing, or an error may occur.
- Please make sure you use a USB 2.0 cable that is no longer than 2 metres long (6 feet).


- 4 Lift the scanner cover to release the lock (①). Gently push the scanner cover support down (②) and close the scanner cover (③).

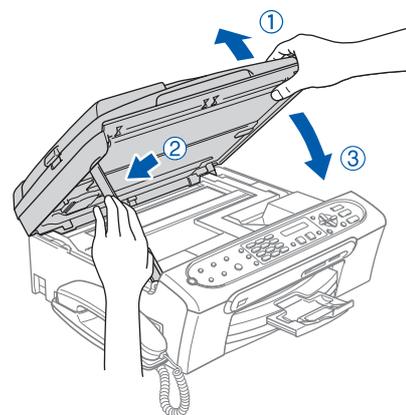

Replacement consumables

When the time comes to replace ink cartridges, an error message will be indicated on the LCD. For more information about the ink cartridges for your machine, visit <http://solutions.brother.com> or contact your local Brother re-seller.

Ink cartridge

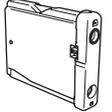Black	Yellow	Cyan	Magenta
LC57BK	LC57Y	LC57C	LC57M
			

Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a registered trademark of Brother Industries, Ltd.

Windows and Microsoft are registered trademarks of Microsoft in the U.S. and other countries.

Macintosh is registered trademarks of Apple Computer, Inc.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

All other brand and product names mentioned in this manual are trademarks or registered trademarks of their respective companies.

Compilation and Publication

Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

This product is designed for use in a Professional Environment.

Copyright and License

©2006 Brother Industries, Ltd.

brother®



LP5697040
ARL/ASA/NZ
Printed in China