brother.

SOFTWARE USER'S GUIDE

MFC-9440CN MFC-9450CDN MFC-9840CDW DCP-9040CN DCP-9042CDN DCP-9045CDN

Not all models are available in all countries.

Please read this manual thoroughly before using this machine on your network. You can view this manual in HTML format from the CD-ROM at any time, please keep the CD-ROM in a convenient place for quick and easy reference at all times. You can also download the manual in PDF format from the Brother Solutions Center (http://solutions.brother.com/).

Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a registered trademark and BRAdmin Light and BRAdmin Professional are trademarks of Brother Industries, Ltd.

Multi-Function Link is a registered trademark of Brother International Corporation.

Microsoft, Windows and Windows Server are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Windows Vista is either a registered trademark or a trademark of Microsoft Corporation in the United States and other countries.

Apple and Macintosh are registered trademarks of Apple Inc.

PostScript is a registered trademark and PostScript 3 is a trademark of Adobe Systems Incorporated.

Nuance, the Nuance logo, PaperPort and ScanSoft are trademarks or registered trademarks of Nuance Communications, Inc. or its affiliates in the United States and/or other countries.

Presto! PageManager is a registered trademark of NewSoft Technology Corporation.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

All other brand and product names mentioned in this User's Guide, the Software User's Guide, and the Network User's Guide are registered trademarks of their respective companies.

© 2007 Brother Industries, Ltd. All rights reserved.

Table of Contents

Section I Windows[®]

1	Printing	2
	Using the Brother printer driver	2
	Printing a document	
	Duplex printing	
	Guidelines for printing on both sides of the paper	4
	Automatic duplex printing (Not available for MFC-9440CN and DCP-9040CN)	4
	Manual duplex printing	5
	Simultaneous scanning, printing and faxing	
	Printer operation keys	6
	Job Cancel	6
	Secure Key	6
	Printer Emulation Support	7
	Printing the Internal Font List	8
	Printing the Print Configuration List	
	Test Print	
	Duplex (MFC-9840CDW and DCP-9045CDN only)	
	Output Colour	
	Restoring default printer settings	
	Calibration	10
	Auto Registration	11
	Manual Registration	12
	Status Monitor.	13
	Turning on the status monitor	13
	Monitoring the machine's status	
	Printer driver settings	
	Features in the Windows [®] printer driver	
	Basic tab	16
	Advanced tab	19
	Print Quality	
	Duplex Printing	
	Watermark	
	Page Setting	
	Device Options	
	Support tab	
	Accessories tab	
	Features in the BR-Script (PostScript [®] 3™ language emulation) printer driver	31
	Device Settings tab	
	Printing Preferences	
	Advanced options	
	Ports tab	

2 Scanning

Scanning a document using the TWAIN driver	
TWAIN compliant	
Accessing the Scanner	
Scanning a document into the PC	40
Settings in the Scanner Setup dialog box	
Scanning a document using the WIA driver (For Windows [®] XP/ Windows Vista [®])	46
WIA compliant	
Accessing the Scanner	
Scanning a document into the PC	
Scanning a document using the WIA driver	
(For Windows Photo Gallery and Windows Fax and Scan users)	53
Accessing the scanner	
Scanning a document into the PC	
Using the Scan key (For USB users)	
Scan to USB (Not available for DCP-9040CN and DCP-9042CDN)	
Scan to E-mail	
Scan to Image	
Scan to OCR	
Scan to File	
Using ScanSoft™ PaperPort™ 11SE with OCR by NUANCE™	
Viewing items	
Organizing your items in folders	
Quick links to other applications	
ScanSoft™ PaperPort™ 11SE with OCR lets you convert image text into text you can edit	
You can import items from other applications	
You can export items into other formats	
Uninstalling ScanSoft™ PaperPort™ 11SE with OCR	

3 ControlCenter3

Using ControlCenter3	69
Switching the user interface	
Turning the Auto Load feature off	
SCAN	
CUSTOM SCAN	
COPY	
PC-FAX (MFC models only)	
DEVICE SETTING	
SCAN	74
Image (example: Microsoft [®] Paint)	74
OCR (Word Processing program)	
E-mail	
File attachments	77
File	
CUSTOM SCAN	79
Customizing a user-defined button	80
COPY	

iii

PC-FAX (MFC models only)	
Send	
Receive/View Received	
Address Book	
Setup	
DEVICE SETTING	
Remote Setup (MFC models only)	
Quick-Dial (MFC models only)	
Status Monitor	
User's Guide	
Network Scanning	91
Defere using Network Coopping	01

Before using Network Scanning	91
Network license	
Configuring Network Scanning	
Using the Scan key	
Scan to E-mail (PC)	
Scan to E-mail (E-mail Server, MFC-9840CDW only)	
Scan to Image	
Scan to OCR	
Scan to File	
Scan to FTP	
Scan to FTP Manual Method	

5	Remote Setup (MFC models only)
---	--------------------------------

4

6	Brother PC-FAX Software (MFC models only)

rother PC-FAX Software (MFC models only)	108
PC-FAX sending	
Setting up user information	
Sending setup	109
Setting up a cover page	
Entering cover page information	111
Sending a file as a PC-FAX using the Facsimile style user interface	111
Sending a file as a PC-FAX using the Simple style user interface	113
Address Book	
Brother Address Book	115
Setting up a member in the Address Book	115
Speed Dial setup	
Setting up a group for broadcasting	
Editing member information	
Deleting a member or group	
Exporting the Address Book	
Importing to the Address Book	
PC-FAX receiving	
Enabling PC-FAX on your machine	
Running the PC-FAX Receiving software on your PC	
Setting up your PC	
Configuring the Network PC-FAX Receiving Settings	
Viewing new PC-FAX messages	124

7	Firewall settings (For Network users)	125
	Before using the Brother software For Windows $^{\ensuremath{\mathbb{R}}}$ XP SP2 users	125
	For Windows [®] XP SP2 users	
	For Windows Vista [®] users	127

Section II Apple[®] Macintosh[®]

8 Printing and Faxing

Printer operation key	
Job Cancel	
Secure Key	130
Printer Emulation Support	131
Printing the Internal Font List	
Printing the Print Configuration List	132
Test Print	132
Duplex (MFC-9840CDW and DCP-9045CDN only)	133
Output Colour	
Restoring default printer settings	133
Calibration	134
Auto Registration	134
Manual Registration	135
Status Monitor	136
Updating the machine's status	136
Hiding or showing the window	
Quitting the window	
Web Based Management (Network Connection Only)	
Colour Calibration	137
Features in the printer driver (For Macintosh $^{\textcircled{R}}$)	
Page Setup	
Choosing page setup options	
Cover Page (For Mac OS [®] X 10.4 or greater)	140
Layout	
Secure Print	
Print Settings	
Removing the Printer driver for Macintosh [®]	
Using the BR-Script3 Driver (PostScript [®] 3 ™ language emulation printer driver)	
Features in the BR-Script (PostScript [®] 3 ™ language emulation) printer driver	
Page Setup	
Choosing Page setup options	
Cover Page (For Mac OS [®] X 10.4)	
Layout	
Printer Features	
Sending a fax (MFC models only)	
For Macintosh [®]	
Drag a vCard from the Mac $OS^{\mathbb{R}}$ X address Book application	101
(For Mac OS [®] X 10.2.x to 10.4.x)	
Using Mac OS [®] X 10.5 Addresses panel	

9 Scanning

Scanning from a Macintosh [®]	
Accessing the scanner	
Scanning an image into your Macintosh [®]	165
Pre-Scanning an image	166
Settings in the Scanner window	167
Using the Scan key (For USB cable users)	170
Scan to USB (Not available for DCP-9040CN and DCP-9042CDN)	171
Scan to E-mail	174
Scan to Image	
Scan to OCR	175
Scan to File	
Using Presto! [®] PageManager [®]	177
Features	177
System requirements for Presto! [®] PageManager [®]	177
NewSoft Technical Support	

10 ControlCenter2

Using ControlCenter2	180
Turning the AutoLoad feature off	
SCAN	
CUSTOM SCAN	
COPY / PC-FAX	
DEVICE SETTINGS	
SCAN	
Image (example: Apple $^{ extsf{B}}$ Preview)	
OCR (word processing application)	
E-mail	
Supported file types	186
File	187
CUSTOM SCAN	188
User-defined button	
Scan to Image	
Scan to OCR	
Scan to E-mail	
Scan to File	
COPY / PC-FAX (PC-FAX is MFC models only)	
DEVICE SETTINGS	
Remote Setup (MFC models only)	
Quick-Dial (MFC models only)	
Status Monitor	195

_11 **Network Scanning**

_

	Before using Network Scanning	
	Configuring network scanning	
	Using the Scan key	
	Scan to E-mail (PC)	
	Scan to E-mail (E-mail server, MFC-9840CDW only)	
	Scan to Image	
	Scan to OCR	
	Scan to File	
	Scan to FTP	
	Scan to FTP Manual Method	
12	Remote Setup	210
	Remote Setup (MFC models only)	210
Α	Index	212

Section I

Windows®

Printing	2
Scanning	38
ControlCenter3	69
Network Scanning	91
Remote Setup (MFC models only)	106
Brother PC-FAX Software (MFC models only)	108
Firewall settings (For Network users)	125

Note

- The screens in this section are from Windows[®] XP. Screens on your PC may vary depending on your operating system.
- If your PC is protected by a firewall, and is unable to print, you may need to configure the firewall settings to allow communication through port number 137. See *Firewall settings (For Network users)* on page 125.

Using the Brother printer driver

A printer driver is software that translates data from the format used by a PC into the format needed by a particular printer, using a printer command language or page description language.

The printer drivers are on the CD-ROM we have supplied. Install the drivers by following *the Quick Setup Guide*. The latest printer driver can also be downloaded from the Brother Solutions Center at:

http://solutions.brother.com

Windows[®] Printing

The dedicated printer driver for Microsoft[®] Windows[®] 2000 Professional/XP/Windows Vista[®] are available on the CD-ROM supplied with your Brother device. You can install them easily into your Windows[®] system using our installer program. The driver supports our unique compression mode to enhance printing speed in Windows[®] applications, and allows you to set various printer settings, including economy printing mode and custom paper size.

Printing a document

When the machine receives data from your computer, it begins printing by picking up paper from the paper tray. The paper tray can feed many types of paper and envelopes. (See the *User's Guide* for information about the Paper Tray and Recommended paper.)

1 From your application, choose the Print command.

If any other printer drivers are installed on your computer, choose **Brother MFC-XXXX** or **DCP-XXXX** Printer* as your printer driver from the Print or Print Settings menu in your software application, and then click OK to begin printing.

*(Where XXXX is your model name. If you are using a LAN cable to connect your machine then LAN will be in the printer driver name.)

For Macintosh[®] users, see *Features in the printer driver (For Macintosh*[®]) on page 138.

- 2 Your computer sends the data to the machine. The Data LED blinks in yellow and the machine starts to print.
- 3 When the machine finishes printing all the data, the LCD shows the machine status.

🖉 Note

You can choose the paper size and orientation in your application software.

If your application software does not support your custom paper size, choose the next larger paper size.

Then adjust the print area by changing the right and left margins in your application software.

Duplex printing

The supplied printer driver supports duplex printing.

Guidelines for printing on both sides of the paper

- If the paper is thin, it may wrinkle.
- If paper is curled, turn over the stack, straighten it and then put it back in the paper tray or the MP tray.
- If the paper is not feeding properly, it may be curled. Remove the paper, straighten it and turn over the stack.
- When you use the manual duplex function, it is possible that there may be paper jams or poor print quality.

If there is a paper jam, see *Paper jams in the User's Guide*. If you have a print quality problem, see *Improving the print quality in the User's Guide*.

Automatic duplex printing (Not available for MFC-9440CN and DCP-9040CN)

🖉 Note

- Use A4 size paper when you use the automatic duplex printing function.
- · Make sure that the back cover is closed.
- Make sure that the duplex tray is installed correctly in the machine.
- If paper is curled, straighten it and then put it back in the paper tray.
- Use regular paper. DO NOT use bond paper or thin paper.
- 1 Put paper in the paper tray or MP tray.

2 For the Windows printer driver

- 1 Open the **Properties** dialog box in the printer driver.
- 2 From the General tab, click the Printing Preferences button.
- **3** From the **Advanced** tab, click the Duplex icon.
- 4 Choose **Duplex** and make sure that **Use Duplex Unit** has been chosen.
- 5 Click **OK**. The printer will print on both sides of the paper automatically.

For the BR-Script printer driver

- 1 Open the **Properties** dialog box in the printer driver.
- 2 From the **General** tab, click the **Printing Preferences** button.
- 3 From the Layout tab, choose Orientation, Print on Both Sides (Duplex) and Page Order.
- 4 Click **OK**. The printer will print on both sides of the paper automatically.

Manual duplex printing

The machine prints all the even-numbered pages on one side of the paper first. Then, the Windows[®] driver instructs you (with a pop-up message) to reinsert the paper. Before reinserting the paper, straighten it well, or you may get a paper jam. Very thin or thick paper is not recommended.

Simultaneous scanning, printing and faxing

Your machine can print from your computer while sending or receiving a fax in memory, or while scanning a document into the computer. Fax sending will not be stopped during PC printing. However, when the machine is copying or receiving a fax on paper, it pauses the PC printing operation, and then continues printing when copying or fax receiving has finished.

Printer operation keys

Job Cancel

To cancel the current print job, press **Job Cancel**. If the Data LED turns Yellow, there is data in the printer's memory. You can clear the data that is left in the printer memory by pressing **Job Cancel**.



Secure Key

Secured data is password protected. Only those people who know the password will be able to print the secured data. The machine will not print secure data until the password is entered. After the document is printed, the data will be cleared from the memory. To use this function, you need to set your password in the printer driver dialog box. If you turn the power switch Off, the secured data saved in memory will be cleared.

1	1 Press Secure.		
	Secure		
	[®] Note		
	If the LCD displays No Data !, there is no secured data in the memory.		
2	Press ▲ or ▼ to choose the user name. Press OK . The LCD displays the secured jobs list for that name.		
3	Press ▲ or ▼ to choose the job. Press OK. Enter your four-digit password and press OK.		
4	 To print the data, press ▲ or ▼ to choose Print. Press OK. The machine prints the data. To delete the secured data, press ▲ or ▼ to choose Delete. Press OK. 		

Printer Emulation Support

Your machine will receive print commands in a printer job language or emulation. Different operating systems and applications will send the print commands in different languages. Your machine can receive print commands in a variety of emulations and has an automatic emulation selection feature. When the machine receives data from the computer, it automatically chooses the emulation mode. The default setting is Auto.

Your machine has the following emulation modes. You can change the setting by using the control panel or a web browser.

HP LaserJet Mode

The HP LaserJet mode (or HP mode) is the emulation mode in which this printer supports the PCL6 language of a Hewlett-Packard[®] LaserJet laser printer. Many applications support this type of laser printer. Using this mode will allow your printer to run at its best with those applications.

BR-Script 3 Mode

BR-Script is an original Brother page description language and a PostScript[®] language emulation interpreter. This printer supports level 3. The BR-Script interpreter of this printer allows you to control text and graphics on the page.

For technical information about PostScript[®] commands, see the following manuals:

- Adobe Systems Incorporated. PostScript[®] Language Reference, 3rd edition. Addison-Wesley Professional, 1999. ISBN: 0-201-37922-8
- Adobe Systems Incorporated. PostScript[®] Language Program Design. Addison-Wesley Professional, 1988. ISBN: 0-201-14396-8
- Adobe Systems Incorporated. PostScript[®] Language Tutorial and Cookbook. Addison-Wesley Professional, 1985. ISBN: 0-201-10179-3

Setting the Emulation mode

- For MFC models, press Menu, 4, 1. For DCP models, press Menu, 3, 1.
- 2 Press ▲ or V to choose Auto, HP LaserJet or BR-Script 3. Press OK.

3 Press Stop/Exit.

🖉 Note

We recommend that you set the emulation setting with your application software or network server. If the setting does not work properly, choose the required emulation mode manually using the control panel buttons of the machine.

Printing the Internal Font List

You can print a list of the machine's internal (or resident) fonts to see how each font looks before you choose it.

- 1 For MFC models, press Menu, 4, 2, 1. For DCP models, press Menu, 3, 2, 1.
- 2 Press **Mono Start** or **Colour Start**. The machine prints the list.
- 3 Press Stop/Exit.

Printing the Print Configuration List

You can print a list of current printer settings.

- 1 For MFC models, press Menu, 4, 2, 2. For DCP models, press Menu, 3, 2, 2.
- 2 Press **Mono Start** or **Colour Start**. The machine prints the settings.
- 3 Press Stop/Exit.

Test Print

If you are having problems with print quality, you can do a test print.

- For MFC models, press Menu, 4, 2, 3.
 For DCP models, press Menu, 3, 2, 3.
- 2 Press Mono Start or Colour Start.
- OPRESS Stop/Exit.

 
🖉 Note

If the problem appears on the printout, see *Improving the print quality in the User's Guide*.



Duplex (MFC-9840CDW and DCP-9045CDN only)

You can choose whether you want to automatically print on both sides of the paper. The setting in the printer driver will take priority over the setting made on the control panel.

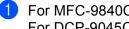

For MFC-9840CDW, press Menu, 4, 3. For DCP-9045CDN, press Menu, 3, 3.

2 Press ▲ or V to choose Off, On (Long Edge) or On (Short Edge).

- 3 Press OK.
- Press Stop/Exit.

Output Colour

If the driver does not have colour settings, you can choose the colour settings.

For MFC-9440CN and MFC-9450CDN, press Menu, 4, 3. For MFC-9840CDW, press Menu, 4, 4. For DCP-9040CN and DCP-9042CDN, press Menu, 3, 3. For DCP-9045CDN, press Menu, 3, 4.

- 2 Press ▲ or ▼ to choose Auto, Color or B&W.
- 🖉 Note

For more information about the colour settings, see Colour/Mono on page 18.



4 Press Stop/Exit.

Restoring default printer settings

You can return the machine's printer settings to the default settings. Fonts and macros loaded to the machine's memory will be cleared.

0	For MFC-9440CN and MFC-9450CDN, press Menu, 4, 4.
	For MFC-9840CDW, press Menu , 4 , 5 .
	For DCP-9040CN and DCP-9042CDN, press Menu, 3, 4.
	For DCP-9045CDN, press Menu, 3, 5.

- 2 To restore the default settings, press 1. To exit without making a change, press 2.
- 3 Press Stop/Exit.

Calibration

The output density for each colour may vary depending on the environment the machine is in such as temperature and humidity. Calibration helps you to improve the colour density.

 For MFC-9440CN and MFC-9450CDN, press Menu, 4, 5. For MFC-9840CDW, press Menu, 4, 6. For DCP-9040CN and DCP-9042CDN, press Menu, 3, 5. For DCP-9045CDN, press Menu, 3, 6.
2 Press ▲ or V to select Calibrate.
3 Press OK.
4 Press 1 to select Yes.
5 Press Stop/Exit.
You can reset the calibration parameters back to those set at the factory.
1 For MEC-9440CN and MEC-9450CDN, press Menu , 4 , 5 ,


U	For MFC-9440CN and MFC-9450CDN, press Menu, 4, 5. For MFC-9840CDW, press Menu, 4, 6. For DCP-9040CN and DCP-9042CDN, press Menu, 3, 5. For DCP-9045CDN, press Menu, 3, 6.
2	Press ▲ or ▼ to Reset.
3	Press OK .
4	Press 1 to select Yes.
5	Press Stop/Exit.
	Note
14	f an arrar managed is displayed proce Stan/Exit and the again

If an error message is displayed, press **Stop/Exit** and try again. For more information, see *Troubleshooting and routine maintenance in the User's Guide*.

Auto Registration

Registration

 If solid areas of colour or images have cyan, magenta or yellow fringes, you can use the auto-registration feature to correct the problem.

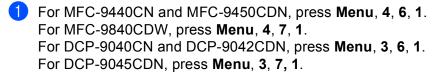

2 To start, press **1**. To exit, press **2**.

OPRESS Stop/Exit.

Frequency

You can set the machine to carry out auto registration regularly, and also how often it occurs.


- For MFC-9440CN and MFC-9450CDN, press Menu, 4, 6, 2.
 For MFC-9840CDW, press Menu, 4, 7, 2.
 For DCP-9040CN and DCP-9042CDN, press Menu, 3, 6, 2.
 For DCP-9045CDN, press Menu, 3, 7, 2.
- Press ▲ or ▼ to choose Low, Medium, High or Off. Press OK.
- 3 Press Stop/Exit.

Manual Registration

If colour still appears incorrectly after auto-registration, you will need to perform manual registration.

- For MFC-9440CN and MFC-9450CDN, press Menu, 4, 7, 1.
 For MFC-9840CDW, press Menu, 4, 8, 1.
 For DCP-9040CN and DCP-9042CDN, press Menu, 3, 7, 1.
 For DCP-9045CDN, press Menu, 3, 8, 1.
- 2 Press Mono Start or Colour Start to start printing the colour registration chart.
- 3 When the machine has finished printing the registration sheet, press 2 (Set Regist.) to correct the colour manually.
- 4 Starting at 1 (Magenta Left) on the chart, check which coloured bar has the most uniform print density and enter its number into the machine using the ▲ and ▼ keys. Press OK.

Repeat for 2 (Cyan Left), 3 (Yellow Left), 4, 5, 6 to 9.

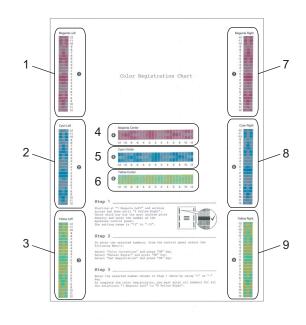



Status Monitor


The Status Monitor utility is a configurable software tool that allows you to monitor the status of one or more devices, allowing you to get immediate notification of errors such as paper empty or paper jam.

Turning on the status monitor

Click the Start/All Programs/Brother/MFC-XXXX (or DCP-XXXX)/Status Monitor on your computer. The Brother Status Monitor window will appear.



 Right-click on the Status Monitor window and choose Load Status Monitor on the Startup in the menu.

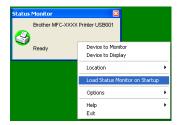


3 Right-click on the **Status Monitor** window and choose Location, and then choose the way to display the status monitor on your computer— in the **Tasktray**, in the **TaskTray** (**On Error**) or on the **desktop**.



Monitoring the machine's status

The Status Monitor icon will change colour depending on the machine status.

 A green icon indicates the normal stand-by condition.

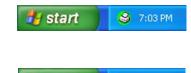

🛃 start

A yellow icon indicates a warning.

A red icon indicates a printing error has occurred.

🛃 start	😂 6:43 PM
---------	-----------

😂 7:01 PM

There are two locations where you can display the status monitor on your PC—in the tasktray or on the desktop.



- You can check the device status at anytime by double-clicking the icon in the tasktray or selecting the Status Monitor located in the Start/All Programs/Brother/MFC-XXXX (or DCP-XXXX) on your computer.
- For more information about using the **Status Monitor** software, right click the **Status Monitor** icon and choose **Help**.

Printer driver settings

Note

For Macintosh[®] users, see *Printing and Faxing* on page 130.

You can change the following printer settings when you print from your computer.

- Paper Size
- Multiple Page
- Orientation
- Copies
- Media Type
- Duplex / Booklet¹
- Colour / Mono
- Paper Source
- Print Quality
- Colour Mode
- Duplex printing (Manual Duplex printing² / Duplex printing with Duplex Unit¹)
- Watermark²
- Scaling²
- Secure Print²
- Toner Save Mode
- Quick Print Setup²
- Administrator²
- Print Setting²
- Header-Footer Print²
- Colour Calibration²
- ¹ This setting is not available for MFC-9440CN and DCP-9040CN.
- ² These settings are not available with the BR-script printer driver for Windows[®].

Features in the Windows[®] printer driver

For more information, see the **Help** text in the printer driver.

🖉 Note

- The screens in this section are from Windows[®] XP. The screens on your PC will vary depending on your operating system.
- You can access the **Printing Preferences** dialog box by clicking **Printing Preferences**... in the **General** tab of the **Printer Properties** dialog box.

Basic tab

You can also change settings by clicking the illustration on the left side of the **Basic** tab.

A4	Paper <u>S</u> ize	A4	
210 x 297 mm	Multiple Page	Normal	~
	<u>Page</u> Order	Right, then Down	~
	Border Line	×	
	Orientation		dscape
	<u>C</u> opies	1	llat <u>e</u>
	Media Type	Plain Paper	~
	Duplex/Booklet	None	
	Colou <u>r</u> /Mono	Muto	
	Paper Source		
	<u>F</u> irst Page	Auto Select	<u> </u>
	Other Pages	Same as First page	~


- 1 Choose the Paper Size, Multiple Page, Orientation, Copies and Media Type (1).
- 2 Choose the **Duplex/Booklet** setting (2)(Not available for MFC-9440CN and DCP-9040CN).
- 3 Choose the **Colour/Mono** setting (3).
- 4 Choose the **Paper Source** (4).
- 5 Click OK to apply your chosen settings. To return to the default settings, click Default, then OK.

 
Paper Size

From the drop-down box choose the Paper Size you are using.

Multiple Page

The Multiple Page selection can reduce the image size of a page allowing multiple pages to be printed on one sheet of paper or enlarge the image size for printing one page on multiple sheets of paper.

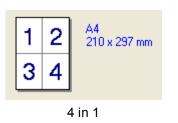

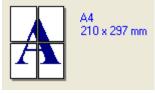



Page Order

When N in 1 option is selected, the page order can be selected from the drop-down list.

Border Line

When printing multiple pages on one sheet with the Multiple Page feature you can choose to have a solid border, dash border or no border around each page on the sheet.

Orientation

Orientation selects the position of how your document will be printed (Portrait or Landscape).




 
Copies

The copies selection sets the number of copies that will be printed.

Collate

With the Collate check box selected, one complete copy of your document will be printed and then repeated for the number of copies you selected. If the Collate check box is not selected, then each page will be printed for all the copies selected before the next page of the document is printed.

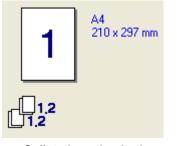

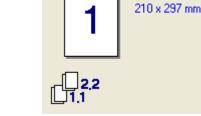

Collate box checked

Collate box not checked

Α4

Media Type

You can use the following types of media in your machine. For the best print quality, select the type of media that you wish to use.

Plain Paper	Thin Paper	Thick Paper	Thicker Paper	Bond Paper	Label
Post card	Envelopes	Env. Thick	Env. Thin	Recycled Paper	

🖉 Note

- When using ordinary plain paper choose Plain Paper. When using heavier weight paper, envelopes or rough paper choose Thick Paper or Thicker Paper. For bond paper, choose Bond Paper.
- When you use envelopes, choose Envelopes. If the toner is not fixed to the envelope correctly when Envelopes has been selected, choose Env. Thick. If the envelope is crumpled when Envelopes has been selected, choose Env.Thin.

Duplex / Booklet (Not available for MFC-9440CN and DCP-9040CN)

When you want to print a booklet or do duplex printing, use this function, and then from the **Advanced** tab, choose a **Duplex Type** (See *Duplex printing* on page 4).

Colour/Mono

You can change the Colour/Mono settings as follows:

Colour

If you want the printer to use Colour mode even when printing monochrome documents, select this mode.

Mono

Select this mode if your document has only black and greyscale text and/or objects. Mono mode makes the print processing speed faster than colour mode. If your document contains colour, selecting Mono mode prints your document in 256 levels of grey.

Auto

The printer checks the content of your documents for colour. If colour is detected, it prints in colour. If no colour content is detected, it prints in monochrome. This operation may reduce the total printing speed.

🖉 Note

If the Cyan, Magenta or Yellow toner runs out, choosing **Mono** will allow you to keep printing as long as the Black toner does not run out.

Paper Source

You can choose **Auto Select**, **Tray1**, **MP Tray** or **Manual** and specify separate trays for printing the first page and for printing from the second page onwards.

Advanced tab

1 2 3 Brothyr MFC-XXX X Printe Basic Advanced Support	4 5 er Printing Preferences ?	
Normal	Print Quality Ngrmal (600 x 600 dpi) Eine (2400 dpi class) Colour Mode Ngrmal Vivid Auto None Setting 	
	Import Export Improve Grey Colour Enhance Black Printing Default OK Cancel Apply Help	

Change the tab settings by clicking one of the appropriate icons:

- Print Quality (1)
- Duplex printing (2)
- Watermark (3)
- Page Setting (4)
- Device Options (5)

Print Quality

Print Quality

You can choose the following print quality settings.

Normal

600 dpi class. Recommended for ordinary printing. Good print quality with good print speeds.

• Fine

2400 dpi class. The finest print mode. Use this mode to print precise images such as photographs. Since the print data is much larger than in normal mode, processing time, data transfer time and printing time will be longer.

Colour Mode

The following options are available in Colour Mode:

Normal

This is the default colour mode.

• Vivid

The colour of all elements are adjusted to become a more vivid colour.

• Auto

The printer driver automatically selects the **Colour Mode** type.

• None

Turns off colour matching.

Improve Grey Colour

You can improve the image quality of shaded areas.

Enhance Black Printing

If a black graphic cannot be printed correctly, choose this setting.

Import

You can adjust the print configuration of a particular image by clicking **Setting**. After you have chosen and exported print configurations for a particular image you can import those setting for other images. Use the **Export** function to create a print configuration file from the current settings.

Export

You can adjust the print configuration of a particular image by clicking **Setting**. When you have finished adjusting the image parameters, such as brightness and contrast, you can export those settings as a print configuration file. Use the **Import** function to load a previously exported configuration file.

Setting

If you want to change the colour settings such as brightness, contrast, intensity or saturation, click the **Setting** button to access more advanced settings.

	Gustom Setting	
	Effect.	
	-20 0 +20 Brigh thess 0 4	— 1
	Contrast 0 (<u> </u>
		— 3
	CDefault>	<u> </u>
7 -	Browse	<u> </u>
8-	Print Saturation 0 4	— 6
Ũ		
	OK Cancel Default Help	

• Brightness (1)

Moving the scroll bar to the right makes your image lighter and moving the scroll bar left makes your image darker.

• Contrast (2)

Darker sections are darker while lighter sections will be lighter as you increase the contrast.

• Red (3)

Increase the intensity of **Red** in the image.

• Green (4)

Increase the intensity of Green in the image.

• Blue (5)

Increase the intensity of **Blue** in the image.

• Saturation (6)

Increase the saturation when you wish to print a more vivid image or decrease the saturation you want to print a less vivid image.


• Browse (7)

By clicking the **Browse** button, you can change the image shown in the preview window. The file must be a bitmap file.

• **Print** (8)

You can print the image shown in the preview by clicking the **Print** button.

Duplex Printing

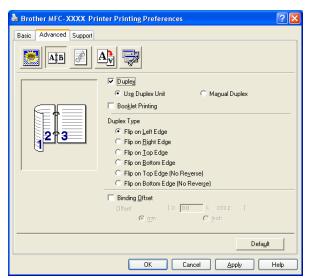

Check **Duplex** if you want to use the Duplex (two-sided) printing feature.

■ Use Duplex Unit (Not available for MFC-9440CN and DCP-9040CN)

Check the **Duplex** box and then choose **Use Duplex Unit**.

In this mode, the machine prints on both sides of the paper automatically. There are six types of automatic duplex binding directions available for each orientation.

Manual Duplex

Check **Manual Duplex**. In this mode, the machine prints all the even numbered pages first. Then the printer driver stops and shows the instructions required to re-install the paper. When you click **OK** the odd numbered pages are printed. There are six types of manual duplex binding directions available for each orientation.


Booklet Printing

When you want to print a booklet, use this function. To make the booklet, fold the printed pages down the middle.

Binding Offset

If you check the Binding Offset option, you can also specify the offset for binding in inches or millimeters.

Watermark

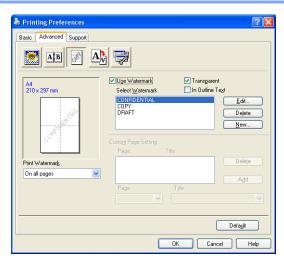

You can put a logo or text into your document as a watermark. You can choose one of the preset Watermarks, or you can use a bitmap file that you have created. Check **Use Watermark**, and then choose the watermark you want to use.

Transparent

Check **Transparent** to print the watermarked image in the background of your document. If this feature is not checked then the watermark will be printed on top of your document.

In Outline Text


Check In Outline Text if you only want to print an outline of the watermark.

Print Watermark

You can print the watermark in any of the following ways.

- On all pages
- On first page only
- From second page
- Custom

Watermark Setting

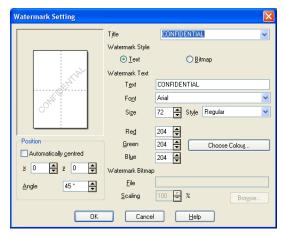

You can change the watermark's size and position on the page by selecting the watermark, and clicking the **Edit** button. If you want to add a new watermark, click the **New** button, and then choose **Text** or **Bitmap** in the **Watermark Style**.

Title

You can choose **CONFIDENTIAL**, **COPY** or **DRAFT** as the standard title or enter a title you like in the field.

Watermark Text

Enter your Watermark Text into the Text box, and then choose the Font, Size, Style and colours.


Watermark Bitmap

Enter the file name and location of your bitmap image in the **File** box, or **Browse** for the file location. You can also set the scaling size of the image.

Position

Use this setting if you want to control the position of the watermark on the page.

Page Setting

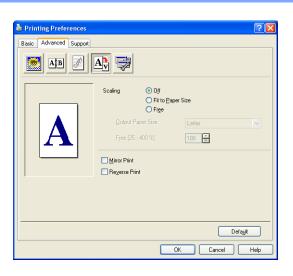

Scaling

You can change the print size of your document with the **Scaling** feature.

- Check **Off** if you want to print the document as it appears on your screen.
- Check Fit to Paper Size if your document has an unusual size, or if you have only the standard size paper.
- Check **Free** if you want to change the size.

You can also use the Mirror Print or Reverse Print feature for your page setting.

Device Options

🌢 Brother MFC-XXXX Printing Pref	ierences 💽 🔀
Basic Advanced Support	
Printer Function Secure Print Toner Save Mode Quick Print Setup Administrator Print Setting Header-Footer Print Colour Calibration	Secure Print □ Secure Print Passgord User Name Job Name ↓ Use System Default Name
	OK Cancel Apply Help

You can change the following printer functions:

- Secure Print
- Toner Save Mode
- Quick Print Setup
- Administrator
- Print Setting
- Header-Footer Print
- Colour Calibration

Secure Print

 
Secure Print:

Secure documents are documents that are password protected when they are sent to the machine. Only the people who know the password will be able to print them. Since the documents are secured at the machine, you must enter the password using the control panel of the machine to print them.

To send a secured document:



Select Secure Print from Printer Function and check Secure Print.

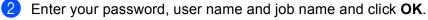



3 You must print the secured documents from the control panel of the machine. (See Secure Key on page 6.)

To delete a secured document:

You need to use the control panel of the machine to delete a secured document. (See Secure Key on page 6.)

Toner Save Mode

You can conserve toner using this feature. When you set Toner Save Mode to On, print appears lighter. The default setting is Off.

🖉 Note

We do not recommend Toner Save Mode for printing photo or greyscale images.

Quick Print Setup

The feature allows you to quickly choose driver settings by clicking a tasktray icon.

You can turn the quick print setting on or off. By placing a check in the selection boxes for the following functions you can choose which will be available in the quick print setting.

- Multiple Page
- Manual Duplex (MFC-9440CN and DCP-9040CN)
- Duplex (Not available for MFC-9440CN and DCP-9040CN)
- · Toner Save Mode
- Paper Source
- Media Type
- Colour/Mono

Print Setting

• Improve pattern printing

Select the **Improve Pattern Printing** option if printed fills and patterns appear different to how they appear on your computer screen.

· Improve Thin Line

Improve the appearance of thin lines in graphical documents.

Header-Footer Print

When this feature is enabled, it will print the date and time on your document from your computer's system clock and the PC login user name or the text you entered. By clicking Setting, you can customize the information.

ID Print

If you select Login User Name, your PC login user name will print. If you select Custom and enter the text in the Custom edit box, the text you entered will print.

Colour Calibration

The output density of each colour may vary depending on the temperature and humidity of the environment the machine is in. This setting helps you to improve colour density by letting the printer driver use the colour calibration data stored in your machine.

Get device data

If you click this button, the printer driver will attempt to get the colour calibration data from your machine.

· Use calibration data

If the driver successfully gets the calibration data, the driver will automatically check this box. Remove the check mark if you do not want to use the data.

Administrator

Administrators have the authority to limit access to functions such as scaling and watermark.

Password

Enter the password into this box.

Set Password

Click here to change the password.

Copies Lock

Lock the copy pages selection to prevent multiple copy printing.

Multiple Page & Scaling Lock

Lock the scaling setting and multiple page setting.


Colour/Mono Lock

Lock the Colour/Mono settings as Mono to prevent colour printing.

Watermark Lock

Lock the current settings of the Watermark option to prevent changes being made.

Support tab

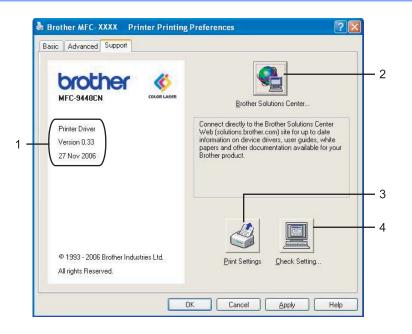

■ Version (1)

Displays the printer driver version.

Brother Solutions Center (2)

The Brother Solutions Center (<u>http://solutions.brother.com</u>) is a web site offering information about your Brother product including FAQs (Frequently Asked Questions), user's guides, driver updates and tips for using your printer.

Print Settings (3)


You can print a list of current printer settings.

■ Check Setting... (4)

You can check the current driver settings.

Accessories tab

To access the **Accessories** tab, click the **Start** button and **Printers and Faxes**. Right-Click your printer icon and click **Properties**.

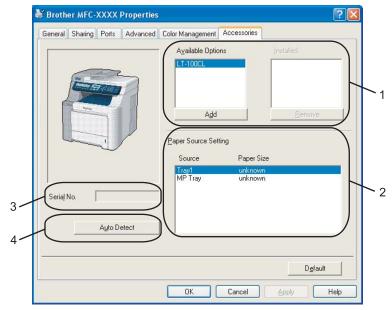

■ Available Options (1) (Not available for DCP-9040CN and DCP-9042CDN)

You can manually add and remove the options that are installed on the printer. Tray settings will match the installed options.

Paper Source Setting (2)

This feature recognizes the paper size set from the control panel for each paper tray.

Serial No. (3)

By clicking **Auto Detect**, the printer driver will detect the serial number of the printer and display it. If it fails to receive the information, the screen will display "------".

Auto Detect (4)

The **Auto Detect** function finds the currently installed optional unit devices and serial No. and then shows the available settings in the printer driver. You can manually add or remove options.

🖉 Note

The Auto Detect function is not available under following conditions.

- The printer power switch is off.
- The printer is in an error state.
- The printer is in a network shared environment.
- The cable is not connected to the printer correctly.

Features in the BR-Script (PostScript[®] 3[™] language emulation) printer driver


For more information, see the Help text in the printer driver.

Note 🖉

The screens in this section are from Windows[®] XP. The screens on your PC may vary depending on your operating system.

Device Settings tab

Choose the options you have installed.

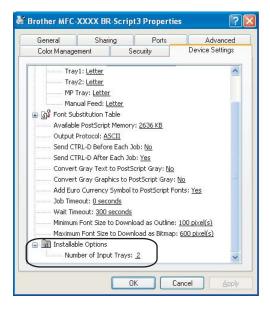

Printing Preferences

Note

You can access the **Printing Preferences** dialog box by clicking **Printing Preferences...** in the **General** tab of the **Brother MFC-XXXX BR-Script3 Properties** (or **Brother DCP-XXXX BR-Script3 Properties**) dialog box.

Layout tab

You can change the layout setting by choosing the settings for

Orientation, **Print on Both Sides** (Duplex)(Not available for MFC-9440CN and DCP-9040CN), **Page Order** and **Page Per Sheet**.

🌢 Brother XXXX Script3 Pri	nting Preferences	? 🗙
Layout Paper/Quality Orientation Potrat Landscape Rotatgd Landscape Print on Both Sides Flip on Shott Edge Flip on Long Edge None Page Order Fright to Back Back to Front Pages Per Sheet: 1		ced
	OK Cancel	Apply

Orientation

Orientation selects the position of how your document will be printed. (**Portrait**, **Landscape** or **Rotated Landscape**)

• Print on Both Sides (Not available for MFC-9440CN and DCP-9040CN)

If you want to do duplex printing, choose Flip on Short or Flip on Long Edge.

Page Order

Specifies the order in which the pages of your document will be printed. **Front to Back** prints the document so that page 1 is on top of the stack. **Back to Front** prints the document so that page 1 is on the bottom of the stack.

Printing

Paper/Quality tab

Choose the Paper Source and Colour.

Brother MFC-XXXX BR-Script3 Printing Preferences	? 🗙
Layout Paper/Quality	
Tray Selection	
Paper <u>S</u> ource: Automatically Select	~
Color-	
📑 🔿 Black & White 📑 💿 Color	
C C	Ad <u>v</u> anced
OK Cancel	Apply

Paper Source


You can choose Auto Select, Tray1, MP tray or Manual Feed.

• Colour

Choose how to print colour graphics either **Black and White** or **Colour**.

Advanced options

You can access the **Advanced options** by clicking the **Advanced...** button on the **Layout** tab or **Paper/Quality** tab.

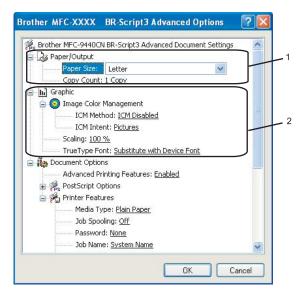

Choose the **Paper Size** and **Copy Count** (1).

Paper Size

From the drop-down box choose the Paper Size you are using.

Copy Count

The copy selection sets the number of copies that will be printed.

2) Set the Image Colour Management, Scaling and TrueType Font settings (2).

Image Colour Management

Specifies how to print your colour graphics.


- If you don't want to enable Image Colour Management, click ICM Disabled.
- If you want the calculations for colour matching to be performed on the host computer before it sends the document to the printer, click **ICM Handled by Host System**.
- If you want the calculations for colour matching to be performed on your printer, click **ICM Handled by Printer using printer calibration**.
- Scaling

Specifies whether to reduce or enlarge documents, and by what percentage.

TrueType Font

Specifies the TrueType font options. Click **Substitute with Device Font** (the default) to use equivalent printer fonts for printing documents that contain TrueType fonts. This will permit faster printing; however, you might lose special characters not supported by the printer font. Click **Download as Softfont** to download TrueType fonts for printing instead of using printer fonts.

3 You can change settings by choosing the setting in the **Printer Features** list (3):

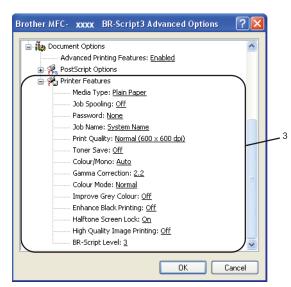

Media Type

You can use the following types of media in your machine. For the best print quality, select the type of media that you wish to use.

Plain Paper	Thin Paper	Thick Paper	Thicker Paper	Bond Paper	Label
Post card	Envelopes	Env. Thick	Env. Thin	Recycled Paper	

Job Spooling

Secure Print allows you to secure documents that are password protected when they are sent to the machine. Only the people who know the password will be able to print them. Since the documents are secured at the machine, you must enter the password using the control panel of the machine. The secured document must have a **Password** and **Job Name**.

Password

Choose the password for your secured document that you send to the machine from the drop-down box.

Job Name

Choose the Job name from the drop-down list for your secured document that you sent to the machine.

Print Quality

You can choose the following print quality settings.

Normal

600 dpi class. Recommended for ordinary printing. Good print quality with good print speeds.

• Fine

2400 dpi class. The finest print mode. Use this mode to print precise images such as photographs. Since the print data is much larger than in normal mode, processing time, data transfer time and printing time will be longer.

Toner Save Mode

You can conserve toner using this feature. When you set **Toner Save Mode** to **On**, print appears lighter. The default setting is **Off**.

Note 🖉

We do not recommend Toner Save Mode to On for printing Photo or greyscale images.

Colour/Mono

You can change the Colour/Mono settings as follows:

Colour

If you want the printer to use Colour mode even when printing monochrome documents, select this mode.

• Mono

Select this mode if your document has only black and greyscale text and/or objects. Mono mode makes the print processing speed faster than colour mode. If your document contains colour, selecting Mono mode prints your document in 256 levels of grey.

• Auto

The printer checks the content of your documents for colour. If colour is detected, it prints in colour. If no colour content is detected, it prints in monochrome. This operation may reduce the total printing speed.

🖉 Note

If the Cyan, Magenta or Yellow toner runs out, choosing **Mono** will allow you to keep printing as long as the Black toner does not run out.

Gamma Correction

You can adjust the brightness of documents compared to the image on the screen.

Colour Mode

The following options are available in Colour Mode:

Normal

This is the default colour mode.

• Vivid

The colour of all elements are adjusted to become a more vivid colour.

Improve Grey Colour

You can improve the image quality of the shaded area.

Enhance Black Printing

If a black graphic cannot print correctly, choose this setting.

Halftone Screen Lock

Stops other applications from modifying the Halftone settings. The default setting is on.

Printing

High Quality Image Printing

You can get high quality image printing. If you set **High Quality Image Printing** to On, the printing speed will be slower.

BR-Script Level

You can change the BR-script emulation language level. Choose the level from the drop-down list.

Ports tab

If you want to change the port where your printer is connected or the path to the network printer you are using, choose or add the port you want to use.

Brother MFC- XXXX BR-Script3 Properties	? 🗙
Color Management Device Settings General Sharing Ports Advan Brother MFC-XXXX BR-Script3 Print to the following port(s). Documents will print to the first free	ced
Checked port. Printer COM1: Serial Port COM2: Serial Port COM3: Serial Port COM4: Serial Port COM4: Serial Port FILE: Print to File USB Virtual printer port fo	
Add Port Delete Port Configure Port	
OK Cancel	Apply

Scanning

The scanning operations and drivers will be different depending on your operating system. The machine uses a TWAIN compliant driver for scanning documents from your applications.

■ For Windows[®] XP/ Windows Vista[®]

Two scanner drivers are installed. A TWAIN compliant scanner driver (See Scanning a document using the TWAIN driver on page 38) and a Windows[®] Imaging Acquisition (WIA) driver (See Scanning a document using the WIA driver (For Windows[®] XP/ Windows Vista[®]) on page 46).

🖉 Note

- For ScanSoft[™] PaperPort[™] 11SE, see Using ScanSoft[™] PaperPort[™] 11SE with OCR by NUANCE[™] on page 65.
- If your PC is protected by a firewall, and is unable to network scan, you may need to configure the firewall settings to allow communication through port number 54925 and 137. See *Firewall settings (For Network users)* on page 125.

Scanning a document using the TWAIN driver

TWAIN compliant

The Brother MFL-Pro Suite software includes a TWAIN compliant scanner driver. TWAIN drivers meet the standard universal protocol for communicating between scanners and applications. This means that you can not only scan images directly into the PaperPort[™] 11SE viewer that Brother included with your machine, but you can also scan images directly into hundreds of other software applications that support TWAIN scanning. These applications include popular programs like Adobe[®] Photoshop[®], Adobe[®] PageMaker[®], CorelDraw[®] and many more.

Accessing the Scanner

Start the ScanSoft™ PaperPort™ 11SE software that was installed during the MFL-Pro Suite installation to scan a document.

🖉 Note

The instructions for scanning in this Guide are for when you use ScanSoft[™] PaperPort[™] 11SE. The scanning steps may vary when using other software applications.

2 Click File, then Scan or Get Photo. You can also click the Scan or Get Photo button. The Scan or Get Photo panel appears on the left side of the screen.

Click Select button.

4 Choose the scanner you are using from the **Available Scanners** list.

🖉 Note
 For Windows[®] XP/Windows Vista[®]:
Choose TW-Brother MFC-XXXX (TW-Brother DCP-XXXX) or TW-Brother MFC-XXXX LAN (TW-Brother DCP-XXXX LAN).
For other operating systems:
Choose Brother MFC-XXXX (Brother DCP-XXXX) or Brother MFC-XXXX LAN (Brother DCP-XXXX LAN). (Where XXXX is your model name)

5 Check **Display scanner dialog box** on the **Scan or Get Photo** panel.

6 Click Scan.

The Scanner Setup dialog box appears:

TW-Brother MFC- XXXX Scan	ner Setup - 3.5 -	
Scan:		PreScan Width: 210.0 mm 2480 pixels Height: 291.0 mm 3437 pixels Data Size: 24.3 MB
Contrast		<u>S</u> tart
<u>⊙ m</u> m <u>O</u> jnch		Default Cancel


Go to Scanning a document into the PC on page 40.

Scanning a document into the PC

You can scan a whole page, or scan a portion of the page after pre-scanning the document.

Scanning a whole page

- 1 Put the document face up in the ADF, or face down on the scanner glass.
- 2 Adjust the following settings, if needed, in the Scanner Setup dialog box:
 - Scan (Image Type) (1)
 - Resolution (2)
 - Scan Type (3)
 - Brightness (4)
 - Contrast (5)
 - Document Size (6)

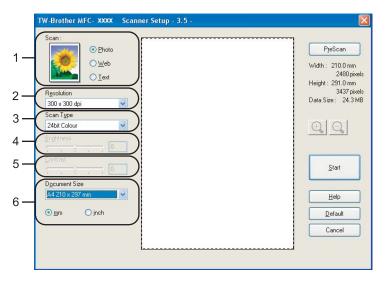

Click Start.


When scanning is finished, click **Cancel** to return to the PaperPort[™] 11SE window.

🖉 Note

After you select a document size, you can adjust the scanning area further by clicking the left mouse button and dragging it. This is required when you want to crop an image when scanning. (See *Pre-Scanning to crop a portion you want to scan* on page 42.)

Scanning a duplex document (MFC-9840CDW and DCP-9045CDN only)

- 1 Put the document face up in the ADF.
- 2 Check **Duplex (Two-sided) Scanning** and choose **Long-edge binding** or **Short-edge binding** (1).

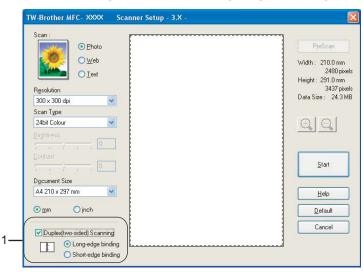

3 Adjust the following settings, if needed, in the Scanner Setup dialog box:

- Scan (Image Type)
- Resolution
- Scan Type
- Brightness
- Contrast
- Document Size

4 Click Start.


🖉 Note

The **PreScan** button, legal size paper and scanning area adjustment are not available when duplex scanning.

Pre-Scanning to crop a portion you want to scan

You can preview your image and crop unwanted portions before scanning by using the **PreScan** button. When you are satisfied with the preview, click the **Start** button in the Scanner Setup dialog box to scan the image.

Put the document face up in the ADF, or face down on the scanner glass.

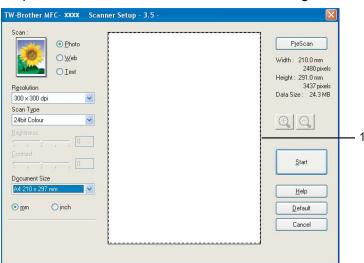

1 Scanning area

Choose the settings for Scan (Image Type), Resolution, Scan Type, Brightness, Contrast and Document Size, as needed.

Click PreScan.

The whole image is scanned into the PC and appears in the Scanning Area of the Scanner Setup dialog box.

4 Press and hold down the left mouse button and drag it over the portion you want to scan.



1 Scanning area

🖉 Note

You can enlarge the image using the icon, and then use the \bigcirc icon to restore the image to its original size.

5 Load your document again.

🖉 Note

Skip this step if you loaded the document on the scanner glass in ().

6 Click Start.

This time only the chosen area of the document appears in the PaperPort[™] 11SE window (or your application window).

7 In the PaperPort™ 11SE window, use the options available to refine the image.

Settings in the Scanner Setup dialog box

Image Type

Choose the output image type from **Photo**, **Web** or **Text**. **Resolution** and **Scan Type** will be altered for each default setting.

The default settings are listed in the table below:

Image Type		Resolution	Scan Type
Photo	Use for scanning photo images.	300 × 300 dpi	24-bit colour
Web	Use for attaching the scanned image to web pages.	100 × 100 dpi	24-bit colour
Text	Use for scanning text documents.	200 × 200 dpi	Black & White

Resolution

You can choose a scanning resolution from the **Resolution** drop-down list. Higher resolutions take more memory and transfer time, but produce a finer scanned image. The following table shows the resolutions you can choose and the available colours.

Resolution	Black & White/ Grey (Error Diffusion)	256 colour	True Grey/24 bit colour
100 × 100 dpi	Yes	Yes	Yes
150 × 150 dpi	Yes	Yes	Yes
200 × 200 dpi	Yes	Yes	Yes
300 × 300 dpi	Yes	Yes	Yes
400 × 400 dpi	Yes	Yes	Yes
600 × 600 dpi	Yes	Yes	Yes
1200 × 1200 dpi	Yes	No	Yes
2400 × 2400 dpi	Yes	No	Yes
4800 × 4800 dpi	Yes	No	Yes
9600 × 9600 dpi	Yes	No	Yes
19200 × 19200 dpi	Yes	No	Yes

2

Scan Type

Black & White

Use for text or line art.

Grey (Error Diffusion)

Use for photographic images or graphics. (Error Diffusion is a method for creating simulated grey images without using true grey dots. Black dots are put in a specific pattern to give the appearance of grey.)

■ True Grey

Use for photographic images or graphics. This mode is more exact because it uses up to 256 shades of grey.

256 Colour

Uses up to 256 colours to scan the image.

24 bit Colour

Uses up to 16.8 million colours to scan the image.

Although using **24 bit Colour** creates an image with the most accurate colour, the image file will be about three times larger than a file created with **256 Colour**. It requires the most memory and has the longest transfer time.

Brightness

Adjust the setting (-50 to 50) to get the best image. The default value is 0, representing an average.

You can set the **Brightness** level by dragging the slide bar to the right or left to lighten or darken the image. You can also enter a value in the box to set the level.

If the scanned image is too light, set a lower **Brightness** level and scan the document again. If the image is too dark, set a higher **Brightness** level and scan the document again.

🖉 Note

The Brightness setting is only available when **Black & White**, **Grey (Error Diffusion)** or **True Grey** is chosen.

Contrast

You can increase or decrease the **Contrast** level by moving the slide bar to the left or right. An increase emphasizes dark and light areas of the image, while a decrease reveals more detail in grey areas. You can also enter a value in the box to set the **Contrast**.

🖉 Note

The Contrast setting is only available when Grey (Error Diffusion) or True Grey is chosen.

When scanning photographs or other images for use in a word processor or other graphics application, try different settings for the contrast and resolution to see which setting best suits your needs.

Document Size

Choose one of the following sizes:

■ A4 210 × 297 mm

2

- JIS B5 182 × 257 mm
- Letter 8 1/2 × 11 in
- Legal 8 1/2 × 14 in
- A5 148 × 210 mm
- Executive 7 1/4 × 10 1/2 in
- Business Card

To scan business cards, choose the **Business Card** size, and then place the business card face down in the centre of the left hand side of the scanner glass, as indicated by the document guidelines.

- Photo 4 × 6 in
- Index Card 5 × 8 in
- Photo L 89 × 127 mm
- Photo 2L 127 × 178 mm
- Postcard 1 100 × 148 mm
- Postcard 2 148 × 200 mm
- Custom (User adjustable from 0.35 × 0.35 in to 8.5 × 14 in or 8.9 × 8.9 mm to 215.9 × 355.6 mm) If you choose **Custom** as the size, the **Custom Document Size** dialog box appears.

Custom Document Size	X
Custom Document Size <u>N</u> ame	
	×
<u>W</u> idth [8.9 - 215.9]	215.9
<u>H</u> eight [8.9 - 355.6]	279.4
Unit 💽 <u>m</u> m	O inch
<u>S</u> ave	Delete
<u> </u>	<u>H</u> elp

Enter the Name, Width and Height for the document.

You can choose 'mm' or 'inch' as the unit for Width and Height.

	Note
--	------

You can see the actual paper size you chose on the screen.

P <u>r</u> eScan	
Width: 210.0 mm	
2480 pixels Height : 291.0 mm	
3437 pixels Data Size : 24.3 MB	

- Width: shows the width of scanning area
- Height: shows the height of scanning area
- **Data Size**: shows the rough data size in Bitmap format. The size will be different for other file formats such as JPEG.

Scanning a document using the WIA driver (For Windows[®] XP/ Windows Vista[®])

WIA compliant

For Windows[®] XP /Windows Vista[®] you can choose Windows[®] Image Acquisition (WIA) for scanning images from the machine. You can scan images directly into the PaperPort[™] 11SE viewer that Brother included with your machine or you can scan images directly into any other application that supports WIA or TWAIN scanning.

Accessing the Scanner

 Start the ScanSoft™ PaperPort™ 11SE software that was installed during the MFL-Pro Suite installation to scan a document.

🖉 Note

The instructions for scanning in this Guide are for when you use ScanSoft[™] PaperPort[™] 11SE. The scanning steps may vary when using other software applications.

- Click File, then Scan or Get Photo. You can also click the Scan or Get Photo button. The Scan or Get Photo panel appears on the left side of the screen.
- 3 Click Select button.
- Choose the scanner you are using from the Available Scanners list.

Mote

• For Windows[®] XP/Windows Vista[®]:

Choose WIA-Brother MFC-XXXX (WIA-Brother DCP-XXXX) or WIA-Brother MFC-XXXX LAN (WIA-Brother DCP-XXXX LAN).

· For other operating systems:

Choose Brother MFC-XXXX (Brother DCP-XXXX) or Brother MFC-XXXX LAN (Brother DCP-XXXX LAN). (Where XXXX is your model name)

5 Check **Display scanner dialog box** on the **Scan or Get Photo** panel.

6 Click Scan.

The Scanner Setup dialog box appears:



Go to Scanning a document into the PC on page 48.


Scanning a document into the PC

There are two ways in which you can scan a whole page. You can either use the ADF (automatic document feeder) or the scanner glass.

If you want to scan and then crop a portion of a page after pre-scanning the document, you need to use the scanner glass. (See *Pre-Scanning to crop a portion you want to scan* on page 42.)

Scanning a document using the ADF

Put the document face up in the ADF.

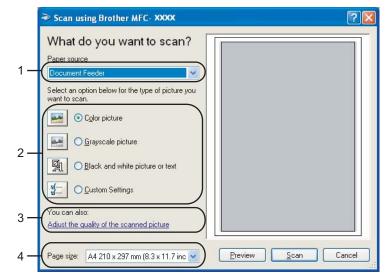

- 1 Paper source
- 2 Picture type
- 3 Adjust the quality of the scanned picture
- 4 Paper size
- 2 Choose **Document Feeder** from the **Paper source** drop-down list (1).
- Choose the picture type (2).
- 4 Choose the **Paper size** from the drop-down list (4).

2

5 If you need advanced settings, click Adjust the quality of the scanned picture (3). You can choose Brightness, Contrast, Resolution and Picture type from Advanced Properties. Click OK after you choose a setting.



Note

The scanner resolution can be set as high as 1200 dpi.


For resolutions greater than 1200 dpi, use the Brother Scanner Utility. (See *Brother Scanner Utility* on page 51.)

6 Click the **Scan** button in the Scan dialog box. The machine starts scanning the document.

Pre-Scanning to crop a portion you want to scan using the scanner glass

The **Preview** button is used to preview an image for cropping any unwanted portions from the image. When you are satisfied with the preview, click the **Scan** button in the Scan dialog box to scan the image.

- Put the document face down on the scanner glass.
- Choose Flatbed in the Paper source drop-down list (1).

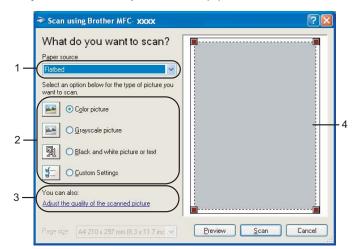

- 1 Paper source
- 2 Picture type
- 3 Adjust the quality of the scanned picture
- 4 Scanning area
- Choose the picture type (2).


4 Click Preview.

The whole image is scanned into the PC and appears in the scanning area (4).

5 Press and hold down the left mouse button and drag it over the portion you want to scan.



6 If you need advanced settings, click Adjust the quality of the scanned picture (3). You can choose Brightness, Contrast, Resolution and Picture type from Advanced Properties. Click OK after you choose a setting.

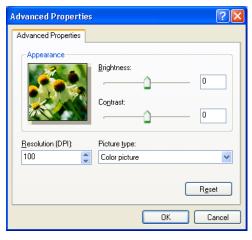

7 Click the Scan button in the Scan dialog box. The machine starts scanning the document.

The machine starts scanning the document.

This time only the chosen area of the document appears in the PaperPort[™] 11SE window (or your application window).

Brother Scanner Utility

The Brother Scanner Utility is used for configuring the WIA scanner driver for resolutions greater than 1200 dpi and for changing the paper size. If you want to set Legal size as the default size, use this utility to change the setting. You must restart your PC for the new settings to take effect.

Running the utility

You can run the utility by choosing Scanner Utility located in the Start/All Programs/Brother/MFC-XXXX (or DCP-XXXX) (where XXXX is your model name)/ Scanner Settings/Scanner Utility.

🕏 Scanner Utility	
WIA Device	Brother MFC-XXXX
Max Resolution(dpi)	
C 600x600	• 1200x1200 C 2400x2400
C 4800x4800	© 9600x9600 € 19200x19200
Maximum Scanning Size	n Charl
A4/Lett	er 🔿 Legal
	OK Cancel

🖉 Note

If you scan the document at a resolution of greater than 1200 dpi, the file size may be very large. Make sure that you have enough memory and hard disk space for the size of the file you are trying to scan. If you do not have enough memory or hard disk space then your PC may freeze and you could lose your file.

🖉 Note

For Windows Vista[®] the **User Account Control** screen appears, do the following.

- For users who have administrator rights: Click Allow.
 - User Account Control
- For users who do not have administrator rights: Enter the administrator password and click OK.

User Account Control	X
An unidentified program wants access to your comp	outer
Don't run the program unless you know where it's from or you've used it before.	
BrScUtil.exe Unidentified Publisher	
To continue, type an administrator password, and then click OK.	
User	
⊙ <u>D</u> etails OK Canc	el
User Account Control helps stop unauthorized changes to your computer.	

Scanning a document using the WIA driver (For Windows Photo Gallery and Windows Fax and Scan users)

Accessing the scanner

🖉 Note Duplex scan is supported by the MFC-9840CDW and DCP-9045CDN only. 2 Do one of the following: For Windows Photo Gallery Click File, then Import from Camera or Scanner. For Windows Fax and Scan Click File, New, then Scan. Choose the scanner you want to use. 4 Click Import. The Scan dialog box appears: New Scan Scanner: Brother MFC- XXXX Change... Profile: Photo (Default) -Source: Flatbed -

Open your software application to scan the document.

Scaner: Brother MFC-XXXX

Chagge

Profile
Photo (Default)

Source
Flatbed

Paggr size

Cglour format:
Colour

Gle type
PEGIanage

Beightness:
0
Contrast:
0
Contra

Go to Scanning a document into the PC on page 54.


Scanning a document into the PC

There are two ways in which you can scan a whole page. You can either use the ADF (automatic document feeder) or the scanner glass.

If you want to scan and then crop a portion of a page after pre-scanning the document, you need to use the scanner glass. (See *Pre-Scanning to crop a portion you want to scan using the scanner glass* on page 55.)

Scanning a document using the ADF

- 1 Put the document face up in the ADF.
- 2 Choose Feeder (Scan one side) or Feeder (Scan both sides) (MFC-9840CDW and DCP-9045CDN only) in the Source drop-down list (2).
- 3 Adjust the following settings, if needed, in the Scanner dialog box.

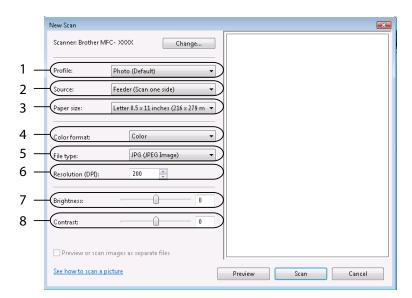

- 1 Profile
- 2 Source
- 3 Paper size
- 4 Colour format
- 5 File type
- 6 Resolution
- 7 Brightness
- 8 Contrast

🖉 Note

The scanner resolution can be set as high as 1200 dpi.

For resolutions greater than 1200 dpi, use the Brother Scanner Utility.

Scanning

4 Click the **Scan** button in the Scan dialog box. The machine starts scanning the document.


Pre-Scanning to crop a portion you want to scan using the scanner glass

The **Preview** button is used to preview an image for cropping any unwanted portions from the image. When you are satisfied with the preview, click the **Scan** button in the Scan dialog box to scan the image.



Put the document face down on the scanner glass.

 Choose Flatbed in the Source drop-down list. Adjust the following settings, if needed, in the Scanner dialog box.

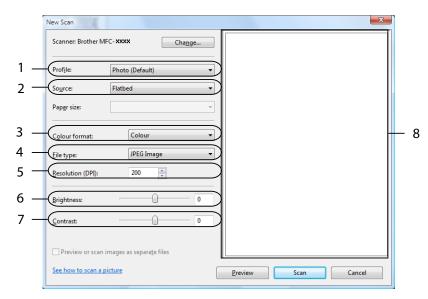

- 1 Profile
- 2 Source
- 3 Colour format
- 4 File type
- 5 Resolution
- 6 Brightness
- 7 Contrast
- 8 Scanning area

Click Preview.

The whole image is scanned into the PC and appears in the scanning area (8).

2

4 Press and hold down the left mouse button and drag it over the portion you want to scan.



Click the Scan button in the Scan dialog box.
 The machine starts scanning the document.
 This time only the chosen area of the document appears in your application window.

Using the Scan key (For USB users)

🖉 Note

If you use the Scan key when connected on a network, see Network Scanning on page 91.


You can use (Scan) on the control panel to scan documents into your word processing, graphics or E-mail applications or a folder on your PC.



Before you can use (Scan) on the control panel, you have to install the Brother MFL-Pro suite and connect the machine to your PC. If you installed the MFL-Pro Suite from the included CD-ROM then the correct drivers and ControlCenter3 are installed. Scanning by (Scan) follows the configuration on Device Button tab of ControlCenter3. (See SCAN on page 72.) For details about how to configure the scan settings of the ControlCenter3 buttons and to launch the application of your choice using (Scan), see Using ControlCenter3 on page 69.

🖉 Note

- If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L)edge or 2sided (S)edge depending on your document layout.
- Choose your document layout from following table:

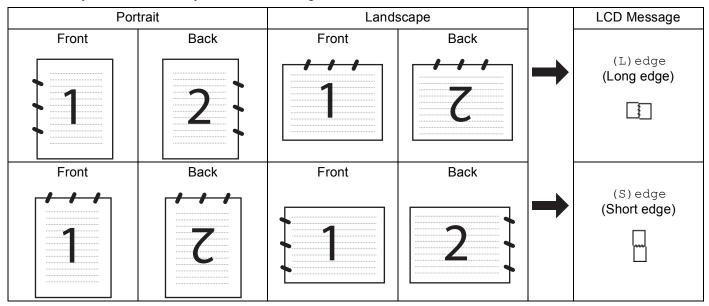

Document Layout Table

- Duplex scan is supported by the MFC-9840CDW and DCP-9045CDN only.
- Duplex scan is available from the ADF only.
- Duplex scan is not available for legal size paper.

Scanning

Scan to USB (Not available for DCP-9040CN and DCP-9042CDN)

You can scan black and white and colour documents directly to a USB Flash Memory Drive. Black and white documents will be stored in the PDF (*.PDF) or TIFF file formats (*.TIF). Colour documents may be stored in PDF (*.PDF) or JPEG (*.JPG) file formats. The default File names are based on the current date. You can change the colour, quality and file name.

Resolution	File Format Options
Color 150 dpi	JPEG / PDF
Color 300 dpi	JPEG / PDF
Color 600 dpi	JPEG / PDF
B&W 200 dpi	TIFF / PDF
B&W 200x100 dpi	TIFF / PDF

For MFC-9440CN and MFC-9450CDN

- 1 Put a USB flash memory drive into your machine.
- 2 Load your document in the ADF or on the scanner glass.
- 3 Press the 🐼 (Scan) key.
- 4 Press ▲ or ▼ to choose Scan to USB. Press OK.
- 5 Choose one of the options below:
 - To change the setting, choose Change Setting. Press OK and go to .
 - To start scanning with the settings you set in the Function Menu (Menu, 5, 2),

choose Start Scan. Press OK and go to ③.

- 6 Press ▲ or ▼ to choose the quality you want. Press **OK**.
- 7 Press ▲ or ▼ to choose the file type you want. Press OK.

🖉 Note

- If you choose colour in the resolution setting, you cannot choose ${\tt TIFF}.$
- If you choose monochrome in the resolution setting, you cannot choose JPEG.
- 8 The file name is set automatically. However, you can create a name of your choice using the dial pad. You can only change the first 6 digits of the file name. Press OK.

🖉 Note

Press Clear/Back to delete the letters you entered.

9 Press Mono Start or Colour Start to start scanning.

🖉 Note

Scan type depends on the settings in the Function Menu or the setting set manually on the panel, **Mono Start** or **Colour Start** do not change the settings.



The LCD shows *Scanning* while reading the data. DO NOT unplug the power cord or remove the USB flash memory drive from the machine while it is reading the data. You could lose your data or damage the USB flash memory drive.

For MFC-9840CDW and DCP-9045CDN

- 1 Put a USB flash memory drive into your machine.
- 2 Load your document in the ADF or on the scanner glass.
- 3 Press the (Scan) key.
- 4 Press ▲ or ▼ to choose Scan to USB. Press OK.
- 5 Press ▲ or ▼ to choose 2sided (L)edge, 2sided (S)edge or 1sided. Press OK.
- 6 Choose one of the options below.
 - To change the setting, choose Change Setting. Press OK and go to ⑦.
 - To start scanning with the settings you set in the Function Menu (For MFC-9840CDW, Menu, 5, 2 and For DCP-9045CDN, Menu, 4, 2), choose Start Scan. Press OK and go to ⁽¹⁾.
- Press ▲ or ▼ to choose the quality you want. Press OK.
- 8 Press ▲ or ▼ to choose the file type you want. Press OK.

🖉 Note

- If you choose colour in the resolution setting, you cannot choose TIFF.
- If you choose monochrome in the resolution setting, you cannot choose JPEG.
- 9 The file name is set automatically. However, you can create a name of your choice using the dial pad. You can only change the first 6 digits of the file name. Press OK.

🖉 Note

Press Clear/Back to delete the letters you entered.

Press Mono Start or Colour Start to start scanning.

🖉 Note

Scan type depends on the settings in the Function Menu or the setting set manually on the panel, **Mono Start** or **Colour Start** do not change the settings.



The LCD shows *Scanning* while reading the data. DO NOT unplug the power cord or remove the USB flash memory drive from the machine while it is reading the data. You could lose your data or damage the USB flash memory drive.

Changing the default setting

- For MFC models, press Menu, 5, 2, 1.
 For DCP-9045CDN, press Menu, 4, 2, 1.
- Press ▲ or ▼ to choose Color 150 dpi, Color 300 dpi or Color 600 dpi, B&W 200 dpi or B&W 200x100 dpi. Press OK.
- 3 Do one of the following:
 - For black and white file format:

Press ▲ or ▼ to choose TIFF or PDF.

Press OK.

For Colour file format:

Press ▲ or ▼ to choose PDF or JPEG.

Press OK.

4 Press Stop/Exit.

Changing the default file name

- For MFC models, press Menu, 5, 2, 2.
 For DCP-9045CDN, press Menu, 4, 2, 2.
- 2 Enter the file name (up to 6 characters.) Press OK.
- 🖉 Note

You cannot use a space for the first character.

3 Press Stop/Exit.

Understanding the Error Messages

Once you are familiar with the types of errors that can occur while you are using the Scan to USB,

you can easily identify and troubleshoot any problems.

Protected Device

This message will appear if the protect switch of the USB flash memory drive is on.

Rename the File

This message will appear if there is already a file on the USB flash memory drive with the same name as the file you are trying to save.

Too Many Files

This message will appear if there are too many files stored on the USB flash memory drive.

Unusable Device

This message will appear if your USB flash memory drive is not supported by your Brother machine.

Scan to E-mail

You can scan either a black and white or colour document into your E-mail application as a file attachment. You can change the scan configuration. (See *E-mail* on page 77.)

- 1 Put the document face up in the ADF, or face down on the scanner glass.
- 2 Press 🔊 (Scan).
- 3 Press ▲ or V to choose Scan to E-mail.
 - Press OK.

If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step **(5**). If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step **(4**).

4 Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK.

🖉 Note

If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L)edge or 2sided (S)edge depending on your document layout.

5 Press Mono Start or Colour Start.


The machine starts scanning the document, creates a file attachment, and launches your E-mail application, displaying the new message waiting to be addressed.

```
🖉 Note
```

- Scan type depends on the settings on the Device Button tab, Mono Start or Colour Start do not change the settings.
- If you want the scanned data in colour, choose colour in scan type on the **Device Button** tab of the ControlCenter3 configuration. If you want the scanned data in black and white, choose black and white in scan type on the **Device Button** tab of the ControlCenter3 configuration. (See SCAN on page 72.)

Scan to Image

You can scan either a black and white or colour document into your graphics application for viewing and editing. You can change the scan configuration. (See *Image (example: Microsoft[®] Paint)* on page 74.)

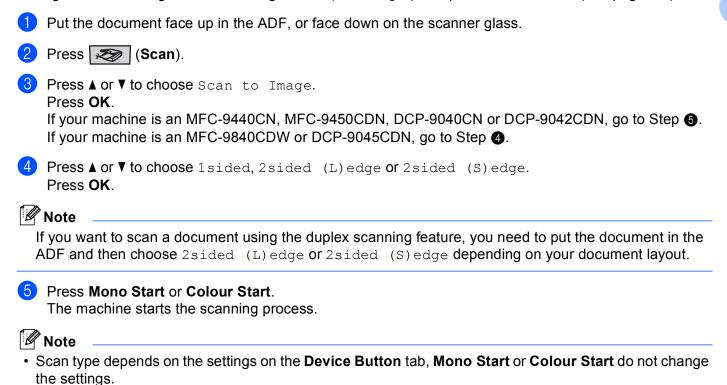

 If you want the scanned data in colour, choose colour in scan type on the **Device Button** tab of the ControlCenter3 configuration. If you want the scanned data in black and white, choose black and white in scan type on the **Device Button** tab of the ControlCenter3 configuration. (See SCAN on page 72.)

 
Scan to OCR

If your document is text, you can have it converted by ScanSoft™ PaperPort™ 11SE OCR to an editable text file and then have the result displayed in your word processing application for viewing and editing. You can change the *(Scan)* configuration. (See OCR (Word Processing program) on page 76.) Put the document face up in the ADF, or face down on the scanner glass. 2) Press 🔊 (Scan). 3 Press ▲ or V to choose Scan to OCR. Press OK. If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step 6. If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step 4. 4 Press ▲ or V to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK. 🖉 Note If you want to scan a document using the duplex scanning feature, put the document in the ADF and then choose 2sided (L) edge or 2sided (S) edge depending on your document layout. 5 Press Mono Start or Colour Start. The machine starts the scanning process. 🖉 Note · Scan type depends on the settings on the Device Button tab, Mono Start or Colour Start do not change the settings. • If you want the scanned data in colour, choose colour in scan type on the **Device Button** tab of the ControlCenter3 configuration. If you want the scanned data in black and white, choose black and white in

scan type on the **Device Button** tab of the ControlCenter3 configuration. (See SCAN on page 72.)

Scan to File

You can scan a black and white or a colour document into your PC and save it as a file in a folder of your choice. The file type and specific folder are based on the settings you have chosen in the Scan to File screen of ControlCenter3. (See File on page 78.)

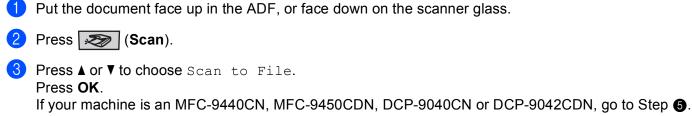

If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step 4.

4 Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK.

R Note

If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L) edge or 2sided (S) edge depending on your document layout.

5 Press Mono Start or Colour Start.

The machine starts the scanning process.

🖉 Note

- · Scan type depends on the settings on the Device Button tab, Mono Start or Colour Start do not change the settings.
- If you want the scanned data in colour, choose colour in scan type on the **Device Button** tab of the ControlCenter3 configuration. If you want the scanned data in black and white, choose black and white in scan type on the **Device Button** tab of the ControlCenter3 configuration. (See SCAN on page 72.)
- If you would like to display the folder window after scanning the document, select Show Folder on the **Device Button** tab of the ControlCenter3 configuration. (See SCAN on page 72.)
- If you would like to change the file name of scanned documents, enter the file name in the File Name section on the **Device Button** tab of the ControlCenter3 configuration. To change the machine's **Scan** key settings, right-click the each Control Center buttons, click ControlCenter Configuration and click the Device Button tab.


Using ScanSoft[™] PaperPort[™] 11SE with OCR by NUANCE[™]

🖉 Note

ScanSoft[™] PaperPort[™] 11SE supports Windows[®] 2000 (SP4 or greater), XP (SP2 or greater), XP Professional x64 Edition and Windows Vista[®] only.

ScanSoft™ PaperPort™ 11SE for Brother is a document management application. You can use PaperPort™ 11SE to view scanned documents.

PaperPort[™] 11SE has a sophisticated, yet easy-to-use filing system that will help you organize your graphics and text documents. It allows you to mix or 'stack' documents of different formats for printing, faxing or filing.

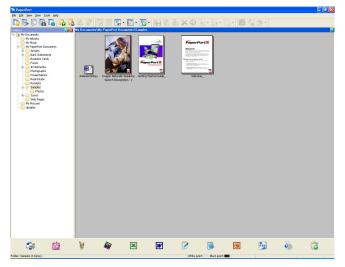

This chapter only introduces the basic functions of the software. For more details, see the ScanSoft™ **Getting Started Guide**. To view the complete ScanSoft™ PaperPort™ 11SE **Getting Started Guide**, choose **Help** from PaperPort™ 11SE menu bar and click **Getting Started Guide**. When you install MFL-Pro Suite, ScanSoft™ PaperPort™ 11SE for Brother is installed automatically. You can access ScanSoft™ PaperPort™ 11SE through the ScanSoft™ PaperPort™ SE program group located in **Start/All Programs/ScanSoft PaperPort 11** on your PC.


Viewing items

ScanSoft[™] PaperPort[™] 11SE gives several ways to view items:

Desktop View displays the item in the chosen folder with a thumbnail (a small graphic that shows each item in a desktop or folder) or an icon.


You can see both PaperPort[™] 11SE items (MAX files) and non-PaperPort[™] 11SE items (files created using other applications).

Non-PaperPort[™] 11SE items include an icon that indicates the application that was used to create the item; a non-PaperPort[™] 11SE item is indicated by a small rectangular thumbnail and not an actual image.

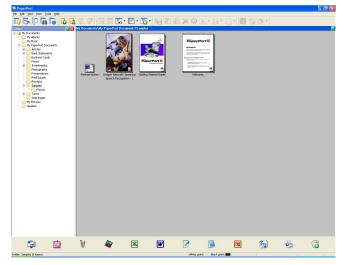

Page Thumbnails displays a close-up of a single page. You can open a PaperPort[™] 11SE item by doubleclicking its icon or the thumbnail in **Desktop View**.

As long as you have the appropriate application on your PC to display it, you can also open a non-PaperPort[™] SE item by double-clicking it.

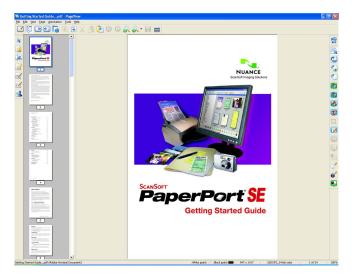

Organizing your items in folders

PaperPort[™] 11SE has an easy-to-use filing system for organizing your items. The filing system consists of folders and items that you choose to view in **Desktop View**. An item can be a PaperPort[™] 11SE item or a non-PaperPort[™] 11SE item:

- Folders are arranged in a 'tree' structure in the Folder View. You use this section to choose folders and view their items in **Desktop View**.
- You can simply drag and drop an item onto a folder. When the folder is highlighted, release the mouse button and the item is stored in that folder.
- Folders can be 'nested'—that is, stored in other folders.
- When you double-click a folder, its contents (both PaperPort[™] 11SE MAX files and non PaperPort[™] 11SE files) appear on the Desktop.
- You can also use Windows[®] Explorer to manage the folders and items shown in **Desktop View**.

Quick links to other applications

ScanSoft[™] PaperPort[™] 11SE automatically recognizes many other applications on your PC and creates a 'working link' to them.

The Send To Bar at the bottom of the Desktop view shows icons for those linked applications.



To use a link, drag an item onto one of the icons to start that application. A typical use of the **Send To Bar** is to choose an item and then fax it.

This sample **Send To Bar** shows several applications with links to PaperPort[™] 11SE.

 
If PaperPort[™] 11SE does not automatically recognize one of the applications on your PC, you can manually create a link using the **New Program Link** command.

ScanSoft[™] PaperPort[™] 11SE with OCR lets you convert image text into text you can edit

ScanSoft[™] PaperPort[™] 11SE can quickly convert a text document image into text that you can edit with a word processing application.

PaperPort[™] 11SE uses the optical character recognition software (OCR), which comes with PaperPort[™] 11SE. PaperPort[™] 11SE can use your preferred OCR application if it is already on your PC. You can convert the entire item, or by using the **Copy Text** command, you can choose only a portion of the text to convert.

Dragging an item onto a word-processing link icon starts PaperPort[™] 11SE's built-in OCR application, or you can use your own OCR application.

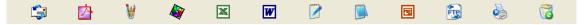

You can import items from other applications

As well as scanning items, you can bring items into PaperPort[™] 11SE in a variety of ways and convert them to PaperPort[™] 11SE (MAX) files in several different ways:

- Print to the **Desktop View** from another application, such as Microsoft[®] Excel.
- Import files saved in other file formats, such as Windows[®] Bitmap (BMP) or Tagged Image File Format (TIFF).

You can export items into other formats

You can export or save PaperPort[™] 11SE items in several popular file formats, such as BMP, JPEG, TIFF or PDF.

Exporting an image file

- Click File, then Save As in the PaperPort[™] 11SE window. The Save 'XXXXX' as dialog box is displayed.
- 2 Choose the drive and folder where you want to store the file.
- 3 Enter the new file name and choose the file.
- 4 Click **Save** to save your file, or **Cancel** to return to PaperPort™ 11SE without saving it.

Uninstalling ScanSoft[™] PaperPort[™] 11SE with OCR

For Windows[®] 2000 Professional

- Click the Start button, Settings, Control Panel, then Add/Remove Programs.
- 2 Choose ScanSoft PaperPort11 from the list and click Change or Remove.

For Windows[®] XP

- Click the Start button, Control Panel, Add or Remove Programs, and click the Change or Remove Programs icon.
- 2 Choose ScanSoft PaperPort11 from the list and click Change or Remove.

For Windows Vista[®]

- 1 Click Management Sector Panel, Programs and Programs and Features.
- 2 Choose ScanSoft PaperPort11 from the list and click Uninstall.


ControlCenter3

Note The features available to you in ControlCenter3 may vary depending on the model number of your machine.


Using ControlCenter3

ControlCenter3 is a software utility that lets you quickly and easily access your often used applications. Using ControlCenter3 eliminates the need to manually launch specific applications. ControlCenter3 has the following operations:

- Scan directly to a file, E-mail, word processor or graphics application of your choice. (1)
- 2 Access to the Custom Scan settings. Custom Scan buttons let you configure a button to meet your own application needs. (2)
- 3 Access the Copy features available via your PC. (3)
- 4 Access the 'PC-FAX' applications available for your device. (4)
- 5 Access the settings available to configure your device. (5)
- 6 You can choose which machine ControlCenter3 will connect with from the **Model** drop-down list. (6)
- You can also open the configuration window for each function and a link to the Brother Solutions **Center** by clicking the **Configuration** button. (7)

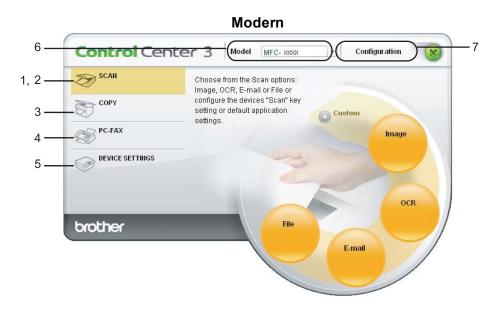

Classic

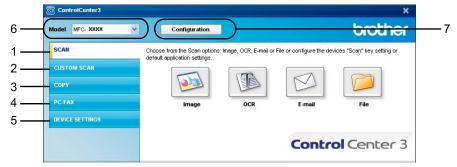

Mote

- To be able to choose another connected model from the **Model** drop-down list, you must have the MFL-Pro Suite Software installed on your PC for that model.
- For the Modern user interface, you need to install Adobe[®] Flash[®] Player 8 or greater. If you do not have Flash Player 8 or greater, you will be prompted so you can download the latest Flash Player.

Switching the user interface

You can choose the Modern or Classic user interface for ControlCenter3.

- 1 To switch the user interface, click **Configuration** button and select **SETUP** then **SKIN SELECT**.
- 2 From the **SKIN SELECT** dialog, you can choose your preferred user interface.



Turning the Auto Load feature off

Once you start ControlCenter3 from the Start menu, the icon will appear on the task tray. You can open the ControlCenter3 window by double-clicking the cont

If you do not want ControlCenter3 to run automatically each time you start your PC:

- Right-click the ControlCenter3 icon in the task tray <a>S <a>S
- 2 Uncheck Start ControlCenter on computer startup.
- 3 Click **OK** to close the window.

ControlCenter 3 Preferences	×
Start ControlCenter on computer startup	
Open the main window on ControlCenter startup	
Show splash screen on ControlCenter startup	
OK Cancel	

SCAN

There are four scan options: Scan to Image, Scan to OCR, Scan to E-mail and Scan to File.

■ Image (Default: Microsoft[®] Paint)

Lets you scan a page directly into any graphic viewer/editor application. You can choose the destination application, such as Microsoft[®] Paint, Corel[®] Paint Shop Pro[®], Adobe[®] Photoshop[®], or any kind of image editing application on your PC.

■ OCR (Default: Microsoft[®] Notepad)

Lets you scan a page or document, automatically run the OCR application and put text (not a graphic image) into a word processing application. You can choose the target word processing application, such as Microsoft[®] Notepad, Microsoft[®] Word, Corel[®] WordPerfect[®] or any word processing application on your PC.

E-mail (Default: your default E-mail software)

Lets you scan a page or document directly into an E-mail application as a standard attachment. You can choose the file type and resolution for the attachment.

■ File

Lets you scan directly to a disk file. You can change the file type and destination folder, as needed.

ControlCenter3 gives you the ability to configure the hardware **Scan** key on your machine and the ControlCenter3 Software button for each scan feature. To configure the hardware **Scan** key on your machine choose the **Device Button** tab (right-click each Control Center button and click **ControlCenter Configuration**) in the configuration menu for each of the **SCAN** buttons. To configure the Software button in ControlCenter3 choose the **Software Button** tab (right-click each Control Center button and click **ControlCenter Configuration**) in the configuration menu for each of the **SCAN** buttons.

CUSTOM SCAN

You can configure the button name and settings for each of these buttons to meet your specific needs by right-clicking a button and following the configuration menus.

COPY

Lets you use the PC and any printer driver for enhanced copy operations. You can scan a page on the machine and print copies using any of the features of the machine's printer driver, or you can direct the copy output to any standard printer driver installed on the PC including network printers.

You can configure your preferred settings on up to four buttons.

PC-FAX (MFC models only)

These buttons are for sending or receiving faxes using the Brother PC-FAX application.

Send

Lets you scan a page or document and automatically send the image as a fax from the PC using the Brother PC-FAX software. (See *PC-FAX sending* on page 108.)

Receive

Activates the PC-FAX Receive Software. Before using the PC-FAX Receive Software, you must also activate PC-FAX Receive in the control panel menu of your Brother machine. Once activated, the icon name changes to **View Received**. Click on the icon to display your received faxes. (See *PC-FAX receiving* on page 120.)

Address Book

Lets you open the Brother PC-FAX address book. (See Brother Address Book on page 115.)

Setup

Lets you configure the PC-FAX sending settings. (See Sending setup on page 109.)

🖉 Note

PC-FAX supports Black and white faxing only.

DEVICE SETTING

You can configure or check the machine settings.

Remote Setup (MFC models only)

Lets you open the Remote Setup Program. (See Remote Setup on page 106.)

Quick-Dial (MFC models only)

Lets you open the Set Quick-Dial window of Remote Setup. (See Remote Setup on page 106.)

Status Monitor

Allows you to open the Status Monitor Utility. (See Status Monitor on page 13.)

User's Guide

Lets you view the User's Guide, the Software User's Guide and the Network User's Guide.

SCAN

There are four scan options: Scan to Image, Scan to OCR, Scan to E-mail and Scan to File applications.



You can configure your machine's **Scan** key for each ControlCenter3 button in the **Device Button** tab. To change the machine's **Scan** key settings, right-click each of the Control Center buttons, click **ControlCenter Configuration** and click the **Device Button** tab.



Image (example: Microsoft[®] Paint)

The **Scan to Image** feature lets you scan an image directly into your graphics application for image editing. To change the default settings, right-click the **Image** button, click **ControlCenter Configuration** and click the **Software Button** tab.

ControlCenter3 Configuration	\mathbf{X}
[SCAN] Image	
Software Button Device Button Target Application Microsoft Internet Explorer 6.x	Add Delete
File Type JPEG (*.jpg)	×
Scon Type 24bi Colur Decument Stee	Bightness
A4 210 x 237 mm Duplex(two tided) Scarning Outplex(two tided) Scarning Outplex(two tided) Scarning Compared to the days binding Restore Defaults Restore Defaults	· · · · · · · · · · · · · · · · · · ·
	OK Cancel

If you want to scan and then crop a portion of a page after pre-scanning the document, check the **Show Scanner Interface** box.

If you want to scan a duplex document, check **Duplex (two-sided) Scanning** and choose **Long-edge binding** or **Short-edge binding**. (MFC-9840CDW and DCP-9045CDN only)

ControlCenter3 Configuration	
[SCAN] Image	
Software Button Device Button	
Target Application	
Microsoft Internet Explorer 6.x	Add Delete
File Type	
JPEG (*.jpg)	×
Show Scanner Interface	
Resolution	Brightness
300 x 300 dpi 🕑	
Scan Type	50
24bit Colour 🗸	Contrast
Document Size	= =
A4 210 x 297 mm	50
Duples(two-sided) Scanning O Long-edge binding Shot-edge binding	
Restore Defaults	
	OK Cancel

Change the other settings, if needed.

To change the destination application, choose the correct application from the **Target Application** dropdown list. You can add an application to the list by clicking the **Add** button.

Add Scan to Image Application	
If you want to change your application for "Scan to image Application Name, Application Location and File Type. And then, click"Add" button to add your application.	s", please specify
Application Name	
Application Location	
File Type	
Windows Bitmap (*.bmp)	~
Add	Cancel

Enter the **Application Name** (up to 30 characters) and the **Application Location**. You can also find the application location by clicking the sicon. Choose **File Type** from the drop-down list.

You can delete an application that you have added by clicking the **Delete** button in the **Software Button** tab.

Delete Scan to Image Application	
If you want to delete registered application from "Scan to Image", please select your application from "Application Name". And then, click"Delete" button to delete your application.	
Application Name	
My original picture	
Application Location	
E:W/INDOW/S\system32\mspaint.exe	
File Type	
Windows Bitmap (*.lomp)	
Delete Cancel	

🖉 Note

This function is also available for Scan to E-mail and Scan to OCR. The window may vary depending on the function.

OCR (Word Processing program)

Scan to OCR scans a document and converts it into text. This text can be edited using your favourite word processing software.

To configure **Scan to OCR**, right-click the **OCR** button, click **ControlCenter Configuration** and click the **Software Button** tab.

ControlCenter3 Configuration	k
Software Button Jaget Application Horocoth Internet Explore 5.x Add Debte File Type HITML [*Mm] OGS Software PaperPot OCR Conflict Software Softwa	
Restore Defaults	
OK Cancel	

To change the word processing application, choose the destination word processing application from the **Target Application** drop-down list. You can add an application to the list by clicking the **Add** button. To delete an application, click the **Delete** button in the **Software Button** tab.

If you want to scan a duplex document, check **Duplex (two-sided) Scanning** and choose **Long-edge binding** or **Short-edge binding**. (MFC-9840CDW and DCP-9045CDN only)

If you want to scan and then crop a portion of a page after pre-scanning the document, check the **Show Scanner Interface** box.

You can also configure the other settings for Scan to OCR.

E-mail

Scan to E-mail lets you scan a document to your default E-mail application, so you can send the scanned job as an attachment. To change the default E-mail application or attachment file type, right-click the **E-mail** button, click **ControlCenter Configuration** and click the **Software Button** tab.

ControlCenter3 Configuration	×
[SCAN] E-mail	
Software Button Device Button	
E-mail Application	
Microsoft Outlook Express 6	Add Delete
File Type	
JPEG (*.ipg)	<u>~</u>
Show Scanner Interface	
Resolution	Brightness
200 x 200 dpi 🛛 🗸	
Scan Type	50
24bit Colour	Contrast
Document Size	■ <u>■</u>
A4 210 x 297 mm 💌	50
Duples(Iwo-sided) Scanning Outples(Iwo-sided) Scannin	
Restore Defaults	
	OK Cancel

To change the E-mail application, choose your preferred E-mail application from the **E-mail Application** drop-down list. You can add an application to the list by clicking the **Add** button ¹. To delete an application, click the **Delete** button.

¹ When you first start ControlCenter3 a default list of compatible E-mail applications will appear in the drop-down list. If you are having trouble using a custom application with ControlCenter3 you should choose an application from the list.

If you want to scan a duplex document, check **Duplex (two-sided) Scanning** and choose **Long-edge binding** or **Short-edge binding**. (MFC-9840CDW and DCP-9045CDN only)

You can also change the other settings used to create the file attachments.

If you want to scan and then crop a portion of a page after pre-scanning the document, check the **Show Scanner Interface** box.

File attachments

You can choose from the following list of file types when saving to a folder.

File Type

- Windows Bitmap (*.bmp)
- JPEG (*.jpg)
- TIFF Uncompressed (*.tif)
- TIFF Compressed (*.tif)
- TIFF Multi-Page Uncompressed (*.tif)
- TIFF Multi-Page Compressed (*.tif)
- Portable Network Graphics (*.png)
- PDF (*.pdf)

File

The **Scan to File** button lets you scan an image to a folder on your hard disk in one of the file types shown in the file attachment list. To configure the file type, folder and file name, right-click the **File** button, click **ControlCenter Configuration** and click the **Software Button** tab.

ControlCenter3 Configuration	\mathbf{X}
[SCAN] File	
Software Button Device Button	_
File Name (Date) (Number) CCF 02192007_seek.ipg Show Save As window	
File Type JPEG (*.jpg)	
Destination Folder [E:\Documents and Settings\User\My Documents\My]	
Show Scanner Interface Resolution Birghtness 300 x 300 dpi	
Scan Type 50	
Document Size	
Duple(two-sided) Scarning Outline(two-sided) Scarning Outline(two-sided) Scarning Outline(two-sided) Scarning Outline(two-sided) Scarning Outline(two-sided) Scarning	
Restore Defaults	
OK Cancel	

You can change the File Name. Enter the file name you want to use for the document (up to 100 characters) in the **File Name** box. File name will be the file name you registered, current date and sequential number.

Choose the file type for the saved image from the File Type drop-down list. You can save the file to the default

folder shown in the **Destination Folder**, or choose your preferred folder by clicking the significant.

To display where the scanned image is saved when scanning is finished, check the **Show Folder** box. To let you specify the destination of the scanned image every time you scan, check the **Show Save as Window** box.

If you want to scan a duplex document, check **Duplex (two-sided) Scanning** and choose **Long-edge binding** or **Short-edge binding**. (MFC-9840CDW and DCP-9045CDN only)

If you want to scan and then crop a portion of a page after pre-scanning the document, check the **Show Scanner Interface** box.

CUSTOM SCAN

The Custom Scan option lets you create your own scan options.

For Modern interface users, place the mouse pointer over the ◀ and click **Custom**.

To customize a button, right-click the appropriate button and click **ControlCenter Configuration**. There are four options: **Scan to Image**, **Scan to OCR**, **Scan to E-mail** and **Scan to File**.

Scan to Image

Lets you scan a page directly into any image viewer/editor software. You can choose any image editor application on your PC.

Scan to OCR


Converts scanned documents into editable text files. You can choose the destination application for the editable text.

Scan to E-mail

Attaches the scanned images to an E-mail message. You can also choose the file attachment type and create a quick send list of E-mail addresses chosen from your E-mail address book.

Scan to File

Lets you save a scanned image to any folder on a local or network hard disk. You can also choose the file type to be used.

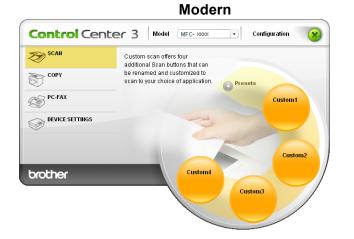

Classic



Customizing a user-defined button

To customize a button, right-click the button, then click the **ControlCenter Configuration** button to see the configuration window.

Scan to Image

General tab

To create the button name, enter a name in the **Please enter a name for the Custom Button** text field (up to 30 characters).

Choose the type of scan from the Scan Action field.

ControlCenter3 Configuration
[CUSTOM SCAN] Custom1
General Settings
Please enter a name for the Custom Button
Scan Action
Scan to Image
Scan to DCR
Scan to E-mail
Scan to File
OK Cancel

Settings tab

Choose the Target Application, File Type, Resolution, Scan Type, Document Size, Duplex (two-sided) Scanning (if necessary), Show Scanner Interface, Brightness and Contrast settings.

Target Application	
Microsoft Internet Explorer 6.x	Add Delete
File Type	
JPEG (*.ipg)	*
Resolution 300 x 300 dpi	Brightness
Scan Type 24bit Colour	Contrast
24bit Colour Cocument Size	= =

Scan to OCR

General tab

To create the button name, enter a name in the **Please enter a name for the Custom Button** text field (up to 30 characters).

Choose the type of scan from the Scan Action field.

ControlCenter3 Configuration
[CUSTOM SCAN] Custom2
General Settings
Please enter a name for the Custom Button
Scan Action
O Scan to Image
Scan to DCR
O Scan to E-mail
Scan to File
OK Cancel

Settings tab

Choose the Target Application, File Type, OCR Software, OCR Language, Resolution, Scan Type, Document Size, Duplex (two-sided) Scanning (if necessary), Show Scanner Interface, Brightness and Contrast settings.

ControlCenter3 Configuration	
[CUSTOM SCAN] Custom2	
General Settings	
Target Application	
Microsoft Internet Explorer 6.x	Add Delete
File Type	
HTML (".htm)	×
OCR Software	
PaperPort OCR	~
OCR Language	
English	
Show Scanner Interface	
Besolution	Brightness
300 x 300 dpi	✓
Scan Type	50
Black&White	Contrast
Document Size	_ =
A4 210 x 297 mm	50
Duplex(two-sided) Scanni	ng
🖉 📰 💿 Long-edge binding	
Short-edge binding	
Restore Defaults	
	OK Cancel

3

Scan to E-mail

General tab

To create the button name, enter a name in the **Please enter a name for the Custom Button** text field (up to 30 characters).

Choose the type of scan from the **Scan Action** field.

ControlCenter3 Configuration	
[CUSTOM SCAN] Custom3	
General Settings	
Please enter a name for the Custom Button	
Scan Action	
O Scan to Image	
Scan to OCR	
Scan to E-mail	
🔿 Scan to File	
ОК	Cancel

Settings tab

Choose the E-mail Application, File Type, Resolution, Scan Type, Document Size, Duplex (two-sided) Scanning (if necessary), Show Scanner Interface, Brightness and Contrast settings.

ControlCenter3 Configuration	X
[CUSTOM SCAN] Custom3	
General Settings	
E-mail Application	
Microsoft Outlook Express 6	Add Delete
File Type	
JPEG (*.jpg)	×
Show Scamer Interface Resolution 2014 200 dpi Scam Type 24bit Colour Document Size MA 21012 s27 mm Duples(two-sided) Scaming Short adge binding	Brightness Contrast
Restore Defaults	OK Cancel

Scan to File

General tab

To create the button name, enter a name in the **Please enter a name for the Custom Button** text field (up to 30 characters).

Choose the type of scan from the Scan Action field.

C.	ontrolCenter3 Configuration
	CUSTOM SCAN] Custom4
	General Settings
	Please enter a name for the Custom Button
	Custom4
	ScanAction
	Scan to Image
	Scan to DCR
	O Scan to E-mail
	Scan to File
	OK Cancel

Settings tab

Choose the file format from the File Type drop-down list. Save the file to the default folder which is shown

in the Destination Folder box or choose your preferred folder by clicking the 🔄 icon. Check

Show Folder to show where the scanned image is saved after scanning. Check **Show Save As Window** to specify the destination of the scanned image after every scan.

Choose the **Resolution**, **Scan Type**, **Document Size**, **Duplex (two-sided) Scanning** (if necessary), **Show Scanner Interface**, **Brightness** and **Contrast** settings and enter the file name if you want to change it.

ControlCenter3 Configuration	×
[CUSTOM SCAN] Custom4	
General Settings	
File Name (Date) (Number) CCF 02192007_xxxxipg Show Save.	As window
File Type	
JPEG (".ipg)	
Destination Folder E:\Documents and Settings\User\Mv Documents\Mv G	
E:\Documents and Settings\User\My Documents\My	r
Show Scanner Interface	
Resolution Brightness	
300 x 300 dpi	
Scan Type	50
24bit Colour	
Document Size	_
A4 210 x 297 mm	50
Chapter(two-sided) Scanning O Long-edge binding Shot edge binding	
Restore Defaults	
ОК	Cancel

83

COPY

ControlCenter3 Configuration brother Model MFC- XXXX ~ Access the Copy features available via your computer COPY R R R R Copv1 Copv2 Com Copy4 DEVICE SETTINGS **Control** Center 3

The **Copy1** to **Copy4** buttons can be customized to let you use advanced copy functions such as N in 1 printing.

To use the **Copy** buttons, configure the printer driver by right-clicking the button and choosing the **ControlCenter Configuration**.


iontrolCenter 3 Configuration	
Please enter a name for the Copy Button	
Copy1	
Copy Ratio 100% copy	
Loo w copy	
Show Scanner Interface	
Resolution	
300 × 300 dpi	Brightness
Scan Type	50
24bit Colour	
Document Size	Contrast
A4 210 × 297 mm 🗸 🗸	50
Duplex(two-sided) Scanning © Long-edge binding Short-edge binding	
Printer Name Brother MFC- XXXX Printer	Print Options
Restore Defaults	OK Cancel

Enter a name in **Please enter a name for the Copy Button** text field (up to 30 characters) and choose **Copy Ratio**.

Choose the **Resolution**, **Scan Type**, **Document Size**, **Show Scanner Interface**, **Brightness** and **Contrast** settings to be used.

If you want to scan a duplex document, check **Duplex (two-sided) Scanning** and choose **Long-edge binding** or **Short-edge binding**. (MFC-9840CDW and DCP-9045CDN only)

Before finishing the **Copy** button configuration, choose the **Printer Name** and click the **Print Options** button to display the printer driver settings.

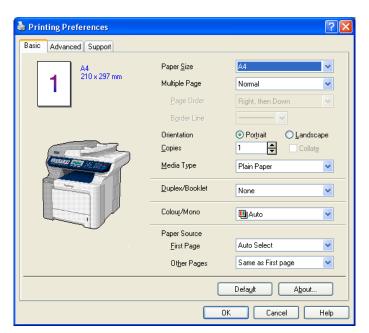

In the printer driver settings dialog box, you can choose advanced settings for printing.

🖉 Note

- You must configure each of the copy buttons before they can be used.
- The Print Options screen will vary depending on your model.

PC-FAX (MFC models only)

The PC-FAX option lets you send and receive faxes. You can also configure the address book and change some general machine settings.



Send

The **Send** button lets you scan a document and automatically send the image as a fax from the PC using the Brother PC-FAX software. (See *PC-FAX sending* on page 108.)

To change the **Send** settings, right-click the **Send** button and click **ControlCenter Configuration**. You can change the **Resolution**, **Scan Type**, **Document Size**, **Show Scanner Interface**, **Brightness** and **Contrast** settings.

PC-FAX] Send	
PC-FAX Driver	
Brother PC-FAX v.2	V Setup
Show Scanner Interface	
Resolution	Brightness
200 x 200 dpi	
Scan Type	50
Grey (Error Diffusion)	Contrast
Document Size	
A4 210 x 297 mm 💌	
Duplex(two-sided) Scanning	
Restore Defaults	OK Cancel

If you want to scan a duplex document, check **Duplex (two-sided) Scanning** and choose **Long-edge binding** or **Short-edge binding**. (MFC-9840CDW only)

Receive/View Received

The Brother PC-FAX Receiving software option lets you view and store your faxes on your PC. It is automatically installed when you install the MFL-Pro Suite.

By clicking the **Receive** button, the PC-FAX Receive function is activated and starts to receive fax data from your Brother machine. Before you use the PC-FAX Receive function, you must select the PC-FAX Receive option from the control panel menu of the Brother machine. (See *Running the PC-FAX Receiving software on your PC* on page 121.)

To configure the PC-FAX Receive software, see Setting up your PC on page 122.



When the PC-FAX receiving software is running, you can open the viewer application with the **View Received** button. (PaperPort[™] 11SE)

ControlCenter3		; In coldese
Model MFC-XXXX	Configuration	brother
SCAN	Access the PC-FAX application available on yo default settings.	our device. Select configuration to change the application or
CUSTOM SCAN		
СОРУ		
PC-FAX	Send View Recei	ived Address Book Setup
DEVICE SETTINGS		
		Control Center 3
		control center 3

🖉 Note

You can also activate the PC-FAX receiving software from the start menu. (See *Running the PC-FAX Receiving software on your PC* on page 121.)

Address Book

The **Address Book** button lets you add, amend or delete contacts from your address book. To edit this button, click the **Address Book** button to open the dialog box. (See *Brother Address Book* on page 115.)



Setup

By clicking the Setup button, you can configure the user settings of the PC-FAX application.

(See Setting up user information on page 108.)

DEVICE SETTING

ControlCenter3 Configuration brother Model MFC- xxxx ~ Access device settings. CUSTOM SCAN #01 #02 #02 #03 0 Quick-Dial Remote Setup Status Monitor User's Guide DEVICE SETTINGS **Control** Center 3

In the **Device Settings** option, you can configure the machine settings.

Remote Setup (MFC models only)

The **Remote Setup** button lets you open the Remote Setup Program window to configure the machine setting menus.

Note

For details, see *Remote Setup* on page 106.

🗃 Brother MFC Remote Setu	p Program - MFC- XXXX	
	General Setup	
General Setup	-	
🖃 Fax	Mode Timer	2 Mins 💌
- Setup Receive - Setup Send	Paper Type	
- Set Quick-Dial		
Report Setting	i ray#1	Plain
Remote Fax Opt	MP Tray	Plain 🔻
- Copy Printer	Paper Size	
- USB Direct I/F	Paper Size	
- Direct Print	Tray#1	Letter
- Scan to USB	ND T	
PictBridge	MP Tray	Letter
E-LAN	Volume	
Scan to FTP	Diam	B Med V Beeper Off V
Initial Setup	ning	B Med 💌 Beeper Off 💌
	Speaker	Med 🔽
	Auto Daylight	⊂ On
	Ecology	
	Toner Save	
	Sleep Time	5 🚊
	Tray Use	
	C	Fee as an
	Сору	MP>T1 Fax T1>MP
	Print	t MP>T1 🔹
Export Print	Import	OK Cancel Apply
Export Print	Import	UK Cancel Apply

Quick-Dial (MFC models only)

(Mar

B- MFC- XXXX		uick-Dial	-										
- General Setup	*01	FAX/TEL NUMBER	Type Fax/Tel	DESTINATION	G1	G2	G3	G4	G5	G6	G7	G8	69
E Fax	*02		Fax/Tel					-	1	1			-
- Setup Receive	102		Fax/Tel					-	-	-			-
- Setup Send	*04		Fax/Tel		-	-		-	-				-
- Set Quick-Dial								-					
Report Setting	*05		Fax/Tel					-					
- Remote Fax Opt	*06		Fax/Tel										
Сору	"07		Fax/Tel										
- Printer	×08		Fax/Tel										
USB Direct I/F	*09		Fax/Tel										
- Direct Print	*10		Fax/Tel										
- Scan to USB	*11		Fax/Tel										
PictBridge	*12		Fax/Tel										
🗇 LAN	*13		Fax/Tel										
- TCP/IP	*14		Fax/Tel										
Scan to FTP	*15		Fax/Tel										
Initial Setup	*16		Fax/Tel										
	#001		Fax/Tel										
	#002		Fax/Tel										
	#003		Fax/Tel										
	#004		Fax/Tel						Г				Г
	#005		Fax/Tel										
	#006		Fax/Tel		Г	Г	Г	Г	Г	Г			Г
	#007		Fax/Tel		Г	Г							Г
	#008		Fax/Tel		Г	Г	Г	Г	Г	Г	Г	Г	Г
	#009		Fax/Tel										
	#010		Fax/Tel		Г		Г	Г	F	F			
	#011		Fax/Tel										
	#012		Fax/Tel		í.	F	F	í.	F	F.	F	F I	F.
	#013		Fax/Tel										
	#014		Fax/Tel		í.	í.	í.	F	i	i	i	in 1	i
	#015		Fax/Tel		Ē	Γ.		Γ.	Ē	Ē			Ē
	#016		Fax/Tel		Γ.	Γ.	Ē.	F	Ē.	Ē.	i T	E.	F.
	#017		Fax/Tel		ίΠ.	í.	í.	í.	i T	i	in .	ir i	i
	#018		Fax/Tel		Ē	Ē	i -	i	i	i	in .	i -	i
	<				-	-	-	-	-	-	-	-	-
	5				_	_		_	_	_	_	_	_

The **Quick-Dial** button lets you open the **Set Quick-Dial** window in the Remote Setup Program. You can then easily register or change the Quick-Dial numbers from your PC.

Status Monitor

The **Status Monitor** button allows you to monitor the status of one or more devices, allowing you to get immediate notification of errors such as paper empty or paper jam. (See *Status Monitor* on page 13)



User's Guide

The User's Guide button lets you view the Software User's Guide and the Network User's Guide in HTML format.



4

Network Scanning

To use the machine as a network scanner, the machine must be configured with a TCP/IP address. You can set or change the address settings from the control panel (See *Control Panel Setup in the Network User's Guide*) or by using the BRAdmin Professional software. If you installed the machine following the instructions for a network user in the Quick Setup Guide then the machine should already be configured for your network.

🖉 Note

- For network scanning, a maximum of 25 clients can be connected to one machine on a network. For example, if 30 clients try to connect at a time, 5 of those clients will not be shown on the LCD.
- If your PC is protected by a firewall and is unable to network scan, you may need to configure the firewall settings to allow communication through port number 54925 and 137. See *Before using the Brother software* on page 125.

Before using Network Scanning

Network license

This product includes a PC license for up to 5 Users.

This license supports the installation of the MFL-Pro Software Suite including ScanSoft[™] PaperPort[™] 11SE on up to 5 PCs on the network.


If you want to use more than 5 PCs with ScanSoft[™] PaperPort[™] 11SE installed, please buy the Brother NL-5 pack which is a multiple PC license agreement pack for up to 5 additional users. To buy the NL-5 pack, contact your Brother dealer.

Configuring Network Scanning

If you are using a different machine than the one that was originally registered to your PC during the installation of MFL-Pro Suite software (see *the Quick Setup Guide*), follow the steps below.

For Windows[®]2000, click the Start button, Control Panel, then Scanners and Cameras. For Windows[®] XP, click the Start button, Control Panel, Printers and Other Hardware, then Scanners and Cameras (or Control Panel, Scanners and Cameras).

For Windows Vista[®], click 🧑 button, Control Panel, Hardware and Sound, then Scanner and Camera.

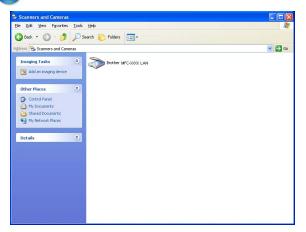



- 2 Do one of the following:
 - For Windows 2000 and Windows Vista[®], select your Brother machine from the list and click the properties button.
 - For Windows XP, right-click the Scanner Device icon and choose **Properties**.

The Network Scanner Properties dialog box appears.

■ For Windows Vista[®], click **Properties** button.

Note

For Windows Vista[®] the **User Account Control** screen appears, do the following.

• For users who have administrator rights: Click Continue.



• For users who do not have administrator rights: Enter the administrator password and click OK.



3 Click the **Network Setting** tab and choose the appropriate connection method.


Brother	LAN Proper	rties	? 🔀
General Events	Color Management	Network Setting	Scan To Button
C Specify your m	achine by address		
IP Address			
Specify your mediate of the second	achine by name		
Node Name	BRN_XXXXXXX		
	Br	rowse	
	ОК	Cancel	

Specify your machine by address

Enter the IP address of the machine in IP Address, and then click Apply.

Specify your machine by name

- 1 Enter the machine node name in **Node Name**, or click **Browse** and choose the device you want to use.
- 2 Click OK.

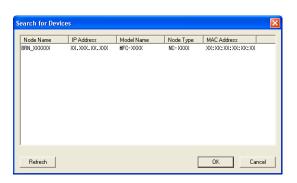

Click the Scan To Button tab and enter your PC name in the Display Name field. The machine's LCD displays the name you enter. The default setting is your PC name. You can enter any name that you like (Max. 15 characters).


Br	other	LAN Properties 🔹 💽 🗙
	àeneral	Events Color Management Network Setting Scan To Button
	🗸 Regi	ister your PC with the "Scan To" functions at the machine.
	Thi	play Name (Max15 characters) s name wil appear when the "Scan menu is selected at the machine. abd
		n To" Button Pin number for this PC nable Pin number protection
		Pin number ('0'-'9', 4 digits)
		Retype Pin number
		OK Cancel Apply

5 If you want to avoid receiving unwanted documents, enter a 4-digit PIN number in the **Pin number** and **Retype Pin number** field. To send data to a PC protected by a PIN number, the LCD prompts you to enter the PIN number before the document can be scanned and sent to the PC. (See *Using the Scan key* on page 94.)

Using the Scan key

Note

- If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L) edge or 2sided (S) edge depending on your document layout.
- Choose your document layout from following table:

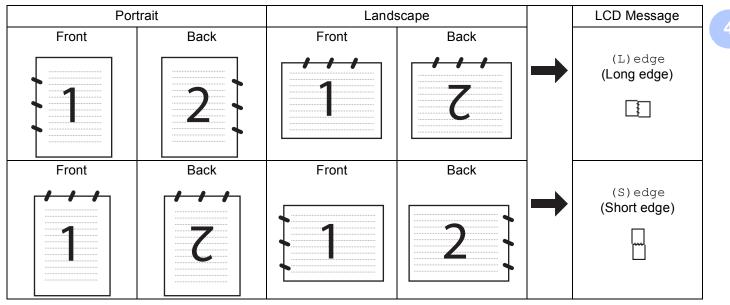

Document Layout Table

- Duplex scan is supported by the MFC-9840CDW and DCP-9045CDN only.
- Duplex scan is available from the ADF only.
- Duplex scan is not available for legal size paper.

Scan to E-mail (PC)

When you choose Scan to E-mail (PC) your document will be scanned and sent directly to the PC you designated on your network. ControlCenter3 will activate the default E-mail application on the designated PC. You can scan and send a black and white or colour document from the PC as an attachment.

You can change the scan configuration. (See E-mail on page 77.)

- 1 Put the document face up in the ADF, or face down on the scanner glass.
- 2 Press 🔊 (Scan).
 - Press ▲ or ▼ to choose Scan to E-mail.
 - Press **OK**.

If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step **(6)**. If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step **(4)**.

4 Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK.

If your machine is DCP-9045CDN, go to step 6.

🖉 Note

If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L)edge or 2sided (S)edge depending on your document layout.

5 Press ▲ or ▼ to choose PC. Press OK.

6 Press ▲ or ▼ to choose the destination PC you want to use for E-mailing your document. Press OK.

If the LCD prompts you to enter a PIN number, enter the 4-digit PIN number for the destination PC on the control panel. Press **OK**.

7 Press Mono Start or Colour Start.

The machine starts the scanning process.

🖉 Note

- Scan type depends on the settings on the Device Button tab, Mono Start or Colour Start do not change the settings.
- If you want the scanned data in colour, choose colour in scan type on the **Device Button** tab of the ControlCenter3 configuration. If you want the scanned data in black and white, choose black and white in scan type on the **Device Button** tab of the ControlCenter3 configuration. (See SCAN on page 72.)

Scan to E-mail (E-mail Server, MFC-9840CDW only)

When you choose Scan to E-mail (E-mail Server) you can scan a black and white or colour document and send it directly to an E-mail address from the machine. You can choose PDF or TIFF for Black and White and PDF or JPEG for colour.

🖉 Note

Scan to E-mail (E-mail Server) requires SMTP/POP3 mail server support. (See *the Network User's Guide on the CD-ROM*.)

1 Put the document face up in the ADF, or face down on the scanner glass.

2 Press 🐼 (Scan).

3 Press ▲ or ▼ to choose Scan to E-mail. Press OK.

Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK.

🖉 Note

If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L)edge or 2sided (S)edge depending on your document layout.

5 Press ▲ or ▼ to choose your E-mail Server. Press OK. Go to Step ③ if you have set up only one E-mail server.
6 Press ▲ or ▼ to choose Change Setting. Press OK. If you don't have to change the quality, press ▲ or ▼ to choose Enter Address. Press OK and then go to Step ④.
7 Press ▲ or ▼ to choose Color 150 dpi, Color 300 dpi, Color 600 dpi, B&W 200 dpi or B&W 200x100 dpi. Press OK. If you choose Color 150 dpi, Color 300 dpi, Color 600 dpi, go to Step ⑤.
8 Press ▲ or ▼ to choose PDF or JPEG. Press OK and go to Step ⑤.
9 Press ▲ or ▼ to choose PDF or TIFF. Press OK and go to Step ⑥.

- 10 The LCD prompts you to enter an address. Enter the destination E-mail address from the dial pad or use the One-Touch key or Speed Dial number.
- 1 Press **Mono Start** or **Colour Start**. The machine starts the scanning process.

Using One-Touch or Speed-Dial number

You can also scan a document directly to an address you registered in a One-Touch or Speed-Dial number. When you scan the document, the settings you registered with the One-Touch or Speed-Dial will be used for the quality and the file type. Only One-Touch or Speed Dials with an E-mail address registered can be used when you scan data using One-Touch or Speed-Dial. (I-fax addresses are not available for use.)

1 Put the document face up in the ADF, or face down on the scanner glass.



3 Choose One-Touch or Speed-Dial number.

4 Press Mono Start or Colour Start.


The machine starts the scanning process.

Note

- Scan type depends on the settings, Mono Start or Colour Start do not change the settings.
- You can store the scan resolution (Scan Profile) for each E-mail address if you store the E-mail address in a One-Touch or Speed-Dial number. (See *Dialling and storing numbers in Chapter 8 of the User's Guide*.)


Scan to Image

When you choose Scan to Image, your document will be scanned and sent directly to the PC you designated on your network. ControlCenter3 will activate the default graphics application on the designated PC. You can change the Scan configuration. (See *Image (example: Microsoft[®] Paint)* on page 74.)

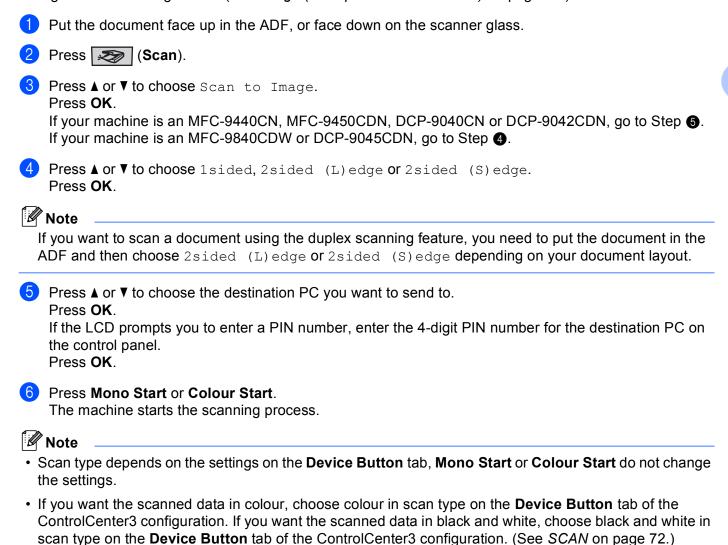

Scan to OCR


When you choose Scan to OCR, your document will be scanned and sent directly to the PC you designated on your network. ControlCenter3 will activate ScanSoft[™] PaperPort[™] 11SE and convert your document into text for viewing and editing from a word processing application on the designated PC. You can change the Scan configuration. (See OCR (Word Processing program) on page 76.)

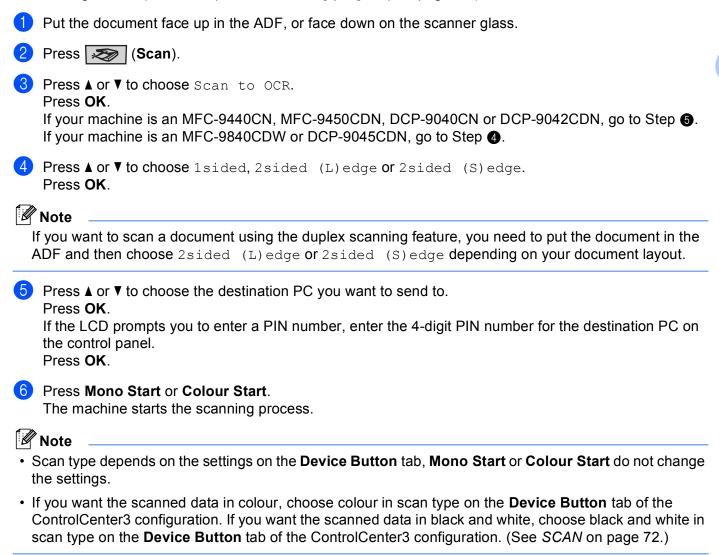

Scan to File

Device Button tab.

When you choose Scan to File, you can scan a black and white or colour document and send it directly to a PC you designate on your network. The file will be saved in the folder and file format that you have configured in ControlCenter3. You can change the Scan configuration. (See *File* on page 78.)

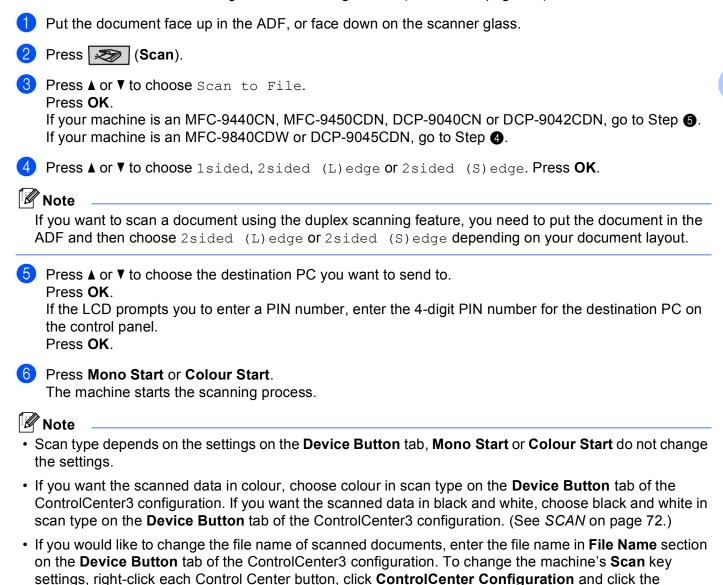

Scan to FTP

When you choose **Scan to FTP**, you can scan a black and white or colour document directly to an FTP server on your local network or on the internet.

The details required to use Scan to FTP can be entered manually at the control panel or by using Web Based Management to pre-configure and store the details in an FTP Profile.

For information on how to manually enter the Scan to FTP details, see *Scan to FTP Manual Method* on page 104. To use Web Based Management, type **http://xxx.xxx.xxx** (where xxx.xxx.xxx is the IP address of your machine) into your browser, and then you can configure or change the settings in the **Administrator Settings**. You can configure up to ten FTP server profiles.

In the balance of	Home Page	🗯 🗉 General Setup		
brother.	Maintenance Information		Brot	her Solutions Center
MFC- XXXX	 Lists/Reports Find Device 	 Copy Settings Printer Settings 		
	🛻 🗉 Administrator Settings	USB Direct L/F		
	Network Configuration			
	istrator Settings			
L Con	igure Passwood Web Settings to FTP			
Sc	an to FTP			
	Profile Name 1			
	Profile Name 2			
	Profile Name 3			
	Profile Name 4			
	Profile Name 5 Profile Name 6			
	Profile Name 7			
	Profile Name 8			
	Profile Name 9			
	Profile Name 10			
	Create a User Defined H	<u>file Name</u>		
	Default Passive Mode	OOff ⊙O	n	
	Default Port Number	21		
	Cancel	Submit		
			-	
brother.	= Home Page = Maintenance Informatio		a Bro	ther Solutions Center
brother.	 Maintenance Information Lists/Reports 	n = Fax Settings = Copy Settings	T2 Brot	ther Solutions Center
brother. MFC-XXXX	 Maintenance Information Lists/Reports Find Device Administrator Settings 	n 🛛 = Fax Settings	Prot	ther Solutions Center
	 Maintenance Information Lists/Reports Find Device 	n = Fax Settings = Copy Settings = Printer Settings	Brot	ther Solutions Center
MFC-XXXX	Maintenance Informatio: Lists/Reports Find Device Administrator Settings Administrator Settings Setwork Configuration	n = Fax Settings = Copy Settings = Printer Settings	Brot	ther Solutions Center
MFC- XXXX	Maintenance Informatio: Lists/Reports Find Device Administrator Settings Network Configuration	n = Fax Settings = Copy Settings = Printer Settings	Front Service	ther Solutions Center
MFC-XXXX	Maintenance Informatio Lists/Reports Find Device Administrator Settings Network Configuration	n = Fax Settings = Copy Settings = Printer Settings	Por de la constante de la cons	ther Solutions Center
MFC-XXXX Admin L. Cont Som	Maintenance Informatio Lists/Reports Find Device Administrator Settings Network Configuration	n = Fax Settings = Copy Settings = Printer Settings _ = USB Direct <i>UF</i>	2 -	ther Solutions Center
MFC-XXXX Admin L. Cont Som	Maintenance Informatio Maintenance Informatio Maintenance Informatio Find Device Prior Nettings Web Softings to FT Profile Name 7 Device Name 7 Profile Name Profile Name 7 Device Name 7	n = Fax Settings = Copy Settings = Printer Settings _ = USB Direct <i>UF</i>	2 -	ther Solutions Center
MFC-XXXX Admin L. Cont Som	Additionance Informatio Additionance Informatio Additional and the second	n = Fax Settings = Copy Settings = Printer Settings = USB Direct L/F ss 3 Profile Name 4 Profile Name	2 -	ther Solutions Center
MFC-xxxx Admin L. Som L.	Maintenance Informatio Maintenance Informatio Maintenance Informatio Find Device Pand Device Pand Device Network: Canfiguration	n = Fax Settings = Copy Settings = Printer Settings = USB Direct L/F ss 3 Profile Name 4 Profile Name	2 -	ther Solutions Center
MFC-xxxx Admin L. Con Som L.	Maintenance Informatio Maintenance Informatio Maintenance Informatio Find Device Prior Nethers Petrovick Configuration Information Petrovick Configuration Information Petrovick Configuration Petrovic	n = Fax Settings = Copy Settings = Printer Settings = USB Direct L/F ss 3 Profile Name 4 Profile Name	2 -	Her Solutions Center
MFC-xxxx Admin L. Som L.	Maintenance Informatio Maintenance Informatio Maintenance Informatio Find Device Pand Device Pand Device Network: Canfiguration	n = Fax Settings = Copy Settings = Printer Settings = USB Direct L/F ss 3 Profile Name 4 Profile Name	2 -	ner Saturfun Center
MFC-xxxx Admin L. Con Som L.	Maintenane Indormatio Maintenane Indormatio Maintenane Indormatio Maintenane Indormation Pind Device Pind Device Pind Device Network: Configuration Maintenane Network: Configuration Maintenane Network: Configuration Network: C	n = Fax Settings = Copy Settings = Printer Settings = USB Direct L/F ss 3 Profile Name 4 Profile Name	2 -	
MFC-xxxx Admin L. Som L.	Adatstenance Information Adatstenance Information Adatstenance Information Find Device Find Device Network: Configuration	n = Fax Settings = Copy Settings = Printer Settings = USB Direct L/F ss 3 Profile Name 4 Profile Name	2 -	
MFC-xxxx Admin L. Som L.	Adintenance Informatio Lists/Reports Find Device Find Device Returns: Configuration Hittrator Settlings Returns: Configuration Hittrator Settlings Returns: Configuration Hittrator Settlings Returns: Profile New 2 Profile New 2	n = Fax Settings = Copy Settings = Printer Settings = USB Direct L/F ss 3 Profile Name 4 Profile Name	2 -	
MFC-xxxx Admin L. Som L.	Maintenane Indornatio Maintenane Indornatio Maintenane Indornatio Maintenane Indornatio Pind Device Pind Device Network: Canfiguration astrator Settings parameter profite Name I Pende Name Host Address Password	n = Fax Settings = Copy Settings = Printer Settings = USB Direct L/F ss 3 Profile Name 4 Profile Name	2 -	the Solution Contor
MFC-xxxx Admin L. Som L.	Maintenance Information Maintenance Information Maintenance Information Maintenance Information Maintenance Information Maintenance Information Terr Profile Name I Profile Name Parties Profile Name I Prof	 Fac Settings Copy Settings Printer Settings Printer Settings INSE Direct LP 	2 -	ner Saufun Cunter
MFC-xxxx Admin L. Som L.	Adiatenance Information Additesports Find Device Find Device Adiational States Adiatingenetic States Adiatingenetic States Adiatingenetic State	n = Fax Settings = Copy Settings = Primer Settings = Hitler Settings = USE Direct UP = USE Direct UP	2 -	ner Stadyn Carter
MFC-xxxx Admin L. Som L.	Maintenane Indornatio Maintenane Indornatio Maintenane Indornatio Maintenane Indornatio Pind Device Pind Device Pind Device Pind Device Pind Neural Quality Cala	A Setting: Copy Setting: Copy Setting: Primer Setting: Primer Setting: Visiting: Setting:	2 -	iter Salafan Contor
MFC-xxxx Admin L. Som L.	Maintenane Indornatio Maintenane Indornatio Maintenane Indornatio Maintenane Indornatio Pind Device Pind Device Pind Device Pind Device Pind Neural Quality Cala	n = Fax Settings = Copy Settings = Primer Settings = Hitler Settings = USE Direct UP = USE Direct UP	2 -	The Southan Contor
MFC-xxxx Admin L. Som L.	Maintenane Indornatio Maintenane Indornatio Maintenane Indornatio Maintenane Indornatio Pind Device Pind Device Network: Configuration Maintenane Maintenane Pondie Neues 2 Pondie Neue Pondie Neues 2 Pondie Neues 2 Pondie Neue Pondie Neues 2 Pondie Neues 2 Pondie Neues Pondie Neues 2 Pondie Neues 2 Pondie Neues 2 Pondie Neues 2 Pondie Neues Pondie Neues 2 Pondie N	a) Fix Settings a) Copy Settings b) Primar Settings b) Primar Settings b) Status c) Status	2 -	The Source
MFC-xxxx Admin L. Som L.	Maintenance Indormation Maintenance Indormation Maintenance Indormation Maintenance Indone Maintenance Indone Maintenance Indone Maintenance Indone Maintenance Maintenan	A Straine Setting Copy Setting: Copy Setting: Primer Setting Primer Setting Setting: Setting:	2 -	ter Subfun conter
MFC-xxxx Admin L. Som L.	Maintenane Indornatio Maintenane Indornatio Maintenane Indornatio Maintenane Indornatio Pind Device Pind Device Network: Configuration Maintenane Maintenane Pondie Neues 2 Pondie Neue Pondie Neues 2 Pondie Neues 2 Pondie Neue Pondie Neues 2 Pondie Neues 2 Pondie Neues Pondie Neues 2 Pondie Neues 2 Pondie Neues 2 Pondie Neues 2 Pondie Neues Pondie Neues 2 Pondie N	A Straine Setting Copy Setting: Copy Setting: Primer Setting Primer Setting Setting: Setting:	2 -	Ter Soulyn Center
MFC-xxxx Admin L. Som L.	Maintenance Indormation Maintenance Indormation Maintenance Indormation Maintenance Indone Maintenance Indone Maintenance Indone Maintenance Indone Maintenance Maintenan	A Straine Setting Copy Setting: Copy Setting: Primer Setting Primer Setting Setting: Setting:	2 -	ner Stadyn Center
MFC-xxxx Admin L. Som L.	Maintenance Indormation Maintenance Indormation Maintenance Indormation Maintenance Indormation Maintenance Indonesia Maintenance Mai	RNA2000 V Off On	2 -	The Sandyn Contor
MFC-xxxx Admin L. Som L.	Maintenance Indormation Maintenance Indormation Maintenance Indormation Maintenance Indone Maintenance Indone Maintenance Indone Maintenance Indone Maintenance Maintenan	A Straine Setting Copy Setting: Copy Setting: Primer Setting Primer Setting Setting: Setting:	2 -	Ter Soulun Carter
MFC-xxxx Admin L. Som L.	Maintenance Indormation Maintenance Indormation Maintenance Indormation Maintenance Indormation Maintenance Indonesia Maintenance Mai	RNA2000 V Off On	2 -	The Source
MFC-xxxx Admin L. Som L.	Maintenance Indormation Maintenance Indormation Maintenance Indormation Maintenance Indormation Maintenance Indonesia Maintenance Mai	RNA2000 V Off On	2 -	The Saufyer Control

- 1 Enter the name that you want to use for the profile of the FTP server. This name will be displayed on the LCD of the machine and can be up to 15 characters.
- 2 The Host Address is the domain name of the FTP server. Enter the Host Address (for example ftp.example.com) (up to 60 characters) or the IP address (for example 192.23.56.189).
- 3 Enter the Username that has been registered with the FTP server for the machine (up to 32 characters).
- 4 Enter the Password for access to the FTP server (up to 32 characters).
- 5 Enter the destination folder where your document will be stored on the FTP server (for example /brother/abc/) (up to 60 characters).
- 6 Choose the file name you want to use for the scanned document. You can choose from seven present and two user defined File Names. The file name that will be used for your document will be the file name you selected plus the last 6 digits of the flatbed/ADF scanner counter plus the file extension (For example, Estimate098765.pdf). You can also manually enter a File Name up to 15 characters.
- Choose the scan quality from the drop-down list. You can choose Color 150, Color 300, Color 600, B&W 200 or B&W 200x100.
- 8 Choose the file type for the document from the drop-down list. You can choose PDF or JPEG for colour documents and PDF or TIFF for B/W document.
- 9 You can set Passive Mode to OFF or ON depending on your FTP server and network firewall configuration. By default this setting is ON. You can also change the port number used to access the FTP server. The default for this setting is port 21. In most cases these two settings can remain as default.

Creating a user defined File Name

In addition to the seven present file names you can store two user defined file names that can be used for creating an FTP Server Profile.

1 From the Scan to FTP screen in Web Based Management, choose **Create a User Defined File Name**.



2 Enter a file name in one of the two user defined fields and click **Submit**. A maximum of 15 characters can be entered in each of the user defined name fields.

brothe MFC·XXXX	= Hame Page ■ General Setup = Maintenance Information = Fas Settings = Lists Kipants = Ordy Settings ■ Device = Printer Settings ■ Naministrators Settings = USB Direct LF
Å	dministrator Settings Confeen Fauword Web Setting Sense 1977 Frottile Name 1 Profile Name 2 Profile Name 4 Profile Name 5 Profile Name 10 Create a User Defined Name 7 Profile Name 10 Profile Name 10 Create a User Defined Name 7
	Create a User Defined File Name 1. BEN DOOC 2. Etimate 3. Report 4. Order thent 5. Contract theet 6. Check 7. Recipt 8. 9.
	Cancel Submit

Sca	an to FTP using FTP Server Profiles
1	Put the document face up in the ADF, or face down on the scanner glass.
2	Press (Scan).
3	Press ▲ or ▼ to choose Scan to FTP. Press OK. If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step ⑤. If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step ④.
4	Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK to begin the scanning process.
	Note
	f you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L) edge or 2sided (S) edge depending on your document layout.
5	Press ▲ or ▼ to choose one of the FTP server profiles listed. Press OK.
	■ If the Scan to FTP profile is complete, you will automatically go to Step ①.
	If the Scan to FTP profile is not complete, for instance, the login account name and password are missing or the quality or file type are not chosen, you will be prompted to enter any missing information in the following steps.
6	Choose one of the options below:
	■ Press ▲ or ▼ to choose Color 150 dpi, Color 300 dpi or Color 600 dpi. Press OK and go to Step ⑦.
	■ Press A or V to choose B&W 200 dpi or B&W 200x100 dpi. Press OK and go to Step ③.
7	Press ▲ or ▼ to choose PDF or JPEG. Press OK and go to Step ④.
8	Press ▲ or ▼ to choose PDF or TIFF. Press OK.
9	Use the dial pad to enter the username. Press OK .
10	Use the dial pad to enter the password. Press OK .
1	Do one of the following:
	If you want to start scanning, press Mono Start or Colour Start and go to Step 1.
	If you want to change the file name, go to Step
12	Press ▲ or ▼ to choose a file name you want to use and press OK. Press Mono Start or Colour Start and go to Step .
	Note f you want to change the file name manually, go to step ® .

103

13 Press ▲ or ▼ to choose <manual>. Press OK.</manual>		
Enter the file name you want to use (up to 15 characters) and press OK . Press Mono Start or Colour Start .		
The LCD shows Connecting. When the connection to the FTP server is successful the machine starts the scanning process.		
Scan type depends on the settings, Mono Start or Colour Start do not change the settings.		
Scan to FTP Manual Method		
1 Put the document face up in the ADF, or face down on the scanner glass.		
2 Press 😥 (Scan).		
3 Press ▲ or ▼ to choose Scan to FTP. Press OK. If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step ⑤. If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step ④.		
4 Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK.		
Note		
If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L)edge or 2sided (S)edge depending on your document layout.		
5 Press ▲ or V to choose <manual>. Press OK.</manual>		
Vote		
If there is no FTP Profile configured, skip Step 6 and go to Step 6.		
6 Use the dial pad to enter the FTP host address (for example ftp.example.com' Up to 60 characters) or the IP address (for example 192.23.56.189). Press OK.		
7 Use the dial pad to enter the destination folder (for example /brother/abc/, up to 60 characters).		
Press OK .		
Press OK. 8 Press ▲ or ▼ to choose Enter Username or Change Setting. Press OK. If you choose Enter Username, go to Step ⑫. If you choose Change Setting, go to Step ⑨.		
8 Press ▲ or ▼ to choose Enter Username or Change Setting. Press OK. If you choose Enter Username, go to Step ⑫. If you choose Change Setting, go to Step ⑨.		
8 Press ▲ or ▼ to choose Enter Username or Change Setting. Press OK. If you choose Enter Username, go to Step ⑫. If you choose Change Setting, go to Step ⑬.		

- 10 Press ▲ or ▼ to choose PDF or JPEG. Press OK and go to Step (2).
- 1 Press ▲ or ▼ to choose PDF or TIFF. Press OK.
- 12 Use the dial pad to enter the username. Press **OK**.
- Use the dial pad to enter the password. Press **OK**.
- 14 Do one of the following:
 - If you want to start scanning, press **Mono Start** or **Colour Start** and go to Step **①**.
 - If you want to change the file name, go to Step ().
- 15 Press ▲ or ▼ to choose a file name you want to use and press OK. Press Mono Start or Colour Start and go to Step
- Note

If you want to change the file name manually, go to step (6).

- Press ▲ or ▼ to choose <Manual>. Press OK. Enter the file name you want to use (up to 15 characters) and press OK. Press Mono Start or Colour Start.
- 17 The LCD shows Connecting. When the connection to the FTP server is successful the machine starts the scanning process.
- **Note**
- If a timeout or any other error occurs, start the Scan to FTP process again from the beginning ①. If the username is entered incorrectly then the LCD will show Authenticate Err, please start the process again from the beginning ①.
- Scan type depends on the settings, Mono Start or Colour Start do not change the settings.

5

Remote Setup (MFC models only)

Remote Setup

The Remote Setup program lets you configure many machine settings from a Windows[®] application. When you start this application, the settings on your machine will be downloaded automatically to your PC and displayed on your PC screen. If you change the settings, you can upload them directly to the machine.

Click the Start button, All Programs, Brother, MFC-XXXX (or MFC-XXXX LAN), and Remote Setup.

- If your machine is connected via a Network, you have to enter your password.
- The default password is "access". You can use BRAdmin Light or Web Based Management to change this password (See the *Network Users Guide* for details).

署 Brother MFC Remote Setu	p Program - MFC- XXXX		
B-MFC-XXXX	<u>General Setup</u>		
General Setup Fax	Mode Timer	2 Mins	
- Setup Receive - Setup Send	Paper Type		
- Set Quick-Dial - Report Setting	Tray#1	Plain •	
- Remote Fax Opt	MP Tray		
- Copy Printer	Paper Size	,	
USB Direct I/F Direct Print	Tray#1	Letter	
- Scan to USB	MP Tray		
⊡ PictBridge ⊡-LAN	Volume		
- TCP/IP - Scan to FTP		Med - Beeper ()	ff 🔻
- Initial Setup	Speaker		
	Auto Daylight	⊡Med <u>▼</u> ⊂On ©Off	
	Ecology	Un • Ult	
	Toner Save		
	Sleep Time	5	
	Tray Use		
		Fax T	1>MP ▼
	Print	MP>T1	
1			
Export Print	Import	OK Cancel Apply	

OK

Lets you start uploading data to the machine and exit the Remote Setup application. If an error message is displayed, enter the correct data again and then click **OK**.

Cancel

Lets you exit the Remote Setup application without uploading data to the machine.

Apply

Lets you upload data to the machine without exiting the Remote Setup application.

Print

Lets you print the chosen items on the machine. You cannot print the data until it is uploaded to the machine. Click **Apply** to upload the new data to the machine and then click **Print**.

Export

Lets you save the current configuration settings to a file.

Import

Lets you read the settings from a file.

- 🖉 Note
- You can use the **Export** and **Import** buttons to save several sets of settings for your machine.
- To save all your settings, highlight **MFC-XXXX** at the top of the settings list then click **Export**.
- To save a single setting or a group of settings, highlight each setting or function heading (for example, to choose all fax settings highlight **Fax**) from the setting list then click **Export**.
- If you are using a different machine to the one that was originally registered to your PC during the installation of MFL-Pro Suite (see *the Quick Setup Guide*), you need to specify the new machine. Open the properties of the Remote Setup Program and choose the new machine. To open the **Properties** of Remote Setup Program, click the **Start** button, **All Programs**, **Brother**, **MFC-XXXX**, and **Remote Setup**.
- If your PC is protected by a firewall, and is unable to use **Remote Setup**, you may need to configure the firewall settings to allow communication through port number 137. See *Firewall settings (For Network users)* on page 125.

6

Brother PC-FAX Software (MFC models only)

PC-FAX sending

The Brother PC-FAX feature lets you to use your PC to send a document from an application as a standard fax. You can even attach a cover page. All you have to do is set up the receiving parties as members or groups in your PC-FAX Address Book or simply enter the destination address or fax number into the user interface. You can use the Address Book Search feature to quickly find members to send to.

For the latest information and updates on the Brother PC-FAX feature, visit http://solutions.brother.com.

🖉 Note

- If you are using Windows[®] 2000 Professional, Windows[®] XP and Windows Vista[®] you must log on with Administrator rights.
- The PC-FAX software can only send Black & White fax documents.
- If your PC is protected by a firewall and is unable to use PC-FAX send, you may need to configure the firewall settings to allow communication through port number 54926 and 137. See *Firewall settings (For Network users)* on page 125.

Setting up user information

🖉 Note

You can access User Information from the FAX Sending dialog box by clicking the

(See Sending a file as a PC-FAX using the Facsimile style user interface on page 111.)

Click the Start button, All Programs, Brother, MFC-XXXX (where XXXX is your model name), PC-FAX Sending, then PC-FAX Setup.

The Brother PC-FAX Setup dialog box appears:


🖗 Brother PC-FAX	Setup 🔀
User Information Ser	nding Address Book Speed Dial (Facsimile style only)
<u>N</u> ame:	
<u>C</u> ompany:	
Department:	
Phone Number:	
Eax Number:	
<u>E</u> -mail:	
Address <u>1</u> :	
Address <u>2</u> :	
	OK Cancel

icon.

2 Enter this information to create the fax header and cover page.

🖉 Note

 You must enter **Name** and **Fax Number** information to meet the Telephone Consumer Protection Act of 1991 requirements.

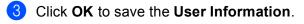

🖉 Note

You can set up the **User Information** separately for each Windows[®] account.

Sending setup

From the **Brother PC-FAX Setup** dialog box, click the **Sending** tab to display the screen below.

🖗 Brother PC-FAX Set	ир		×
User Information Sending	Address Book	Speed Dial (Facsimile style only)	
Dial Setting			
Outside line access:			
Header		Network PC-FAX	
Include header		☐ <u>E</u> nable	
User interface			-
C Simple style			
Eacsimile style			
		OK Canc	el

Outside line access

Enter a number to access an outside line here. This is sometimes required by local PBX telephone systems (for example, dialling 9 to get an outside line in your office). For PC-Fax send, this number will be applied and Dial Prefix set in the function menu will be ignored.

Include header

To add the header information you entered in the User Information tab to the top of your sent faxes, check the **Include header** box. See *Setting up user information* on page 108.

User interface

Choose the user interface from two choices: Simple style or Facsimile style.



Facsimile style



Setting up a cover page

From the PC-FAX dialog box, click the 📋 icon to access the PC-Fax Cover Page setup screen.

The Brother PC-FAX Cover Page Setup dialog box appears:

Brother PC-FA	X Cover Page Setup	X
To		Comment
✓ Name :	Taro Nagoya	
Department :	Sales	
Company :	Brother International Corp	
From		Clear
Name :	John Doe	Form
IEL :	123-456-789	Layout Type 1
✓ FA≚:	987-654-321	Cover page title
🗹 E-Majil :	abc@def.ghi	Default cover page title
Department :	Marketing	No cover page title
Company :	Brother Industries, LTD	O Custom
Address <u>1</u> :	123 Rose Hill Drive	COVER01.BMP Browse
Address2 :	Potsville, NJ 088	Alignment Left 👻
	Defaylt	Count cover page
		Preview OK Cancel

Entering cover page information

🖉 Note

If you are sending a fax to more than one recipient, the recipient information will not be printed on the cover page.

🔳 То

Choose the recipient information you want to add to the cover page.

From

Choose the sender information you want to add to the cover page.

Comment

Enter the comment you want to add to the cover page.

Form

Choose the cover page format you want to use.

Cover page title

If you choose **Custom**, you can put a bitmap file, such as your company logo, on the cover page.

Use the browse button to choose the BMP file, and then choose the alignment style.

Count cover page

Check **Count cover page** to include the cover page in the page numbering.

Sending a file as a PC-FAX using the Facsimile style user interface

- 1 Create a file in any application on your PC.
- 2 Click File, then Print. The Print dialog box appears:

💩 Print	2 🗵
General Select Printer Add Printer Brother MFC-XXXX USB Printer Brother PC-FAX	erPort Color erPort
Status: Ready Location: Comment:	Print to file Preferences
Page Range	Number of gopies: 1
E	rint Cancel Apply

Choose **Brother PC-FAX** as your printer, and then click **Print**. The Facsimile style user interface appears:


brothe	Cover Page On (2)
	1 2 3 5peed Dial 1 2 3 4 5 4 5 6 7 8 9 10 7 8 9 10 Pause (.) Redial (R) 7 8 9 Clear (L) Address Book (1) * 0 # \$stop (X) \$start (0)

Note

If the Simple style user interface appears, change the user interface selection setting. (See *Sending setup* on page 109.)

- 4 Enter a fax number using any of the following methods:
 - Use the dial pad to enter the number.
 - Click any of the 10 **Speed-Dial** buttons.
 - Click the Address Book button, and then choose a member or group from the Address Book.

 If you make a mistake, click **Clear** to delete all the entries.

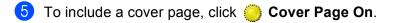

```
🖉 Note
```

You can also click the cover page 🔄 icon to create or edit a cover page.

6 Click Start to send the fax.

🖉 Note

- If you want to cancel the fax, click **Stop**.
- If you want to redial a number, click **Redial** to scroll through the last five fax numbers, choose a number, and then click **Start**.

Sending a file as a PC-FAX using the Simple style user interface

- 1 Create a file in any application on your PC.
- Click File, then Print.

The **Print** dialog box appears:

Print	?
General	
Select Printer	erPort Color erPort
Status: Ready Location: Comment:	Print to file Preferences
Page Range	Number of <u>c</u> opies: 1
Selection Current Page Pages: 1-65535 Enter either a single page number or a single	
page range. For example, 5-12	int Cancel Apply

Choose **Brother PC-FAX** as your printer, and then click **Print**. The Simple style user interface appears:

😤 Brother PC-FAX	
<u>⊸</u> <u>⊸</u>	P
✓ Cover gage On	2
<u>T</u> o:	
Clear	

🖉 Note

If the Facsimile style user interface appears, change the user interface selection setting. (See *Sending setup* on page 109.)

4 Enter the fax number using any of the following methods:

- Enter the fax number in the **To:** field.
- Click the **To:** button, and then choose destination fax numbers from the Address Book.

If you make a mistake, click **Clear** to delete all the entries.

5 To send a cover page and note, check **Cover Page On**.

Note
You can also click the 📴 icon to create or edit a cover page.
6 Click the send icon.
Note
If you want to cancel the fax, click the cancel 🤹 icon.

Address Book

If Outlook or Outlook Express is installed on your PC, you can choose in the **Address Book** tab which address book to use for PC-FAX sending. There are four types: Brother Address Book, Outlook, Outlook Express or Windows Mail Address.

For the address book file, you must enter the path and file name of the database file which contains the address book information.

Click the **Browse** button to choose the database file.

Brother PC-FAX Setu	ıp			
User Information Sending	Address Book	Speed Dia	I (Facsimile s	tyle only)
Select Address Book				
Brother PC-FAX Address	s Book		•	
Addressbook file				
E:\Program Files\Brothe	r\Brmfl06a\Addr	ess.ba2		Browse
Dialing rules				
🔟 🖳 🖉 Windows dialing	g rules			S <u>e</u> tup
			OK	Cancel

If you choose Outlook or Outlook Express, you can use the Outlook, Outlook Express Address Book (for Windows[®] 2000/XP) or Windows Mail Address (for Windows Vista[®]) by clicking the **Address Book** button in the FAX Sending dialog box.

Address Book		? 🗙
Type name or select from list: Find.		
Shared Contacts	 Message Recipients: 	
Name V E-Mai Tol Micheal Evans Tol Johe Smith		>
New Contact Properties	Cancel	>


Outlook Express Address Book

🖉 Note

To use your Outlook Address Book, you must select Microsoft[®] Outlook 2000, 2002, 2003 or 2007 as your default E-mail application.

Brother Address Book

Click the Start button, All Programs, Brother, MFC-XXXX or MFC-XXXX LAN (where XXXX is your model name), PC-FAX sending, then PC-FAX Address Book. The Brother Address Book dialog box appears:

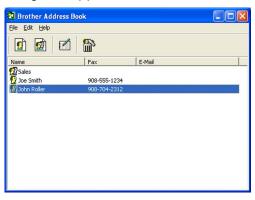

Setting up a member in the Address Book

In the Brother Address Book dialog box you can add, edit and delete members and groups.

In the Address Book dialog box, click the 1 icon to add a member. The Brother Address Book Member Setup dialog box appears:

Brother Address B	ook Member Setup		
<u>N</u> ame: <u>ष</u>	Joe Smith	<u>T</u> itle:	Mr.
C <u>o</u> mpany:	Brother International Co	op.	
<u>D</u> epartment:	Sales	Job Title:	Sales Rep.
Street Address:	100 Some Street		
<u>C</u> ity:		State/Pro <u>v</u> ince:	N.J.
Zip Code/Post Code:	08807	Country/ <u>R</u> egion:	USA
<u>B</u> usiness Phone:	908-555-1234	<u>H</u> ome Phone:	
<u>F</u> ax:	908-555-1234	Mobile <u>P</u> hone:	
<u>E</u> -Mail:	jpe.smith@*****.com		
		ОК	Cancel

In the Member Setup dialog box, enter the member's information. Name is a required field. Click OK to save the information.

Speed Dial setup

Address <u>B</u> ook			<u>S</u> peed	Dial	
Name	Fax	1	No.	Name	Fax
1999 Sales 1999 Joe Smith 1999 Johe Roller	908-555-1234 908-704-2310	»	1 2 3 4 5 6 7 8 9 10	Johe Roller Joe Smith Sales	908-704-2 908-555-1
<	d >>		<	Clear	

From the **Brother PC-FAX Setup** dialog box, click the **Speed Dial** tab. (To use this feature, you must choose the **Facsimile style** user interface.)

You can register a member or group on each of the ten Speed Dial buttons.

Registering an address in a Speed Dial button

- 1 Click the **Speed Dial** button you want to program.
- 2 Click the member or group you want to store on the **Speed Dial** button.
- Click Add >>.

Clearing a Speed Dial button

- Click the Speed Dial button you want to clear.
- 2 Click Clear.
- Note

You can select a speed dial from the PC-FAX interface to make sending a document easier & faster.



Setting up a group for broadcasting

You can create a group to send the same PC-FAX to several recipients at one time.

1 In the **Brother Address Book** dialog box, click the **mathefred** icon to create a Group. The **Brother Address Book Group Setup** dialog box appears:

Brother Address Book Gr	oup	Setup	
Group <u>N</u> ame		Sales	_
Available Names		Group Members	
		John Roller Joe Smith	
		»	
			_
<u>A</u> dd >>	_	<< <u>R</u> emove	
		OK Canc	el

- 2 Enter the name of the new group in the **Group Name** field.
- In the Available Names box, choose each member to be included in the group, and then click Add >>. Members added to the group appear in the Group Members box.

4 After all the members you want have been added, click OK.

🖉 Note

You can have up to 50 members in a group.

Editing member information

- 1 Choose the member or group you want to edit.
- 2 Click the edit 📝 icon.
- 3 Change the member or group information.
- 4 Click **OK**.

Deleting a member or group


- Choose the member or group you want to delete.
- 3 When the confirmation dialog box appears, click **OK**.

Exporting the Address Book


You can export the whole Address Book to an ASCII text file (*.csv). You can also create a vCard for an address book member that can be attached to an outgoing E-mail. (A vCard is an electronic business card that contains the sender's contact information.) If you are creating a vCard, you must first click on the address book member you want to create the vCard for.

Exporting Address Book entries

اا	Note
1	Do one of the following:
	From the Address Book, click File, Export, then Text.
	■ Click Vcard and go to ⑤.
2	From the Available Items column, choose the data fields you want to export and then click Add >> .
	Note
C	Choose the items in the order you want them listed.
3	If you are exporting to an ASCII file, choose Tab or Comma from Divide Character . This chooses Tab or Comma to separate the data fields.
4	Click OK to save the data.
	Select Items

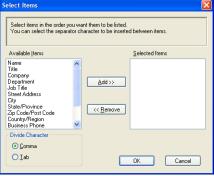

5 Enter the name of the file, and then click **Save**.

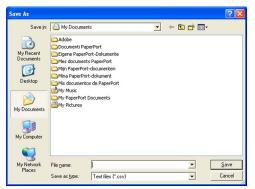

Importing to the Address Book

You can import ASCII text files (*.csv) or vCards (electronic business cards) into your Address Book.

Importing an ASCII text file



- Do one of the following:
 - From the Address Book, click **File**, **Import**, then **Text**.
 - Click Vcard and go to 6.


Import text file.	vailable Items list in the same order they are listed in the tor character used in the Import text file.
Available <u>I</u> tems	Selected Items
Name Title Company Depatment Job Title Street Address City State/Province Zip Code/Post Code Country/Region Business Phone	▲dd>>> ≪ <u>B</u> emove
Divide Character	
⊙ <u>C</u> omma	
OIab	OK Cancel

From the Available Items column, choose the data fields you want to import, and click Add >>.

🖉 Note

From the Available Items list choose the fields in the same order they are listed in the import text file.

- 3 Choose **Tab** or **Comma** based on the file format you are importing from **Divide Character**.
- 4 Click **OK** to import the data.
- Enter the name of the file, and then click **Open**.

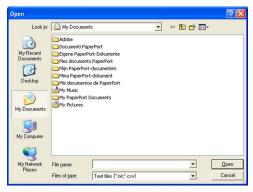

🖉 Note

If you chose a text file in (), Files of type: will be Text file (*.csv).

PC-FAX receiving

Note

- The PC-FAX software can only receive Black & White fax documents.
- To use PC-FAX receiving with a Windows[®] XP / Windows Vista[®] computer that is protected by a firewall, the Network PC-FAX receiving program must be excluded from the firewall setting. See *Troubleshooting and Routine Maintenance* of the User's Guide or visit the Brother Solutions Center (<u>http://solutions.brother.com</u>) for more information.
- If your PC is protected by a firewall and is unable to use PC-FAX receive, you may need to configure the firewall settings to allow communication through port number 54926 and 137. See *Before using the Brother software* on page 125.

Depending on the operating system you are using, you may get a Security Alert message when you start the PC-FAX receiving feature. To enable PC-FAX receiving, you must unblock the program.



The Brother PC-FAX Receive Software lets you view and store faxes on your PC. It is automatically installed when you install the MFL-Pro Suite and works on locally or network connected machines.

When enabled, your machine will receive faxes in its memory. Once it has received the fax, it will automatically be sent to your PC.

If you turn your PC off, your machine will continue to receive and store your faxes in its memory. The machine LCD will display the number of stored faxes received, for example:

PC Fax Msg:001

10 🖻

When you switch your PC on, the PC-FAX Receive Software automatically transfers your faxes to your PC.

To enable the PC-FAX Receive Software, do the following:

- Before you use the PC-FAX Receive function, you must choose PC-FAX Receive from the menu on the machine.
- Run the Brother PC-FAX Receive software on your PC. (We recommend you select the Add to Startup folder check box, so that the software automatically runs and can transfer any faxes on PC startup.)

Enabling PC-FAX on your machine

In addition to enabling PC-FAX, you can optionally enable the Backup Print option. When enabled, the machine will print a copy of the fax before the fax is sent to the PC or the PC is switched off.

1	Press Menu, 2, 5, 1.
2	Press ▲ or V to choose PC Fax Receive. Press OK.
3	Press ▲ or ▼ to choose <usb> or your PC name if connected on a network. Press OK.</usb>
4	<pre>Press ▲ or V to choose Backup Print:On or Backup Print:Off. Press OK.</pre>
5	Press Stop/Exit.
	Note
fa v n	f you choose Backup Print:On, the machine will print the fax, so you will have a copy if there is a power ailure before it is sent to the PC. The fax messages are automatically erased from your machine's memory when they have been successfully printed and sent to your PC. When Backup Print is off, your fax messages are automatically erased from your machine's memory when they have been successfully sent your PC.

Running the PC-FAX Receiving software on your PC

Click the Start button, All Programs, Brother, MFC-XXXX or MFC-XXXX LAN, PC-FAX Receiving and Receive.

The PC-FAX icon appears in your PC tasktray.

🤇 🔚 🖻 🗐 💭 🚺 11:10 AM

Setting up your PC

1 Right-click the PC-FAX CEBERRY icon on your PC tasktray, and then click PC-Fax RX Setup. The PC-Fax RX Setup dialog box appears:

P	C-Fax RX Se	tup	×
			_
	Save file to	C:\Program Files\Brother\Brmfl04a\ Browse	
	File Format	⊂ .max ● .tif	
	🗌 Play wav	e file when receiving FAX	
	Wave File	Browse	
	Add to St	artup folder	
		Network Settings	
		Cancel	

- 2 In Save file to, click the Browse button if you want to change the path where PC-FAX files are saved.
- 3 In File Format, choose .tif or .max as the received document format. The default format is .tif.
- 4 To play wave files (.wav sound files) when receiving a fax, check **Play wave file when receiving FAX**, and enter the path of the wave file.
- 5 To automatically start the PC-FAX receiving software when you start Windows[®], check **Add to Startup folder**.
- 6 If you want to use the PC-FAX Receiving software, see *Configuring the Network PC-FAX Receiving Settings* on page 123.

Configuring the Network PC-FAX Receiving Settings

The settings to send received faxes to your computer were automatically configured during the installation of MFL-Pro Suite (See *the Quick Setup Guide*).

If you are using a different machine than the one that was registered to your PC during the installation of the MFL-Pro Suite software, follow the steps below.

In the PC-FAX RX Setup dialogue box, click the Network Settings button. The Network Settings dialog box appears.

2 You must specify the IP address or Node name of your machine.

ľ	Network Settings		×
	C Specify your machine by address		
	IP Address		
	• Specify your machine by name		
	Node Name BRN_XXXXXX	Browse	
			1
	Display Your PC Name (Max 15 charactors)		
)xxxxx	-	
	,		
	OK	Cance	

Specify your machine by address

Enter the IP address of the machine in IP Address.

Specify your machine by Node name

Enter the machine node name in **Node Name**, or click the **Browse** button and choose the correct Brother machine you want to use from the list.

Node Name	IP Address	Model Name	Node Type	MAC Address
BRN_XXXXXXX	301.3001.301.3001	MFC-XXXX	NC-XXXX	10121012101210121012101

Specify your PC name

You can specify the PC name that will appear on the display of the machine. To change the name, enter the new name in **Display Your PC Name**.

Viewing new PC-FAX messages

Each time your PC is receiving a PC-FAX, the icon will alternate between 🗾 and 🚬. Once the fax has
been received, the icon will change to 🚑. The 🚑 icon will change to 🚑 once the received fax has been viewed.
1 Run PaperPort™.
2 Open the Fax Received folder.
3 Double-click any new faxes to open and view them.
Note
The name title of your unread PC message will be based on the date and time that the messages were received until you assign a file name. For example 'Fax 2-20-2006 16;40;21.tif'.

Before using the Brother software

Windows[®] Firewall settings on your PC may reject the necessary network connection for network printing, network scanning and PC Fax. If you are using any other personal Firewall software, see the *User's Guide* for your software or contact the software manufacturer.

UDP Port number information for Firewall configuration

UDP Port	Network Scanning	Network PC-Fax	Network Scanning and Network PC-Fax ¹
External Port number	54925	54926	137
Internal Port number	54925	54926	137

¹ Add Port number 137 if you still have trouble with your network connection after you added port 54925 and 54926. Port number 137 also supports printing and Remote Setup over the network.

For Windows[®] XP SP2 users

Click the Start button, Control Panel, Network and Internet Connection and then Windows Firewall. Make sure that Windows Firewall on the General tab is set to On.

2 Click the **Advanced** tab and **Settings...** button.

indows Firewall	×
eral Exceptions Advanced	
Vetwork Connection Settings	
Windows Firewall is enabled for the <u>c</u> onnections selected below. To add exceptions for an individual connection, select it, and then click Settings:	
Local Area Connection Settings	
Security Logging	51
You can create a log file for troubleshooting purposes. Settings	
CMP	
with Internet Control Message Protocol (ICMP), the Settings computers on a network can share error and status nformation.	ן
Default Settings	
To restore all Windows Firewall settings to a default state, Bestore Defaults	5
aick nestore peraduits.	
OK Cano	el



4 Add port **54925** for network scanning by entering the information below:

- 1 In Description of service: Enter any description, for example "Brother Scanner".
- 2 In Name or IP address (for example 192.168.0.12) of the computer hosting this service on your network: Enter "Localhost".
- 3 In External Port number for this service: Enter "54925".

- 4 In Internal Port number for this service: Enter "54925".
- 5 Make sure **UDP** is selected.
- 6 Click OK.

Service Settings	? 🗙
Description of service:	
1	
Name or IP address (for example 192.168.0.12) of the computer hosting this service on your network:	
2	
External Port number for this service: 5	,
Internal Port number for this service:	
4	
OK Cano	:el

- 5 Click the Add button.
- 6 Add port **54926** for Network PC-Fax by entering the information below:
 - 1 In **Description of service**: Enter any description, for example "Brother PC-Fax".
 - 2 In Name or IP address (for example 192.168.0.12) of the computer hosting this service on your network: Enter "Localhost".
 - 3 In External Port number for this service: Enter "54926".
 - 4 In Internal Port number for this service: Enter "54926".
 - 5 Make sure **UDP** is selected.
 - 6 Click OK.


7 If you still have trouble with your network connection, click the Add button.

8 Add port **137** for network scanning, network printing and Network PC-Fax receiving by entering the information below:

- 1 In Description of service: Enter any description, for example "Brother Network Print".
- 2 In Name or IP address (for example 192.168.0.12) of the computer hosting this service on your network: Enter "Localhost".
- 3 In External Port number for this service: Enter "137".
- 4 In Internal Port number for this service: Enter "137".
- 5 Make sure **UDP** is selected.
- 6 Click OK.
- 9 Make sure that the new setting is added and is checked, and then click **OK**.

For Windows Vista[®] users


- Click of button, Control Panel, Network and Internet, Windows Firewall and click Change settings.
 - When the User Account Control screen appears, do the following.
 - Users who have administrator rights: Click Continue.

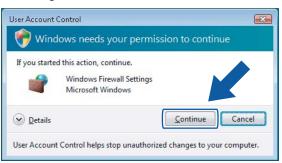

For users who do not have administrator rights: Enter the administrator password and click **OK**.



- 3 Make sure that **Windows Firewall** on the **General** tab is set to On.
 - Click the **Exceptions** tab.

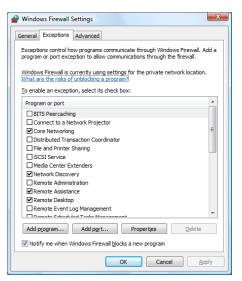

5 Click the **Add port...** button.

6 To add port **54925** for network scanning, enter the information below:

- 1 In Name: Enter any description, for example "Brother Scanner".
- 2 In Port number: Enter "54925".
- 3 Make sure **UDP** is selected.

Then, click OK.

Add a Port	×
port numbe	settings to open a port through Windows Firewall. To find the r and protocol, consult the documentation for the program or want to use.
<u>N</u> ame:	
Port numbe	r:②
Protocol:	© ICÞ
	3 • UDP
What are the	e risks of opening a port?
Change sco	OK Cancel

7 Click the Add port... button.

8 To add port **54926** for Network PC-Fax, enter the information below:

- 1 In Name: Enter any description, for example "Brother PC-Fax".
- 2 In Port number: Enter "54926".
- 3 Make sure **UDP** is selected.

Then, click **OK**.

9 Make sure that the new setting is added and is checked, and then click **OK**.

If you still have trouble with your network connection such as Network Scanning or Printing, check File and Printer Sharing box in the Exceptions tab and then click OK.

Windo	ws Firewall S	ettings	×
General	Exceptions	Advanced	
		w programs communicate through Windows Firewall. ption to allow communications through the firewall.	Add a
		urrently using settings for the private network location unblocking a program?	ı.
<u>T</u> o enab	ole an excepti	on, select its check box:	
Progra	am or port		
BI	TS Peercachin	9	
	nnect to a Ne	twork Projector	
✓ Co	re Networking		=
			<u> </u>
	e and Printer !	Sharing	
	ST SELVICE		_
	dia Center Ex		
	twork Discove		
	mote Adminis		
	mote Assistar		
	mote Desktop		
		og Management	-
	moto Cehadul	nd Taska Management	
	rogram	Add port Provert Delete	
🔽 Noti	fy me when W	findows Firewall blocks a n	
		OK Cancel Ar	pply

Section II



Apple[®] Macintosh[®]

Printing and Faxing	130
Scanning	164
ControlCenter2	180
Network Scanning	196
Remote Setup	210

Printing and Faxing

Printer operation key


Job Cancel

To cancel the current print job, press **Job Cancel**. If the Data LED turns Yellow, there is data in the printer's memory. You can clear the data that is left in the memory by pressing **Job Cancel**.



Secure Key

Secured data is password protected. Only those people who know the password will be able to print the data. The machine will not print secure data until the password is entered. After the document is printed, the data will be cleared from the memory. To use this function, you need to set your password in the printer driver dialog box.

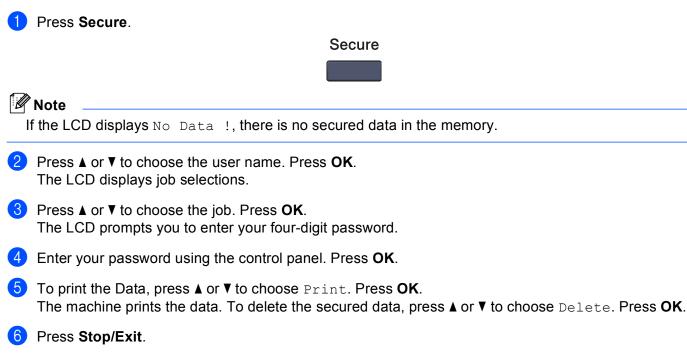

Printer Emulation Support

Your machine will receive print commands in a printer job language or emulation. Different operating systems and applications will send the print commands in different languages. Your machine can receive print commands in a variety of emulations and has an automatic emulation selection feature. When the machine receives data from the computer, it automatically chooses the emulation mode. The default setting is Auto.

Your machine has the following emulation modes. You can change the setting by using the control panel or a web browser.

HP LaserJet Mode

The HP LaserJet mode (or HP mode) is the emulation mode in which this printer supports the PCL6 language of a Hewlett-Packard[®] LaserJet laser printer. Many applications support this type of laser printer. Using this mode will allow your printer to run at its best with those applications.

BR-Script 3 Mode

BR-Script is an original Brother page description language and a PostScript[®] language emulation interpreter. This printer supports level 3. The BR-Script interpreter of this printer allows you to control text and graphics on the page.

For technical information about PostScript[®] commands, see the following manuals:

- Adobe Systems Incorporated. PostScript[®] Language Reference, 3rd edition. Addison-Wesley Professional, 1999. ISBN: 0-201-37922-8
- Adobe Systems Incorporated. PostScript[®] Language Program Design. Addison-Wesley Professional, 1988. ISBN: 0-201-14396-8
- Adobe Systems Incorporated. PostScript[®] Language Tutorial and Cookbook. Addison-Wesley Professional, 1985. ISBN: 0-201-10179-3

Setting the Emulation mode

For MFC models, press Menu, 4, 1. For DCP models, press Menu, 3, 1.

Press ▲ or V to choose Auto, HP LaserJet or BR-Script 3. Press OK.

3 Press Stop/Exit.

Note 🖉

We recommend that you set the emulation setting with your application software or network server. If the setting does not work properly, choose the required emulation mode manually using the control panel buttons of the machine.

Printing the Internal Font List

You can print a list of the machine's internal (or resident) fonts to see how each font looks before you choose it.

- For MFC models, press Menu, 4, 2, 1. For DCP models, press Menu, 3, 2, 1.
 - Press Mono Start or Colour Start. The machine prints the list.
- 3 Press Stop/Exit.

Printing the Print Configuration List

You can print a list of current printer settings.

- For MFC models, press Menu, 4, 2, 2. For DCP models, press Menu, 3, 2, 2.
- **2** Press **Mono Start** or **Colour Start**. The machine prints the settings.
- 3 Press Stop/Exit.

Test Print

If you are having problems with print quality, you can do a test print.

- For MFC models, press Menu, 4, 2, 3. For DCP models, press Menu, 3, 2, 3.
- 2 Press Mono Start or Colour Start.
- 3 Press Stop/Exit.

 
🖉 Note

If the problem appears on the printout, see *Improving the print quality in the User's Guide*.



Duplex (MFC-9840CDW and DCP-9045CDN only)

You can choose whether you want to automatically print on both sides of the paper. The setting in the printer driver will take priority over the setting made on the control panel.

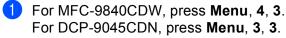

2 Press ▲ or V to choose Off, On (Long Edge) or On (Short Edge).

- OPress OK.
- 4 Press Stop/Exit.

Output Colour

If the driver does not have colour settings, you can choose the colour settings.

For MFC-9440CN and MFC-9450CDN, press Menu, 4, 3.
 For MFC-9840CDW, press Menu, 4, 4.
 For DCP-9040CN and DCP-9042CDN, press Menu, 3, 3.
 For DCP-9045CDN, press Menu, 3, 4.

- 2 Press ▲ or V to choose Auto, Color or B&W.
- R Note

For more information about the colour settings, see Colour/Mono on page 143.



4 Press Stop/Exit.

Restoring default printer settings


You can return the machine's printer settings to the default settings. Fonts and macros loaded to the machine's memory will be cleared.

1	For MFC-9440CN and MFC-9450CDN, press Menu, 4, 4.
	For MFC-9840CDW, press Menu, 4, 5.
	For DCP-9040CN and DCP-9042CDN, press Menu, 3, 4.
	For DCP-9045CDN, press Menu, 3, 5.

- 2 To restore the default settings, press 1.
 To exit without making a change, press 2.
- 3 Press Stop/Exit.

Calibration

 The output density for each colour may vary depending on the environment the machine is in such as temperature and humidity. Calibration helps you to improve the colour density.

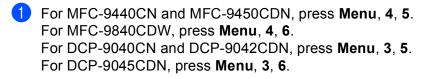

- 2 Press ▲ or ▼ to select Calibrate.
- 3 Press OK.
- 4 Press 1 to select Yes.

You can reset the calibration parameters back to those set at the factory.

1	For MFC-9440CN and MFC-9450CDN, press Menu, 4, 5.
	For MFC-9840CDW, press Menu , 4 , 6 .
	For DCP-9040CN and DCP-9042CDN, press Menu, 3, 5.
	For DCP-9045CDN, press Menu, 3, 6.

 
- 2 Press ▲ or ▼ to Reset.
- 3 Press OK.
- 4 Press 1 to select Yes.
- Note

If an error message is displayed, press **Stop/Exit** and try again. For more information, see *Troubleshooting and routine maintenance in the User's Guide*.

Auto Registration

Registration

If solid areas of colour or images have cyan, magenta or yellow fringes, you can use the auto-registration feature to correct the problem.

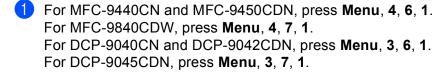

2 To start, press **1**. To exit, press **2**.



Frequency

You can set the interval time you want to carry out the auto registration.

- For MFC-9440CN and MFC-9450CDN, press Menu, 4, 6, 2. For MFC-9840CDW, press Menu, 4, 7, 2. For DCP-9040CN and DCP-9042CDN, press Menu, 3, 6, 2. For DCP-9045CDN, press Menu, 3, 7, 2.
- Press ▲ or ▼ to choose Low, Medium, High or Off. Press OK.
- 3 Press Stop/Exit.


Manual Registration

If colour still appears incorrectly after auto-registration, you will need to perform manual registration.

```
    For MFC-9440CN and MFC-9450CDN, press Menu, 4, 7, 1.
    For MFC-9840CDW, press Menu, 4, 8, 1.
    For DCP-9040CN and DCP-9042CDN, press Menu, 3, 7, 1.
    For DCP-9045CDN, press Menu, 3, 8, 1.
```

- Press Mono Start or Colour Start to start printing the colour registration chart.
- 3 When the machine has finished printing the registration sheet, press 2 (Set Regist.) to correct the colour manually.
- 4 Starting at 1 (Magenta Left) on the chart, check which coloured bar has the most uniform print density and enter its number into the machine using the ▲ and ▼ keys. Press OK.

Repeat for 2 (Cyan Left), 3 (Yellow Left), 4, 5, 6 to 9.

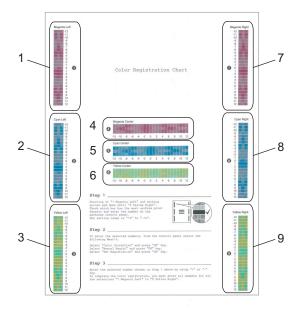



icon. You

Status Monitor

The **Status Monitor** utility is a configurable software tool for monitoring the status of the machine, letting you see error messages such as paper empty or paper jam at pre-set update intervals. You can also access the Colour Calibration settings and web based management. Before you can use the tool you must choose your machine in the **Model** pop-up menu in ControlCenter2.You can check the device status by clicking the Status Monitor icon in the DeviceSettings tab of ControlCenter2 or by choosing Brother Status Monitor located in **Macintosh HD/Library/Printers/Brother/Utilities**.

Updating the machine's status

If you want the latest machine status while the Status Monitor window is open, click the

can set what interval the software will update the machine status information. Go to the menu bar, **Brother Status Monitor** and choose **Preferences**.



Hiding or showing the window

After starting the **Status Monitor**, you can hide or show the window. To hide the window, go to the menu bar, **Brother Status Monitor** and choose **Hide Brother Status Monitor**. To show the window, click the **Status Monitor** icon in the dock or click the **Status Monitor** in the **DeviceSettings** tab of ControlCenter2.



Quitting the window

Go to the menu bar and choose Quit Brother Status Monitor.

Web Based Management (Network Connection Only)

You can access the Web Based Management System by clicking the machine icon on the **Status Monitor** screen. A standard Web Browser can be used to manage your machine using HTTP (Hyper Text Transfer Protocol). For more information on the Web Based Management System, see *Web Based Management in the Network User's Guide*.

Colour Calibration

This can help you to improve colour density by letting the printer driver use the colour calibration data stored in your machine.

Get device data

Go to menu bar, **Control**, **Colour Calibration** and choose **Get device data**. The printer driver will attempt to get the colour calibration data from your machine.

Features in the printer driver (For Macintosh[®])

This printer supports Mac OS[®] X 10.2.4 or greater.

🖉 Note

The screens in this section are from Mac OS[®] X 10.4. The screens on your Macintosh[®] will vary depending on your operating system version.

Page Setup

You can set the Paper Size, Orientation and Scale.

	Settings:	Page Attributes
	Format for:	Any Printer
	Paper Size:	US Letter
	Orientation:	
	Scale:	100 %
?		Cancel OK

Choosing page setup options

From an application such as Apple[®] TextEdit, click **File**, then **Print** to start printing.

■ For Mac OS[®] X 10.5

For more page setup options, click the disclosure triangle beside the Printer pop-up menu.

Printer: Brother MFC-XXXX	
Presets: Standard	÷
PDF Preview	Cancel Print

2.01	Printer: Brother MFC-XXXX	•
	Presets: Standard	\$
	Copies: 1 Collate	d
	Pages: O All From: 1 t	o: 1
	Paper Size: A4	20.99 by 29.70 cm
	Orientation:	
	TextEdit	\$
	Print header and	footer
▲ ▲ 1 of 1 ► ►►		
(PDF V)		Cancel P

Note

To control special printing features, choose **Print Settings** from the Print dialog box.

1-2-1	Printer: Brother MFC-XXXX
	Presets: Standard
	Copies: 🚺 🗹 Collated
	Pages: All From: 1 to: 1
	Paper Size: A4 20.99 by 29.70 cm
	Orientation: 11
	✓ TextEdit
	Layout Color Matching
	Paper Handling
44 4 1 of 1 >>>>	Paper Feed
	Cover Page
	Scheduler
(?) (PDF ▼)	Print Settings Print
	Secure Print
	Send Fax
	Summary

■ For Mac OS[®] X 10.2.x to 10.4.x

Printer:	MFC-XXXX	•
Presets:	Standard	•
	Copies & Pages	•
Copies:	1 Collated	
Pages:	• All • From: 1 to: 1]
? PDF • Pre	view	Cancel Print

Cover Page (For Mac OS[®] X 10.4 or greater)

You can make the following cover page settings:

Printer: MFC-XXXX	+
Presets: Standard	•
Cover Page	
Print Cover Page: • None O Before documen O After document	
Cover Page Type: Standard	Å Y
Billing Info:	
(?) (PDF v) (Preview)	Cancel Print

Print Cover Page

If you want to add a cover page to your document, use this function.

Cover Page Type

Choose a template for the cover page.

Billing Info

If you want to add the billing information to the cover page, enter text in the **Billing Info** box.

Layout

Printer:	MFC-XXXX	•
Presets:	Standard	•
	Layout	÷
1	Pages per Sheet: Layout Direction: Border: Two-Sided:	2 5 4 N None
? PDF • Prev	view	Cancel Print

Pages per Sheet

Choose how many pages will appear on each side of the paper.

Layout Direction

When you specify the pages per sheet, you can also specify the direction of the layout.

Border

If you want to add a border, use this function.


Duplex Printing

■ Use duplex unit (Not available for MFC-9440CN and DCP-9040CN)

• For Mac OS[®] X 10.3 or greater

Select Layout.

Choose Long-edged binding or Short-edged binding in Two-Sided.

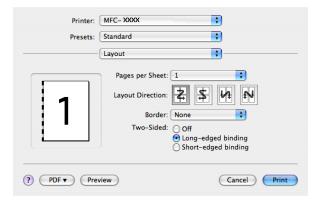

• For Mac OS[®] X 10.2

Select Duplex.

Check the **Duplex** check box. Choose **Use Duplex Unit** and then choose **Flip on Long Edge** or **Flip on Short Edge**.

Printer: Brother MFC-XXXX	•
Presets: Standard	•
Duplex 🛟	
🗹 Duplex	
🖲 Use Duplex Unit 🛛 Manual Duplex	
Flip on Long Edge Flip on Short Edge	
(Preview) (Save As PDF) (Car	icel Print

■ Manual duplex (For Mac OS[®] X 10.3 or greater)

Select Paper Handling.

Choose Odd numbered pages and print, and then choose Even numbered pages and print.

Paper Hand	ling
Page Order: • Automatic Normal Reverse	Print: O All Pages Odd numbered pages Even numbered pages
Destination Paper Size:	
📀 Use documents paper	size: A4
○ Scale to fit paper size: ✓ Scale down only	A4 +

Printing and Faxing

Secure Print

Printer:	Brother MFC-XXXX	•
Presets:	Standard	•
	Secure Print	•
🗹 Secure Print		ver:1.0.0
User Name :		
XXXXXX		
Job Name :		
XXXXXX		
Password :		
? PDF • Prev	view	Cancel Print

Secure Print:

Secure documents are documents that are password protected when they are sent to the machine. Only the people who know the password will be able to print them. Since the documents are secured at the machine, you must enter the password using the control panel of the machine to print them.

To send a secured document:

1 Choose Secure Print and check Secure Print.

2 Enter your password, user name and job name and click Print.

3 You must print the secured document from the control panel of the machine. (See Secure Key on page 130.)

To delete a secured document:

You need to use the control panel of the machine to delete a secured document. (See *Secure Key* on page 130.)

Printing and Faxing

Print Settings

Basic tab

Printer: MFC-XXXX	•
Presets: Standard	•
Print Settings	•
Basic Advanced	
	ver:1.0.0
Media Type: Plain Paper	
Color/Mono: Auto	
Mirror Print	
Reverse Print	
Toner Save Mode	
(?) (PDF V) (Preview)	Cancel Print
() (FDF +) (Fleview)	Cancer Print

Media Type

You can choose from the following media types:

- Plain Paper
- Thin Paper
- Thick Paper
- Thicker Paper
- · Bond Paper
- · Recycled Paper
- Envelopes
- Envelope Thin
- Envelope Thick
- Postcard
- Label

Colour/Mono

You can change the Colour/Mono settings as follows:

• Auto

The printer checks the content of your documents for colour. If colour is detected, it prints in colour. If no colour content is detected, it prints in monochrome. The total printing speed may become slower.

Colour

If you want the printer to use Colour mode even when printing monochrome documents, select this mode.

• Mono

Select this mode if your document has only black or greyscale text and/or objects. Mono mode makes the print processing speed faster than colour mode. If your document contains colour, selecting Mono mode prints your document in 256 levels of grey.

🖉 Note

If the Cyan, Magenta or Yellow toner runs out, choosing **Mono** will allow you to keep printing as long as the Black toner does not run out.

Mirror Print

Check Mirror Print to reverse the data from left to right.

Reverse Print

Check **Reverse Print** to reverse the data from top to bottom.


Toner Save Mode

You can conserve toner using this feature, when you set **Toner Save Mode** to On, print appears lighter. The default setting is Off.

🖉 Note

We do not recommend **Toner Save Mode** for printing **Photo** or greyscale images.

Advanced tab

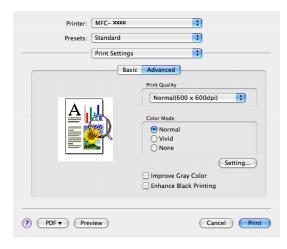

Print Quality

You can change the print quality as follows:

Normal

600 x 600 dpi. Recommended mode for ordinary printouts. Good print quality with reasonable printing speed.

• Fine

2400 dpi class. The finest print mode. Use this mode to print precise images such as photographs. Since the print data is much larger than in normal mode, processing time, data transfer time and printing time will be longer.

Colour Mode

You can change the colour mode as follows:

Normal

This is the default colour mode.

• Vivid

The colour of all elements are adjusted to become a more vivid colour.

Improve Grey Colour

You can improve the image quality of shaded areas by ticking the Improve Grey Colour check box.

Enhance Black Printing

If a black graphic cannot be printed correctly, choose this setting.

Setting

If you want to change the colour settings such as brightness, contrast, intensity or saturation, click the **Setting** button to access more advanced settings.

Brightness	0	_			_	
Contrast	0		1	-0-	1	
Red	0	_	1	-0-	1	
Green	0		1	-	1	
Blue	0	-	I	-0-	1	
Saturation	0	_		0		

• Brightness (1)

Moving the scroll bar to the right makes your image lighter and moving the scroll bar left makes your image darker.

• Contrast (2)

Darker sections are darker while lighter sections will be lighter as you increase the contrast.

• Red (3)

Increase the intensity of **Red** in the image.

• Green (4)

Increase the intensity of Green in the image.

• Blue (5)

Increase the intensity of **Blue** in the image.

• Saturation (6)

Increase the saturation when you wish to print a more vivid image or decrease the saturation you want to print a less vivid image.

Removing the Printer driver for Macintosh[®]

For Mac OS[®] X 10.2

- 1 Disconnect the USB cable between the Macintosh[®] and your printer.
- 2 Restart the Macintosh[®].
- 3 Log on as an 'Administrator'.
- 4 Run the **Print Center** (from the **Go** menu, choose **Applications**, **Utilities**), then choose the printer you want to remove and remove it by clicking the **Delete** button.
- 5 Drag the **CLaser06** folder (from the **Macintosh HD** (Startup Disk), choose **Library**, **Printers**, **Brother**) into the Trash and then empty the Trash.
- 6 Restart the Macintosh[®].

For Mac OS[®] X 10.3 or greater

- 1 Disconnect the USB cable between the Macintosh and your printer.
- 2 Restart the Macintosh[®].
- 3 Log on as an 'Administrator'.
- 4 Run the Printer Setup Utility (from the Go menu, choose Applications, Utilities), then choose the printer you want to remove and remove it by clicking the Delete button.
- 5 Restart the Macintosh[®].

Using the BR-Script3 Driver (PostScript[®] 3[™] language emulation printer driver)

🖉 Note

- To use the BR-Script3 printer driver, you need to set the Emulation to BR-Script 3 by using the control panel before connecting the interface cable. (See *Printer Emulation Support* on page 131.)
- The BR-Script3 printer driver does not support the PC-Fax Sending.
- For network users, see the Network User's Guide for installation steps.

You need to install the BR-Script3 printer driver using the following instructions.

🖉 Note

If you use a USB cable and Mac OS[®], only one printer driver for a machine can be registered in Printer Setup Utility (Print Center for Mac OS[®] 10.2.X users). If a Brother Laser driver is already listed in the Printer list, you will need to delete it and then install the BR-Script3 printer driver.

■ For Mac OS[®] X 10.5

Choose System Preference from the Apple menu.



Click the Printer & Fax icon.



3 Click + button which is located below the **Printers** section.




4 Click the **Default** icon which is located at the top of the dialog box.



5 Choose your machine from the **Printer Name** list and **Select a driver to use...** in **Print Using**.

e o o Default Fax	P Windows	Bluetooth	AppleTalk	More Printe	rs	٩	Search	
								3
Brother MFC- X	000				USB			
Name:	Brother MFC	- XXXX						
Location:	DocMacBook	Pro						
Print Using 🗸	Brother MFC	- xxxx c	UPS					
_	Auto Calast							
L	Select a driv	er to use.)
	Other						1.40	

6 Choose the model name which shows BR-Script in **Print Using**, and then click **Add**.

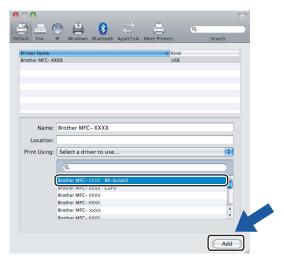


7 Choose Quit System Preferences from the System Preferences menu.



System Preferences Edi	t View	Window
About System Preference	s	
Services	•	
Hide System Preferences Hide Others Show All	нж НЖ7	
Quit System Preferences	жQ)

■ For Mac OS[®] X 10.2.x to 10.4.x

1 Choose Applications from the Go menu.

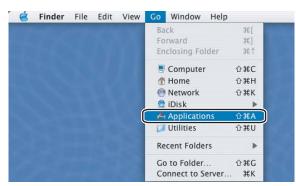


Open the Utilities folder.



3 Open the **Printer Setup Utility** icon. For Mac OS[®] X 10.2 X users, open the **Print Center** icon.






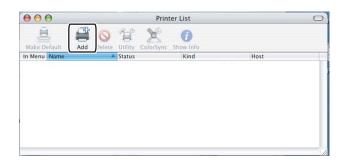

For Mac OS[®] 10.2.4 to 10.3 users, go to (3). For Mac OS[®] 10.4 or greater users, go to (6).

5 Choose USB.

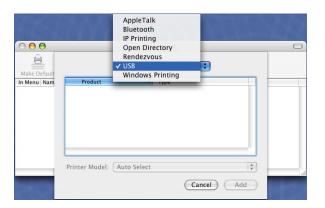

6 Choose the model name and make sure that **Brother** in **Printer Model** (**Print Using**) and the model name which shows BR-Script in **Model Name** (**Model**) are selected, and then click **Add**. For Mac OS[®] 10.2.4 to 10.3 users:

Product	Type	
MFC-XXXX	Brother	
ntar Madal:	har	
nter Model: Brot	her	
nter Model: Brot	her	
	····y=	
Iodel Name	IPS.gz	
odel Name	IPS.gz IPS.gz	
odel Name rother MFC-XXXX CU rother MFC-XXXX CU	IPS.gz IPS.gz -Script3	

For Mac OS[®] 10.4 or greater users:

	Print	ter Browser	
4	<u> </u>	Q.	
fault Browser	IP Printer		Search
Printer Name		A Connecti	on
MFC-XXXX		USB	
			_
<i>c</i>			
Name:	MFC-XXXX		
	MFC-XXXX BILIDC1212		
Location:	BILIDC1212	1	
	BILIDC1212 Brother)	:
Location:	BILIDC1212 Brother Model		\$
Location:	BILIDC1212 Brother Model Brother DCP- XXXX		•
Location:	BILIDC1212 Brother Model	CUPS v1.1	•
Location:	BILIDC1212 Brother Model Brother DCP- XXXX Brother DCP- XXXX	CUPS v1.1	
Location:	BILIDC1212 Brother Model Brother DCP-XXXX Brother DCP-XXXX	CUPS v1.1 BR-Script3	
Location:	BILIDC1212 Brother Model Brother DCP-XXXX Brother DCP-XXXX Brother MFC-XXXX	CUPS v1.1 BR-Script3	:
Location:	BILIDC1212 Brother Model Brother DCP-XXXX Brother DCP-XXXX Brother MFC-XXXX Brother MFC-XXXX	CUPS v1.1 BR-Script3 CUPS v1.1 BR-Script3	•
Location:	BILIDC1212 Brother Model Brother DCP-XXXX Brother DCP-XXXX Brother MFC-XXXX Brother MFC-XXXX	CUPS v1.1 BR-Script3 CUPS v1.1 BR-Script3	
Location:	BILIDC1212 Brother Model Brother DCP-XXXX Brother DCP-XXXX Brother MFC-XXXX Brother MFC-XXXX	CUPS v1.1 BR-Script3 CUPS v1.1 BR-Script3	

7 Choose Quit Printer Setup Utility from the Printer Setup Utility menu.




About Printer Setup Utilit	y		
Preferences	æ,		
Services	•		
Hide Printer Setup Utility	жн		
Hide Others Show All	₹₩H		

Features in the BR-Script (PostScript[®] 3[™] language emulation) printer driver

Page Setup

You can set the Paper Size, Orientation and Scale.

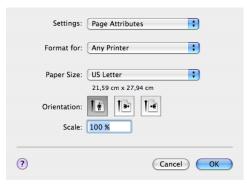

Choosing Page setup options

From an application such as Apple[®] TextEdit, click **File**, then **Print** to start printing.


■ For Mac OS[®] X 10.5

For more page setup options, click the disclosure triangle beside the Printer pop-up menu.

	Printer: Presets:	Brother MFC Standard	C-XXXX	÷	
	? PDF V	Preview	Ð	Cancel	Print
	44 - 4 1 of 1		Printer: Presets: Copies: Pages: Paper Size: Orientation:	All From: 1 to: A4	
? (P	DF •				Cancel Print

🖉 Note

To control special printing features, choose **Print Features** from the Print dialog box.

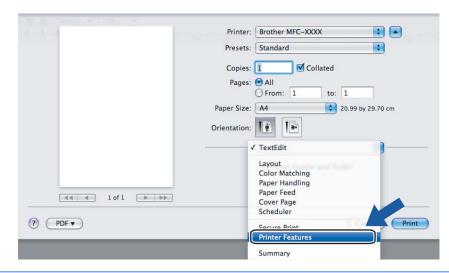

■ For Mac OS[®] X 10.2.x to 10.4.x

Printer:	MFC-XXXX	•
Presets:	Standard	•
	Copies & Pages	•
Copies:	1 Collated	
Pages:	• All • From: 1 to: 1]
? PDF • Pre	view	Cancel Print

Cover Page (For Mac OS[®] X 10.4)

You can make the following cover page settings:

Printer: MFC-XXXX	•
Presets: Standard	÷
Cover Page	•
Print Cover Page: • None O Before document After document	
Cover Page Type: Standard	A V
Billing Info:	
(?) (PDF v) (Preview)	Cancel Print

Print Cover Page

If you want to add a cover page to your document, use this function.

Cover Page Type

Choose a template for the cover page.

Billing Info

If you want to add the billing information to the cover page, enter text in the **Billing Info** box.

Layout

Printer:	MFC- XXXX	
Presets:	Standard	
	Layout	
1	Pages per Sheet: 1 Layout Direction: 2 Border: None Two-Sided: Off Cong-edged binding Short-edged binding	
? PDF Pre	view Cancel Print)

Pages per Sheet

Choose how many pages will appear on each side of the paper.

Layout Direction

When you specify the pages per sheet, you can also specify the direction of the layout.

Border

If you want to add a border, use this function.

Duplex Printing

■ Use duplex unit (Not available for MFC-9440CN and DCP-9040CN)

• For Mac OS[®] X 10.3 or greater Select Layout.

Choose Long-edged binding or Short-edged binding in Two-Sided.

Printer:	MFC- XXXX
Presets:	Standard
	Layout
1	Pages per Sheet: 1 Layout Direction: 2 Border: None Two-Sided: Off Cong-edged binding Short-edged binding
? PDF • Prev	view Cancel Print

• For Mac OS[®] X 10.2

Select Duplex.

Check the **Duplex** check box. Choose **Use Duplex Unit** and then choose **Flip on Long Edge** or **Flip on Short Edge**.

Printer:	Brother MFC-XXXX	÷
Presets:	Standard	•
Duplex	•	
🗹 Duplex		
💽 Use Duj	olex Unit 🛛 🔿 Manual Duplex	
	 Flip on Long Edge Flip on Short Edge 	
? Preview	Save As PDF	ancel Print

■ Manual duplex (For Mac OS[®] X 10.3 or greater)

Select Paper Handling.

Choose Odd numbered pages and print, and then choose Even numbered pages and print.

Paper Handling	
Page Order: • Automatic Print: O All Pages	
Normal 💿 Odd numbere	
O Reverse O Even number	ed page
Destination Paper Size:	
Use documents paper size: A4	
O Scale to fit paper size: A4	Å. V
√ Scale down only	

Printer Features

Presets: Standard	;
Printer Features	•
Feature Sets: Set 1	•
Media Type: Plain Paper	•
Job Spooling: Off	•
PASSWORD: None	•
Job Name: System Name	•
Print Quality: Normal (600 x 600 dpi)	•
Toner Save: Off	•

Media Type

You can use the following types of media in your machine. For the best print quality, select the type of media that you wish to use.

Plain Paper	Thin Paper	Thick Paper	Thicker Paper	Bond Paper	Label
Post card	Envelopes	Env. Thick	Env. Thin	Recycled Paper	

Job Spooling

Secure Print allows you to secure documents that are password protected when they are sent to the machine. Only the people who know the password will be able to print them. Since the documents are secured at the machine, you must enter the password using the control panel of the machine. The secured document must have a **PASSWORD** and **Job Name**.

PASSWORD

Choose the password for your secured document that you send to the machine from the drop-down box.

Job Name

Choose the Job name from the drop-down list for your secured document that you sent to the machine.

Print Quality

You can choose the following print quality settings.

Normal

600 dpi class. Recommended for ordinary printing. Good print quality with good print speeds.

• Fine

2400 dpi class. The finest print mode. Use this mode to print precise images such as photographs. Since the print data is much larger than in normal mode, processing time, data transfer time and printing time will be longer.

Toner Save

You can conserve toner using this feature. When you set **Toner Save Mode** to **On**, print appears lighter. The default setting is **Off**.

🖉 Note

We do not recommend Toner Save for printing Photo or greyscale images.

Sending a fax (MFC models only)

For Macintosh[®]

You can send a fax directly from a Macintosh[®] application.

Note

Fax documents will be sent in Black and White only.

1 Create a document in a Macintosh[®] application.

2 From an application such as Apple[®] TextEdit, click **File**, then **Print**.

■ For Mac OS[®] X 10.5


For more page setup options, click the disclosure triangle beside the Printer pop-up menu.

Printer: Brother Presets: Standard	MFC-XXXX I
PDF • Pre	view Cancel Print Printer: Brother MFC-XXXX Presets: Standard Presets: Standard Copies: 1 Collated Pages: All From: 1 to: 1 Paper Size: A4 20.99 by 29.70 cm Orientation: 1 TextEdit TextEdit Print header and footer
I of 1 PDF •	Cancel Print

■ For Mac OS[®] X 10.2.x to 10.4.x

Printer: MFC-XXXX	•
Presets: Standard	•
Copies & Pages	•
Copies: 1 Sollated	
Pages: • All • From: 1 to: 1	
? PDF Preview	Cancel Print

3 Choose Send Fax from the pop-up menu.

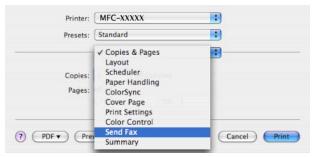

4 Choose Facsimile from the Output pop-up menu.

	Printer:	MFC-XXXXX	+
	Presets:	Standard	•
		Send Fax	•
Output:	Facsimi	le ;	ver:1.1.2
Input Fax	Number:		
			Add
Stored Fa	x Numbers	;	
hc	me Fax	Address B	Book
Destinatio	on Fax Num	ibers:	
Name		Fax#	
)4 >
			Delete

5 Enter a fax number in the **Input Fax Number** box, and then click **Print** to send the fax.

🖉 Note

If you want to send a fax to more than one number, click **Add** after entering the first fax number. The destination fax numbers will be listed in the dialog box.

	Printer:	MFC-XXXXX	+
	Presets:	Standard	•
		Send Fax	•
Output:	Facsimi	le 🗘	ver:1.1.2
Input Fax	Number:		
			Add
Stored Fax	x Numbers		
	me Fax	Address Boo	ok)
Destinatio	on Fax Nun	bers:	
Name		Fax# 222-111-3333	
_	****	**********)4 +
	****		Delete

Drag a vCard from the Mac $OS^{\mathbb{R}}$ X address Book application (For Mac $OS^{\mathbb{R}}$ X 10.2.x to 10.4.x)

You can address a fax number using a vCard (an electronic business card) from the Mac $OS^{\otimes} X$ Address Book application.



Click Address Book.

2 Drag a vCard from the Mac OS[®] X Address Book application to the Destination Fax Numbers field.

	Printer:	MFC-XXXXX	•
	Presets:	Standard	•
		Send Fax	
			ver.1.1.2
	Output: Facsimile	•	ver:1.1.2
	Input Fax Number:		
			Add
	Stored Fax Numbers;		
	home Fax	Address Book)
	Destination Fax Numb	ers: Fax#	
	8ob PDF • Previo	888-868-0000	Cancel Print
$\Theta \Theta \Theta$		Address Book	
]		Q
Group	Name Barble Bob	work 84 work 84	88-888-0001 88-888-0000 ob@xxx.yyy.com
+	+	Edit	3 cards

🖉 Note

If both work and home fax numbers are stored in the Mac OS[®] X Address Book, choose **work fax** or **home fax** from the **Stored Fax Numbers** pop-up menu, and then drag a vCard.

3 When you are finished addressing your fax, click **Print**.

Printer:	MFC-XXXXX	•
Presets:	Standard	•
	Send Fax	•
Output: Facsimi	le 🛟	ver:1.1.2
Input Fax Number:		
		Add
Destination Fax Num		
Destination Fax Num Name Bob	bers: Fax# 888-888-0000	
<u> </u>		
		Delete

Note

The vCard used must contain a work fax or home fax number.


Using Mac OS[®] X 10.5 Addresses panel

You can address a fax number using Addresses button.



1.1	Printer: Brother MFC-XXXX
	Presets: Standard
	Copies: 1 🗹 Collated
	Pages: All From: 1 to: 1
	○ From: 1 to: 1 Paper Size: A4 20.99 by 29.70 cm
	Orientation:
	Send Fax
	Output: Facsimile ver1.2.3
(44 4) 1 of 1 (>>>>)	Input Fax Number:
	Destination Fax Numbers:
	Name FAX#
	Delete
?) (PDF •)	(Cancel) Print

2 Choose fax number from **Addresses** panel and then click **To**.

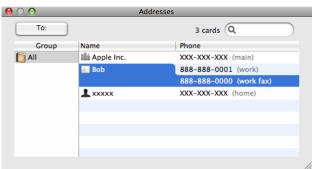

3 When you are finished addressing your fax, click **Print**.

Paper Size: A4 Orientation: 1	Collate	\$ to: 1 \$ 20.99 by 29.70 \$ wer1.20 \$ Add) cm
Pages: A Paper Size: A4 Orientation: 1 Sen tput: Facsimile Fax Number:	ll rom: 1 1	to: 1 20.99 by 29.70 ver:1.2.1)
Orientation:	d Fax	20.99 by 29.70)
Paper Size: A4 Orientation: 1	d Fax	20.99 by 29.70)
Orientation: 5en sput: Facsimile Fax Number:	d Fax	ver:1.2.)
tput: Facsimile	d Fax	ver:1.2.	
tput: Facsimile	100 B	ver:1.2.	
Fax Number:	•)
ation Fax Numbers:	6	Addresses)
e FAX#			í
888-	888-0000		
		Delete	
			Delete

9

Scanning

Scanning from a Macintosh[®]


The Brother machine software includes a TWAIN Scanner driver for Macintosh[®]. You can use this Macintosh[®] TWAIN Scanner driver with any applications that support TWAIN specifications.

🖉 Note

If you want to scan from a machine on a network, choose the networked machine in the Device Selector application located in **Macintosh HD/Library/Printers/Brother/Utilities/DeviceSelector** or from the **Model** pop-up menu of ControlCenter2.

Accessing the scanner

Run your Macintosh[®] TWAIN-compliant application. The first time you use the Brother TWAIN driver, set it as the default driver by choosing **Select Source**. For each document you scan after this, choose **Acquire Image Data** or **Start**. The menu option that lets you choose the Scanner driver may vary depending on your application.

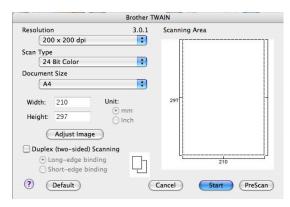

🖉 Note

The method of choosing the default driver or scanning a document may vary depending on the application you are using.

Scanning an image into your Macintosh®

You can scan a whole page, or scan a portion after pre-scanning the document.

Scanning a whole page

- 1 Put the document face up in the ADF, or face down on the scanner glass.
- 2 Adjust the following settings, if needed, in the Scanner Setup dialog box:
 - Resolution
 - Scan Type
 - Document Size
 - Brightness
 - Contrast

Click Start. When scanning has finished, the image appears in your graphics application.

Scanning a duplex document (MFC-9840CDW and DCP-9045CDN only)

- 1 Put the document face up in the ADF.
- 2 Check Duplex (Two-sided) Scanning and choose Long-edge binding or Short-edge binding.

		Brother T	WAIN
Resolutio	n 0 x 200 dpi	3.0.1	Scanning Area
Scan Type	Bit Color		
Documen			
Width:	210	Unit:	297
Height:	297	O mm O Inch	
(Adjust Ima		
01	x (two-sided ong-edge b hort-edge l	oinding	210
?	Default	C	Cancel Start PreScan

3 Adjust the following settings, if needed, in the Scanner Setup dialog box:

- Resolution
- Scan Type
- Document Size
- Brightness
- Contrast

 


Note

- You cannot adjust the scanning area.
- Duplex scan is not available for legal size paper.
- Duplex scan is available from the ADF only.

Pre-Scanning an image

The **PreScan** button is used to preview and also lets you crop any unwanted areas from the image. When you are satisfied you are scanning the correct area, click the Start button in the Scanner Setup dialog box to scan the image.

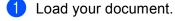

Click PreScan.

The whole image is scanned into your Macintosh[®] and appears in the **Scanning Area**.



3 Drag the mouse pointer over the portion you want to scan.

Put the document in the ADF again.

🖉 Note

If you put the document on the scanner glass in (1), skip this step.

5 Adjust the settings for **Resolution**, Scan Type, Brightness and Contrast in the Scanner Setup dialog box as needed.

Click Start.

This time only the chosen area of the document appears in the application window.

You can refine the image in your editing software.

Settings in the Scanner window

Resolution

You can change the scanning resolution from the **Resolution** pop-up menu. Higher resolutions take more memory and transfer time, but produce a finer scanned image. The following table shows the resolutions you can choose and the available colours.

Resolution	Black & White/ Grey (Error Diffusion)	8 bit colour	True Grey/24 bit colour
100 × 100 dpi	Yes	Yes	Yes
150 × 150 dpi	Yes	Yes	Yes
200 × 200 dpi	Yes	Yes	Yes
300 × 300 dpi	Yes	Yes	Yes
400 × 400 dpi	Yes	Yes	Yes
600 × 600 dpi	Yes	Yes	Yes
1200 × 1200 dpi	Yes	No	Yes
2400 × 2400 dpi	Yes	No	Yes
4800 × 4800 dpi	Yes	No	Yes
9600 × 9600 dpi	Yes	No	Yes
19200 × 19200 dpi	Yes	No	Yes

Scan Type

Black & White

Use for text or line art images.

Grey (Error Diffusion)

Use for photographic images or graphics. (Error Diffusion is a method for creating simulated grey images without using true grey dots. Black dots are put in a specific pattern to give the grey appearance.)

True Grey

Use for photographic images or graphics. This mode is more exact because it uses up to 256 shades of grey.


8 Bit Colour

Uses up to 256 colours to scan the image.

24 Bit Colour

Uses up to 16.8 million colours to scan the image.

Although using **24 Bit Colour** creates an image with the most accurate colour reproduction, the image file size will be about three times larger than a file created using the **8 Bit Colour** option. It requires the most memory and has the longest transfer time.

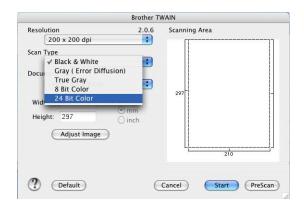

Document size

Choose one of the following document sizes:

- A4
- JIS B5
- Letter
- Legal
- A5
- Executive
- Business Card

To scan business cards, choose the **Business Card** size, and then place the business card face down in the centre of the left hand side of the scanner glass, as indicated by the document guidelines.

- Photo
- Index Card
- Photo L
- Photo 2L
- Postcard 1
- Postcard 2
- Custom (User adjustable from 0.35 × 0.35 in. to 8.5 × 14 in. or 8.9 × 8.9 mm to 215 × 355 mm.)

After you choose a custom size, you can adjust the scanning area. Click and hold the mouse button as you drag the mouse to crop the image.

Width: Enter the width of the custom size.

Height: Enter the height of the custom size.

Adjusting the Image

Brightness

Adjust the setting (-50 to 50) to get the best image. The default value is 0, representing an average, and is usually suitable for most images.

You can set the **Brightness** level by dragging the slide bar to the right or left to lighten or darken the image. You can also enter a value in the box to set the level.

0.00	Brightness	- 0
	Contrast	0
0 Co	lorSync	
	Perceptual (Images))
	Scanner Profile	
	Brother sRGB Scanner	

If the scanned image is too light, set a lower **Brightness** level and scan the document again.

If the image is too dark, set a higher **Brightness** level and scan the document again.

🖉 Note

The Brightness setting is only available if you have set Scan Type to Black & White, Grey (Error Diffusion) or True Grey.

Contrast

You can increase or decrease the contrast level by moving the slide bar to the left or right. An increase emphasizes dark and light areas of the image, while a decrease reveals more detail in grey areas. You can also enter a value in the box to set the **Contrast**.

🖉 Note

The Contrast setting is only available if you have set Scan Type to Grey (Error Diffusion) or True Grey.

When scanning photographs or other images for use in a word processor or other graphics application, try different settings for the **Resolution**, **Colour Type**, **Brightness** and **Contrast** to see which setting best suits your needs.

Using the Scan key (For USB cable users)

🖉 Note

If you use the Scan key on a network, see Using the Scan key on page 198.

You can use the \swarrow (Scan) key on the control panel to scan documents directly into your word processing, graphics or E-mail applications or to a folder on your Macintosh[®].


Scan



Before you can use the *(Scan)* key on the control panel, you have to install the Brother MFL-Pro Software Suite and connect the machine to your Macintosh[®]. If you installed the MFL-Pro Suite from the included CD-ROM, then the correct drivers and **ControlCenter2** are installed. Scanning by the *(Scan)* key follows the configuration on the **Device Button** tab. (See *SCAN* on page 181.) For details about how to configure the **ControlCenter2** buttons to launch the application of your choice using the *(Scan)* key, see *Using ControlCenter2* on page 180.

🖉 Note

• If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L) edge or 2sided (S) edge depending on your document layout.

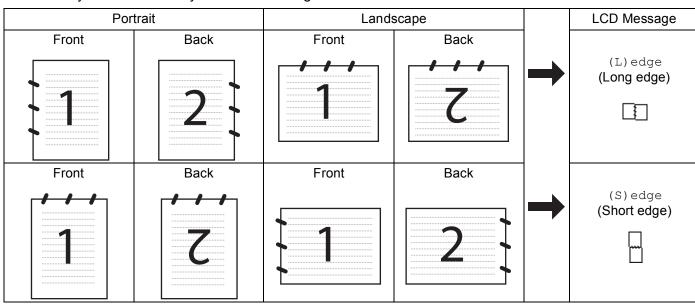

· Choose your document layout from following table:

Document Layout Table

- Duplex scan is supported by the MFC-9840CDW and DCP-9045CDN only.
- Duplex scan is available from the ADF only.
- Duplex scan is not available for legal size paper.

Scanning

Scan to USB (Not available for DCP-9040CN and DCP-9042CDN)

You can scan black and white and colour documents directly to a USB Flash Memory Drive. Black and white documents will be stored in the PDF (*.PDF) or TIFF file formats (*.TIF). Colour documents may be stored in PDF (*.PDF) or JPEG (*.JPG) file formats. The default File names are based on the current date. You can change the colour, quality and file name.

Resolution	File Format Options
Color 150 dpi	JPEG / PDF
Color 300 dpi	JPEG / PDF
Color 600 dpi	JPEG / PDF
B&W 200 dpi	TIFF / PDF
B&W 200x100 dpi	TIFF / PDF

For MFC-9440CN and MFC-9450CDN

- 1 Put a USB flash memory drive into your machine.
- 2 Load your document in the ADF or on the Scanner glass.
- 3 Press the 🐼 (Scan) key.
- 4 Press ▲ or ▼ to choose Scan to USB. Press OK.
- 5 Choose one of the options below.
 - To change the setting, choose 2. Change Setting. Press OK and go to .
 - To start scanning with the settings you set in the Function Menu (Menu, 5, 2), choose 1. Start Scan. Press OK and go to ③.
- 6 Press ▲ or ▼ to choose the quality you want. Press OK.
- Press ▲ or ▼ to choose the file type you want. Press OK.

🖉 Note

- If you choose colour in the resolution setting, you cannot choose TIFF.
- If you choose monochrome in the resolution setting, you cannot choose JPEG.
- 8 The file name is set automatically. However, you can create a name of your choice using the dial pad. You can only change the first 6 digits of the file name. Press OK.

🖉 Note

Press Clear/Back to delete the letters you entered.

9 Press Mono Start or Colour Start to start scanning.

🖉 Note

Scan type depends on the settings in the Function Menu or the setting set manually on the panel, **Mono Start** or **Colour Start** do not change the settings.



LCD shows *Scanning* while reading the data. DO NOT unplug the power cord or remove a USB flash memory drive from the machine while it is reading the data. You could lose your data or damage the card.

For MFC-9840CDW and DCP-9045CDN

- Put a USB flash memory drive into your machine.
- 2 Load your document in the ADF or on the Scanner glass.
- 3 Press the (Scan) key.
- Press ▲ or ▼ to choose Scan to USB. Press OK.
- 5 Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK.

- 6 Choose one of the options below.
 - To start scanning with the settings you set in the Function Menu (For MFC-9840CDW, Menu, 5, 2 and For DCP-9045CDN, Menu, 4, 2), choose Start Scan. Press OK and go to ⁽¹⁾.
 - To change the setting, choose Change Setting. Press OK and go to ().
- Press ▲ or ▼ to choose the quality you want. Press OK.
- 8 Press ▲ or ▼ to choose the file type you want. Press OK.

🖉 Note

- If you choose colour in the resolution setting, you cannot choose TIFF.
- If you choose monochrome in the resolution setting, you cannot choose JPEG.
- 9 The file name is set automatically. However, you can create a name of your choice using the dial pad. You can only change the first 6 digits of the file name. Press OK.

🖉 Note

Press Clear/Back to delete the letters you entered.

Press Mono Start or Colour Start to start scanning.

🖉 Note

Scan type depends on the settings in the Function Menu or the setting set manually on the panel, **Mono Start** or **Colour Start** do not change the settings.



LCD shows *Scanning* while reading the data. DO NOT unplug the power cord or remove a USB flash memory drive from the machine while it is reading the data. You could lose your data or damage the card.

Changing the default setting

- For MFC models, press Menu, 5, 2, 1. For DCP-9045CDN, press Menu, 4, 2, 1.
- 2 Press ▲ or ▼ to choose Color 150 dpi, Color 300 dpi, Color 600 dpi, B&W 200 dpi or B&W 200x100 dpi. Press OK.
- 3 Do one of the following:
 - For black and white file format:

Press ▲ or ▼ to choose TIFF or PDF.

Press OK.

For Colour file format:

Press ▲ or ▼ to choose PDF or JPEG.

Press OK.

4 Press Stop/Exit.

Changing the default file name

- For MFC models, press Menu, 5, 2, 2.
 For DCP-9045CDN, press Menu, 4, 2, 2.
- 2 Enter the file name (up to 6 characters). Press OK.

🖉 Note

You cannot use a space for the first character.

Bress Stop/Exit.

Understanding the Error Messages

Once you are familiar with the types of errors that can occur while you are using the Scan to USB,

you can easily identify and troubleshoot any problems.

Protected Device

This message will appear if the protect switch of the USB flash memory drive is on.

Rename the File

This message will appear if there is already a file on the USB flash memory drive with the same name as the file you are trying to save.

Too Many Files

This message will appear if there are too many files stored on the USB flash memory drive.

Unusable Device

This message will appear if your USB flash memory drive is not supported by your Brother machine.

Scan to E-mail

You can scan either a black and white or colour document into your E-mail application as a file attachment. You can change the scan configuration. (See *E-mail* on page 186.)

- Load your document.
 - 2 Press the 🔊 (Scan) key.
 - 3 Press ▲ or V to choose Scan to E-mail.
 - Press OK.

If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step **(5**). If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step **(4**).

4 Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK.

🖉 Note

If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L)edge or 2sided (S)edge depending on your document layout.

5 Press Mono Start or Colour Start.

The machine starts scanning the document, creates a file attachment, and launches your E-mail application, displaying the new message waiting to be addressed.

🖉 Note

- Scan type depends on the settings on the Device Button tab, Mono Start or Colour Start do not change the settings.
- If you want the scanned data in colour, choose colour in the scan type on the **Device Button** tab of the ControlCenter2 configuration. If you want the scanned data in black and white, choose black and white in the scan type on the **Device Button** tab of the ControlCenter2 configuration. (See *E-mail* on page 186.)

Scan to Image

You can scan either a black and white or colour document into your graphics application for viewing and editing. You can change the scan configuration. (See *Image (example: Apple[®] Preview)* on page 183.)

1	Load your document.
2	Press the 😿 (Scan) key.
3	Press ▲ or ▼ to choose Scan to Image. Press OK. If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step ⑤. If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step ④.
4	<pre>Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK.</pre>
	Note If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L)edge or 2sided (S)edge depending on your document layout.
5	Press Mono Start or Colour Start . The machine starts the scanning process. Note
	Scan type depends on the settings on the Device Button tab, Mono Start or Colour Start do not change the settings.
(t	If you want the scanned data in colour, choose colour in the scan type on the Device Button tab of the ControlCenter2 configuration. If you want the scanned data in black and white, choose black and white in the scan type on the Device Button tab of the ControlCenter2 configuration. (See <i>Image (example: Apple[®] Preview)</i> on page 183.)
Sc	an to OCR

If your document is text, you can have it converted by Presto![®] PageManager[®] to an editable text file and then have the result displayed in your word processing application for viewing and editing. You can change the scan configuration. (See *OCR (word processing application)* on page 185.)

1 Load your document.

2 Press the 🔊 (Scan) key.

3 Press ▲ or ▼ to choose Scan to OCR.

Press **OK**.

If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step (a). If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step (a).

Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK.

🖉 Note

If you want to scan a document using the duplex scanning feature, put the document in the ADF and then choose 2sided (L)edge or 2sided (S)edge depending on your document layout.

5 Press Mono Start or Colour Start.

The machine starts the scanning process.

🖉 Note

- Scan type depends on the settings on the Device Button tab, Mono Start or Colour Start do not change the settings.
- You must have Presto![®] PageManager[®] installed on your Macintosh[®] for the OCR feature to work from the **Scan** key or ControlCenter2. (See *Using Presto!*[®] *PageManager*[®] on page 177.)

Scan to File

You can scan a black and white or a colour document into your PC and save it as a file in a folder of your choice. The file type and specific folder are based on the settings you have chosen in the Scan to File screen of ControlCenter2. (See *File* on page 187.)



2 Press 🐼 (Scan).

3 Press ▲ or ▼ to choose Scan to File.

Press OK.

If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step 6. If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step 4.

Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK.

🖉 Note

If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L)edge or 2sided (S)edge depending on your document layout.

5 Press Mono Start or Colour Start.

The machine starts the scanning process.

🖉 Note

- Scan type depends on the settings on the Device Button tab, Mono Start or Colour Start do not change the settings.
- If you want the scanned data in colour, choose colour in the scan type on the **Device Button** tab of the ControlCenter2 configuration. If you want the scanned data in black and white, choose black and white in the scan type on the **Device Button** tab of the ControlCenter2 configuration. (See *File* on page 187.)
- If you would like to change the file name of scanned documents, enter the file name in **File Name** section on the **Device Button** tab of the ControlCenter2 configuration.

Using Presto![®] PageManager[®]

Presto![®] PageManager[®] is an application for managing the documents in your Macintosh[®]. Since it is compatible with most image editors and word processing programs, Presto![®] PageManager[®] gives you unmatched control over your Macintosh[®] files. You can easily manage your documents, edit your E-mail and files and read documents with the OCR software built into Presto![®] PageManager[®].

If you use the machine as a scanner, we recommend that you install Presto![®] PageManager[®]. To install Presto![®] PageManager[®], see *the Quick Setup Guide*.

🖉 Note

The complete NewSoft Presto![®] PageManager[®] 7 User's Guide can be viewed from the **Help** icon in NewSoft Presto![®] PageManager[®] 7.

Features

- OCR: In one step you can scan an image, recognize the text, and edit it with a word processor.
- Image Editing: Enhance, crop and rotate images, or open them with an image-editing program of your choice.
- Annotation: Add removable notes, stamps and drawings to images.
- Treeview Window: View and arrange your folder hierarchy for easy access.
- Thumbnail Window: View files as thumbnails for easy identification.

System requirements for Presto![®] PageManager[®]

- Mac OS[®] X 10.2.4 or greater
- CD-ROM drive
- Hard disk drive with at least 400 MB of free disk space for installation

NewSoft Technical Support

For USA

Company name:	NewSoft America Inc.
Postal Address:	500 Yosemite Drive Suite 100 Milpitas, CA95035
Telephone:	408-503-1212
Fax:	408-503-1201
E-mail Address:	contactus@newsoftinc.com
URL:	http://www.newsoftinc.com
For Canada	
E-mail Address:	contactus@newsoftinc.com (English)
Germany	
Company name:	SoftBay GmbH
Postal Address:	Carlstraße 50, D-52531, Übach-Palenberg
Telephone:	0900 1 409640
	(For callers from within Germany, this is not a toll-free call, Callers will be charged at Euro 0.59 per minute)
E-mail Address:	de.nsc@newsoft.eu.com
URL:	http://de.newsoft.eu.com
UK	
Company name:	Avanquest UK
Postal Address:	The Software Centre East Way, Lee Mill Industrial Estate Plymouth Devon. PL21 9GE
Telephone:	44-01752-201148
Fax:	44-01752-894833
E-mail Address:	uk.nsc@newsoft.eu.com
URL:	http://uk.newsoft.eu.com
France	
Company name:	5CA
Postal Address:	Not Open
Telephone:	089-965-01-09
	(For callers from within France, this is not a toll-free call, Callers will be charged at \pounds 1.35 + \pounds 0.34 per minute)
E-mail Address:	fr.nsc@newsoft.eu.com
URL:	http://fr.newsoft.eu.com

Italy

Company name:	5CA
Postal Address:	Not Open
Telephone:	0899399878
	(For callers from within Italy, this is not a toll-free call, Caller will be charged at Euro 0.80 per minute)
E-mail Address:	it.nsc@newsoft.eu.com
URL:	http://it.newsoft.eu.com
Spain	
Company name:	5CA
Postal Address:	Not Open
Telephone:	0807505598
	(For callers from within Spain only, this is not a toll-free call, Caller will be charged at Euro 0.94 per minute)
E-mail Address:	sp.nsc@newsoft.eu.com
Other countries	
E-mail Address:	

10 ControlCenter2

🖉 Note

The features available to you in ControlCenter2 may vary depending on the model number of your machine.

Using ControlCenter2

ControlCenter2 is a software utility that lets you quickly and easily access your often used applications. Using ControlCenter2 eliminates the need to manually launch specific applications. The icon will appear on the

menu bar. To open the ControlCenter2 window, click the *section* icon and choose **Open**. ControlCenter2 has the following operations:

- 1 Scan directly to a file, E-mail, word processor or graphics application of your choice. (1)
- 2 Custom Scan buttons let you configure a button to meet your own application needs. (2)
- 3 Access the Copy features available via your Macintosh[®]. (3)
- 4 Access the settings available to configure your device. (4)
- 5 You can choose which machine ControlCenter2 will connect with from the **Model** pop-up menu. (5) You can also open the **Device Selector** window by choosing **Other...** from the **Model** pop-up menu.
- 6 You can also open the configuration window for each function by clicking the **Configuration** button. (6)



Turning the AutoLoad feature off

If you do not want ControlCenter2 to run automatically each time you start your Macintosh[®], do the following.

 Click the ControlCenter2 icon in the menu bar and choose Preferences. The ControlCenter2 preference window appears.

- 2 Uncheck Start ControlCenter on computer startup.
- Click **OK** to close the window.



Rote

The ControlCenter2 application icon is in Macintosh HD/Library/Printers/Brother/Utilities/ControlCenter.

SCAN

There are four scan buttons for the Scan to Image, Scan to OCR, Scan to E-mail and Scan to File applications.

■ Image (Default: Apple[®] Preview)

Lets you scan a page directly into any graphic viewer/editor application. You can choose the destination application, such as Adobe[®] Photoshop[®] or any kind of image editing application on your Macintosh[®].

■ OCR (Default: Apple[®] TextEdit)

Lets you scan a page or document, automatically run the OCR application and put text (not a graphic image) into a word processing application. You can choose the target word processing application, such as Microsoft[®] Word or any word processing application on your Macintosh[®]. You must have Presto![®] PageManager[®] installed on your Macintosh[®].

E-mail (Default: your default E-mail software)

Lets you scan a page or document directly into an E-mail application as a standard attachment. You can choose the file type and resolution for the attachment.

File

Lets you scan directly to a disk file. You can change the file type and destination folder, as needed.

ControlCenter2 gives you the ability to configure the hardware **Scan** key on your machine and the ControlCenter2 Software button for each scan feature. To configure the hardware **Scan** key on your machine choose the **Device Button** (click each of the Control Center buttons while holding down the **Ctrl** key and choose **Device Button**) in the configuration menu for each of the **SCAN** buttons. To configure the Software button in ControlCenter2, choose the **Software Button** tab (click each of the Control Center buttons while holding down the **Ctrl** key and choose **Software Button**) in the configuration menu for each of the SCAN buttons.

CUSTOM SCAN

You can configure the button name and settings for each of these buttons to meet your specific needs by clicking a button while holding down the **Ctrl** key and following the configuration menus.

COPY / PC-FAX

COPY - Lets you use your Macintosh[®] and any printer driver for enhanced copy operations. You can scan a page on the machine and print the copies using any of the features of the machine's printer driver, or you can direct the copy output to any standard printer driver installed on your Macintosh[®] including network printers.

PC-FAX - Lets you scan a page or document and automatically send the image as a fax from the Macintosh[®]. (MFC models only)

You can configure your preferred settings on up to four buttons.

DEVICE SETTINGS

You can configure or check the machine settings.

Remote Setup (MFC models only)

Lets you open the Remote Setup Program. (Remote Setup on page 210.)

Quick-Dial (MFC models only)

Lets you open the Set Quick-Dial window of the Remote Setup. (*Remote Setup* on page 210.)

Status Monitor

Allows you to open the Status Monitor Utility.

SCAN

There are four buttons for the Scan to Image, Scan to OCR, Scan to E-mail and Scan to File applications.



You can configure your machine's Scan key for each ControlCenter2 button in the Device Button tab.

To change the default settings, click the **Image** button while holding the **Ctrl** key and choose **Device Button**.



Image (example: Apple[®] Preview)

The **Scan to Image** feature lets you scan an image directly into your graphics application for image editing. To change the default settings, click the button while holding down the **Ctrl** key and choose **Software Button**.

C	ftware Button Device Button
Target Application	
Apple Preview	Add Delete
File Type	
PDF (*.pdf)	÷
Resolution	Brightness
300 x 300 dpi	■
Scan Type	
24 Bit Color	Contrast
Document Size	≡ ≣
A4 210 x 297 m	
	olex (two-sided) Scanning Long-edge binding Short-edge binding
🗆 S	w Scanner Interface
Restore Defaults	

If you want to scan and then crop a portion of a page after pre-scanning the document, check the **Show Scanner Interface** box.

If you want to scan a duplex document, check **Duplex (two-sided) Scanning** and choose **Long-edge binding** or **Short-edge binding**. (MFC-9840CDW and DCP-9045CDN only)

Change the other settings, if needed.

To change the destination application, choose the destination application from the **Target Application** popup menu. You can add an application to the lists by clicking the **Add** button.

00	Add Scan to Image Application
Application Na	change your application for "Scan to Image", please specify ime, Application Location and File Type. "Add" button to add your application.
Application Na	Ime
My Original Vi	iewer
Application	
iPhoto	Browse
File Type	

Enter the **Application Name** (up to 30 characters) and choose your preferred application by clicking the **Browse** button. Also choose the **File Type** from the pop-up menu.

You can delete an application that you have added. Just choose the **Application Name** and click the **Delete** button.

00	Delete	Scan to Image A	pplication	
select your ap	plicatioin from	ed application fi "Application Na on to delete you		e", please
Application Na	ame			
My Original V	√iewer	•		
Application				
iPhoto				
File Type				
JPEG (*.jpg)				
			Cancel	Delete

Note

This function is also available for **Scan to E-mail** and **Scan to OCR**. The window may vary depending on the function.

OCR (word processing application)

Scan to OCR converts the graphic page image data into text which can be edited by any word processing application. You can change the default word processing application.

To configure Scan to OCR, click the button while holding down the Ctrl key and choose Software Button.

l	Software Button Device Button
Target Application	n
Apple TextEdit	Add Delete
File Type	
Text (*.txt)	•
OCR Software	
Newsoft OCR	•
OCR Language	
English	•
Resolution	Brightness
400 x 400 dpi	÷ ■
	50
Scan Type Black & White	• • • • • • • • • • • • • • • • • • •
(Contrast
Document Size	
A4 210 x 297 H	
	Duplex (two-sided) Scanning
Links p	Long-edge binding Short-edge binding
0	Show Scanner Interface
Restore Default	5
Cincatore Delaute	<u>.</u>

To change the word processing application, choose the destination word processing application from the **Target Application** pop-up menu. You can add an application to the list by clicking the **Add** button. To delete an application, click the **Delete** button.

If you want to scan and then crop a portion of a page after pre-scanning the document, check the **Show Scanner Interface** box.

If you want to scan a duplex document, check **Duplex (two-sided) Scanning** and choose **Long-edge binding** or **Short-edge binding**. (MFC-9840CDW and DCP-9045CDN only)

E-mail

The **Scan to E-mail** feature lets you scan a document to your default E-mail application, so you can send the scanned job as an attachment. To change the default E-mail application or attachment file type, click the button while holding down the **Ctrl** key and choose **Software Button**.

2 4 5 6 5	
E-mail Application	
Apple Mail	Add Delete
File Type	
JPEG (*.jpg)	•
Resolution	Brightness
200 x 200 dpi	—
Scan Type	
24 Bit Color	Contrast
Document Size	= =
A4 210 x 297 mm	<u> </u>
Long-ed	-sided) Scanning Ige binding Ige binding
Show Scann	er Interface
Restore Defaults	

To change the E-mail application, choose your preferred E-mail application from the **E-mail Application** pop-up menu. You can add an application to the lists by clicking the **Add** button ¹. To delete an application, click the **Delete** button.

¹ When you first start ControlCenter2 a default list of compatible E-mail applications will appear in the pop-up menu. If you are having trouble using a custom application with ControlCenter2 you should choose an application from the list.

If you want to scan and then crop a portion of a page after pre-scanning the document, check the **Show Scanner Interface** box.

If you want to scan a duplex document, check **Duplex (two-sided) Scanning** and choose **Long-edge binding** or **Short-edge binding**. (MFC-9840CDW and DCP-9045CDN only)

Supported file types

You can choose from the following list of file types for attachments or for saving to a folder.

Choose from the pop-up menu the type of file you want the scanned images to be saved in.

- Windows Bitmap (*.bmp)
- JPEG (*.jpg)
- TIFF Uncompressed (*.tif)
- TIFF Compressed (*.tif)
- TIFF Multi-Page Uncompressed (*.tif)
- TIFF Multi-Page Compressed (*.tif)
- Portable Network Graphics (*.png)
- PDF (*.pdf)

File

The **Scan to File** button lets you scan an image to a folder on your hard disk in any file format. This lets you easily archive your paper documents. To configure the file type and folder, click the button while holding down the **Ctrl** key and choose **Software Button**.

	Software Button	Device Button
File Name	(Date) (Nu	mber)
CCF	20022007_00	000.jpg 🗌 Show Folder
File Type		
[JPEG (*.jpg)		•
Destination Folde	r	
Pictures	Browse	Show Save As window
Resolution		Brightness
300 x 300 dpi	•	•
Scan Type		S
24 Bit Color	•	Contrast
Document Size		= <u> </u>
A4 210 x 297 r	nm 🛟	<u> </u>
	Duplex (two-sided • Long-edge bir • Short-edge bir Show Scanner Inter	nding
Restore Default	0	
Citestore Derauti		

You can change the File Name. Enter the file name you want to use for the document (up to 100 characters) in the **File Name** box. File name will be the file name you registered, current date and sequential number.

Choose the file type for the saved image from the **File Type** pop-up menu. You can save the file to the default folder, or choose your preferred folder by clicking the **Browse** button.

To show where the scanned image is saved when scanning is finished, check **Show Folder** box. To specify the destination of the scanned image everytime, check **Show Save As window** box.

If you want to scan and then crop a portion of a page after pre-scanning the document, check the **Show Scanner Interface** box.

If you want to scan a duplex document, check **Duplex (two-sided) Scanning** and choose **Long-edge binding** or **Short-edge binding**. (MFC-9840CDW and DCP-9045CDN only)

🖉 Note

For supported file types, see Supported file types on page 186.

CUSTOM SCAN

There are four buttons which you can configure to fit your scanning needs.

To customize a button, click the button while holding down the **Ctrl** key, and the configuration window appears. There are four scan functions: **Scan to Image**, **Scan to OCR**, **Scan to E-mail** and **Scan to File**.

Scan to Image

Lets you scan a page directly into any image viewer/editor software. You can choose any image editor application on your Macintosh[®] as a destination.

Scan to OCR

Converts scanned documents into editable text files. You can choose the destination application for the editable text. You must install Presto![®] PageManager[®] for this feature.

Scan to E-mail

Attaches the scanned images to an E-mail message. You can also choose the file attachment type and create a quick send list of E-mail addresses chosen from your E-mail address book.

Scan to File

Lets you save a scanned image to any folder on a local or network hard disk. You can also choose the file type to be used.



User-defined button

To customize a button, click the button while holding down the **Ctrl** key, and the configuration window appears. Follow these guidelines for button configuration.

Scan to Image

General tab

Enter a name in **Name for Custom** (up to 30 characters) to create the button name.

Choose the type of scan from the Scan Action field.

	General Setti	ings	
Name for Custom1			
Custom1			
Scan Action			
💽 Scan to Image			
O Scan to OCR			
◯ Scan to E-mail			
🔘 Scan to File			

Settings tab

Choose the Target Application, File Type, Resolution, Scan Type, Document Size, Duplex (two-sided) Scanning (if necessary), Brightness and Contrast settings.

Target Application	
Apple Preview	Add Delete
File Type	
PDF (*.pdf)	•
300 x 300 dpi Scan Type 24 Bit Color Document Size	Contrast
A4 210 x 297 mm	
Duplex (two- Cong-edg Short-edg Short-edg Show Scanner	ge binding

Scan to OCR

General tab

Enter a name in Name for Custom (up to 30 characters) to create the button name.

Choose the type of scan from the Scan Action field.

	General Setting	s	
Name for Custom2			
Custom2			
Scan Action			
○ Scan to Image			
🖲 Scan to OCR			
O Scan to E-mail			
O Scan to File			

Settings tab

Choose the Target Application, File Type, OCR Software, OCR Language, Resolution, Scan Type, Document Size, Duplex (two-sided) Scanning (if necessary), Show Scanner Interface, Brightness and Contrast settings.

Target Application	
Apple TextEdit	Add Delete
File Type	
Text (*.txt)	•
OCR Software	
Newsoft OCR	•
OCR Language	
English	1
Scan Type Black & White	
Black & White	Contrast
Document Size	
A4 210 x 297 mm) — — L
Long-e Short-e	o-sided) Scanning edge binding edge binding ner Interface
	lei internace
_ Snow Scan	

Scan to E-mail

General tab

Enter a name in Name for Custom (up to 30 characters) to create the button name.

Choose the type of scan from the **Scan Action** field.

	General Settings	
Name for Custom3		
Custom3		
Scan Action		
🔘 Scan to Image		
◯ Scan to OCR		
🖲 Scan to E-mail		
🔘 Scan to File		

Settings tab

Choose the E-mail Application, File Type, Resolution, Scan Type, Document Size,

Duplex (two-sided) Scanning (if necessary), Show Scanner Interface, Brightness and **Contrast** settings.

E-mail Application	
Apple Mail	Add Delete
File Type	
JPEG (*.jpg)	•
Resolution	Brightness
Scan Type	
24 Bit Color	Contrast
Document Size A4 210 x 297 mm	
Duple	x (two-sided) Scanning

Scan to File

General tab

Enter a name in **Name for Custom** (up to 30 characters) to create the button name. Choose the type of scan from the **Scan Action** field.

	CUSTOM SCAN4	
	General Settings	
Name for Custom4		
Custom4		
Scan Action O Scan to Image		
Scan to OCR		
-		
O Scan to E-mail		
 Scan to File 		

Settings tab

Choose the file format from the **File Type** pop-up menu. Save the file to the default folder or choose your preferred folder by clicking the **Browse** button.

Choose the **Resolution**, **Scan Type**, **Document Size**, **Duplex (two-sided) Scanning** (if necessary), **Show Scanner Interface**, **Brightness** and **Contrast** settings and enter the file name if you want to change it.

If you want to specify the destination of the scanned image, check **Show Save As Window**. If you want to scan and then crop a portion of a page after pre-scanning the document, check the **Show Scanner Interface** box.

	General Settings
File Name	(Date) (Number)
CCF	20022007_00000.jpg Show Folder
File Type	
JPEG (*.jpg)	•
Destination Folder	
Pictures	Browse Show Save As Window
Resolution	Brightness
300 x 300 dpi	
Scan Type	
24 Bit Color	Contrast
Document Size	
6.00 · · · · · · · · · · · · · · · · · ·	lex (two-sided) Scanning Long-edge binding
	Short-edge binding
	w Scanner Interface
Cha	w scanner interface
Show	

COPY / PC-FAX (PC-FAX is MFC models only)

The **Copy1-Copy4** buttons can be customized to let you use advanced copy and fax functions such as N in 1 printing.



To use the **Copy** buttons, configure the printer driver by clicking the button while holding down the **Ctrl** key.

00	Copy1	
Name for Copy1		
Copy1		
Copy Ratio		
100% copy	•	
Resolution	Brightness	
300 x 300 dpi	50	
Scan Type		
24 Bit Color	Contrast	
Document Size		
A4 210 x 297	mm ; 🔽 🖓	
	Duplex (two-sided) Scanning Long-edge binding Short-edge binding Show Scanner Interface	
Printer	MFC_XXXX	
Presets	Standard	
Restore Defau	Its Cancel OK	

Enter a name in Name for Copy (up to 30 characters) and choose Copy Ratio.

Choose the **Resolution**, **Scan Type**, **Document Size**, **Duplex (two-sided) Scanning** (if necessary), **Show Scanner Interface**, **Brightness** and **Contrast** settings to be used.

Before finishing the **Copy** button configuration, set the **Printer**. Then choose your print settings from the **Presets** pop-up menu, then click **OK** to close the dialog box. By clicking the configured copy button, the print dialog box opens.


To copy, choose **Copies & Pages** from the pop-up menu.

To fax, choose **Send Fax** from the pop-up menu. (Sending a fax (MFC models only) on page 158.)

Printer:	MFC-XXXX	•
Presets:	Standard	•
	Copies & Pages	•
Copies:	1 Collated	
Pages:	All From: 1 to: 1]
? PDF • Prev	view	Cancel Print

DEVICE SETTINGS

You can configure the machine settings.

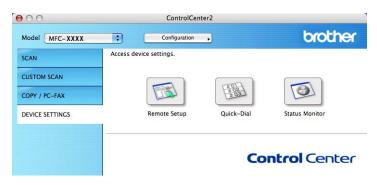

Remote Setup (MFC models only)

The **Remote Setup** button lets you open the Remote Setup Program window to configure the machine setting menus.

Note

For details, see *Remote Setup* on page 210.

		Brother MFC Remote Setup Program
	IFC-9440CN General Setup Setup Send Setup Send Set Quick-Dial Report Setting Remote Fax Opt Copy Printer USB Direct I/F USB Direct I/F Direct Print Scan to USB PictBridge LAN TCP/IP Scan to FTP Initial Setup	Brother MFC Remote Setup Program General Setup Mode Timer 2 Mins : Paper Type Tray#1 Plain : MP Tray Plain : Paper Size Tray#1 A4 : MP Tray Letter : Nolume Ring Med : Speaker Med : Auto Daylight On Off Ecology
		Toner Save Off P Sleep Time 5 5 Tray Use Copy MP>T1 9 Fax T1>MP 6 Print MP>T1 5
E	xport Import	Print OK Cancel Apply

10

Quick-Dial (MFC models only)

The **Quick-Dial** button lets you open the **Set Quick-Dial** window in the Remote Setup Program, so you can easily register or change the dial numbers on your Macintosh[®].

MFC-XXXX	Set Quick-Dial		
General Setup	FAX/TEL NUMBER	Туре	DESTINATION G1
▼ Fax	*01	Fax/Tel 🛟	
Setup Receive Setup Send	*02	Fax/Tel 🛟	
Set Quick-Dial	*03	Fax/Tel 🛟	
Report Setting	*04	Fax/Tel 🛟	
Remote Fax Opt	*05	Fax/Tel 🛟	
Copy Printer	*06	Fax/Tel 🛟	
▼ USB Direct I/F	*07	Fax/Tel 🛟	
Direct Print	*08	Fax/Tel	
Scan to USB	*09	Fax/Tel	
PictBridge ▼ LAN	*10	Fax/Tel	
TCP/IP	*11	Fax/Tel	
Scan to FTP	*12	Fax/Tel	
Initial Setup	*13	Fax/Tel	
	*14	Fax/Tel	
	*15	Fax/Tel	
	*16	Fax/Tel	
	#001	Fax/Tel	
	#002	Fax/Tel	
	#003	Fax/Tel	
	#004	Fax/Tel	
	#005	Fax/Tel	
	#006	Fax/Tel	Ē
	#007	Fax/Tel	
			() () () () () () () () () ()
Export	Print	ОК	Cancel Apply

Status Monitor

The **Status Monitor** button allows you to monitor the status of one or more devices, allowing you to get immediate notification of errors such as a paper jam. (See *Status Monitor* on page 136.)

00	ControlCen	ter2	
Model MFC- XXXX	Configuration	•	brother
SCAN	Access device settings.		
CUSTOM SCAN			
COPY / PC-FAX		100001 100001	
DEVICE SETTINGS	Remote Setup	Quick-Dial	Status Monitor
	Status Monitor lets you check th device status.		ntrol Center



Network Scanning

If you want to scan from the machine on a network, you must choose the networked machine in the Device Selector application located in **Macintosh HD/Library/Printers/Brother/Utilities/DeviceSelector** or from the **Model** pop-up menu in the main screen of ControlCenter2. If you already installed the MFL-Pro Suite Software following the network installation steps in the Quick Setup Guide then this selection should already be made.

To use the machine as a network scanner, the machine must be configured with a TCP/IP address. You can set or change the address settings from the control panel. (See *Control Panel Setup in the Network User's Guide*.)

🖉 Note

For network scanning, maximum 25 clients can be connected to one machine on a network. For example, if 30 clients try to connect at a time, 5 clients will not be shown on the LCD.

Before using Network Scanning

Configuring network scanning

From Library, choose Printers, Brother, Utilities and DeviceSelector, and then double-click Device Selector.

The **Device Selector** window appears. This window can also be opened from ControlCenter2. For more information, see *Using ControlCenter2* on page 180.

2 Specify your machine by IP address or mDNS service Name. To change the IP address, enter the new IP address. You can also choose a machine from the list of available machines. Click **Browse** to show the list.

00	Device Selector
Connection Type Network	
O Specify your machine by address	□ Register your computer with the "Scan To" functions at the machine
IP Address :	Display Name (Max 15 characters)
Specify your machine by Name	"Scan To" Button PIN number for this computer
mDNS service name :	Enable PIN number protection
	PIN number ("0" – "9", 4 digits)
Browse	Retype PIN number
	Cancel OK

Click OK.

🖉 Note


- To use 'Scan To' button features on the machine, click the check box for Register your computer with the "Scan To" functions at the machine. Then enter the name you want to be displayed on the machines LCD for your Macintosh[®]. You can use up to 15 characters.
- You can avoid receiving unwanted documents by setting a 4-digit Pin number. Enter your PIN number in the **PIN number** and **Retype PIN number** field. To send data to a computer protected by a PIN number, the LCD prompts you to enter the PIN number before the document can be scanned and sent to the machine. (See *Using the Scan key* on page 198.)

Connection Type Network	
O Specify your machine by address IP Address :	Register your computer with the "Scan To" functions at the machine Display Name
	(Max 15 characters)
Specify your machine by Name	"Scan To" Button PIN number for this compute
mDNS service name :	Enable PIN number protection
	PIN number ("0" – "9", 4 digits)
Browse	Retype PIN number
	(Cancel) OK

Using the Scan key

Note

- If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L) edge or 2sided (S) edge depending on your document layout.
- Choose your document layout from following table:

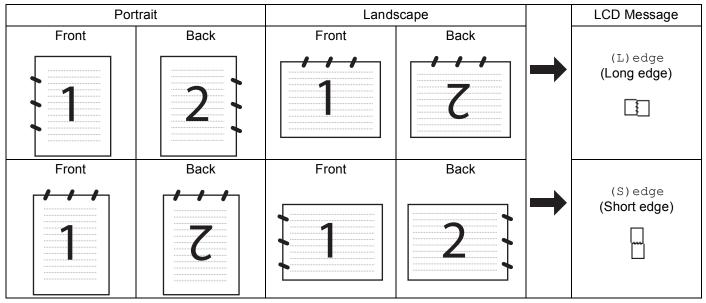

Document Layout Table

- Duplex scan is supported by the MFC-9840CDW and DCP-9045CDN only.
- Duplex scan is available from the ADF only.
- Duplex scan is not available for legal size paper.

Scan to E-mail (PC)

When you choose Scan to E-mail (Macintosh[®]), your document will be scanned and sent directly to the Macintosh[®] you designated on your network. ControlCenter2 will activate the default E-mail application on the designated Macintosh[®] for addressing to the recipient. You can scan a black and white or Colour document and it will be sent with the E-mail from the Macintosh[®] as an attachment.

You can change the scan configuration. (See *E-mail* on page 186.)

1 Put the document face up in the ADF, or face down on the scanner glass.

- 2 Press 🔊 (Scan).
- 3) Press ▲ or ▼ to choose Scan to E-mail.

Press **OK**. If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step **(6)**. If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step **(4)**.

Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK. If your machine is DCP-9045CDN, go to step ⁽⁶⁾.

```
🖉 Note
```

If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L) edge or 2sided (S) edge depending on your document layout.

- 5 Press ▲ or ▼ to choose PC. Press OK.
- 6 Press ▲ or ▼ to choose the destination Macintosh[®] you want to use for E-mailing your document. Press OK.

If the LCD prompts you to enter a Pin number, enter the 4-digit Pin number for the destination Macintosh[®] on the control panel. Press **OK**.

Press Mono Start or Colour Start.


The machine starts the scanning process.

Note

- Scan type depends on the settings on the Device Button tab, Mono Start or Colour Start do not change the settings.
- If you want the scanned data in colour, choose colour in the scan type on the Device Button tab of the ControlCenter2 configuration. If you want the scanned data in black and white, choose black and white in the scan type on the Device Button tab of the ControlCenter2 configuration. (See *E-mail* on page 186.)


Scan to E-mail (E-mail server, MFC-9840CDW only)

When you choose Scan to E-mail (E-mail Server) you can scan a black and white or colour document and send it directly on an E-mail address from the machine. You can choose PDF or TIFF for Black and White and PDF or JPEG for colour.

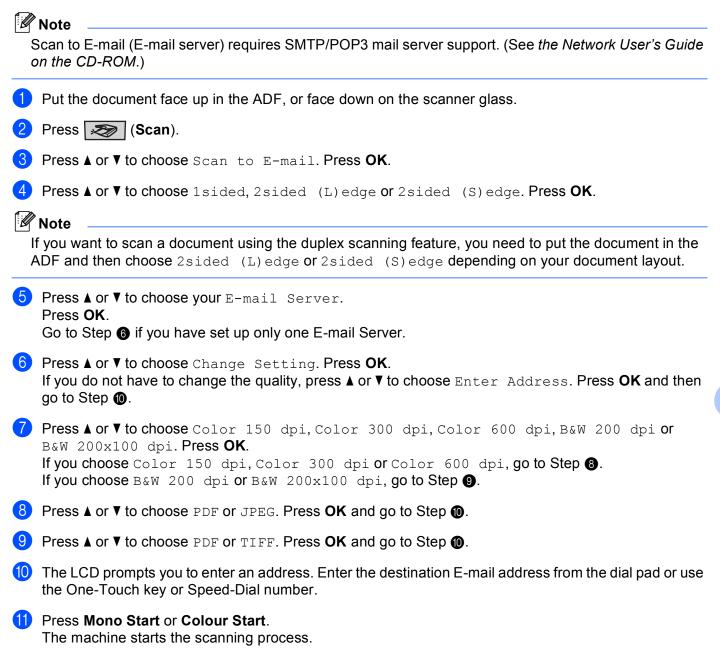

Using One-Touch or Speed-Dial number

You can also scan a document directly to an address you registered in a One-Touch or Speed-Dial number. When you scan the document, the settings you registered with the One-Touch or Speed-Dial will be used for the quality and the file type. Only One-Touch or Speed Dials with an E-mail address registered can be used when you scan data using One-Touch or Speed-Dial. (I-fax addresses are not available for use.)

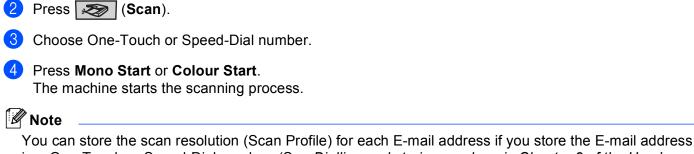

Put the document face up in the ADF, or face down on the scanner glass.

You can store the scan resolution (Scan Profile) for each E-mail address if you store the E-mail address in a One-Touch or Speed-Dial number. (See *Dialling and storing numbers in Chapter 8 of the User's Guide*.)

Scan to Image

When you choose Scan to Image, your document will be scanned and sent directly to the Macintosh[®] you designated on your network. ControlCenter2 will activate the default graphics application on the designated Macintosh[®]. You can change the Scan configuration. (See *Image (example: Apple[®] Preview)* on page 183.)

- 1 Put the document face up in the ADF, or face down on the scanner glass.
- 2 Press 🔊 (Scan).
- 3) Press ▲ or V to choose Scan to Image.
 - Press OK.

If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step 6. If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step 4.

4 Press ▲ or ▼ to choose 1 sided, 2 sided (L) edge or 2 sided (S) edge. Press OK.

🖉 Note

If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L)edge or 2sided (S)edge depending on your document layout.

5 Press ▲ or ▼ to choose the destination Macintosh[®] you want to send to. Press OK. If the LCD prompts you to enter a Pin number, enter the 4-digit Pin number for the destination Macintosh[®] on the control panel. Press OK.

6 Press Mono Start or Colour Start. The machine starts the scanning process.

🖉 Note

- · Scan type depends on the settings on the Device Button tab, Mono Start or Colour Start do not change the settings.
- If you want the scanned data in colour, choose colour in the scan type on the **Device Button** tab of the ControlCenter2 configuration. If you want the scanned data in black and white, choose black and white in the scan type on the **Device Button** tab of the ControlCenter2 configuration. (See Image (example: Apple[®] Preview) on page 183.)

Scan to OCR

When you choose Scan to OCR, your document will be scanned and sent directly to the Macintosh[®] you designated on your network. ControlCenter2 will activate the OCR software installed on your Macintosh® (Presto!® PageManager®) and convert your document into text for viewing and editing from a word processing application on the designated Macintosh[®]. You can change the Scan configuration. (See OCR (word processing application) on page 185.)



Press 😥 (Scan).

3 Press ▲ or V to choose Scan to OCR.

Press OK. If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step 6. If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step 4.

Press ▲ or ▼ to choose 1sided, 2sided (L) edge or 2sided (S) edge. Press OK.

🖉 Note

If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L) edge or 2sided (S) edge depending on your document layout.

5 Press \blacktriangle or \lor to choose the destination Macintosh[®] you want to send to. Press OK. If the LCD prompts you to enter a Pin number, enter the 4-digit Pin number for the destination Macintosh[®] on the control panel. Press OK.

6 Press Mono Start or Colour Start.


The machine starts the scanning process.

🖉 Note

Scan type depends on the settings on the Device Button tab, Mono Start or Colour Start do not change the settings.

Scan to File

When you choose Scan to File, you can scan a black and white or colour document and send it directly to a Macintosh[®] you designate on your network. The file will be saved in the folder and file format that you have configured in ControlCenter2 on the designated Macintosh[®]. You can change the Scan configuration. (See *File* on page 187.)

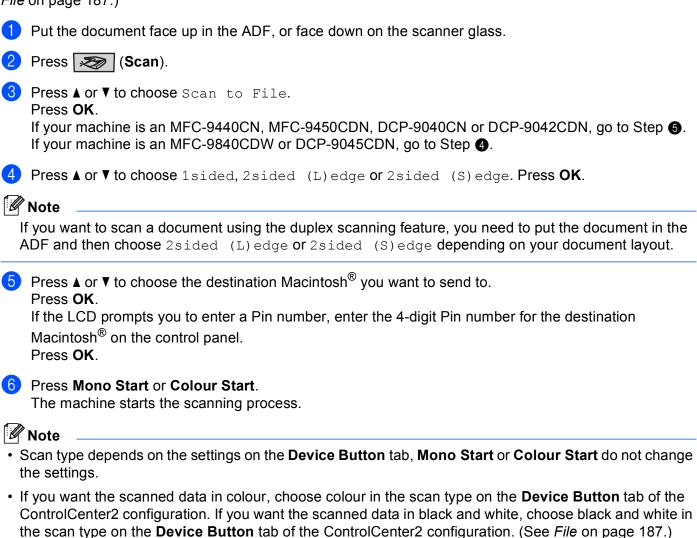

• If you would like to change the file name of scanned documents, enter the file name in **File Name** section on the **Device Button** tab of the ControlCenter2 configuration.


Scan to FTP

When you choose **Scan to FTP**, you can scan a black and white or colour document directly to an FTP server located locally on your network or on the internet.

The details required to use Scan to FTP can be entered manually at the control panel or by using Web Based Management to pre-configure and store the details in an FTP Profile.

For information on how to manually enter the Scan to FTP details, see Scan to FTP Manual

Method on page 208. To use Web Based Management, type **http://xxx.xxx.xxx** (where xxx.xxx.xxx is the IP address of your machine) into your browser, and then you can configure or change the settings in the **Administrator Settings**. You can configure up to ten FTP server Profiles.

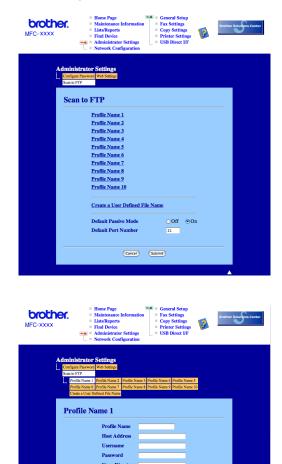

File Na

File Typ

File Typ

•

PDF :

PDF € Off ⊙On

- 1 Enter the name that you want to use for the profile of the FTP server. This name will be displayed on the LCD of the machine and can be up to 15 characters.
- 2 The Host Address is the domain name of the FTP server. Enter the Host Address (for example ftp.example.com) (up to 60 characters) or the IP address (for example 192.23.56.189).
- 3 Enter the Username that has been registered with the FTP server for the machine (up to 32 characters).
- 4 Enter the Password for access to the FTP server for the Username that was registered (up to 32 characters).
- 5 Enter the destination folder where your document will be stored on the FTP server (for example /brother/abc/) (up to 60 characters).
- 6 Choose the file name you want to use for the scanned document. You can choose from seven present and two user defined File Names. The file name that will be used for your document will be the file name you selected plus the last 6 digits of the flatbed/ADF scanner counter plus the file extension (For example, Estimate098765.pdf). You can also manually enter a File Name up to 15 characters.
- Choose the quality that the document will be scanned at from the pull-down list. You can choose Color 150, Color 300, Color 600, B&W 200 or B&W 200x100.
- 8 Choose the file type for the document from the pull-down list. You can choose PDF or JPEG for colour documents and PDF or TIFF for B/W document.
- 9 You can set Passive Mode to OFF or ON depending on your FTP server and network firewall configuration. By default this setting is ON. You can also change the port number used to access the FTP server. The default for this setting is port 21. In most cases these two settings can remain as default.

Creating a user defined File Name

In addition to the seven present file names you can store two user defined file names that can be used for creating an FTP Server Profile.

1 From the Scan to FTP screen in Web Based Management, choose **Create a User Defined File Name**.



2 Enter a file name in one of the two user defined fields and click Submit. A maximum of 15 characters can be entered in each of the user defined name fields.

MFC-XXXX	Home Page General Stop Adatestance Information Lab/Reports Fod Device Network Configuration Struck Configuration Struck Configuration
Configu Scan to I Prot Crea	strator Settings Proved Web Samp Proved Web Samp Read Data Same 2 Profe New 2 Profe New 4 Profe New 5 Read Data New 7 Profe New 1 Profe New 9 Profe New 8 as to Model The New 1 Profe New 9 Profe New 8 ate a User Defined File Name
	BRNX00X Estimate S. Report Order sheet S. Commer sheet Check Receipt S. S.
	(Carcel) (Submit)

Scan to FTP using FTP Server Profiles
1 Put the document face up in the ADF, or face down on the scanner glass.
2 Press 🔊 (Scan).
3 Press ▲ or ▼ to choose Scan to FTP. Press OK. If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step ⑤. If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step ④.
Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK to begin the scanning process.
🖉 Note
If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L)edge or 2sided (S)edge depending on your document layout.
5 Press ▲ or ▼ to choose one of the FTP server profiles listed. Press OK .
If the Scan to FTP profile is complete, you will automatically go to Step 1.
If the Scan to FTP profile is not complete, for instance, the login account name and password are missing or the quality or file type are not chosen, you will be prompted to enter any missing information in the following steps.
6 Choose one of the options below:
■ Press ▲ or ▼ to choose Color 150 dpi, Color 300 dpi or Color 600 dpi. Press OK and go to ⑦.
■ Press A or V to choose B&W 200 dpi or B&W 200x100 dpi. Press OK and go to ⑧.
Press ▲ or ▼ to choose PDF or JPEG. Press OK and go to Step ⑨.
8 Press ▲ or V to choose PDF or TIFF. Press OK.
9 Use the dial pad to enter the username. Press OK .
Use the dial pad to enter the password. Press OK .
1 Do one of the following:
If you want to start scanning, press Mono Start or Colour Start and go to Step ().
If you want to change the file name, go to Step 10.
12 Press ▲ or ▼ to choose a file name you want to use and press OK. Press Mono Start or Colour Start and go to Step .
Note

If you want to change the file name manually, go to step $\ensuremath{\mathfrak{G}}$.

Press ▲ or ▼ to choose <Manual>. Press OK. Enter the file name you want to use (up to 15 characters) and press OK. Press Start.

14 The LCD shows Connecting. When the connection to the FTP server is successful the machine starts the scanning process.

Note

Scan type depends on the settings, Mono Start or Colour Start do not change the settings.

Scan to FTP Manual Method

1	Put the document face up in the ADF, or face down on the scanner glass.
2	Press (Scan).
3	Press ▲ or ▼ to choose Scan to FTP. Press OK. If your machine is an MFC-9440CN, MFC-9450CDN, DCP-9040CN or DCP-9042CDN, go to Step ⑤. If your machine is an MFC-9840CDW or DCP-9045CDN, go to Step ④.
	Press ▲ or ▼ to choose 1sided, 2sided (L)edge or 2sided (S)edge. Press OK.
	If you want to scan a document using the duplex scanning feature, you need to put the document in the ADF and then choose 2sided (L)edge or 2sided (S)edge depending on your document layout.
_	Press ▲ or ▼ to choose <manual>. Press OK.</manual>
	If there is no FTP Profile configured, skip Step 6 and go to Step 6.
6	Use the dial pad to enter the FTP host address (for example ftp.example.com), (up to 60 characters) or the IP address (for example 192.23.56.189). Press OK .
7	Use the dial pad to enter the destination folder (for example /brother/abc/, up to 60 characters). Press OK .
8	Press ▲ or ▼ to choose Enter Username or Change Setting. Press OK. If you choose Enter Username, go to Step 12. If you choose Change Setting, go to Step 13.
9	
9	

- 10 Press ▲ or ▼ to choose PDF or JPEG. Press OK and go to Step (2).
- 1 Press ▲ or ▼ to choose PDF or TIFF. Press OK.
- 12 Use the dial pad to enter the username. Press **OK**.
- Use the dial pad to enter the password. Press **OK**.
- 14 Do one of the following:
 - If you want to start scanning, press Mono Start or Colour Start and go to Step ().
 - If you want to change the file name, go to Step ().
- 15 Press ▲ or ▼ to choose a file name you want to use and press OK. Press Mono Start or Colour Start and go to Step

🖉 Note

If you want to change the file name manually, go to step (6).

- Press ▲ or ▼ to choose <Manual>. Press OK. Enter the file name you want to use (up to 15 characters) and press OK. Press Mono Start or Colour Start.
- 17 The LCD shows Connecting. When the connection to the FTP server is successful the machine starts the scanning process.

Note

- If a timeout or any other error occurs, start the Scan to FTP process again from the beginning ①. If the user name is entered incorrectly then the LCD will show Authenticate Err, please start the process again from the beginning ①.
- Scan type depends on the settings, Mono Start or Colour Start do not change the settings.

12 Remote Setup

Remote Setup (MFC models only)

The **Remote Setup** application lets you configure many machine settings from a Macintosh[®] application. When you access this application, the settings on your machine will be downloaded automatically to your Macintosh[®] and displayed on your Macintosh[®] screen. If you change the settings, you can upload them directly to the machine.

🖉 Note

The Remote Setup application icon is in Macintosh HD/Library/Printers/Brother/Utilities.

	Brother MFC Remote Setup Program
 MFC-99440CN General Setup Fax Set Up Receive Set Up Send Set Quick-Dial Report Setting Remote Fax Opt Copy Printer USB Direct I/F Direct Print Scan to USB PictBridge LAN TCP/IP Scan to FTP Initial Setup 	General Setup Mode Timer 2 Mins 6 Paper Type Tray#1 Plain 6 MP Tray Plain 7 MP Tray Plain 7 MP Tray Letter 7 Volume Ring Med 6 Speaker Med 7 Auto Daylight On Off Ecology Toner Save Off 7 Sleep Time 5 0 Tray Use Copy MP>T1 7 Fax 11>MP 7 Print MP>T1 7
Export Import	Wint OK Cancel Apply

OK

Lets you start uploading data to the machine and exit the Remote Setup application. If an error message is displayed, enter the correct data again and then click **OK**.

Cancel

Lets you exit the Remote Setup application without uploading data to the machine.

Apply

Lets you upload data to the machine without exiting the Remote Setup application.

Print

Lets you print the chosen items on the machine. You cannot print the data until it is uploaded to the machine. Click **Apply** to upload the new data to the machine and then click **Print**.

Export

Lets you save the current configuration setting to a file.

Import

Lets you read the setting from a file.

🖉 Note

- To save a setting, highlight setting (for example, **Set Quick-Dial**) from the setting list then click **Export**. Each setting you export is saved as a single file.
- If you need to change the machine that was registered to your Macintosh® during the installation of MFL-Pro Suite (see *the Quick Setup Guide*), or if the network environment was changed, you need to specify the new machine. Open the **Device Selector** and choose the new machine. (For network users only)

A Index

Α

В

BR-Script 3 mode		131
Bit compt c mode	•••••••••••••••••••••••••••••••••••••••	

С

ControlCenter2	
Macintosh [®]	180
ControlCenter3	
Windows [®]	

D

Device options Device Selector DeviceSelector	164, 196, 211
Drivers	
Macintosh [®]	
TWAIN	
Windows [®]	
printer	2
TWAIN	
WIA	

F

FAX (PC-FAX)	
Macintosh®	
sending	
Windows [®]	
address book	115
cover page	110
facsimile style	
group	
receiving	
sending	
simple style	113

Μ

Macintosh®	
------------	--

Ν

Network PC FAX	
Macintosh [®] (Send only)	158
Windows [®]	108

Ρ

PaperPort™ (Windows [®])	
exporting6	38
importing6	38
OCR	
Presto! [®] PageManager [®] (Macintosh [®])	77
Print quality2	20
Printer driver	31
PS printer driver	31

R_____

Remote Setup)
Macintosh [®]	
Windows [®] .	

S Sc

Scan Macintosh [®]	
into Macintosh [®]	
Network	
OCR	177
Presto! [®] PageManager [®]	
Resolution	
Scan key	
TWAIN compliant	
Windows [®]	
into PC	
Network	
Resolution	
Scan key	
ScanSoft™ PaperPort™	
TWAIN Compliant	
WIA Compliant	
Scan to FTP	-
Macintosh [®]	
Windows [®]	-



Visit us on the World Wide Web http://www.brother.com

This product is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.