

MFC-7440N  
MFC-7320



---

Before you can use the machine, you must set up the hardware and install the driver. Please read this 'Quick Setup Guide' for proper set up and installation instructions.

## STEP 1

Setting Up the Machine



## STEP 2






Installing the Driver & Software

**Setup is Complete!**

Keep this 'Quick Setup Guide' and the supplied CD-ROM in a convenient place for quick and easy reference at all times.



## Symbols used in this guide

 Warning	 Caution	 Improper Setup
Warnings tell you what to do to prevent possible personal injury.	Cautions specify procedures you must follow or avoid to prevent possible damage to the machine or other objects.	Improper Setup icons alert you to devices and operations that are not compatible with the machine.
 Note	 User's Guide, Software User's Guide or Network User's Guide	
Notes tell you how you should respond to a situation that may arise or give tips about how the current operation works with other features.	Indicates reference to the User's Guide, Software User's Guide or Network User's Guide which is on the CD-ROM we have supplied.	

## Safety Precautions

To use the machine safely .....	2
Regulations .....	3

## STEP 1 – Setting Up the Machine

Installing the drum unit and toner cartridge assembly.....	4
Loading paper in the paper tray .....	5
Install the power cord and phone line .....	6
Set Your Country .....	7
Setting the date and time .....	7
Setting your station ID.....	8
Tone and pulse dialling mode .....	8
Selecting a receive mode.....	9
Setting the phone line type.....	10
Setting the LCD contrast.....	10

## STEP 2 – Installing the Driver & Software

### Windows®

For USB Interface Cable Users (For Windows® 2000 Professional/XP/XP Professional x64 Edition/Windows Vista®).....	12
For Wired Network Interface Users (MFC-7440N only) (For Windows® 2000 Professional/XP/XP Professional x64 Edition/Windows Vista®).....	14
For Windows Server® 2003, see the Network User's Guide on the CD-ROM.	

### Macintosh®


For USB Interface Cable Users.....	16
For Mac OS® X 10.2.4 or greater.....	16
For Wired Network Interface Users (MFC-7440N only) .....	17
For Mac OS® X 10.2.4 or greater.....	17

## Consumables and Options

Consumables .....	19
-------------------	----

### Note

When you move the machine, grasp the side handholds that are under the scanner. Do NOT carry the MFC by holding it at the bottom.

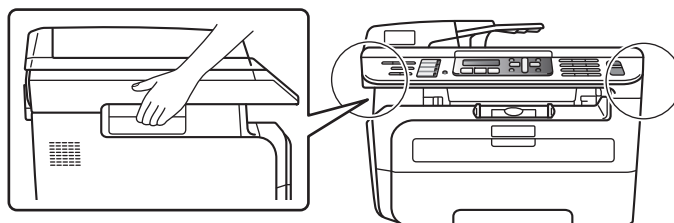

■ Illustration in this Quick Setup Guide are based on MFC-7440N.

# Safety Precautions

## To use the machine safely

Please keep these instructions for later reference and read them before attempting any maintenance.

### Warning



Before cleaning the inside of the machine, first unplug the telephone line cord, and then the power cord from the electrical socket.



DO NOT handle the plug with wet hands. Doing this might cause an electrical shock.




DO NOT use flammable substances, any type of spray or organic solvent/liquids containing alcohol/ammonia to clean the inside or outside of the machine. Doing this may cause a fire or electrical shock. Refer to Routine maintenance for how to clean the machine in the User's Guide.




Always make sure the plug is fully inserted.




After you have just used the machine, some internal parts of the machine will be extremely hot. When you open the front or back cover of the machine, DO NOT touch the shaded parts shown in the illustration.

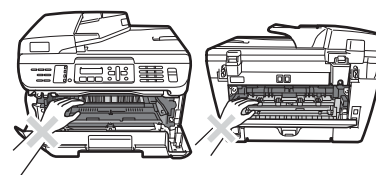

To prevent injuries, be careful not to put your hands on the edge of the machine under the document cover or scanner cover as shown in the illustration.

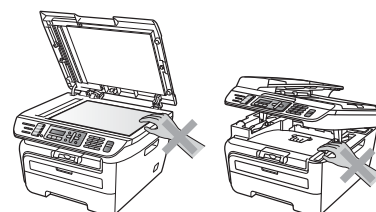

To prevent injuries, DO NOT put your fingers in the area shown in the illustrations.

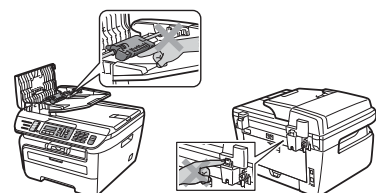

DO NOT use a vacuum cleaner to clean up scattered toner. Doing this might cause the toner dust to ignite inside the vacuum cleaner, potentially starting a fire. Please carefully clean the toner dust with a dry, lint-free cloth and dispose of it according to local regulations.




If moving your machine, use the handholds provided. First making sure to disconnect any cables.



Plastic bags are used in the packaging of your machine. To avoid danger of suffocation, keep these bags away from babies and children.

### Note

The fuser unit is marked with a caution label. DO NOT remove or damage the label.

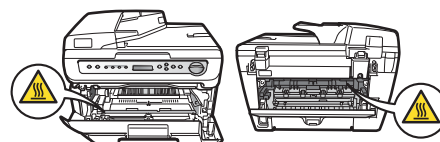

## Regulations

### EC Declaration of Conformity



#### EC Declaration of Conformity

**Manufacturer**  
 Brother Industries Ltd.,  
 15-1, Naeshiro-cho, Mizuho-ku, Nagoya 467-8561, Japan

**Plant**  
 Brother Industries (Vietnam) Ltd.  
 Phuc Dien Industrial Zone Cam Phuc Commune, Cam Giang Dist Hai Duong Province,  
 Vietnam

Herewith declare that:  
 Products description : Facsimile Machine  
 Type : Group3  
 Model Number : MFC-7820, MFC-7440N, MFC-7840W

are in conformity with provisions of the R & TTE Directive (1999/5/EC) and we declare compliance with the following standards :

Harmonized standards applied :

Safety	EN60950-1:2001+A11:2004
EMC	EN55022:1998+A1:2000+A2:2003 Class B
	EN55024:1998+A1:2001+A2:2003
	EN61000-3-2:2006
	EN61000-3-3:1995+A1:2001+A2:2005
Radio	EN301 489-1 V1.6.1
	EN301 489-17 V1.2.1
	EN300 328 V1.7.1

※ Radio applies to MFC-7840W only.


Year in which CE marking was first affixed : 2007

Issued by : Brother Industries, Ltd.  
 Date : 31th January, 2008  
 Place : Nagoya, Japan  
 Signature :

Junji Shiota  
 General Manager  
 Quality Management Dept.  
 Printing & Solutions Company

### IEC60825-1+A2:2001 Specification

This machine is a Class 1 laser product as defined in IEC60825-1+A2:2001 specifications. The label shown below is attached in countries where required.

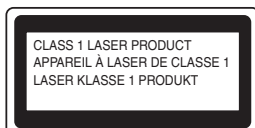

This machine has a Class 3B Laser Diode which emits invisible laser radiation in the Scanner Unit. The Scanner Unit should not be opened under any circumstances.

#### Internal laser radiation

Wave length: 780 - 800 nm

Output: 10 mW max.

Laser Class: Class 3B

### Warning

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

#### Disconnect device

This product must be installed near an AC power outlet/ electrical socket that is easily accessible. In case of emergencies, you must disconnect the power cord from the AC power outlet/ electrical socket to shut off power completely.

### Warning - This printer must be earthed.

The wires in the mains lead are coloured in line with the following code:

- Green and Yellow: Earth
- Blue: Neutral
- Brown: Live

### LAN connection (MFC-7440N only)

### Caution

DO NOT connect this product to a LAN connection that is subject to over-voltages.

### Radio interference

This product complies with EN55022 (CISPR Publication 22)/Class B. When connecting the machine to a computer, ensure that you use the following interface cables.

A USB cable which must not exceed 2.0 metres in length.

### EU Directive 2002/96/EC and EN50419



European Union only

This equipment is marked with the above recycling symbol. It means that all the end of the life of the equipment you must dispose of it separately at an appropriate collection point and not place it in the normal domestic unsorted waste stream. This will benefit the environment for all. (European Union only)

### International ENERGY STAR® Compliance Statement


The purpose of the International ENERGY STAR® Program is to promote the development and popularization of energy-efficient office equipment. As an ENERGY STAR® Partner, Brother Industries, Ltd. has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.




## 1 Installing the drum unit and toner cartridge assembly

### ⊘ Improper Setup


**DO NOT** connect the interface cable.  
Connecting the interface cable is done when installing the driver.

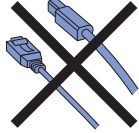


### 1 Open the front cover.

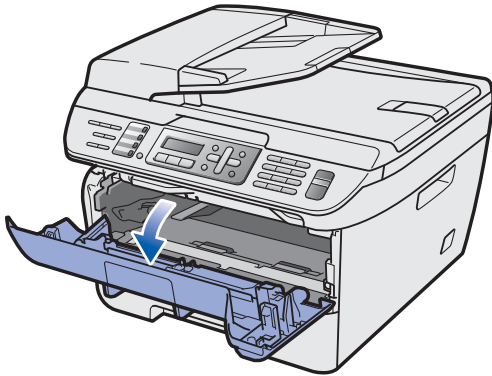



### 2 Unpack the drum unit and toner cartridge assembly.

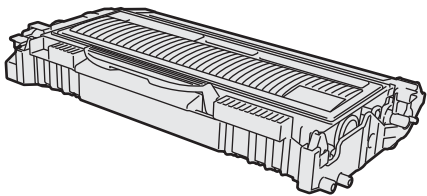


### 3 Gently shake it from side to side several times to distribute the toner evenly inside the assembly.

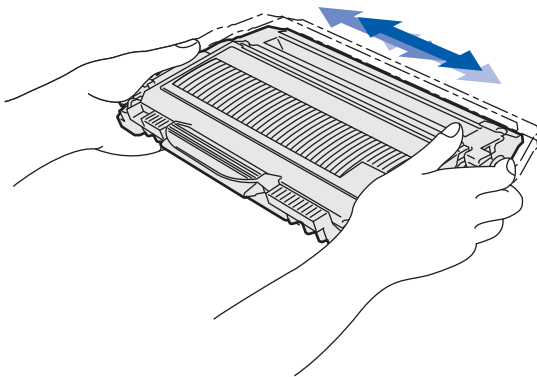

### 4 Put the drum unit and toner cartridge assembly into the machine.

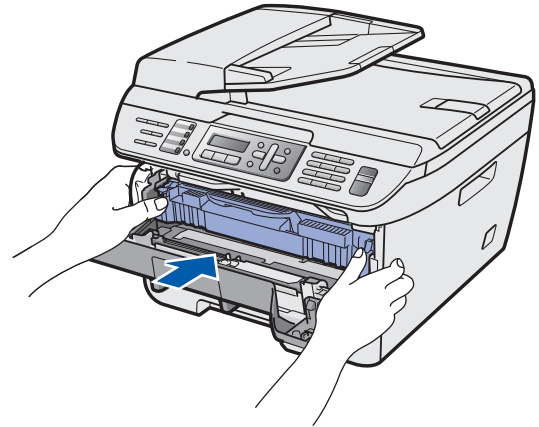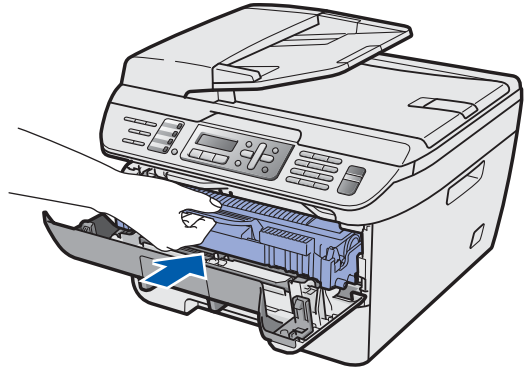


### 5 Close the front cover of the machine.

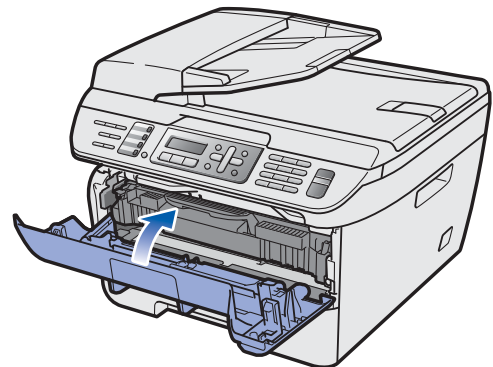


## 2 Loading paper in the paper tray


- 1 Pull the paper tray completely out of the machine.

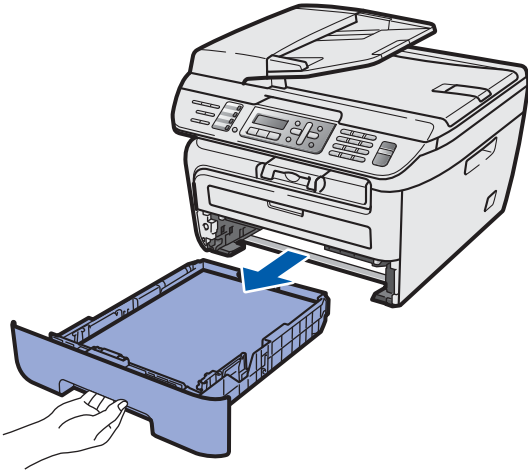


- 2 While pressing the green paper-guide release lever, slide the paper guides to fit the paper size you are using. Make sure that the guides are firmly in the slots.

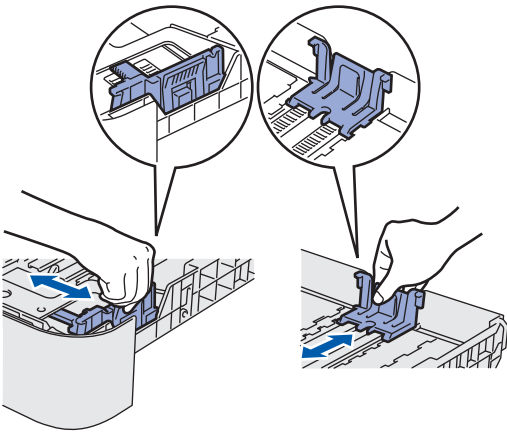

- 3 Fan the stack of paper well to avoid paper jams and misfeeds.

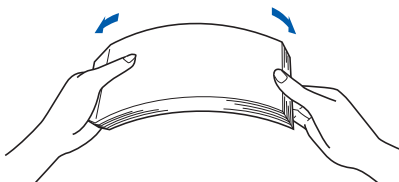


- 4 Put paper in the paper tray. Make sure that the paper is flat in the tray and below the maximum paper mark (1).

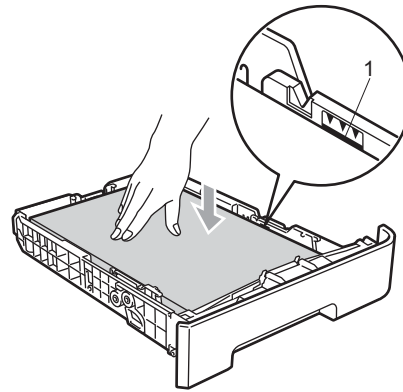

### ! Caution

*Make sure the paper guides touch the sides of the paper so it will feed properly. If you do not this, it may cause damage to your machine.*

- 5 Put the paper tray firmly back into the machine. Make sure that it is completely inserted into the machine.

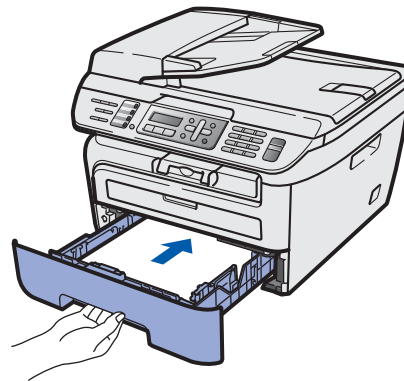


### 3 Install the power cord and phone line

- 1 Make sure that the machine's power switch is off. Connect the AC power cord to the machine.
- 2 Plug the AC power cord into an AC outlet. Turn the power switch on.



- 3 Connect one end of the telephone line cord to the socket on the machine marked **LINE** and the other end to a modular wall socket.

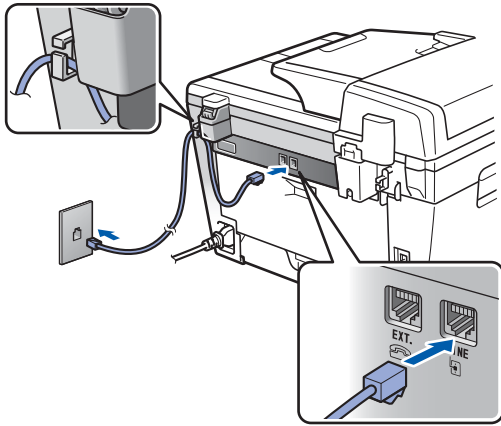


#### **Warning**

- The machine must be fitted with an earthed plug.
- Since the machine is grounded through the power outlet, you can protect yourself from potentially hazardous electrical conditions on the telephone network by keeping the power cord connected to your machine when you connect it to a telephone line. Similarly, you can protect yourself when you want to move your machine by disconnecting the telephone line first and then the power cord.


#### Note

If you are sharing one phone line with an external telephone, connect it as shown below.

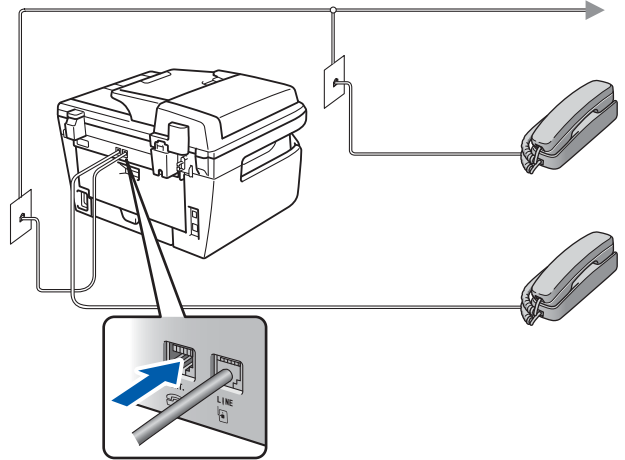

#### Note

If you are sharing one phone line with an external telephone answering device, connect it as shown below.

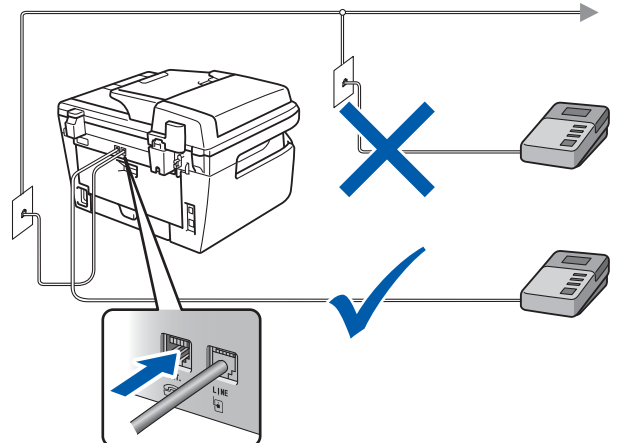

Please set the receive mode to *External TAD*.

For more details, see *Selecting a receive mode* on page 9 and *Connecting an external TAD* in Chapter 7 of the User's Guide.





## 4 Set Your Country

You must set your country so that the machine works correctly on local telecommunication lines in each country.

- 1 Check that the power is turned on by plugging in the power cord and turn the power switch on. Press **OK**.

```
Set Country
Press OK Key
```

- 2 Press  or  to choose the country.
- 3 Press **OK** when the LCD shows your country.
- 4 The LCD prompts you to make sure of the country again.
- 5 If the LCD shows the correct country, press **1** to go to step 6. Or press **2** to go back to step 2 to choose the country again.
- 6 After the LCD shows `Accepted`, the machine will restart automatically. After the restart, the LCD shows `Please Wait`.

## 5 Setting the date and time

The machine displays the date and time, and if you set up the station ID, it will add it to each fax you send.

- 1 Press **Menu**.
- 2 Press **0**.
- 3 Press **2**.
- 4 Enter the last two digits of the year on the dial pad, and then press **OK**.

```
Date&Time
Year:2008
```

(e.g. Enter **0, 8** for 2008.)

- 5 Enter the two digits for the month on the dial pad, and then press **OK**.

```
Date&Time
Month:03
```

(e.g. Enter **0, 3** for March.)

- 6 Enter the two digits for the day on the dial pad, and then press **OK**.

```
Date&Time
Day:25
```

(e.g. Enter **2, 5**.)

- 7 Enter the time in 24-hour format on the dial pad, and then press **OK**.

```
Date&Time
Time:15:25
```

(e.g. Enter **1, 5, 2, 5** for 3:25 P.M.)

- 8 Press **Stop/Exit**.



### Note

*If you make a mistake and want to start again, press **Stop/Exit** and go back to step 1.*

## 6 Setting your station ID

You should store your name and fax number to be added on all fax pages that you send.

- 1 Press **Menu**.
- 2 Press **0**.
- 3 Press **3**.
- 4 Enter your fax number (up to 20 digits) on the dial pad, and then press **OK**. To enter a "+" for international dialling codes, press \*. For example, to enter the UK dialling code "+44", press \*, **4**, **4**, and then the rest of your number.

```
Station ID
Fax:+44XXXXXXXXXX
```

- 5 Enter your tel number (up to 20 digits) on the dial pad, and then press **OK**. (If your telephone number and fax number are the same, enter the same number again.)




```
Station ID
Tel:+44XXXXXXXXXX
```

- 6 Use the dial pad to enter your name (up to 20 characters), and then press **OK**.

```
Station ID
Name:
```



### Note

- Refer to the following chart for entering your name.
- If you need to enter a character that is on the same key as the previous character, press  to move the cursor to the right.
- If you entered a letter incorrectly and want to change it, press  or  to move the cursor to the incorrect character, press **Clear/Back**.

Press key	One time	Two times	Three times	Four times	Five times
2	A	B	C	2	A
3	D	E	F	3	D
4	G	H	I	4	G
5	J	K	L	5	J
6	M	N	O	6	M
7	P	Q	R	S	7
8	T	U	V	8	T
9	W	X	Y	Z	9





For more details, see "Entering Text" of the User's Guide.

- 7 Press **Stop/Exit**.

## 7 Tone and pulse dialling mode

Your machine comes set for Tone dialling service. If you have Pulse dialling service (rotary), you need to change the dialling mode.

- 1 Press **Menu**.
- 2 Press **0**.
- 3 Press **4**.
- 4 Press  or  to select Pulse (or Tone). Press **OK**.
- 5 Press **Stop/Exit**.

## 8 Selecting a receive mode

There are four possible receive modes: Fax Only, Fax/Tel, External TAD and Manual. Choose the Receive Mode which best suits your needs.

Do you want to use the telephone features of your machine (if available) or an external telephone or external telephone answering device connected on the same line as the machine?

Yes

No

Are you using the voice message function of an external telephone answering device?

No



Do you want the machine to answer fax and telephone calls automatically?

Yes

No

Yes

- Fax Only**  
Your machine automatically answers every call as a fax.
- Fax/Tel**  
Your machine controls the line and automatically answers every call. If the call is not a fax, the phone will ring for you to pick up the call.
- Manual**  
You control the phone line and must answer every call yourself.
- External TAD**  
Your external telephone answering device (TAD) automatically answers every call. Voice messages are stored on the external TAD. Fax messages are automatically printed.



- 1** Press **Menu**.
- 2** Press **0**.
- 3** Press **1**.
- 4** Press  or  to select the mode. Press **OK**.
- 5** Press **Stop/Exit**.



For more details, see *Receiving a fax in Chapter 6 of the User's Guide*.

## 9 Setting the phone line type

If you are connecting the machine to a line that features a PABX (PBX) or ISDN to send and receive faxes, it is also necessary to change the phone line type accordingly by completing the following steps.

- 1 Press **Menu**.
- 2 Press **0**.
- 3 Press **6**.
- 4 Press  or  to choose **PBX, ISDN** or **Normal**. Press **OK**. Do one of the following:
  - If you choose **ISDN** or **Normal**, go to step 8.
  - If you choose **PBX**, go to step 5.
- 5 Do one of the following:
  - If you want to change the current prefix number, press **1** and go to step 6.
  - If you do not want to change the current prefix number, press **2** and go to step 8.

### Note

The default setting is “!”. When you press **Tel/R**, “!” will be displayed on the LCD.



- 6 Enter the Prefix number (up to 5 digits) on the dial pad, and then press **OK**.

### Note

You can use the number 0 to 9, #, \* and !. (Press **Tel/R** to display “!”.)

You cannot use ! with any other numbers or characters.

If your telephone system requires a timed break recall, press **Tel/R** to enter the break.

- 7 Press  or  to choose **On** or **Always** and press **OK**.

### Note

- If you choose **On**, pressing **Tel/R** (the screen displays “!”) will let you access an outside line.
- If you choose **Always**, you can access an outside line without pressing **Tel/R**.

- 8 Press **Stop/Exit**.



### Note

#### PBX and TRANSFER

The machine is initially set to *Normal*, which lets the machine connect to a standard PSTN (Public Switched Telephone Network) line. However, many offices use a central telephone system or Private Automatic Branch Exchange (PABX). Your machine can be connected to most types of PABX (PBX). The machine's recall feature supports timed break recall only (TBR). TBR will work with most PABX (PBX) systems allowing you to gain access to an outside line, or transfer calls to another extension. The feature works when **Tel/R** is pressed.

## 10 Setting the LCD contrast

You can change the contrast to help the LCD look lighter or darker.

- 1 Press **Menu**.
  - 2 Press **1**.
  - 3 Press **7**.
  - 4 Press  to increase the contrast.
- OR—
- 4 Press  to decrease the contrast. Press **OK**.
  - 5 Press **Stop/Exit**.

# STEP 2

# Installing the Driver & Software

Follow the instructions on this page for your operating system and interface.  
For the latest drivers, documentation, and to find the best solution for your problem, access the Brother Solution Center directly from the CD-ROM / Driver or visit <http://solutions.brother.com>.

## Windows®



For USB Interface Cable Users ..... 12



For Wired Network Interface Users (MFC-7440N only) ..... 14  
For Windows Server® 2003, see Chapter 5 of the Network User's Guide

## Macintosh®



For USB Interface Cable Users..... 16



For Wired Network Interface Users (MFC-7440N only) ..... 17

The screens for Windows® in this Quick Setup Guide are based on Windows® XP.  
The screens for Mac OS® X in this Quick Setup Guide are based on Mac OS® X 10.4.

## For USB Interface Cable Users (For Windows® 2000 Professional/XP/XP Professional x64 Edition/Windows Vista®)


### Important

**Make sure that you have finished the instructions from step 1 *Setting Up the Machine* on pages 4 through 10.**

### Note


- Please close any applications running before installing the MFL-Pro Suite.
- The supplied CD-ROM includes ScanSoft™ PaperPort™ 11SE. This software supports Windows® 2000 (SP4 or greater), XP (SP2 or greater), XP Professional x64 Edition and Windows Vista® only. Please update to the latest Windows® Service Pack before installing MFL-Pro Suite.

- 1 Turn off and unplug the machine from the AC outlet and disconnect it from your computer, if you already connected an interface cable.
- 2 Turn on your computer. (You must be logged on with administrator rights.)
- 3 Put the supplied CD-ROM for Windows® into your CD-ROM drive. Follow the on-screen instructions.

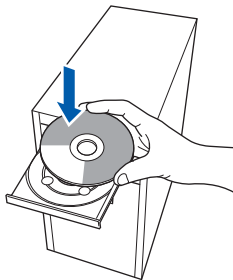

- 4 The CD-ROM main menu will appear. Click **Install MFL-Pro Suite**.

- 5 After reading and accepting the ScanSoft™ PaperPort™ 11SE License Agreement, click **Yes**. The installation of ScanSoft™ PaperPort™ 11SE will automatically start and is followed by the installation of MFL-Pro Suite.
- 6 When the Brother MFL-Pro Suite Software License Agreement window appears, click **Yes** if you agree to the Software License Agreement.
- 7 Choose **Standard** (MFC-7320) or **Local Connection** (USB) (MFC-7440N), and then click **Next**. The installation will continue.
- 8 When this screen appears, connect the USB interface cable to your PC, and then connect it to the machine.

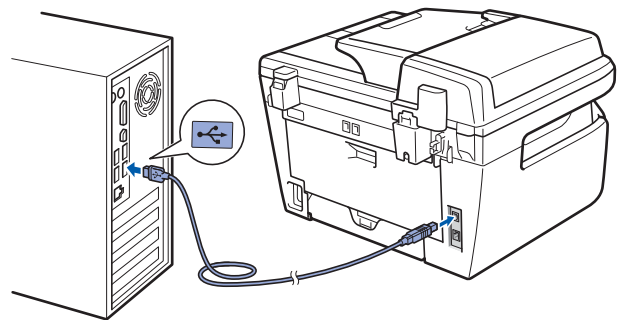

### ⊘ Improper Setup

**DO NOT** connect the machine to a USB port on a keyboard or a non-powered USB hub. Brother recommends that you connect the machine directly to your computer.

- 9** Plug the AC power cord into an AC outlet. Turn the power switch on.  
The installation of the Brother drivers will automatically start. **The installation screens appear one after another, please wait for a while.**

---

 **Improper Setup**

**DO NOT try to cancel any of the screens during this installation.**

---

- 10** When the On-Line Registration screen is displayed, make your selection and follow the on-screen instructions.

- 11** Click **Finish** to restart your computer. (After restarting the computer, you must be logged on with Administrator rights.)



**Note**

***XML Paper Specification Printer Driver***

*The XML Paper Specification Printer Driver is the most suitable driver when printing from the applications that use the XML Paper Specification documents. Please download the latest driver by accessing the Brother Solutions Center at <http://solutions.brother.com/>.*

---



**The MFL-Pro Suite (including printer driver and scanner driver) has been installed and the installation is now complete.**

## For Wired Network Interface Users (MFC-7440N only) (For Windows® 2000 Professional/XP/XP Professional x64 Edition/Windows Vista®)

### Important

Make sure that you have finished the instructions from step 1 *Setting Up the Machine* on pages 4 through 10.



### Note

The supplied CD-ROM includes ScanSoft™ PaperPort™ 11SE. This software supports Windows® 2000 (SP4 or greater), XP (SP2 or greater), XP Professional x64 Edition and Windows Vista® only. Please update to the latest Windows® Service Pack before installing MFL-Pro Suite.


- 1 Turn off and unplug the machine from the AC outlet.
- 2 Connect the network interface cable to the machine, and then connect it to your network.
- 3 Plug the AC power cord into an AC outlet. Turn the power switch on.
- 4 Turn on your computer. (You must be logged on with Administrator rights.) Close any applications running before installing the MFL-Pro Suite.



### Note

Before installation, if you are using personal firewall software, disable it. After the installation, restart your personal firewall software.

- 5 Put the supplied CD-ROM into your CD-ROM drive. Follow the on-screen instructions.

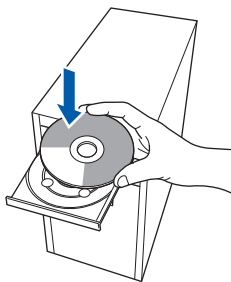

- 6 The CD-ROM main menu will appear. Click **Install MFL-Pro Suite**.

7

After reading and accepting the ScanSoft™ PaperPort™ 11SE License Agreement, click **Yes**.

The installation of ScanSoft™ PaperPort™ 11SE will automatically start and is followed by the installation of MFL-Pro Suite.

8

When the Brother MFL-Pro Suite Software License Agreement window appears, click **Yes** if you agree to the Software License Agreement.

9

Choose **Network Connection (Ethernet)**, and then click **Next**.

10

For Windows® XP SP2/Windows Vista® users, choose **Change the Firewall port settings to enable network connection and continue with the installation. (Recommended)** and click **Next**.

If you are not using the Windows® Firewall, see the User's Guide for your software for information on how to add the following network ports.

- For network scanning, add UDP port 54925.
- For network PC-Fax receiving, add UDP port 54926.
- If you still have trouble with your network connection, add UDP port 137.

11

If the machine is configured for your network, choose the machine from the list, and then click **Next**.

If your machine shows **APIPA** in the **IP Address Field**, click **Configure IP Address** and enter an IP address for your machine that is suitable for your network.

12

The installation of the Brother drivers will automatically start. **The installation screens appear one after another, please wait for a while.**

### ⊘ Improper Setup

**DO NOT try to cancel any of the screens during this installation.**

13

When the On-Line Registration screen is displayed, make your selection and follow the on-screen instructions.



- 14** Click **Finish** to restart your computer.  
(After restarting the computer, you must be logged on with Administrator rights.)

 **The MFL-Pro Suite has been installed and the installation is now complete.**

 **Note**

---

- **XML Paper Specification Printer Driver**  
*The XML Paper Specification Printer Driver is the most suitable driver when printing from the applications that use the XML Paper Specification documents. Please download the latest driver by accessing the Brother Solutions Center at <http://solutions.brother.com/>.*
- *MFL-Pro Suite includes the Network Printer Driver, Network Scanner Driver, Brother ControlCenter3 and ScanSoft™ PaperPort™ 11SE with OCR.*

*ScanSoft™ PaperPort™ 11SE is a document management application for viewing scanned documents.*

---

## For USB Interface Cable Users

### For Mac OS® X 10.2.4 or greater

#### Important

Make sure that you have finished the instructions from step 1 *Setting Up the Machine* on pages 4 through 10.

#### Note


For Mac OS® X 10.2.0 to 10.2.3 users, upgrade to Mac OS® X 10.2.4 or greater. (For the latest information for Mac OS® X, visit <http://solutions.brother.com/>)

- 1 Plug the AC power cord into an AC outlet. Turn the power switch on.
- 2 Connect the USB interface cable to your computer, and then connect it to the machine.

#### Improper Setup

**DO NOT** connect the machine to a USB port on a keyboard or a non-powered USB hub. Brother recommends that you connect the machine directly to your computer.

- 3 Turn on your Macintosh®.
- 4 Put the supplied CD-ROM for Macintosh® into your CD-ROM drive.

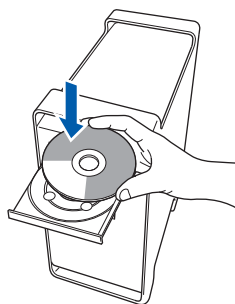


- 5 Double-click the **Start Here OSX** icon to install. Follow the on-screen instructions.


#### Note

Please wait, it will take a few seconds for the software to install. After the installation, click **Restart** to finish installing the software.

- 6 The Brother software will search for the Brother device. During this time the following screen will appear.

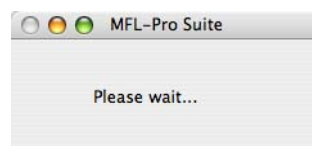

 - 7 When this screen appears, click **OK**.



- OK!** For Mac OS® X 10.3.x or greater users: The MFL-Pro Suite, Brother printer driver, scanner driver and Brother ControlCenter2 have been installed and the installation is now complete. Go to step 12.

- 8 For Mac OS® X 10.2.4 to 10.2.8 users: Click **Add**.

- 9 Choose **USB**.

- 10 Choose your model name, and then click **Add**.

- 11 Click **Print Center**, then **Quit Print Center**.

- OK!** The MFL-Pro Suite, Brother printer driver, scanner driver and Brother ControlCenter2 have been installed and the installation is now complete.

- 12 To install Presto!® PageManager®, double-click the **Presto! PageManager** icon and follow the on-screen instructions.

- OK!** Presto!® PageManager® has been installed and the installation is now complete.


## For Wired Network Interface Users (MFC-7440N only)

### For Mac OS® X 10.2.4 or greater


#### Important

Make sure that you have finished the instructions from step 1 **Setting Up the Machine** on pages 4 through 10.

- 1 Plug the AC power cord into an AC outlet. Turn the power switch on.
- 2 Connect the network interface cable to the machine, and then connect it to your network.
- 3 Turn on your Macintosh®.
- 4 Put the supplied CD-ROM for Macintosh® into your CD-ROM drive.

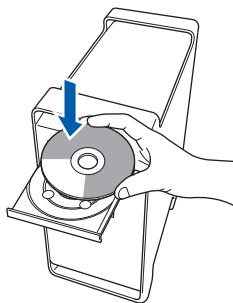


- 5 Double-click the **Start Here OSX** icon to install. Follow the on-screen instructions.
- 6 The Brother software will search for the Brother device. During this time the following screen will appear.

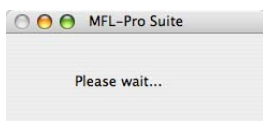


#### Note


- If the machine is configured for your network, choose the machine from the list, and then click **OK**. This window will not appear if there is only one machine connected on the network, it will be chosen automatically. Go to step 7.

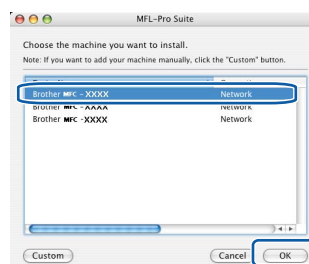

- If this screen appears click **OK**.

 


- Enter a name for your Macintosh® in **Display Name** up to 15 characters long and click **OK**. Go to step 7.

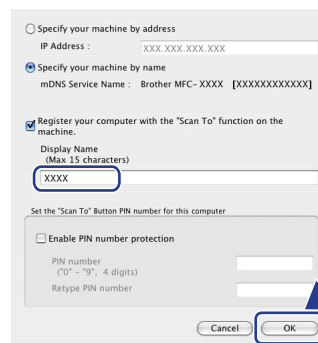

- If you want to use the machine's Scan key to scan over the network you must check the **Register your computer with the "Scan To" function on the machine** box.
- The name you enter will appear on the machine's LCD when you press the **Scan** key and choose a scan option. (For more information, see *Network Scanning in the Software User's Guide on the CD-ROM*.)

 
- 7** When this screen appears, click **OK**.



- OK!** For Mac OS® X 10.3.x or greater users: The MFL-Pro Suite, Brother printer driver, scanner driver and Brother ControlCenter2 have been installed and the installation is now complete. Go to step **12**.

- 8** For Mac OS® X 10.2.4 to 10.2.8 users: Click **Add**.

- 9** For Mac OS® X 10.2.4 to 10.2.8 users: Make the selection shown below.

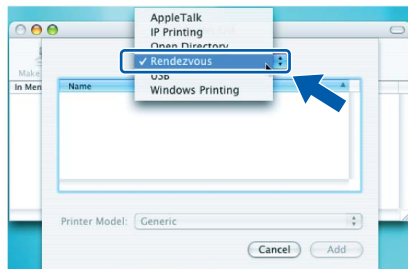

- 10** Choose your model name, and then click **Add**.

- 11** Click **Print Center**, then **Quit Print Center**.



- OK!** The MFL-Pro Suite, Brother printer driver, scanner driver and Brother ControlCenter2 have been installed and the installation is now complete.

- 12** To install Presto!® PageManager®, double-click the **Presto! PageManager** icon and follow the on-screen instructions.

- OK!** Presto!® PageManager® has been installed and the installation is now complete.

## Consumables

When the time comes to replace consumable items, an error message will be indicated on the LCD. For more information about the consumables for your machine, visit us at <http://solutions.brother.com/> or contact your local Brother reseller.
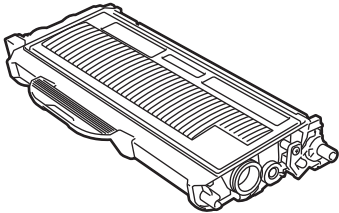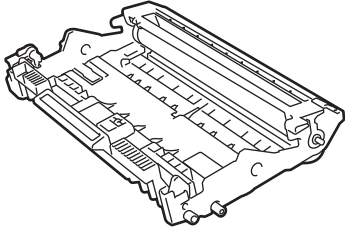
<b>Toner Cartridge</b>	<b>Drum Unit</b>
<b>TN-2110/TN-2120</b>	<b>DR-2100</b>
	



## **Trademarks**

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a registered trademark of Brother Industries, Ltd.

Multi-Function Link is a registered trademark of Brother International Corporation.

Windows Vista is either a registered trademark or a trademark of Microsoft Corporation in the United States and other countries.

Microsoft, Windows and Windows Server are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Macintosh and TrueType are registered trademarks of Apple Inc.

Nuance, the Nuance logo, PaperPort and ScanSoft are trademarks or registered trademarks of Nuance Communications, Inc. or its affiliates in the United States and / or other countries.

Presto! PageManager is a registered trademark of NewSoft Technology Corporation.

Each company whose software title is mentioned in this manual has a Software Licence Agreement specific to its proprietary programs.

**All other brand and product names mentioned in this manual are trademarks or registered trademarks of their respective companies.**

## **Compilation and Publication**

Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

This product is designed for use in a Professional Environment.

**brother**®