


# Brother Laser Printer USER'S GUIDE

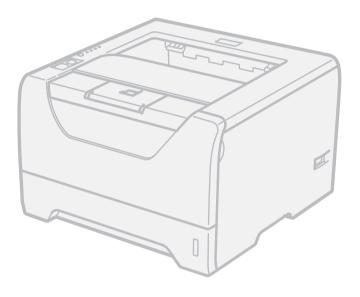

# HL-5340D HL-5350DN HL-5370DW

# For visually-impaired users

You can read this manual with Screen Reader 'text-to-speech' software.

You must set up the hardware and install the driver before you can use the printer.

Please use the Quick Setup Guide to set up the printer. You can find a printed copy in the box.

Please read this User's Guide thoroughly before you use the printer. Keep the CD-ROM in a convenient place so you can use it quickly if you need to.

You can also read the User's Guide in HTML format by visiting our web site at <a href="http://solutions.brother.com/">http://solutions.brother.com/</a> or accessing it from the CD-ROM directly.

Please visit us at <u>http://solutions.brother.com/</u> where you can get product support, the latest driver updates and utilities, and answers to frequently asked questions (FAQs) and technical questions.

# Using this guide

# Symbols used in this guide

We use the following icons throughout this User's Guide:

	Warnings tell you what to do to prevent possible personal injury.
	Cautions specify procedures you must follow or avoid to prevent possible minor injuries.
	Important specify procedures you must follow or avoid to prevent possible damage to the printer or other object.
	Electrical Hazard icons alert you to a possible electrical shock.
	Hot Surface icons warn you not to touch machine parts that are hot.
Vote	Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.

# Safety precautions


# To use the printer safely

If you DO NOT follow these safety instructions, there is a possibility of a fire, electrical shock, burn or suffocation. Please keep these instructions for later reference and read them before attempting any maintenance.

**WARNING** 

# A

There are high voltage electrodes inside the printer. Before you clean the inside of the printer, make sure that you have turned off the power switch and unplugged the printer from the AC power outlet.

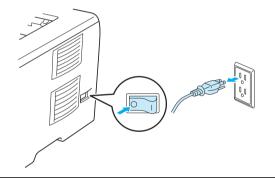

DO NOT handle the plug with wet hands. Doing this might cause an electrical shock.



Always make sure the plug is fully inserted.

This product must be installed near an AC power outlet that is easily accessible. In case of an emergency, you must disconnect the power cord from the AC power outlet to shut off the power completely.

Lightning and power surges can damage this product! We recommend that you use a quality surge protection device on the AC power line, or unplug the cords during a lightning storm.

Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.

DO NOT use this product to report a gas leak in the vicinity of the leak.

Use only the power cord provided with the machine.

Plastic bags are used in the packaging of your machine. To avoid danger of suffocation, keep these bags away from babies and children.

DO NOT use flammable substances, any type of spray or an organic solvent/liquid containing alcohol or ammonia to clean the inside or outside of the machine. Doing this may cause a fire or electrical shock. See *Cleaning* on page 105 for how to clean the machine.



DO NOT use a vacuum cleaner to clean up scattered toner. Doing this might cause the toner dust to ignite inside the vacuum cleaner, potentially starting a fire. Carefully clean the toner dust with a dry, lint-free cloth and dispose of it according to local regulations.

Cleaning the outside of the printer:


Make sure that you have unplugged the printer from the AC power outlet.


Use neutral detergents. Cleaning with volatile liquids such as thinner or benzine will damage the outside surface of the printer.

DO NOT use cleaning materials that contain ammonia.

# 

  After you have just used the printer, some internal parts of the printer will be extremely hot. To prevent injury, when you open the front cover or back cover (back output tray) of the printer, DO NOT touch the shaded parts shown in the illustration. If you do this, you may get burned.





Open the back cover (Back View)

Avoid placing your machine in a high-traffic area.

Inside the printer (Front View)

DO NOT place the machine near heaters, air conditioners, refrigerators, water, chemicals or devices that contain magnets or generate magnetic fields.

DO NOT expose the machine to direct sunlight, excessive heat, open flames, salty or corrosive gasses, moisture, or dust.

DO NOT connect your machine to an AC power outlet controlled by wall switches or automatic timers.


DO NOT connect your machine to an AC power outlet on the same circuit as large appliances or other equipment that might disrupt the power supply.

DO NOT put objects on top of the machine.

DO NOT use this product near water, for example, near a bath tub, wash bowl, kitchen sink, washing machine, or in a wet basement or near a swimming pool.

# **Note**

DO NOT remove or damage the caution label located on or around the fuser.

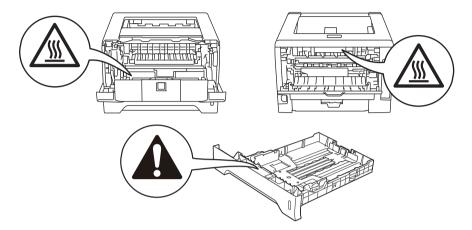

# Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Microsoft, Windows, Windows Server and Internet Explorer are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Windows Vista is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.

Apple, Macintosh, Safari and TrueType are trademarks of Apple Inc., registered in the United States and other countries.

Linux is the registered trademark of Linus Torvalds in the U.S. and other countries.

Intel, Intel Core and Pentium are trademarks of Intel Corporation in the U.S. and other countries.

AMD is a trademark of Advanced Micro Devices, Inc.

PostScript and PostScript3 are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

IBM is either a registered trademark or a trademark of International Business Machines Corporation in the United States and/or other countries.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

All other trademarks are the property of their respective owners.

# **Compilation and Publication Notice**

Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product's descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

© 2008 Brother Industries Ltd.

# **Shipment of the Printer**

If for any reason you must ship your printer, carefully package the printer to avoid any damage during transit. We recommend that you save and use the original packaging. The printer should also be adequately insured with the carrier.

# **Table of Contents**

1	About this Printer
---	--------------------

Carton components	1
•	
Interface cable	1
Front view	3
Back view	4
Positioning the printer	5
Power supply	
Environment	5

# 2 Printing Methods

About paper	6
Type and size of paper	
Recommended paper	
Unprintable area	10
Printing methods	11
Printing on plain paper, bond paper and transparencies	11
Printing on thick paper, labels and envelopes	19
Duplex printing	24
Guidelines for printing on both sides of the paper	
Manual duplex printing	24
Automatic duplex printing	
Booklet printing	

#### 3 Driver and Software

Printer driver	31
Features in the printer driver (for Windows <sup>®</sup> )	34
Using the BR-Script3 printer driver (PostScript <sup>®</sup> 3™ language emulation for Windows <sup>®</sup> )	
Features in the printer driver (for Macintosh)	53
Using the BR-Script3 printer driver (Post Script <sup>®</sup> 3™ language emulation for Macintosh)	
Installing the BR-Script3 printer driver	63
Uninstalling the printer driver	
Printer driver for Windows <sup>®</sup> and Windows Vista <sup>®</sup> and Windows Server <sup>®</sup> 2003/2008	69
Printer driver for Macintosh	69
Software	71
Software for networks (For HL-5350DN and HL-5370DW)	71
About emulation modes	72
Automatic emulation selection	73
Automatic interface selection	73
Remote Printer Console	74

1

6

31

4	Control	Panel
---	---------	-------

ontrol Panel	75
LEDs (Light Emitting Diodes)	75
Service call indications	81
Control panel buttons	83
Print a test page	84
Print the Printer Settings page	85
Print Fonts	86
Default settings	

#### Options 5

Lower tray (LT-5300)	88
SO-DIMM (memory module)	
SO-DIMM types	
Installing extra memory	90

#### 6 **Routine Maintenance**

Replacing the consumable items	92
Consumables	92
Toner cartridge	93
Drum unit	
Cleaning	
Cleaning the outside of the printer	
Cleaning the inside of the printer	107
Cleaning the paper pick-up roller	110
Cleaning the corona wires	112
Cleaning the corona wire	112

#### Troubleshooting 7

114
114
115
117
118
119
119
124
128
135
136
136
136
137

88


92

Α	Appendix	138
	Printer specifications	138
	Engine	138
	Controller	139
	Software	140
	Control panel	140
	Paper handling	140
	Media specifications	141
	Supplies	141
	Dimensions / weights	142
	Other	142
	Computer requirements	143
	Important information for choosing your paper	144
	Symbol and character sets	147
	How to use the Web Based Management (web browser)	147
	Symbol and character sets list	148
	Quick reference for bar code control commands	149
	Print bar codes or expanded characters	149
в	Appendix (for Europe and Other Countries)	157
	Brother numbers	157
С	Appendix (for USA and Canada)	158
	Brother numbers	
D	Index	160

About this Printer

# **Carton components**

When you unpack the printer, make sure that you have all of the following parts.

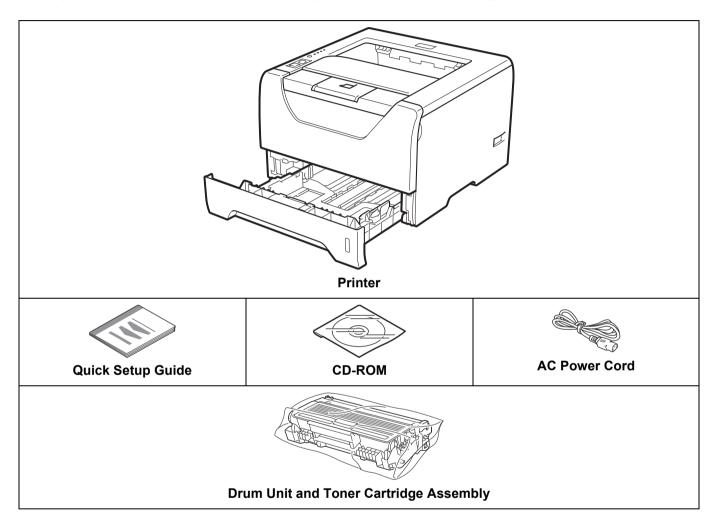

# Interface cable

The interface cable is not a standard accessory. Purchase the appropriate cable for the interface you are using.

#### USB cable

Please make sure you use a USB 2.0 interface cable that is no longer than 6 feet (2.0 meters).

DO NOT connect the interface cable at this time. Connecting the interface cable is done during the printer driver installation process.

Make sure that you connect it to the USB port of your computer and not to a USB port on a keyboard or non-powered USB hub.

Third party USB ports are not supported by Macintosh.

Parallel cable

DO NOT use a parallel interface cable that is longer than 6 feet (2.0 meters).


Use a shielded interface cable that is IEEE 1284-compliant.

■ Network cable (For HL-5350DN and 5370DW only)

Use a straight-through Category5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.

About this Printer


# **Front view**

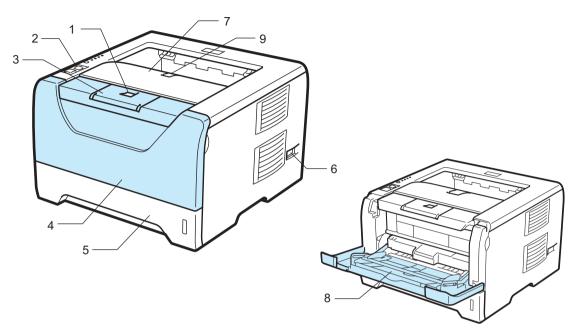

- 1 Front Cover Release Button
- 2 Control Panel
- 3 Face-down Output Tray Support Flap 1 (Support Flap 1)
- 4 Front Cover
- 5 Paper Tray
- 6 Power Switch
- 7 Face-down Output Tray
- 8 Multi-purpose Tray (MP Tray)
- 9 Face-down Output Tray Support Flap 2 (Support Flap 2)

About this Printer

## **Back view**

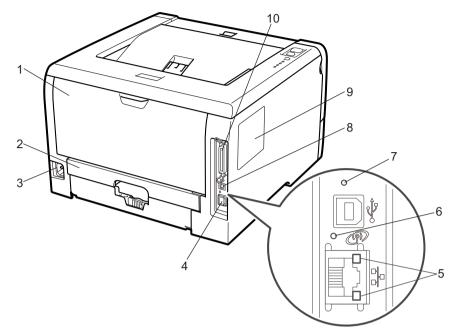

- 1 Back Cover (Back Output Tray)
- 2 Duplex Tray
- 3 AC Power Connector
- 4 10BASE-T / 100BASE-TX (Ethernet) Port (HL-5350DN and HL-5370DW only)
- 5 Network Activity LEDs (Light Emitting Diodes) (For HL-5350DN and HL-5370DW only)
- 6 HL-5370DW: Wireless Activity LED
- 7 HL-5370DW: Wireless Setup Button
- 8 USB Interface Connector
- 9 SO-DIMM (memory) Cover
- **10 Parallel Interface Connector**

# Note

The printer illustration is based on HL-5370DW.

# Positioning the printer

Read the following before you use the printer.

#### **Power supply**

Use the printer within the recommended power range.

Power source: USA and Canada: AC 110 to 120 V, 50/60 Hz Europe and Australia: AC 220 to 240 V, 50/60 Hz

The power cord, including extensions, should be no longer than 5 meters (16.5 feet).

Do not share the same power circuit with other high-powered appliances, such as an air conditioner, copier, shredder and so on. If you cannot avoid using the printer with these appliances, we recommend that you use a voltage transformer or a high-frequency noise filter.

Use a voltage regulator if the power source is not stable.

#### Environment

- Put your printer on a flat, stable surface such as a desk that is free of vibration and shocks.
- Put the printer near an AC power outlet, so that it can be easily unplugged from the AC power outlet if there is an emergency.
- Only use the printer within the following ranges of temperature and humidity:

Temperature: 10 °C to 32.5 °C (50 °F to 90.5 °F)

Humidity: 20% to 80% (without condensation)

- Use the printer in a well-ventilated room.
- DO NOT put the printer where the ventilation hole of the printer is blocked. Keep a gap of roughly 100 mm (4 in.) between the ventilation hole and the wall.
- DO NOT expose the printer to direct sunlight, excessive heat, moisture, or dust.
- DO NOT put the printer near devices that contain magnets or produce magnetic fields.
- DO NOT expose the printer to open/naked flames or salty or corrosive gasses.
- DO NOT put objects on top of the printer.
- DO NOT put the printer near heaters, air conditioners, water, chemicals or refrigerators.
- Keep the printer horizontal when you carry it.

# About paper

# Type and size of paper

The printer loads paper from the installed paper tray or the multi-purpose tray.

The names for the paper trays in the printer driver and this guide are as follows:

Paper tray	Tray 1
Multi-purpose tray	MP Tray
Optional lower tray unit	Tray 2 / Tray 3
Duplex unit for automatic duplex printing	DX

When looking at this page on the CD-ROM, you can jump to the page for each printing method by clicking (i) in the table.

Media type	Tray 1	Tray 2/ Tray 3	MP Tray	DX	Choose the media type from the printer driver
Plain paper					Plain Paper
75 g/m <sup>2</sup> to 105 g/m <sup>2</sup> (20 to 28 lb)	(i)	(j)	١	(i)	
Recycled paper	(i)	(j)	(j)	(j)	Recycled Paper
Bond paper	()	(j)	(j)		Bond Paper
Rough paper– 60 g/m <sup>2</sup> to 163 g/m <sup>2</sup> (16 to 43 lb)	60 g/m <sup>2</sup> to 105 g/m <sup>2</sup> (16 to 28 lb)	60 g/m <sup>2</sup> to 105 g/m <sup>2</sup> (16 to 28 lb)	60 g/m <sup>2</sup> to 163 g/m <sup>2</sup> (16 to 43 lb)		
Thin paper					Thin Paper
60 g/m <sup>2</sup> to 75 g/m <sup>2</sup> (16 to 20 lb)	(j)	(j)	(j)	(i)	
Thick paper					Thick Paper or Thicker
105 g/m <sup>2</sup> to 163 g/m <sup>2</sup> (28 to 43 lb)			١		Paper
Transparency	Û		0		Transparencies
	Up to 10		0		
	sheets		Up to 10 sheets		
	A4 or Letter		A4 or Letter		
Labels			(j)		Thicker Paper
			A4 or Letter		

Media type	Tray 1	Tray 2/ Tray 3	MP Tray	DX	Choose the media type from the printer driver
Envelopes			Ģ		Envelopes
			()		Env. Thin
			Up to 3 sheets		Env. Thick

	Tray 1	Tray 2/ Tray3	MP Tray	DX
Paper size	A4, Letter, B5 (ISO), Executive, A5, A6, B6 (ISO), A5(Long Edge)	A4, Letter, B5 (ISO), Executive, A5, B6 (ISO)	Width: 69.8 to 216 mm (2.75 to 8.5 in.) Length: 116 to 406.4 mm (4.57 to 16 in.)	A4
Number of sheets (80 g/m <sup>2</sup> / 20 lb)	250 sheets	250 sheets/ 250 sheets	50 sheets	

# **Recommended paper**

	Europe	USA
Plain paper	Xerox Premier TCF 80 g/m <sup>2</sup>	Xerox 4200 20 lb
	Xerox Business 80 g/m <sup>2</sup>	Hammermill Laser Print (24 lb=90g/m <sup>2</sup> )
Recycled paper	Xerox Recycled Supreme 80 g/m <sup>2</sup> (Not supported)	
Transparency	3M CG3300 3M CG3300	
Labels	Avery laser label L7163	Avery laser labels white #5160
Envelope	Antalis River series (DL)	(No specific brand recommended)

Before you buy a lot of paper, test a small quantity to make sure that the paper is suitable.

- Use paper that is made for plain-paper copying.
- Use paper that is 75 to 90 g/m<sup>2</sup> (20 to 24 lb).
- Use neutral paper. Do not use acidic or alkaline paper.
- Use long-grain paper.
- Use paper with a moisture content of approximately 5%.
- This printer can use recycled paper that meets DIN 19309 specifications.

# IMPORTANT

DO NOT use ink jet paper because it may cause a paper jam or damage your printer.

If you use paper that is not recommended, a paper jam or misfeed may occur in the printer.

DO NOT put different types of paper in the paper tray at the same time because it may cause paper jams or misfeeds.

#### 🖉 Note

- Preprinted paper must use ink that can withstand the temperature of the printer's fusing process (200 degrees centigrade).
- If you use bond paper, paper having a rough surface or paper that is wrinkled or creased, the paper may exhibit degraded performance.

To help you choose which paper to use with this printer, see *Important information for choosing your paper* on page 144.

#### Types of envelopes

Most envelopes will be suitable for your printer. However, some envelopes may have feed and print quality problems due to the way they have been made. A suitable envelope should have edges with straight, wellcreased folds and the leading edge should not be thicker than two pieces of paper. The envelope should lie flat and not be of baggy or flimsy construction. You should buy quality envelopes from a supplier who understands that you will be using the envelopes in a laser printer. Before you print a lot of envelopes, test one to make sure that the print results are what you want.

Brother does not recommend a particular envelope because envelope manufacturers may change the envelope specifications. You are responsible for the quality and performance of the envelopes you use.

- DO NOT use damaged, curled, wrinkled, irregularly shaped, extremely shiny or textured envelopes.
- DO NOT use envelopes with clasps, snaps, tie strings, self-adhesive components, windows, holes, cutouts or perforations.
- DO NOT use envelopes that are of a baggy construction, not sharply creased, embossed (have raised writing on them) or pre-printed on the inside.
- DO NOT use envelopes that were previously printed by a laser printer.
- DO NOT use envelopes that cannot be arranged when put in a pile.
- DO NOT use envelopes that are made of paper that weighs more than the paper weight specifications for the printer.
- DO NOT use envelopes that have been badly made, with edges that are not straight or consistently square.



If you use any of the types of envelopes listed above, they may damage your printer. This damage is not covered under any Brother warranty or service agreement.

#### 🖉 Note

- DO NOT print envelopes using duplex printing.
- You must choose the same paper size from your application as the paper in the tray.


# **Unprintable area**

The area of the paper that cannot be printed on is shown in the table below:

# **Note**


When using BR-Script emulation, the edges of the paper that cannot be printed on are 4.32 mm (0.17 in).

# Portrait

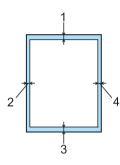

	A4	Letter	B5 (ISO)	Executive	A5	A6	B6 (ISO)
1	4.23 mm						
	(0.16 in.)						
2	6.01 mm	6.35 mm	6.01 mm	6.35 mm	6.01 mm	6.01 mm	6.01 mm
	(0.24 in.)	(0.25 in.)	(0.24 in.)	(0.25 in.)	(0.24 in.)	(0.24 in.)	(0.24 in.)
3	4.23 mm						
	(0.16 in.)						
4	6.01 mm	6.35 mm	6.01 mm	6.35 mm	6.01 mm	6.01 mm	6.01 mm
	(0.24 in.)	(0.25 in.)	(0.24 in.)	(0.25 in.)	(0.24 in.)	(0.24 in.)	(0.24 in.)

# Landscape

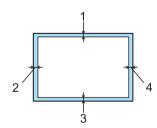

	A4	Letter	B5 (ISO)	Executive	A5	A6	B6 (ISO)
1	4.23 mm						
	(0.16 in.)						
2	5.0 mm	5.08 mm	5.0 mm	5.08 mm	5.0 mm	5.0 mm	5.0 mm
	(0.19 in.)	(0.2 in.)	(0.19 in.)	(0.2 in.)	(0.19 in.)	(0.19 in.)	(0.19 in.)
3	4.23 mm						
	(0.16 in.)						
4	5.0 mm	5.08 mm	5.0 mm	5.08 mm	5.0 mm	5.0 mm	5.0 mm
	(0.19 in.)	(0.2 in.)	(0.19 in.)	(0.2 in.)	(0.19 in.)	(0.19 in.)	(0.19 in.)

# **Printing methods**

# Printing on plain paper, bond paper and transparencies


# Printing on plain paper, bond paper or transparencies from Tray 1, 2 or 3

Note


Transparencies are only for Tray1.

(For the recommended paper to use, see About paper on page 6.)


1 Pull the paper tray completely out of the printer.

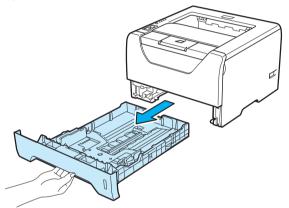

2 While pressing the blue paper-guide release lever (1), slide the paper guides to fit the paper size. Make sure that the guides are firmly in the slots.

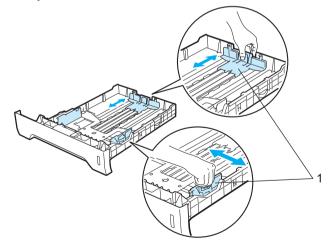


3 Put paper in the tray, and make sure that the paper is below the maximum paper mark (▼▼▼). The side to be printed on must be face down.

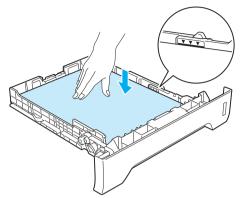

# **IMPORTANT**

Make sure the paper guides touch the sides of the paper so it will feed properly.

- 4 Put the paper tray firmly back in the printer. Make sure that it is completely inserted into the printer.
- 5 Lift up the support flap to prevent paper from sliding off the face-down output tray, or remove each page as soon as it comes out of the printer.

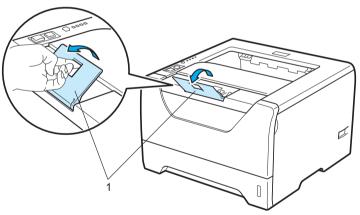


 6 Choose the following from the printer driver: Paper Size......(1) Media Type......(2) Paper Source......(3) and any other settings you may want to make. (See Chapter 3: Driver and Software.)

# ■ Windows<sup>®</sup> printer driver

brother HL-5350DN		S Brother SolutionsCenter	
	Basic Advanced		
A	Paper Size	Letter	
	Orientation	Portrait     O Landscape	
	<u>C</u> opies	1 Collate	
	Media Type	Plain Paper	
	<u>R</u> esolution	600 dpi	
Paper Size : Letter	Print Settings	General 💌	
8 1/2 x 11 in (215.9 x 279.4 mm)		Manual <u>S</u> ettings	
Media Type : Plain Paper Copies : 1	Multiple Page	Normal	
Resolution : 600 dpi	Page Order	Right, then Down	
Duplex / Booklet : Duplex	Border Line	V	
Scaling : Off Watermark : Off	Duplex / Booklet	Duplex	
		Duplex Settings	
	Paper Source		
	Eirst Page	Tray1	
	Other Pages	Same as First Page	
		Default	

#### ■ BR-Script printer driver for Windows<sup>®</sup>

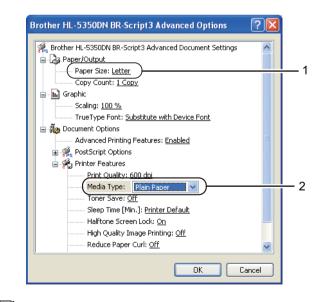

Brother HL-5350DN BR-Script3 Printing Preferences	
Brother HL=5350DN BR-Script3 Printing Preferences      Layout Paper/Quality      Tray Selection      Paper Source: Automatically Select      Automatically Select      Automatically Select      Tray1      Tray3     MP Tray Manual Feed	3
Advanced	
OK Cancel Apply	

# Note

To use the BR-Script printer driver for Windows<sup>®</sup> you must install the driver using the Custom Install from the CD-ROM.

#### Macintosh printer driver

Settings:	Page Attributes
Format for:	Brother HL-5350DN series
	Brother HL-5350DN series CUPS
Paper Size:	US Letter 🚺 )
Orientation: Scale:	21.59 by 27.94 cm
)	(Cancel) OK



		Printer: Brother	HL-5350DN series	•
		Presets: Standard		•
		Copies: 1	Collated Two	-Sided
		Pages: 💽 All		
		O From:	Land the Land	
		Paper Size: US Letter	r 🛟 21,59 b	oy 27,94 cm
		Orientation:	•	
		Paper Fe	ed	•
		All pages from	: Tray 1	\$
	(April 1)	O First page from	n: Auto Select	\$
••• • 1 of 1		Remaining from	n: Auto Select	* *

7 Send the print data to the printer.


# IMPORTANT

When printing on transparencies, remove each transparency at once after printing. Stacking the printed transparencies may cause a paper jam or the transparency to curl.


## Printing on plain paper, bond paper or transparencies from the MP tray

(For the recommended paper to use, see About paper on page 6.)


1 Open the MP tray and lower it gently.

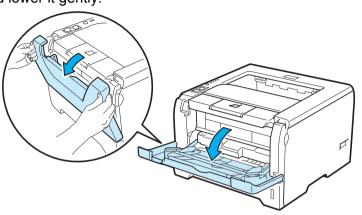


2 Pull out the MP tray support flap (1).

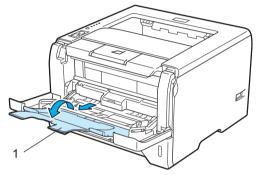


3 Lift up the support flap to prevent paper from sliding off the face-down output tray, or remove each page as soon as it comes out of the printer.

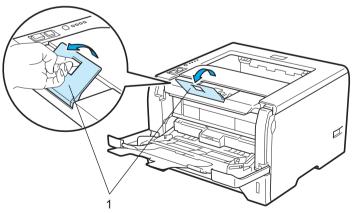

4 Put paper in the MP tray. Make sure that the paper stays under the maximum paper mark (▼) on both sides of the tray. The side to be printed on must be face up with the leading edge (top of the paper) in first.

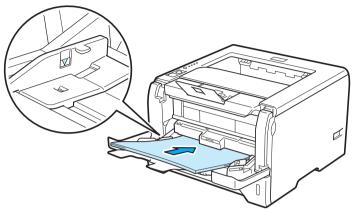

5 While pressing the paper-guide release lever (1), slide the paper guide to fit the paper size.

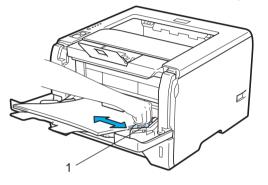


Choose the following from the printer driver:
Paper Size.....(1)
Media Type.....(2)
Paper Source.....(3)
and any other settings you may want to make. (See Chapter 3: Driver and Software.)

### ■ Windows<sup>®</sup> printer driver

brother HL-5350DN		SolutionsC	enter
	Basic Advanced		
	Paper Size	Letter	
	Orientation	Portrait O Landscape	
	Copies	1 Collate	
	(Media Type	Plain Paper	•)
	Besolution	600 dpi	~
Paper Size : Letter	Print Settings	General	~
8 1/2 x 11 in (215.9 x 279.4 mm)		Manual <u>S</u> ettings	
Media Type : Plain Paper Copies : 1	Multiple Page	Normal	~
Resolution : 600 dpi	Page Order	Right, then Down	~
Duplex / Booklet : Duplex Scaling : Off	Border Line		~
Watermark : Off	Duplex / Booklet	Duplex	~
		Duplex Settings	
	Paper Source		_
	Eirst Page	MP Tray	•) <u> </u>
	Other Pages	Same as First Page	~
		Default	

### ■ BR-Script printer driver for Windows<sup>®</sup>

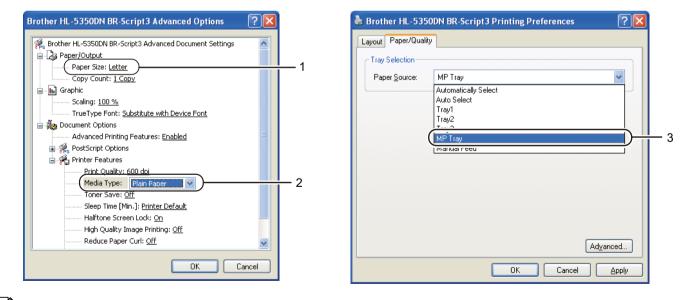

## Note

To use the BR-Script printer driver for Windows<sup>®</sup> you must install the driver using the Custom Install from the CD-ROM.

#### Macintosh printer driver

Settings:	Page Attributes
Format for:	Brother HL-5350DN series
	Brother HL-5350DN series CUPS
Paper Size:	US Letter 主 )— 1
Orientation: Scale:	21.59 by 27,94 cm
)	(Cancel) OK



	Printer: Brother H	-5350DN series	:
	Presets: Standard		•
	Copies: 1	Collated 🗌 Two	-Sided
	Pages: 💽 All		
	⊖ From:	1 to: 1	
	Paper Size: US Letter	21,59 b	by 27,94 cm
	Orientation:	•	
	Paper Fee	d	•
	All pages from:	MP Tray	+
(April)	All pages from:     First page from:		\$

7 Send the print data to the printer.


# **IMPORTANT**

When printing on transparencies, remove each transparency at once after printing. Stacking the printed transparencies may cause a paper jam or the transparency to curl.


# Printing on thick paper, labels and envelopes

When the back output tray is pulled down, the printer has a straight paper path from the MP tray through to the back of the printer. Use this paper feed and output method when you want to print on thick paper, labels or envelopes. (For the recommended paper to use, see *About paper* on page 6 and *Types of envelopes* on page 9.)


1 Open the back cover (back output tray).

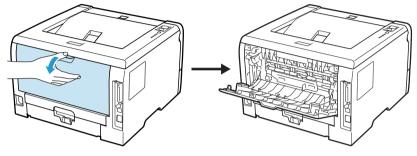


2 <For printing envelopes only> Pull down the two gray levers, one on the left-hand side and one on the right-hand side, toward you as shown in the illustration below.

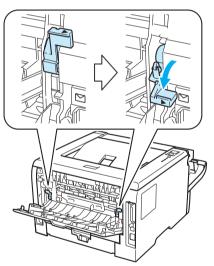


3 Open the MP tray and lower it gently.

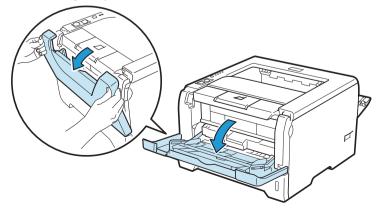

4 Pull out the MP tray support flap (1).

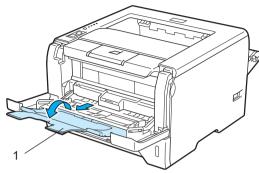


5 Put paper in the MP tray. Make sure that the paper stays under the maximum paper mark  $(\mathbf{V})$ .

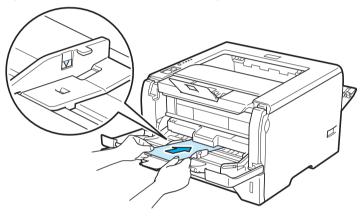

### 🖉 Note

- DO NOT put more than 3 envelopes in the MP tray.
- Envelope joints that are sealed by the manufacturer should be secure.
- The side to be printed on must be face up.
- All sides of the envelope should be properly folded without wrinkles or creases.

6 While pressing the paper-guide release lever (1), slide the paper guide to fit the paper size.

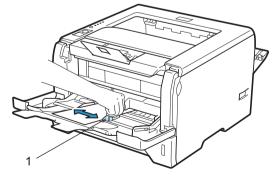


Choose the following from the printer driver:
 Paper Size.....(1)
 Media Type.....(2)
 Paper Source.....(3)
 and any other settings you may want to make. (See Chapter 3: Driver and Software.)

# ■ Windows<sup>®</sup> printer driver

brother HL-5350DN		S Brother SolutionsCenter
	Basic Advanced	
A	Paper Size	Com-10
	Orientation	Portrait O Landscape
	Copies	1 Collate
	(Media Type	Envelopes
	Resolution	600 dpi
Paper Size : Com-10	Print Settings	General 🗸
4 1/8 x 9 1/2 in (104.7 x 241.3 mm)		Manual <u>S</u> ettings
Media Type : Envelopes Copies : 1	Multiple Page	Normal
Resolution : 600 dpi	Page Order	Right, then Down
Duplex / Booklet : Duplex Scaling : Off	Border Line	v
Watermark : Off	Duplex / Booklet	Duplex
		Duplex Settings
	Paper Source	
	Eirst Page	MP Tray
	Other Pages	Same as First Page
		Default

■ BR-Script printer driver for Windows<sup>®</sup>

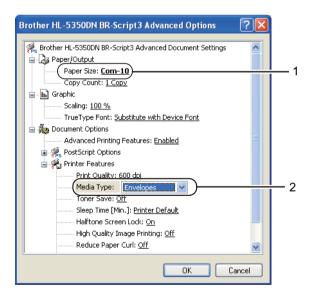


🍓 Brother HL-53	50DN BR-Script3 Printing Preferences	? 🗙	
Layout Paper/Qual	ity		
Tray Selection-			
Paper <u>S</u> ource:	MP Tray	~	
	Automatically Select Auto Select Tray1		
	Tray2		
	MP Tray		- 3
	พลานสา กระบ		
	A	dyanced	
	OK Cancel	Apply	

# 🖉 Note

- To use the BR-Script printer driver you must install the driver using the Custom Install from the CD-ROM.
- When you use Envelope #10, choose Com-10 for the Paper Size.
- For other envelopes which are not listed in the printer driver, such as Envelope #9 or Envelope C6, choose **User Defined...** (For more information on envelope sizes, see *Paper size* on page 145.)
  - Macintosh printer driver

Settings: Page Attributes	1.11.1.1		W20010-4	Printer:	Brother HL-5350DN series	
					Standard	
Format for: Brother HL-5350DN series						
Brother HL-5350DN series CUPS				Copies:		vo-Sided
Paper Size: #10 Envelope	)—1			Pages:	From: 1 to: 1	
10,48 by 24,13 cm				Paper Size:		by 24.13 cm
Orientation:				Orientation:		
Scale: 100 %					Print Settings	•
					Basic Adva	ver.1.2.2
			Page 14.1	A	Media Type: Envel	lopes
(?) Cancel	ОК	44 4	1 of 1 🕞 🕨			) '
					Resolution: 600	dpi 🛟
				Support		er Save Mode
		PDF ▼			0	Cancel Print
Printer: Brother HL-53	50DN series					
Presets: Standard						

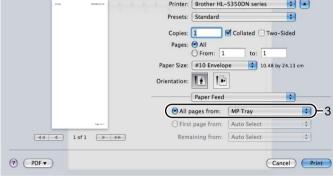

# 🖉 Note

For other envelopes which are not listed in the printer driver, such as Envelope #9 or Envelope C6, choose **Custom Page Sizes**. (For more information on envelope sizes, see *Paper size* on page 145.)

8 Send the print data to the printer.

#### 9 <For printing envelopes only>

When you have finished printing, reset the two gray levers which are pulled down at step 2 back to the original position.

🖉 Note	
<ul> <li>Remo</li> </ul>	ve each sheet or envelope at once after printing. Stacking the sheets or envelopes may cause the
paper	to jam or curl.

- If envelopes get smudged during printing set the **Media Type** to **Thick Paper** or **Thicker Paper** to increase the fixing temperature.
- If envelopes are creased after they are printed, see Improving the print quality on page 128.
- (For Windows<sup>®</sup> users) If DL size double flap envelopes are creased after printing, choose **DL Long Edge** in **Paper Size**, from the **Basic** tab. Put a new DL size double-flap envelope in the MP tray with the longest edge of the envelope in first, then print again.

🌢 Brother HL-5350DN series Printin	g Preferences	? 🛛
brother HL-5350DN		S Brother SolutionsCenter
Paper Size : Com-10         41/8 x 91/2 in         (104.7 x 241.3 mm)         Media Type : Envelopes         Copies : 1         Resolution : 600 dpi         Duplex / Booklet : None         Scaling : Off         Watermark : Off	Besolution     A6       B5     B5       Prigt Settings     DL       DL     C5       Multiple Page     3×5       Bage Order     DL       Border Line     JIS B       Duplex / Booklet     Ledge       Paper Source     Eirst Page	utive ong Edge 10 Irch ong Edge 4
Support	OK Cancel	Apply Help

- When you put paper in the MP tray, remember the following:
  - Put the leading edge (top of the paper) in first and push it gently into the tray.
  - Make sure that the paper is straight and in the proper position in the MP tray. If it is not, the paper may not be fed properly, resulting in a skewed printout or a paper jam.

# **Duplex printing**

The supplied printer drivers for Windows<sup>®</sup> 2000 or greater and Mac OS X 10.3.9 or greater all enable duplex printing. For more information about how to choose the settings, see the **Help** text in the printer driver.

## Guidelines for printing on both sides of the paper

- If the paper is thin, it may wrinkle.
- If paper is curled, straighten it and then put it back in the paper tray or the MP tray.
- If the paper is not feeding properly, it may be curled. Remove the paper and straighten it.
- When you use the manual duplex function, it is possible that there may be paper jams or poor print quality. (If there is a paper jam, see *Paper jams and how to clear them* on page 119. If you have a print quality problem, see *Improving the print quality* on page 128.)



- The screens in this section are based on Windows<sup>®</sup> XP. The screens on your computer may vary depending on your operating system.
- Use A4 size paper when you use the automatic duplex printing function.
- Make sure that the back cover is closed.
- Make sure that the paper tray is completely inserted into the printer.
- If paper is curled, straighten it and then put it back in the paper tray.
- You should use plain paper, recycled paper or thin paper. DO NOT use bond paper.

#### Manual duplex printing


- The BR-Script printer driver (PostScript<sup>®</sup> 3<sup>™</sup> emulation) does not support manual duplex printing.
- If you are using the Macintosh Printer Driver, see *Duplex Printing* on page 61.

#### Manual duplex printing from the paper tray


- In the printer driver choose the Basic tab, and choose the Duplex printing mode from the Duplex / Booklet setting, and then from the Basic tab choose the Paper Source to be Tray1.
- 2 Click the **Duplex Settings...** button, the **Duplex Settings** will appear.
- 3 Choose **Manual Duplex** from **Duplex Mode** settings, and click **OK** on the computer screen.

#### Send the data to the printer.

The printer will automatically print all the even-numbered pages on one side of the paper first.

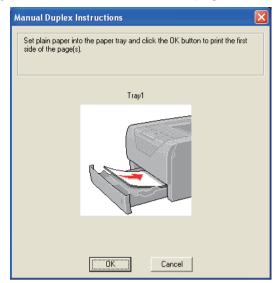

- 5 Remove the printed even-numbered pages from the output tray and then , in the same order <sup>1</sup>, put them back in the paper tray with the side to be printed on (blank side) face down. Follow the instructions on the computer screen.
  - <sup>1</sup> Put papers in opposite order when the Back output tray is opened.

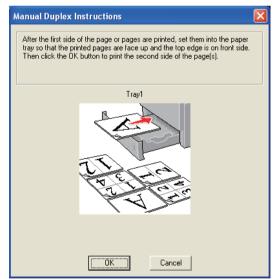


- 6 The printer will now automatically print all the odd-numbered pages on the other side of the paper.
- 🖉 Note
  - If you choose the **Paper Source** to be **Auto Select**, put the printed even-numbered pages in the MP tray.
  - When you put paper in the paper tray, first empty the tray. Next, put the printed pages in the tray, with the printed side face up. (DO NOT add the printed pages to the top of a stack of unprinted paper.)


## Manual duplex printing from the MP tray

# Note


Before putting the sheets back in the MP tray, you will have to straighten them, or you may get paper jams.

- In the printer driver choose the Basic tab, and choose the Duplex printing mode from the Duplex / Booklet setting, and then from the Basic tab choose the Paper Source to be MP Tray.
- 2 Click the **Duplex Settings...** button, the **Duplex Settings** will appear.
- 3 Choose Manual Duplex from Duplex Mode settings, and click OK on the computer screen.
- 4 Put the paper in the MP tray with the side to be printed on first facing up. Send the data to the printer. The printer will automatically print all the even-numbered pages on one side of the paper first.

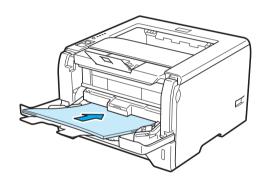

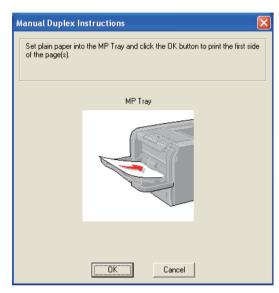

5 Remove the printed even-numbered pages from the output tray and then, in the same order <sup>1</sup>, put them back into the MP tray. Put the paper with the side to be printed on (the blank side) face up. Follow the instructions on the computer screen.

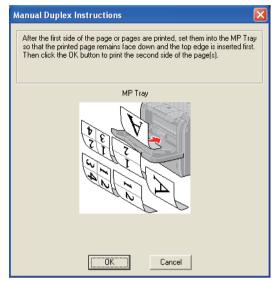

- <sup>1</sup> Put papers in opposite order when the Back output tray is opened.
- **6)** The printer will now automatically print all the odd-numbered pages.

#### Paper orientation for manual duplex printing

The printer prints the second page first.

If you print 10 pages on 5 sheets of paper, it will print page 2 and then page 1 on the first sheet of paper. It will print page 4 and then page 3 on the second sheet of paper. It will print page 6 and then page 5 on the third sheet of paper, and so on.

When doing manual duplex printing, the paper must be put in the paper tray in the following way:

- For the paper tray:
  - Put the side to be printed on face down with the leading edge (top) of the paper at the front of the tray.
  - To print on the second side, put the paper face up, with the leading edge (top) of the paper at the front of the tray.
  - If letterhead paper is used, put the paper in the tray with the heading face up at the front of the tray.
  - To print on the second side, put the heading face down at the front of the tray.
- For the multi-purpose tray (MP tray):
  - Put the side to be printed on face up with the leading edge (top) of the paper in first.
  - To print on the second side, put the paper face down, with the leading edge (top) of the paper in first.
  - If letterhead paper is used, put it in with the heading face down and in first.
  - To print on the second side, put the heading face up and in first.

# Automatic duplex printing

If you are using the Macintosh<sup>®</sup> Printer Driver, see *Duplex Printing* on page 61.

1 Put paper in the paper tray or MP tray.

2 For the Windows<sup>®</sup> printer driver

- 1 Open the **Properties** dialog box in the printer driver.
- 2 From the **General** tab, click the **Printing Preferences** button.
- **3** From the **Basic** tab, choose **Duplex** from the **Duplex / Booklet** setting.
- 4 Click the **Duplex Settings...** button, the **Duplex Settings** will appear.
- 5 Choose Use Duplex Unit from the Duplex Mode setting.
- 6 Click **OK**. The printer will print on both sides of the paper automatically.

Duplex Settings
Duplex Mode         Usg Duplex Unit         Magual Duplex         Plips on Left Edge         Flip on Left Edge         Flip on Left Edge         Flip on Lop Edge         Flip on Jop Edge         Flip on Bottom Edge         Flip on Bottom Edge         Flip on Bottom Edge         Flip on Bottom Edge (No Reverse)         Binding Offset         Unit       mm         Offset       0.0
OK Cancel Default Help

# For the BR-Script printer driver

- 1 Open the **Properties** dialog box in the printer driver.
- 2 From the **General** tab, click the **Printing Preferences** button.
- 3 From the Layout tab, choose Orientation, Print on Both Sides and Page Order.
- 4 Click **OK**. The printer will print on both sides of the paper automatically.


💩 Brother HL-5350DN BR-Scrip	t3 Printing Preferences ?	×
Layout Paper/Quality Orientation Portrait Landscape Rotatgd Landscape Print on Both Sides Flip on Shott Edge Flip on Long Edge None Page Order Fright to Back Back to Front Pages Per Sheet: 1	Adyanced	
	OK Cancel Apply	

# **Booklet printing**

1 Put paper in the paper tray or MP tray.

2 For the Windows<sup>®</sup> printer driver

- 1 Open the **Properties** dialog box in the printer driver.
- 2 From the **General** tab, click the **Printing Preferences** button.
- 3 From the **Basic** tab, choose **Booklet** from the **Duplex / Booklet** setting.
- 4 Click the **Duplex Settings...** button, the **Duplex Settings** will appear.
- 5 Choose Use Duplex Unit or Manual Duplex from the Duplex Mode Setting.
- 6 Click OK.

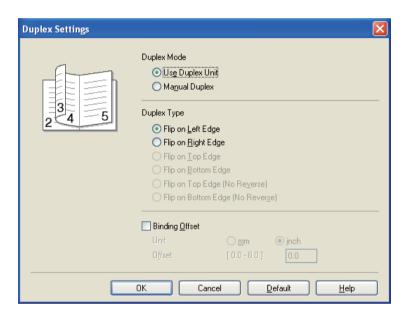

For the BR-Script printer driver

- **1** Open the **Properties** dialog box in the printer driver.
- 2 From the **General** tab, click the **Printing Preferences** button.
- 3 From the Layout tab, choose Booklet from the Pages Per Sheet setting.
- 4 Click **OK**. The printer will print a booklet automatically.

3

# **Driver and Software**

# **Printer driver**

A printer driver is software that translates data from the format used by a computer to the format that a particular printer needs. Typically, this format is page description language (PDL).

The printer drivers for the supported versions of Windows<sup>®</sup> and Macintosh are on the CD-ROM we have supplied or on the Brother Solutions Center at <u>http://solutions.brother.com/</u>. Install the drivers by following the Quick Setup Guide. The latest printer driver can be downloaded from the Brother Solutions Center at <u>http://solutions.brother.com/</u>.

(If you want to uninstall the printer driver, see Uninstalling the printer driver on page 69.)

# For Windows<sup>®</sup>

- Windows<sup>®</sup> printer driver (the most suitable printer driver for this product)
- BR-Script (PostScript<sup>®</sup> 3<sup>™</sup> language emulation) printer driver

# For Macintosh

- Macintosh printer driver (the most suitable printer driver for this product)
- BR-Script (PostScript<sup>®</sup> 3<sup>™</sup> language emulation) printer driver <sup>1</sup>
- <sup>1</sup> To install the driver, see *Installing the BR-Script3 printer driver* on page 63.

# For Linux<sup>® 1 2</sup>

- LPR printer driver
- CUPS printer driver
- <sup>1</sup> Download the printer driver for Linux from http://solutions.brother.com/ or a link on the supplied CD-ROM.
- <sup>2</sup> Depending on Linux distributions, the driver may not be available.

# 🖉 Note

- For more information about Linux printer driver, visit us at http://solutions.brother.com/.
- The printer driver for Linux may be released after the initial release of this product.

	Windows <sup>®</sup> printer driver	BR-Script printer driver	Macintosh Printer Driver	LPR / CUPS printer driver <sup>1</sup>
Windows <sup>®</sup> 2000 Professional	(j)	(j)		
Windows <sup>®</sup> XP Home Edition	(j)	(j)		
Windows <sup>®</sup> XP Professional	(j)	(j)		
Windows Vista <sup>®</sup>	(j)	(j)		
Windows Server <sup>®</sup> 2003	(i)	(i)		
Windows Server <sup>®</sup> 2008	(i)	(i)		
Windows <sup>®</sup> XP Professional x64 Edition	0	Ū		
Windows Server <sup>®</sup> 2003 x64 Edition	Û	Ū		
Mac OS X 10.3.9 or greater		Û	(j)	
Linux <sup>1</sup>				()

<sup>1</sup> For the information on supported Linux distribution and to download the printer driver, visit us at <u>http://solutions.brother.com/</u>. You can also download the printer driver from a link on the supplied CD-ROM. If you download from a link on CD-ROM, click **Install Other Drivers** or **Utilities**, then click **For Linux users** on the screen menu. Access to internet is required. You can change the following printer settings when you print from your computer.

- Paper Size
- Orientation
- Copies
- Media Type
- Resolution
- Print Settings
- Multiple Page
- Duplex / Booklet <sup>3</sup>
- Paper Source
- Scaling
- Reverse Print
- Use Watermark <sup>1 3</sup>
- Header-Footer Print<sup>3</sup>
- Toner Save Mode
- Administrator <sup>3</sup>
- Use Reprint <sup>1 3</sup>
- Sleep Time
- Macro<sup>13</sup>
- Page Protection <sup>1 3</sup>
- Density Adjustment<sup>2</sup>
- Error Message Printout <sup>13</sup>
- Improve Print Output
- <sup>1</sup> These settings are not available with the BR-script printer driver for Windows<sup>®</sup>.
- <sup>2</sup> These settings are not available with the Macintosh printer driver.
- <sup>3</sup> These settings are not available with the Macintosh printer driver and the BR-Script printer driver for Macintosh.

# Features in the printer driver (for Windows<sup>®</sup>)

(For more information, see the Help text in the printer driver.)

# **Note**

- The screens in this section are on based Windows<sup>®</sup> XP. The screens on your computer will vary depending on your operating system.
- You can access the **Printing Preferences** dialog box by clicking **Printing Preferences...** in the **General** tab of the **Printer Properties** dialog box.

# Basic tab

You can also change settings by clicking the illustration on the left side of the **Basic** tab.

Brother HL-5350DN series Print	ing Preferences	S Brothe	r onsCenter
	Basic Advanced		
Paper Size : Letter 81/2 × 11 in (21.5 ± × 27.3 4 mm) Media Type : Plain Paper Copies : 1 Resolution : 600 dpi Duplex / Booklet : None Scaling : Off Watermark : Off	Paper Sige Orientation Copies Media Type Besolution Prigt Settings Multiple Page Boader Line Duplex / Booklet	Letter  Potytai D Landscape  Plain Paper  600 dpi  General  Manual Setti  Right, then Down  None	
	Paper Source Eist Page Other Pages	Auto Select Same as First Page	
Support		Cancel Apply	Help

- 1 Choose the Paper Size, Orientation, Copies, Media Type, Resolution and Print Settings(1).
- 2 Choose the Multiple Page and Duplex / Booklet setting (2).
- 3 Choose the **Paper Source**(3).
- Click OK(4) to apply your chosen settings. To return to the default settings, click Default(5), then OK.(4)

# 🖉 Note

This area (6) shows the current settings.

# Paper Size

From the drop-down list choose the **Paper Size** you are using.

# Orientation

Orientation selects the position of how your document will be printed (**Portrait** or **Landscape**).



 


 
# Copies

The copies selection sets the number of copies that will be printed.

# Collate

With the Collate check box selected, one complete copy of your document will be printed and then repeated for the number of copies you selected. If the Collate check box is not selected, then each page will be printed for all the copies selected before the next page of the document is printed.





# Media Type

You can use the following types of media in your printer. For the best print quality, select the type of media that you wish to use.

LIN. THICK LIN. THIN Recycled raper Linelopes Italispatencies	Plain Paper	Thin Paper	Thick Paper	Thicker Paper	Bond Paper
	Env. Thick	Env. Thin	Recycled Paper	Envelopes	Transparencies

# 🖉 Note

- When using ordinary plain paper (20 to 28 lb) choose **Plain Paper**. When using heavier weight paper or rough paper choose **Thick Paper** or **Thicker Paper**. For bond paper, choose **Bond Paper**.
- When you use envelopes, choose **Envelopes**. If the toner is not fixed to the envelope correctly when **Envelopes** has been selected, choose **Env. Thick**. If the envelope is crumpled when **Envelopes** has been selected, choose **Env. Thin**.

# Resolution

You can choose the resolution as follows.

- 300 dpi
- 600 dpi
- HQ 1200
- 1200 dpi

# 🖉 Note

If you use the high quality 1200 dpi setting (1200 x 1200 dpi) the print speed will be slower.

# **Print Setting**

You can manually change the print setting.

General

This is a printing mode for general printing of documents.

Graphics

This is the best mode for printing documents that contain graphics.

Office Document

This is the best mode for printing office documents.

Text

This is the best mode for printing text documents.

Manual

You can change the settings manually by choosing Manual and clicking the Manual Settings... button.

You can set brightness, contrast and other settings.

# **Multiple Page**

The Multiple Page selection can reduce the image size of a page allowing multiple pages to be printed on one sheet of paper or enlarging the image size for printing one page on multiple sheets of paper.

Page Order

When N in 1 option is selected, the page order can be selected from the drop-down list.

#### Border Line

When printing multiple pages on one sheet with the Multiple Page feature you can choose to have a solid border, dash border or no border around each page on the sheet.

# Duplex / Booklet

When you want to print a booklet or do duplex printing, use this function, and then from the **Basic** tab, choose a **Duplex** / **Booklet** (See *Duplex printing* on page 24).

# None

Disable duplex printing.

# Duplex

When you want to do duplex printing, use this function.

If you choose **Duplex** and click **Duplex Settings...** button. You can set the following settings.

# Duplex Mode

# • Use Duplex Unit

In this mode, the printer prints on both sides of the paper automatically.

#### Manual Duplex

In this mode, the printer prints all the even numbered page first. Then the printer driver will stop and show the instructions required to re-install the paper. When you click OK the odd numbered pages will be printed.

# Duplex Type

There are six types of duplex binding directions available for each orientation.

#### Binding Offset

If you check the Binding Offset option, you can also specify the offset for binding in inches or millimeters.

# Booklet

When you want to print a booklet, use this function. To make the Booklet, fold the printed pages down the middle.

If you choose **Booklet** and click **Duplex Settings...** button. You can set the following settings.

# • Duplex Mode

#### Use Duplex Unit

In this mode, the printer prints on both sides of the paper automatically.

#### Manual Duplex

In this mode, the printer prints all the even numbered page first. Then the printer driver will stop and show the instructions required to re-install the paper. When you click OK the odd numbered pages will be printed.

#### • Duplex Type

There are two types of duplex binding directions available for each orientation.

#### Binding Offset

If you check the Binding Offset option, you can also specify the offset for binding in inches or millimeters.

# **Paper Source**

You can choose **Auto Select**, **Tray1**, **Tray2**<sup>1</sup>, **Tray3**<sup>1</sup>, **MP Tray** or **Manual** and specify separate trays for printing the first page and for printing from the second page onwards.

<sup>1</sup> Tray2 and Tray3 are options. You must add Tray2 or Tray3 in the Accessories tab to select Tray2 or Tray3 from the driver. (See Accessories tab on page 43.)

# Advanced tab

	aic Advanced Scaling  Fit to Paper Sige  Letter  Free [ 25 - 400 % ]  Reverse Print
8 1/2 x 11 in	Reverse Print
Media Type : Plain Paper Copies : 1	Use Watermark
Resolution : 600 dpi Duplex / Booklet : None Scaling : Off Watermark : Off	Header-Footer Print Torner Save Mode
	Administrator Settings
	Default

You can set the following in Printer Function:

- Scaling (1)
- **Reverse Print** (2)
- Use Watermark (3)
- Header-Footer Print (4)
- Toner Save Mode (5)
- Administrator (6)
- Other Print Options (7)

# Scaling

You can change the print image scaling.

# **Reverse Print**

Check **Reverse Print** to reverse the data from up to down.

# **Use Watermark**

You can put a logo or text into your documents as a watermark.

You can choose one of the preset watermarks, or you can use a bitmap file or text that you have created.

When you use a bitmap file as a watermark, you can change the size of the watermark and put it anywhere you like on the page.

When you use text as a watermark, you can change the Text, Font, Style, Size and Darkness settings.

#### **Header-Footer Print**

When this feature is enabled, it will print the date and time on your document from your computer's system clock and the PC login user name or the text you entered. By clicking **Settings...** you can customize the information.

# ID Print

If you select **Login User Name**, your PC login user name will print. If you select **Custom** and enter the text in the **Custom** edit box, the text you entered will print.

# **Toner Save Mode**

You can save running costs by turning on the **Toner Save Mode**, which cuts the print density.

**Note** 

- We do not recommend Toner Save for printing Photo or Greyscale images.
- Toner Save Mode is not available for 1200 dpi or HQ 1200 resolution.

# Administrator

Administrators have the authority to limit the number of copies, scaling setting and watermark setting functions.

#### Password

Enter the password into this box.

Set Password...

Click here to change the password.

Set

Click here current password. Then you can change the settings.

Copies Lock

Lock the copy pages selection to prevent multiple copy printing.

Multiple Page & Scaling Lock

Lock the current settings of the Multiple Page and Scaling options to prevent changes being made.

Watermark Lock

Lock the current settings of the Watermark option to prevent changes being made.

# Header-Footer Print Lock

Lock the current settings of the Header-Footer Print option to prevent changes being made.

# **Other Print Options...**

You can set the following in Printer Function:

- Use Reprint
- Sleep Time
- Macro
- Page Protection
- Density Adjustment
- Error Message Printout
- Improve Print Output

# **Use Reprint**

The printer keeps the last print job sent to it in memory.

To reprint the last document, press **Go** and hold it down for about 4 seconds until all the LEDs light up, and then release **Go**.

Within 2 seconds press Go the number of times you want to reprint.

If you don't press **Go** within 2 seconds, a single copy will be printed.



If you want to prevent other people from printing your data using the reprint function, uncheck the **Use Reprint** check box in the **Other Print Options...**.

# Sleep Time

When the printer does not receive data for a certain period of time, it enters sleep mode. In sleep mode, the printer acts as though it were turned off. When you choose **Printer Default** the timeout setting will be 1 minute. Intelligent Sleep Mode automatically adjusts to the most suitable timeout setting depending on the frequency of your printer use.

While the printer is in sleep mode, all the LEDs are off, the **Status** LED lights up slightly, but the printer can still receive data. Receiving a print file or document or pressing **Go** will automatically wake up the printer to start printing.

For more information about **Sleep Time** setting change, please visit the product page at <u>http://solutions.brother.com/</u> and see "Information".

Other Print Options	
Other Print Options  Pinter Function Use Reprint Sleep Time Macro Page Protection Density Adjustment Error Message Printout Improve Print Output	Sleep Time Auto (Intelligent Sleep Mode)
<u></u>	Default DK Cancel <u>H</u> elp

#### Macro

You can save a page of a document as a macro to printer memory. You can also execute the saved macro (you can use the saved macro as an overlay on any documents). This will save time and increase printing speed for often used information such as forms, company logos, letterhead formats or invoices.

# **Page Protection**

Page Protection refers to a setting that reserves extra memory for the creation of full-page images.

#### Selections are Auto, Off and Printer Default.

The page protection feature allows the printer to create the full-page image to be printed in memory before physically moving the paper through the printer. Use this function when the image is complicated and the printer has to wait to process the image before printing.

# **Density Adjustment**

Increase or decrease the print density.

# 🖉 Note

The Density Adjustment is not available when you set the Resolution to HQ 1200.

# **Error Message Printout**

You can choose whether the printer reports problems by printing an error page. For details, see *Error message printout* on page 117.

Selections are Printer Default, On and Off.

# **Improve Print Output**

This feature allows you to improve a print quality problem.

#### Reduce Paper Curl

If you choose this setting, the paper curl may be reduced. If you are printing only a few pages, you do not need to choose this setting. We recommend that you change the printer driver setting in **Media Type** to a **Thin Paper** setting.

# Improve Toner Fixing

If you choose this setting, the toner fixing on paper may be improved. If this selection does not provide enough improvement, select **Thicker Paper** in **Media Type** settings.


# Accessories tab



From the Start menu, select Control Panel and then Printers and Faxes <sup>1</sup>. Right-click the Brother HL-5340D/HL-5350DN/HL-5370DW series icon and select Properties to access the Accessories tab.

<sup>1</sup> **Printers** for Windows<sup>®</sup> 2000 users.

When you install the optional accessories, you can add and choose their settings in the **Accessories** tab as follows.

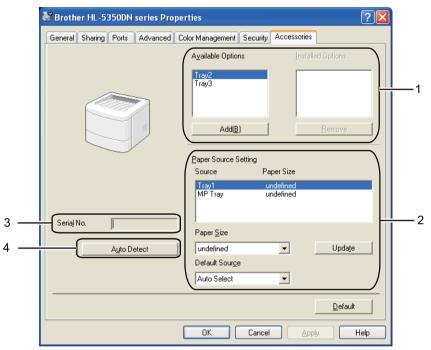

# Available Options (1)

You can manually add and remove the options that are installed on the printer. Tray settings will match the installed options.

# Paper Source Setting (2)

This feature identifies the paper size defined for each paper tray.

Paper Size

This setting allows you to define which paper size is used for each tray. Highlight the tray you want to define and then choose the paper size from the pull-down menu. Click **Update** to apply the setting to the tray. When using more than one paper size you must define the paper size for each tray so the paper is pulled from the correct tray.

#### Default Source

This setting allows you to choose the default paper source that your document will be printed from. Choose the **Default Source** from the pull-down menu and click Update to save your setting. The **Auto Select** setting will automatically pull paper from any tray that has a defined paper size that matches your document.

#### Serial No. (3)

By clicking **Auto Detect**, the printer driver will probe the printer and display its serial number. If it fails to receive the information, the screen will display "------".

■ Auto Detect (4)

The **Auto Detect** function finds the currently installed optional devices and shows the available settings in the printer driver. When you click **Auto Detect**, options that are installed on the printer will be listed in **Installed Options**(1). You can manually add or remove the options by choosing an optional device you want to add or remove, and then clicking **Add** or **Remove**.

🖉 Note

The Auto Detect function is not available under the following printer conditions:

- The printer power switch is off.
- The printer is in an error state.
- The printer is in a network shared environment.
- The cable is not connected to the printer correctly.

# Support

# 🖉 Note

You can access the Support dialog box by clicking Support... in the Printing Preferences dialog box.

	Support	
	brother	Printer Driver Version 0.01 25 May 2008
1 —	Brother Solutions Center Brother Solutions Center Connect directly to the Brother Solutions Center Web (solutions.brother.com) site for up i information on device drivers, user guides, white papers and other documentation availa Brother product.	
2 —	<u>G</u> enuine Supplies Website For best quality results use Brother genuine supplies. Visit our website for further informat	ion.
3 — 4 —	Print Settings Print Eonts	
5 — 6 —	All Rig	hts Reserved.
		OK

# Brother Solutions Center (1)

The Brother Solutions Center (<u>http://solutions.brother.com/</u>) is a website offering information about your Brother product including FAQs (Frequently Asked Questions), User's Guides, driver updates and tips for using your printer.

# Genuine Supplies Website...(2)

You can visit our website for original/genuine Brother supplies by clicking this button.

# Print Settings (3)

This will print the pages that show how the internal settings of the printer have been configured.

# ■ Print Fonts (4)

This will print the pages that show all the internal fonts of the printer.

# Check Setting...(5)

You can check the current driver settings.

■ **About**...(6)

This will show the list of the printer driver files and version information.

# **Status Monitor**

This reports the printer status (any errors that may happen with the printer) when printing. If you would like to turn the status monitor on, follow these steps:

Click the Start button, All Programs <sup>1</sup>, Brother, your printer (e.g. Brother HL-5370DW), and then Status Monitor.

<sup>1</sup> **Programs** for Windows<sup>®</sup> 2000 users

# Using the BR-Script3 printer driver (PostScript<sup>®</sup> 3<sup>™</sup> language emulation for Windows<sup>®</sup>)

(For more information, see the Help text in the printer driver.)

# Note

- To use the BR-Script3 printer driver you must install the driver using the Custom Install from the CD-ROM.
- The screens in this section are based on HL-5350DN with Windows $^{\ensuremath{\mathbb{R}}}$  XP.
- The screens on your computer may vary depending on your operating system.

# **Device Settings tab**

🖉 Note

From the Start menu, select Control Panel and then Printers and Faxes <sup>1</sup>. Right-click the Brother HL-5340D/HL-5350DN/HL-5370DW BR-Script3 icon and select Properties to access the Device Settings tab.

<sup>1</sup> **Printers** for Windows<sup>®</sup> 2000 users.

Choose the options you have installed.

Brother HL-5350DN BR-Script3 Properties	?×
General Sharing Ports Advanced Security Device Settings	
General       Sharing       Ports       Advanced       Security       Device Settings         Tray3:       Letter       MP Tray:       Letter         MP Tray:       Letter       Manual Feed:       Letter         Manual Feed:       Letter       Manual Feed:       Letter         Available       PostScript Memory:       5908 KB       Output Protocol:       ASCII         Send CTRL-D After Each Job:       No       Send CTRL-D After Each Job: Yes       Convert Gray Text to PostScript Gray:       No         Add Euro Currency Symbol to PostScript Fonts:       Yes       Job Timeout:       0 seconds         Wait Timeout:       30 seconds       Seconds       Seconds	
Minimum Font Size to Download as Outline: <u>100 pixel(s)</u> Maximum Font Size to Download as Bitmap: <u>600 pixel(s)</u> Installable Options Number of Input Trays: <u>3</u> RAMDISK: <u>Installed</u>	~
OK Cancel	pply

# **Printing Preferences**



You can access the **Printing Preferences** dialog box by clicking **Printing Preferences...** in the **General** tab of the **Brother HL-5340D/HL-5350DN/HL-5370DW BR-Script3 Properties** dialog box.

#### Layout tab

You can change the layout setting by choosing the settings for **Orientation**, **Print on Both Sides (Duplex)**, **Page Order** and **Page Per Sheet**.

💩 Brother HL-5350DN BR-Sc	ript3 Printing Preferences	? 🗙
Layout Paper/Quality Orientation Portrait Landscape Rotated Landscape Print on Both Sides Flip on Short Edge Flip on Long Edge None Page Order Front to Back Back to Front Pages Per Sheet: 1		ced
	OK Cancel	Apply

### Orientation

Orientation selects the position of how your document will be printed. (**Portrait**, **Landscape** or **Rotated Landscape**)

#### Print on Both Sides

If you want to do duplex printing, choose Flip on short Edge or Flip on Long Edge.

# Page Order

Specifies the order in which the pages of your document will be printed. **Front to Back** prints the document so that page 1 is on top of the stack. **Back to Front** prints the document so that page 1 is on the bottom of the stack.

#### Pages Per Sheet

Choose how many pages will appear on each side of the paper, or **Booklet**.

# ■ Paper/Quality tab

Choose the **Paper Source**.


💩 Brother HL-535	50DN BR-Script3 Printing Preferences	? 🛛
Layout Paper/Qual	ity	
Tray Selection		
Paper <u>S</u> ource:	Automatically Select	*
	Automatically Select Auto Select Tray1 Tray2 Tray3 MP Tray Manual Feed	
	Ac	vanced
	OK Cancel	Apply

# Paper Source

You can choose Automatically Select, Auto Select, Tray1, Tray2<sup>1</sup>, Tray3<sup>1</sup>, MP Tray or Manual Feed.

<sup>1</sup> Tray2 and Tray3 are options.

# **Advanced options**

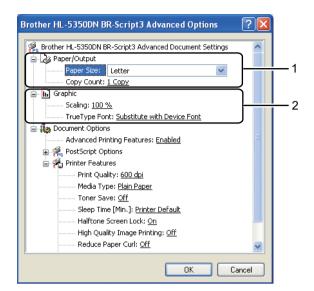

Choose the Paper Size and Copy Count(1).

# Paper Size

From the drop-down box choose the Paper Size you are using.

#### Copy Count

The copy selection sets the number of copies that will be printed.

#### 2 Set the Scaling and True Type Font settings (2).


# Scaling

Specifies whether to reduce or enlarge documents, and by what percentage.

#### True Type Font

Specifies the TrueType font options. Click **Substitute with Device Font** (the default) to use equivalent printer fonts for printing documents that contain TrueType fonts. This will permit faster printing; however, you might lose special characters not supported by the printer font. Click **Download as Softfont** to download TrueType fonts for printing instead of using printer fonts.

You can change settings by choosing a setting in the **Printer Features** list (3):

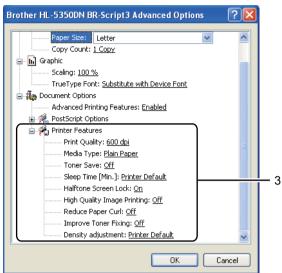

# Print Quality

You can choose the following print quality settings.

- 1200 dpi
- HQ 1200
- 600 dpi
- 300 dpi

# Media Type

You can use the following types of media in your printer. For the best print quality, select the type of media that you wish to use.

Plain Paper	Thin Paper	Thick Paper	Thicker Paper	Bond Paper
Env. Thick	Env. Thin	Recycled Paper	Envelopes	Transparencies

#### Toner Save

You can conserve toner use with this feature. When you set **Toner Save** mode to **On**, print appears lighter. The default setting is **Off**.



• We do not recommend Toner Save for printing Photo or Greyscale images.


• Toner Save mode is not available for 1200 dpi or HQ 1200 resolution.

#### Sleep Time

When the printer does not receive data for a certain period of time, it enters sleep mode. In sleep mode, the printer acts as though it were turned off. When you choose **Printer Default** the timeout setting will be 1 minute.

While the printer is in sleep mode, all the LEDs are off, the **Status** LED lights up slightly, but the printer can still receive data. Receiving a print file or document or pressing **Go** will automatically wake up the printer to start printing.

For more information about **Sleep Time** setting change, please visit the product page at <u>http://solutions.brother.com/</u> and see "Information".

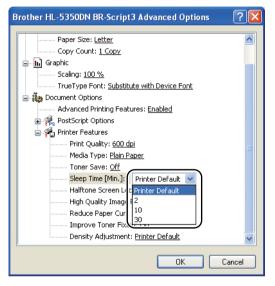

#### Halftone Screen Lock

Stops other applications from modifying the Halftone settings. The default setting is **On**.

## High Quality Image Printing

You can get high quality image printing. If you set **High Quality Image Printing** to **On**, the printing speed will be slower.

#### Reduce Paper Curl

If you choose this setting, the paper curl may be reduced. If you are printing only a few pages, you do not need to choose this setting. We recommend that you change the printer driver setting in **Media Type** to a thin setting.

#### Improve Toner Fixing

If you choose this setting, the toner fixing on paper may be improved. If this selection does not provide enough improvement, select **Thicker Paper** in **Media Type** settings.

#### Density Adjustment

Increase or decrease the print density.

# Features in the printer driver (for Macintosh)

This printer supports Mac OS X 10.3.9 or greater.

# **Note**

The screens in this section are based on Mac OS X 10.5. The screens on your Macintosh will vary depending on your operating system.

# Choosing page setup options

You can set the Paper Size, Orientation and Scale.

From an application such as Apple TextEdit, click File, then Page Setup. Make sure HL-XXXX (where XXXX is your model name.) is chosen in the Format for pop-up menu. You can change the settings for Paper Size, Orientation and Scale, then click OK.


	Page Attributes	•
Format for:	Brother HL-5350DN series	\$
	Brother HL-5350DN series CUPS	
Paper Size:	A4	\$
Orientation: Scale:	20.99 by 29.70 cm	

From an application such as Apple TextEdit, click File, then Print to start printing.
 For Mac OS X 10.3 and 10.4.

Printer: Brother HL-5350DN series	•
Presets: Standard	•
Copies & Pages	•
Copies: 1 🗹 Collated	
Pages: • All From: 1 to: 1	
(?) (PDF v) (Preview)	Cancel Print

■ For Mac OS X 10.5

For more page setup options, click the disclosure triangle beside the Printer pop-up menu.

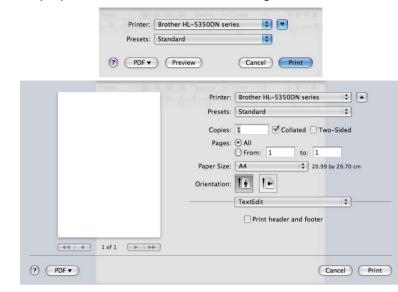

# **Choosing printing options**

To control special printing features, choose the options in the Print dialog box.

	Printer:	Brother HL-5350DN series
	Presets:	Standard
	Copies: 1	Collated 🗌 Two-Sided
	Pages: 🧕	All From: 1 to: 1
	Paper Size:	A4 20.99 by 29.70 cm
	Orientation:	
		TextEdit
		Layout
		Color Matching
		Paper Handling
[ ◀◀ ◀ ] 1 of 1 ▶ ▶▶		Paper Feed
		Cover Page
		Scheduler
? PDF ▼		Print Settings
		Summary

# **Cover Page**

You can make the following cover page settings:

	Printer: Brother HL-5350DN series	:
	Presets: Standard	\$
	Copies: 1 🗹 Collated 🗆 T	wo-Sided
	Pages: • All From: 1 to: 1	
		99 by 29.70 cm
	Orientation:	
	Cover Page	\$
	Print Cover Page: 💿 None	
	<ul> <li>Before docu</li> <li>After docum</li> </ul>	
▲ ▲ 1 of 1 ► ►►	Cover Page Type: standard	\$
	Billing Info:	

#### Print Cover Page

If you want to add a cover page to your document, use this function.

# Cover Page Type

Choose a template for the cover page.

# Billing Info

If you want to add the billing information to the cover page, enter text in the **Billing Info** box.

# **Paper Feed**

- 2	Printer: Brother H	IL-5350DN series	•
	Presets: Standard		•
	Copies: 1	Collated 🗌 Tw	o-Sided
	Pages: 💽 All		
	Paper Size: A4		by 29.70 cm
	raper size. My	20.33	by 25.70 cm
	Orientation:	•	
	Orientation:		•
	Paper Fee	ed : Auto Select	
	Paper Fee     All pages from     First page from	ed : Auto Select n: Auto Select	\$
at tof1	Paper Fee     All pages from	ed : Auto Select n: Auto Select	+

You can choose **Auto Select**, **Tray1**, **Tray2**<sup>1</sup>, **Tray3**<sup>1</sup>, **MP Tray**<sup>2</sup> or **Manual**, and specify separate trays for printing the first page and for printing from the second page onwards.

<sup>1</sup> Tray2 and Tray3 are options.

<sup>&</sup>lt;sup>2</sup> The printer automatically turns on the Manual Feed mode when you put paper in the **Multi-purpose Tray**.

# Layout

	Printer: Brother HL-5350DN series \$
	Presets: Standard 🛟
	Copies: 1 Collated 🗌 Two-Sided
	Pages: • All
	O From: 1 to: 1
	Paper Size: A4 \$ 20.99 by 29.70 c
	Orientation:
	Layout \$
	Pages per Sheet: 1
	Layout Direction: Z 5 14 1
▲ ▲ 1 of 1 ► ►►	Border: None
	Two-Sided: Off
	Reverse Page Orientatio

# Pages per Sheet

Choose how many pages will appear on each side of the paper.

# Layout Direction

When you specify the pages per sheet, you can also specify the direction of the layout.

#### Border

If you want to add a border, use this function.

Two-sided

See Duplex Printing on page 61.


# ■ Reverse Page Orientation (For Mac OS X 10.5)

Check Reverse Page Orientation to reverse the data from up to down.

# **Print Settings**

You can change settings by choosing a setting in the **Print Settings** list:

# Basic tab

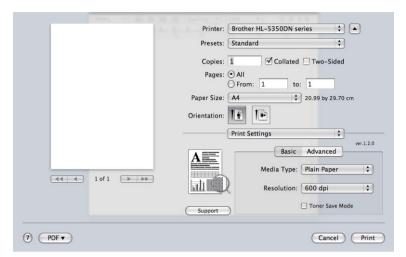

# Media Type

You can change the media type to one of the following:

- Plain Paper
- Thin Paper
- Thick Paper
- Thicker Paper
- Bond Paper
- Transparencies
- Envelopes
- Env. Thick
- Env. Thin
- Recycled Paper

# Resolution

You can choose the resolution as follows:

- 300 dpi
- 600 dpi
- HQ 1200
- 1200 dpi

## Toner Save Mode

You can conserve toner use with this feature. When you set **Toner Save Mode** to On, print appears lighter. The default setting is **Off**.



- We do not recommend Toner Save for printing Photo or Greyscale images.
- Toner Save Mode is not available for 1200 dpi or HQ 1200 resolution.

**Reverse Print** (For Mac OS X 10.3 and 10.4)

Check **Reverse Print** to reverse the data from up to down.

#### Advanced tab

	Printer: Brother HL-5350DN series
	Presets: Standard 🗘
	Copies: 1 Sollated Two-Sided
	Pages:  All From: 1 to: 1
	Paper Size: A4 20.99 by 29.70 cm
	Orientation:
	Print Settings
	A Basic Advanced
10(1	Graphics Quality: Photo 🛟
	Improve Print Output
	Sleep Time
	1 of 1 🕞 🕨

### Graphics Quality

You can change the print quality as follows:

#### Photo

This is a photograph mode (gradation priority). Choose this setting for printing photographs that have continuous gradation. You can represent soft contrasts between various shades of grey.

Graphics

This is a graphics mode (contrast priority). Choose this setting for printing text and figures, such as business and presentation documents. You can represent sharp contrasts between shaded areas.

Chart/Graph

This is the best dither pattern for business documents such as presentations, that include words, graphs or charts. It is particularly suitable for solid colors.

#### Text

This is the best mode for printing text documents.

#### Improve Print Output...

This feature allows you to improve a print quality problem.

#### Reduce Paper Curl

If you choose this setting, the paper curl may be reduced. If you are printing only a few pages, you do not need to choose this setting. We recommend that you change the printer driver setting in **Media Type** to a thin setting.

#### Improve Toner Fixing


If you choose this setting, the toner fixing on paper may be improved. If this selection does not provide enough improvement, select **Thicker Paper** in **Media Type** settings.

#### Sleep Time

When the printer does not receive data for a certain period of time, it enters sleep mode. In sleep mode, the printer acts as though it were turned off. The default setting for timeout is 1 minute. If you want to change the sleep time, choose **Manual** and then enter the time in the text box on the driver.

While the printer is in sleep mode, all the LEDs are off, the **Status** LED lights up slightly, but the printer can still receive data. Receiving a print file or document or pressing **Go** will automatically wake up the printer to start printing.

For more information about **Sleep Time** setting change, please visit the product page at <u>http://solutions.brother.com/</u> and see "Information".

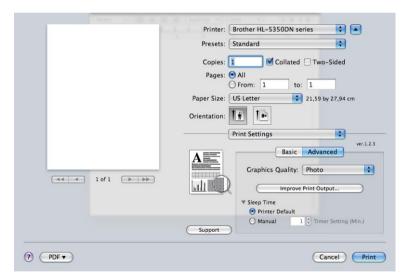

#### Support



#### Brother Solutions Center

The Brother Solutions Center (<u>http://solutions.brother.com/</u>) is a website offering information about your Brother product including FAQs (Frequently Asked Questions), User's Guides, driver updates and tips for using your printer.

## Visit the Genuine Supplies website

You can visit our website for original/genuine Brother supplies by clicking this button.

# **Duplex Printing**

# ■ Use duplex unit.

Select Layout.

Choose Long-edge binding or Short-edge binding in Two-Sided.

Presets: Standard	100	Printer: Brother HL-5350DN series
Pages: All Prom: 1 to: 1 Paper Size: A4 Orientation: Pages per Sheet: 1 Layout Direction: Layout Direction: Layout Direction: Pages per Sheet: 1		Presets: Standard
O From:     1     to:     1       Paper Size:     A4     a     a.26 by 11.69 incl       Orientation:     Image:     Image:     Image:       Layout     Image:     Image:     Image:       Layout     Image:     Image:     Image:		Copies: 🚺 🗹 Collated 🗹 Two-Sided
Paper Size: A4		
Orientation:		
Layout Direction:		
Pages per Sheet: 1		
Layout Direction:		
		Pages per Sheet: 1
		Layout Direction: 🛃 😽 🙌 🄊
Border Off		Border
Two-Sided ✓ Long-edge binding		Two-Sided ✓ Long-edge binding
Short-edge binding		Short-edge binding

# Manual duplex

Select Paper Handling.

■ For Mac OS X 10.3 and 10.4

Choose **Odd numbered pages** and print. Turn the paper over and reload it in the tray, and then choose **Even numbered pages** and print.

Printer: Brother HL-53	50DN series
Presets: Standard	<b>;</b>
Paper Handling	3
Page Order:  Automatic Normal Reverse	Print: O All Pages Odd numbered pages Even numbered pages
Destination Paper Size:	
Use documents paper siz	e: A4
Scale to fit paper size:	A4 *
Scale down only	
PDF  Preview	Cancel Pri

For Mac OS X 10.5

Choose **Odd Only** and print. Turn the paper over and reload it in the tray, and then choose **Even Only** and print.

	Printer: Brother HL-5350DN series 🛟 🔺
	Presets: Standard
	Copies: 1 🗹 Collated 🗆 Two-Sided
	Pages: • All From: 1 to: 1
	Paper Size: A4 20.99 by 29.70 cm
	Orientation:
	Paper Handling \$
	Pages To Print: Odd Only \$
	Destination Paper Size: Suggested Paper: A4 🛟
 1 of 1 🕞 🕨	☐ Scale to fit paper size ✓ Scale down only
	Page Order: Automatic \$

# **Status Monitor**

This reports the printer status (any errors that may happen with the printer) when printing. If you would like to turn the status monitor on, follow these steps:

- For Mac OS X 10.3 and 10.4
- Run the Printer Setup Utility (from the Go menu, choose Applications, Utilities), then choose the printer.
- 2 Click the **Utility**, then **Status Monitor** will start up.
- For Mac OS X 10.5
- 1 Run the System Preferences, select Print & Fax, then choose the printer.
- 2 Click the **Open Print Queue...**, then click the **Utility**. The **Status Monitor** will start up.

## Using the BR-Script3 printer driver (Post Script<sup>®</sup> 3<sup>™</sup> language emulation for Macintosh)

### **Note**

- To use the BR-Script3 printer driver on a Network, see the Network User's Guide on the CD-ROM.
- To use the BR-Script3 printer driver, you need to set the emulation to BR-Script3 using the **Remote Printer Console** or Web Based Management (web browser).(See *Remote Printer Console* on page 74.)

### Installing the BR-Script3 printer driver

You need to install the BR-Script3 printer driver using the following instructions.

#### Note

If you use a USB cable, only one printer driver per printer can be registered in the **Printer Setup Utility** (For Mac OS X 10.3 and 10.4) or **Print & Fax** (For Mac OS X 10.5). Before installing the BR-Script3 printer driver, delete from the Printer list any other Brother drivers that are for the same printer.

■ For Mac OS X 10.3 and 10.4

From the **Go** menu, choose **Applications**.







 
#### 3 Double-click the **Printer Setup Utility** icon.



#### 4 Click Add.



For Mac OS X 10.3 users, go to **6**. For Mac OS X 10.4 or greater users, go to **6**.





6 Choose the model name and make sure that **Brother** is in **Printer Model** (Print Using), then select the model name that shows BR-Script in the Model Name (Model), and then click **Add**. For Mac OS X 10.3 users:

	USB		\$
6	Product	A Type	
U	HL-5350DN series	Brother	)
	Printer Model: Brothe	:r	:
J	Model Name		*
	Brother HL-5350DN BR-S	cript3	
C	Brother HL-5350DN serie		
C	Brother HL-5350DN serie Brother HL-5370DW BR-5	es CUPS.gz	Į.
(		es CUPS.gz Script3	
	Brother HL-5370DW BR-5	es CUPS.gz Script3 es CUPS.gz	

For Mac OS X 10.4 or greater users:

2	Printer Bro	Q.	
fault Browser	IP Printer	Search	1
Printer Name		Le Connecti	on
Brother HL-53	50DN series	Bonjour	
C			) 4 1
	-		
1,000,000	Brother HL-5350DN se	eries	
Name: Location:	Brother HL-5350DN se	eries	
1,000,000	Brother HL-5350DN se Brother	eries	•
Location:		eries	•
Location:	Brother		•
Location:	Brother Model	pt3	:
Location:	Brother Model Brother HL-5340D BR-Scrip Brother HL-5350DN BR-Scrip	pt3 ript3	
Location:	Brother Model Brother HL-5340D BR-Scrij Brother HL-5350DN BR-Scri Brother HL-5350DN BR-Scri	pt3 ript3 CUPS VI.1	
Location:	Brother Model Brother HL-5340D BR-Scri Brother HL-5350DN BR-Scr Brother HL-5350DN BR-Scr Brother HL-5370DW BR-Sc	pt3 ript3 COPS v1.1 ript3	
Location:	Brother Model Brother HL-5340D BR-Scrip Brother HL-5350DN BR-Scr Brother HL-5350DN BR-Sc Brother HL-5370DW BR-Sc Brother HL-5370DW series	pt3 ript3 COFS V1.1 rript3 c CUPS V1.1 rript3 c CUPS V1.1	
Location:	Brother Model Brother HL-5340D BR-Scri Brother HL-5350DN BR-Scr Brother HL-5350DN BR-Scr Brother HL-5370DW BR-Sc	pt3 ript3 COFS V1.1 rript3 c CUPS V1.1 rript3 c CUPS V1.1	
Location:	Brother Model Brother HL-5340D BR-Scrip Brother HL-5350DN BR-Scr Brother HL-5350DN BR-Sc Brother HL-5370DW BR-Sc Brother HL-5370DW series	pt3 ript3 COFS V1.1 rript3 c CUPS V1.1 rript3 c CUPS V1.1	

From the Printer Setup Utility menu, choose Quit Printer Setup Utility.





■ For Mac OS X 10.5

From the Apple menu choose System Preferences.



### 2 Select Print & Fax.



	Print & Fax	
Show All		Q
	Open Print Queue.	) Options & Supplies)
	Open Print Queue.	) Options & Supplies)
+-		
+-	Open Print Queue. Default Printer: Last Printer Used	) Options & Supplies)

Choose the Printer Name and choose Select a driver to use... in Print Using, and then choose the Printer Name that shows BR-Script in Model Name, and click Add.

000		<u></u>	0
	🖹 🚯 🥏		٩
Default Fax IP	Windows Bluetooth AppleT	alk More Printers	Search
Printer Name		A Kind	
Brother HL-5350DN s	ieries	Bonjou	r
L.			
Name: Brot	her HL-5350DN series		
Location:			
Print Using Sel	ect a driver to use		
	Q		
	Brother HL-5340D BR-Scr	int3	
	Brother HL-5340D series	0.000	U
	Brother HL-5350DN BR-Se	cript3	
	Brother HL-5350DN series		4
	Brother HL-5370DW BR-S		
	Protect ML E 2700W corio	6 ( ) HB	heritad (
			Add



## Uninstalling the printer driver

You can uninstall the printer driver that you have installed with the following steps.

- 🖉 Note
  - This is not available if you installed the printer driver from the Windows<sup>®</sup> Add a printer function.
  - After uninstalling, we recommend that you restart your computer to remove files that were in use during the uninstall.

# Printer driver for Windows<sup>®</sup> and Windows Vista<sup>®</sup> and Windows Server<sup>®</sup> 2003/2008

- 1 Click the **Start** button, point to **All Programs**<sup>1</sup>, **Brother** and then to your printer name.
- 2 Click UnInstall.
- **3** Follow the on-screen instructions.
- <sup>1</sup> **Programs** for windows<sup>®</sup> 2000 users

#### **Printer driver for Macintosh**

#### For Mac OS X 10.3 and 10.4

- Disconnect the USB cable between the Macintosh and your printer.
- Restart the Macintosh.
- 3 Log in as an 'Administrator'.
- 4 Run the Printer Setup Utility (from the Go menu, choose Applications, Utilities), then choose the printer you want to remove and remove it by clicking the Delete button.
- Drag the folder (from the Macintosh HD (Startup Disk), choose Library, Printers, Brother) into the Trash and then empty the Trash.
- 6 Restart the Macintosh.

#### For Mac OS X 10.5

- Disconnect the USB cable between the Macintosh and your printer.
- 2 Restart the Macintosh.
- 3 Log in as an 'Administrator'.
- 4 Run the **System Preferences**. Select **Print & Fax**, then choose the printer you want to remove and remove it by clicking the button.

5 Drag the folder (from the **Macintosh HD** (Startup Disk), choose **Library**, **Printers**, **Brother**) into the Trash and then empty the Trash.

6 Restart the Macintosh.

## Software

### Software for networks (For HL-5350DN and HL-5370DW)

#### **BRAdmin Light**

BRAdmin Light is a utility for initial setup of Brother network connected devices. This utility can search for Brother products on your network, view the status and configure basic network settings, such as IP address. The BRAdmin Light utility is available for Windows<sup>®</sup> 2000/XP. Windows Vista<sup>®</sup> and Windows Server<sup>®</sup>

2003/2008 and Mac OS X 10.3.9 (or greater) computers. For installing BRAdmin Light on Windows<sup>®</sup>, please see the Quick Setup Guide we provided with the machine. For Macintosh users, BRAdmin Light will be installed automatically when you install the printer driver. If you have already installed the printer driver, you do not have to install it again.

For more information on BRAdmin Light, visit us at http://solutions.brother.com/.

#### BRAdmin Professional 3 (for Windows®)

BRAdmin Professional 3 is a utility for more advanced management of network connected Brother devices. This utility can search for Brother products on your network and view the device status from an easy to read explorer style window that changes colour identifying the status of each device. You can configure network and device settings along with the ability to update device firmware from a Windows<sup>®</sup> computer on your LAN. BRAdmin Professional 3 can also log activity of brother devices on your network and export the log data in an HTML, CSV, TXT or SQL format.

For users who want to monitor locally connected printers, install the BRPrint Auditor software on the client PC. This utility allows you to monitor printers that are connected to a client PC via USB or parallel from BRAdmin Professional 3.

For more information and downloading, visit us at http://solutions.brother.com/.

#### Web BRAdmin (for Windows<sup>®</sup>)

Web BRAdmin is a utility for managing network connected Brother devices on your LAN and WAN. This utility can search for Brother products on your network, view the status and configure the network settings. Unlike BRAdmin Professional 3, which is designed for Windows<sup>®</sup> only, Web BRAdmin is a server based utility that can be accessed from any client PC with a web browser that supports JRE (Java Runtime Environment). By installing the Web BRAdmin server utility on a computer running IIS <sup>1</sup>, connect to the Web BRAdmin server, which then communicates with the device itself.

For more information and downloading, visit us at http://solutions.brother.com/.

<sup>&</sup>lt;sup>1</sup> Internet Information Server 4.0 or Internet Information Services 5.0/5.1/6.0/7.0

#### **BRPrint Auditor (for Windows®)**

The BRPrint Auditor software brings the monitoring power of Brother network management tools to locally connected machines. This utility allows a client computer to collect usage and status information from a machine connected via the parallel or USB interface. The BRPrint Auditor can then pass this information to another computer on the network running BRAdmin Professional 3 or Web BRAdmin 1.45 or greater. This allows the administrator to check items such as page counts, toner and drum status and the firmware version. In addition to reporting to Brother network management applications this utility can E-mail the usage and status information directly to a predefined E-mail address in a CSV or XML file format (SMTP Mail support required). The BRPrint Auditor utility also supports E-mail notification for reporting warning and error conditions.

#### Web Based Management (web browser)

Web Based Management (web browser) is a utility for managing network connected Brother devices, using the HTTP (Hyper Text Transfer Protocol). This utility can view the status of Brother products on your network and configure the machine or network settings using a standard web browser that is installed on your computer.

For more information, see Chapter 10 of the Network User's Guide on the CD-ROM we have supplied.

For increased security Web Based Management also support HTTPS. For more information see Chapter 14 of the Network User's Guide on the CD-ROM we have supplied.

#### Driver Deployment Wizard (for Windows<sup>®</sup>)

Driver Deployment Wizard is a utility for installation. It can be used to ease or even automate the installation of a locally connected or network connected printer. The Driver Deployment Wizard can also be used to create self running executable files which when run on a remote PC, completely automates the installation of a printer driver. The remote PC does not have to be connected to a network.

#### About emulation modes

This printer has the following emulation modes. You can change the setting by using the control panel or Web Based Management (web browser).

HP LaserJet Mode

The HP LaserJet mode (or HP mode) is the emulation mode in which this printer supports the PCL6 language of the Hewlett-Packard LaserJet laser printer. Many applications support this type of laser printer. Using this mode will allow your printer to run at its best with those applications.

BR-Script 3 Mode

BR-Script is an original Brother page description language and a PostScript<sup>®</sup> language emulation interpreter. This printer supports level 3. The BR-Script interpreter of this printer allows you to control text and graphics on pages.

For technical information about PostScript<sup>®</sup> commands, see the following manuals:

- Adobe Systems Incorporated. PostScript<sup>®</sup> Language Reference, 3rd edition. Addison-Wesley Professional, 1999. ISBN: 0-201-37922-8
- Adobe Systems Incorporated. PostScript<sup>®</sup> Language Program Design. Addison-Wesley Professional, 1988. ISBN: 0-201-14396-8
- Adobe Systems Incorporated. PostScript<sup>®</sup> Language Tutorial and Cookbook. Addison-Wesley Professional, 1985. ISBN: 0-201-10179-3
- EPSON FX-850 and IBM<sup>®</sup> ProPrinter XL Mode

The EPSON FX-850 and IBM ProPrinter XL modes are the emulation modes that this printer supports to meet the industry-standard for dot matrix printers. Some applications support these dot matrix printer emulations. Use these emulation modes so your printer will work well when printing from those types of applications.

#### Automatic emulation selection

This printer has an automatic emulation selection feature that is turned on by default. This lets it automatically change the emulation mode to suit the type of data it receives.

You can change the setting by using the **Remote Printer Console** or Web Based Management (web browser).

The printer can choose from the following combinations:

Setting 1(default)	Setting 2
HP LaserJet	HP LaserJet
BR-Script 3	BR-Script 3
EPSON FX-850	IBM ProPrinter XL

#### Automatic interface selection

This printer has an automatic interface selection feature that is turned on by default. This lets it automatically change the interface to IEEE 1284 parallel, USB, or Ethernet depending on which interface is connected and receiving data.

When you use the parallel interface, you can turn the high-speed and bi-directional parallel communications on or off by using **Remote Printer Console**. (See *Remote Printer Console* on page 74.)



This function takes a few seconds to work. If you want to speed up printing, choose the required interface manually by using **Remote Printer Console**. (See *Remote Printer Console* on page 74.)

If you typically use only one interface, we recommend that you choose that interface using **Remote Printer Console**. (See *Remote Printer Console* on page 74.) If only one interface is chosen, the printer will allocate the entire input buffer to that interface to speed up printing.

#### **Remote Printer Console**

Remote Printer Console is software to change many of the printer settings independently of your application. For example, you can change the settings for printer margin, sleep mode, character set and so on. These settings are then remembered and used by the printer.

#### How to use and install the Remote Printer Console software

To use the Remote Printer Console software, follow the steps below.

#### For Windows<sup>®</sup>

- 1 Put the CD-ROM into your CD-ROM drive and close the opening screen when it appears.
- 2 Open Windows<sup>®</sup> Explorer and choose the CD-ROM drive.
- 3 Double-click the **Tool** folder.
- 4 Double-click the **RPC** folder.
- 5 Refer to the RPC\_User's\_Guide.pdf for how to install and use the Remote Printer Console.

#### **For Macintosh**

- 1 Put the CD-ROM into your CD-ROM drive. Double-click the **HL5300** icon on the desktop.
- 2 Double-click the **Utilities** folder.
- 3 Double-click the **RPC** folder.
- 4 Refer to the RPC\_User's\_Guide.pdf for how to install and use the Remote Printer Console.

# **Control Panel**

4

## LEDs (Light Emitting Diodes)

This section refers to five LEDs Back Cover, Toner, Drum, Paper, Status and two buttons Job Cancel and Go on the control panel.



	LED is off.
	The LED is dimmed.
or 🛑 or	LED is on.
🔆 or 🔆 or –	LED is blinking.

Back Cover occur in the back of the printer. 2) Toner LED Toner The Toner LED indicates when the Toner is low or at the end of its life. Drum 3) Drum LED Paper The Drum LED indicates when the Drum is nearing the end of its life. 4) Paper LED Status The Paper LED indicates when the printer is in one of the following states: No paper / Paper jam / Cover open 5) Status LED Job Cancel The Status LED will flash depending on the printer status. 6) Job Cancel button 1 Job Cancel / ALL Job Cancel Go 7) Go button Wake-up / Error recovery / Form feed / Reprint

1) Back Cover LED

The Back Cover LED indicates when errors

LED	Printer status
<ul> <li>Back Cover</li> <li>Toner</li> <li>Drum</li> <li>Paper</li> <li>Status</li> </ul>	Sleep mode The printer is in sleep mode. Pressing Go wakes up the printer from sleep mode to ready mode.
<ul> <li>Back Cover</li> <li>Toner</li> <li>Drum</li> <li>Paper</li> <li>Status</li> </ul>	Ready to print The printer is ready to print.
Back Cover Toner Drum Paper	Warming up The printer is warming up. The Status LED will turn on for 1 second and off for 1 second.

LED	Printer status
	Receiving data
Back Cover	The printer is either receiving data from the computer, processing data in memory or printing the data.
Toner	The <b>Status</b> LED will turn on for 0.5 seconds and off for 0.5 seconds.
🗆 Drum	Cooling down
Paper	The printer is cooling down. Wait for a few seconds until inside of the printer has cooled down.
- Status	The <b>Status</b> LED will turn on for 1 second and off for 1 second.
	Data remaining in memory
□ Back Cover	There is remaining print data in the printer memory. If the yellow <b>Status</b> LED is on for a long time and nothing has printed, press <b>Go</b> to print the remaining data in
Toner	memory.
🗆 Drum	
Paper	
Status	
	Toner low
Back Cover	Indicates that the toner cartridge is near the end of its life. Buy a new toner cartridge and have it ready for when <b>Replace Toner</b> is indicated.
- <mark>-</mark> - Toner	The <b>Toner</b> LED will turn on for 2 seconds and off for 3 seconds.
🗆 Drum	
Paper	
Status	
	Replace toner
□ Back Cover	Replace the toner cartridge with a new one. See <i>Replacing the toner cartridge</i> on page 94.
Toner	Cartridge error
🗆 Drum	The drum unit assembly is not installed correctly. Take the drum unit out of the machine and put it back in.
Paper	No toner
Status	Open the front cover, install the toner cartridge. See <i>Toner cartridge</i> on page 93.

LED		Printer status
	Baak	Drum life will end soon
	Back Cover	The drum unit is near the end of its life. We recommend that you get a new drum unit to replace the current one. See <i>Replacing the drum unit</i> on page 101.
	Toner	The <b>Drum</b> LED will turn on for 2 seconds and off for 3 seconds.
	Drum	
	Paper	
	Status	
1	1	Replace drum
	Back Cover	Replace the drum with a new one. See <i>Replacing the drum unit</i> on page 101.
	Toner	
	Drum	
	Paper	
	Status	
	1	No paper
	Back Cover	Put paper in the tray. Then press <b>Go</b> . See <i>Printing on plain paper, bond paper and transparencies</i> on page 11, <i>Printing on thick paper, labels and envelopes</i> on
	Toner	page 19 or Cleaning the paper pick-up roller on page 110.
	Drum	
	Paper	
	Status	

LED	Printer status
Deale	No tray
Back Cover	The paper tray was not detected, install it, or ensure it is inserted correctly.
Toner	Paper jam
🗆 Drum	Clear the paper jam. See <i>Paper jams and how to clear them</i> on page 119. If the printer does not start printing, press <b>Go</b> .
	The <b>Paper</b> LED will turn on for 0.5 seconds and off for 0.5 seconds.
	Incorrect paper size for auto DX
Status	Press <b>Go</b> or <b>Job Cancel</b> . Set the correct paper that you want to use, or load the same size paper that you selected in the current driver setting. The paper size you can use for automatic duplex printing is A4.
	The <b>Paper</b> LED will turn on for 0.5 seconds and off for 0.5 seconds.
	Size mismatch
	Put the same size paper in the paper tray or MP tray that is selected in the printer driver, and then press <b>Go</b> .
	Paper jam (back cover or duplex tray)
- Back Cover	Clear the paper jam. See <i>Paper jams and how to clear them</i> on page 119. If the printer does not start printing, press <b>Go</b> .
Toner	The <b>Back Cover</b> LED will turn on for 0.5 seconds and off for 0.5 seconds.
Drum	
- Paper	
Status	
	Duplex disabled
- Back Cover	Close the back cover of the printer and put the duplex tray back in.
Toner	Fuser cover is open
Drum	Close the fuser cover which can be found behind the back cover of the printer.
	The <b>Back Cover</b> LED will turn on for 0.5 seconds and off for 0.5 seconds.
Paper	
Status	

LED	Printer status
Desk.	Front cover is open
Back Cover	Close the front cover of the printer.
Toner	Too many trays
	Maximum number of optional trays is two. Remove additional trays.
Drum	Buffer error
Paper	Check the cable connection between the PC and printer.
	Memory full
Status	The printer memory is full and the printer cannot print full pages of a document. See <i>Solving print problems</i> on page 135.
	Print overrun
	A print overrun occurred and the printer cannot print full pages of a document. See <i>Solving print problems</i> on page 135.
	Download full
	The download buffer of the printer is full. Add more memory to the printer. See <i>Installing extra memory</i> on page 90.
	Font full
	The font memory area is full. Delete fonts or add more memory to the printer. See <i>Installing extra memory</i> on page 90.
Beek	Drum error
Back Cover	The corona wire needs to be cleaned. See <i>Cleaning the corona wire</i> on page 112.
Toner	If your LED's still shows the same error indication after you have cleaned the corona wire, replace the drum unit with a new one. See <i>Replacing the drum unit</i> on
Drum	page 101.
Paper	
Status	

## Service call indications

If there is an error that cannot be cleared by the user, the printer will show that a service call is needed by lighting up all the LEDs as shown below.




If you see the service call indication shown above, turn off the power switch, and then turn it back on and try to print again.

If the error is not cleared after turning the power switch off and then back on, press **Go** and **Job Cancel** together, the LEDs will light up as shown in the table below to identify the error.

LED error indication				
	LEDs	Fuser unit	Main	

LEDs	Fuser unit failure <sup>1</sup>	Main PCB failure	Laser unit failure	Main motor failure	High voltage failure	DIMM error	FAN Failure
Back Cover							
Toner							
Drum							
Paper							
Status							

<sup>1</sup> If this error occurs, turn off the printer power switch, wait a few seconds, and then turn it on again. Leave the printer for 15 minutes with the power on. If the error occurs again, call your dealer or Brother Customer Service. For example, the LED indication below shows a fuser unit failure.

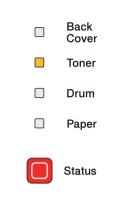

Make a note of the indication, referring to the table on page 81, and report the error status to your dealer or Brother Customer Service.



Make sure that the front cover is completely closed before you report a service call.

## **Control panel buttons**

The control panel buttons have the following functions:

Cancel printing

Cancel only the printing job:

If you press **Job Cancel** while printing, the printer will immediately stop printing and will then eject the paper.

Cancel all the received jobs:

To delete all jobs, press and hold **Job Cancel** for about 4 seconds. The **Status** LED will flash green, red and yellow until all jobs are canceled.

■ Wake-up

If the printer is in sleep mode, press Go or Job Cancel to wake the printer up and go to the Ready state.

Error recovery

If there is an error, the printer will recover automatically from some errors. If an error is not automatically cleared, press **Go** to clear the error, and then continue to use the printer.

Form feed

If the yellow **Status** LED is on for a long time, press **Go**. The printer will print any remaining data in the printer memory.

Reprint

 
To reprint the last document, press **Go** for about 4 seconds until all the LEDs light up and then release it. Within 2 seconds press **Go** the number of times you want to reprint. If you do not press **Go** within 2 seconds, a single copy will be printed.

If you want to use the reprint function open the driver's **Properties** dialog box and go to the Advanced tab, select the **Other Print Options...** icon and click **Use Reprint** and then check the **Use Reprint** check box. See *Other Print Options...* on page 40.

#### Print a test page

You can use the Go button or the printer driver to print a test page.

#### Using the Go button



- 2 Make sure that the front cover is closed and the power cord is plugged in.
- Hold down Go as you turn on the power switch. Keep Go pressed down until the Back Cover, Toner, Drum and Paper LEDs light up. Release Go. Make sure that the Back Cover, Toner, Drum and Paper LEDs are off.
- 4 Press **Go** again. The printer will print a test page.

#### Using the printer driver

If you are using the Windows<sup>®</sup> printer driver, click the Print Test Page button in the General tab of the printer driver.

eneral S		(D. )		<u>ани -</u>		<b>.</b>	
sneral S	haring	Ports	Advanced	Color Management	Security	Accessories	
	Broth	her HL-5	350DN series				
ocation:							
Comment:						=	
20mmeric							
fodel:	Broth	er HL 53	50DN series				
-		erne-ga	CODIN Selles				
Features							
Color: N	0		Pap	er available:			
Double-	sided: Y	'es	A4 Lei		1		
Staple: N	٩o		Lei		_		
Speed: 3	32 000		Ex A5	ecutive			
			45	Long Edge	~		
Maximur	n resolu	ition: 120				2	
			Printing Prefe	rences (Print	<u>T</u> est Page	_)	
				_			

#### Print the Printer Settings page

You can print the current settings using the control panel button or printer driver.

#### Using the Go button

- 1 Make sure that the front cover is closed and the power cord is plugged in.
- 2 Turn on the printer and wait until the printer is in the Ready state.
- **3** Press **Go** three times within 2 seconds. The printer will print the current printer settings page.

#### Using the printer driver

 
If you are using the Windows<sup>®</sup> printer driver, you can print the current printer settings page by clicking the **Print Settings** button in the **Support** dialog.

Support	
brother	Printer Driver Version 0.01 25 May 2008
Brother Solutions Center Brother Solutions Center Connect directly to the Brother Solutions Center Web (solutions.brother.com) site for information on device drivers, user guides, white papers and other documentation as Brother product.	
Genuine Supplies Website	
For best quality results use Brother genuine supplies. Visit our website for further infor          Print Settings         Print Eonts         Eheck Setting	mation.
All	Rights Reserved.
[	OK

#### **Print Fonts**

You can print a list of the internal fonts using the control panel button or printer driver.

#### Using the Go button



- 2) Make sure that the front cover is closed and the power cord is plugged in.
- Hold down Go as you turn on the power switch. Keep Go pressed down until the Back Cover, Toner, Drum and Paper LEDs light up. Release Go. Make sure that the Back Cover, Toner, Drum and Paper LEDs are off.

#### Using the printer driver

If you are using the Brother's Windows<sup>®</sup> printer driver, you can print a list of the internal fonts by clicking the **Print Fonts** button in the **Support** dialog.



<sup>4</sup> Press **Go** twice. The printer will print a list of the internal fonts.

#### **Default settings**

If you want to reset the print server back to its factory default settings (resetting all information such as the password and IP address information), follow these steps:

#### Network default settings (HL-5350DN / HL-5370DW only)

- 1 Turn off the printer.
- 2 Make sure that the front cover is closed and the power cord is plugged in.
- Hold down Go as you turn on the power switch. Keep Go pressed down until all the LEDs light up and then Status LED turns off.
- Release Go. Make sure that all the LEDs are off.
- Press Go six times. Make sure that all the LEDs light up to indicate the print server has been reset to its factory default settings. The printer will restart.

#### **Factory Reset**

You can partially reset the machine back to its default printer settings. The settings that will not be reset the Network settings:

- **1** Turn off the printer.
- 2 Make sure that the front cover is closed and the power cord is plugged in.
- Hold down Go as you turn on the power switch. Keep Go pressed down until all the LEDs light up and then Status LED turns off.
- 4 Release Go. Make sure that all the LEDs are off.
- 9 Press Go eight times. Make sure that all the LEDs light up to indicate the print server has been reset to its factory default settings. The printer will restart.


#### Settings Reset

This operation will reset all the machine settings back to the settings that were set at the factory:

- Turn off the printer.
- 2 Make sure that the front cover is closed and the power cord is plugged in.
- Hold down Go as you turn on the power switch. Keep Go pressed down until all the LEDs light up and then Status LED turns off.
- 4 Release Go. Make sure that all the LEDs are off.
- 5 Press **Go** ten times. The printer will automatically restart.


# 5 Options

This printer has the following optional accessories. You can increase the capabilities of the printer with these items.

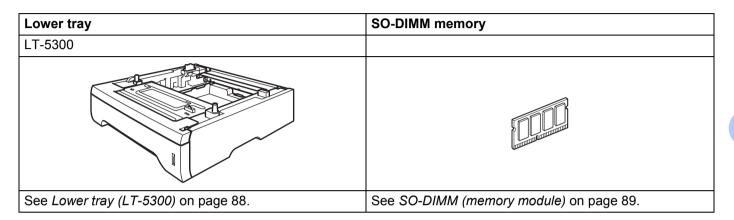

## Lower tray (LT-5300)

Two optional lower trays (Tray 2 and Tray 3) can be installed; each lower tray can hold up to 250 sheets of  $80 \text{ g/m}^2$  (21 lb) paper. When both optional trays are installed, the printer can hold up to 800 sheets of plain paper. If you want to buy an optional lower tray unit, call the dealer you bought the printer from.

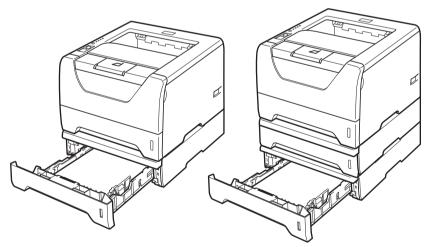

For setup, see the User's Guide that we have supplied with the lower tray unit.

## SO-DIMM (memory module)

#### For HL-5340D

The HL-5340D printer has 16 MB of standard memory and one slot for optional memory expansion. You can expand the memory up to 528 MB by installing dual in-line memory modules (SO-DIMMs).

#### For HL-5350DN / HL-5370DW

The printers have 32 MB of standard memory and one slot for optional memory expansion. You can expand the memory up to 544 MB by installing dual in-line memory modules (SO-DIMMs).

#### **SO-DIMM** types

In general, the machine uses industry-standard SO-DIMM with the following specifications:

Type: 144 pin and 64 bit output CAS latency: 2 Clock frequency: 100 MHz or more

Capacity: 64, 128, 256 or 512 MB

Height: 31.75 mm (1.25 in.)

Dram Type: SDRAM 2 Bank

SDRAM can be used.

For purchasing information and part numbers visit the Buffalo Technology website:

http://www.buffalo-technology.com/



- There might be some SO-DIMMs that will not work with the printer.
- For more information, call the dealer you bought the printer from or Brother Customer Service.


#### Installing extra memory

Turn off the printer power switch, and then unplug the printer. Disconnect the interface cable from the printer.

### **IMPORTANT**

Be sure to turn off the printer power switch before you install or remove the DIMM.

2 Remove the DIMM cover.

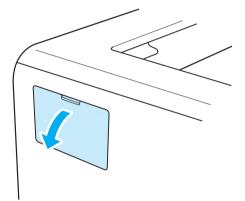


3 Unpack the DIMM and hold it by its edges.

### 

To prevent damage to the printer from static electricity, DO NOT touch the memory chips or the board surface.


4 Hold the DIMM by the edges and align the notches in the DIMM with the protrusions in the slot. Insert the DIMM diagonally (1), then tilt it toward the interface board until it clicks into place (2).

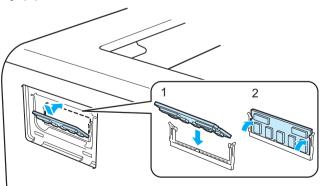

90

Options

5 Put the DIMM cover back on.

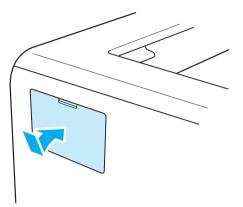

6 Reconnect the interface cable to your printer. Plug the printer back in, and then turn on the power switch.

### Note

To make sure that you have installed the DIMM properly, you can print the printer settings page that shows the current memory size. See *Print the Printer Settings page* on page 85.

```
6
```

## **Routine Maintenance**

You will need to replace certain parts and clean the printer regularly.

## Replacing the consumable items

You will need to replace the consumable items when the machine indicates that the life of the consumable is over.

## 

When you replace certain parts or clean the inside of the printer, remember the following:

If your clothes are smeared with toner, wipe off the toner with a dry cloth and immediately wash the clothes in cold water to avoid stains.


Be careful not to inhale toner.

After you have just used the printer, some internal parts of the printer will be extremely hot. To prevent injury, when you open the front cover or back cover (back output tray) of the printer, DO NOT touch the shaded parts shown in the illustration. If you do this, you may get burned.





### Consumables

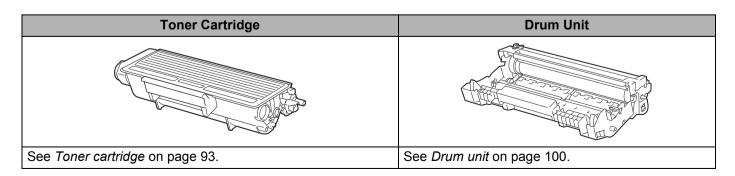

### **Toner cartridge**

The life of the original toner cartridge that came with the printer may be either a standard <sup>1</sup> or high yield toner cartridge <sup>2</sup>, and depends on the model and country you bought the printer in.


- Standard toner cartridges print approximately 3,000 A4 or Letter-size single-sided pages. Approx. cartridge yield is declared in accordance with ISO/IEC 19752.
- <sup>2</sup> High yield toner cartridges print approximately 8,000 A4 or Letter-size single-sided pages. Approx. cartridge yield is declared in accordance with ISO/IEC 19752.

## 🖉 Note

- The amount of toner used varies according to what is printed on the page and the print density setting.
- If you change the print density setting for lighter or darker printing, the amount of toner used will change.
- Wait to unpack the toner cartridge until immediately before you put it into the printer.

#### Toner Low message

The **Toner** LED will turn on for 2 seconds and off for 3 seconds and repeats this pattern.

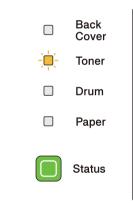


If the LED shows this message, the toner cartridge is near the end of its life. Buy a new toner cartridge and have it ready before you get a Replace Toner message. To replace the toner cartridge, see *Replacing the toner cartridge* on page 94.

#### 🖉 Note

The **Toner** LED will blink continuously if the toner cartridge is near the end of its life.

#### **Replace Toner message**


The printer will stop printing until you replace the toner cartridge with a new one.

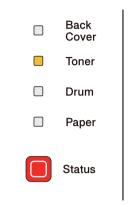


#### Replacing the toner cartridge

### Note

- To ensure high quality printing, we recommend that you use only genuine Brother toner cartridges. When you want to buy toner cartridges, call your dealer.
- We recommend that you clean the printer when you replace the toner cartridge. See *Cleaning* on page 105.
- 1 Make sure that the printer is turned on. Open the front cover.

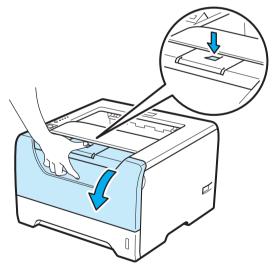


2 Take out the drum unit and toner cartridge assembly.

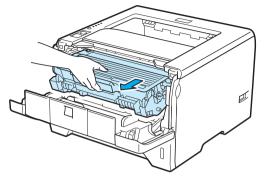


## **IMPORTANT**

We recommend that you put the drum unit and toner cartridge assembly on a piece of disposable paper or cloth in case you accidentally spill or scatter toner.

To prevent damage to the printer caused by static electricity, DO NOT touch the electrodes shown in the illustration.

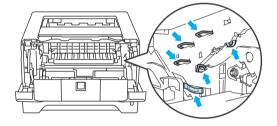

3 Push down the blue lock lever and take the toner cartridge out of the drum unit.

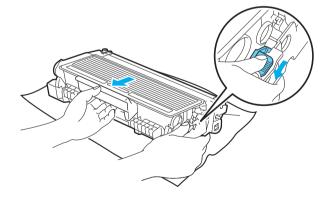

## **WARNING**

DO NOT put a toner cartridge into a fire. It could explode, resulting in injuries.

Use neutral detergents when cleaning the printer.

 
DO NOT use cleaning materials that contain ammonia, alcohol, any type of spray, or any type of flammable substance to clean the outside or inside of the machine. Doing this may cause a fire or electrical shock.

 
Be careful not to inhale toner.

## **IMPORTANT**

Handle the toner cartridge carefully. If toner scatters on your hands or clothes, wipe or wash it off with cold water at once.

To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations.






🖉 Note

- Be sure to seal up the toner cartridge tightly in a bag so that toner powder does not spill out of the cartridge.
- Go to <u>http://www.brother.eu/recycle/</u> for instructions on how to return the used toner cartridge to the brother collection program. If you choose not to return your used toner cartridge, please discard the used toner cartridge according to local regulations, keeping it separate from domestic waste. If you have questions, call your local waste disposal office.

4 Unpack the new toner cartridge. Gently shake it from side to side several times to distribute the toner evenly inside the cartridge.

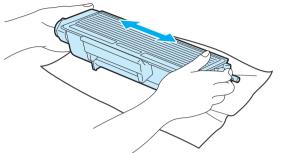


## **!** IMPORTANT


Wait to unpack the toner cartridge until immediately before you put it in the printer. If toner cartridges are left unpacked for a long time the toner life will be shortened.

If an unpacked drum unit is put in direct sunlight or room light, the unit may be damaged.

## 

Put the toner cartridge in the drum unit immediately after you have removed the protective cover. To prevent any degradation to the print quality, DO NOT touch the shaded parts shown in the illustrations.

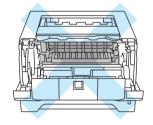

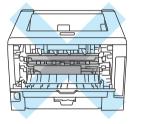

## IMPORTANT

#### For USA and Canada

Brother strongly recommends that you do not refill the toner cartridge provided with your printer. We also strongly recommend that you continue to use only genuine Brother brand replacement toner cartridges. Use or attempted use of potentially incompatible toner and/or cartridges in the Brother machine may cause damage to the machine and/or may result in unsatisfactory print quality. Our warranty coverage does not apply to any problem that is caused by the use of unauthorized third party toner and/or cartridges. To protect your investment and obtain premium performance from the Brother machine, we strongly recommend the use of genuine Brother supplies.


## IMPORTANT

#### For UK and other countries


Brother machines are designed to work with toner of a particular specification and will work to a level of optimum performance when used with genuine Brother branded toner cartridges. Brother cannot guarantee this optimum performance if toner or toner cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than genuine Brother branded cartridges with this machine.

If damage is caused to the drum unit or other part of this machine as a result of using other manufacturer's products with this machine, any repairs required as a result may not be covered by the warranty.

Pull off the protective cover.

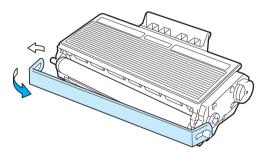


6 Put the new toner cartridge firmly into the drum unit until you hear it lock into place. If you put it in properly, the lock lever will lift automatically.

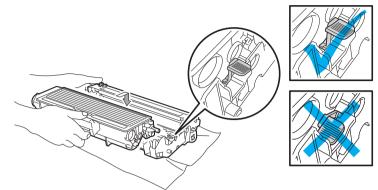

#### 🖉 Note

Make sure that you put in the toner cartridge properly or it may separate from the drum unit.


Clean the primary corona wire inside the drum unit by gently sliding the blue tab from right to left and left to right several times.

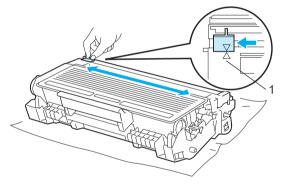

## 🖉 Note

Be sure to return the tab to the home position ( $\blacktriangle$ ) (1). If you do not, printed pages may have a vertical stripe.

8 Put the drum unit and toner cartridge assembly back in the printer. Close the front cover.

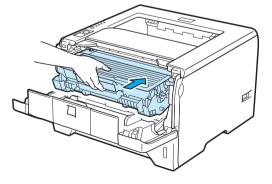

#### 🖉 Note

DO NOT turn off the printer power switch or open the front cover until the Status LED lights up.

## Drum unit


A new drum unit can print approximately 25,000 A4 or Letter size single-sided pages at 1 per/ job.

## **Note**

- There are many factors that determine the actual drum life, such as the temperature, humidity, type of paper, type of toner used and so on. Under ideal conditions, the average drum life is estimated at approximately 25,000 pages. The actual number of pages that your drum will print may be significantly less than this estimate. Because we have no control over the many factors that determine the actual drum life, we cannot guarantee a minimum number of pages that will be printed by your drum.
- For best performance, use only genuine Brother toner. The printer should be used only in a clean, dustfree environment with adequate ventilation.
- Printing with a third-party drum unit may reduce not only the print quality but also the quality and life of the printer itself. Warranty coverage therefore cannot apply to problems caused by the use of a thirdparty drum unit.


#### Drum End Soon message

If Drum LED blinks, it means the drum unit is near the end of its life. We recommend that you replace the drum unit with a new one before there is a noticeable deterioration in the print quality.

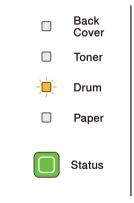

#### **Replace Drum message**

If Drum LED lights, it means the drum unit should be replaced. Please replace it to a drum unit.

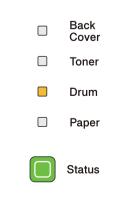

### Replacing the drum unit


## **!** IMPORTANT

While removing the drum unit, handle it carefully because it may contain toner.


Every time you replace the drum unit, clean the inside of the printer. See *Cleaning* on page 105.

When you replace the drum unit with a new one, you need to reset the drum counter by completing the following steps:

1 Press the front cover release button and then open the front cover.

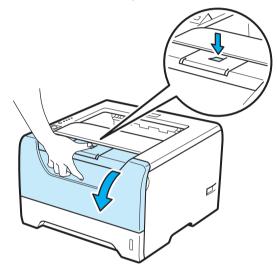


Take out the drum unit and toner cartridge assembly.

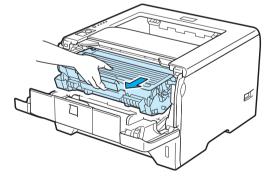


## **!** IMPORTANT

We recommend that you put the drum unit and toner cartridge assembly on a piece of disposable paper or cloth in case you accidentally spill or scatter toner.

To prevent damage to the printer caused by static electricity, DO NOT touch the electrodes shown in the illustration.

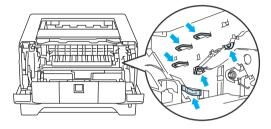

B Push down the blue lock lever and take the toner cartridge out of the drum unit.

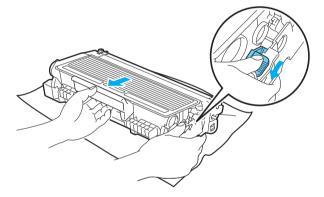

# 

DO NOT put a toner cartridge into a fire. It could explode, resulting in injuries.

Use neutral detergents when cleaning the printer.

 
DO NOT use cleaning materials that contain ammonia, alcohol, any type of spray, or any type of flammable substance to clean the outside or inside of the machine. Doing this may cause a fire or electrical shock.

 
Be careful not to inhale toner.

# **!** IMPORTANT

Handle the toner cartridges carefully. If toner scatters on your hands or clothes, wipe or wash it off with cold water at once.

To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations.






Unpack the new drum unit.

## IMPORTANT

Wait to unpack a drum unit until immediately before you put it in the printer. Exposure to direct sunlight or room light may damage the drum unit.


5 Put the toner cartridge firmly into the new drum unit until you hear it lock into place. If you put the cartridge in properly, the blue lock lever will lift automatically.

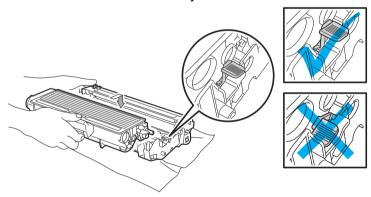


## 🖉 Note

Make sure that you put in the toner cartridge properly, or it may separate from the drum unit.

6 Put the drum unit and toner cartridge assembly back in the printer.

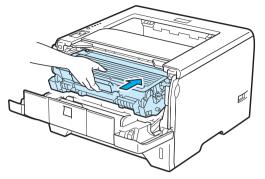

Press and hold down the Go for about 4 seconds until all the LEDs light up. Once all four LEDs are lit, release Go.

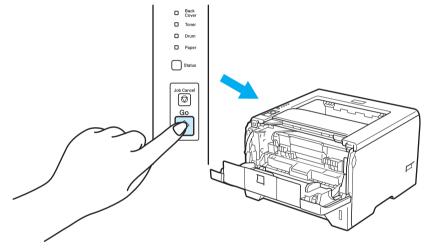

## **IMPORTANT**

Do not reset the drum counter when you only replace the toner cartridge.

- 8 Close the front cover.
- 9 Make sure that the **Drum** LED is now off.

# Cleaning

Clean the outside and inside of the printer regularly with a dry, lint-free cloth. When you replace the toner cartridge or the drum unit, make sure that you clean the inside of the printer. If printed pages are stained with toner, clean the inside of the printer with a dry, lint-free cloth.

### Cleaning the outside of the printer


## WARNING

Use neutral detergents. Cleaning with volatile liquids such as thinner or benzine will damage the surface of the printer.


DO NOT use cleaning materials that contain ammonia.

DO NOT use cleaning materials that contain ammonia, alcohol, any type of spray, or any type of flammable substance to clean the outside or inside of the machine. Doing this may cause a fire or electrical shock.


**1** Turn off the printer power switch and then unplug the printer.

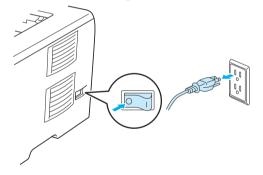


2 Pull the paper tray completely out of the printer.

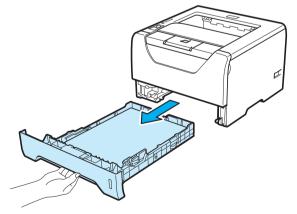

3 Wipe the outside of the printer with a dry, lint-free cloth to remove dust.

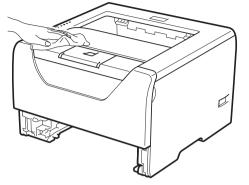


- 4 Remove anything that is stuck inside the paper tray.
- 5 Wipe the inside of the paper tray with a dry, lint-free cloth to remove dust.

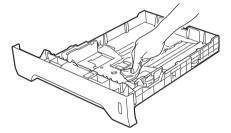


- 6 Put the paper tray back in the printer.
- Plug the printer back in, and then turn on the power switch.

## Cleaning the inside of the printer

1 Turn off the printer power switch and then unplug the printer.

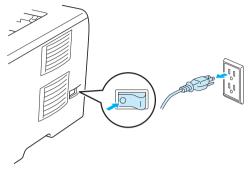


2 Press the front cover release button and then open the front cover.

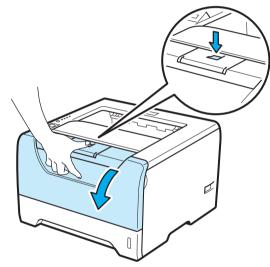


6

**B** Take out the drum unit and toner cartridge assembly.

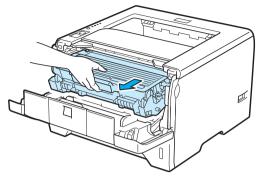

# 

After you have just used the printer, some internal parts of the printer will be extremely hot. Wait for the printer to cool down before you touch the internal parts of the printer.

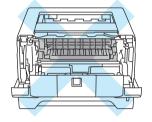


# IMPORTANT


We recommend that you put the drum unit and toner cartridge assembly on a piece of disposable paper or cloth in case you accidentally spill or scatter toner.

Handle the toner cartridge carefully. If toner scatters on your hands or clothes, wipe or wash it off with cold water at once.

To prevent damage to the printer caused by static electricity, DO NOT touch the electrodes shown in the illustration.

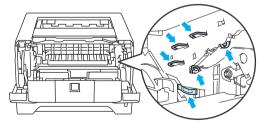

Wipe the scanner window with a dry, lint-free cloth.

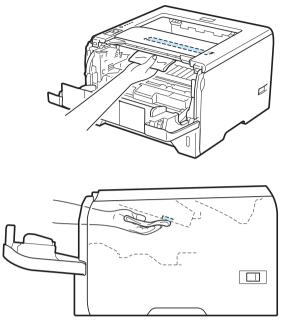


- 5 Put the drum unit and toner cartridge assembly back in the printer.
- 6 Close the front cover.
- **7** Plug the printer back in, and then turn on the power switch.


## Cleaning the paper pick-up roller

If the paper pick-up roller is stained, the printer may not feed paper. In that case, clean the paper pick-up roller as follows:


1 Turn off the power switch and unplug the printer.

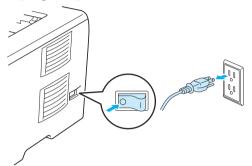


- 2 Unplug the power cord and interface cable from the printer.
- 3 Pull the paper tray out of the printer.

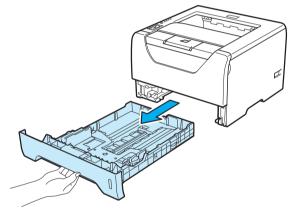


4 Dampen a soft cloth with lukewarm water and wipe the separator pad (1) in the paper tray with it.

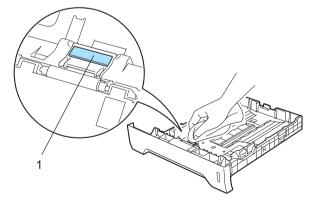

5 Wipe the two paper pick-up rollers (1) inside the printer.

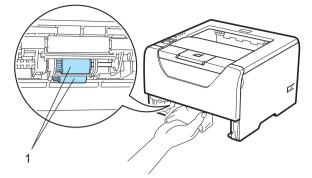

6 Put the paper tray back in the printer.

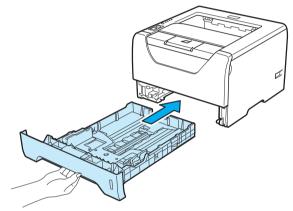


- 7 Make sure that you have turned off the power switch, and then connect the power cord and interface cable to the printer.
- 8 Plug in the power cord and turn on the power switch of the printer.

# **Cleaning the corona wires**


## Cleaning the corona wire

If you have print quality problems, clean the corona wire as follows:

1 Press the front cover release button and then open the front cover.

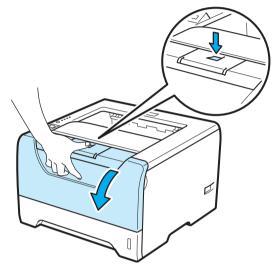


2 Take out the drum unit and toner cartridge assembly.

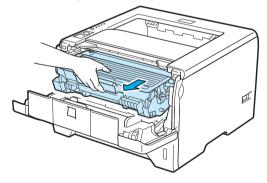


# **!** IMPORTANT

We recommend that you put the drum unit and toner cartridge assembly on a piece of disposable paper or cloth in case you accidentally spill or scatter toner.

To prevent damage to the printer caused by static electricity, DO NOT touch the electrodes shown in the illustration.

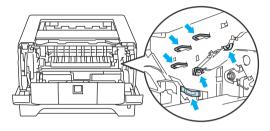


3 Clean the primary corona wire inside the drum unit by gently sliding the blue tab from right to left and left to right several times.

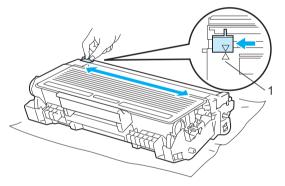

#### Note

Be sure to return the tab to the home position ( $\blacktriangle$ ) (1). If you do not, printed pages may have a vertical stripe.

4 Put the drum unit and toner cartridge assembly back in the printer. Close the front cover.

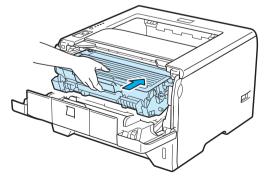

# Troubleshooting

You can correct most problems by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips. Visit us at <u>http://solutions.brother.com/</u>.

# Identifying your problem

#### First, check the following:

- The AC power cord is connected properly and the printer is turned on.
- All of the protective parts have been removed.
- The toner cartridge and drum unit are installed properly.
- The front and back covers are fully closed.
- Paper is inserted properly in the paper tray.
- The interface cable is securely connected to the printer and the computer.
- The correct driver for the printer has been chosen and is installed.
- The computer is set up to connect to the correct printer port.

#### Printer does not print:

If you did not solve your problem with the above checks, identify your problem and then go to the page suggested below.

Printer LED is blinking

See LEDs (Light Emitting Diodes) on page 75.

Status Monitor Error Message appears

See Error messages in the Status Monitor on page 115.

Paper handling

See Paper handling on page 118 and Paper jams and how to clear them on page 119.

Other problems

See Other problems on page 136.

#### Pages are printed, but there are problems with:

Print quality

See Improving the print quality on page 128.

Printout is incorrect

See Solving print problems on page 135.

# **Error messages in the Status Monitor**

The Status Monitor will report problems with the printer. Take the necessary action by referring to the following table.

If you want to turn the status monitor on, see *Status Monitor* on page 46 (For Windows<sup>®</sup> user) or *Status Monitor* on page 62(For Macintosh users).

Error message	Action
Cartridge Position Error	Put the drum unit assembly back in.
Drum End Soon	The drum unit is near the end of its life. Buy a new drum unit to replace the current one. See Replacing the drum unit on page 101.
Replace Drum	See Replacing the drum unit on page 101
Duplex Disabled	Close the back cover of the printer and put the duplex tray back in.
Drum Error	See Cleaning the corona wire on page 112.
Front Cover is Open	Close the front cover of the printer.
Fuser Cover is Open	Close the fuser cover located behind the back cover of the printer.
Incorrect paper size for auto DX	Press Go or Job Cancel. Set the correct paper that you want to use, or load the same size paper that you selected in the current driver setting. The paper size you can use for automatic duplex printing is A4.
Jam MP Tray Jam Tray 1 Jam Tray 2 Jam Tray 3 Jam Inside Jam Rear Jam Duplex	Clear the jammed paper from the indicated area. See Paper jams and how to clear them on page 119.
Memory Full	<ul> <li>Press Go to print the remaining data in the printer memory. Cancel the print job if you want to delete the remaining data in the printer memory. See <i>Control panel buttons</i> on page 83.</li> <li>Reduce the complexity of your document or cut the print resolution.</li> <li>Add more memory. See <i>Installing extra memory</i> on page 90.</li> </ul>
No Toner	Open the front cover, then install the toner cartridge.

Error message	Action
No Paper	The paper tray may be out of paper or not properly installed. If it is empty, put a new stack of paper in the paper tray and then press Go. If the problem is still unsolved, the paper
No Paper for Manual Feed	pick-up roller may be stained. Clean the paper pick-up roller. See <i>Cleaning the paper pick-up roller</i> on page 110.
No Paper MP or Size Mismatch	If there is paper in the paper tray, make sure it is straight. If the paper is curled, straighten it before printing. Sometimes it is helpful to remove the paper, turn the stack over and
No Paper in Tray 1 or Size Mismatch	put it back in the paper tray.
No Paper in Tray 2 or	<ul> <li>Cut the amount of paper in the paper tray, and then try again.</li> <li>Make sure you use paper that meets Brother's recommended paper specifications. See</li> </ul>
Size Mismatch	About paper on page 6.
No Paper in Tray 3 or Size Mismatch	Load the same size paper that you selected in the current driver setting.
Print Overrun	Press Go to print the remaining data in the printer memory. Cancel the print job if you want to delete the remaining data in the printer memory. See Control panel buttons on page 83.
	If this does not clear the error, reduce the complexity of your document or cut the print resolution.
	Add more memory. See Installing extra memory on page 90.
	Change the following settings in the supplied Windows <sup>®</sup> driver and try again. The best combination of these settings will vary depending on your document:
	■ Graphics mode
	■ TrueType mode
	Use Printer TrueType <sup>®</sup> Fonts
	<sup>1</sup> Choose the Advanced tab, click the Print Quality icon, and then choose Manual in Print Settings and click the Setting button.
Service call error	Check the LED indication to identify the error. See Service call indications on page 81.
Storage Full	The RAMDISK size is set to 0 MB. Increase the RAMDISK size. Or there is no space to store jobs. Delete unnecessary macros or fonts.
Replace PF KitMP	Call your dealer or Brother Customer Service for a replacement paper feeding kit (paper pick up roller and separation plate) for the MP tray.
Replace PF Kit1	Call your dealer or Brother Customer Service for a replacement paper feeding kit (paper pick up roller and separation plate) for Tray 1.
Replace PF Kit2	Call your dealer or Brother Customer Service for a replacement paper feeding kit (paper pick up roller and separation plate) for Tray 2.
Replace PF Kit3	Call your dealer or Brother Customer Service for a replacement paper feeding kit (paper pick up roller and separation plate) for Tray 3.
Replace Fuser Unit	Call your dealer or Brother Customer Service for a replacement fuser unit.
Replace Laser Unit	Call your dealer or Brother Customer Service for a replacement laser unit.
Replace Toner	See Replacing the toner cartridge on page 94.
Toner Low	Buy a new toner cartridge and have it ready for when the <b>Replace Toner</b> status is indicated.

# Error message printout

The printer can also report problems by printing an error message. Use the table below to identify and clear the error message. The default setting for the error message printout is off. If you want to turn the error message printout on, from the **Advanced** tab of the Windows<sup>®</sup> printer driver click the **Other Print Options...**, and then choose **Error Message Printout**.

Error message	Action
Memory Full	Press Go to print the remaining data in the printer memory. Cancel the print job if you want to delete the remaining data in the printer memory. See Control panel buttons on page 83.
	Reduce the complexity of your document or cut the print resolution.
	Add more memory. See Installing extra memory on page 90.
Print Overrun	Press Go to print the remaining data in the printer memory. Cancel the print job if you want to delete the remaining data in the printer memory. See Control panel buttons on page 83.
	If this does not clear the error, reduce the complexity of your document or cut the print resolution.
	Add more memory. See Installing extra memory on page 90.
	Set page protection to Auto by using the supplied Windows <sup>®</sup> driver or the control panel.
	Change the following settings in the supplied Windows <sup>®</sup> driver and try again. The best combination of these settings will vary depending on your document:
	Graphics <sup>1</sup>
	TrueType Mode <sup>1</sup>
	■ Use Printer TrueType <sup>®</sup> Fonts
	<sup>1</sup> Choose the <b>Basic</b> tab, choose <b>Manual</b> in <b>Print Settings</b> , and then click <b>Manual Settings</b> .
Resolution Adapted	Reduce the complexity of your document before you print to prevent automatic reduction in the resolution.

# Paper handling


First, make sure that you are using paper that meets Brother recommended paper specifications. (See *About paper* on page 6.)

Problem	Recommendation
The printer does not feed paper.	If there is paper in the paper tray, make sure it is straight. If the paper is curled, straighten itbefore printing. Sometimes it is helpful to remove the paper. Turn the stack over and put it back in the paper tray.
	Reduce the amount of paper in the paper tray, and then try again.
	Make sure that manual feed mode is not chosen in the printer driver.
	Clean the paper pick-up roller. See Cleaning the paper pick-up roller on page 110.
The printer does not feed paper	Fan the paper well and put it back in firmly.
from the MP tray.	Make sure that you have chosen the MP Tray in the Paper Source of the printer driver.
The printer does not feed envelopes.	The printer can feed envelopes from the multi-purpose tray. You must set up your application to print on the size of envelopes you are using. This is usually done in the page setup or document setup menu of your software. (See your application manual.)
A paper jam has occurred.	Clear the jammed paper. (See Paper jams and how to clear them on page 119.)
The printer does not print.	Make sure that the cable is connected to the printer.
	Make sure the printer is powered on and that no error LEDs are lit on the printer control panel.
	Make sure that you have chosen the correct printer driver.
When printing on normal paper, it creases.	Change the printer driver setting in Media Type to a thin setting.
The paper slides off the top output tray.	Pull out and lift up the output tray support flap.

# Paper jams and how to clear them

## Jam MP tray / Tray1 / Tray2 / Tray3 / Inside

If a paper jam occurs inside the MP tray or paper tray, the printer will flash the **Paper** LED as shown below.

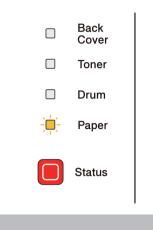



After you have just used the printer, some internal parts of the printer will be extremely hot. To prevent injury, when you open the front cover or back cover (back output tray) of the printer, DO NOT touch the shaded parts shown in the illustration. If you do this, you may get burned.




Clear the jammed paper as follows.

If the jammed paper is removed completely by following the steps below, you can install the paper tray, and then close the front cover. The printer will resume printing automatically.


If the printer does not start printing automatically, press **Go**. If the printer still does not start printing, check that all the remaining jammed paper has been removed from the printer. Then try printing again.

## 🖉 Note

- Always remove all paper from the paper tray and straighten the stack when you add new paper. This
  helps prevent multiple sheets of paper from feeding through the printer at one time and prevents paper
  jams.
- Please confirm that you have installed both a toner cartridge and a drum unit in the machine. If you have not installed a drum unit or have installed the drum unit improperly, then this may cause a paper jam in your Brother machine.
- Open the front cover.

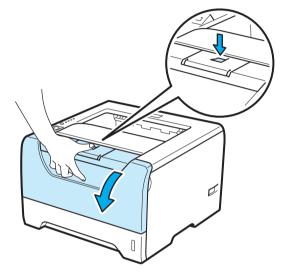

2 Slowly take out the drum unit and toner cartridge assembly. The jammed paper will be pulled out with the drum unit and toner cartridge assembly.

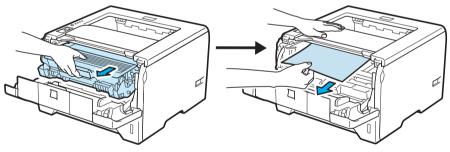



120

## **!** IMPORTANT

 We recommend that you put the drum unit and toner cartridge assembly on a piece of disposable paper or cloth in case you accidentally spill or scatter toner.

To prevent damage to the printer caused by static electricity, DO NOT touch the electrodes shown in the illustration.

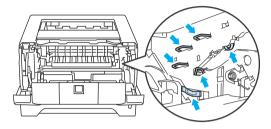





🖉 Note

Do not put the drum unit and toner cartridge assembly back in at this point.


4 Pull the paper tray completely out of the printer.

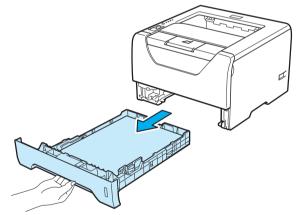

5 Pull the jammed paper down and out of the printer.

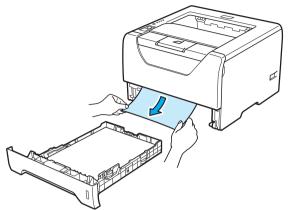


6 Push down the blue lock lever and take the toner cartridge out of the drum unit. Clear the jammed paper if there is any inside the drum unit.

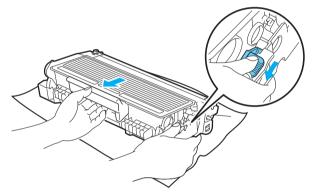


# **IMPORTANT**

Handle the toner cartridge carefully. If toner scatters on your hands or clothes, wipe or wash it off with cold water at once.


To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations.

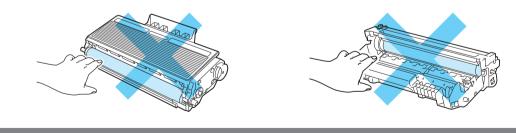

7 Put the toner cartridge back into the drum unit until you hear it lock into place. If you put the cartridge in properly, the blue lock lever will lift automatically.

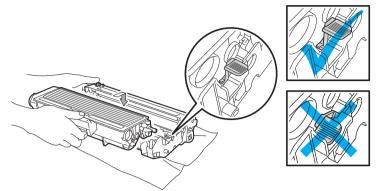


8 Open the front cover. Put the drum unit and toner cartridge assembly back in the printer.

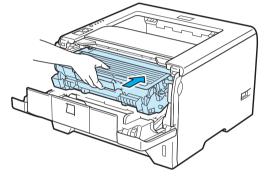

- 9 Put the paper tray firmly back in the printer.
- 10 Close the front cover.
- 11 Make sure that the **Paper** LED is off and then, the **Status** LED lights green.

## Jam Rear / Duplex


If a paper jam occurs behind the back cover (back output tray) or inside the duplex tray, the printer will flash the **Back Cover** and **Paper** LED as shown below.

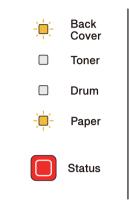




After you have just used the printer, some internal parts of the printer will be extremely hot. To prevent injury, when you open the front cover or back cover (back output tray) of the printer, DO NOT touch the shaded parts shown in the illustration. If you do this, you may get burned.



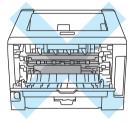


Clear the jammed paper as follows.

1 Press the cover release button and then open the front cover.

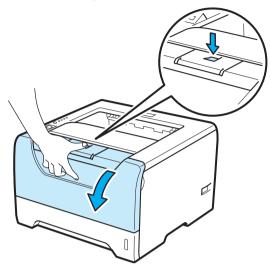


2 Slowly take out the drum unit and toner cartridge assembly. The jammed paper will be pulled out with the drum unit and toner cartridge assembly.

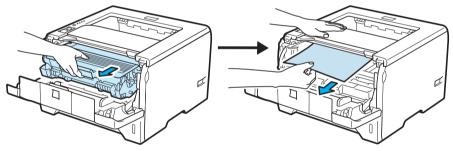

## IMPORTANT

We recommend that you put the drum unit and toner cartridge assembly on a piece of disposable paper or cloth in case you accidentally spill or scatter toner.


To prevent damage to the printer caused by static electricity, DO NOT touch the electrodes shown in the illustration.

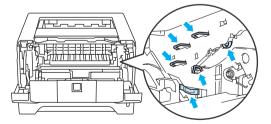


Troubleshooting




Open the back cover.

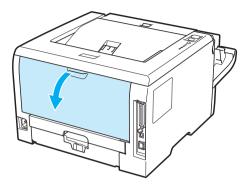

Pull the tabs at the left and right hand sides toward you to open the fuser cover (1). 4

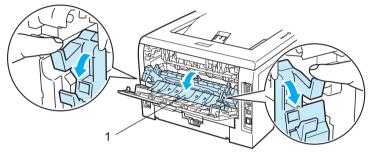


5 Using both hands, gently pull the jammed paper out of the fuser unit.

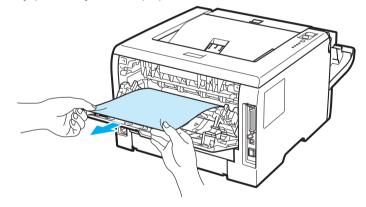


# **CAUTION**


After you have just used the printer, some internal parts of the printer will be extremely hot. Wait for the printer to cool down before you touch the internal parts of the printer.

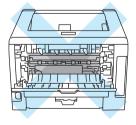

- 6 Put the drum unit and toner cartridge assembly back in the printer (press firmly).
- 7 Fully close the front and back covers.
- 8 Pull the duplex tray completely out of the printer.

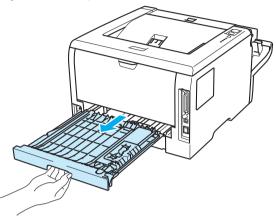

9 Pull the jammed paper out of the printer or the duplex tray.

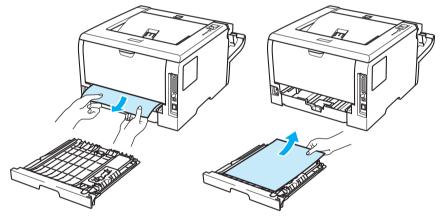

- 10 Put the duplex tray back in the printer.
- 1 Make sure that the **Back Cover** and **Paper** LED are off and then, the **Status** LED lights green.


# Improving the print quality

If you have a print quality problem, print a test page first (see *Print a test page* on page 84). If the printout looks good, the problem is probably not the printer. Check the interface cable or try the printer on another computer.

This section gives information on the following topics.

Examples of poor print quality	Recommendation
ABCDEFGH abcdefghijk	Check the printer's environment. Conditions such as humidity, high temperatures, and so on, may cause this print fault. See <i>Positioning the printer</i> on page 5.
A B C D a b c d e	If the whole page is too light, Toner Save Mode may be on. Turn off Toner Save Mode in the printer Properties tab of the driver.
01234	Put in a new toner cartridge. See Replacing the toner cartridge on page 94.
Faint	Put in a new drum unit. See Replacing the drum unit on page 101.
Faint	You may clear the problem by wiping the scanner window with a soft cloth. See Cleaning the inside of the printer on page 107.
ABCDEFGH	Make sure that you use paper that meets our specifications. See About paper on page 6.
abcdefghijk ABCD abcde	Check the printer's environment. Conditions such as high temperatures and high humidity can increase the amount of background shading. See <i>Positioning the</i> <i>printer</i> on page 5.
01234	Put in a new toner cartridge. See Replacing the toner cartridge on page 94.
Gray background	Put in a new drum unit. See <i>Replacing the drum unit</i> on page 101.
B	Make sure that you use paper that meets our specifications. Rough-surfaced paper or thick print media may cause this problem. See About paper on page 6.
B	Make sure that the media type setting in the driver matches the type of paper you are using. See About paper on page 6.
	Put in a new drum unit. See Replacing the drum unit on page 101.
B	The fuser unit may be contaminated. Call Brother Customer Service.
Ghost	
	Make sure that you use paper that meets our specifications. Rough-surfaced paper may cause the problem. See About paper on page 6.
ABCDEFGH abcdefghijk <b>ABCD</b>	The drum unit may be damaged. Put in a new drum unit. See Replacing the drum unit on page 101.
abcde 01234	The fuser unit may be contaminated. Call Brother Customer Service.
Toner specks	


Examples of poor print quality	Recommendation
	Make sure that you use paper that meets our specifications. See About paper on page 6.
	Choose Thick Paper mode in the printer driver, or use thinner paper than what you are now using.
	Check the printer's environment. Conditions such as high humidity can cause hollow print. See <i>Positioning the printer</i> on page 5.
Hollow print	The drum unit may be damaged. Put in a new drum unit. See Replacing the drum unit on page 101.
	■ Clean the primary corona wire inside the drum unit by sliding the blue tab. Be sure to return the blue tab to the home position (▲). See Cleaning the corona wire on page 112.
	The drum unit may be damaged. Put in a new drum unit. See Replacing the drum unit on page 101.
	The fuser unit may be contaminated. Call Brother Customer Service.
All black	
	Make sure that you use paper that meets our specifications. A rough surfaced paper or thick print media can cause problems.
ABCDEFGH abcdefghijk	Make sure that you choose the proper media type in the printer driver.
ABCD abcde	The problem may disappear by itself. Print multiple pages to clear this problem, especially if the printer has not been used for a long time.
01234 White lines across the page	The drum unit may be damaged. Put in a new drum unit. See Replacing the drum unit on page 101.
ABCDEFGH	Clean the inside of the printer and the primary corona wire in the drum unit. See Cleaning the inside of the printer on page 107 and Cleaning the corona wires on page 112.
abcdefghijkABCDabcdeabcde01234	The drum unit may be damaged. Put in a new drum unit. See Replacing the drum unit on page 101.
Lines across the page	
ABCDEFGR abcdefghijk ABCD abcde C1204	<ul> <li>Check the printer's environment. Conditions such as high humidity and high temperatures may cause this print quality problem. (See <i>Positioning the printer</i> on page 5.)</li> <li>If the problem is not solved after printing a few pages, put in a new drum unit. (See <i>Replacing the drum unit</i> on page 101.)</li> </ul>
White lines, bands or ribbing across the page	

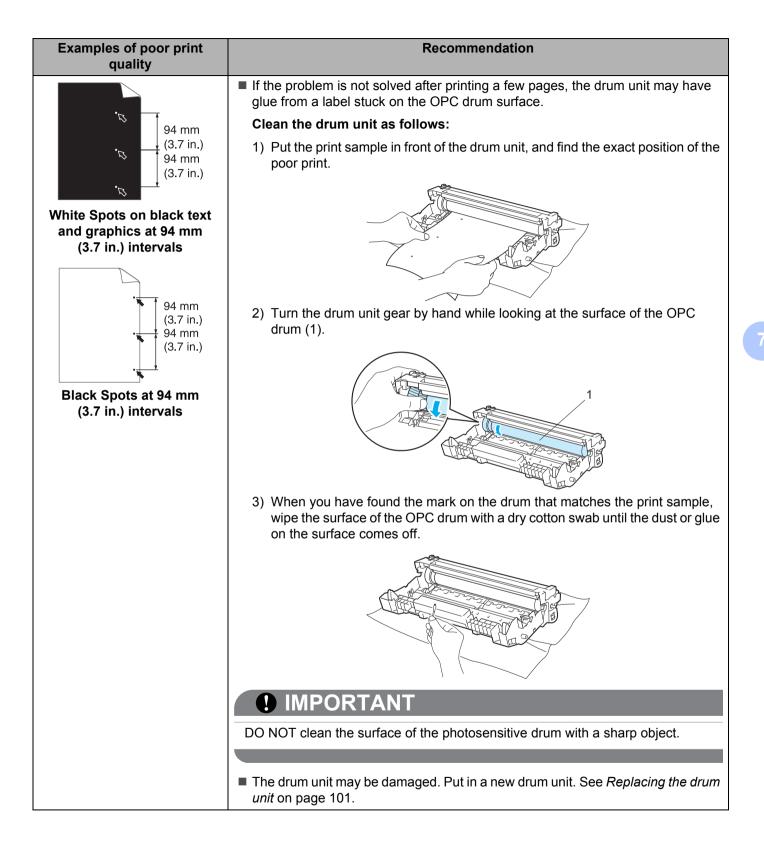

Examples of poor print quality	Recommendation
ABCDEFGH abcdefghijk ABCD abcde 01234 Black toner marks across the page	The drum unit may be damaged. Put in a new drum unit. See Replacing the drum unit on page 101.
	The toner cartridge may be damaged. Put in a new toner cartridge. See Replacing the toner cartridge on page 94.
	Make sure that you use paper that meets our specifications. See About paper on page 6.
	If you use label sheets for laser printers, the glue from the sheets may sometimes stick to the OPC drum surface. Clean the drum unit. See Clean the drum unit as follows: on page 130.
	Do not use paper that has clips or staples because they will scratch the surface of the drum.
	If the unpacked drum unit is in direct sunlight or room light, the unit may be damaged.
	Clean the primary corona wire inside the drum unit by sliding the blue tab. See Cleaning the corona wire on page 112.
ABCDEFGH abcdefghijk	■ Make sure the primary corona wire cleaner is at the home position (▲).
ABCD abcde 01234	The drum unit may be damaged. Put in a new drum unit. See Replacing the drum unit on page 101.
	The toner cartridge may be damaged. Put in a new toner cartridge. See Replacing the toner cartridge on page 94.
Black lines down the page Printed pages have toner stains down the page.	The fuser unit may be smudged. Call your dealer or Brother Customer Service.
	Make sure that a torn piece of paper is not inside the printer covering the scanner window.
ABCDEFGH abcdefghijk <b>A B C D</b>	Wipe the scanner window with a soft cloth. See Cleaning the inside of the printer on page 107.
abcde 01234	The toner cartridge may be damaged. Put in a new toner cartridge. See Replacing the toner cartridge on page 94.
White lines down the page	The drum unit may be damaged. Put in a new drum unit. See Replacing the drum unit on page 101.
ABCDEFGH	Make sure that the paper or other print media is loaded properly in the paper tray and that the guides are not too tight or too loose against the paper stack.
	Set the paper guides correctly. See Printing on plain paper, bond paper or transparencies from Tray 1, 2 or 3 on page 11.
abcde 01234	If you are using the multi-purpose tray, see Printing on plain paper, bond paper or transparencies from the MP tray on page 15.
Page skewed	The paper tray may be too full. See Printing on plain paper, bond paper or transparencies from Tray 1, 2 or 3 on page 11.
	Check the paper type and quality. See About paper on page 6.

Examples of poor print quality	Recommendation
ABCDEFGH abcdefghijk <b>A B C D</b> a <b>b c d e</b> 0 1 2 3 4	<ul> <li>Check the paper type and quality. High temperatures and high humidity will cause paper to curl. See <i>About paper</i> on page 6.</li> <li>If you do not use the printer often, the paper may have been in the paper tray too long. Turn over the stack of paper in the paper tray. Also, fan the paper stack and then rotate the paper 180° in the paper tray.</li> </ul>
Curled or wavy	
ABCDEFGH abcdefghijk <b>ABCD</b> <b>abcde</b> <b>01234</b>	<ul> <li>Make sure that the paper is loaded properly. See <i>Printing on plain paper, bond paper or transparencies from Tray 1, 2 or 3</i> on page 11.</li> <li>Check the paper type and quality. See <i>About paper</i> on page 6.</li> <li>Turn over the stack of paper in the tray or try rotating the paper 180° in the input tray.</li> </ul>
Wrinkles or creases	
SHOOPE Creases	Make sure that the envelope levers inside the back cover is pulled down when you print the envelope.
	When you have finished printing, open the back cover and reset the two blue levers back to their original position.

Examples of poor print quality	Recommendation
ABCDEFGH abcdefghijk ABCD abcde 01234 Poor Fixing	<ul> <li>Open the back cover and make sure that the two blue levers on the left and right hand sides are in the up position.</li> <li>Image: Comparison of the up position of the up position.</li> </ul>

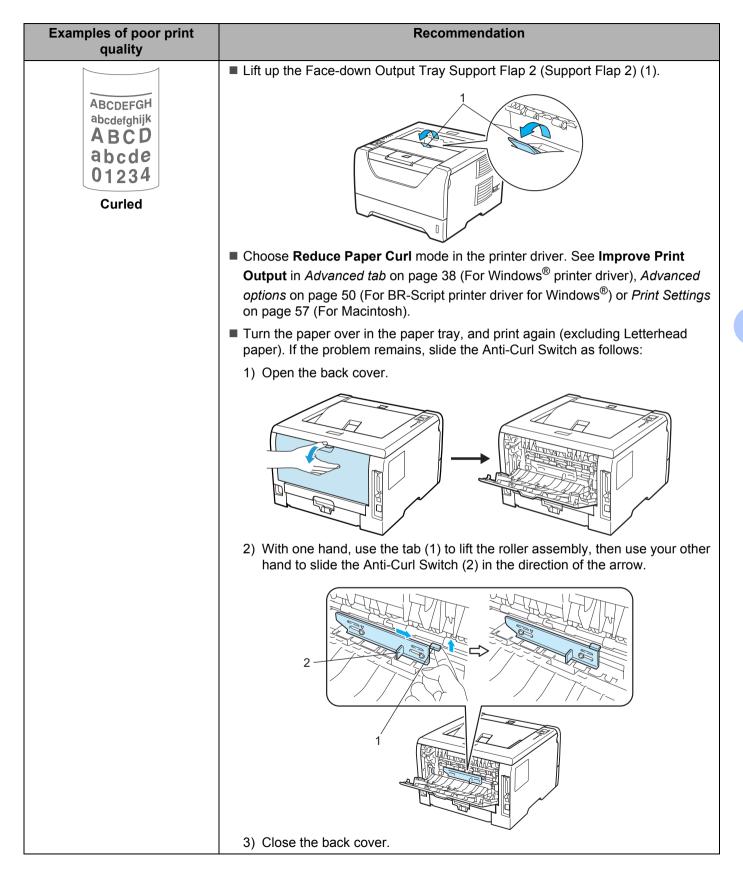

# Solving print problems

Problem	Recommendation
The printer prints unexpectedly or it prints garbage data.	Make sure that the printer cable is not too long. We recommend that you use a parallel or USB cable that is no longer than 2 meters (6.5 feet).
	Make sure that the printer cable is not damaged or broken.
	If you are using an interface-switching device, remove it. Connect your computer directly to your printer, and then try again.
	Make sure that you have chosen the correct printer driver with 'Set as Default Printer'.
	Make sure that the printer is not connected to the same port that is also connected to a storage device or scanner. Take away all other devices and connect the port only to the printer.
	Turn off the Status Monitor.
The printer cannot print full pages of a document. An error message <b>MEMORY FULL</b>	Press Go to print the remaining data in the printer memory. Cancel the print job if you want to delete the remaining data in the printer memory. (See Control panel buttons on page 83.)
appears.	Reduce the complexity of your document or cut the print resolution.
	Add more memory. (See Installing extra memory on page 90.)
The printer cannot print full pages of a document. An error message <b>PRINT OVERRUN</b>	Press Go to print the remaining data in the printer memory. Cancel the print job if you want to delete the remaining data in the printer memory. See Control panel buttons on page 83.
appears.	Reduce the complexity of your document or cut the print resolution.
	Add more memory. See Installing extra memory on page 90.
	■ Set page protection to <b>Auto</b> by using the supplied Windows <sup>®</sup> driver.
	Change the following settings in the supplied Windows <sup>®</sup> driver and try again. The best combination of these settings will vary depending on your document:
	■ Graphics <sup>1</sup>
	■ TrueType Mode <sup>1</sup>
	■ Use Printer TrueType <sup>®</sup> Fonts
	<sup>1</sup> Choose the <b>Basic</b> tab, choose <b>Manual</b> in <b>Print Settings</b> , and then click <b>Manual Settings</b> .
The headers or footers appear when the document displays on the screen but they do not show up when it is printed.	Adjust the top and bottom margins of your document.

# Network problems (For HL-5350DN and HL-5370DW)

For problems concerning using your printer on a Network, see the Network User's Guide on the CD-ROM we have supplied. Click **Documentation** on the menu screen.

The Network User's Guide in HTML format will be installed automatically when you install the driver. Click the **Start** button, **All Programs**<sup>1</sup>, your printer, and then User's Guide.

You can also view the manuals in PDF format by accessing the Brother Solutions Center (<u>http://solutions.brother.com/</u>).

<sup>1</sup> **Programs** for Windows<sup>®</sup> 2000 users

# **Other problems**

Problem	Recommendation
The printer cannot print. The	Make sure that the printer cable is not damaged or broken.
'There was an error writing to LPT1: (or BRUSB) for the	Make sure the printer is turned on and that no error LEDs are lit on the printer.
<b>printer'</b> error message is displayed on your computer.	If you have an interface-switching device, make sure that you chose the correct printer.

#### For Macintosh with USB

Problem	Recommendation
The printer does not appear in <b>Printer Setup Utility</b> (Mac OS X 10.3 and 10.4) or <b>Print &amp; Fax</b> in <b>System Preferences</b> (Mac OS X10.5).	<ul> <li>Make sure that the printer is turned on.</li> <li>Make sure that the USB interface cable is connected directly to the Macintosh.</li> <li>Make sure the printer driver is installed correctly.</li> </ul>
Unable to print from the application.	Make sure that the supplied Macintosh printer driver is installed and that it is chosen with Printer Setup Utility (Mac OS X 10.3 and 10.4) or Print & Fax in System Preferences.

# **BR-Script 3**

Problem	Recommendation		
The print speed slows down.	Add optional memory. (See Installing extra memory on page 90.)		
The printer cannot print EPS data	You need the following settings to print EPS data:		
that includes binary.	<ol> <li>For Windows Vista<sup>®</sup>: Click Start button, Control Panel, Hardware and Sound, and then Printers.</li> </ol>		
	For Windows <sup>®</sup> XP and Windows Server <sup>®</sup> 2003/2008: Click <b>Start</b> button, and select <b>Printers and Faxes</b> windows.		
	For Windows <sup>®</sup> 2000: Click <b>Start</b> button, and select <b>Settings</b> and then <b>Printers</b> .		
	<ol> <li>Right-click the Brother HL-XXXX BR_Script3 series icon and select Properties.</li> </ol>		
	<ol> <li>From the Device Settings tab, choose TBCP (Tagged binary communication protocol) in Output Protocol.</li> </ol>		

# **Printer specifications**

# Engine

Model		HL-5340D	HL-5350DN	HL-5370DW		
Technology		Electrophotographic				
Print speed <sup>12</sup>	Standard (A4/Letter)	Up to 30 ppm (A4 size) $^3$ , Up to 32 ppm (Letter size) $^3$				
(A4 size/ Letter size)	Auto Duplex (A4)	Up to 13 sides per minute (6.5 sheets per minute)				
First print time		Less than 8.5 sec				
Resolution	Windows <sup>®</sup> 2000/XP/ XP	1200 dpi <sup>4</sup>				
	Professional x64 Edition,	HQ1200				
	Windows Vista <sup>®</sup> , Windows Server <sup>®</sup> 2003/ Windows	600 dpi				
	Server® 2003/ Windows Server® 2003 x64 Edition/					
	Windows Server <sup>®</sup> 2008					
	DOS	600 dpi				
	Mac OS X 10.3.9 or greater	1200 dpi <sup>4</sup>				
		HQ1200				
		600 dpi				
		300 dpi				
	Linux	1200 dpi <sup>4</sup>				
		HQ1200				
		600 dpi				
		300 dpi				

<sup>1</sup> The printing speed may change depending on the type of document you print.

<sup>2</sup> Print speed may be slower when the printer is connected by wireless LAN.

<sup>3</sup> From standard paper tray.

<sup>4</sup> If you use the high quality 1200 dpi setting (1200 x 1200 dpi) the print speed will be slower.

#### Controller

N	lodel	HL-5340D	HL-5350DN	HL-5370DW	
Processor		300MHz			
Memory	Standard	16 MB	32 MB		
	Option	1 SO-DIMM (144pin) slot (64, 128, 256, 512MB); expandable up to 528 MB	1 SO-DIMM (144pin) slot (64, 128, 256, 512MB); expandable up to 544 MB		
Interface <sup>1</sup>	Standard	IEEE 1284 Parallel, Hi- Speed USB2.0	IEEE 1284 Parallel, Hi- Speed USB2.0, 10/100BASE-TX Ethernet	IEEE 1284 Parallel, Hi- Speed USB2.0, 10/100BASE-TX Ethernet, Wireless LAN IEEE 802.11b/g	
Network	Protocols	N/A	TCP/IP (Standard 10/100BASE-TX Ethernet) <sup>2</sup>		
Connectivity	Management	N/A	BRAdmin Light <sup>3</sup>		
	tool		BRAdmin Professional 3 <sup>4</sup>		
			Web BRAdmin <sup>5</sup>		
			Web Based Management <sup>6</sup>	;	
Emulation	mulation PCL6, BR-Script3 <sup>7</sup> , IBM ProPrinter XL, EPSON FX-850		50		
Resident	PCL	66 scalable fonts, 12 bitm	66 scalable fonts, 12 bitmap fonts, 13 bar codes <sup>8</sup>		
fonts	PostScript <sup>®</sup> 3™	66 fonts			

<sup>1</sup> Wireless and wired network cannot be used at the same time.

<sup>2</sup> See the Network User's Guide locator on the CD-ROM for details on the supported network protocols.

<sup>3</sup> Brother original Windows<sup>®</sup> and Macintosh utility for printer and print server management. Install from the supplied CD-ROM.

<sup>4</sup> Brother original Windows<sup>®</sup> utility for printer and print server management. Download from <u>http://solutions.brother.com/</u>.

<sup>5</sup> Server based management utility. Download from <u>http://solutions.brother.com/</u>.

<sup>6</sup> Printer and print server management through Web Based Management (web browser).

<sup>7</sup> PostScript<sup>®</sup> 3<sup>™</sup> language emulation.

<sup>8</sup> Code39, Interleaved 2 of 5, FIM (US-PostNet), Post Net (US-PostNet), EAN-8, EAN-13, UPC-A, UPC-E, Codabar, ISBN (EAN), ISBN (UPC-E), Code128 (set A, set B, set C), EAN-128 (set A, set B, set C)

#### Software

M	Model HL-5340D HL-5350DN HL-5370DW					
Printer driver	Windows <sup>® 1</sup>	PCL driver for Windows <sup>®</sup> 2000 Professional, Windows <sup>®</sup> XP Home Edition, Windows <sup>®</sup> XP Professional Edition, Windows <sup>®</sup> XP professional x64 Edition, Windows Server <sup>®</sup> 2003, Windows Server <sup>®</sup> 2003 x64 Edition, Windows Vista <sup>®</sup> , Windows Server <sup>®</sup> 2008				
		BR-Script 3 (PPD file for Windows <sup>®</sup> 2000 Professional, Windows <sup>®</sup> XP Home Edition, Windows <sup>®</sup> XP Professional Edition, Windows <sup>®</sup> XP professional x64 Edition, Windows Server <sup>®</sup> 2003, Windows Server <sup>®</sup> 2003 x64 Edition, Windows Vista <sup>®</sup> , Windows Server <sup>®</sup> 2008)				
	Macintosh <sup>1</sup>	Macintosh Printer Driver for Mac OS X 10.3.9 or greater				
		BR-Script 3 (PPD file) for Mac OS X 10.3.9 or greater				
	Linux <sup>2 3</sup>	Linux driver for CUPS printing system (x86, x64 environment)				
		Linux driver for LPD/LPRng printing system (x86, x64 environment)				
Utilities		N/A	Driver Deployment Wizard <sup>4</sup>			

<sup>1</sup> For the latest driver updates, visit <u>http://solutions.brother.com/</u>.

<sup>2</sup> Download the printer driver for Linux from <u>http://solutions.brother.com/</u>.

<sup>3</sup> Depending on Linux distributions, the driver may not be available.

<sup>4</sup> The Driver Deployment Wizard automates the installation of printers in a peer-to-peer network (Windows<sup>®</sup> only).

#### **Control panel**

Model	HL-5340D	HL-5350DN	HL-5370DW	
LED	5 LEDs: Back Cover, Toner, Drum, Paper and Status			
Button	2 buttons: Job Cancel and Go			

# Paper handling

	Model	HL-5340D	HL-5350DN	HL-5370DW
Paper	Multi-purpose tray	50 sheets		
Input <sup>1</sup>	Paper tray (Standard)	250 sheets		
	Lower tray (Option)	250 sheets		
Paper	Face-down	150 sheets		
Output <sup>1</sup>	Face-up	1 sheet		
Duplex	Manual Duplex	Yes		
	Automatic Duplex	Yes		

<sup>1</sup> Calculated with 80 g/m<sup>2</sup> (20 lb) paper

# Media specifications

Model		HL-5340D	HL-5350DN	HL-5370DW		
Media types	Multi-purpose tray	Plain paper, Bond paper, Recycled paper, Envelopes <sup>1</sup> , Labels, Transparencies <sup>2</sup> , Thick paper, Thin paper				
	Paper tray	Plain paper, Bond pape	r, Recycled paper, Trans	parencies <sup>2</sup> , Thin paper		
	Lower tray unit (Option)	Plain paper, Recycled	paper, Bond paper, Thin	paper		
	Automatic duplex printing	Plain paper, Recycled	paper, Thin paper			
Media	Multi-purpose tray	3 lb)				
weights	Paper tray	60 to 105 g/m <sup>2</sup> (16 to 28 lb)				
	Lower tray unit (Option) (LT-5300)	60 to 105 g/m <sup>2</sup> (16 to 28 lb)				
	Automatic duplex printing	60 to 105 g/m <sup>2</sup> (16 to 28 lb)				
Media sizes	Multi-purpose tray	Width: 69.8 to 216 mm (2.75 to 8.5 in.) Length: 116 to 406.4 mm (4. to 16 in.)				
	Paper tray (Standard)	A4, Letter, B5 (ISO), Executive, A5, A5 (Long Edge), A6, B6 (ISO)				
	Lower tray unit (Option) (LT-5300)	A4, Letter, B5 (ISO), Executive, A5, B6 (ISO)				
	Automatic duplex printing	A4				

<sup>1</sup> Up to 3 envelopes

<sup>2</sup> Up to 10 sheets

# **Supplies**

	Model	HL-5340D	HL-5350DN	HL-5370DW	Order No.
Toner	Standard cartridge	Approx. 3,000 pages A4/Letter pages <sup>1</sup>			TN-3230
Cartridge	High yield cartridge	Approx. 8,000 pages A4/Letter pages <sup>1</sup>			TN-3280
Drum Unit	•	Approx. 25,000 pages A4/Letter pages		DR-3200	

<sup>1</sup> Approx. cartridge yield is declared in accordance with ISO/IEC 19752.

# **Dimensions / weights**

Model	HL-5340D	HL-5350DN	HL-5370DW	
Dimensions (W × D × H)	371 × 384 × 246 mm (14.6 × 15.1 × 9.7 in.)			
Weights	Approx. 9.5 kg (20.9 lb)			

#### Other

1

	Model		HL-5340D	HL-5350DN	HL-5370DW
Power consumption		Printing	Average 675 W at 25 °C (77 °F)	Average 675 W at 25 °C (77 °F)	Average 675 W at 25 °C (77 °F)
		Standby	Average 75 W at 25 °C (77 °F)	Average 75 W at 25 °C (77 °F)	Average 75 W at 25 °C (77 °F)
		Sleep	Average 6 W	Average 6 W	Average 6 W
Noise level	Sound Pressure	Printing	LpAm = 52.6 dB (A)		
		Standby	LpAm = 21.4 dB (A)		
	Sound power	Printing	LWAd = 6.8 Bell (A)		
			Office equipment with LWAd>6.3 Bell (A) is not suitable for use in rooms where people do primarily intellectual work. Such equipment should be placed in separate rooms because of the noise emission.		
		Standby	LWAd = 3.7 Bell (A	)	
Ecology	Power save		Yes		
	Toner save <sup>1</sup>		Yes		

We do not recommend Toner Save for printing Photo or Grey Scale images.

# **Computer requirements**

Computer Platform & Operating System Version		Processor Minimum Speed	Minimum RAM	Recomm ended RAM	Hard Disk Space to install	Supported PC Interface <sup>2</sup>
Windows <sup>®</sup> Operating	Windows <sup>®</sup> 2000 Professional	Intel <sup>®</sup> Pentium <sup>®</sup> II or equivalent	64 MB	256 MB	50 MB	USB, 10/100BASE- TX(Ethernet), IEEE802.11b/g, IEEE1284 Parallel
System <sup>1</sup>	Windows <sup>®</sup> XP Home Edition		128 MB			
	Windows <sup>®</sup> XP Professional					
	Windows <sup>®</sup> XP Professional x64 Edition	64-bit (Intel <sup>®</sup> 64 or AMD64) supported CPU	256 MB	512 MB	-	
	Windows Vista <sup>®</sup>	Intel <sup>®</sup> Pentium <sup>®</sup> 4 or equivalent 64-bit (Intel <sup>®</sup> 64 or AMD64) supported CPU	512 MB	1 GB		
	Windows Server <sup>®</sup> 2003	Intel <sup>®</sup> Pentium <sup>®</sup> III or equivalent	256 MB	512 MB		
	Windows Server <sup>®</sup> 2003 x64 Edition	64-bit (Intel <sup>®</sup> 64 or AMD64) supported CPU				
	Windows Server <sup>®</sup> 2008	Intel <sup>®</sup> Pentium <sup>®</sup> 4 or equivalent 64-bit (Intel <sup>®</sup> 64 or AMD64) supported CPU	512 MB	2 GB		
Macintosh Operating System	Mac OS X 10.3.9 - 10.4.3	PowerPC G4/G5, PowerPC G3 350MHz	128 MB	256 MB	80 MB	USB, 10/100BASE- TX(Ethernet),
	Mac OS X 10.4.4 or greater	PowerPC G4/G5, Intel <sup>®</sup> Core™ Processor	512 MB	1 GB		IEEE802.11b/g

 $^{1}$  Microsoft<sup>®</sup> Internet Explorer<sup>®</sup> 5.5 or greater

<sup>2</sup> Third party USB/Parallel ports are not supported.

For the latest driver updates, visit http://solutions.brother.com/.

#### Important information for choosing your paper

This section gives information to help you choose paper to use with this printer.

## Note

If you use paper that is not recommended, a paper jam or misfeed may occur in the printer. (See *Recommended paper* on page 8.)

#### Before you buy a large quantity of paper

Make sure that the paper is suitable for the printer.

#### Paper for plain paper copies

Paper is divided by usage, such as paper for printing and paper for copying. The usage is usually written on the paper's package. Check the package to see whether it is suitable for laser printers. Use paper that is suitable for laser printers.

#### **Basis weight**

The basis weight of the paper in general use varies in different countries. We recommend that you use paper that weighs 75 to 90 g/m<sup>2</sup> (20 to 24 lb), although this printer is able to print on thinner or thicker paper than these weights.

Unit	Europe	USA
g/m <sup>2</sup>	80 to 90	75 to 90
lb		20 to 24

#### Long grain and short grain

The pulp fiber of the paper is aligned during paper manufacturing. And paper can be classified into two types, long grain and short grain.

Long grain paper fibers run in the same direction as the long edge of the paper. Short grain paper fibers run perpendicular to the long edge of the paper. Though most plain paper for copying is long grain, some is short grain. We recommend that you use long grain paper for this printer. Short grain paper is too weak for the paper transport of the printer.

#### Acid paper and neutralized paper

Paper can be classified as either acid paper or neutralized paper.

Though modern paper manufacture methods started with acid paper, neutralized paper is recently taking the place of acid paper because of environmental issues.

However, many forms of acid paper can be found in recycled paper. We recommend that you use neutralized paper for this printer.

You can use an acid paper check pen to distinguish acid paper from neutral paper.

#### Print surface

The characteristics of the face side and reverse side of a sheet of paper may vary a little.

Usually, the opening side of the paper ream package is the print side. Follow the indications on the paper package. Typically, the print side is indicated by an arrow.

#### Moisture content

Moisture content is the amount of water left in the paper after manufacture. It is one of the important characteristics of the paper. This can change greatly depending on the storage environment, although usually paper contains about 5% water by weight. Because paper often absorbs water, the amount of water can sometimes be about 10% in a high humidity environment. When the amount of water increases, the characteristics of the paper changes greatly. The fixing of the toner may become worse. For storage of the paper and during use, we recommend that the humidity of the surrounding environment be between 50% and 60%.

#### Rough estimate of basis weight

g/m <sup>2</sup>	lb		
	Bond	Index	
60	16		
64	17		
75	20		
90	24		
105	28		
120	32		
135	36		
163	43	90	
200	53	110	

#### Paper size

Paper size	mm	in.
Letter		8.5 × 11 in.
Executive		7.25 × 10.5 in.
A4	210 × 297 mm	
A5	148 × 210 mm	
A5 (Long Edge)	210 × 148 mm	
A6	105 × 148 mm	
Envelope Monarch		3.875 × 7.5 in.
Envelope Com-10		4.12 × 9.5 in.
Envelope DL	110 × 220 mm	
Envelope C5	162 × 229 mm	

Paper size	mm	in.
B5 (JIS)	182 × 257 mm	
B5 (ISO)	176 × 250 mm	
B6 (ISO)	125 × 176 mm	
A4 Long	210 × 405 mm	
Envelope DL-L	220 × 110 mm	
3 × 5		3 × 5 in.

# Symbol and character sets

 
For the HP LaserJet emulation modes, you can choose the symbol and character sets using a Web Based Management (web browser) or the Remote Printer Console software.

#### How to use the Web Based Management (web browser)

To use the Web Based Management (web browser), follow the steps below.

	Ø	Ŋ	N	~	tr
Ē	Ľ	ſ	Ν	0	τε

We recommend Microsoft<sup>®</sup> Internet Explorer<sup>®</sup> 6.0 (or greater) or Firefox 1.0 (or greater) for Windows<sup>®</sup> and Safari 1.3 (or greater) for Macintosh. Please also make sure that JavaScript and cookies are always enabled in whichever browser you use. To use a web browser, you will need to know the IP address of the print server.



- P Type http://printer\_ip\_address/ into your browser. (Where printer\_ip\_address is the IP address or the node name)
  - For example:

http://192.168.1.2/ (if the printer's IP address is 192.168.1.2.)

Note

- If you have edited the hosts file on your computer or are using a Domain Name System, you can also
  enter the DNS name of the print server. As the print server supports TCP/IP and NetBIOS, you can also
  enter the NetBIOS name of the print server. The NetBIOS name can be seen on the printer settings
  page. The NetBIOS name assigned is the first 15 characters of the node name and by default it will
  appear as "BRNxxxxxxxxxxxxxxxxxxxxxxxxxxx" for a wired network or "BRWxxxxxxxxxxxxxxxxxxxxxxxxxxxxx" for a wired network.
- For Macintosh users, you can also have easy access to Web Based Management by clicking the machine icon on Status Monitor screen.
- The current printer IP Address is found on the Print Settings. For that instructions, See *Print the Printer Settings page* on page 85.

#### 3 Click Printer Settings.

Enter a user name and a password.

#### 🖉 Note

The login name for the Administrator is "admin" (case sensitive) and the default password is "access".



Choose the **HP LaserJet** tab and click **Font Setup**. Choose a symbol set you want to use from the **Symbol Set** list box.

#### Symbol and character sets list

#### OCR symbol sets

When you choose the OCR-A or OCR-B font, the matching symbol set is always used.

OCR A (00)

OCR B (10)

#### HP LaserJet mode

ABICOMP Brazil / Portugal (13P) Desktop (7J) HP German (0G) ISO Latin1 (0N) ISO Latin5 (5N) ISO2 IRV (2U) ISO5 ASCII (0U) ISO11 Swedish (0S) ISO15 Italian (0I) ISO17 Spanish (2S) ISO25 French (0F) ISO60 Norwegian1 (0D) ISO69 French (1F) ISO85 Spanish (6S) ISO8859 / 15 Latin (9N) Legal (1U) MC Text (12J) PC8 (10U) PC8 D/N (11U) PC8 Latin / Greek (12G) PC8 Turkish (9T) PC850 Multilingual (12U) PC852 East Europe (17U) PC855 Cyrillic (10R) PC858 Multilingual Euro (13U) PC861 Iceland (21U) PC865 Nordic (25U) PC869 Greece (11G) Pi Font (15U) PS Text (10J) Roman9 (4U) Russian-GOST (12R)

ABICOMP International (14P) Greek8 (8G) HP Spanish (1S) ISO Latin2 (2N) ISO Latin6 (6N) ISO4 UK (1E) ISO10 Swedish (3S) ISO14 JIS ASCII (0K) ISO16 Portuguese (4S) ISO21 German (1G) ISO57 Chinese (2K) ISO61 Norwegian2 (1D) ISO84 Portuguese (5S) ISO8859 / 7 Latin / Greek (12N) ISO8859 / 15 Latin / Cyrillic (10N) Math-8 (8M) MS Publishing (6J) PC8 Bulgarian (13R) PC8 Greek Alternate (437G) (14G) PC8 PC Nova (27Q) PC775 (26U) PC851 Greece (10G) PC853 Latin3 (Turkish) (18U) PC857 Latin5 (Turkish) (16U) PC860 Portugal (20U) PC863 Canadian French (23U) PC866 Cyrillic (3R) PC1004 (9J) PS Math (5M) Roman8 (8U) Roman Extension (0E) Symbol (19M)

# Quick reference for bar code control commands

The printer can print bar codes in the HP LaserJet emulation modes.

#### Print bar codes or expanded characters

Code	ESC i
Dec	27 105
Hex	1B 69

#### Format: ESC i n ... n \

Creates bar codes or expanded characters according to the segment of parameters 'n ... n'. For more information about parameters, see the following Definition of Parameters. This command must end with the '\' code (5CH).

#### **Definition of parameters**

This bar code command can have the following parameters in the parameter segment (n ... n). As parameters are effective within the single command syntax ESC i n ... n \, they do not apply in the bar code commands. If certain parameters are not given, they take the preset settings. The last parameter must be the bar code data start ('b' or 'B') or the expanded character data start ('l' or 'L'). Other parameters can be given in any sequence. Each parameter can start with a lower-case or upper-case character, for example, 't0' or 'T0', 's3' or 'S3' and so one.

А

#### Bar code mode

(10) (T0)	
n = 't0' or 'T0'	CODE 39 (default)
n = 't1' or 'T1'	Interleaved 2 of 5
n = 't3' or 'T3'	FIM (US-Post Net)
n = 't4' or 'T4'	Post Net (US-Post Net)
n = 't5' or 'T5'	EAN 8, EAN 13, or UPC
n = 't6' or 'T6'	UPC E
n = 't9' or 'T9'	Codabar
n = 't12' or 'T12'	Code 128 set A
n = 't13' or 'T13'	Code 128 set B
n = 't14' or 'T14'	Code 128 set C
n = 't130' or 'T130'	ISBN (EAN)
n = 't131' or 'T131'	ISBN (UPC-E)
n = 't132' or 'T132'	EAN 128 set A
n = 't133' or 'T133'	EAN 128 set B
n = 't134' or 'T134'	EAN 128 set C

This parameter selects the bar code mode as shown above. When n is 't5' or 'T5' the bar code mode (EAN 8, EAN 13, or UPC A) varies according to the number of characters in the data.

#### Bar code, expanded character, line block drawing and box drawing

n = 's0' or 'S0'	3: 1 (default)
n = 's1' or 'S1'	2: 1
n = 's3' or 'S3'	2.5: 1

This parameter chooses the bar code style as above. When the EAN 8, EAN 13, UPC-A, Code 128 or EAN 128 bar code mode is chosen, this bar code style parameter is ignored.

Expanded Character

'S'

0 = White

- 1 = Black
- 2 = Vertical stripes
- 3 = Horizontal stripes
- 4 = Cross hatch

For example 'S' n1 n2

n1 = Background fill pattern

n2 = Foreground fill pattern

If 'S' is followed by only one parameter, the parameter is a foreground fill pattern.

Line block drawing & box drawing

'S'

1 = Black

2 = Vertical stripes

- 3 = Horizontal stripes
- 4 = Cross hatch

#### Bar code

n = 'mnnn' or 'Mnnn' (nnn = 0 ~ 32767)

This parameter shows the bar code width. The unit of 'nnn' is a percentage.

#### Bar code human readable line ON or OFF

n = 'r0' or 'R0	Human readable line OFF
n = 'r1' or 'R1	Human readable line ON

Preset: Human readable line ON (1) 'T5' or 't5' (2) 'T6' or 't6' (3) 'T130' or 't130' (4) 'T131' or 't131' Preset:

Human readable line OFF

All others

This parameter shows whether the printer prints the human readable line below the bar code. Human readable characters are always printed with OCR-B font of 10 pitch and all the current character style enhancements are masked. The default setting is determined by the bar code mode selected by 't' or 'T'.

#### Quiet zone

n = 'onnn' or 'Onnn' (nnn = 0 ~ 32767)

Quiet zone is the space on both sides of the bar codes. Its width can be shown using the units that are set by the 'u' or 'U' parameter. (For the description of 'u' or 'U' parameter, see the next section.) The default setting of the quiet-zone width is 1 inch.

#### Bar code, expanded character unit, line block drawing and box drawing

mm (preset)
1/10
1/100
1/12
1/120
1/10 mm
1/300
1/720

This parameter shows the measurement units of X-axis offset, Y-axis offset, and bar code height.

#### Bar code, expanded character, line block drawing and box drawing offset in X-axis

n = 'xnnn' or 'Xnnn'

This parameter shows the offset from the left margin in the 'u'- or 'U'-specified unit.

#### Bar code & expanded character offset in Y-axis

n = 'ynnn' or 'Ynnn'

This parameter shows the downward offset from the current print position in the 'u'- or 'U'-specified unit.

#### Bar code, expanded character, line block drawing and box drawing height

- n = 'hnnn', 'Hnnn', 'dnnn', or 'Dnnn'
- 1) EAN13, EAN8, UPC-A, ISBN (EAN13, EAN8, UPC-A), ISBN (UPC-E): 22 mm
- 2) UPC-E: 18 mm
- 3) Others: 12 mm
- Expanded characters → 2.2 mm (preset)

Line block drawing and box drawing  $\rightarrow$  1 dot

This parameter shows the height of bar codes or expanded characters as shown above. It can start with 'h', 'H', 'd', or 'D'. The height of bar codes is shown in the 'u'- or 'U'-specified unit. The default setting of the bar code height (12 mm, 18 mm or 22 mm) is determined by the bar code mode selected by 't' or 'T'.

#### Expanded character width, line block drawing and box drawing

n = 'wnnn' or 'Wnnn'
Expanded character → 1.2 mm
Line block drawing and box drawing → 1 dot
This parameter shows the width of expanded characters as shown above.

#### Expanded character rotation

n = 'a0' or 'A0'	'Upright (preset)
n = 'a1' or 'A1'	'Rotated 90 degrees
n = 'a2' or 'A2'	'Upside down, rotated 180 degrees
n = 'a3' or 'A3'	'Rotated 270 degrees

#### Bar code data start

n = 'b' or 'B'

Data that follows 'b' or 'B' is read in as bar code data. Bar code data must end with the '\' code (5CH), which also ends this command. The acceptable bar code data is determined by the bar code mode selected by 't' or 'T'.

■ When CODE 39 is chosen with the parameter 't0' or 'T0'

Forty three characters '0' to '9', 'A' to 'Z', '-', '.', ' (space)', '\$', '/', '+', and '%' can be accepted as bar code data. Other characters will cause a data error. The number of characters for bar codes is not limited. The bar code data automatically starts and ends with an asterisk '\*' (start character and stop character). If the received data has an asterisk '\*' at the beginning or end, the asterisk is regarded as a start character or stop character.

■ When Interleaved 2 of 5 is selected with the parameter 't1' or 'T1':

Ten numerical characters '0' to '9' can be accepted as bar code data. Other characters cause a data error. The number of characters for bar codes is not limited. This mode of bar codes needs even characters. If the bar code data has odd characters, '0' is automatically added to the end of the bar code data.

■ When FIM (US-Post Net) is selected with the parameter 't3' or 'T3'

Characters 'A' to 'D' are valid and one digit of data can be printed. Upper-case and lower-case alphabet characters can be accepted.

When Post Net (US-Post Net) is selected with the parameter 't4' or 'T4'

Numbers '0' to '9' can be data and it must end with a check digit. '?' can be used instead of the check digit.

■ When EAN 8, EAN 13, or UPC A is selected with the parameter 't5' or 'T5'

Ten numbers '0' to '9' can be accepted as bar code data. The number of characters for bar codes is limited as follows:

EAN 8: Total 8 digits (7 digits + 1 check digit)

EAN 13: Total 13 digits (12 digits + 1 check digit)

UPC A: Total 12 digits (11 digits + 1 check digit)

A number of characters other than those stated above will cause a data error that results in the bar code data being printed as normal print data. If the check digit is not correct, the printer decides the correct check digit automatically so that the correct bar code data will be printed. When EAN13 is selected, adding '+' and a two-digit or five-digit number after the data can create an add-on code.

■ When UPC-E is selected with the parameter 't6' or 'T6':

The numbers '0' to '9' can be accepted as bar code data.

Eight digits <sup>1 2</sup> (standard format) The first character must be '0' and the data must end with a check digit. Total eight digits = '0' plus 6 digits plus 1 check digit.

Six digits <sup>2</sup> The first character and the last check digit are removed from the eight digit data.

- <sup>1</sup> '?' can be used instead of a check digit.
- <sup>2</sup> Adding '+' and two-digit or five-digit number after the data creates an add-on code.
- When Codebar is chosen with the parameter 't9' or 'T9'

Characters '0' to '9', '-', '. ', '\$', '/', '+', ': ' can be printed. Characters 'A' to 'D' can be printed as a startstop code, which can be upper case or lower case. If there is no start-stop code, errors will happen. A check digit cannot be added and using '?' causes errors.

When Code 128 Set A, Set B, or Set C is selected with the parameter 't12' or 'T12', 't13' or 'T13', or 't14' or 'T14'

Code 128 sets A, B and C can be individually selected. Set A shows characters Hex 00 to 5F. Set B includes characters Hex 20 to 7F. Set C includes the pairs 00 to 99. Switching is allowed between the code sets by sending %A, %B, or %C. FNC 1, 2, 3, and 4 are produced with %1, %2, %3, and %4. The SHIFT code, %S, allows temporary switching (for one character only) from set A to set B and vice versa. The '%' character can be encoded by sending it twice.

When ISBN (EAN) is selected with the parameter 't130' or 'T130'

The same rules apply as for 't5' or 'T5'.

■ When ISBN (UPC-E) is selected with the parameter 't131' or 'T131':

The same rules apply as for 't6' or 'T6'.

When EAN 128 set A, set B or set C is selected with the parameter 't132' or 'T132', 't133' or 'T133' or 't134' or 'T134'

The same rules apply as for 't12' or 'T12', 't13' or 'T13', or 't14' or 'T14'.

#### Box drawing

ESC i ... E (or e) 'E' or 'e' is a terminator.

#### Line block drawing

ESC i ... V (or v) 'V' or 'v' is a terminator.

#### Expanded character data start

n = 'l' or 'L'

Data that follows 'I' or 'L' is read as expanded character data (or labeling data). Expanded character data must end with the '\' code (5CH), which also ends this command.

#### Table of Code (EAN) 128 set C

Code(EAN) 128 set C describes an original command. The correspondence table is as follows.

No.	Code 128 Set C	Input command	Hex	No.	Code 128 Set C	Innut command	Hex
0	00	NUL	0x00	52	52	4	0x34
1	01	SOH	0x00	53	53	5	0x35
2	02	STX	0x01	54	54	6	0x36
3	02	ETX	0x02	55	55	7	0x37
4	03	EOT	0x03	56	56	8	0x38
5	04	ENQ	0x04	57	57	9	0x39
6	05	ACK	0x05	58	58	:	0x3a
7	00	BEL	0x00 0x07	59	59		0x3b
8	07	BEL	0x07 0x08	60	60	;	0x3b 0x3c
9	08	HT	0x08	61	61	=	0x3d
10	10	LF	0x09 0x0a	62	62	- >	0x3u 0x3e
11	11	VT	0x0a 0x0b	63	63	?	0x3f
12	12	NP	0x0b 0x0c	64	64		0x31 0x40
13	12	CR	0x0c	65	65	@ A	0x40 0x41
14	13	SO	0x0u 0x0e	66	66	B	0x41 0x42
14	14	SI	0x0e 0x0f	67	67	C B	
15	15	DLE			68		0x43
10	17		0x10	68 69	69	D E	0x44 0x45
		DC1 DC2	0x11			F E	
18	18		0x12	70	70		0x46
19	19	DC3	0x13	71	71	G	0x47
20 21	20 21	DC4	0x14	72 73	72 73	H	0x48
21	21	NAK	0x15	73	73	I	0x49
		SYN	0x16			J	0x4a
23	23	ETB	0x17	75	75	K	0x4b
24	24	CAN	0x18	76	76	L	0x4c
25	25	EM	0x19	77	77	M	0x4d
26 27	26 27	SUB ESC	0x1a 0x1b	78 79	78 79	N	0x4e 0x4f
						O P	
28	28 29	FS	0x1c	80	80		0x50
29 30	<u>29</u> 30	GS RS	0x1d	81 82	81 82	Q	0x51 0x52
30	30	US	0x1e	83	83	R S	0x52 0x53
31	31	SP US	0x1f				
32	32	58	0x20	84 85	84 85	Т	0x54 0x55
33		!	0x21	86		U V	
34	34 35	#	0x22 0x23	87	86 87	W	0x56 0x57
36	36	\$	0x23 0x24	88	88	X	0x57 0x58
37	37	ф %	0x24 0x25	89	89	A Y	0x58 0x59
38	38		0x25 0x26	90	90	Z	0x59 0x5a
30	30	<u> </u>	0x26 0x27	90	90	<u> </u>	0x5a 0x5b
40	40	(	0x27 0x28	91	91		0x5c5c
40	40		0x28 0x29	92	92	\\	0x5c5c
41	41	) *	0x29 0x2a	93	93		0x50 0x5e
42	42	+	0x2a 0x2b	94	94 95		0x5e 0x5f
43	43	r l	0x2b 0x2c	95	95	<del>_</del>	0x51 0x60
44	44 45	,	0x2c	90	97	а	0x60 0x61
45	45	-	0x2u 0x2e	97	98	b a	0x62
40	40	. /	0x2e 0x2f	90	90		0x62 0x63
47	47	0	0x21 0x30	100	Set B	c d	0x63 0x64
40	48	1	0x30 0x31	100	Set B	e	0x65
50	50	2	0x31	101	FNC 1	f	0x66
50	50	3	0x32 0x33			í 	0,00
51	51	3	0733				

#### **Example Program Listings**

```
WIDTH "LPT1:",255
'CODE 39
LPRINT CHR$(27);"itOr1s0o0x00y00bCODE39?\";
'Interleaved 2 of 5
LPRINT CHR$(27);"it1r1s0o0x00y20b123456?\";
'FIM
LPRINT CHR$(27);"it3r1o0x00y40bA\";
'Post Net
LPRINT CHR$(27);"it4r1o0x00y60b1234567890?\";
'EAN-8
LPRINT CHR$(27);"it5r1o0x00y70b1234567?\";
'UPC-A
LPRINT CHR$(27);"it5r1o0x50y70b12345678901?\";
'EAN-13
LPRINT CHR$(27);"it5r1o0x100y70b123456789012?\";
'UPC-E
LPRINT CHR$(27);"it6r1o0x150y70b0123456?\";
'Codabar
LPRINT CHR$(27);"it9r1s0o0x00y100bA123456A\";
'Code 128 set A
LPRINT CHR$(27);"it12r1o0x00y120bC0DE128A12345?\";
'Code 128 set B
LPRINT CHR$(27);"it13r1o0x00y140bCODE128B12345?\";
'Code 128 set C
LPRINT CHR$(27);"it14r1o0x00y160b";CHR$(1);CHR$(2);"?\";
'ISBN(EAN)
LPRINTCHR$(27);"it130r1o0x00y180b123456789012?+12345\";
'EAN 128 set A
LPRINT CHR$(27);"it132r1o0x00y210b1234567890?\";
LPRINT CHR$(12)
END
```

# Appendix (for Europe and Other Countries)

# **Brother numbers**

# IMPORTANT

For technical and operational help, you must call the country where you bought the printer. Calls must be made *from within* that country.

#### Register your product

By registering your Brother product, you will be recorded as the original owner of the product.

Your registration with Brother:

- may serve as a confirmation of the purchase date of your product should you lose your receipt;
- may support an insurance claim by you in the event of product loss covered by insurance; and,
- will help us to notify you of enhancements to your product and special offers.

Please complete the Brother Warranty Registration or, for your convenience and most efficient way to register your new product, register on-line at

#### http://www.brother.com/registration/

#### Frequently asked questions (FAQs)

The Brother Solutions Center is our one-stop resource for all your printer needs. You can download the latest drivers, software and utilities, read FAQs and troubleshooting tips to learn how to get the most from your Brother product.

#### http://solutions.brother.com/

You can check here for Brother driver updates.

#### **Customer Service**

Visit http://www.brother.com/ for contact information on your local Brother office.

#### Service center locations

For service centres in Europe, contact your local Brother Office. Address and telephone contact information for European offices can be found at <u>http://www.brother.com/</u> by selecting your country.

#### Internet Addresses

Brother Global Web Site: http://www.brother.com/

For Frequently Asked Questions (FAQs), Product Support and Technical Questions, and Driver Updates and Utilities: <u>http://solutions.brother.com/</u>

С

# Appendix (for USA and Canada)

# **Brother numbers**

# IMPORTANT

For technical and operational help, you must call the country where you bought the printer. Calls must be made *from within* that country.

#### **Register your product**

By registering your product with Brother International Corporation, you will be recorded as the original owner of the product.

Your registration with Brother:

- may serve as a confirmation of the purchase date of your product should you lose your receipt;
- may support an insurance claim by you in the event of product loss covered by insurance; and,
- will help us notify you of enhancements to your product and special offers.

Please complete the Brother Warranty Registration or, for your convenience and most efficient way to register your new product, register on-line at

http://www.brother.com/registration/

#### FAQs (frequently asked questions)

The Brother Solutions Center is our one-stop resource for all your printer needs. You can download the latest software and utilities and read FAQs and troubleshooting tips to learn how to get the most from your Brother product.

#### http://solutions.brother.com/

You can check here for Brother driver updates.

#### **Customer Service**

In USA: 1-877-BROTHER (1-877-276-8437) In Canada: 1-877-BROTHER

If you have comments or suggestions, please write us at:

In USA: Printer Customer Support Brother International Corporation 7905 North Brother Boulevard Bartlett, TN 38133 In Canada: Brother International Corporation (Canada), Ltd.

- Marketing Dept.

1, rue Hotel de Ville Dollard-des-Ormeaux, PQ, Canada H9B 3H6

#### Service center locator (USA only)

For the location of a Brother authorized service center, call 1-877-BROTHER (1-877-276-8437).

#### Service center locations (Canada only)

For the location of a Brother authorized service center, call 1-877-BROTHER.

Internet Addresses
Brother Global Web Site: http://www.brother.com/
For Frequently Asked Questions (FAQs), Product Support and Technical Questions, and Driver Updates and Utilities: <u>http://solutions.brother.com/</u>
For Brother Accessories & Supplies:
In USA : http://www.brothermall.com/
In Canada : <u>http://www.brother.ca/</u>

#### **Ordering supplies**

For best quality results use only genuine Brother supplies, which are available at most Brother retailers. If you cannot find the supplies you need and you have a Visa, MasterCard, Discover, or American Express credit card, you can order supplies directly from Brother. (You can visit us online for a complete selection of the Brother accessories and supplies that are available for purchase.)

In USA:	1-877-552-MALL (1-877-552-6255)
	1-800-947-1445 (fax)
	http://www.brothermall.com/
In Canada:	1-877-BROTHER
	http://www.brother.ca/

Description	Item
Toner Cartridge	TN-620 (Standard, prints approx. 3,000 pages) <sup>1</sup>
	TN-650 (High Yield, prints approx. 8,000 pages) <sup>1</sup>
Drum Unit	DR-620
Lower Tray	LT-5300

<sup>1</sup> Approx. cartridge yield is declared in accordance with ISO/IEC 19752.

## D Index

#### Α

Accessories tab	
Automatic duplex printing	
Automatic Emulation Selection	73
Automatic Interface Selection	73

#### Β

	4.40
Bar code control	
Booklet printing	30
BRAdmin Light	71
BRAdmin Professional 3	
Brother Numbers (USA/Canada)	158
BRPrint Auditor	72
BR-Script 3 mode	72
BR-Script3	. 47, 63, 137
Buffer error	80

## С

Cancel	
Cartridge error	77
Character sets	147
Computer requirements	143
Consumable items	
Control panel	75, 140
Corona wire	112, 113
Cover open	79, 80

## D

Default settings Dimensions	
Download full	80
Driver Deployment Wizard	72
Drum end soon	78
Drum error	80
Drum unit	100
Duplex disabled	79
Duplex printing	24

#### E

Emulation	
Emulation modes	72
Envelopes	9, 19
EPSON FX-850 mode	73
Error Messages	115
Error messages	117

F	
Font full	
Fonts	

# G

Go button	
-----------	--

#### Н

ΗP	LaserJet mode	7	2
	Laborootinioao		-

#### L

Incorrect paper size for auto DX	79
Interface	. 139

#### L

LEDs	75
Linux	
Lower tray	88

#### Μ

Macintosh	53, 136
Manual duplex printing	24
Media specifications	141
Media type	6
Memory	
Memory full	
Multi-purpose tray	

#### Ν

Network	71
Network connectivity	139
Network default settings	87
No paper	78
No tray	79

#### 0

	400
	130

# Р\_\_\_\_\_

Paper	44
Paper handling1	40
Paper jams	79

Paper pick-up roller	110
Parallel interface	73
PCL printer driver	
Plain paper	8
Power supply	5
Print a test page	
Print overrun	
Printer driver	, 69, 140
Printer Settings	
Processor	139
ProPrinter XL Mode	73

# R \_\_\_\_\_

Register your product	157, 158
Replace toner	77
Reprint	83
Resolution	36

# S\_\_\_\_\_

Scanner window109Service call81Service centers (USA/Canada)159Service centres (Europe and other countries)157Size mismatch79Sleep time41, 52, 59SO-DIMM89Software71Specifications138Status Maniter115	       
Specifications138	3
Status Monitor115	
Symbol	,

# Т\_\_\_\_\_

Toner cartridge	
Toner low	77
Too many trays	80
Trademarks	vi
Troubleshooting	114

U	
Unprintable area	
USB interface	-
Utilities	140

#### W

Web Based Management	72
Web BRAdmin	
Weights Windows <sup>®</sup>	142
Windows <sup>®</sup>	

D