
Quick Setup Guide Start Here

Before you can use the machine, please read this Quick Setup Guide for the correct setup and installation.


Warnings tell you what to do to prevent possible personal injury.	
A CAUTION	Cautions specify procedures you must follow or avoid to prevent possible minor injuries.

Unpack the machine and check the components

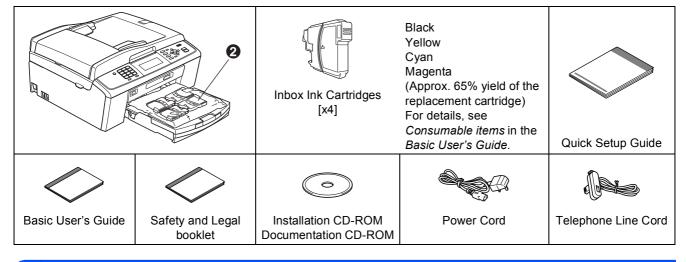

Plastic bags are used in the packaging of your machine. To avoid danger of suffocation, please keep these bags away from babies and children.

- Remove the protective tape and film covering the machine, and also from the LCD.
- Remove the green protective part **()** by lifting the front of the machine and then pulling down on the packing part.
- C Remove the plastic bag ② containing the ink cartridges from on top of the paper tray.

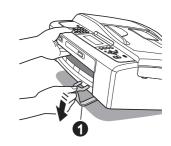

Make sure you have all components.

🖉 Note


- The components included in the box may differ depending on your country.
- Save all packing materials and the box in case for any reason you must ship your machine.
- You need to purchase the correct interface cable for the interface you want to use (for USB or network connection).

USB cable


Please make sure you use a USB 2.0 cable (Type A/B) that is no more than 2 metres long (cable not included).

Network cable


Use a straight-through Category5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.

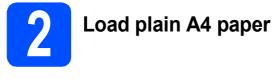

Pull the paper tray ① completely out of the machine.

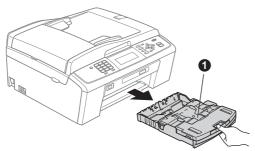


Lift the output paper tray cover **①**.

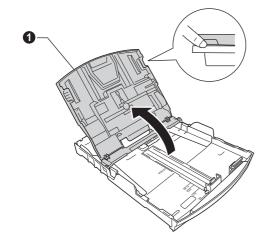

C With both hands, gently press and slide the paper side guides ● and then the paper length guide ❷ to fit the paper size.

Make sure that the triangular marks ③ on the paper side guides ① and paper length guide ② line up with the mark for the paper size you are using.

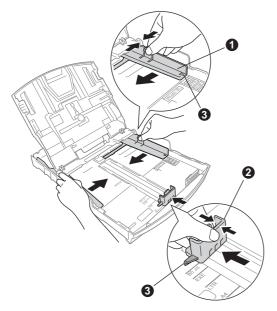

- **C** Fan the stack of paper well to avoid paper jams and misfeeds.
- Gently put the paper into the paper tray print side down and top edge first. Check that the paper is flat in the tray.

IMPORTANT

DO NOT push the paper in too far.



- Gently adjust the paper side guides to the paper with both hands. Make sure that the paper side guides touch the edges of the paper.
- Close the output paper tray cover.
- Slowly push the paper tray completely into the machine.



While holding the paper tray in place, pull out the paper support **1** until it clicks, and then unfold the paper support flap **2**.

Ē






Connect the power cord and telephone line


DO NOT connect the USB cable yet (if you are using a USB cable).

Connect the power cord.

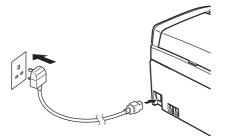

The machine must be fitted with an earthed plug.

Connect the telephone line cord. Connect one end of the telephone line cord to the socket on the machine marked **LINE** and the other end to a telephone wall socket.

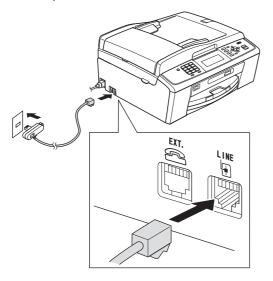

WARNING


Since the machine is grounded through the power outlet, you can protect yourself from potentially hazardous electrical conditions on the telephone network by keeping the power cord connected to your machine when you connect it to a telephone line. Similarly, you can protect yourself when you want to move your machine by disconnecting the telephone line first and then the power cord.

IMPORTANT

The telephone line cord MUST be connected to the socket on the machine marked LINE.

🖉 Note

If you are sharing one telephone line with an external telephone, connect it as shown below.

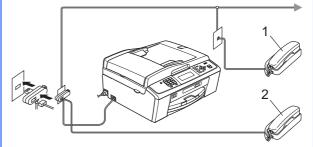


1 Extension telephone

2 External telephone

Please make sure you use an external telephone with a cable no more than 3 metres long.

🖉 Note

If you are sharing one telephone line with an external telephone answering machine, connect it as shown below.

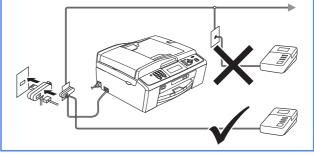

-
y
S


Set the receive mode to External TAD if you have an external answering machine. See Choose a Receive Mode on page 6. For additional details, see Connecting an external TAD (telephone answering device) in chapter 6 in the Basic User's Guide.



Install the ink cartridges


If ink gets in your eyes, wash them out with water at once, and if irritation occurs consult a doctor.

- Make sure that the power is turned on. The LCD shows No Ink Cartridge.
- Open the ink cartridge cover 1.

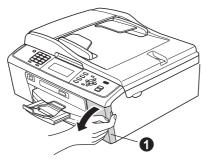



Remove the green protective part ①.

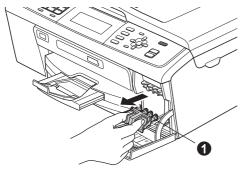

🖉 Note

Do not throw away the green protective part. You will need it if you transport the machine.


d u

Unpack the ink cartridge.

🖉 Note


Make sure you install the Inbox Ink Cartridges included with your machine first.

• Turn the green knob on the protective yellow cap clockwise until it clicks to release the vacuum seal, then remove the cap **1**.

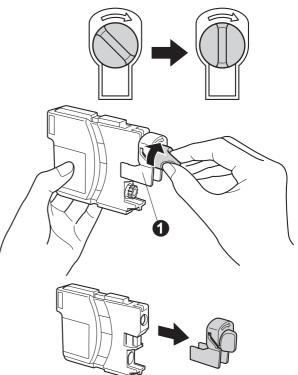


Take care to match the colour of the lever **()** with the cartridge colour **(2)**, as shown in the diagram below.


f

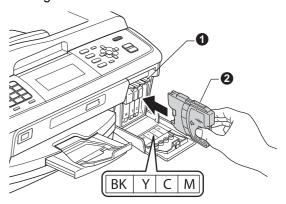

Install each ink cartridge in the direction of the arrow on the label.

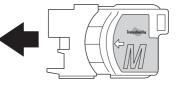

- h
- Gently push the ink cartridge until it clicks. After all the ink cartridges are installed close the ink cartridge cover.

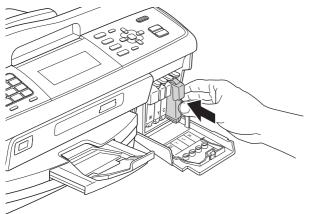


🖉 Note

The machine will prepare the ink tube system for printing. This process will take approximately four minutes. Do not turn off the machine.



When the preparation process has finished, the LCD shows Set Paper and Press Start.
Press Colour Start.

Check the quality of the four colour blocks () on the sheet. (black/yellow/cyan/magenta)

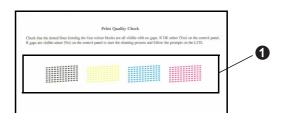

C If all lines are clear and visible, press 1 (Yes) on the dial pad to finish the quality check and go to step 6.

ОК



If you can see missing short lines, press ${\bf 2}~({\rm No})$ on the dial pad and follow the steps on the LCD.


Poor





Choose a Receive Mode

There are four possible receive modes: Fax Only, Fax/Tel, Manual and External TAD.

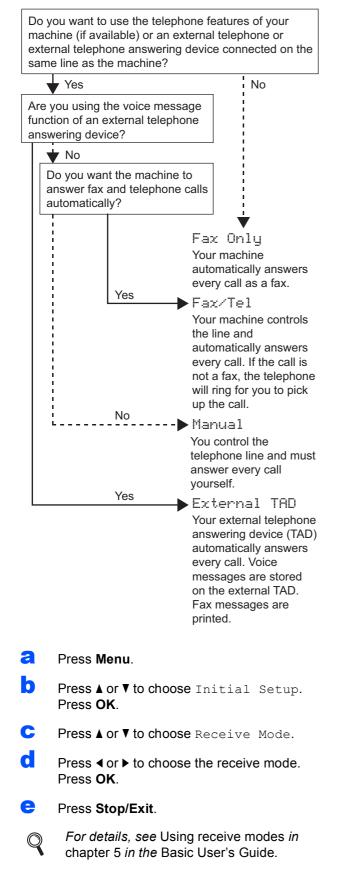



Set the date and time

The machine displays the date and time, and if you set up the station ID, it will add it to each fax you send.

- Press Menu.
- Press ▲ or ▼ to choose Initial Setup. Press OK.
- C Press ▲ or ▼ to choose Date&Time. Press OK.
- Enter the last two digits of the year on the dial pad, and then press **OK**.

Date&Time	Input & Press OK
Year:20	
10	

(e.g. Enter 1 0 for 2010.)

Repeat for month/day/time in 24-hour format.

Press Stop/Exit.



h

Enter personal information (Station ID)

You should store your name and fax number to be printed on all fax pages that you send.

- Press Menu.
 - Press ▲ or ▼ to choose Initial Setup. Press OK.
- C Press ▲ or ▼ to choose Station ID. Press OK.
- Enter your fax number (up to 20 digits) on the dial pad, and then press OK. To enter a "+" for international codes, press *.
- Enter your name (up to 20 characters) using the dial pad, and then press **OK**.

🖉 Note

- See the following chart for entering your name.
- If you need to enter a character that is on the same key as the last character, press ► to move the cursor to the right.
- If you entered a letter incorrectly and want to change it, press <or > to move the cursor to the incorrect character, press Clear.

Press key	One time	Two times	Three times	Four times
2	A	В	С	2
3	D	E	F	3
4	G	Н	I	4
5	J	K	L	5
6	М	N	0	6
7	Р	Q	R	S
8	Т	U	V	8
9	W	Х	Y	Z



🖉 Note

If you make a mistake and want to start again, press **Stop/Exit** and go back to **a**.

For details, see Entering Text in Appendix C in the Basic User's Guide.



Fax Transmission Report

Your Brother machine is equipped with a Transmission Verification Report that can be used as confirmation that you sent a fax. This report lists the name or fax number of the receiving party, the date, time, and duration of the transmission, the number of pages transmitted, and whether or not the transmission was successful. If you want to use the Fax Transmission Report feature, see *Transmission Verification Report* in *chapter 4* in the *Basic User's Guide*.

Set Tone or Pulse dialling mode

Your machine comes set for Tone dialling service. If you have Pulse dialling service (rotary), you need to change the dialling mode.

- Press Menu.
- Press ▲ or V to choose Initial Setup. Press OK.
- C Press ▲ or ▼ to choose Tone/Pulse.
- Press ◀ or ► to choose Pulse (or Tone). Press OK.
- Press Stop/Exit.



If you are connecting the machine to a line that features PBX or ISDN to send and receive faxes, it is necessary to change the telephone line type accordingly by completing the following steps.

- Press Menu.
- Press ▲ or ▼ to choose Initial Setup. Press OK.
- C Press ▲ or V to choose Phone Line Set.
- Press ◀ or ► to choose Normal, PBX or ISDN. Press OK.
- Press Stop/Exit.

PBX and TRANSFER

The machine is initially set to Normal, which lets the machine connect to a standard PSTN (Public Switched Telephone Network) line. However, many offices use a central telephone system or Private Branch Exchange (PBX). Your machine can be connected to most types of PBX. The machine's recall feature supports timed break recall only (TBR). TBR will work with most PBX systems allowing you to gain access to an outside line, or transfer calls to another extension. The feature works when the **Tel/R** key is pressed.



If you are connecting the machine to a VoIP service (over the Internet) you need to change the compatibility setting.

🖉 Note

If you are using an analogue telephone line you can skip this step.

- Press Menu.
- Press ▲ or V to choose Initial Setup. Press OK.
- C Press ▲ or ▼ to choose Compatibility.
- C Press ◀ or ► key to choose Basic(for VoIP). Press OK.
- Press Stop/Exit.



Choose your connection type





For USB interface cable

Windows[®], go to page 10 Macintosh, go to page 13





For Wired Network

Windows[®], go to page 15 Macintosh, go to page 19

🖉 Note

For Windows Server[®] 2003/2003 x64 Edition/2003 R2/2003 R2 x64 Edition/2008/2008 R2, see the Network User's Guide on the documentation CD-ROM.





For Wireless Network

Windows[®] and Macintosh, go to page 22

Windows[®] Macintosh Windows[®] Macintosh USB Wired Network



For USB interface users (Windows[®] 2000 Professional/XP/XP Professional x64 Edition/ Windows Vista[®]/Windows[®] 7)



Before you install

USB

Make sure that your computer is ON and you are logged on with Administrator rights.

IMPORTANT

- DO NOT connect the USB cable yet.
- For the latest drivers and information, visit <u>http://solutions.brother.com/</u>
- If there are any programs running, close them.
- The screens may differ depending on your operating system.



Install MFL-Pro Suite

Put the supplied installation CD-ROM into your CD-ROM drive. If the model name screen appears, choose your machine. If the language screen appears, choose your language.

🖉 Note

If the Brother screen does not appear automatically, go to **My Computer (Computer)**, double-click the CD-ROM icon, and then double-click **start.exe**. The CD-ROM Top Menu will appear. Click Install MFL-Pro Suite and click Yes if you accept the license agreements. Follow the on-screen instructions.

Macromedia Flash Player 8 Multi-Function Center ®	brother
	Top Menu
The multifunction drivers are automatically installed.	Install MFL-Pro Suite Full Driver & Software Package
	Documentation
	🔅 Advanced 🏹 Additional Applications
	Brother Support
	On-Line Registration
2001-2010 Brother Industries, Ltd. All Rights Reserved.	Back Exit

Note 🖉

• If this screen appears, click **OK** and restart your computer.



- If the installation does not continue automatically, open the top menu again by ejecting and then reinserting the CD-ROM or double-click the start.exe program from the root folder, and continue from b to install MFL-Pro Suite.
- For Windows Vista[®] and Windows[®] 7, when the User Account Control screen appears, click Allow or Yes.



Windows®

C Choose Local Connection, and then click Next. The installation continues.



d


When this screen appears, go to the next step.






Connect the USB cable


Using both hands, use the plastic tabs on both sides of the machine to lift the scanner cover until it locks securely into the open position.

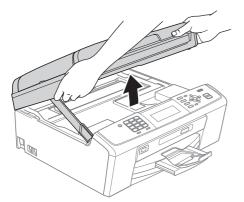

Connect the USB cable to the USB socket marked with a 😪 symbol. You will find the USB socket inside the machine on the right as shown below.

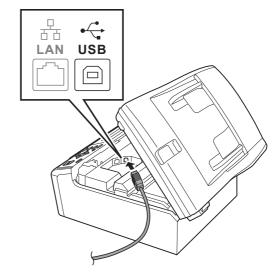

Carefully guide the USB cable through the trench as shown below, following the trench around and toward the back of the machine. Then connect the cable to your computer.

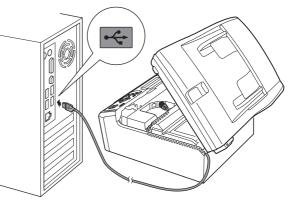


IMPORTANT

Make sure that the cable does not restrict the cover from closing, or an error may occur.



USB

 Lift the scanner cover to release the lock ①.
 Gently push the scanner cover support down ② and close the scanner cover ③.

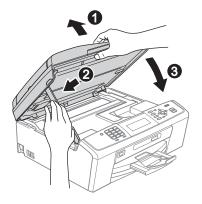

The installation will continue automatically. The installation screens appear one after another.

IMPORTANT

DO NOT cancel any of the screens during the installation. It may take a few seconds for all screens to appear.

🖉 Note

For Windows Vista[®] and Windows[®] 7, when the **Windows Security** screen appears, click the check box and click **Install** to complete the installation correctly.

When the **User's Guides** screen is displayed, click **View Manuals on the Web** if you want to download the manuals and follow the on-screen instructions. You can also view the manuals on the documentation CD-ROM.

When the On-Line Registration screen is displayed, make your selection and follow the on-screen instructions.

If you do not want to set your machine as the Default printer, uncheck **Set as Default Printer**.

17

Finish and restart

a

Click **Finish** to restart your computer. After restarting the computer, you must be logged on with Administrator rights.



🖉 Note

- If an error message appears during the software installation, run the Installation Diagnostics located in start/All Programs/ Brother/MFC-JXXX (where MFC-JXXX is your model name).
- Depending on your security settings, a Windows Security or antivirus software window may appear when using the machine or its software. Please allow or permit the window to continue.
- In the Check for Firmware Updates screen, choose the firmware update setting you want and click OK.

🖉 Note

Internet access is required for the firmware update.



The installation is now complete.

Now go to

Proceed to Install Optional Applications on page 34.

🖉 Note

XML Paper Specification Printer Driver The XML Paper Specification Printer Driver is the most suitable driver when printing from applications that use the XML Paper Specification documents. Please download the latest driver by accessing the Brother Solutions Center at <u>http://solutions.brother.com/</u>



For USB interface users (Mac OS X 10.4.11, 10.5.x, 10.6.x)



Before you install

USB

Make sure your machine is connected to the power and your Macintosh is ON. You must be logged on with Administrator rights.

IMPORTANT


- For the latest drivers and information on the Mac OS X you are using, visit http://solutions.brother.com/
- For Mac OS X 10.4.0 to 10.4.10 users, upgrade to Mac OS X 10.4.11 10.6.x.




Connect the USB cable

IMPORTANT


- DO NOT connect the machine to a USB port on a keyboard or a non-powered USB hub.
- Connect the machine directly to your Macintosh.
- Using both hands, use the plastic tabs on both sides of the machine to lift the scanner cover until it locks securely into the open position.

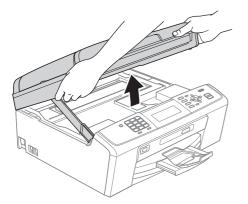

Connect the USB cable to the USB socket marked with a e symbol. You will find the USB socket inside the machine on the right as shown below.

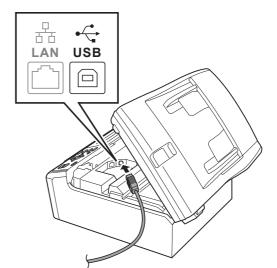

Carefully guide the USB cable through the trench as shown below, following the trench around and toward the back of the machine. Then connect the cable to your Macintosh.

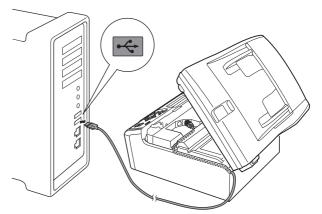

IMPORTANT


Make sure that the cable does not restrict the cover from closing, or an error may occur.



f

Macintosh

 Lift the scanner cover to release the lock ●.
 Gently push the scanner cover support down ② and close the scanner cover ③.

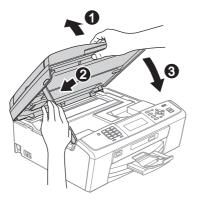



Install MFL-Pro Suite

- Put the supplied installation CD-ROM into your CD-ROM drive.
- Double-click the Start Here OSX icon to install.




C Choose Local Connection, and then click Next. Follow the on-screen instructions.

90	Start Here OSX	
onnection T	pe	
lect the connectio	n type of the device you want to ins	tall, and then click Next.
Local Connect	ion (USB)	-500 M
O Wired Network	Connection (Ethernet)	
O Wireless Netwo	ork Connection	
	Cancel	Next

C Please wait, it will take a few seconds for the software to install. After the installation, the Brother software will search for the Brother device.

Choose the machine from the list, and then click **OK**.

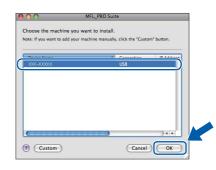

When this screen appears, click Next.



G When the **Brother Support** screen appears, click **Close** to finish the installation or go to step **17**.

Download and install Presto! PageManager

When Presto! PageManager is installed OCR capability is added to Brother ControlCenter2. You can easily scan, share and organize photos and documents using Presto! PageManager.

Click the Presto! PageManager icon to go to the Presto! PageManager download site, and follow the on-screen instructions.





The installation is now complete.



For wired network interface users (Windows[®] 2000 Professional/XP/XP Professional x64 Edition/ Windows Vista[®]/Windows[®] 7)



Before you install

A Make sure that your computer is ON and you are logged on with Administrator rights.


IMPORTANT

- For the latest drivers and information, visit <u>http://solutions.brother.com/</u>
- If there are any programs running, close them.
- The screens may differ depending on your operating system.




Connect the network cable

Using both hands, use the plastic tabs on both sides of the machine to lift the scanner cover until it locks securely into the open position.

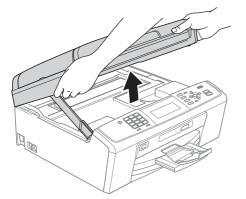

Connect the network cable to the LAN socket marked with a symbol. You will find the LAN socket inside the machine on the left as shown below.

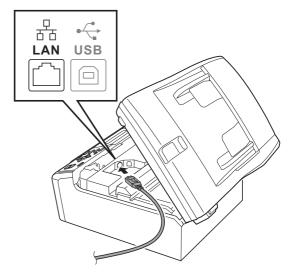

Carefully guide the network cable through the trench as shown below, following the trench around and toward the back of the machine. Then, connect the cable to your network.



IMPORTANT

Make sure that the cable does not restrict the cover from closing, or an error may occur.

🖉 Note


If both USB and LAN cables are being used, guide both cables through the trench with one on top of the other.



Wired Network

Windows®

 Lift the scanner cover to release the lock ①.
 Gently push the scanner cover support down ② and close the scanner cover ③.

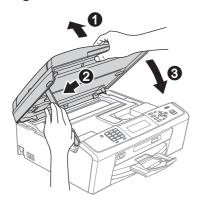

IMPORTANT

If you have previously set up your machine for a wireless network and then want to set it up on a wired network, you should check that the machine's Network I/F is set to Wired LAN. The wireless network interface will become inactive with this setting.

On your machine, press Menu.

Press ▲ or V to choose Network and press OK.

Press ▲ or ▼ to choose Network I/F and press OK.

Press ▲ or ▼ to choose Wired LAN and press OK.

Press Stop/Exit.



Install MFL-Pro Suite

Put the supplied installation CD-ROM into your CD-ROM drive. If the model name screen appears, choose your machine. If the language screen appears, choose your language.

🖉 Note

If the Brother screen does not appear automatically, go to **My Computer (Computer)**, double-click the CD-ROM icon, and then double-click **start.exe**. The CD-ROM Top Menu will appear. Click Install MFL-Pro Suite and click Yes if you accept the license agreements. Follow the on-screen instructions.



🖉 Note

• If this screen appears, click **OK** and restart your computer.



- If the installation does not continue automatically, open the top menu again by ejecting and then reinserting the CD-ROM or double-click the start.exe program from the root folder, and continue from b to install MFL-Pro Suite.
- For Windows Vista[®] and Windows[®] 7, when the User Account Control screen appears, click Allow or Yes.
- C Choose Wired Network Connection, and then click Next.





Wired Network

Windows®

When this screen appears, choose Change the Firewall port settings to enable network connection and continue with the installation. (Recommended) and click Next. (Not for Windows[®] 2000 users)



If you are using a firewall other than Windows[®] Firewall or Windows[®] Firewall is off, this screen may appear.

Brother	Printing Device Installation
1	Notes for Architrus Schware users: Dr.cose you are using an Archites Exhibition, a warring dailog window mgbit appear during the installation. When warring dailog window append, shows "Mawn" to contribute installation.


See the instructions provided with your firewall software for information on how to add the following network ports.

- For network scanning, add UDP port 54925.
- For network PC-Fax receiving, add UDP port 54926.
- If you still have trouble with your network connection, add UDP port 137.

🖉 Note

 If there is more than one machine connected to the network, choose your machine from the list, and then click Next.

This window will not appear if there is only one machine connected on the network, it will be chosen automatically.

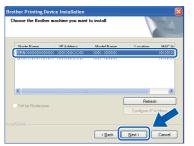

• If your machine is not found over the network, the following screen will appear.



The installation of the Brother drivers will automatically start. The installation screens appear one after another.

IMPORTANT

DO NOT cancel any of the screens during the installation. It may take a few seconds for all screens to appear.

🖉 Note

For Windows Vista[®] and Windows[®] 7, when the **Windows Security** screen appears, click the check box and click **Install** to complete the installation correctly.

- When the **User's Guides** screen is displayed, click **View Manuals on the Web** if you want to download the manuals and follow the on-screen instructions. You can also view the manuals on the documentation CD-ROM.
- **9** When the **On-Line Registration** screen is displayed, make your selection and follow the on-screen instructions.
- If you do not want to set your machine as the Default printer, uncheck Set as Default Printer.





Finish and restart

Click Finish to restart your computer. After restarting the computer, you must be logged on with Administrator rights.



🖉 Note

- If an error message appears during the software installation, run the Installation Diagnostics located in start/All Programs/ Brother/MFC-JXXX (where MFC-JXXX is your model name).
- Depending on your security settings, a Windows Security or antivirus software window may appear when using the machine or its software. Please allow or permit the window to continue.
- In the Check for Firmware Updates screen, choose the firmware update setting you want and click OK.

🖉 Note

Internet access is required for the firmware update.



Install MFL-Pro Suite on additional computers (if needed)

If you want to use your machine with multiple computers on the network, install MFL-Pro Suite on each computer. Go to step **16** on page 16. Also see step **14** on page 15 before you install.

🖉 Note

Network license (Windows[®]) for ScanSoft™ PaperPort™11SE

This product includes a PC license for up to 2 Users. This license supports the installation of the MFL-Pro Suite including ScanSoftTM PaperPortTM11SE on up to 2 PCs on the network. If you want to use more than 2 PCs with ScanSoftTM PaperPortTM11SE installed, please purchase the Brother NL-5 pack which is a multiple PC license agreement pack for up to 5 additional users. To purchase the NL-5 pack, contact your authorized Brother dealer or contact Brother customer service.



The installation is now complete.

Now go to

Proceed to Install Optional Applications on page 34.

🖉 Note

- If you specify an IP Address for the machine, you must set the Boot Method to Static by using the control panel. For more information, see the Network User's Guide on the documentation CD-ROM.
- XML Paper Specification Printer Driver The XML Paper Specification Printer Driver is the most suitable driver when printing from applications that use the XML Paper Specification documents. Please download the latest driver by accessing the Brother Solutions Center at <u>http://solutions.brother.com/</u>

For wired network interface users (Mac OS X 10.4.11, 10.5.x, 10.6.x)



Before you install

Make sure your machine is connected to the power and your Macintosh is ON. You must be logged on with Administrator rights.

IMPORTANT

- For the latest drivers and information on the Mac OS X you are using, visit http://solutions.brother.com/
- For Mac OS X 10.4.0 to 10.4.10 users, upgrade to Mac OS X 10.4.11 10.6.x.
- If you have previously set up your machine for a wireless network and then want to set it up on a wired network, you should check that the machine's Network I/F is set to Wired LAN. The wireless network interface will become inactive with this setting. On your machine, press Menu.

Press ▲ or ▼ to choose Network and press OK.

Press \blacktriangle or \forall to choose Network I/F and press OK.


Press \blacktriangle or \blacktriangledown to choose <code>Wired LAN</code> and press OK.

Press Stop/Exit.




Connect the network cable

Using both hands, use the plastic tabs on both sides of the machine to lift the scanner cover until it locks securely into the open position.

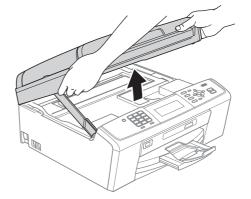



Connect the network cable to the LAN socket marked with a symbol. You will find the LAN socket inside the machine on the left as shown below.

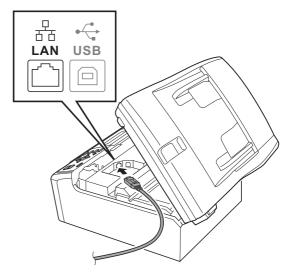


Windows[®] Macintosh Wired Network



Wired Network

Macintosh

Carefully guide the network cable through the trench as shown below, following the trench around and toward the back of the machine. Then, connect the cable to your network.

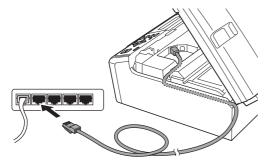


IMPORTANT

Make sure that the cable does not restrict the cover from closing, or an error may occur.

🖉 Note

If both USB and LAN cables are being used, guide both cables through the trench with one on top of the other.

 Lift the scanner cover to release the lock ●.
 Gently push the scanner cover support down ② and close the scanner cover ③.

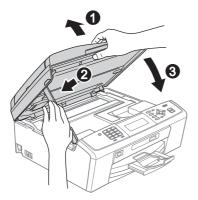

Install MFL-Pro Suite


- Put the supplied installation CD-ROM into your CD-ROM drive.
- Double-click the **Start Here OSX** icon to install.



C Choose Wired Network Connection, and then click Next. Follow the on-screen instructions.

00	Start Here OSX	
Connection	Туре	
elect the connec	tion type of the device you want to i	nstall, and then click Next.
O Local Conne	ction (USB)	
_		
• Wired Netwo	ork Connection (Ethernet)	
O Wireless Ne	work Connection	
	(Cancel)	Next

- C Please wait, it will take a few seconds for the software to install. After the installation, the Brother software will search for the Brother device.
- C If the machine is configured for your network, choose the machine from the list, and then click **OK**.

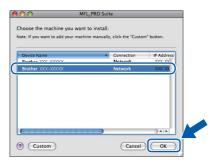



Wired Network

Macintosh

🖉 Note

f

- If your machine is not found over the network, confirm your network settings.
- If this screen appears click **OK**.



Enter a name for your Macintosh in **Display Name** up to 15 characters long and click **OK**. Go to **f**.



The name you enter will appear on the machine's LCD when you press the **SCAN** key and choose a scan option. (For more information, see Network Scanning (For models with built-in network support) in the Software User's Guide on the documentation CD-ROM.)

When this screen appears, click Next.



9 When the **Brother Support** screen appears, click **Close** to finish the installation or go to step **17**.



Download and install Presto! PageManager

When Presto! PageManager is installed OCR capability is added to Brother ControlCenter2. You can easily scan, share and organize photos and documents using Presto! PageManager.

Click the Presto! PageManager icon to go to the Presto! PageManager download site, and follow the on-screen instructions.





Install MFL-Pro Suite on additional computers (if needed)

If you want to use your machine with multiple computers on the network, install MFL-Pro Suite on each computer. Go to step **16** on page 20. Also see step **14** on page 19 before you install.




The installation is now complete.

🖉 Note

If you specify an IP Address for the machine, you must set the Boot Method to Static by using the control panel. For more information, see the Network User's Guide on the documentation CD-ROM.



For wireless network interface users

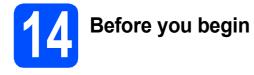

First you must configure the wireless network settings of your machine to communicate with your network access point/router. After the machine is configured to communicate with your access point/router, computers on your network will have access to the machine. To use the machine from these computers, you will need to install the drivers and software. The following steps will guide you through the configuration and installation process.

To achieve optimum results with normal everyday document printing, place the Brother machine as close to the network access point/router as possible with minimal obstructions. Large objects and walls between the two devices as well as interference from other electronic devices can affect the data transfer speed of your documents.

Due to these factors, wireless may not be the best method of connection for all types of documents and applications. If you are printing large files, such as multi-page documents with mixed text and large graphics, you may want to consider choosing wired Ethernet for a faster data transfer or USB for the fastest throughput speed.


Although the Brother MFC-J615W can be used in both a wired and wireless network, only one of the connection methods can be used at a time.

IMPORTANT

If you have previously configured the wireless settings of the machine you must reset the network (LAN) settings before you can configure the wireless settings again. On your machine, press Menu. Press ▲ or ▼ to choose Network and press OK. **Press** ▲ or **V** to choose Network Reset, and then press OK. Press 1 twice for Yes to accept the change.

The following instructions are for infrastructure mode (connected to a computer through an access point/router).

Infrastructure Mode

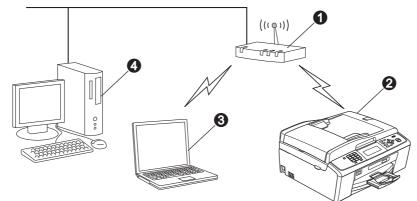

- Access point/router
- Wireless Network machine (your machine)
- Wireless capable computer connected to the access point/router
- Wired computer connected to the access point/router

Please make sure the wireless network settings of the machine match the access point/router.

🖉 Note

To set up your machine in Ad-hoc mode (connected to a wireless capable computer without an access point/router) you can find instructions in the Network User's Guide on the documentation CD-ROM.

Also you can download the Network User's Guide by following the instructions below. 1 Turn on your computer. Insert the installation CD-ROM into your CD-ROM drive.

- For Windows[®]:
- 2 Choose your model and the language. The CD-ROM top menu will appear.
- 3 Click **Documentation**, and follow the on-screen instructions.

For Macintosh:

2 Double-click **Documentation**, and follow the on-screen instructions.



Confirm your network environment (Infrastructure Mode)

The following instructions will offer two methods for installing your Brother machine in a wireless network environment.

If your wireless access point/router does not support Wi-Fi Protected Setup (WPS) or AOSS™, write down the wireless network settings of your wireless access point/router in the area below.

IMPORTANT

Please do not contact Brother Customer Service for assistance without the wireless security information. We cannot assist you in locating your network security settings.

Item	Record the current wireless network settings
Network Name: (SSID/ESSID)	
Password (Network Key)	
* The Password may also be describ	ed as the Network Key, Security Key or Encryption Key.

🖉 Note

If you do not know this information (Network Name (SSID/ESSID) and Password (Network Key)), you cannot continue the wireless setup.

How can I find this information (Network Name (SSID/ESSID) and Password (Network Key))

1) You should see the documentation provided with your wireless access point/router.

2) The initial network name could be the manufacturer's name or the model name.

3) If you do not know the security information, please consult the router manufacturer, your system administrator, or internet provider.

Now go to

If your wireless access point/router supports automatic wireless (one-push) setup (Wi-Fi Protected Setup or AOSS™)



page 24



Connecting the Brother machine to the wireless network

Configure the wireless settings (typical Wireless Setup in infrastructure mode)

On your machine, press Menu.
 Press ▲ or ▼ to choose Network and press OK.
 Press ▲ or ▼ to choose WLAN and press OK.
 Press ▲ or ▼ to choose Setup Wizard and

Press ▲ or V to choose Setup Wizard and press OK. When Network I/F switched to

Wireless. is displayed, press **OK** to accept. This will start the wireless setup wizard. To cancel, press **Stop/Exit**.

The machine will search for available SSIDs. If a list of SSIDs is displayed, use the ▲ or ▼ keys to choose the SSID you wrote down in step **15-a** on page 23, then press **OK**. If you are using an authentication and encryption method that requires a Password (Network Key), go to **c**.

If your authentication method is Open System and your encryption mode is None, go to **d**.

🖉 Note

It will take several seconds to display a list of available SSIDs.

If a list of SSIDs is not displayed, make sure your access point is on. Move your machine closer to the access point and try starting from **a** again.

If your access point is set to not broadcast the SSID, you will have to manually add the SSID name. For details, see the *Network User's Guide* on the documentation CD-ROM.

C Enter the Password (Network Key) you wrote down in step **15-a** on page 23 using the dial pad to choose each letter or number.

For example, to enter the letter a, press the **2** key on the dial pad once. To enter the number 3, press the **3** key on the dial pad seven times.

The letters appear in this order: lower case, upper case and then numbers. You can use the ◀ and ► keys to move the cursor left and right. (For more information, see *Entering Text for*

Wireless Settings on page 35.)

Press **OK** when you have entered all the characters, then press **1** for Yes to apply your settings.

Your machine will now try to connect to your wireless network using the information you have entered.

It may take a few minutes to connect to your wireless network.

- A connection result message appears for 60 seconds on the LCD and a wireless LAN report will automatically be printed. If the connection failed, check the error code on the printed report and refer to *Troubleshooting* on page 26.
- Wireless setup is now complete. A four level indicator on the bottom of your machine's LCD will show the wireless signal strength of your access point/router.

To install MFL-Pro Suite, continue to step **17**.

For Windows[®] Users:

Now go to

Page 28

For Macintosh Users:

Now go to

Page 32

(ຈາງ For Wireless Network Users



Configure the wireless settings using the automatic wireless (onepush) method

Confirm your wireless access point/router has the Wi-Fi Protected Setup or AOSS™ symbol as shown below.



- Place the Brother machine within range of your Wi-Fi Protected Setup or AOSS™ access point/router. The range may differ depending on your environment. Refer to the instructions provided with your access point/router.
- C Push the Wi-Fi Protected Setup or AOSS™ button on your wireless access point/router. See the user's guide for your wireless access point/router for instructions.
- On your machine, press **Menu**.

Press ▲ or ▼ to choose Network and press OK.

Press ▲ or ▼ to choose WLAN and press OK. Press ▲ or ▼ to choose WPS/AOSS and press OK.

When Network I/F switched to Wireless. is displayed, press **OK** to accept. This will start the wireless setup wizard.

This feature will automatically detect which mode (Wi-Fi Protected Setup or AOSS™) your access point/router uses to configure your machine.

🖉 Note

If your wireless access point/router supports Wi-Fi Protected Setup (PIN Method) and you want to configure your machine using the PIN (Personal Identification Number) Method, see Using the PIN Method of Wi-Fi Protected Setup in the Network User's Guide on the documentation CD-ROM. A connection result message appears for 60 seconds on the LCD and a wireless LAN report will automatically be printed. If the connection failed, check the error code on the printed report and refer to *Troubleshooting* on page 26.

OK!

Wireless setup is now complete. A four level indicator on the bottom of your machine's LCD will show the wireless signal strength of your access point/router.

To install MFL-Pro Suite, continue to step **17**.

For Windows[®] Users:



Page 28

For Macintosh Users:

Now go to

Page 32

Troubleshooting

IMPORTANT

Please do not contact Brother Customer Service for assistance without the wireless security information. We cannot assist you in locating your network security settings.

How can I find the wireless security information (SSID and Network Key)

- 1) You should see the documentation provided with your wireless access point/router.
- 2) The initial network name could be the manufacturer's name or the model name.
- 3) If you do not know the security information, please consult the router manufacturer, your system administrator, or internet provider.
- * The Network Key may also be described as the Password, Security Key or Encryption Key.

Wireless LAN report

If the wireless LAN report that printed shows that the connection failed, check the error code on the printed report and refer to the following instructions.

Error code	Recommended Solutions		
	The wireless setting is not activated, turn the wireless setting to ON.		
TS 01	 If a LAN cable is connected to your machine, disconnect it and turn the wireless setting of your machine to ON. 		
TS-01	On your machine, press Menu .		
	Press ▲ or ▼ to choose Network and press OK. Press ▲ or ▼ to choose Network I/F and press OK.		
	Press ▲ or ▼ to choose wLAN and press OK . Press Stop/Exit .		
	The wireless access point/router cannot be detected.		
	1. Check the following 4 points.		
	 Make sure that the wireless access point/router is powered on. Move your machine to an obstruction-free area, or closer to the wireless access point/router. 		
	 point/router. Temporarily place your machine within about one metre from the wireless access point when you are configuring the wireless settings. 		
TS-02	 If your wireless access point/router is using MAC address filtering, confirm the MAC address of the Brother machine is allowed in the filter. 		
	 If you manually entered the SSID and security information (SSID/authentication method/encryption method/Network Key), the information may be incorrect. Reconfirm the SSID and security information and reenter the correct information as necessary. 		
	See How can I find the wireless security information (SSID and Network Key) on page 26 to confirm.		

(in) For Wireless Network Users

	The Authentication/Encryption m not supported by your machine.	ethods used by the selected wireless access point/router are	
	For infrastructure mode, change the authentication and encryption methods of the wireless access point/router. Your machine supports the following authentication methods:		
	authentication method	encryption method	
	WPA-Personal	TKIP AES	
	WPA2-Personal	AES	
TS-04	Open	WEP None (without encryption)	
	Shared key	WEP	
		e SSID or network settings you entered may be incorrect.	
	See <i>How can I find the wireless</i> confirm.	security information (SSID and Network Key) on page 26 to	
	the wireless setting.	uthentication and encryption methods of your computer for uthentication method only, with optional WEP encryption.	
TS-05	The security information (SSID/Network Key) is incorrect. Reconfirm the SSID and security information (Network Key). If your router uses WEP encryption, enter the key used as the first WEP key. Your Brother machine supports the use of the first WEP key only.		
	See <i>How can I find the wireless</i> confirm.	security information (SSID and Network Key) on page 26 to	
TS-06	incorrect. Reconfirm the wireless security method/Network Key) in the tabl	ion, enter the key used as the first WEP key. Your Brother	
	See <i>How can I find the wireless</i> confirm.	security information (SSID and Network Key) on page 26 to	
	The machine cannot detect a wir	reless access point/router that has WPS or AOSS™ enabled.	
TS-07	If you would like to configure you or AOSS™, you must operate be wireless access point/router. Confirm your wireless access po AOSS™ and try starting again.	oth your machine and the pint/router supports WPS or	
	If you do not know how to opera point/router using WPS or AOSS provided with your wireless acce manufacturer of your wireless ac network administrator.	S [™] see the documentation ess point/router, ask the	
	Two or more wireless access po	ints that have WPS or AOSS™ enabled are detected.	
TS-08	method active and try again.	s access point/router within range has the WPS or AOSS™ minutes in order to avoid interference from other access	

Install the drivers & software (Windows[®] 2000 Professional/XP/XP Professional x64 Edition/ Windows Vista[®]/Windows[®] 7)



Before you install

A Make sure that your computer is ON and you are logged on with Administrator rights.

IMPORTANT

- For the latest drivers and information, visit <u>http://solutions.brother.com/</u>
- If there are any programs running, close them.
- The screens may differ depending on your operating system.



Install MFL-Pro Suite

Put the supplied installation CD-ROM into your CD-ROM drive. If the model name screen appears, choose your machine. If the language screen appears, choose your language.

🖉 Note

If the Brother screen does not appear automatically, go to **My Computer (Computer)**, double-click the CD-ROM icon, and then double-click **start.exe**. The CD-ROM Top Menu will appear. Click Install MFL-Pro Suite and click Yes if you accept the license agreements. Follow the on-screen instructions.

Macromedia Flash Player 8 Multi-Function Center ®	brother
The multifunction drivers are automatically installed.	Top Menu Install MFL-Pro Suite Full Driver & Software Package
	Documentation
	On-Line Registration

🖉 Note

• If this screen appears, click **OK** and restart your computer.



- If the installation does not continue automatically, open the top menu again by ejecting and then reinserting the CD-ROM or double-click the start.exe program from the root folder, and continue from b to install MFL-Pro Suite.
- For Windows Vista[®] and Windows[®] 7, when the User Account Control screen appears, click Allow or Yes.

C Choose Wireless Network Connection, and then click Next.



C When this screen appears, choose Change the Firewall port settings to enable network connection and continue with the installation. (Recommended) and click Next. (Not for Windows[®] 2000 users)

rol	ther Printing Device Installation 🛛 💈
Fi	rewall/AntiVirus detected
	Windows Frewell is helping to protect your computer. With the current frewell settings some of the network features on your machine will not work. In order for all the network features of the machine to work, some of the Windows Firewell port settins need to be channed
(Change the Firewall port settings to enable network connection and continue with the Installation. [Recommended]
	Continue without changing the Windows Firewall settings. (Some network features will be disabled)
	For AntiVirus Software Users:
	If you are using AntiVirus Software, a warning dialog window might appear during the installation, then choose "allow" to continue.
	(Back Next) Cancel

If you are using a firewall other than Windows[®] Firewall or Windows[®] Firewall is off, this screen may appear.

Brother Printing Device Installation				
1	Notice for Architects Software users: In case you are using an Architect Software, a warning dailog window night appear during the installation. When warning dailog window appens, choose "allow" to control an Inda			

See the instructions provided with your firewall software for information on how to add the following network ports.

- For network scanning, add UDP port 54925.
- For network PC-Fax receiving, add UDP port 54926.
- If you still have trouble with your network connection, add UDP port 137.

Choose your machine from the list, and then click Next.

noose the Brother m	uciniic you waik	to matur		
Node Name	IP Address	Model Name	Location	MAC
BRWYWWWWWWWW	*****	XXX - XXXXX		****
ER.////////////////////////////////////	*****			
<.				
Set by Nodename			Refrest	
K.		≈ not appear in	Refrest Configure IP /	

🖉 Note

 If your wireless settings fail, the Wireless Device Setup Wizard will appear during the installation of MFL-Pro Suite. Confirm your settings by following the on-screen instructions. If you encounter this failure, go to step **15-a** on page 23 and setup the wireless connection again.

Setting Up Wireless		((((জে
You can use WPS or AOSS to help you supports them.	u configure this w	rireless device if your Access Point
O Yes, my Access Point supports	WPS or AOSS a	nd I want to use them.
If you are using WPS or AOSS you point and the Oulck Setup Guide for	will need the doct your device.	((())) AOSS umentation supplied with the access
	< Back	Next > Cancel

• If you are using WEP and the LCD displayed Connected but your machine is not found, make sure you entered the WEP key correctly. The WEP key is case sensitive.



The installation of the Brother drivers will automatically start. The installation screens appear one after another.

IMPORTANT

DO NOT cancel any of the screens during the installation. It may take a few seconds for all screens to appear.

🖉 Note

For Windows Vista[®] and Windows[®] 7, when the **Windows Security** screen appears, click the check box and click **Install** to complete the installation correctly.

- **S** When the **User's Guides** screen is displayed, click **View Manuals on the Web** if you want to download the manuals and follow the on-screen instructions. You can also view the manuals on the documentation CD-ROM.
- When the On-Line Registration screen is displayed, make your selection and follow the on-screen instructions.
- If you do not want to set your machine as the Default printer, uncheck **Set as Default Printer**.

Finish and restart

a

Click **Finish** to restart your computer. After restarting the computer, you must be logged on with Administrator rights.



🖉 Note

- If an error message appears during the software installation, run the Installation Diagnostics located in start/All Programs/ Brother/MFC-JXXX (where MFC-JXXX is your model name).
- Depending on your security settings, a Windows Security or antivirus software window may appear when using the machine or its software. Please allow or permit the window to continue.
- In the Check for Firmware Updates screen, choose the firmware update setting you want and click OK.

🖉 Note

Internet access is required for the firmware update.



Install MFL-Pro Suite on additional computers (if needed)

If you want to use your machine with multiple computers on the network, install MFL-Pro Suite on each computer. Go to step **17** on page 28.

🖉 Note

Network license (Windows[®]) for ScanSoft™ PaperPort™11SE

This product includes a PC license for up to 2 Users. This license supports the installation of the MFL-Pro Suite including ScanSoftTM PaperPortTM 11SE on up to 2 PCs on the network. If you want to use more than 2 PCs with ScanSoftTM PaperPortTM 11SE installed, please purchase the Brother NL-5 pack which is a multiple PC license agreement pack for up to 5 additional users. To purchase the NL-5 pack, contact your authorized Brother dealer or contact Brother customer service.



The installation is now complete.

Now go to

Proceed to Install Optional Applications on page 34.



- If you specify an IP Address for the machine, you must set the Boot Method to Static by using the control panel. For more information, see the Network User's Guide on the documentation CD-ROM.
- XML Paper Specification Printer Driver The XML Paper Specification Printer Driver is the most suitable driver when printing from applications that use the XML Paper Specification documents. Please download the latest driver by accessing the Brother Solutions Center at <u>http://solutions.brother.com/</u>

Windows[®] Macintosh Wireless Network



Install the drivers & software (Mac OS X 10.4.11, 10.5.x, 10.6.x)



Before you install

Make sure your machine is connected to the power and your Macintosh is ON. You must be logged on with Administrator rights.

- For the latest drivers and information on the Mac OS X you are using, visit <u>http://solutions.brother.com/</u>
- For Mac OS X 10.4.0 to 10.4.10 users, upgrade to Mac OS X 10.4.11 10.6.x.



Install MFL-Pro Suite

- Put the supplied installation CD-ROM into your CD-ROM drive.
- Double-click the Start Here OSX icon to install.



C Choose Wireless Network Connection, and then click Next.

Start Here OSX	
Connection Type	
Select the connection type of the device you want to in	nstall, and then click Next.
O Local Connection (USB)	
O Wired Network Connection (Ethernet)	
Wireless Network Connection	(())
Cancel	Next

C The Brother software will search for the Brother device in your wireless network. If the machine is configured for your network, choose the device you want to install, and then click **Next**.

	Start Here USX	
hoose the device yo	ou want to install	
our device door not appear	in the list, please configure the wireless setting from	
tup button.	in the list, please compare the wireless setting nom	
Brother XXX-XXXXXX	X00C300CXCX	
	Setup	
	()	
	Cancel Back Next	
		_

🖉 Note

If your wireless settings fail, the Wireless Device Setup Wizard will appear during the installation of MFL-Pro Suite. Confirm your settings by following the on-screen instructions. If you encounter this failure, go to step **15-a** on page 23 and setup the wireless connection again.


	Wireless Device Setup Wia	aru	
Setting Up Wireless			(6))
You can use WPS or AOSS to help y them.	you configure this wireless de	vice if your Access Pol	nt supports
• Yes, my Access Point suppor	rts WPS or AOSS and I want to	use them.	
O No	_		
0		())) (055")	
If you are using WPS or AOSS you the Quick Setup Guide for your o		supplied with the act	cess point and
Help	< Back	Next >	Cancel

Wireless Network

Macintosh

Please wait, it will take a few seconds for the software to install. After the installation, this window will appear.

Choose your machine from the list, and then click $\ensuremath{\textbf{OK}}$.

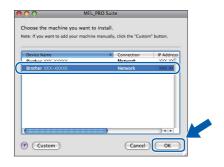


🖉 Note

If this screen appears click OK.



Enter a name for your Macintosh in Display Name up to 15 characters long and click OK. Go to **f**.

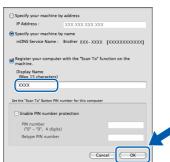

The name you enter will appear on the machine's LCD when you press the **SCAN** key and choose a scan option. (For more information, see Network Scanning (For models with built-in network support) in the Software User's Guide on the documentation CD-ROM.)



	CONTRACTOR AND A REPORT OF A DESCRIPTION OF A DESCRIPTION OF A DESCRIPTION
	Brother MFL-Pro Suite Installation Completed!
A	The MFL-Pro Suite, Printer Driver, Scanner Driver and ControlCenter2 have been installed.

9 When the **Brother Support** screen appears, click **Close** to finish the installation or go to step **19**.



When Presto! PageManager is installed OCR capability is added to Brother ControlCenter2. You can easily scan, share and organize photos and documents using Presto! PageManager.

Click the Presto! PageManager icon to go to the Presto! PageManager download site, and follow the on-screen instructions.





Install MFL-Pro Suite on additional computers (if needed)

If you want to use your machine with multiple computers on the network, install MFL-Pro Suite on each computer. Go to step **17** on page 32.



The installation is now complete.

🖉 Note

If you specify an IP Address for the machine, you must set the Boot Method to Static by using the control panel. For more information, see the Network User's Guide on the documentation CD-ROM.

> Windows[®] Macintosh Wireless Network

Install Optional Applications



Install FaceFilter Studio/BookScan & Whiteboard Suite supported by Reallusion, Inc

FaceFilter Studio is an easy-to-use borderless photo printing application. FaceFilter Studio also lets you edit your photo data and add photo effects such as red eye reduction or skin tone enhancement.

The **BookScan Enhancer** software can correct your scanned book images automatically.

The **Whiteboard Enhancer** software cleans up and enhances text and images from photos taken of your whiteboard.

IMPORTANT

- The machine must be ON and connected to the computer.
- The computer must be connected to the Internet.
- Make sure you are logged on with Administrator rights.
- This application is not available for Windows Server[®] 2003/2008 series.
- Open the top menu again by ejecting and then reinserting the installation CD-ROM or by double-clicking the start.exe program from the root folder.
- The CD-ROM Top Menu will appear. Choose your language and then click Additional Applications.



Click the button for the application you want to install.



d

Go back to the Additional Applications screen to install more applications.



Install FaceFilter Studio Help

To get instructions on how to use FaceFilter Studio, download and install FaceFilter Studio Help.

- To run FaceFilter Studio, go to start/All Programs/Reallusion/ FaceFilter Studio on your computer.
- Click the Dutton on the upper right corner of the screen.
- C Click Check for updates to go to the Reallusion update web page.



- Click the **Download** button and choose a folder to save the file in.
- Close FaceFilter Studio before you start the installer for FaceFilter Studio Help. Double-click the downloaded file from the folder you specified and follow the on-screen instructions for installation.

🖉 Note

To view the complete FaceFilter Studio Help, choose start/All Programs/Reallusion/ FaceFilter Studio/FaceFilter Studio Help on your computer.

Restore the network settings to factory default

To restore all network settings of the internal Print/Scan server to factory default, please follow the steps below.

- A Make sure the machine is not operating, then disconnect all the cables from the machine (except the power cord).
- Press Menu.
 C Press ▲ or ▼ to choose Network.

Press OK.

- Press ▲ or ▼ to choose Network Reset. Press OK.
- Press 1 to choose Yes.
- Press 1 to choose Yes.
- C The machine will restart, re-connect cables once this is complete.

Entering Text for Wireless Settings

Most number keys have three or four letters printed on them. The keys for 0, # and \star do not have printed letters because they are used for special characters.

By pressing the correct number key repeatedly, you can access the character you want.

Press Key	One time	Two times	Three times	Four times	Five times	Six times	Seven times	Eight times
2	а	b	С	А	В	С	2	а
3	d	е	f	D	Е	F	3	d
4	g	h	i	G	Н	I	4	g
5	j	k	I	J	K	L	5	j
6	m	n	0	Μ	Ν	0	6	m
7	р	q	r	s	Р	Q	R	S
8	t	u	v	Т	U	V	8	t
9	w	х	У	z	W	Х	Y	Z

For configuring wireless network settings

Putting spaces

To enter a space in a name, press ▶ twice between characters.

Making corrections

If you entered a letter incorrectly and want to change it, press ◀ or ► to move the cursor under the incorrect character, press **Clear**. Re-enter the correct character. You can also back up and insert letters.

Repeating letters

If you need to enter a letter that is on the same key as the letter before, press ► to move the cursor right before you press the key again.

Special characters and symbols

Press *, # or 0 repeatedly until you see the special character or symbol you want.

Press * for (space) ! " # \$ % & '() * +, -./ Press # for :; < = > ? @ []^_ Press 0 for 0 \ { | }~

Consumables

Replacement consumables

When the time comes to replace ink cartridges, an error message will be indicated on the LCD. For more information about the ink cartridges for your machine, visit <u>http://www.brother.com/original/</u> or contact your local Brother re-seller.

Ink cartridge

Black	Yellow	Cyan	Magenta
LC1100BK	LC1100Y	LC1100C	LC1100M

What is Innobella™?

Innobella[™] is a range of genuine consumables offered by Brother. The name "Innobella[™]" derives from the words "Innovation" and "Bella" (meaning "Beautiful" in Italian) and is a representation of the "innovative" technology providing you with "beautiful" and "long lasting" print results.



Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a registered trademark of Brother Industries, Ltd.

Multi-Function Link is a registered trademark of Brother International Corporation.

Windows Vista is either a registered trademark or a trademark of Microsoft Corporation in the United States and other countries.

Microsoft, Windows, Windows Server and Internet Explorer are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Apple, Macintosh and Safari are trademarks of Apple Inc., registered in the United States and other countries.

Nuance, the Nuance logo, PaperPort and ScanSoft are trademarks or registered trademarks of Nuance Communications, Inc. or its affiliates in the United States and/or other countries.

FaceFilter Studio is a trademark of Reallusion, Inc.

AOSS is a trademark of Buffalo Inc.

Wi-Fi, WPA, WPA2, Wi-Fi Protected Access and Wi-Fi Protected Setup are either trademarks or registered trademarks of Wi-Fi Alliance in the United States and/or other countries.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

Compilation and Publication

Under the supervision of Brother Industries, Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

Copyright and License

©2010 Brother Industries, Ltd. All rights reserved. This product includes software developed by the following vendors: ©1983-1998 PACIFIC SOFTWORKS, INC. This product includes the "KASAGO TCP/IP" software developed by ZUKEN ELMIC, Inc. ©2008 Devicescape Software, Inc.



Get inspired. Double-click the Brother CreativeCenter icon on your desktop to access a FREE web site with many ideas and resources for personal and professional use.



http://www.brother.com/creativecenter/

brother.