Quick Setup Guide Start Here

Before you can use the machine, please read this Quick Setup Guide for the correct setup and installation.

WARNING	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.
A CAUTION	<u>CAUTION</u> indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.

Unpack the machine and check the components



- Plastic bags are used in the packaging of your machine. To avoid danger of suffocation, please keep these bags away from babies and children.
- To ensure safe operation the supplied plug must be inserted only into a standard power outlet that is properly grounded through the standard electrical wiring. Non grounded equipment may cause an electrical shock hazard, and may cause excessive electrical noise radiation.
- Most of the illustrations in this Quick Setup Guide show the MFC-J410.

- Remove the protective tape and film covering the machine, and also from the LCD.
- Remove the plastic bag containing the ink cartridges from on top of the paper tray.
- C Make sure you have all components.

🖉 Note

- The components included in the box may differ depending on your country.
- Save all packing materials and the box in case for any reason you must ship your machine.
- Please use the supplied USB cable for a USB connection.

USB cable

Please make sure you use a USB 2.0 cable (Type A/B) that is no more than 2 metres long.

2

Load plain A4 paper

Pull the paper tray ① completely out of the machine.







With both hands, gently press and slide the paper side guides ① and then the paper length guide ② to fit the paper size.

Make sure that the triangular marks ③ on the paper side guides ① and paper length guide ② line up with the mark for the paper size you are using.



- **C** Fan the stack of paper well to avoid paper jams and misfeeds.
- Gently put the paper into the paper tray print side down and top edge first. Check that the paper is flat in the tray.

IMPORTANT

DO NOT push the paper in too far.



- Gently adjust the paper side guides to the paper with both hands. Make sure that the paper side guides touch the edges of the paper.
- Close the output paper tray cover.
- Slowly push the paper tray completely into the machine.



While holding the paper tray in place, pull out the paper support ① until it clicks, and then unfold the paper support flap ②.





Connect the power cord and telephone line

IMPORTANT

DO NOT connect the USB cable yet.

Connect the power cord.



WARNING

b

The machine must be fitted with an earthed plug.

Connect the telephone line cord. Connect one end of the telephone line cord to the socket on the machine marked **LINE** and the other end to a telephone wall socket.



WARNING

Since the machine is grounded through the power outlet, you can protect yourself from potentially hazardous electrical conditions on the telephone network by keeping the power cord connected to your machine when you connect it to a telephone line. Similarly, you can protect yourself when you want to move your machine by disconnecting the telephone line first and then the power cord.

IMPORTANT

The telephone line cord MUST be connected to the socket on the machine marked LINE.

🖉 Note

If you are sharing one telephone line with an external telephone, connect it as shown below.



🖉 Note

If you are sharing one telephone line with an external telephone answering machine, connect it as shown below.



Set the receive mode to External TAD if you have an external answering machine. See Choose a Receive Mode on page 7. For additional details, see Connecting an external TAD (telephone answering device) in chapter 6 in the Basic User's Guide.



a

b

Set your country (For Australia/New Zealand Customer Only)

You must set your country so that the machine works correctly on local telecommunication lines in each country.

- Check that the power is turned on by connecting in the power cord.
- Press ▲ or ▼ to choose your country (Australia or New Zealand), and press OK.

Set Country	
Australia	
New Zealand	

C If the LCD shows the correct country, press ▲ or ▼ to select Yes, and press OK. Then go to step d. Or press ▲ or ▼ and to select No, and press OK. Then go back to step b and choose the country again.

	Australia
Yes	
No	

• After the LCD shows Accepted for a few seconds, the machine will restart automatically. After the restart, the LCD shows Please Wait.



Install the ink cartridges

If ink gets in your eyes, wash them out with water at once, and if irritation occurs consult a doctor.

- A Make sure that the power is turned on. The LCD shows No Ink Cartridge.
- b

Open the ink cartridge cover 1.



С

Remove the green protective part 1.



Note

Do not throw away the green protective part. You will need it if you transport the machine.



Unpack the ink cartridge.

🖉 Note

Make sure you install the Inbox Ink Cartridges included with your machine first.

Turn the green knob on the protective yellow cap clockwise until it clicks to release the vacuum seal, then remove the cap 1.



Take care to match the colour of the lever **()** with the cartridge colour **(2)**, as shown in the diagram below.

f



Install each ink cartridge in the direction of the arrow on the label.



Gently push the ink cartridge until it clicks. After all the ink cartridges are installed close the ink cartridge cover.



IMPORTANT

After initial installation of the ink cartridges, the machine will start cleaning the ink tube system. This cleaning process will last approximately four minutes.

DO NOT unplug the machine from the power outlet or attempt to stop the cleaning process. Interruption of cleaning process may cause undesired print quality problems.

IMPORTANT

- DO NOT take out ink cartridges if you do not need to replace them. If you do so, it may reduce the ink quantity and the machine will not know the quantity of ink left in the cartridge.
- DO NOT shake the ink cartridges. If ink stains your skin or clothing, wash with soap or detergent at once.
- DO NOT repeatedly insert and remove the cartridges. If you do so, ink may seep out of the cartridge.
- If you mix the colours by installing an ink cartridge in the wrong position, clean the print head several times after correcting the cartridge installation. (See *Cleaning the print head in Appendixes A of the Basic User's Guide.*)
- Once you open an ink cartridge, install it in the machine and use it up within six months of installation. Use unopened ink cartridges by the expiration date written on the cartridge package.
- DO NOT dismantle or tamper with the ink cartridge, this can cause the ink to leak out of the cartridge.
- · Brother multifunction machines are designed to work with ink of a particular specification and will work to a level of optimum performance when used with genuine Brother branded ink cartridges. Brother cannot guarantee this optimum performance if ink or ink cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than genuine Brother branded cartridges with this machine or the refilling of empty cartridges with ink from other sources. If damage is caused to the print head or other parts of this machine as a result of using incompatible products with this machine, any repairs required as a result may not be covered by the warranty.



Check the print quality

- When the preparation process has finished, the LCD shows Set Paper and Press Start.
 Press Colour Start.
- Check the quality of the four colour blocks () on the sheet. (black/yellow/cyan/magenta)



C If all lines are clear and visible, press 1 (Yes) on the dial pad to finish the quality check and go to step 7.

OK



If you can see missing short lines, press ${\bf 2}~({\rm No})$ on the dial pad and follow the steps on the LCD.

Poor





- Press Menu.
- Press ▲ or ▼ to choose Initial Setup. Press OK.
- C Press ▲ or ▼ to choose Local Language. Press OK.
- Press ▲ or ▼ to choose your language. Press **OK**.
- Press Stop/Exit.



Choose a Receive Mode

There are four possible receive modes: Fax Only, Fax/Tel, Manual and External TAD.

Do you want to use the telephone features of your machine (if available) or an external telephone or external telephone answering device connected on the same line as the machine?





Set the LCD contrast (if needed)

If you are having difficulty reading the LCD, try changing the contrast setting.

- Press Menu.
- Press ▲ or ▼ to choose General Setup. Press OK.
- C Press ▲ or ▼ to choose LCD Settings. Press OK.
- C Press ▲ or ▼ to choose LCD Contrast. Press OK.
- Press ◀ or ► to choose the contrast level. Press OK.
- Press Stop/Exit.



Set the date and time

The machine displays the date and time, and if you set up the station ID, the date and time displayed on your machine will be printed on every fax you send.

Press Menu.

- Press ▲ or V to choose Initial Setup. Press OK.
- C Press ▲ or ▼ to choose Date&Time.
 Press OK.
- C Enter the last two digits of the year on the dial pad, and then press **OK**.



(e.g. Enter 1 0 for 2010.)

Repeat for month/day/time in 24-hour format.



Enter personal information (Station ID)

You should store your name and fax number to be printed on all fax pages that you send.

- **2** Press **Menu**.
- Press ▲ or V to choose Initial Setup. Press OK.
- C Press ▲ or V to choose Station ID. Press OK.
- C Enter your fax number (up to 20 digits) on the dial pad, and then press **OK**. To enter a "+" for international codes, press *.
- Enter your name (up to 20 characters) using the dial pad, and then press **OK**.

🖉 Note

- See the following chart for entering your name.
- If you need to enter a character that is on the same key as the last character, press ► to move the cursor to the right.
- If you entered a letter incorrectly and want to change it, press < or > to move the cursor to the incorrect character, press Clear.

Press key	One time	Two times	Three times	Four times
2	A	В	С	2
3	D	E	F	3
4	G	Н	I	4
5	J	К	L	5
6	М	Ν	0	6
7	Р	Q	R	S
8	Т	U	V	8
9	W	Х	Y	Z

Press Stop/Exit.

🖉 Note

If you make a mistake and want to start again, press **Stop/Exit** and go back to **a**.



For details, see Entering Text in Appendix C in the Basic User's Guide.



Fax Transmission Report

Your Brother machine is equipped with a

Transmission Verification Report that can be used as confirmation that you sent a fax. This report lists the name or fax number of the receiving party, the date, time, and duration of the transmission, the number of pages transmitted, and whether or not the transmission was successful. If you want to use the Fax Transmission Report feature, see *Transmission Verification Report* in *chapter 4* in the *Basic User's Guide*.



Your machine comes set for Tone dialling service. If you have Pulse dialling service (rotary), you need to change the dialling mode.

- Press Menu.
- Press ▲ or ▼ to choose Initial Setup. Press OK.
- C Press ▲ or V to choose Tone/Pulse. Press OK.
- C Press ▲ or ▼ to choose Pulse (or Tone). Press OK.
- Press Stop/Exit.



Set the phone line compatibility

If you are connecting the machine to a VoIP service (over the Internet) we recommend that you change the modem speed to minimize errors in fax operations.

🖉 Note

If you are using an analogue telephone line you can skip this step.

- Press Menu.
- Press ▲ or V to choose Initial Setup. Press OK.
- C Press ▲ or V to choose Compatibility. Press OK.
- C Press ▲ or ▼ key to choose Basic(for VoIP). Press OK.
- Press Stop/Exit.

For Windows[®] Users:



For Macintosh Users:

Now go to

Page 13



For USB interface users (Windows[®] 2000 Professional/XP/XP Professional x64 Edition/ Windows Vista[®]/Windows[®] 7)



Before you install

Make sure that your computer is ON and you are logged on with Administrator rights.

IMPORTANT

• DO NOT connect the USB cable yet.

USB

- For the latest drivers and information, visit <u>http://solutions.brother.com/</u>
- If there are any programs running, close them.
- The screens may differ depending on your operating system.



Install MFL-Pro Suite

Put the supplied installation CD-ROM into your CD-ROM drive. If the model name screen appears, choose your machine. If the language screen appears, choose your language.

🖉 Note

If the Brother screen does not appear automatically, go to **My Computer (Computer)**, double-click the CD-ROM icon, and then double-click **start.exe**.

The CD-ROM Top Menu will appear. Click Install MFL-Pro Suite and click Yes if you accept the license agreements. Follow the on-screen instructions.



🖉 Note

 If this screen appears, click OK and restart your computer.

stall Ma	inager 🔁
⚠	Some Windows@ updates need to be installed before the MFL-Pro Suite installation. To install the updates dick OK.
	If prompted, click OK to complete installation.
	Note: The PC may restart. If it does the installatontinue automatically

- If the installation does not continue automatically, open the top menu again by ejecting and then reinserting the CD-ROM or double-click the start.exe program from the root folder, and continue from b to install MFL-Pro Suite.
- For Windows Vista[®] and Windows[®] 7, when the **User Account Control** screen appears, click **Allow** or **Yes**.
- C Choose **Standard**, and then click **Next**. The installation continues.

Brother Printing De	vice Installation
Setup Type	2
Choose the setup to Click the type of Se	ype that best suits your needs. tup you prefet.
Standard Standard	Program will be installed with the most common options. Recommended for most users.
O Custom	You may choose the options you want to install. Recommended for advanced users.
InstallShield	



When this screen appears, go to the next step.





Windows[®]



Connect the USB cable

Using both hands, use the plastic tabs on both sides of the machine to lift the scanner cover until it locks securely into the open position.



Connect the USB cable to the USB socket marked with a < symbol. You will find the USB socket inside the machine as shown below.



C Carefully guide the USB cable through the trench as shown below, following the trench around and toward the back of the machine. Then connect the cable to your computer.



IMPORTANT

Make sure that the cable does not restrict the cover from closing, or an error may occur.

C Lift the scanner cover to release the lock ●.
 Gently push the scanner cover support down ② and close the scanner cover ⑤.





The installation will continue automatically. The installation screens appear one after another.

IMPORTANT

DO NOT cancel any of the screens during the installation. It may take a few seconds for all screens to appear.

🖉 Note

For Windows Vista[®] and Windows[®] 7, when the **Windows Security** screen appears, click the check box and click **Install** to complete the installation correctly.

- When the **User's Guides** screen is displayed, click **View Manuals on the Web** if you want to download the manuals and follow the on-screen instructions. You can also view the manuals on the documentation CD-ROM.
- When the On-Line Registration screen is displayed, make your selection and follow the on-screen instructions.
- If you do not want to set your machine as the Default printer, uncheck Set as Default Printer.

18

Finish and restart

a

Click **Finish** to restart your computer. After restarting the computer, you must be logged on with Administrator rights.



🖉 Note

- If an error message appears during the software installation, run the Installation Diagnostics located in start/All Programs/ Brother/MFC-JXXX (where MFC-JXXX is your model name).
- Depending on your security settings, a Windows Security or antivirus software window may appear when using the machine or its software. Please allow or permit the window to continue.
- In the Check for Firmware Updates screen, choose the firmware update setting you want and click OK.

🖉 Note

Internet access is required for the firmware update.

Finish

The installation is now complete.

Now go to

Proceed to Install Optional Applications on page 15.

🖉 Note

XML Paper Specification Printer Driver The XML Paper Specification Printer Driver is the most suitable driver when printing from applications that use the XML Paper Specification documents. Please download the latest driver by accessing the Brother Solutions Center at <u>http://solutions.brother.com/</u>

For USB interface users (Mac OS X 10.4.11, 10.5.x, 10.6.x)



Before you install

USB

Make sure your machine is connected to the power and your Macintosh is ON. You must be logged on with Administrator rights.

IMPORTANT

- For the latest drivers and information on the Mac OS X you are using, visit http://solutions.brother.com/
- For Mac OS X 10.4.0 to 10.4.10 users, upgrade to Mac OS X 10.4.11 10.6.x.



Connect the USB cable

IMPORTANT

DO NOT connect the machine to a USB port on a keyboard or a non-powered USB hub. Connect the machine directly to your Macintosh.

Using both hands, use the plastic tabs on both sides of the machine to lift the scanner cover until it locks securely into the open position.



Connect the USB cable to the USB socket marked with a symbol. You will find the USB socket inside the machine as shown below.



Carefully guide the USB cable through the trench as shown below, following the trench around and toward the back of the machine. Then connect the cable to your Macintosh.



IMPORTANT

Make sure that the cable does not restrict the cover from closing, or an error may occur.



- USB
- Lift the scanner cover to release the lock ●.
 Gently push the scanner cover support down ② and close the scanner cover ③.





Install MFL-Pro Suite

- Put the supplied installation CD-ROM into your CD-ROM drive.
- Double-click the Start Here OSX icon to install.



- C Please wait, it will take a few seconds for the software to install. After the installation, the Brother software will search for the Brother device.
- C Choose the machine from the list, and then click **OK**.

00	MFL_PRO Suite
	ine you want to install.
	add your machine manually, click the "Custom" button.
xxx-xxxxx	USB
_	
(?) Custom	Cancel OK

C When this screen appears, click Next.



When the **Brother Support** screen appears, click **Close** to finish the installation or go to step **18**.

B Download and install Presto! PageManager (MFC-J410 only)

When Presto! PageManager is installed OCR capability is added to Brother ControlCenter2. You can easily scan, share and organize photos and documents using Presto! PageManager.

Click the Presto! PageManager icon to go to the Presto! PageManager download site, and follow the on-screen instructions.





The installation is now complete.

🖉 Note

f

To use Image Capture on Mac OS X 10.6.x, please install the CUPS Printer Driver, which can be downloaded from the Brother Solutions Center (<u>http://solutions.brother.com/</u>).

Install Optional Applications

Windows[®]



FaceFilter Studio is an easy-to-use borderless photo printing application. FaceFilter Studio also lets you edit your photo data and add photo effects such as red eye reduction or skin tone enhancement.

The **BookScan Enhancer** software can correct your scanned book images automatically.

The **Whiteboard Enhancer** software cleans up and enhances text and images from photos taken of your whiteboard.

IMPORTANT

- The machine must be ON and connected to the computer.
- The computer must be connected to the Internet.
- Make sure you are logged on with Administrator rights.
- This application is not available for Windows Server[®] 2003/2008 series.
- Open the top menu again by ejecting and then reinserting the installation CD-ROM or by double-clicking the start.exe program from the root folder.
- The CD-ROM Top Menu will appear. Choose your language and then click Additional Applications.



C Click the button for the application you want to install.



Go I

Go back to the Additional Applications screen to install more applications.



Install FaceFilter Studio Help (For Hong Kong/ Taiwan users, installation CD-ROM includes FaceFilter Studio Help)

To get instructions on how to use FaceFilter Studio, download and install FaceFilter Studio Help.

- To run FaceFilter Studio, go to start/All Programs/Reallusion/ FaceFilter Studio on your computer.
- Click the 2 button on the upper right corner of the screen.
- C Click Check for updates to go to the Reallusion update web page.



- C Click the **Download** button and choose a folder to save the file in.
- Close FaceFilter Studio before you start the installer for FaceFilter Studio Help. Double-click the downloaded file from the folder you specified and follow the on-screen instructions for installation.

🖉 Note

To view the complete FaceFilter Studio Help, choose start/All Programs/Reallusion/ FaceFilter Studio/FaceFilter Studio Help on your computer.

Consumables

Replacement consumables

When the time comes to replace ink cartridges, an error message will be indicated on the LCD. For more information about the ink cartridges for your machine, visit <u>http://www.brother.com/original/</u> or contact your local Brother re-seller.

Ink cartridge

Black	Yellow	Cyan	Magenta
LC39BK	LC39Y	LC39C	LC39M

What is Innobella™?

Innobella[™] is a range of genuine consumables offered by Brother. The name "Innobella[™]" derives from the words "Innovation" and "Bella" (meaning "Beautiful" in Italian) and is a representation of the "innovative" technology providing you with "beautiful" and "long lasting" print results.



Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a registered trademark of Brother Industries, Ltd.

Multi-Function Link is a registered trademark of Brother International Corporation.

Windows Vista is either a registered trademark or a trademark of Microsoft Corporation in the United States and other countries. Microsoft, Windows, Windows Server and Internet Explorer are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Apple, Macintosh and Safari are trademarks of Apple Inc., registered in the United States and other countries. FaceFilter Studio is a trademark of Reallusion, Inc.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

Compilation and Publication

Under the supervision of Brother Industries, Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

Copyright and License

©2010 Brother Industries, Ltd. All rights reserved.

BROTHER CREATIVECENTRE

Get inspired. Double-click the Brother CreativeCentre icon on your desktop to access a FREE web site with many ideas and resources for personal and professional use.



http://www.brother.com/creativecenter/

brother.