


brother®

BASIC USER'S GUIDE

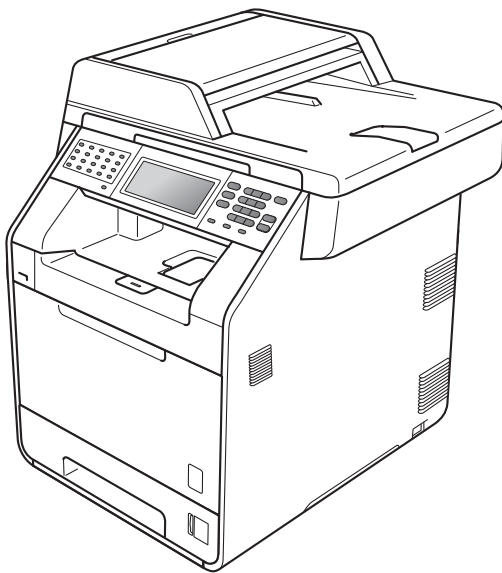

MFC-9970CDW

Version A

UK/IRE

If you need to call Customer Service

Please complete the following information for future reference:

Model Number: MFC-9970CDW

Serial Number: ¹ _____

Date of Purchase: _____

Place of Purchase: _____

¹ The serial number is on the back of the unit. Retain this User's Guide with your sales receipt as a permanent record of your purchase, in the event of theft, fire or warranty service.

Register your product on-line at

<http://www.brother.com/registration/>

User's Guides and where do I find it?

Which manual?	What's in it?	Where is it?
Safety and Legal	Read this Guide first. Please read the Safety Instructions before you set up your machine. See this Guide for trademarks and legal limitations.	Printed / In the box
Quick Setup Guide	Follow the instructions for setting up your machine and installing the drivers and software for the operating system and connection type you are using.	Printed / In the box
Basic User's Guide	Learn the basic Fax, Copy, Scan and Direct Print operations and how to replace consumables. See troubleshooting tips.	Printed / In the box For HUN/BUL/ROM/POL/SVK/CZE: PDF file / Documentation CD-ROM / In the box
Advanced User's Guide	Learn more advanced operations: Fax, Copy, security features, printing reports and performing routine maintenance.	PDF file / Documentation CD-ROM / In the box
Software User's Guide	Follow these instructions for Printing, Scanning, Network Scanning, Remote Setup, PC-Fax, and using the Brother ControlCenter utility.	PDF file / Documentation CD-ROM / In the box
Network Glossary	This Guide provides basic information about advanced network features of Brother machines along with explanations about general networking and common terms.	PDF file / Documentation CD-ROM / In the box
Network User's Guide	This Guide provides useful information about wired and wireless network settings and security settings using the Brother machine. You can also find supported protocol information for your machine and detailed troubleshooting tips.	PDF file / Documentation CD-ROM / In the box

Table of Contents

(BASIC USER'S GUIDE)

1	General information	1
	Using the documentation	1
	Symbols and conventions used in the documentation	1
	Accessing the Advanced User's Guide, Software User's Guide and Network User's Guide.....	2
	Viewing Documentation	2
	Accessing Brother Support (Windows®).....	4
	Accessing Brother Support (Macintosh)	4
	Control panel overview	6
	LCD Touchscreen.....	8
	Basic Operations	9
	Volume settings	10
	Ring volume.....	10
	Beeper volume	10
	Speaker volume.....	10
2	Loading paper	11
	Loading paper and print media	11
	Loading paper in the standard paper tray.....	11
	Loading paper in the multi-purpose tray (MP tray)	13
	Unscannable and unprintable areas	17
	Paper settings	18
	Paper Size and Type	18
	Tray Use in copy mode.....	19
	Tray Use in fax mode	19
	Tray Use in print mode	20
	Acceptable paper and other print media	21
	Recommended paper and print media	21
	Type and size of paper	21
	Handling and using special paper	23
3	Loading documents	26
	How to load documents	26
	Using the automatic document feeder (ADF)	26
	Using the scanner glass	27
4	Sending a fax	28
	How to send a fax	28
	Faxing Letter/Legal/Folio size documents from the scanner glass.....	29
	Colour fax transmission	30
	Cancelling a fax in progress	30
	Transmission verification report.....	30

5	Receiving a fax	32
	Receive modes	32
	Choosing the receive mode	32
	Using receive modes	33
	Fax Only	33
	Fax/Tel.....	33
	Manual	33
	External TAD	33
	Receive Mode settings	34
	Ring Delay	34
	F/T Ring Time (Fax/Tel mode only).....	34
	Fax Detect	35
6	Telephone and external devices	36
	Telephone line services	36
	Setting the telephone line type	36
	Connecting an external TAD.....	37
	Connections.....	37
	Recording an outgoing message (OGM).....	38
	Multi-line connections (PBX)	38
	External and extension telephones.....	39
	Connecting an external or extension telephone	39
	Operation from external or extension telephones.....	39
	For Fax/Tel mode only.....	39
	Using extension telephones (U.K. only)	39
	Using a non-Brother cordless external handset	40
	Using Remote Codes	41
7	Dialling and storing numbers	42
	How to dial	42
	Manual dialling.....	42
	One Touch dialling.....	42
	Speed dialling	42
	Search	43
	LDAP search	43
	Fax redial.....	43
	Storing numbers	44
	Storing a pause	44
	One Touch and Speed Dial Storage Options	45
	Storing One Touch Dial numbers	46
	Storing Speed Dial numbers.....	48
	Changing or Deleting One Touch and Speed Dial numbers	49
	Tone or Pulse	50
8	Making copies	51
	How to copy.....	51
	Stop copying.....	51
	Copy settings.....	51

9	Printing data from a USB Flash memory drive or digital camera supporting mass storage	52
	Creating a PRN or PostScript® 3™ file for direct printing	52
	Printing data directly from the USB Flash memory drive or digital camera supporting mass storage	53
	Changing the default settings for direct print	54
10	How to print from a computer	55
	Printing a document	55
11	How to scan to a computer	56
	Scanning a document as PDF file using ControlCenter4 (Windows®)	56
	Changing the SCAN key settings	59
	Before scanning	59
	SCAN key settings	59
	Scanning using the SCAN key	61
A	Routine maintenance	62
	Replacing the consumable items	62
	Replacing a Toner cartridge	66
	Replacing the drum unit	72
	Replacing the belt unit	78
	Replacing the waste toner box	84
	Cleaning and Checking the machine	91
	Cleaning the outside of the machine	91
	Cleaning the scanner glass	92
	Cleaning the laser scanner windows	93
	Cleaning the corona wires	97
	Cleaning the drum unit	101
	Cleaning the paper pick-up rollers	107
	Calibration	108
	Auto Registration	109
	Manual Registration	110
	Frequency (Colour Correction)	110
B	Troubleshooting	111
	Error and maintenance messages	111
	Transferring your faxes or Fax Journal report	118
	Document jams	119
	Document is jammed in the top of the ADF unit	119
	Document is jammed under the document cover	119
	Removing small documents jammed in the ADF	120
	Document is jammed at the output tray	120

Paper jams.....	121
Paper is jammed in the MP tray	121
Paper is jammed in paper tray 1 or tray 2	122
Paper is jammed at the back of the machine	123
Paper is jammed inside the machine.....	125
Paper is jammed underneath paper tray 1	129
If you are having difficulty with your machine	132
Setting Dial Tone detection	141
Telephone line interference / VoIP	141
Improving the print quality.....	142
Machine Information	149
Checking the Serial Number.....	149
Reset functions	149
How to reset the machine.....	150

C Menu and features 151

On-screen programming.....	151
Menu table.....	151
MENU button and mode keys.....	151
Menu table.....	152
Entering text	187

D Specifications 188

General.....	188
Document Size	190
Print media.....	191
Fax.....	193
Copy	194
Scanner	195
Printer.....	196
Interfaces.....	197
Direct Print feature.....	198
Scan to USB feature	199
Computer requirements	200
Consumable items	202
Network (LAN).....	203

E Index 204

Table of Contents

(ADVANCED USER'S GUIDE)

The Advanced User's Guide explains the following features and operations.

You can view the Advanced User's Guide on the Documentation CD-ROM in the box.

1 General Setup

Memory storage

Automatic daylight savings time

Ecology features

LCD screen

Mode Timer

2 Security features

Secure Function Lock 2.0

Setting Lock

Restricting dialling

3 Sending a fax

Additional sending options

Additional sending operations

Polling overview

4 Receiving a fax

Remote Fax Options (black & white only)

Additional receiving operations

Polling overview

5 Dialling and storing numbers

Telephone line services

Additional dialling operations

Additional ways to store numbers

6 Printing reports

Fax reports

Reports

7 Making copies

Copy settings

A Routine maintenance

Cleaning and checking the machine

Replacing periodic maintenance parts

Packing and shipping the machine

B Options

Optional paper tray (LT-300CL)

Memory board

C Glossary

D Index

Using the documentation

Thank you for buying a Brother machine! Reading the documentation will help you make the most of your machine.

Symbols and conventions used in the documentation

The following symbols and conventions are used throughout the documentation.

Bold	Bold style identifies keys on the machine control panel or computer screen.
<i>Italics</i>	Italicized style emphasizes an important point or refers you to a related topic.
Courier New	Courier New font identifies the messages shown on the LCD of the machine.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.

IMPORTANT

IMPORTANT indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product functionality.



Electrical Hazard icons alert you to a possible electrical shock.



Hot Surface icons warn you not to touch machine parts that are hot.



Notes tell you how you should respond to a situation that may arise or give tips about how the current operation works with other features.

Accessing the Advanced User's Guide, Software User's Guide and Network User's Guide

This Basic User's Guide does not contain all the information about the machine such as how to use the advanced features Fax, Copy, Printer, Scanner, PC-Fax and Network. When you are ready to learn detailed information about these operations, read the **Advanced User's Guide**, **Software User's Guide**, **Network User's Guide**, and **Network Glossary** that are on the Documentation CD-ROM.

Viewing Documentation


- 1 Turn on your computer. Insert the Documentation CD-ROM into your CD-ROM drive.

 **Note**



(Windows® users) If the screen does not appear automatically, go to **My Computer (Computer)**, double-click the CD-ROM icon, and then double-click **index.html**.

- 2 (Macintosh users) Double-click the Documentation CD-ROM icon, and then double-click **index.html**.

- 3 Click your country.

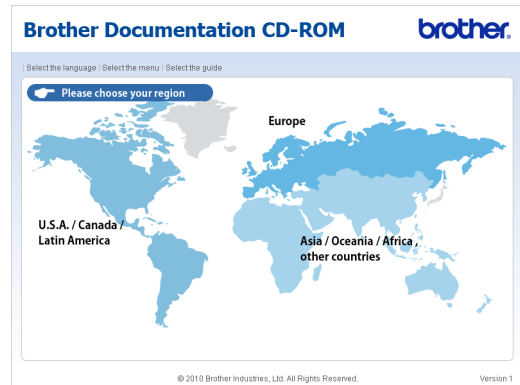

- 4 Point to your language, point to **View Guide**, and then click the guide you want to read.

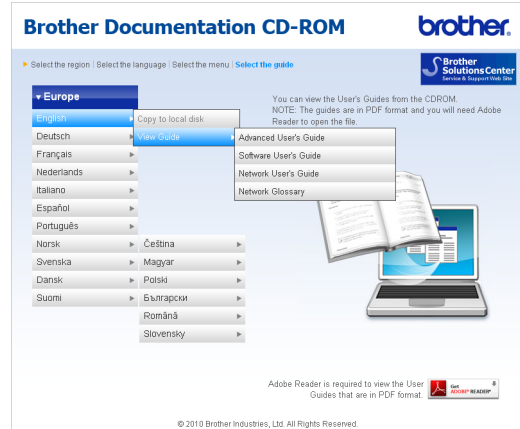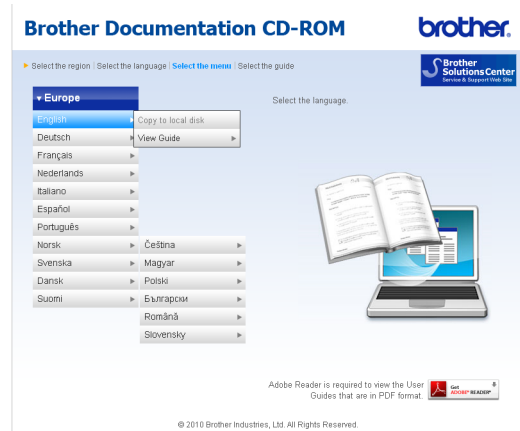

**Note**

- (Windows® users only) Your web browser may display a yellow bar at the top of the page that contains a security warning about Active X controls. For the page to be displayed correctly, you must click on **Allow Blocked Content**, then click on **Yes** in the Security Warning dialog box.
- (Windows® users only) ¹ For faster access, you can copy all user documentation in PDF format to a local folder on your computer. Point to your language, then click **Copy to local disk**.

¹ Microsoft® Internet Explorer® 6.0 or greater.

How to find Scanning instructions

There are several ways you can scan documents. You can find the instructions as follows:

Software User's Guide

- *Scanning*
- *ControlCenter*
- *Network Scanning*

ScanSoft™ PaperPort™ 12SE with OCR How-to-Guides**(Windows®)**

- The complete ScanSoft™ PaperPort™ 12SE with OCR How-to-Guides can be viewed from the Help section in the ScanSoft™ PaperPort™ 12SE application.

Presto! PageManager User's Guide**(Macintosh)****Note**

Presto! PageManager must be downloaded and installed before use. See *Accessing Brother Support (Macintosh)* on page 4 for further instructions.

- The complete Presto! PageManager User's Guide can be viewed from the Help section in the Presto! PageManager application.


How to find Network setup instructions

Your machine can be connected to a wireless or wired network. You can find basic setup instructions in the *Quick Setup Guide*. If your wireless access point or router supports Wi-Fi Protected Setup or AOSS™, you can also follow the steps in the *Quick Setup Guide*. For more information about network setup please see the *Network User's Guide* on the Documentation CD-ROM.

Accessing Brother Support (Windows®)

You can find all the contacts you will need, such as Web support (Brother Solutions Center) on the Installation CD-ROM.

- Click **Brother Support** on the main menu. The following screen will appear:

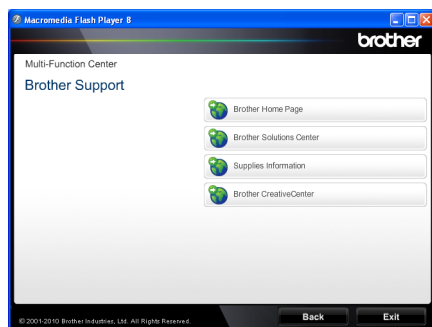


- To access our website (<http://www.brother.com/>), click **Brother Home Page**.
- For the latest news and product support information (<http://solutions.brother.com/>), click **Brother Solutions Center**.
- To visit our website for original Brother Supplies (<http://www.brother.com/original/>), click **Supplies Information**.
- To access the Brother CreativeCenter (<http://www.brother.com/creativecenter/>) for FREE photo projects and printable downloads, click **Brother CreativeCenter**.
- To return to the main page, click **Back** or if you have finished, click **Exit**.

Accessing Brother Support (Macintosh)


You can find all the contacts you will need, such as Web support (Brother Solutions Center) on the Installation CD-ROM.

- Double-click the **Brother Support** icon. The following screen will appear:

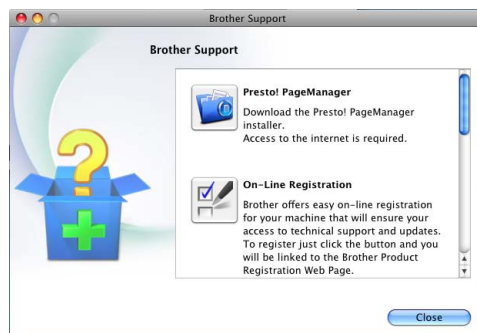

- To download and install Presto! PageManager, click **Presto! PageManager**.
- To register your machine from the Brother Product Register Page (<http://www.brother.com/registration/>), click **On-Line Registration**.
- For the latest news and product support information (<http://solutions.brother.com/>), click **Brother Solutions Center**.
- To visit our website for original Brother Supplies (<http://www.brother.com/original/>), click **Supplies Information**.

Control panel overview

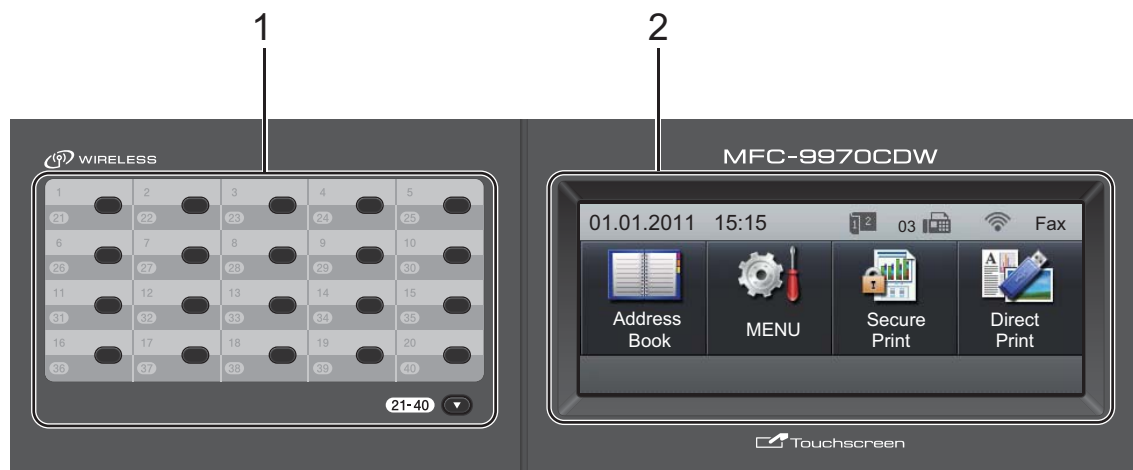

1 One Touch keys

These 20 keys give you instant access to 40 previously stored numbers.

21-40 ▼

The **21-40 ▼** lets you access One Touch numbers 21 to 40 when held down.

2 LCD

This is a Touchscreen LCD. You can access the menus and options by pressing buttons displayed on the screen.

3 Mode keys:



FAX

Puts the machine in Fax mode.



SCAN

Puts the machine in Scan mode.



COPY

Puts the machine in Copy mode.

4 Dial pad

Use these keys to dial telephone and fax numbers and as a keyboard for entering information into the machine.

This function transfers to the touchscreen when you store quick dial numbers.

The **#** key temporarily switches the dialling mode from Pulse to Tone during a telephone call.

5 Stop/Exit

Stops an operation or exits from a menu.

6 Start:

Colour

Lets you start sending faxes or making copies in full colour.

Mono

Lets you start sending faxes or making copies in black & white.



7 FAX keys:

Tel/R

This key is used to have a telephone conversation after picking up the external handset during the F/T fast double-ring. When connected to a PBX, you can use this key to gain access to an outside line, to recall an operator, or to transfer a call to another extension.




Redial/Pause

Redials the last number called. It also inserts a pause when programming quick dial numbers or when dialling a number manually.

8 Print Data / Job Cancel


Cancels a programmed print job and clears it from the machine's memory. To cancel multiple print jobs, hold down this key until the LCD shows Cancel Printing (All).

Also, this key will flash depending on the machine's status.

Machine Status	Description
Ready Mode 	The machine is ready to print, in sleep mode, there is no print data, or the power switch is off.
Receiving Data  Green (blinking)	The machine is either receiving data from the computer, processing data in memory, or printing data.
Data Remaining in Memory  Green	Print data remains in the machine memory.

LCD Touchscreen

The LCD Touchscreen shows the current machine status when the machine is idle.

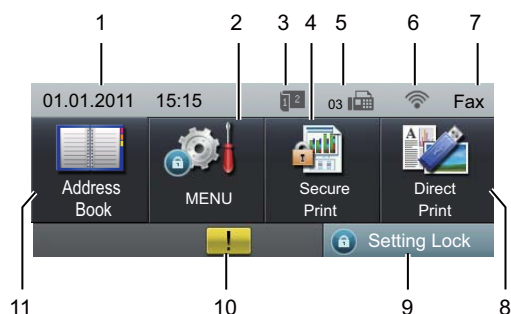

1 Date and Time

Lets you see date and time.

2 MENU

Lets you access the main menu.

3 Fax duplex (2-sided) receiving indicator

Appears when duplex printing is set to on for received faxes.

4 Secure Print

Lets you access the secure print menu.
Active only when the machine has secure print data.

5 Fax in memory

Shows how many received faxes are in the memory.

6 Wireless Status

In FAX mode and SCAN mode a four level indicator shows the current wireless signal strength if you are using a wireless connection.



7 Current Receive Mode

Lets you see the current receive mode.

- Fax (Fax only)
- F/T (Fax/Tel)
- TAD (External TAD)
- Mnl (Manual)

8 Direct Print

Lets you print data from a USB flash memory drive or a digital camera supporting mass storage directly to the machine. (See *Printing data directly from the USB Flash memory drive or digital camera supporting mass storage* on page 53.)

Active only when you insert a USB flash memory drive or digital camera in the machine's USB direct interface.

9 Security indicator

Shows machine's security status. Appears when you turn on Secure Function Lock or Setting Lock.

10 Warning icon

Appears when there is an error or maintenance message; press the Warning icon to view it, and then press **Stop/Exit** to return to the Ready screen.


11 Address Book

Lets you search the number you want to fax/dial/E-mail/I-Fax.

Basic Operations

To operate the Touchscreen use your finger to press the menu or option button directly on the LCD screen.

To display and access all the screen menus or options in a setting, press ▲▼ or ◀▶ to scroll through them.


Press  to return to the previous menu.

! IMPORTANT


DO NOT press the Touchscreen with a sharp object, such as a pen or stylus. It may damage the machine.

The following steps show how to change a setting in the machine. In this example the LCD back light setting is changed from Light to Dark.


- 1 Press MENU.
- 2 Press ▲ or ▼ to display General Setup.
Press General Setup.

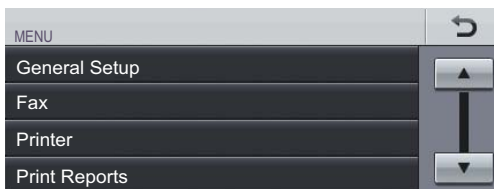


- 3 Press ▲ or ▼ to display LCD Settings.
Press LCD Settings.

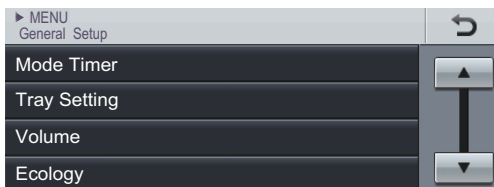

- 4 Press Backlight.

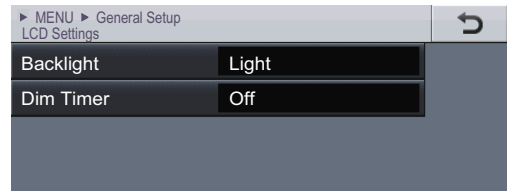

- 5 Press Dark.

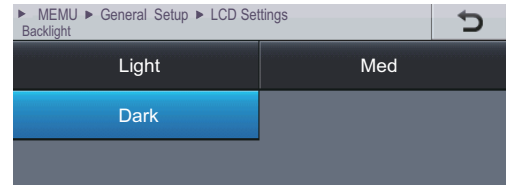

- 6 Press **Stop/Exit**.

Volume settings

Ring volume

You can choose a range of ring volume levels, from **High** to **Off**.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **General Setup**.
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Volume**.
Press **Volume**.
- 4 Press **Ring**.
- 5 Press **Low**, **Med**, **High** or **Off**.
- 6 Press **Stop/Exit**.

Beeper volume

When the beeper is on, the machine will beep when you press a key, make a mistake, or after you send or receive a fax. You can choose a range of volume levels, from **High** to **Off**.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **General Setup**.
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Volume**.
Press **Volume**.
- 4 Press **Beeper**.
- 5 Press **Low**, **Med**, **High** or **Off**.
- 6 Press **Stop/Exit**.

Speaker volume

You can choose a range of speaker volume levels, from **High** to **Off**.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **General Setup**.
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Volume**.
Press **Volume**.
- 4 Press **Speaker**.
- 5 Press **Low**, **Med**, **High** or **Off**.
- 6 Press **Stop/Exit**.

Loading paper and print media

The machine can feed paper from the standard paper tray, optional lower tray or multi-purpose tray.

When you put paper into the paper tray, note the following:


- If your application software supports paper size selection on the print menu, you can select it through the software. If your application software does not support it, you can set the paper size in the printer driver or by pressing the buttons on the Touchscreen.

Loading paper in the standard paper tray

You can load up to 250 sheets for Tray 1 and 500 sheets for the optional lower tray (Tray 2). Paper can be loaded up to the maximum paper mark (▼▼▼) on the sliding paper width guide. (For recommended paper to use, see *Paper capacity of the paper trays* on page 22.)


Printing on plain paper, thin paper or recycled paper from the standard paper tray (Tray 1)

- 1 Pull the paper tray completely out of the machine.

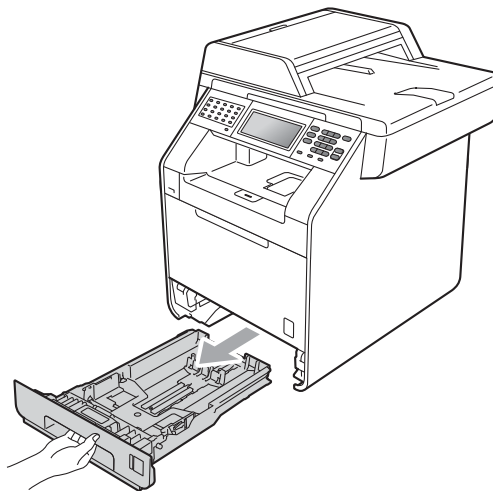


⚠ WARNING


DO NOT touch the shaded parts shown in the illustration. These rollers may be rotating at high speed.

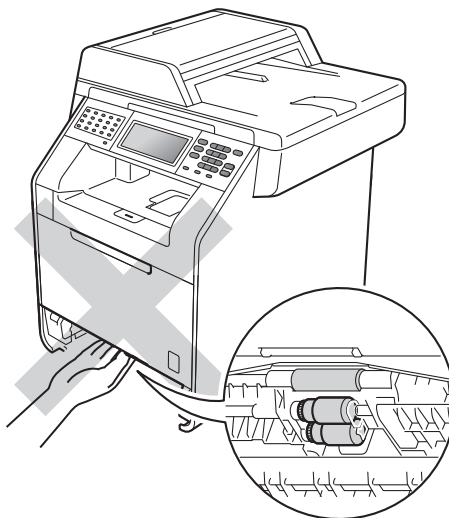

- 2 While pressing the green paper-guide release lever (1), slide the paper guides to fit the paper size you are loading in the tray. Make sure that the guides are firmly in the slots.

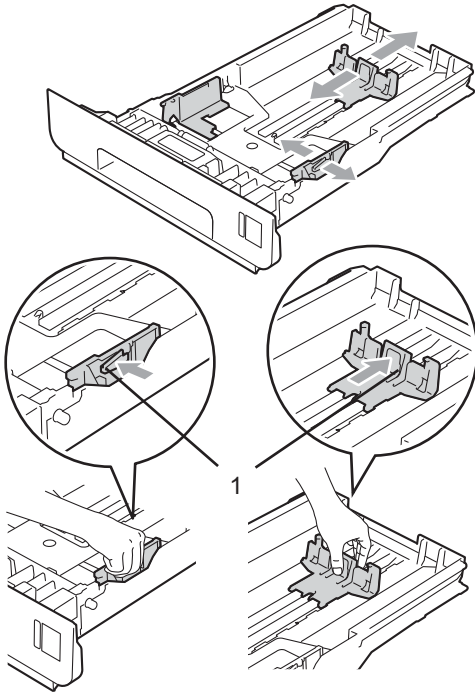

- 3 Fan the stack of paper well to avoid paper jams and misfeeds.

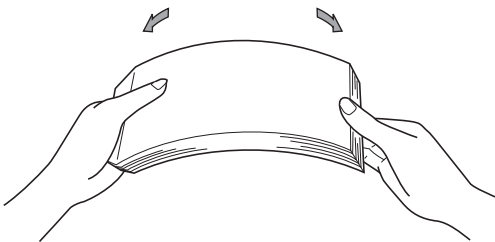


- 4 Put paper in the tray and make sure:

- The paper is below the maximum paper mark (▼▼▼) (1).

Overfilling the paper tray will cause paper jams.


- The side to be printed on must be *face down*.

- The paper guides touch the sides of the paper so it will feed properly.

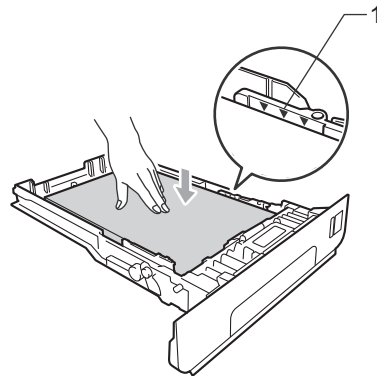

- 5 Put the paper tray firmly back in the machine. Make sure that it is completely inserted into the machine.

- 6 Lift up the support flap (1) to prevent paper from sliding off the *face-down* output tray or remove each page as soon as it comes out of the machine.

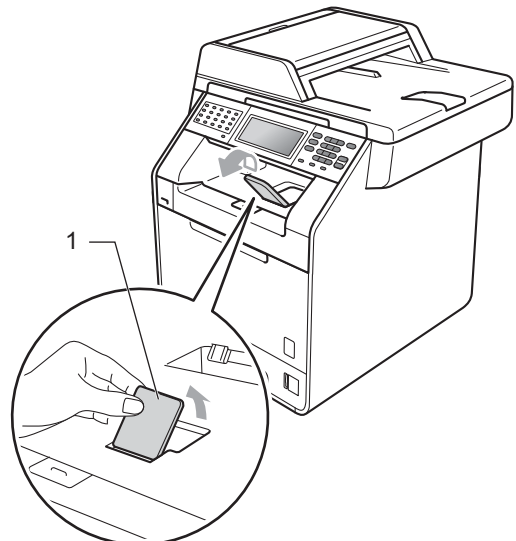


Loading paper in the multi-purpose tray (MP tray)


You can load up to 3 envelopes or special print media in the MP tray or up to 50 sheets of plain paper. Use this tray to print or copy on thick paper, bond paper, glossy paper, labels, or envelopes. (For recommended paper to use, see *Paper capacity of the paper trays* on page 22.)

Printing on plain paper, bond paper, labels or glossy paper from the MP tray


- 1 Open the MP tray and lower it gently.

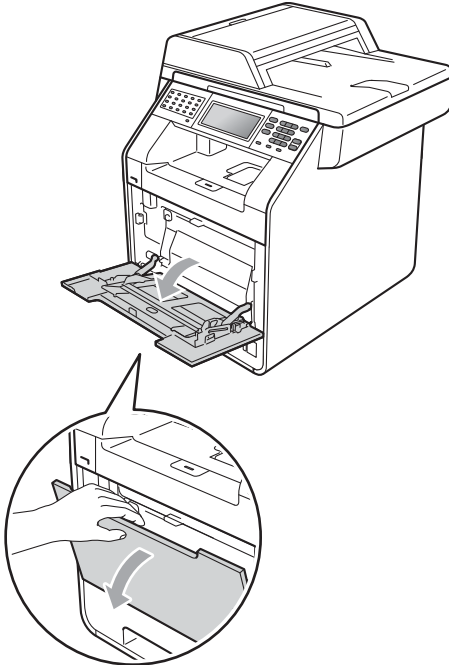

- 2 Pull out the MP tray support and unfold the flap (1).

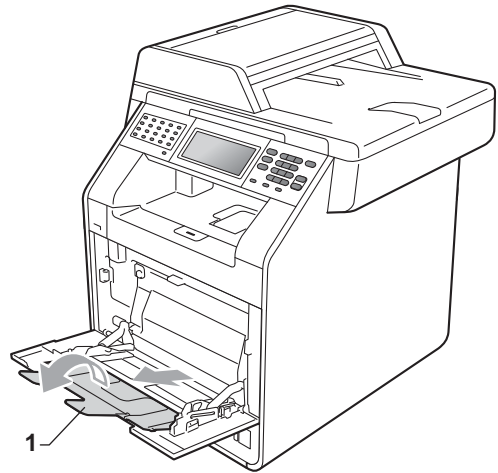

- 3 Put paper in the MP tray and make sure:
- The paper stays under the maximum paper mark (1).
 - The top of paper edge is positioned between the arrows (2).
 - The side to be printed on must be *face up* with the leading edge (top of the paper) in first.

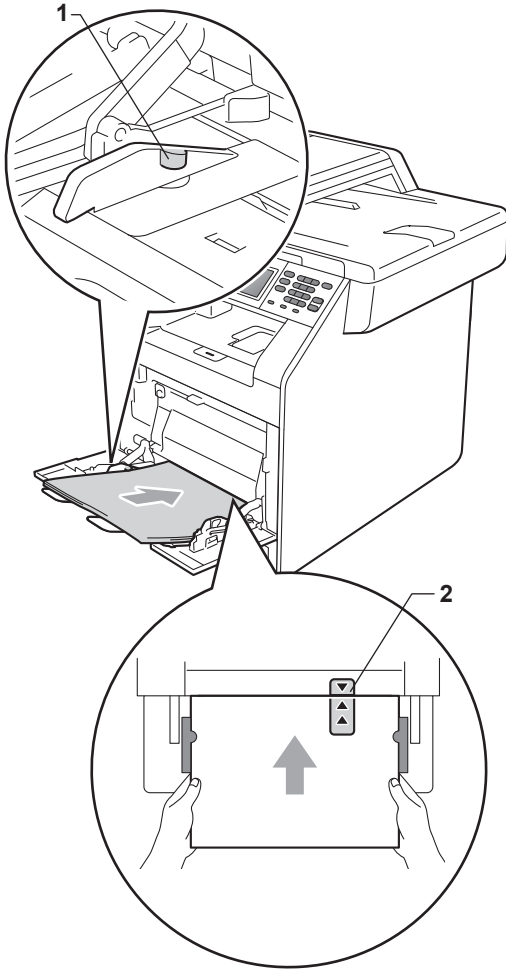

- 4 Lift up the support flap to prevent paper from sliding off the *face-down* output tray, or remove each page as soon as it comes out of the machine.

 


Note


When you are using glossy paper, put only one sheet at a time in the MP tray to avoid a paper jam.

Printing on envelopes and thick paper from the MP tray

Before loading, press the corners and sides of the envelopes to make them as flat as possible.



- 1 Open the MP tray and lower it gently.

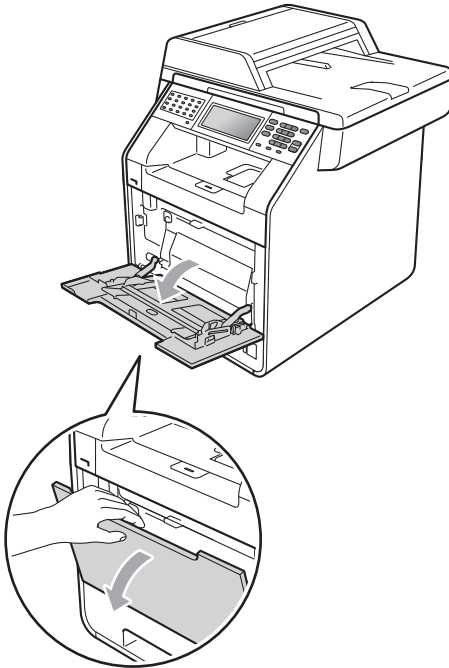


- 2 Pull out the MP tray support and unfold the flap (1).




- 3 Lift up the support flap to prevent envelopes or thick sheets of paper from sliding off the *face-down* output tray. If the support flap is closed you should remove each envelope as soon as it comes out of the machine.




- 4 Put up to 3 envelopes or up to 25 sheets of thick paper (163 g/m²) in the MP tray. If you add more envelopes or paper it may cause a jam. Make sure:
 - The top edge of the envelope is positioned between the arrows (1).
 - The side to be printed on must be *face up*.

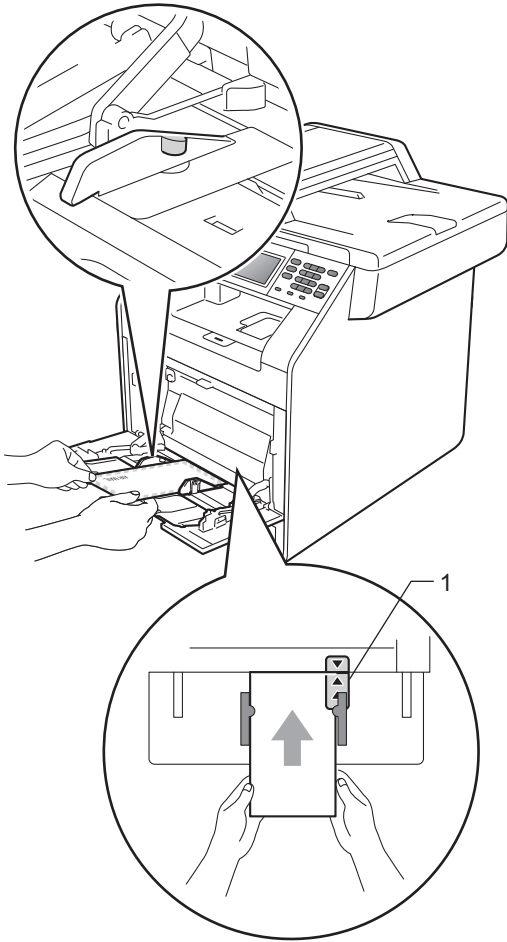

- 5 Open the back cover (*Face-up* output tray).

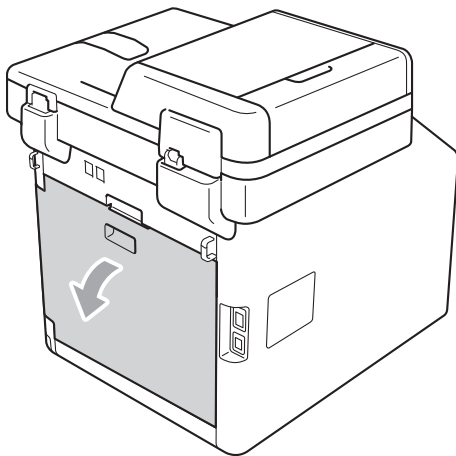

- 6 Pull down the two grey levers, one on the left-hand side and one on the right-hand side, to the envelope position as shown in the illustration below.

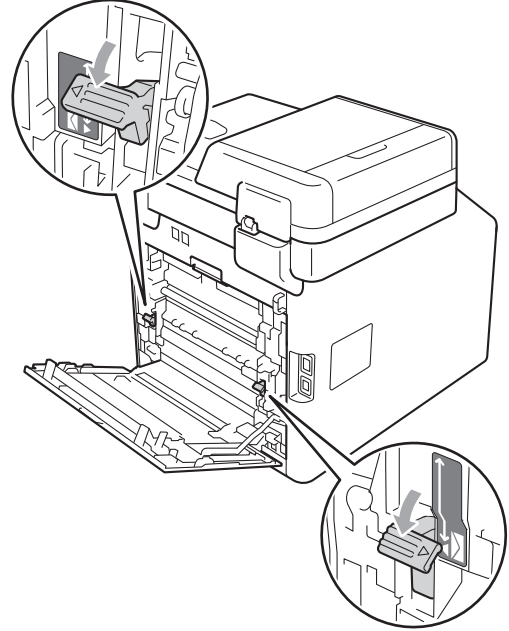

- 7 Close the back cover.
8 Send the print data to the machine.
9 When you have finished printing, open the back cover and reset the two grey levers which were pulled down in step 6 back to their original positions.




Note

- Remove each printed envelope immediately to prevent a paper jam.
- If your thick paper curls during printing, put only one sheet at a time in the MP tray and open the back cover (*face-up* output tray) to let the printed pages exit to the *face-up* output tray.

Unscannable and unprintable areas

The figures below show maximum unscannable and unprintable areas. The unscannable and unprintable areas may vary depending on the paper size or settings in the application you are using.

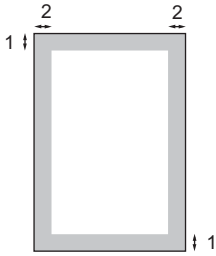

Usage	Document Size	Top (1) Bottom (1)	Left (2) Right (2)
Fax (Sending)	Letter	3 mm	4 mm
	A4	3 mm	3 mm
Copy* * a single copy or a 1 in 1 copy	Letter	4 mm	4 mm
	A4	4 mm	4 mm
Scan	Letter	3 mm	3 mm
	A4	3 mm	3 mm
Print	Letter	4 mm	4 mm
	A4	4 mm	4 mm

Paper settings

Paper Size and Type

When you change the size of paper in the tray, you will also need to change the setting for paper size at the same time so your machine can fit the document or an incoming fax on the page.

You can use the following sizes of paper for printing copies: A4, Letter, Legal, Executive, A5, A5 L, A6, B5, B6 and Folio and the following sizes for printing faxes: A4, Letter, Legal or Folio (8.5 in. × 13 in.).

Following on the paper size setting, you can set up the machine for the type of paper you are using. This will give you the best print quality.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **General Setup**.
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Tray Setting**.
Press **Tray Setting**.
- 4 Do one of the following:
 - To set the paper type for the MP Tray press **▲** or **▼** to display **MP Tray**.
Press **MP Tray**
 - To set the paper type for **Tray#1** press **▲** or **▼** to display **Tray#1**.
Press **Tray#1**
 - To set the paper type for **Tray#2** press **▲** or **▼** to display **Tray#2**.
Press **Tray#2** ¹ if you installed the optional tray.

¹ The **Tray#2** button will be selectable if the optional tray is installed.

- 5 Press **◀** or **▶** to display the paper size options.
Press **A4, Letter, Legal, Executive, A5, A5 L, A6, B5, B6, Folio** or **Any**.



Note

- The **Any** option appears only when you choose the **MP tray**.
- If you choose **Any** for the **MP Tray Paper Size**: You must choose **MP Only** for the **Tray Use** setting. You cannot use the **Any Paper Size** selection for the **MP tray** when making **N in 1** copies. You must choose one of the other available **Paper Size** selections for the **MP tray**.
- **A5 L** and **A6** size are not available for **Tray#2**.

- 6 Press **Thin, Plain, Thick, Thicker, Recycled Paper** or **Glossy**.

- 7 Press **Stop/Exit**.



Note

You can choose **Glossy** for the **MP Tray**.

Tray Use in copy mode

You can change the priority tray that the machine will use for printing copies.

When you choose **Tray#1 Only**, **MP Only** or **Tray#2 Only**¹, the machine pulls the paper only from that tray. If the selected tray is out of paper, **No Paper** will appear on the LCD. Insert the paper in the empty tray.

To change the tray setting follow the instructions below:

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **General Setup**.
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Tray Setting**.
Press **Tray Setting**.
- 4 Press **▲** or **▼** to display **Tray Use:Copy**.
Press **Tray Use:Copy**.
- 5 Press **Tray#1 Only**, **Tray#2 Only**¹, **MP Only**, **MP>T1>T2**¹ or **T1>T2**¹>**MP**.
¹ The **Tray#2 Only** or **T2** appears only if the optional tray is installed.
- 6 Press **Stop/Exit**.



Note

- When loading the documents in the ADF and **MP>T1>T2** or **T1>T2>MP** is selected, the machine looks for the tray with the most suitable paper and pulls paper from that tray. If no tray has suitable paper, the machine pulls paper from the higher priority tray.
- When using the scanner glass, your document is copied from the higher priority tray even if more suitable paper is in another paper tray.

Tray Use in fax mode

You can change the default tray that the machine will use for printing received faxes.

When you choose **Tray#1 Only**, **MP Only** or **Tray#2 Only**¹, the machine pulls the paper only from that tray. If the selected tray is out of paper, **No Paper** will appear on the LCD. Insert the paper in the empty tray.

When you choose **T1>T2**¹>**MP**, the machine pulls paper from **Tray #1** until it is empty, then from **Tray #2**, and then from the **MP** tray.

When you choose **MP>T1>T2**¹, the machine pulls paper from the **MP** tray until it is empty, then from **Tray #1**, and then from **Tray #2**.



Note

- You can use four sizes of paper for printing faxes: **A4**, **Letter**, **Legal** or **Folio**. When a suitable size is not in any of the trays received faxes will be stored in the machine's memory and **Size mismatch** will appear on the LCD. (For details, see *Error and maintenance messages* on page 111.)
- If the tray is out of paper and received faxes are in the machine's memory, **No Paper** will appear on the LCD. Insert paper in the empty tray.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **General Setup**.
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Tray Setting**.
Press **Tray Setting**.
- 4 Press **▲** or **▼** to display **Tray Use:Fax**.
Press **Tray Use:Fax**.
- 5 Press **Tray#1 Only**, **Tray#2 Only**¹, **MP Only**, **MP>T1>T2**¹ or **T1>T2**¹>**MP**.
¹ The **Tray#2 Only** or **T2** appears only if the optional tray is installed.
- 6 Press **Stop/Exit**.

Tray Use in print mode

You can change the default tray the machine will use for printing from your computer.

- 1 Press MENU.
- 2 Press ▲ or ▼ to display General Setup.
Press General Setup.
- 3 Press ▲ or ▼ to display Tray Setting.
Press Tray Setting.
- 4 Press ▲ or ▼ to display Tray Use:Print.
Press Tray Use:Print.
- 5 Press Tray#1 Only, Tray#2 Only¹, MP Only, MP>T1>T2¹ or T1>T2¹>MP.
 - ¹ The Tray#2 Only or T2 appears only if the optional tray is installed.
- 6 Press **Stop/Exit**.

Acceptable paper and other print media

Print quality may vary according to the type of paper you are using.

You can use the following types of print media: thin paper, plain paper, thick paper, bond paper, recycled paper, glossy paper, labels or envelopes.

For best results, follow the instructions below:

- DO NOT put different types of paper in the paper tray at the same time because it may cause paper jams or misfeeds.
- For correct printing, you must choose the same paper size from your software application as the paper in the tray.
- Avoid touching the printed surface of the paper immediately after printing.
- Before you buy a lot of paper, test a small quantity to make sure the paper is suitable.

Recommended paper and print media

Paper Type	Item
Plain paper	Xerox Premier TCF 80 g/m ²
	Xerox Business 80 g/m ²
Recycled Paper	Xerox Recycled Supreme 80 g/m ²
Labels	Avery laser label L7163
Envelope	Antalis River series (DL)
Glossy Paper	International Paper Rey Color Laser Gloss 140g/m ² A4

Type and size of paper

The machine feeds paper from the installed standard paper tray, multi-purpose tray or optional lower tray.

The name for the paper trays in the printer driver in this Guide are as follows:

Tray and optional unit	Name
Standard paper tray	Tray 1
Multi-purpose tray	MP Tray
Optional lower tray	Tray 2

Paper capacity of the paper trays

	Paper size	Paper types	No. of sheets
Paper Tray (Tray 1)	A4, Letter, Legal, B5, Executive, A5, A5 (Long Edge), A6, B6, Folio ¹	Plain paper, Thin paper and Recycled paper	up to 250 [80 g/m ²]
Multi-purpose Tray (MP Tray)	Width: 69.8 to 216 mm Length: 116 to 406.4 mm	Plain paper, Thin paper, Thick paper, Thicker paper, Bond paper, Recycled paper, Envelopes, Labels and Glossy paper	50 sheets [80 g/m ²] 3 Envelopes 1 Glossy paper
Optional Lower Tray (Tray 2)	A4, Letter, Legal, B5, Executive, A5, B6, Folio ¹	Plain paper, Thin paper and Recycled paper	up to 500 [80 g/m ²]

¹ Folio size is 8.5 in. × 13 in. (215.9 mm x 330.2 mm)

Recommended paper specifications

The following paper specifications are suitable for this machine.

Basis weight	75-90 g/m ²
Thickness	80-110 μm
Roughness	Higher than 20 sec.
Stiffness	90-150 cm ³ /100
Grain direction	Long grain
Volume resistivity	10e ⁹ -10e ¹¹ ohm
Surface resistivity	10e ⁹ -10e ¹² ohm-cm
Filler	CaCO ₃ (Neutral)
Ash content	Below 23 wt%
Brightness	Higher than 80%
Opacity	Higher than 85%

- Use paper made for plain paper copying.
- Use paper that is 75 to 90 g/m².
- Use long grain paper with a neutral Ph value, and a moisture content of approx. 5%.
- This machine can use recycled paper that meets DIN 19309 specifications.

Handling and using special paper

The machine is designed to work well with most types of xerographic and bond paper. However, some paper variables may have an effect on print quality or handling reliability. Always test samples of paper before purchasing to ensure desirable performance. Store paper in its original packaging and keep it sealed. Keep the paper flat and away from moisture, direct sunlight and heat.

Some important guidelines when selecting paper are:

- DO NOT use inkjet paper because it may cause a paper jam or damage your machine.
- Preprinted paper must use ink that can withstand the temperature of the machine's fusing process 200 degrees centigrade (392 degrees Fahrenheit).
- If you use bond paper, paper having a rough surface or paper that is wrinkled or creased, the paper may exhibit degraded performance.
- When you are using glossy paper, put only one sheet at a time in the MP tray to avoid a paper jam.


Types of paper to avoid

! IMPORTANT

Some types of paper may not perform well or may cause damage to your machine.

DO NOT use paper:

- that is highly textured
- that is extremely smooth or shiny
- that is curled or warped

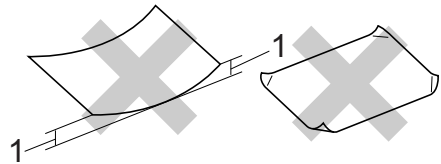

1 A curl of 2 mm or greater may cause jams to occur.

- that is coated or has a chemical finish
- that is damaged, creased or folded
- that exceeds the recommended weight specification in this guide
- with tabs and staples
- with letterheads using low temperature dyes or thermography
- that is multipart or carbonless
- that is designed for inkjet printing

If you use any of the types of paper listed, they may damage your machine. This damage is not covered under any Brother warranty or service agreement.

Envelopes

Most envelopes designed for laser printers will be suitable for your machine. However, some envelopes may have feed and print-quality problems because of the way they have been made. A suitable envelope should have edges with straight, well-creased folds and the leading edge should not be thicker than two sheets of paper. The envelope should lie flat and not be of baggy or flimsy construction. You should buy quality envelopes from a supplier who understands that you will be using the envelopes in a laser machine.


We recommend that you print a test envelope to make sure the print results are what you want.

Types of envelopes to avoid


! IMPORTANT

DO NOT use envelopes:


- that are damaged, curled, wrinkled or an unusual shape
 - that are extremely shiny or textured
 - with clasps, staples, snaps or tie strings
 - with self-adhesive closures
 - that are of a baggy construction
 - that are not sharply creased
 - that are embossed (have raised writing on them)
 - that were previously printed by a laser machine
 - that are pre-printed on the inside
 - that cannot be arranged neatly when stacked
 - that are made of paper that weighs more than the paper weight specifications for the machine
 - with edges that are not straight or consistently square
- with windows, holes, cut-outs or perforations
 - with glue on surface as shown in figure below

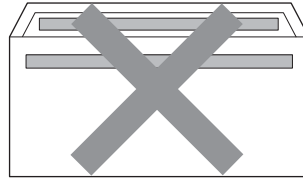


- with double flaps as shown in figure below

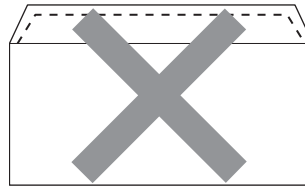

- with sealing flaps that are not folded down when purchased
- with sealing flaps as shown in figure below

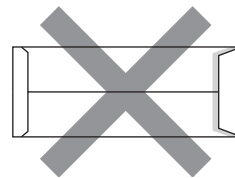

- with each side folded as shown in figure below

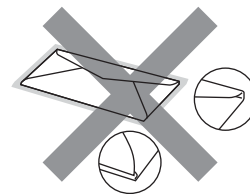

If you use any of the types of envelopes listed above, they may damage your machine. This damage may not be covered under any Brother warranty or service agreement.

 
Labels

The machine will print on most types of labels designed for use with a laser machine. Labels should have an adhesive that is acrylic-based since this material is more stable at the high temperatures in the fuser unit. Adhesives should not come in contact with any part of the machine, because the label stock may stick to the drum unit or rollers and cause jams and print quality problems. No adhesive should be exposed between the labels. Labels should be arranged so that they cover the entire length and width of the sheet. Using labels with spaces may result in labels peeling off and causing serious jams or print problems.

All labels used in this machine must be able to withstand a temperature of 200 degrees centigrade (392 degrees Fahrenheit) for a period of 0.1 seconds.

Types of labels to avoid

Do not use labels that are damaged, curled, wrinkled or an unusual shape.



! IMPORTANT

- DO NOT feed part used label sheets. The exposed carrier sheet will damage your machine.
- Label sheets should not exceed the paper weight specifications described in this User's Guide. Labels exceeding this specification may not feed or print correctly and may cause damage to your machine.
- DO NOT reuse or insert labels that have previously been used or are missing a few labels on the sheet.

3

Loading documents

How to load documents

You can send a fax, make copies, and scan from the ADF (Automatic Document Feeder) and the scanner glass.

Using the automatic document feeder (ADF)

The ADF can hold up to 50 pages and feeds each sheet individually. Use standard 80 g/m² paper and always fan the pages before putting them in the ADF.

Document Sizes Supported

Length:	147.3 to 356.0 mm
Width:	147.3 to 215.9 mm
Weight:	64 to 90 g/m ²

How to load documents

! IMPORTANT


- DO NOT leave thick documents on the scanner glass. If you do this, the ADF may jam.
- DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper-clipped, pasted or taped.
- DO NOT use cardboard, newspaper or fabric.
- To avoid damaging your machine while using the ADF, DO NOT pull on the document while it is feeding.




Note

- To scan documents that are not suitable for the ADF, see *Using the scanner glass* on page 27.
- It is easier to use the ADF if you are loading a multiple page document.
- Make sure documents with correction fluid or written with ink are completely dry.

- 1 Unfold the ADF document support (1). Lift up and unfold the ADF document output support flap (2).

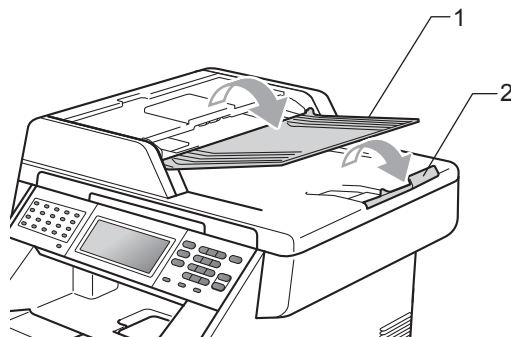

- 2 Fan the pages well.
- 3 Place your document *face up top edge first* in the ADF until the LCD display message changes and you feel it touch the feed rollers.
- 4 Adjust the paper guides (1) to fit the width of your document.

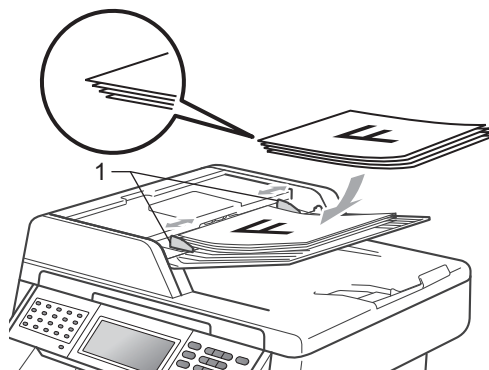

**Note**

- To avoid damaging your machine while using the ADF, DO NOT pull on the document while it is feeding.
- To scan non-standard documents, see *Using the scanner glass* on page 27.

Using the scanner glass

You can use the scanner glass to fax, copy or scan pages of a book one page at a time.

Document Sizes Supported

Length:	Up to 355.6 mm
Width:	Up to 215.9 mm
Weight:	Up to 2.0 kg


How to load documents

**Note**

To use the scanner glass, the ADF must be empty.

- 1 Lift the document cover.

- 2 Using the document guidelines on the left and top, place the document *face down* in the upper left corner of the scanner glass.

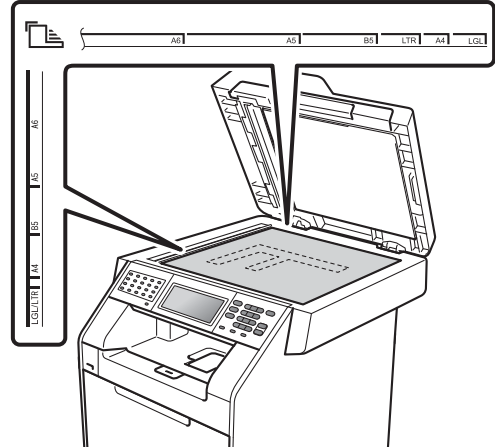

- 3 Close the document cover.

! IMPORTANT


If the document is a book or is thick, do not slam or press on the cover.


4

Sending a fax


How to send a fax

The following steps show how to send a fax.

- 1 When you want to send a fax, or change fax send or receive settings, press the  (FAX) key to illuminate it in blue.

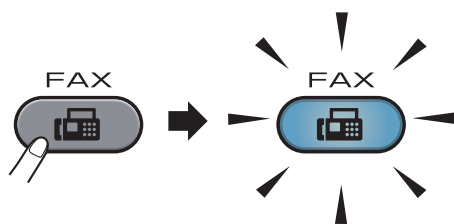

■ The LCD shows:

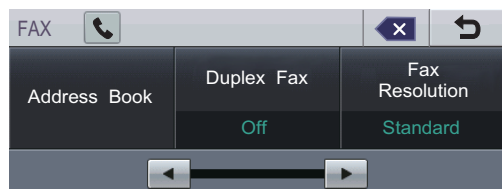

- 2 Do one of the following to load your document:
 - Place the document *face up* in the ADF. (See *Using the automatic document feeder (ADF)* on page 26.)
 - Load your document *face down* on the scanner glass. (See *Using the scanner glass* on page 27.)



Note

To send colour faxes with multiple pages use the ADF.

- 3 Set the scanner glass size, fax resolution or contrast if you want to change them.



Note

For more advanced fax sending operations and settings, see *Sending a fax* in *Chapter 3* of the *Advanced User's Guide*:

- Broadcasting
- Duplex Fax (2-sided fax layout)
- Delayed Fax
- Batch TX
- Real Time TX
- Polled TX
- Overseas Mode
- Fax Resolution
- Contrast
- Glass ScanSize
- Coverpage Setup
- Coverpage Note
- Set New Default
- Factory Reset

- 4 Choose one of the options below:
 - If you want to send a single-sided document, go to step 5.
 - If you want to send a 2-sided document, you need to choose the duplex scanning format of your 2-sided document.
Press **Duplex Fax** and choose
DuplexScan : LongEdge or
DuplexScan : ShortEdge.



Note

You can send 2-sided documents from the ADF.

- 5 Enter the fax number using the dial pad. You can also enter the fax number on the LCD by pressing **Address Book** and **Send a fax**, or you can press an **One Touch** key on the machine's control panel. (For details, see *How to dial* on page 42.)
- 6 Press **Mono Start** or **Colour Start**.

Faxing from the ADF

- The machine starts scanning the document.

Faxing from the scanner glass

If **Real Time TX** is On, the machine will send the document without asking if there are additional pages to scan.

- If you press **Mono Start**, the machine starts scanning the first page.

Do one of the following:

- To send a single page, press **No** (or press **Mono Start** again). The machine starts sending the document.
- To send more than one page, press **Yes** and place the next page on the scanner glass. Press **Mono Start**. The machine starts scanning the page. (Repeat this step for each additional page.)
- If you press **Colour Start** and **Yes (Color fax)**, the machine starts sending the document.




Note

To cancel, press **Stop/Exit**.

Faxing Letter/Legal/Folio size documents from the scanner glass

When faxing Letter/Legal/Folio size documents, you will need to set the scan glass size to **Letter** or **Legal/Folio**; otherwise, a portion of your faxes will be missing.

- 1 Press  (**FAX**).
- 2 Press **◀** or **▶** to display **Glass ScanSize**. Press **Glass ScanSize**.
- 3 Press **Letter** or **Legal/Folio**.
- 4 Press **Stop/Exit**.



Note

You can save the setting you use most often by setting it as the default. (See *Setting your changes as the new default* in Chapter 3 of the *Advanced User's Guide*.)

Colour fax transmission

Your machine can send a colour fax to machines that support this feature. Colour faxes cannot be stored in the machine's memory. When you send a colour fax, the machine will send it in real time (even if Real Time TX is set to `Off`).

Cancelling a fax in progress

Press **Stop/Exit** to cancel the fax. If you press **Stop/Exit** while the machine is dialling or sending, the LCD will show `Cancel Job?`.

Press `Yes` to cancel the fax.

Transmission verification report

You can use the Transmission Verification Report as proof that you sent a fax. This report lists the receiving party's name or fax number, the time and date of transmission, duration of transmission, number of pages sent, and whether or not the transmission was successful.

There are several settings available for the Transmission Verification Report:

- `On`: Prints a report after every fax you send.
- `On+Image`: Prints a report after every fax you send. A portion of the fax's first page appears on the report.
- `Off`: Prints a report if your fax is unsuccessful due to a transmission error. `Off` is the default setting.
- `Off+Image`: Prints a report if your fax is unsuccessful due to a transmission error. A portion of the fax's first page appears on the report.

- 1 Press `MENU`.
- 2 Press `▲` or `▼` to display `Fax`. Press `Fax`.
- 3 Press `▲` or `▼` to display `Report Setting`. Press `Report Setting`.
- 4 Press `XMIT Report`.
- 5 Press `On`, `On+Image`, `Off` or `Off+Image`.
- 6 Press **Stop/Exit**.

**Note**

- If you choose `On+Image` or `Off+Image`, the image will only appear on the Transmission Verification Report if Real Time Transmission is set to `Off`. (See *Real Time Transmission* in Chapter 3 of the *Advanced User's Guide*.)
 - If your transmission is successful, `OK` will appear next to `RESULT` on the Transmission Verification Report. If transmission is not successful, `ERROR` will appear next to `RESULT`.
-

5


Receiving a fax

Receive modes

You must choose a receive mode depending on the external devices and telephone services you have on your line.

Choosing the receive mode

By default, your machine will automatically receive any faxes that are sent to it. The diagrams below will help you choose the correct mode. (For more detailed information about the receive modes, see *Using receive modes* on page 33.)

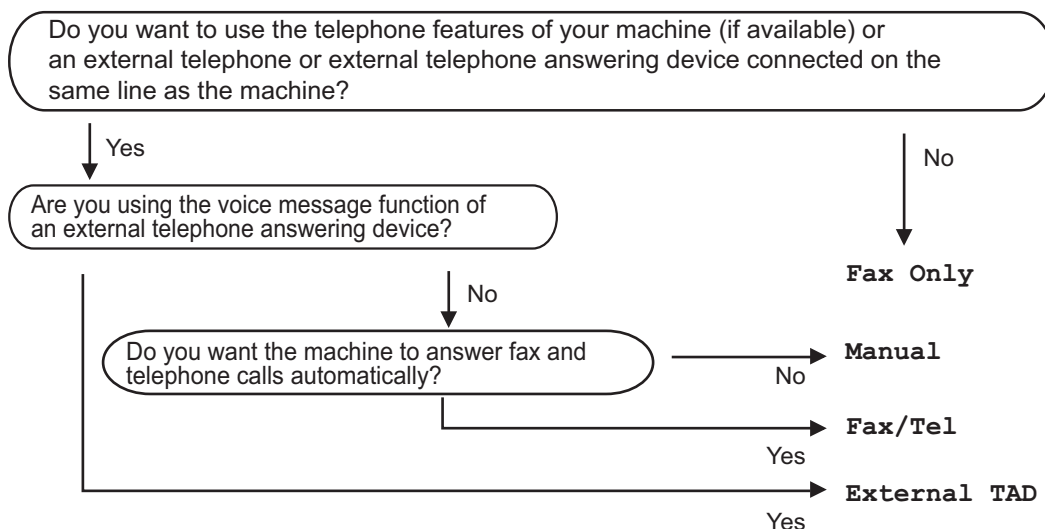

To set the receive mode follow the instructions below.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Initial Setup**. Press **Initial Setup**.
- 3 Press **▲** or **▼** to display **Receive Mode**. Press **Receive Mode**.
- 4 Press **Fax Only**, **Fax/Tel**, **External TAD** or **Manual**.
- 5 Press **Stop/Exit**.

The LCD will display the current receive mode.

Using receive modes

Some receive modes answer automatically (**Fax Only** and **Fax/Tel**). You may want to change the *Ring Delay* before using these modes. (See *Ring Delay* on page 34.)

Fax Only

Fax Only mode will automatically answer every call as a fax.

Fax/Tel

Fax/Tel mode helps you automatically manage incoming calls, by recognising whether they are fax or voice calls and dealing with them in one of the following ways:

- Faxes will be automatically received.
- Voice calls will start the *F/T* ring to tell you to pick up the line. The *F/T* ring is a fast double-ring made by your machine.

(Also see *F/T Ring Time (Fax/Tel mode only)* on page 34 and *Ring Delay* on page 34.)

Manual

Manual mode turns off all automatic answering functions unless you are using the **BT Call Sign**¹ feature.

¹ **BT Call Sign** is for U.K. only.

To receive a fax in **Manual** mode lift the handset of the external telephone. When you hear fax tones (short repeating beeps), press **Mono Start** or **Colour Start**, and choose **Receive** to receive the fax. You can also use the **Fax Detect** feature to receive faxes by lifting a handset on the same line as the machine.

(Also see *Fax Detect* on page 35.)

External TAD

External TAD mode lets an external answering device manage your incoming calls. Incoming calls will be dealt with in the following ways:

- Faxes will be automatically received.
- Voice callers can record a message on the external TAD.

(For more information see *Connecting an external TAD* on page 37.)

Receive Mode settings

Ring Delay

The Ring Delay setting sets the number of times the machine rings before it answers in Fax Only and Fax/Tel modes.

If you have external or extension telephones on the same line as the machine, choose the maximum number of rings. (See *Operation from external or extension telephones* on page 39 and *Fax Detect* on page 35.)

- 1 Press MENU.
- 2 Press ▲ or ▼ to display Fax.
Press Fax.
- 3 Press ▲ or ▼ to display Setup Receive.
Press Setup Receive.
- 4 Press ▲ or ▼ to display Ring Delay.
Press Ring Delay.
- 5 Press the button on the LCD to choose how many times the line rings before the machine answers.
- 6 Press **Stop/Exit**.

F/T Ring Time (Fax/Tel mode only)

When somebody calls your machine, you and your caller will hear the normal telephone ring sound. The number of rings is set by the Ring Delay setting.

If the call is a fax, then your machine will receive it; however, if it is a voice call the machine will sound the F/T ring (a fast double-ring) for the time you have set in the F/T Ring Time setting. If you hear the F/T ring it means that you have a voice caller on the line.

Because the F/T ring is made by the machine, extension and external telephones will *not* ring; however, you can still answer the call on any telephone. (For more information see *Using Remote Codes* on page 41.)

- 1 Press MENU.
- 2 Press ▲ or ▼ to display Fax.
Press Fax.
- 3 Press ▲ or ▼ to display Setup Receive.
Press Setup Receive.
- 4 Press ▲ or ▼ to display F/T Ring Time.
Press F/T Ring Time.
- 5 Press how long the machine will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds).
- 6 Press **Stop/Exit**.

Fax Detect

If Fax Detect is On:

The machine can receive a fax automatically, even if you answer the call. When you see *Receiving* on the LCD or hear a click on the phone line through the handset you are using, just replace the handset. Your machine will do the rest.

If Fax Detect is Off:

If you are at the machine and answer a fax call first by lifting the external handset, then press **Mono Start** or **Colour Start**, and then press *Receive* to receive the Fax.

If you answered at an extension telephone press ***51**. (See *Operation from external or extension telephones* on page 39.)



Note

- If this feature is set to *On*, but your machine does not connect a fax call when you lift an extension telephone handset, press the fax receive code ***51**.
- If you send faxes from a computer on the same telephone line and the machine intercepts them, set Fax Detect to *Off*.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display *Fax*.
Press *Fax*.
- 3 Press **▲** or **▼** to display
Setup Receive.
Press *Setup Receive*.
- 4 Press **▲** or **▼** to display *Fax Detect*.
Press *Fax Detect*.
- 5 Press *On* or *Off*.
- 6 Press **Stop/Exit**.

Telephone line services

Setting the telephone line type

If you are connecting the machine to a line that features a PBX or ISDN to send and receive faxes, it is necessary to change the Telephone Line Type accordingly by completing the following steps. If you are using a line that features a PBX, you can set your machine so that it always accesses the outside line (using the prefix you entered), or accesses the outside line when **Tel/R** is pressed.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Initial Setup**.
Press **Initial Setup**.
- 3 Press **▲** or **▼** to display **Phone Line Set**.
Press **Phone Line Set**.
- 4 Press **PBX, ISDN (or Normal)**.
- 5 Do one of the following:
 - If you chose **ISDN or Normal**, go to step 7.
 - If you chose **PBX**, go to step 6.
- 6 Press **On** or **Always**.



Note

- If you choose **On**, pressing **Tel/R** will let you access an outside line.
- If you choose **Always**, you can access an outside line without pressing **Tel/R**.

- 7 Do one of the following:
 - If you want to change the current prefix number, press **Dial Prefix** and go to step 8.
 - If you do not want to change the current prefix number, go to step 9.

- 8 Enter the prefix number (up to 5 digits) on the dial pad.
Press **OK**.



Note

You can use the numbers and symbols 0 to 9, #, * and !. (You cannot use ! with any other numbers and symbols.)

- 9 Press **Stop/Exit**.

PBX and TRANSFER

The machine is initially set to **Normal**, which lets the machine connect to a standard PSTN (Public Switched Telephone Network) line. However, many offices use a central telephone system or Private Branch Exchange (PBX). Your machine can be connected to most types of PBX. The machine's recall feature supports timed break recall only (TBR). TBR will work with most PBX systems allowing you to gain access to an outside line, or transfer calls to another extension. The feature works when **Tel/R** is pressed.

Connecting an external TAD

You can connect an external Telephone Answering Device (TAD) to the same line as your machine. When the TAD answers a call, your machine will “listen” for the CNG (fax calling) tones sent by a sending fax machine. If it hears them it will take over the call and receive the fax. If it does not hear them, it will let your TAD take a voice message and the display will show *Telephone*.

The external TAD must answer within four rings (we recommend you set it to two rings). This is because your machine cannot hear the CNG tones until the external TAD has picked up the call. The sending machine will send CNG tones for only eight to ten seconds longer. We do not recommend using the toll saver feature on your external TAD if it needs more than four rings to activate it.




Note

If you have problems receiving faxes, reduce the ring delay setting on your external TAD.

Connections

The external TAD must be connected as shown in the illustration below.

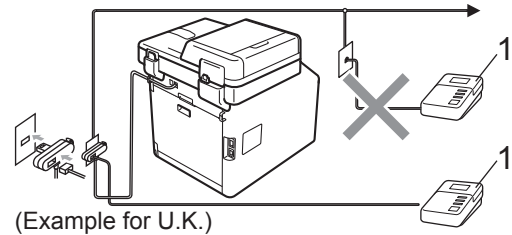

1 TAD

- 1 Set your external TAD to one or two rings. (The machine's Ring Delay setting does not apply.)
- 2 Record the outgoing message on your external TAD.
- 3 Set the TAD to answer calls.
- 4 Set the Receive Mode to External TAD. (See *Choosing the receive mode* on page 32.)

Recording an outgoing message (OGM)

- 1 Record 5 seconds of silence at the beginning of your message. This allows your machine time to listen for fax tones.
- 2 Limit your speaking to 20 seconds.
- 3 End your 20-second message by giving your Remote Activation code for people sending manual faxes. For example: "After the beep, leave a message or press *51 and **Start** to send a fax."



Note

- You need to turn the Remote Codes setting to on to use the Fax Activation Code *51. (See *Using Remote Codes* on page 41.)
 - We recommend beginning your OGM with an initial 5 second silence because the machine cannot hear fax tones over a loud voice. You may try leaving out this pause, but if your machine has trouble receiving, then you should re-record the OGM to include it.
-

Multi-line connections (PBX)

We suggest you ask the company who installed your PBX to connect your machine. If you have a multi line system we suggest you ask the installer to connect the unit to the last line on the system. This prevents the machine being activated each time the system receives telephone calls. If all incoming calls will be answered by a switchboard operator we recommend that you set the Receive Mode to `Manual`.

We cannot guarantee that your machine will operate properly under all circumstances when connected to a PBX. Any difficulties with sending or receiving faxes should be reported first to the company who handles your PBX.

External and extension telephones




Note

You need to turn the Remote Codes setting to on to use the Remote Activation Code *51 and Remote Deactivation Code #51. (See *Using Remote Codes* on page 41.)

Connecting an external or extension telephone

You can connect a separate telephone directly to your machine as shown in the diagram below.

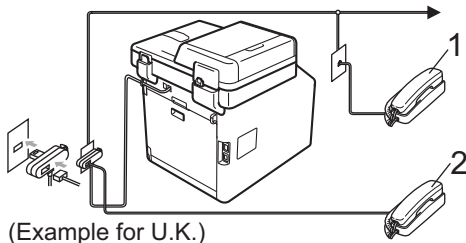

1 Extension telephone

2 External telephone

When you are using an external telephone, the LCD shows *Telephone*.

Operation from external or extension telephones

If you answer a fax call on an extension telephone, or an external telephone that is correctly connected to the machine through the T-piece connection, you can make your machine take the call by using the Remote Activation code. When you press the Remote Activation code *51 the machine starts to receive the fax.

If you answer a call and no one is on the line:

You should assume that you're receiving a manual fax.

Press *51 and wait for the chirp or until the LCD shows *Receiving*, and then hang up.



Note

You can also use the Fax Detect feature to make your tactically take the call. (See *Fax Detect* on page 35.)

For Fax/Tel mode only

When the machine is in Fax/Tel mode, it will use the F/T Ring Time (fast double-ringing) to alert you to pick up a voice call.

Lift the external telephone's handset, and then press **Tel/R** to answer.

If you are at an extension telephone, you will need to lift the handset during the F/T Ring Time and then press **#51** between the fast double-rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing *51.

Using extension telephones (U.K. only)

Your premises may already be wired with parallel extension telephones (those connected to sockets in other rooms in the building), or perhaps you intend to add extension telephones to your line. While the simplest arrangement is a parallel connection, there are some reasons why this arrangement may cause problems.


The most common problem, is someone picking up an extension telephone while the machine is trying to send a fax.

Such problems can easily be eliminated, if you arrange modification of your extension wiring circuit, such that extension devices are connected “downstream” of your machine, in a master/slave configuration (see *figure 2*). In such a configuration, this machine can always detect whether a telephone is in use, so it will not attempt to seize the line during that time. This is known as “telephone off-hook detection”.

The inadvisable configuration is shown in *figure 1*, and the recommended master/slave configuration is shown in *figure 2*.


This new connection configuration can be arranged by contacting BT, Kingston upon Hull Telecommunications, your PBX maintainer or a qualified telephone installation company as appropriate. Simply explained, the extension telephone circuit should be terminated on a normal modular plug (BT 431A style), which in turn should be inserted into the modular socket of the white “T”-shaped connector provided as part of the line cord assembly.

Figure 1:

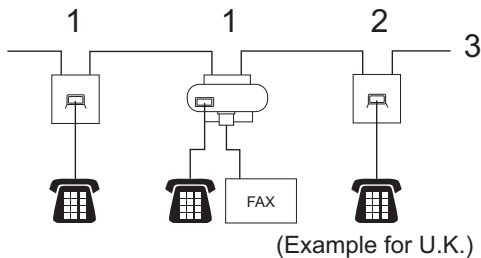

- 1 Extension socket
- 2 Master socket
- 3 Incoming line

Figure 2: Recommended connection of extension sockets

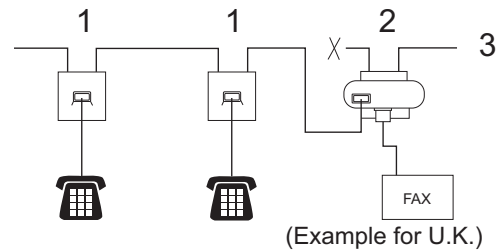

- 1 Extension socket
- 2 Master socket
- 3 Incoming line

These phones are now connected as *external devices* as shown on page 39, because they are connected to the fax machine via the T-connector.

Using a non-Brother cordless external handset

If your non-Brother cordless telephone is connected to the telephone line cord (see page 39) and you typically carry the cordless handset elsewhere, it is easier to answer calls during the Ring Delay.

If you let the machine answer first, you will have to go to the machine so you can press **Tei/R** to transfer the call to the cordless handset.

Using Remote Codes

Remote Activation Code

If you answer a fax call on an external or extension telephone, you can tell your machine to receive it by pressing the Remote Activation Code *51. Wait for the chirping sounds then replace the handset. (See *Fax Detect* on page 35.) Your caller will have to press start to send the fax.

If you answer a fax call at the external telephone, you can make the machine receive the fax by pressing **Mono Start** or **Colour Start**.

Remote Deactivation Code

If you receive a voice call and the machine is in F/T mode, it will start to sound the F/T (fast double-ring) after the initial ring delay. If you pick up the call on an extension telephone you can turn the F/T ring off by pressing #51 (make sure you press this *between* the rings).

If the machine answers a voice call and fast double-rings for you to take over, you can take the call at the external telephone by pressing **Tel/R**.

Turning on the Remote Codes

You need to turn the Remote Codes setting to on to use the Fax Receive Code and Telephone Answer Code.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Fax**. Press **Fax**.
- 3 Press **▲** or **▼** to display **Setup Receive**. Press **Setup Receive**.
- 4 Press **▲** or **▼** to display **Remote Codes**. Press **Remote Codes**.
- 5 Press **On**.

- 6 If you do not want to change the Remote Activation Code, press **↵** on the LCD.

- 7 Press **Stop/Exit**.

Changing the Remote Codes

The preset Remote Activation Code is *51. The preset Remote Deactivation Code is #51. If you are always disconnected when accessing your External TAD, try changing the three-digit remote codes, for example ### and 555.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Fax**. Press **Fax**.
- 3 Press **▲** or **▼** to display **Setup Receive**. Press **Setup Receive**.
- 4 Press **▲** or **▼** to display **Remote Codes**. Press **Remote Codes**.
- 5 Press **On** or **Off**.
- 6 If you chose **On** in step 5, enter the new Remote Activation Code. Press **OK**.
- 7 Enter the new Remote Deactivation Code. Press **OK**.
- 8 Press **Stop/Exit**.

7

Dialling and storing numbers

How to dial

You can dial in any of the following ways.


Manual dialling

Use the dial pad to enter all the digits of the telephone or fax number.



One Touch dialling

Press the One Touch key that stores the number you want to call. (See *Storing One Touch Dial numbers* on page 46.)

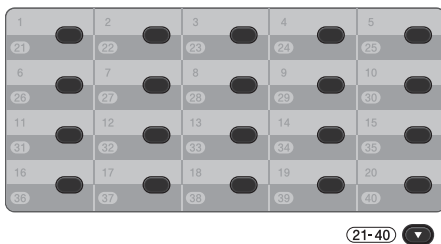

To dial One Touch numbers 21 to 40, hold down **21-40** as you press the One Touch key.

Speed dialling

- 1 Press **Address Book**.
- 2 Press the three-digit number you want to call. You can also display the numbers in alphabetical order by pressing **HO01 A** on the Touchscreen.
- 3 Press **Send a fax** or **Send a E-mail**.
- 4 Press **Mono Start** or **Colour Start**.




Note

If the LCD shows **Not Registered** when you enter or search a Speed Dial number, a number has not been stored at this location.

Search

You can search alphabetically for names you have stored in the One Touch and Speed Dial memories. (See *Storing One Touch Dial numbers* on page 46 and *Storing Speed Dial numbers* on page 48.)

- 1 Press **Address Book**.
- 2 Press  on the Touchscreen.
- 3 Press the first few letters of the name on the Touchscreen.
Press **OK**.
- 4 Press **▲** or **▼** to scroll until you find the name you are looking for.
Press the name you are looking for.
- 5 Press **Send a fax** or **Send a E-mail**.
- 6 Press **Mono Start** or **Colour Start**.



Note

- If the LCD shows **Results cannot be found**, when you enter the first few letters of the name, it means that a name for the letter is not stored.
- One Touch Dial number and Speed Dial numbers stored without the name cannot be retrieved by the search function.

LDAP search

If the machine is connected to your LDAP server, you can search for information such as fax numbers and E-mail addresses from your server. (For details about how to set up LDAP see the *Network User's Guide*.)

Fax redial

If you are sending a fax automatically and the line is busy, the machine will automatically redial up to three times at five minute intervals.

If you are sending a fax manually and the line is busy, press **Redial/Pause** and try it again. You can call the last number dialled, by pressing **Redial/Pause**.

Redial/Pause only works if you dialled from the control panel.

Storing numbers

You can set up your machine to do the following types of easy dialling: One Touch, Speed Dial and Groups for Broadcasting faxes. You can also specify the default resolution for each One Touch and Speed Dial number. When you dial a quick dial number, the LCD shows the name, if you stored it, or the number. A scan profile can also be stored along with the fax number.

If you lose electrical power, the quick dial numbers stored in the memory will not be lost.

A scan profile is the resolution and other scan settings that you choose when you store a number.

Storing a pause

Press `Pause` to insert a 2.8-second pause between numbers. You can press `Pause` as many times as needed to increase the length of the pause.

One Touch and Speed Dial Storage Options

The following chart shows the selections for the settings for One Touch and Speed Dial numbers. When you store numbers, the LCD instructs you to choose from the options shown in the following steps.


Step 1	Step 2	Step 3	Step 4	Step 5
Enter Name	Select Registration Type	Enter Number or E-mail Address	Select Resolution	Select File type
Enter the name you want to store or Press OK	Fax	Enter the Fax Number	Standard, Fine, S.Fine, Photo	-
	IFAX	Enter the E-mail Address	Standard, Fine, Photo	-
	E-Mail Color PDF		100 dpi, 200 dpi, 300 dpi, 600 dpi	PDF, PDF/A, Secure PDF, Signed PDF
	E-Mail Color JPEG		100 dpi, 200 dpi, 300 dpi, 600 dpi	-
	E-Mail Color XPS		100 dpi, 200 dpi, 300 dpi, 600 dpi	-
	E-Mail Gray PDF		100 dpi, 200 dpi, 300 dpi	PDF, PDF/A, Secure PDF, Signed PDF
	E-Mail Gray JPEG		100 dpi, 200 dpi, 300 dpi	-
	E-Mail Gray XPS		100 dpi, 200 dpi, 300 dpi	-
	E-Mail B&W PDF		200 dpi, 200 x 100 dpi	PDF, PDF/A, Secure PDF, Signed PDF
	E-Mail B&W TIFF		200 dpi, 200 x 100 dpi	-

Note

- If you choose Signed PDF, you must install a certificate on your machine using Web Based Management. Choose **Configure Signed PDF Settings** from **Administrator Settings** in Web Based Management. For how to install a certificate, see the *Network User's Guide*.
- PDF/A is a PDF file format intended for long-term archiving. This format contains all the necessary information to be able to reproduce the document after long-term storage.
- A Signed PDF helps prevent data tampering and the impersonation of an author by including a digital certificate within the document.

Storing One Touch Dial numbers

Your machine has 20 One Touch keys where you can store 40 fax or telephone numbers or E-mail addresses for automatic dialling. To access numbers 21 to 40, hold down **21-40** as you press the One Touch key.

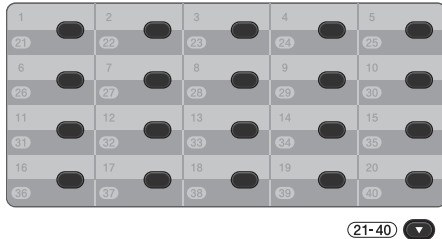

- 1 Press the One Touch key where you want to store the number or E-mail address.
If a number or E-mail address is not stored there, the LCD shows
Not Registered
Register Now?.
Press Yes.
Or, you can use the LCD buttons by pressing Address Book, More and Set One Touch Dial, and then enter the number of the One Touch key where you want to store the number or E-mail address and press OK.

Note

If the One Touch number you choose is already taken, the OK button on the LCD will not work. Choose a different number.

- 2 Do one of the following:
 - Enter the name (up to 15 characters) by pressing the buttons on the Touchscreen. Use the chart on *Entering text* on page 187 to help you enter letters.
Press OK.
 - Press OK to store the number or E-mail address without a name.

- 3 Press ◀ or ▶ to select
Fax,
IFAX,
E-Mail B&W PDF,
E-Mail B&W TIFF,
E-Mail Color PDF,
E-Mail Color JPEG,
E-Mail Color XPS,
E-Mail Gray PDF,
E-Mail Gray JPEG or
E-Mail Gray XPS.

- 4 Enter the telephone, fax number (up to 20 characters each) or E-mail address (up to 60 characters each). Use the chart on *Entering text* on page 187 to help you enter letters.
Press OK.



Note

- If you selected an E-mail Registration Type in step 3 and save the E-mail address, you can only use the E-mail address when you are in Scan mode.
- If you selected the IFAX Registration Type in step 3 and save the E-mail address, you can only use the E-mail address when you are in Fax mode.

- 5 To save a fax/scan resolution along with the number/E-mail address, go to the appropriate step as shown in the following table.

Option selected in step 5	Go to step
Fax	6
IFAX	7
E-Mail Color PDF	8
E-Mail Color JPEG	
E-Mail Color XPS	
E-Mail Gray PDF	9
E-Mail Gray JPEG	
E-Mail Gray XPS	
E-Mail B&W PDF	10
E-Mail B&W TIFF	



Note

- When you do a broadcast and you have saved a scan profile along with the number or E-mail address, the scan profile of the One Touch, Speed Dial or Group number you chose *first* will be applied to the broadcast.
- For details about the file format, see *Using the Scan key* in the *Software User's Guide*.

- 6 Select the resolution from Standard, Fine, S.Fine or Photo and go to step 12.
- 7 Select the resolution from Standard, Fine or Photo and go to step 12.
- 8 Select the resolution from 100 dpi, 200 dpi, 300 dpi or 600 dpi.
- If you chose E-Mail Color PDF, go to step 11.
 - If you chose E-Mail Color JPEG or E-Mail Color XPS, go to step 12.

- 9 Select the resolution from 100 dpi, 200 dpi or 300 dpi.
- If you chose E-Mail Gray PDF, go to step 11.
 - If you chose E-Mail Gray JPEG or E-Mail Gray XPS, go to step 12.
- 10 Select the resolution from 200 dpi or 200 x 100 dpi.
- If you chose E-Mail B&W PDF, go to step 11.
 - If you chose E-Mail B&W TIFF, go to step 12.
- 11 Select the PDF type from PDF, PDF/A, Secure PDF or Signed PDF that will be used to send to your PC.



Note

If you choose Secure PDF, the machine will ask you to enter a four-digit password using numbers 0-9 before it starts scanning.

- 12 When the LCD displays your settings, press OK to confirm.
- 13 Press **Stop/Exit**.

Storing Speed Dial numbers

You can store your frequently used numbers as Speed Dial numbers, so that when you dial you will only have to press a few keys (for example: press **Address Book**, the number you want to call and **Send a fax**). The machine can store 300 Speed Dial numbers (001-300).

- 1 Press **Address Book**.
- 2 Press **More**.
- 3 Press **Set Speed Dial**.
- 4 Do one of the following:
 - Enter the name (up to 15 characters) by pressing the buttons on the Touchscreen. Use the chart on *Entering text* on page 187 to help you enter letters.
Press **OK**.
 - Press **OK** to store the number or E-mail address without a name.
- 5 Press **◀** or **▶** to select
Fax,
IFAX,
E-Mail B&W PDF,
E-Mail B&W TIFF,
E-Mail Color PDF,
E-Mail Color JPEG,
E-Mail Color XPS,
E-Mail Gray PDF,
E-Mail Gray JPEG or
E-Mail Gray XPS.
- 6 Enter the fax/telephone number (up to 20 characters each) or E-mail address (up to 60 characters each). Use the chart on *Entering text* on page 187 to help you enter letters.
Press **OK**.



Note

- If you selected an E-mail Registration Type in step 5 and save the E-mail address, you can only use the E-mail address when you are in Scan mode.
- If you selected the IFAX Registration Type in step 5 and save the E-mail address, you can only use the E-mail address when you are in Fax mode.

- 7 To save a fax/scan resolution along with the number/E-mail address, go to the appropriate step as shown in the following table.

Option selected in step 5	Go to step
Fax	8
IFAX	9
E-Mail Color PDF	10
E-Mail Color JPEG	
E-Mail Color XPS	
E-Mail Gray PDF	11
E-Mail Gray JPEG	
E-Mail Gray XPS	
E-Mail B&W PDF	12
E-Mail B&W TIFF	



Note

- When you do a broadcast and you have saved a scan profile along with the number or E-mail address, the scan profile of the One Touch, Speed Dial or Group number you chose *first* will be applied to the broadcast.
- For details about the file format, see the *Software User's Guide*.

- 8 Select the resolution from **Standard**, **Fine**, **S. Fine** or **Photo** and go to step 14.

- 9 Select the resolution from **Standard**, **Fine** or **Photo** and go to step 14.

- 10 Select the resolution from 100 dpi, 200 dpi, 300 dpi or 600 dpi.
- If you chose E-Mail Color PDF, go to step 13.
 - If you chose E-Mail Color JPEG or E-Mail Color XPS, go to step 14.
- 11 Select the resolution from 100 dpi, 200 dpi or 300 dpi.
- If you chose E-Mail Gray PDF, go to step 13.
 - If you chose E-Mail Gray JPEG or E-Mail Gray XPS, go to step 14.
- 12 Select the resolution from 200 dpi or 200 x 100 dpi.
- If you chose E-Mail B&W PDF, go to step 13.
 - If you chose E-Mail B&W TIFF, go to step 14.
- 13 Select the PDF type from PDF, PDF/A, Secure PDF or Signed PDF that will be used to send to your PC.



Note

If you choose Secure PDF, the machine will ask you to enter a four-digit password using numbers 0-9 before it starts scanning.

- 14 Enter a three-digit Speed Dial location number (001-300).
Press OK.
- 15 When the LCD displays your settings, press OK to confirm.
- 16 Press **Stop/Exit**.

Changing or Deleting One Touch and Speed Dial numbers

You can change or delete a One Touch or Speed Dial number that has already been stored.

If the stored number has a scheduled job, such as a delayed fax or a fax forwarding number, it will be dimmed on the LCD. You cannot select the number to make changes or to delete it unless you first cancel the scheduled job. (See *Checking and canceling waiting jobs* in chapter 3 of the *Advanced User's Guide*.)

- 1 Press Address Book.
- 2 Press More.
- 3 Do one of the following:
 - Press Change to edit the name, number or E-mail address and go to step 4.
 - Press Delete to delete all information in a Speed Dial or One Touch number.

Select the number you want to delete by pressing it to display a red check mark.

Press OK.

When Erase This Data? appears, press Yes to accept it.

Go to step 8.
- 4 Press ▲ or ▼ to display the number you want to change.
Press the number you want to change.



Note


One Touch Dial numbers begin with *.
Speed Dial numbers begin with #.

- 5 Press **Name :**
Number/Address :
Resolution : or
PDF Type :
- 6 Do one of the following:
- If you chose **Name :**, enter the name (up to 15 characters) by pressing the buttons on the Touchscreen.
 Press **OK**.
 - If you chose **Number/Address :**, enter the new number (up to 20 digits) or E-mail address (up to 60 digits) by pressing the buttons on the Touchscreen.
 Press **OK**.
 - If you chose **Resolution :**, press one of the available resolution options displayed on the Touchscreen.
 - If you chose **PDF Type :**, press one of the available file type options displayed on the Touchscreen.



Note

How to change the stored name or number:

If you want to change a character, press ◀ or ▶ to position the cursor under the character you want to change, and then press . Re-enter the character.

The LCD will display your new setting.

- 7 Do one of the following:
- To finish changing, press **OK**.
 - To change more details, go to step 6.
- 8 Press **Stop/Exit**.

Tone or Pulse

If you have a Pulse dialling service, but need to send Tone signals (for example, for telephone banking), follow the instructions below. If you have Touch Tone service, you will not need this feature to send tone signals.


- 1 Lift the handset of the external telephone.
- 2 Press **#** on the machine's control panel. Any digits dialled after this will send tone signals.
 When you hang up, the machine will return to the Pulse dialling service.


8

Making copies


How to copy

The following steps show the basic copy operation. For details about each option, see the *Advanced User's Guide*.

- 1 When you want to make a copy, press  (**COPY**) to illuminate it in blue.
 - Make sure you are in Copy mode.

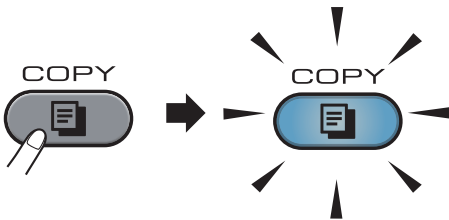

- The LCD shows:

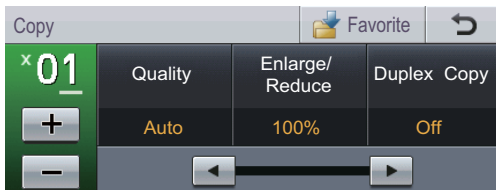

You can enter the number of copies you want by pressing the + and - buttons on the Touchscreen.



Note

The default setting is Fax mode. You can change the amount of time that the machine stays in Copy mode after the last copy operation. (See *Mode Timer* in *Chapter 1* of the *Advanced User's Guide*.)

- 2 Do one of the following to load your document:
 - Place the document *face up* in the ADF. (See *Using the automatic document feeder (ADF)* on page 26.)
 - Load your document *face down* on the scanner glass. (See *Using the scanner glass* on page 27.)

- 3 Press **Mono Start** or **Colour Start**.



Note

If the LCD shows *Please Wait* and the machine stops copying while you are making multiple copies, please wait for 30 to 40 seconds until the machine finishes the colour registrations and cleaning process of the belt unit.

Stop copying

To stop copying, press **Stop/Exit**.

Copy settings

Press **COPY** and then press ◀ or ▶ to choose the setting you want. For details about changing the copy settings, see *Copy settings* in *Chapter 7* of the *Advanced User's Guide*.

You can change the following copy settings:

- Quality
- Enlarge/Reduce
- Duplex Copy
- Tray Use
- Brightness
- Contrast
- Stack/Sort
- Page Layout
- 2in1 (ID)
- Color Adjust (Saturation)
- Set New Default
- Factory Reset
- Favorite Settings
- Favorite

9

Printing data from a USB Flash memory drive or digital camera supporting mass storage

With the Direct Print feature, you do not need a computer to print data. You can print by just plugging your USB Flash memory drive into the machine's USB direct interface. You can also connect and print directly from a camera set to USB mass storage mode.



Note

- Some USB Flash memory drives may not work with the machine.
- If your camera is in PictBridge mode, you cannot print data. Please refer to the documentation supplied with your camera to switch from PictBridge mode to mass storage mode.

Creating a PRN or PostScript® 3™ file for direct printing




Note

The screens in this section may vary depending on your application and operating system.

- 1 From the menu bar of an application, click **File**, then **Print**.


- 2 Choose **Brother MFC-XXXX Printer** (1) and check the **Print to file** box (2). Click **Print**.

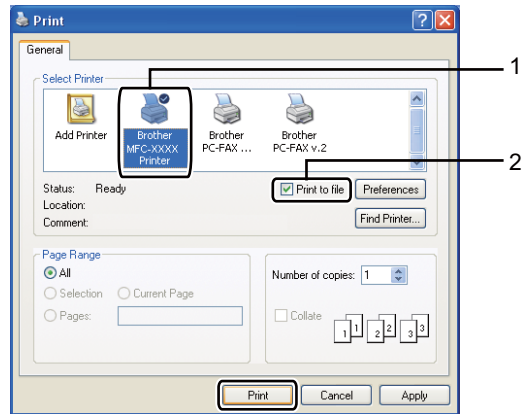

- 3 Choose the folder you want to save the file to and enter the file name if you are prompted to.
If you are prompted for a file name only, you can also specify the folder you want to save the file in by entering the directory name. For example:
C:\Temp\FileName.prn
If you have a USB Flash memory drive or digital camera connected to your computer, you can save the file directly to the USB Flash memory drive.

Printing data directly from the USB Flash memory drive or digital camera supporting mass storage

- 1 Connect your USB Flash memory drive or digital camera to the USB direct interface (1) on the front of the machine. Press **Direct Print**. Your machine will enter Direct Print Mode.

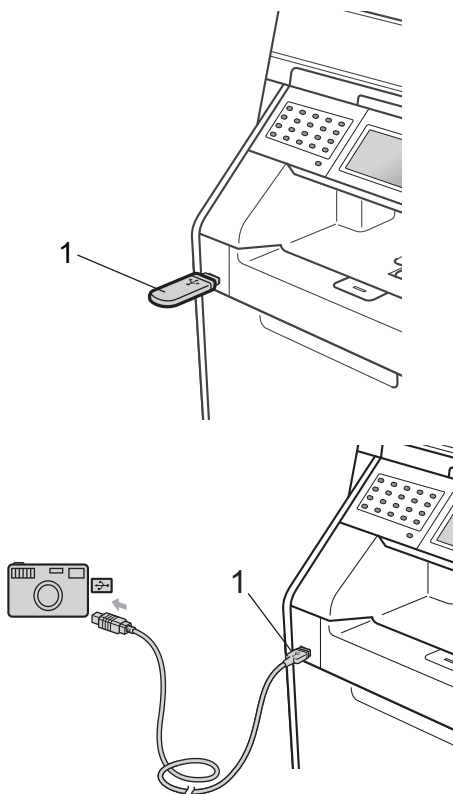

Note

- Make sure your digital camera is turned on.
- If your machine has been set to Secure Function Lock On, you may not be able to access Direct Print. (For explanations about error messages that may occur, see *Switching Users* in *chapter 2* of the *Advanced User's Guide*.)

- 2 Press **▲** or **▼** to choose the folder name and file name you want to print. If you have chosen the folder name, press **▲** or **▼** to choose the file name you want to print.

Note

- Your digital camera must be switched from PictBridge mode to mass storage mode.
- If you want to print an index of the files, press **Index Print** on the Touchscreen. Press **Mono Start** or **Colour Start** to print the data.
- When the machine is in Deep Sleep mode, the LCD does not show any information even if you connect a USB flash memory drive to the USB direct interface. Press the Touchscreen or any key to wake up the machine. Press **Direct Print** on the Touchscreen, the LCD will show the Direct Print menu.

- 3 Choose the number of copies you want by pressing the **+** and **-** buttons on the Touchscreen.
- 4 Do one of the following:
 - Press **Print Settings**. Go to step 5.
 - If you do not need to change the current default settings, go to step 7.

- 5 Press ▲ or ▼ to display an option setting you need to change.
Press the option and change the setting.




Note

- You can choose the following settings:

Paper Size
Paper Type
Multiple Page
Orientation
Duplex
Collate
Tray Use
Print Quality
PDF Option

- Depending on the file type, some of these settings may not appear.

- 6 Do one of the following:
- If you want to change other option settings, repeat step 5.
 - If you do not want to change any other options, press  and go to step 7.

- 7 Press **Mono Start** or **Colour Start** to print the data.

! IMPORTANT

- To prevent damage to your machine, DO NOT connect any device other than a digital camera or USB Flash memory drive to the USB direct interface.
- DO NOT remove the USB Flash memory drive or digital camera from the USB direct interface until the machine has finished printing.

Changing the default settings for direct print

You can change the default settings for Direct Print.

- 1 Connect your USB Flash memory drive or digital camera to the USB direct interface on the front of the machine.
- 2 Press **Direct Print** on the LCD.
- 3 Press **Default Settings**.
- 4 Press ▲ or ▼ to display the setting you want to change.
Press the setting.
- 5 Press the new option you want. Repeat steps 4 to 5 for each setting you want to change.



Note

How to display all available options:

When the LCD displays the ◀ and ▶ buttons, press ◀ or ▶ to display all available options.

Printing a document

The machine can receive data from your computer and print it. To print from a computer, install the printer driver. (See *Printing for Windows*[®] or *Printing and Faxing* for Macintosh in the *Software User's Guide* for the details about the print settings.)

- 1 Install the Brother printer driver on the Installation CD-ROM. (See the *Quick Setup Guide*.)
- 2 From your application, choose the Print command.
- 3 Choose the name of your machine in the **Print** dialog box and click **Properties**.
- 4 Choose the settings you want in the **Properties** dialog box.
 - **Paper Size**
 - **Orientation**
 - **Copies**
 - **Media Type**
 - **Print Quality**
 - **Colour / Mono**
 - **Multiple Page**
 - **Duplex / Booklet**
 - **Paper Source**Click **OK**.
- 5 Click **OK** to begin printing.

11

How to scan to a computer

Scanning a document as PDF file using ControlCenter4 (Windows®)

(For Macintosh users) See *Scanning* in the *Software User's Guide*.




Note

The screens on your PC may vary depending on your model.


ControlCenter4 is a software utility that lets you quickly and easily access the applications you use most often. Using ControlCenter4 eliminates the need to manually launch specific applications. You can use ControlCenter4 on your computer.

- 1 Load your document. (See *How to load documents* on page 26.)
- 2 Open ControlCenter4 by clicking **start/All Programs/Brother/XXX-XXXX** (where XXX-XXXX is your model name)/**ControlCenter4**. The ControlCenter4 application will open.
- 3 Choose **Home Mode** or **Advanced Mode** before you use ControlCenter4.

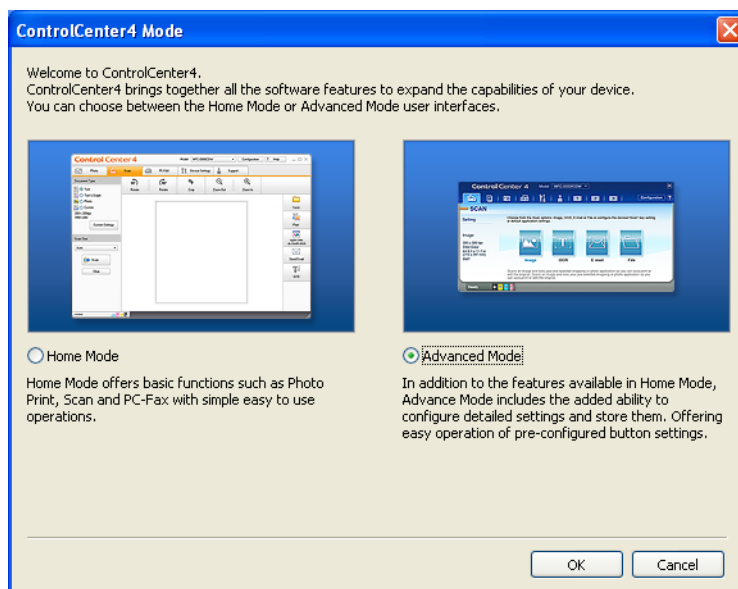



- 4 Make sure the machine you want to use is selected from the **Model** pull-down list.

- 5 Set the file type for saving to a folder. By default, the scanned data is saved as **JPEG (*.jpg)**. Click **Configuration**, and then select **Button settings**, **Scan** and **File**.

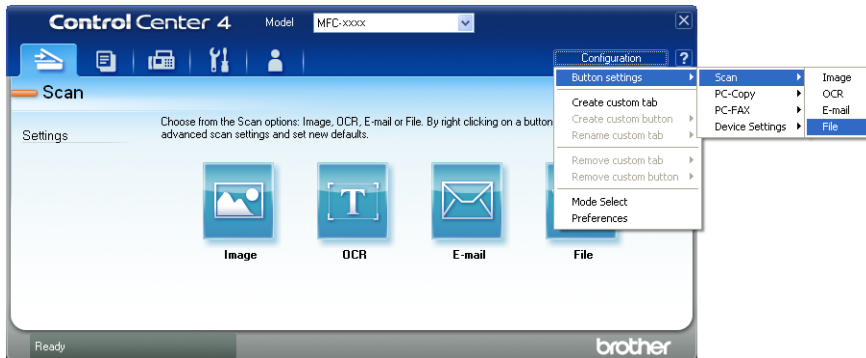

The configuration dialog box appears. You can change the default settings.

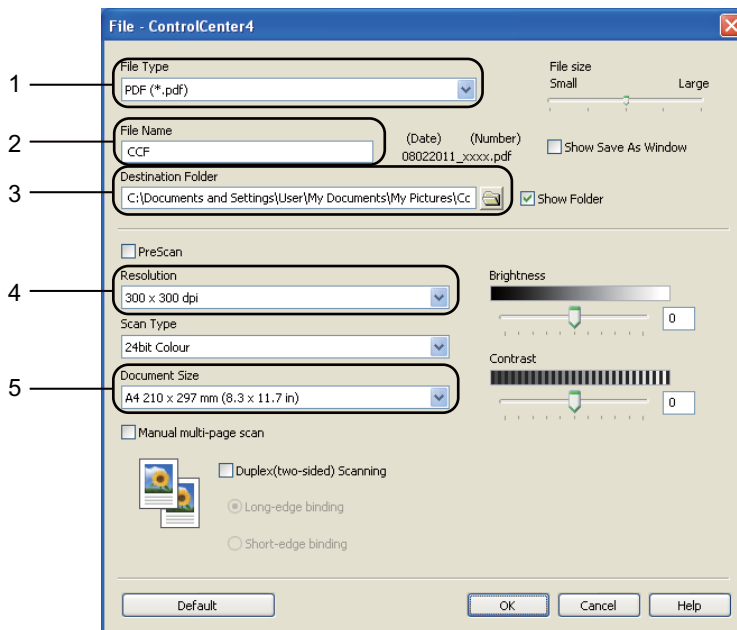


- 1 Choose **PDF (*.pdf)** from the **File Type** pull-down list.
- 2 You can enter the file name you want to use for the document.
- 3 You can save the file to the default folder, or choose your preferred folder by clicking the  **Browse** button.
- 4 You can choose a scanning resolution from the **Resolution** pull-down list.
- 5 You can choose the document size from the pull-down list.

- 6 Click **OK**.

7

Click **File**.

The machine starts the scanning process. The folder where the scanned data is saved will open automatically.

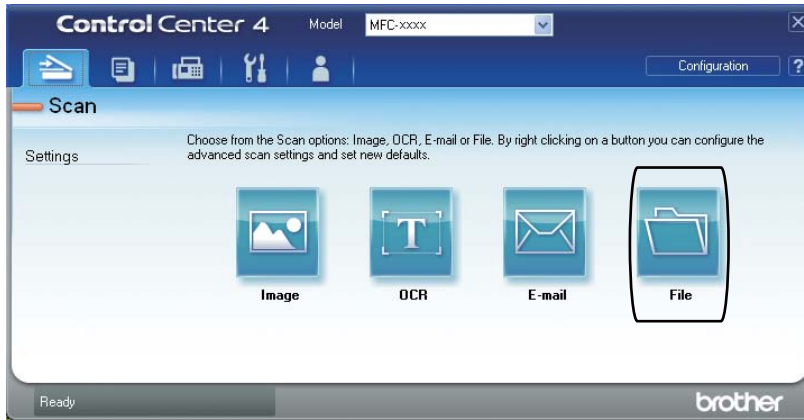

Changing the SCAN key settings

Before scanning


To use the machine as a scanner, install a scanner driver. If the machine is on a network, configure it with a TCP/IP address.

- Install the scanner drivers on the Installation CD-ROM. (See the *Quick Setup Guide*.)
- Configure the machine with a TCP/IP address if network scanning does not work. (See *Configuring Network Scanning* in the *Software User's Guide*.)


SCAN key settings


You can change your machine's **SCAN** key settings using ControlCenter4.

- 1 Open ControlCenter4 by clicking **start/All Programs/Brother/XXX-XXXX** (where XXX-XXXX is your model name)/**ControlCenter4**. The ControlCenter4 application will open.
- 2 Make sure the machine you want to use is selected from the **Model** pull-down list.
- 3 Click the **Device Settings** tab.
- 4 Click **Device Scan Settings**.

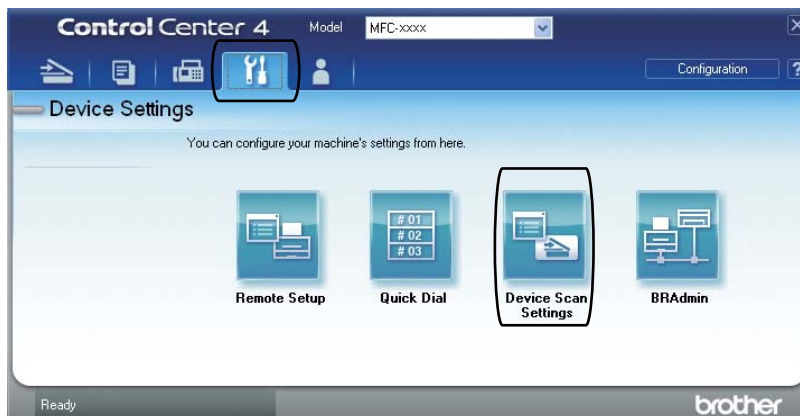


- 5 Choose the **File** tab. You can change the default settings.

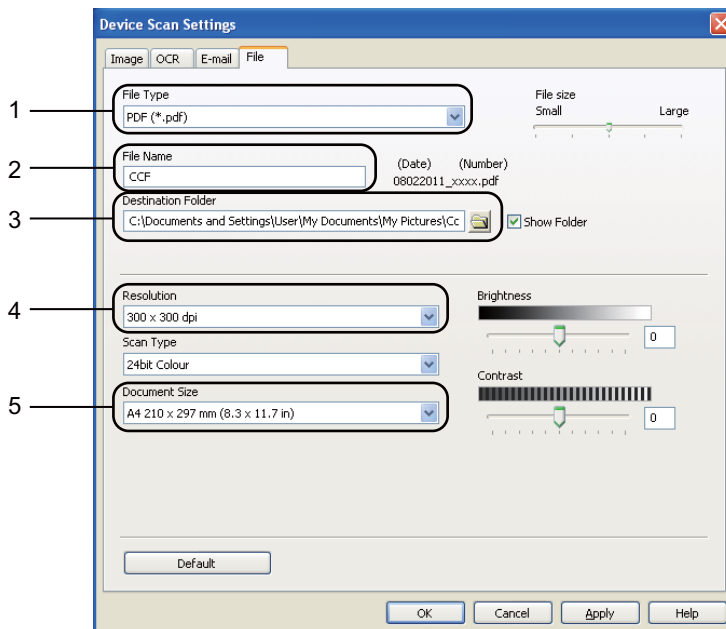

- 1 You can choose the file type from the pull-down list.
- 2 You can enter the file name you want to use for the document.
- 3 You can save the file to the default folder, or choose your preferred folder by clicking the  **Browse** button.
- 4 You can choose a scanning resolution from the **Resolution** pull-down list.
- 5 You can choose the document size from the pull-down list.

- 6 Click **OK**.

Scanning using the SCAN key

- 1 Load your document. (See *How to load documents* on page 26.)
- 2 Press  (**SCAN**).
- 3 Press **Scan to PC**.
- 4 Press **File**.
- 5 (For Network users)
Press **▲** or **▼** to choose the destination computer you want to send to.
Press **OK**.
If the LCD prompts you to enter a PIN number, enter the 4-digit PIN number for the destination computer using the dial pad on the control panel.
Press **OK**.
- 6 Do one of the following:
 - If you want to change the duplex setting, press **Duplex Scan**. Then press **Off**,
DuplexScan : LongEdge Or **DuplexScan : ShortEdge**.
 - To start scanning without changing additional settings, go to step 7.
- 7 Press **Mono Start** or **Colour Start**.
The machine starts the scanning process.



Note

Choose the scan mode you want.

Scan to:





- USB
- Network
- FTP
- E-mail (Server)
- E-mail
- Image
- OCR
- File

A

Routine maintenance

Replacing the consumable items

The following messages appear on the LCD in the Ready mode. These messages provide advanced warnings to replace the consumable items before they reach the end of their life. To avoid any inconvenience, you may want to buy spare consumable items before the machine stops printing.

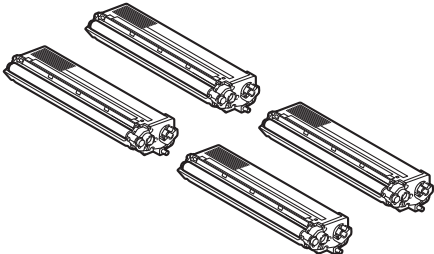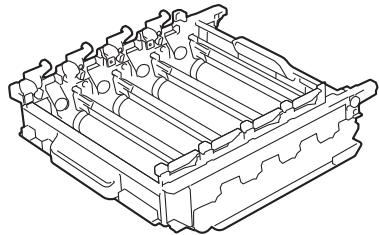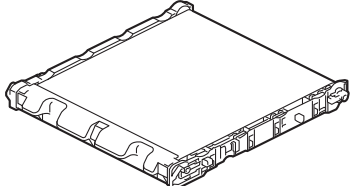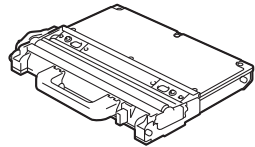Toner cartridge	Drum unit
<p>See <i>Replacing a Toner cartridge</i> on page 66.</p> <p>Model Name: TN-320BK, TN-325BK, TN-328BK, TN-320C, TN-325C, TN-328C, TN-320M, TN-325M, TN-328M, TN-320Y, TN-325Y, TN-328Y,</p>	<p>See <i>Replacing the drum unit</i> on page 72.</p> <p>Model Name: DR-320CL</p>
	
Belt unit	Waste toner box
<p>See <i>Replacing the belt unit</i> on page 78.</p> <p>Model Name: BU-300CL</p>	<p>See <i>Replacing the waste toner box</i> on page 84.</p> <p>Model Name: WT-300CL</p>
	

LCD messages	Consumable item to replace	Approximate life	How to replace	Model name
Toner Low Prepare New Toner Cartridge.X	Toner cartridge X = Black, Cyan, Magenta, Yellow	<Black> 2,500 pages ^{1 2 3} 4,000 pages ^{1 2 4} 6,000 pages ^{1 2 5} <Cyan, Magenta, Yellow> 1,500 pages ^{1 2 3} 3,500 pages ^{1 2 4} 6,000 pages ^{1 2 5}	See page 66.	TN-320BK ³ , TN-325BK ⁴ , TN-328BK ⁵ , TN-320C ³ , TN-325C ⁴ , TN-328C ⁵ , TN-320M ³ , TN-325M ⁴ , TN-328M ⁵ , TN-320Y ³ , TN-325Y ⁴ , TN-328Y ⁵
Replace Parts WT Box End Soon	Waste toner box	50,000 pages ¹	See page 84.	WT-300CL

¹ A4 or Letter size single-sided pages.

² Approx. cartridge yield is declared in accordance with ISO/IEC 19798.

³ Standard toner cartridge

⁴ High capacity toner cartridge

⁵ Super high capacity toner cartridge

You will need to clean the machine regularly and replace the consumable items when the following messages are displayed on the LCD.

LCD messages	Consumable item to replace	Approximate life	How to replace	Model name
Replace TonerX	Toner cartridge X = Black, Cyan, Magenta, Yellow	<Black> 2,500 pages ^{1 2 5} 4,000 pages ^{1 2 6} 6,000 pages ^{1 2 7} <Cyan, Magenta, Yellow> 1,500 pages ^{1 2 5} 3,500 pages ^{1 2 6} 6,000 pages ^{1 2 7}	See page 66.	TN-320BK ⁵ , TN-325BK ⁶ , TN-328BK ⁷ , TN-320C ⁵ , TN-325C ⁶ , TN-328C ⁷ , TN-320M ⁵ , TN-325M ⁶ , TN-328M ⁷ , TN-320Y ⁵ , TN-325Y ⁶ , TN-328Y ⁷
Replace Parts Drum Unit	Drum unit	25,000 pages ^{1 3 4}	See page 73.	DR-320CL
Drum Stop				
Replace Parts Belt Unit	Belt unit	50,000 pages ¹	See page 78.	BU-300CL
Replace WT Box	Waste toner box	50,000 pages ¹	See page 84.	WT-300CL
Replace Parts Fuser Unit	Fuser unit	100,000 pages ¹	Call your Brother dealer for a replacement fuser unit.	
Replace Parts Laser Unit	Laser unit	100,000 pages ¹	Call your Brother dealer for a replacement laser unit.	
Replace Parts PF Kit 1	Paper feeding kit 1	100,000 pages ¹	Call your Brother dealer for a replacement paper feeding kit 1.	
Replace Parts PF Kit 2	Paper feeding kit 2	100,000 pages ¹	Call your Brother dealer for a replacement paper feeding kit 2.	
Replace Parts PF Kit MP	Paper feeding kit MP	50,000 pages ¹	Call your Brother dealer for a replacement paper feeding kit MP.	

¹ A4 or Letter size single-sided pages.

² Approx. cartridge yield is declared in accordance with ISO/IEC 19798.

³ 1 page per job.

⁴ Drum life is approximate and may vary by type of use.

⁵ Standard toner cartridge

⁶ High capacity toner cartridge

⁷ Super high capacity toner cartridge

**Note**

-
- Go to <http://www.brother.com/original/index.html> for instructions on how to return your used consumable items to the Brother collection program. If you choose not to return your used consumable, please discard the used consumable according to local regulations, keeping it separate from domestic waste. If you have questions, call your local waste disposal office. (See *EU Directive 2002/96/EC and EN 50419* in the *Safety and Legal Booklet*.)
 - We recommend placing used consumable items on a piece of paper to prevent accidentally spilling or scattering the material inside.
 - If you use paper that is not a direct equivalent for the recommended paper, the life of consumable items and machine parts may be reduced.
 - The projected life of the toner cartridges is based on ISO/IEC 19798. Frequency of replacement will vary depending on the complexity of printed pages, percentage of coverage and type of media used.
-

Replacing a Toner cartridge

Model Name: For the model name of toner cartridges, see *Replacing the consumable items* on page 62.

The Standard toner cartridges can print approximately 2,500 pages (black) or approximately 1,500 pages (cyan, magenta, yellow)¹. The High Yield toner cartridges can print approximately 4,000 pages (black) or approximately 3,500 pages (cyan, magenta, yellow)¹. The Super High Yield toner cartridges can print approximately 6,000 pages (black, cyan, magenta, yellow)¹. Actual page count will vary depending on your average type of document. When a toner cartridge is running low, the LCD shows **Toner Low**.

The toner cartridges that come supplied with the machine are standard toner cartridges.

¹ Approx. cartridge yield is declared in accordance with ISO/IEC 19798.



Note

- It is a good idea to keep a new toner cartridge ready for use when you see the **Toner Low** warning.
 - To ensure high quality printing, we recommend that you use only Brother Original toner cartridges. When you want to buy toner cartridges, please call your Brother dealer.
 - We recommend that you clean the machine when you replace the toner cartridge. See *Cleaning and Checking the machine* on page 91.
 - If you change the print density setting for lighter or darker printing, the amount of toner used will change.
 - Wait to unpack the toner cartridge until immediately before you put it into the machine.
-

Toner Low

If the LCD shows **Toner Low** Prepare New Toner Cartridge.X, buy a new toner cartridge and have it ready before you get a **Replace Toner** message. The LCD shows the toner colour that is near the end of its life (Cyan, Magenta, Yellow or Black).


Replace Toner

When the LCD shows **Replace Toner** the machine will stop printing until you replace the toner cartridge. The message on the LCD will indicate which colour you need to replace.


A new or unused Brother Original toner cartridge will reset the **Replace Toner** mode.

Replacing the toner cartridges


- 1 Make sure that the machine is turned on.
- 2 Press the front cover release button and then open the front cover.

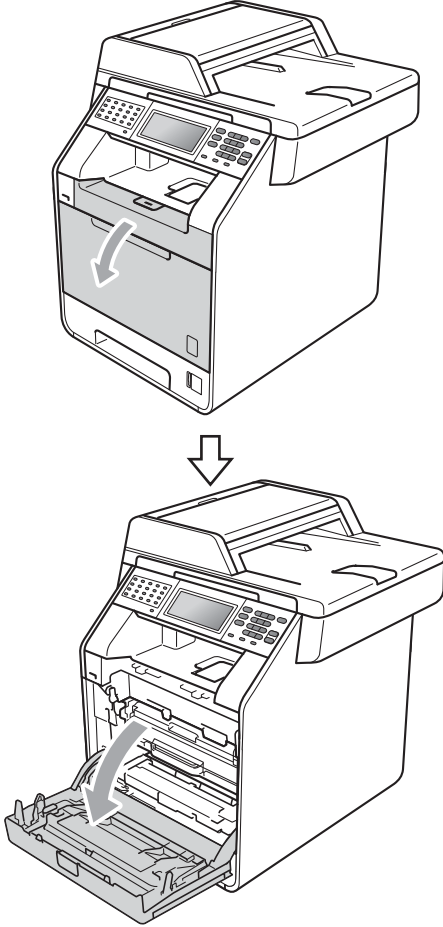

- 3 Hold the green handle of the drum unit. Pull the drum unit out until it stops.

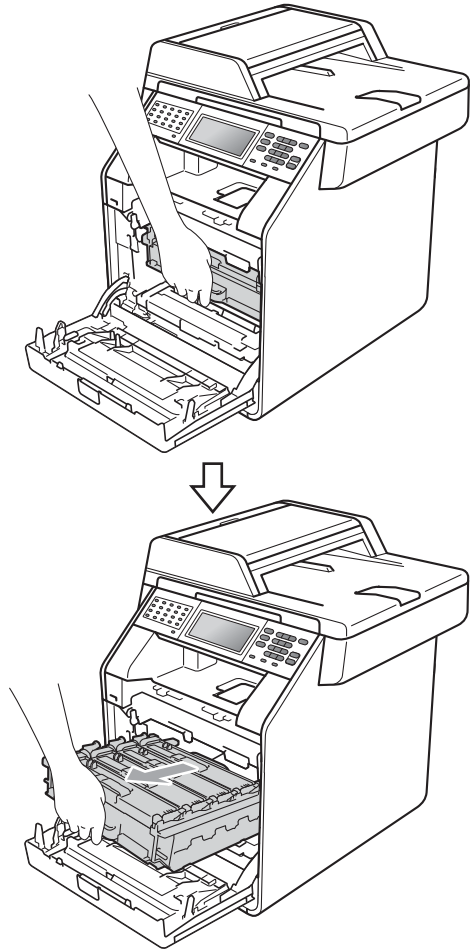

- 4 Hold the handle of the toner cartridge and slightly push it toward the machine to unlock it. Then pull it out of the drum unit. Repeat this for all the toner cartridges.

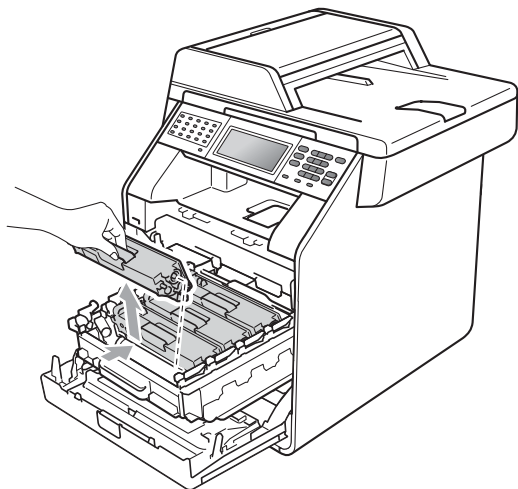

⚠ WARNING

DO NOT put a toner cartridge into a fire. It could explode, resulting in injuries.

DO NOT use cleaning materials that contain ammonia, alcohol, any type of spray or any type of flammable substance to clean the inside or outside of the machine. Doing this may cause a fire or electrical shock.


See *To use the product safely* in the *Safety and Legal Booklet* for how to clean the machine.



Be careful not to inhale toner.

! IMPORTANT


- We recommend that you place the drum unit and/or the toner cartridge on a clean, flat, level, stable surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.
- Handle the toner cartridge carefully. If toner scatters on your hands or clothes, immediately wipe or wash it off with cold water.
- To avoid print quality problems, DO NOT touch the shaded parts shown in the illustration.

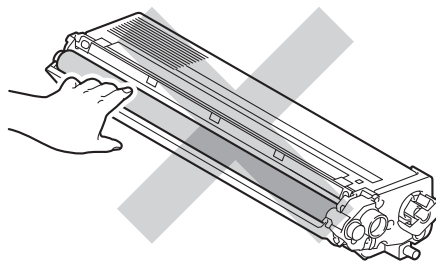


📄 Note

- Be sure to seal up the toner cartridge tightly in a suitable bag so that toner powder does not spill out of the cartridge.
- Go to <http://www.brother.com/original/index.html> for instructions on how to return your used consumable items to the Brother collection program. If you choose not to return your used consumable, please discard the used consumable according to local regulations, keeping it separate from domestic waste. If you have questions, call your local waste disposal office. (See *EU Directive 2002/96/EC* and *EN 50419* in the *Safety and Legal Booklet*)

- 5 Push to release the latches of the corona wire cover (1), and then open the cover.

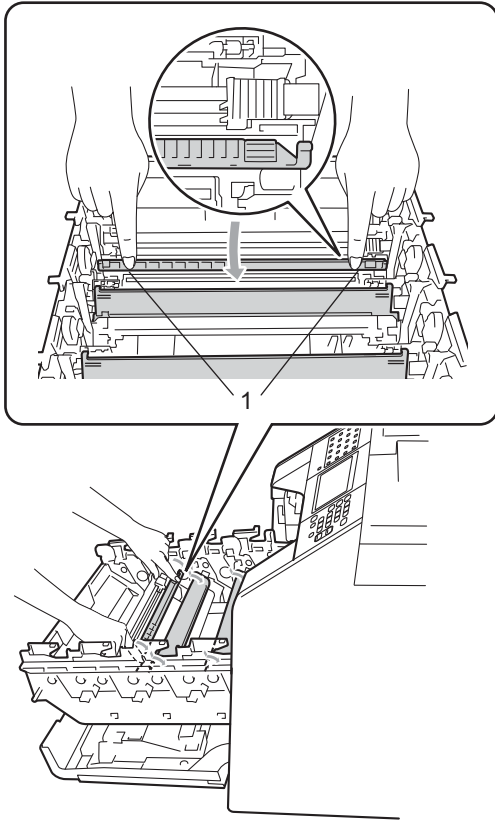


- 6 Clean the corona wires inside the drum unit by gently sliding the green tabs from left to right and right to left several times.

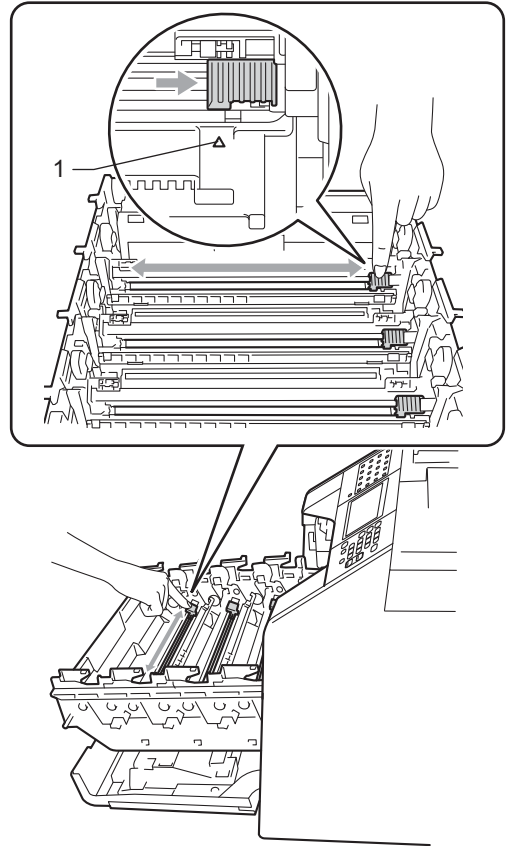

Note


Be sure to return the tab to the home position (▲) (1). If you do not, printed pages may have a vertical stripe.

- 7 Close the corona wire cover.

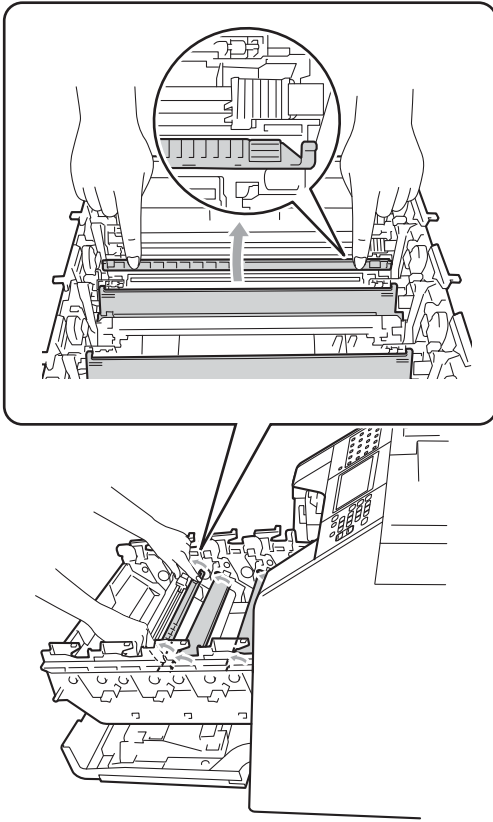

- 8 Repeat steps 5 to 7 to clean each of three remaining corona wires.


- 9 Unpack the new toner cartridge. Gently shake it from side to side several times to distribute the toner evenly inside the cartridge.

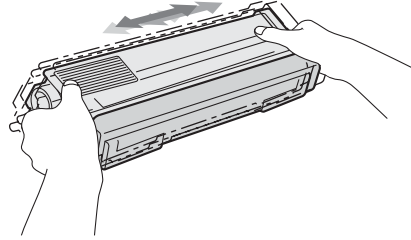

! IMPORTANT


- Unpack the toner cartridge just before you put it in the machine. If a toner cartridge is left unpacked for a long time, the toner life will be shortened.
- If an unpacked drum unit is put in direct sunlight or room light, the unit may be damaged.
- Brother machines are designed to work with toner of a particular specification and will work to a level of optimum performance when used with Brother Original toner cartridges. Brother cannot guarantee this optimum performance if toner or toner cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than Brother Original cartridges with this machine, or the refilling of empty cartridges with toner from other sources. If damage is caused to the drum unit or other part of this machine as a result of the use of toner or toner cartridges other than Brother Original products due to the incompatibility or lack of suitability of those products with this machine, any repairs required as a result may not be covered by the warranty.

- 10 Pull off the protective cover.


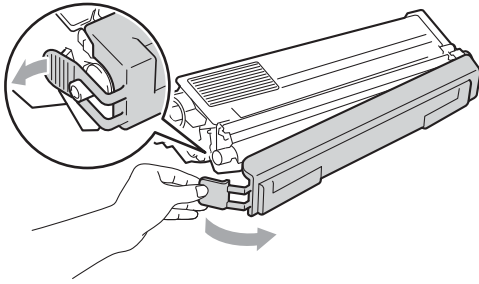


! IMPORTANT

Put the toner cartridge in the drum unit immediately after you have removed the protective cover. To prevent any degradation to the print quality, **DO NOT** touch the shaded parts shown in the illustrations.

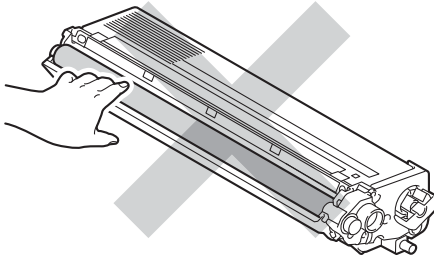


- 11 Hold the handle of the toner cartridge and slide the toner cartridge into the drum unit, then slightly pull it toward you until you hear it click into place. Make sure that you match the toner cartridge colour to the same colour label on the drum unit. Repeat this for all the toner cartridges.

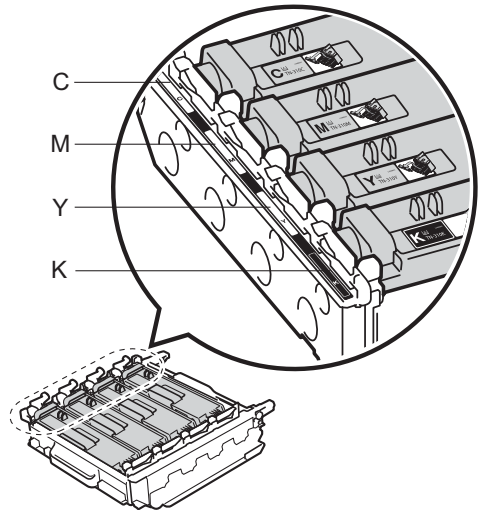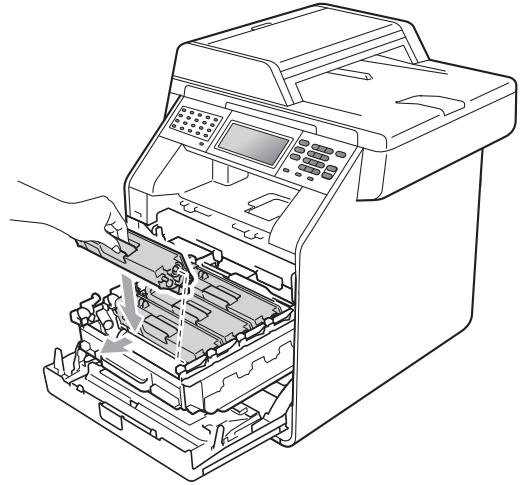

C - Cyan M - Magenta
Y - Yellow K - Black

- 12 Push the drum unit in until it stops.

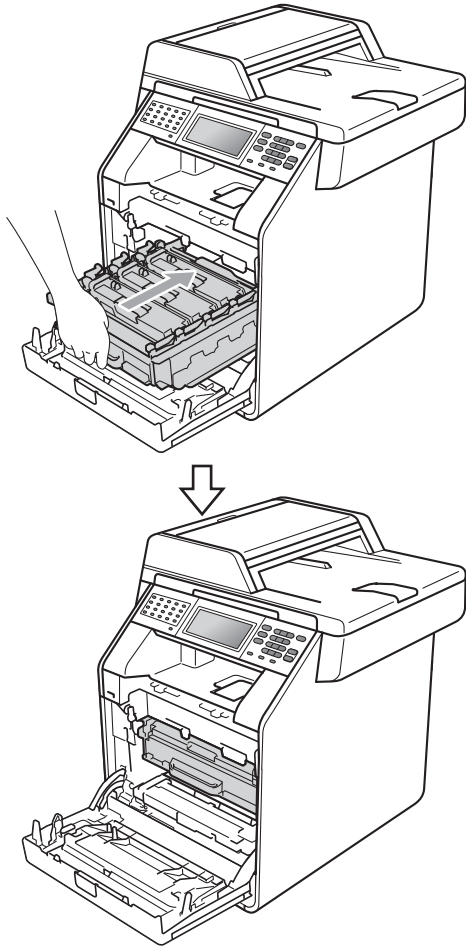

- 13 Close the front cover of the machine.



Note

After you replace a toner cartridge, DO NOT turn off the machine's power switch or open the front cover until the LCD clears the **Please Wait** message and returns to Ready mode.

Replacing the drum unit

Model name: DR-320CL

A new drum unit can print approximately 25,000 A4 or Letter size single-sided pages.

! IMPORTANT

For best performance, use a Brother Original drum unit and Brother Original toner units. Printing with a third-party drum unit or toner unit may reduce not only the print quality but also the quality and life of the machine itself. Warranty coverage may not apply to problems caused by the use of a third-party drum unit or toner unit.

Drum Error

The corona wires have become dirty. Clean the corona wires in the drum unit. (See *Cleaning the corona wires* on page 97.)

If you cleaned the corona wires and **Drum Error** was not cleared then the drum unit is at the end of its life. Replace the drum unit with a new one.

Replace Parts Drum

The drum unit has exceeded its rated life. Please replace the drum unit with a new one. We recommend a Brother Original drum unit be installed at this time.

After replacement, reset the drum counter by following the instructions included with the new drum unit.

Drum Stop

We cannot guarantee the print quality. Please replace the drum unit with a new one. We recommend a Brother Original drum unit be installed at this time.


After replacement, reset the drum counter by following the instructions included with the new drum unit.

Replacing the drum unit


! IMPORTANT

- While removing the drum unit, handle it carefully because it may contain toner. If toner scatters on your hands or clothes, immediately wipe or wash it off with cold water.
- Every time you replace the drum unit, clean the inside of the machine. (See *Cleaning and Checking the machine* on page 91.)


- 1 Make sure that the machine is turned on.
- 2 Press the front cover release button and then open the front cover.

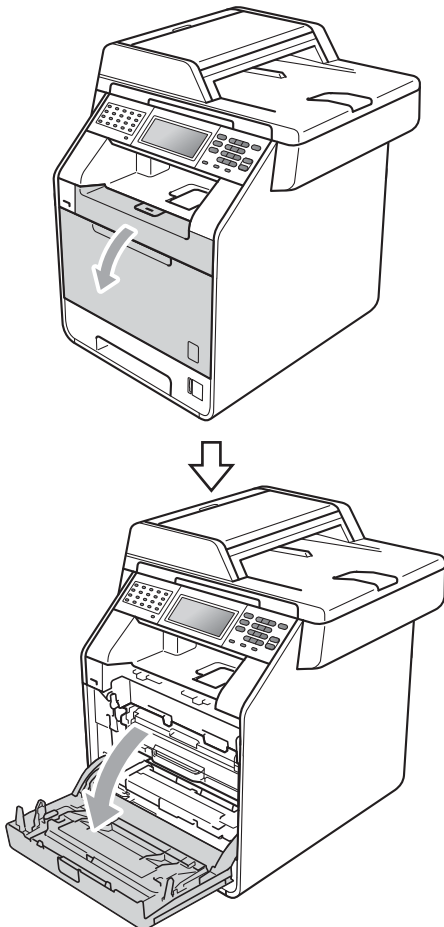

- 3 Hold the green handle of the drum unit. Pull the drum unit out until it stops.

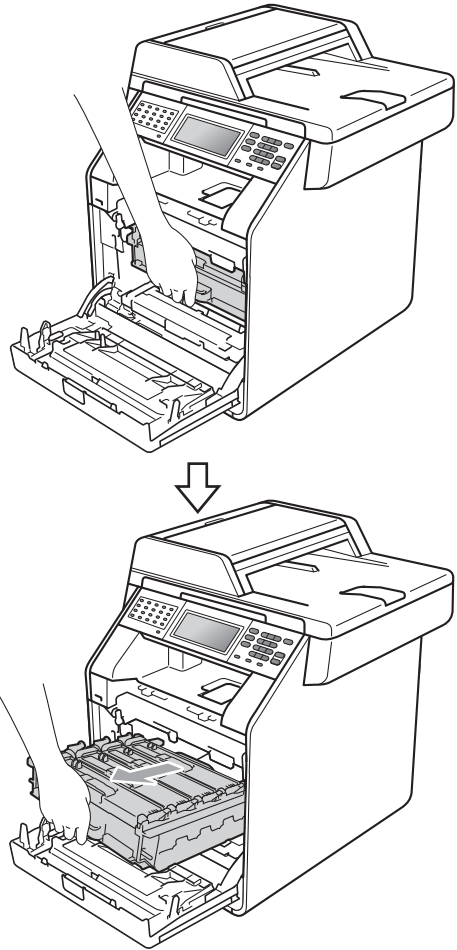


- 4 Turn the green lock lever (1) at the left of the machine anticlockwise to the release position. Holding the green handles of the drum unit, lift the front of the drum unit and remove it from the machine.

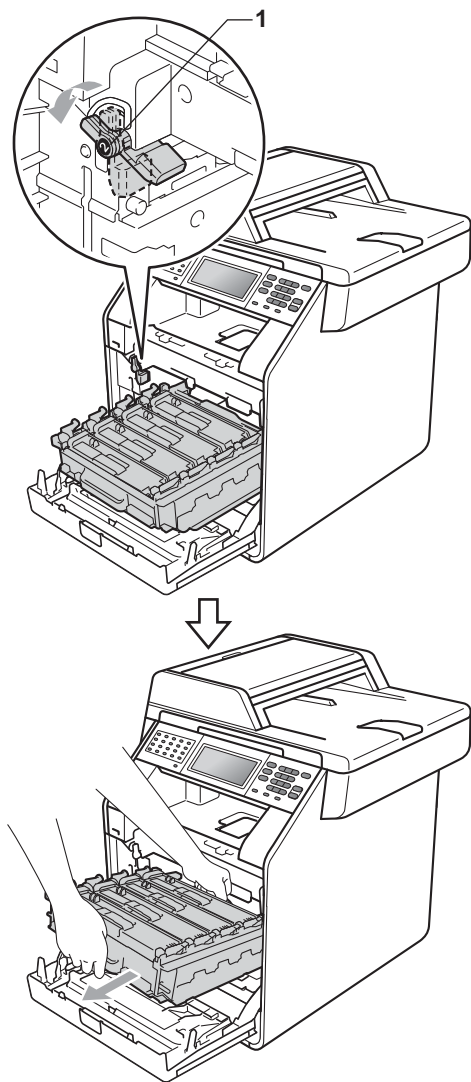


! IMPORTANT

- We recommend that you place the drum unit and/or the toner cartridge on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.
- To prevent damage to the machine from static electricity, DO NOT touch the electrodes shown in the illustration.

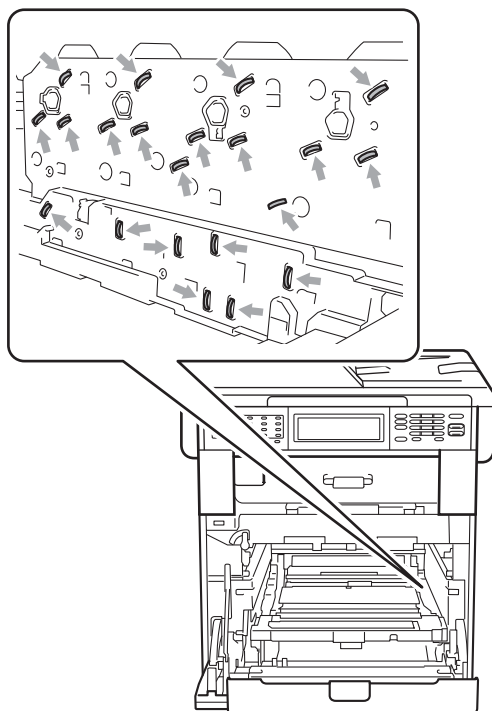

- Hold the green handles of the drum unit when you carry it. DO NOT hold the sides of the drum unit.

- 5 Hold the handle of the toner cartridge and slightly push it to unlock it. Then pull it out of the drum unit. Repeat this for all the toner cartridges.

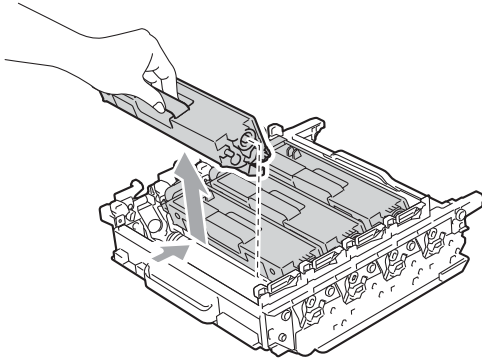

! WARNING

DO NOT put a toner cartridge into a fire. It could explode, resulting in injuries.

DO NOT use cleaning materials that contain ammonia, alcohol, any type of spray, or any type of flammable substance to clean the outside or inside of the machine. Doing this may cause a fire or electrical shock.


See *To use the product safely* in the *Safety and Legal Booklet* for how to clean the machine.



Be careful not to inhale toner.

! IMPORTANT


- Handle the toner cartridge carefully. If toner scatters on your hands or clothes, immediately wipe or wash it off with cold water.
- We recommend that you place the drum unit and/or the toner cartridge on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.
- To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations.

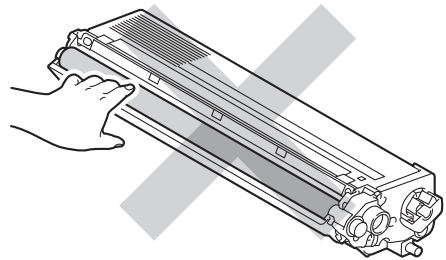

Note


- Be sure to seal up the used drum unit tightly in a bag so that toner powder does not spill out of the unit.
- Go to <http://www.brother.com/original/index.html> for instructions on how to return your used consumable items to the Brother collection program. If you choose not to return your used consumable, please discard the used consumable according to local regulations, keeping it separate from domestic waste. If you have questions, call your local waste disposal office. (See *EU Directive 2002/96/EC* and *EN 50419* in the *Safety and Legal Booklet*)

- 6 Unpack the new drum unit and remove the protective cover.

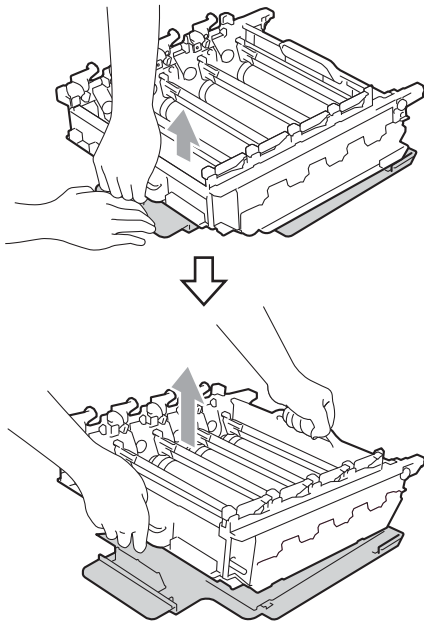




! IMPORTANT

- To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations.

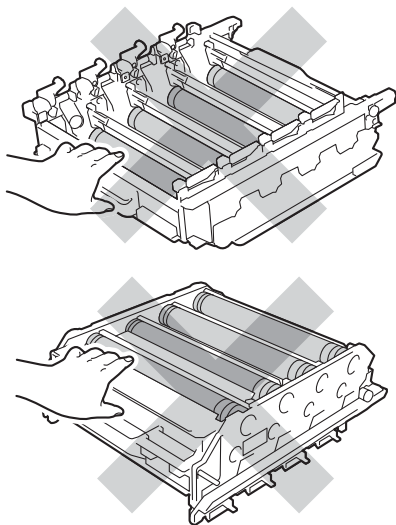


- Unpack the drum unit just before you put it in the machine. Exposure to direct sunlight or room light may damage the drum unit.

- 7 Hold the handle of the toner cartridge and slide the toner cartridge into the new drum unit, then slightly pull it toward you until you hear it click into place. Make sure that you match the toner cartridge colour to the same colour label on the drum unit. Repeat this for all the toner cartridges.

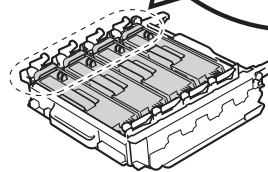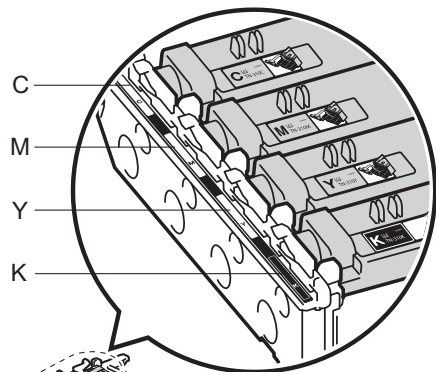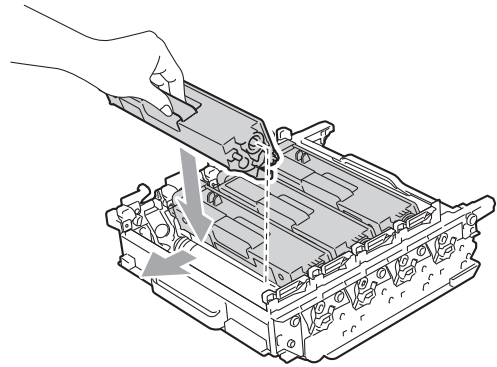


- C - Cyan M - Magenta
Y - Yellow K - Black


- 8 Make sure the green lock lever (1) is in the release position as shown in the illustration.

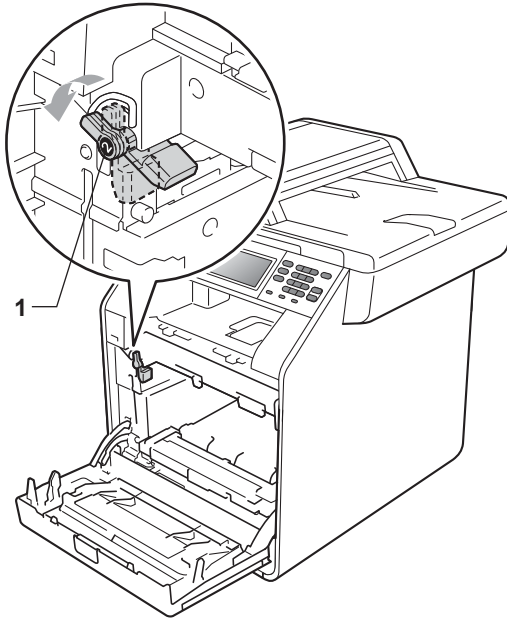


- 9 Match the guide ends (2) of the drum unit to the ► marks (1) on both sides of the machine, then gently slide the drum unit into the machine until it stops at the green lock lever.

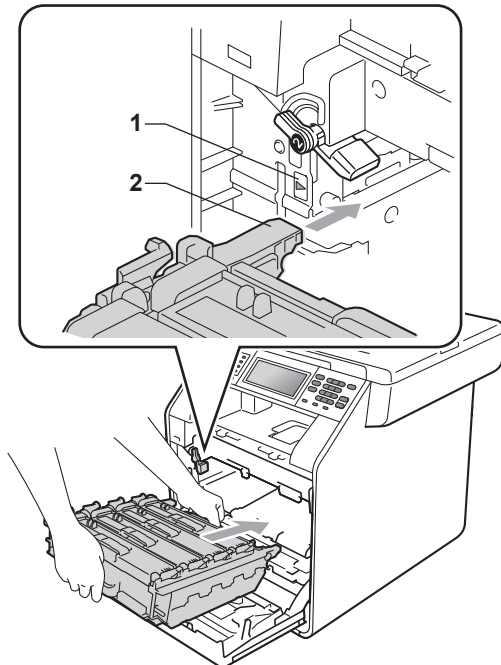

- 10 Turn the green lock lever (1) clockwise to the lock position.

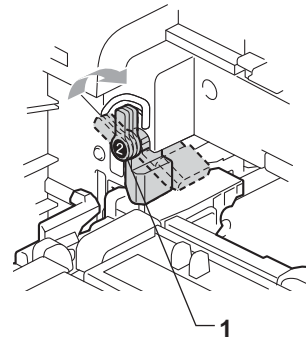

- 11 Push the drum unit in until it stops.

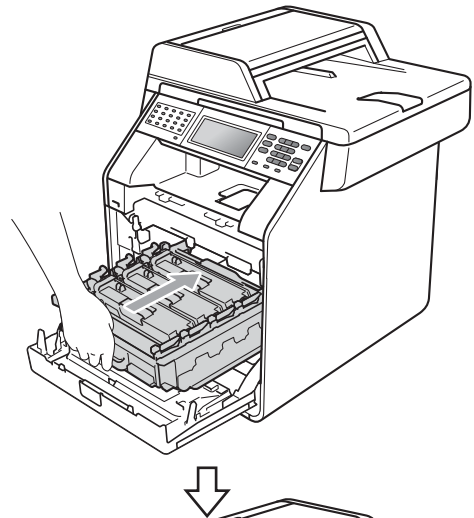

- 12 Close the front cover of the machine.

A

Resetting the drum counter

When you replace a drum unit with a new one, you will need to reset the drum counter by completing the following steps:

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display
Machine Info..
Press Machine Info..
- 3 Press **Reset Menu**.
- 4 Press **Drum**.
- 5 The machine will display
Reset Drum?.
- 6 Press **Yes**, and then press **Stop/Exit**.

Replacing the belt unit

Model name: BU-300CL

A new belt unit can print approximately 50,000 A4 or Letter size single-sided pages.

Replace Parts Belt Unit


When the **Replace Parts Belt Unit** message appears on the LCD, you will need to replace the belt unit:

! IMPORTANT


- **DO NOT** touch the surface of the belt unit. If you touch it, it could degrade print quality.
- Damage caused by incorrect handling of the belt unit may void your warranty.

- 1 Make sure that the machine is turned on.


- 2 Press the front cover release button and then open the front cover.

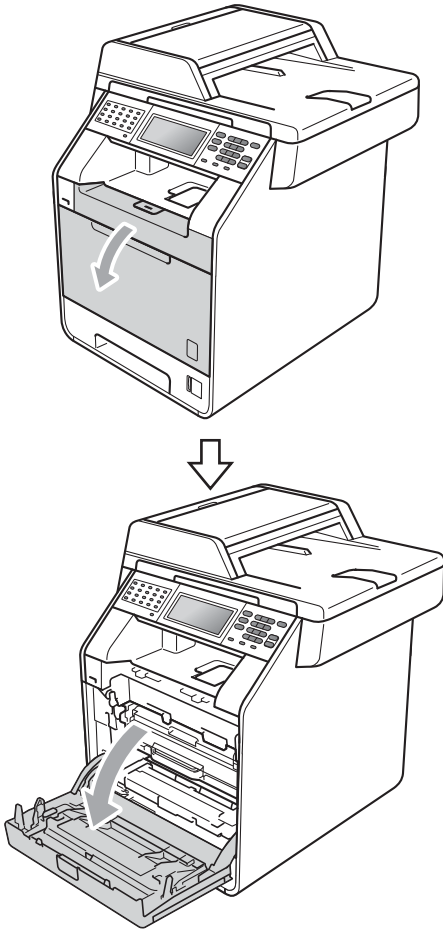

- 3 Hold the green handle of the drum unit. Pull the drum unit out until it stops.

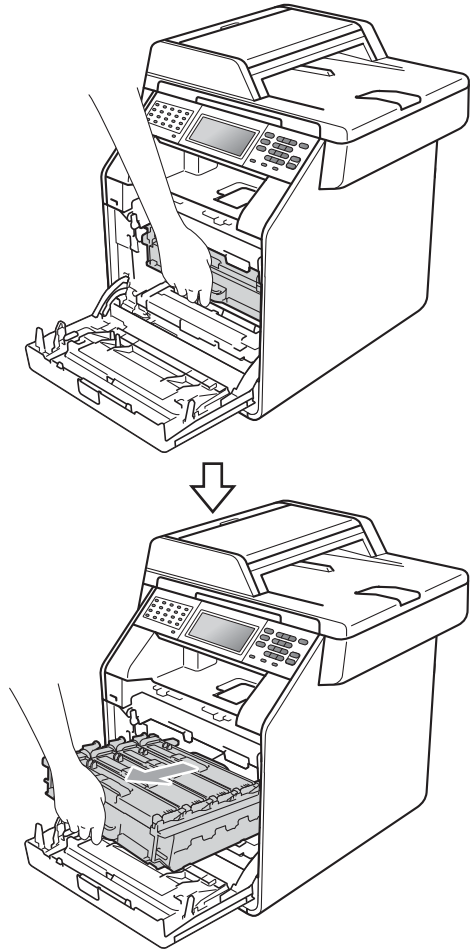


- 4 Turn the green lock lever (1) at the left of the machine anticlockwise to the release position. Holding the green handles of the drum unit, lift the front of the drum unit and remove it from the machine.

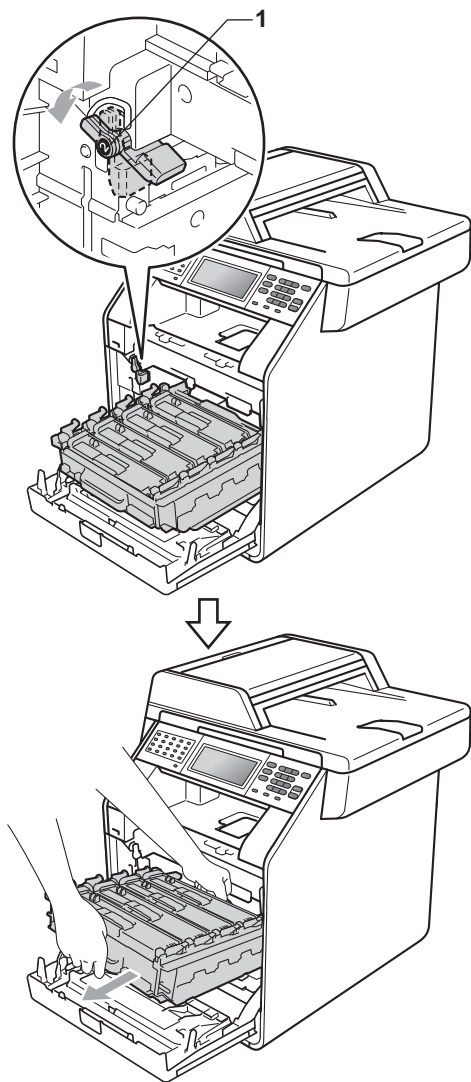


! IMPORTANT

- We recommend that you place the drum unit and/or the toner cartridge on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.
- To prevent damage to the machine from static electricity, DO NOT touch the electrodes shown in the illustration.

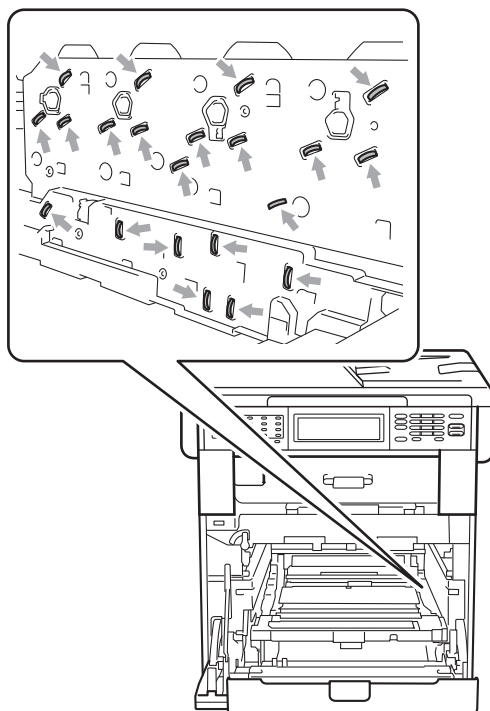


- Hold the green handles of the drum unit when you carry it. DO NOT hold the sides of the drum unit.

- To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations.

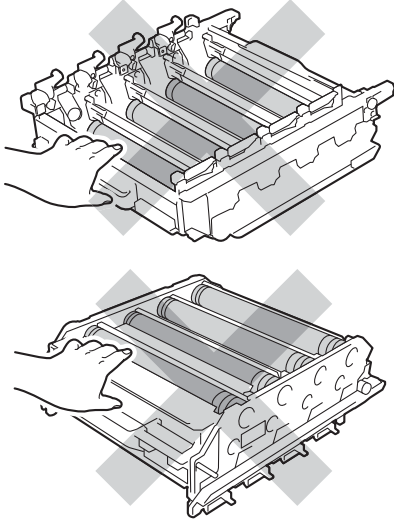


- 5 Hold the green handle of the belt unit with both hands and lift the belt unit up, then pull it out.

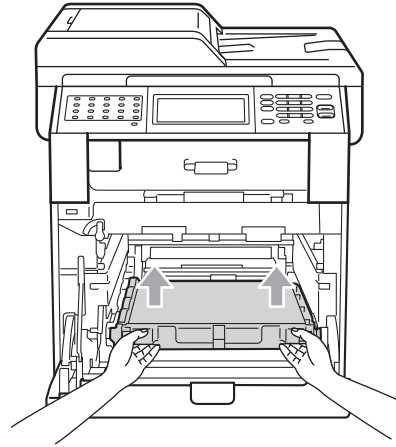


! IMPORTANT

To avoid print quality problems, DO NOT touch the shaded parts shown in the illustration.

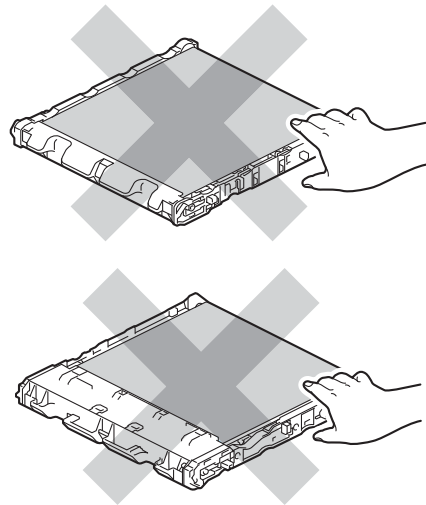


- 6 Unpack the new belt unit.


- 7** Put the new belt unit back in the machine. Make sure the belt unit is level and fits firmly into place.

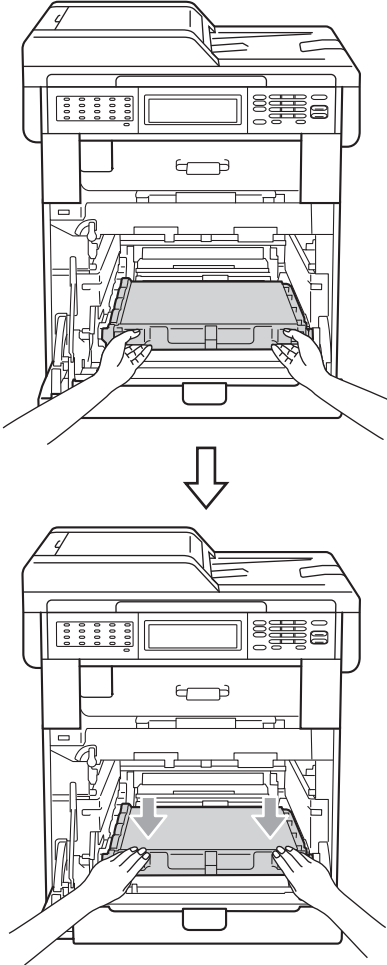


- 8** Make sure the green lock lever (1) is in the release position as shown in the illustration.

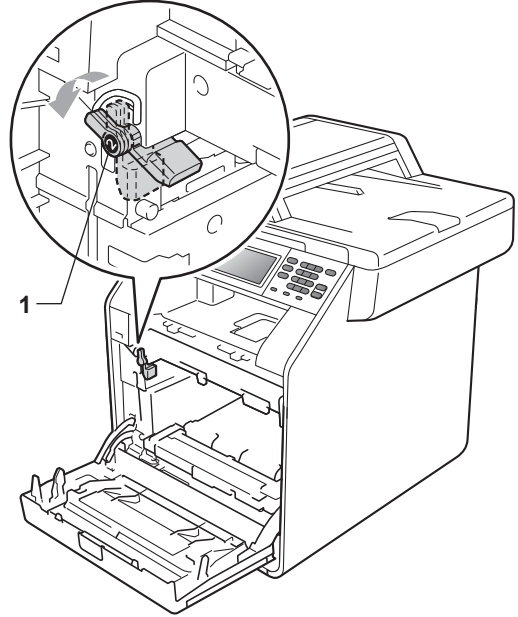


- 9** Match the guide ends (2) of the drum unit to the ► marks (1) on both sides of the machine, then gently slide the drum unit into the machine until it stops at the green lock lever.

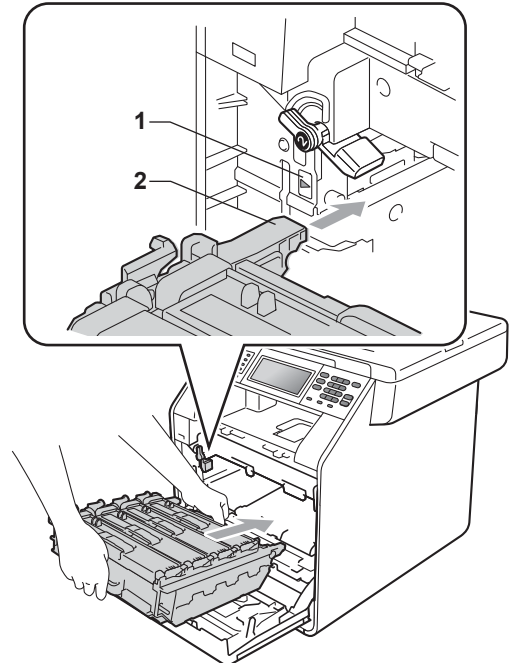

- 10 Turn the green lock lever (1) clockwise to the lock position.

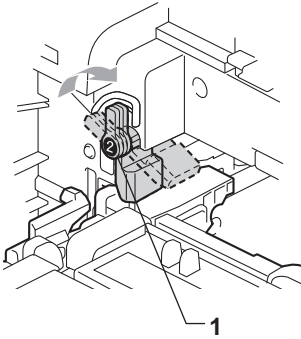

- 11 Push the drum unit in until it stops.

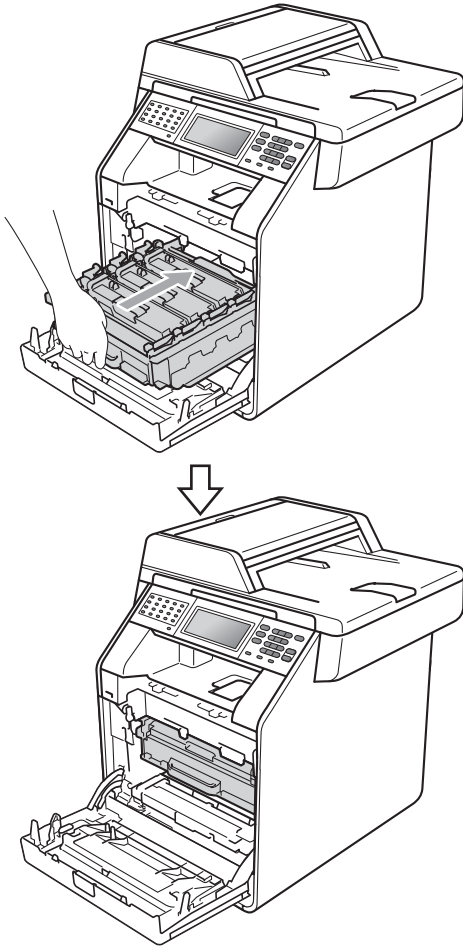

- 12 Close the front cover of the machine.

Resetting the belt unit counter

When you replace a belt unit with a new one, you will need to reset the belt unit counter by completing the following steps:

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Machine Info..**
Press **Machine Info..**
- 3 Press **Reset Menu**.
- 4 Press **Belt Unit**.
- 5 The machine will display **Reset Belt Unit?.**
- 6 Press **Yes**, and then press **Stop/Exit**.

Replacing the waste toner box

Model name: WT-300CL

A new waste toner box can print approximately 50,000 A4 or Letter size single-sided pages.

Replace Parts WT Box End Soon

If the LCD shows `Replace Parts WT Box End Soon`, it means the waste toner box is near the end of its life. Buy a new waste toner box and have it ready before you get a `Replace WT Box` message.

Replace WT Box

When the `Replace WT Box` message appears on the LCD, you will need to replace the waste toner box:

WARNING

DO NOT put the waste toner box into a fire. It could explode.


Be careful not to spill the toner. DO NOT inhale or allow it to get into your eyes.

IMPORTANT


DO NOT reuse the waste toner box.

- 1 Make sure that the machine is turned on.


- 2 Press the front cover release button and then open the front cover.

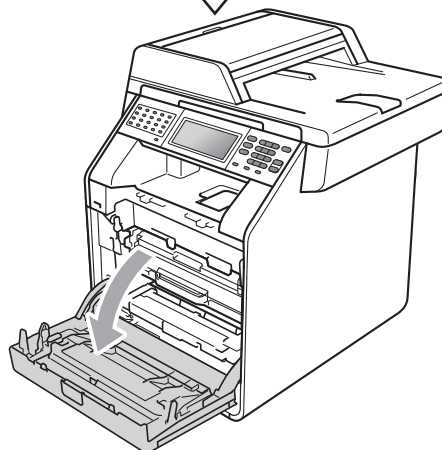

- 3 Hold the green handle of the drum unit. Pull the drum unit out until it stops.

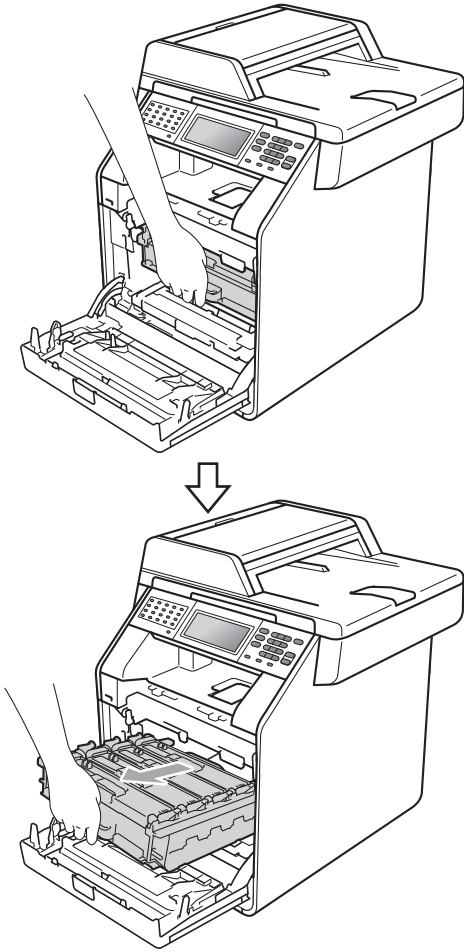


- 4 Turn the green lock lever (1) at the left of the machine anticlockwise to the release position. Holding the green handles of the drum unit, lift the front of the drum unit and remove it from the machine.

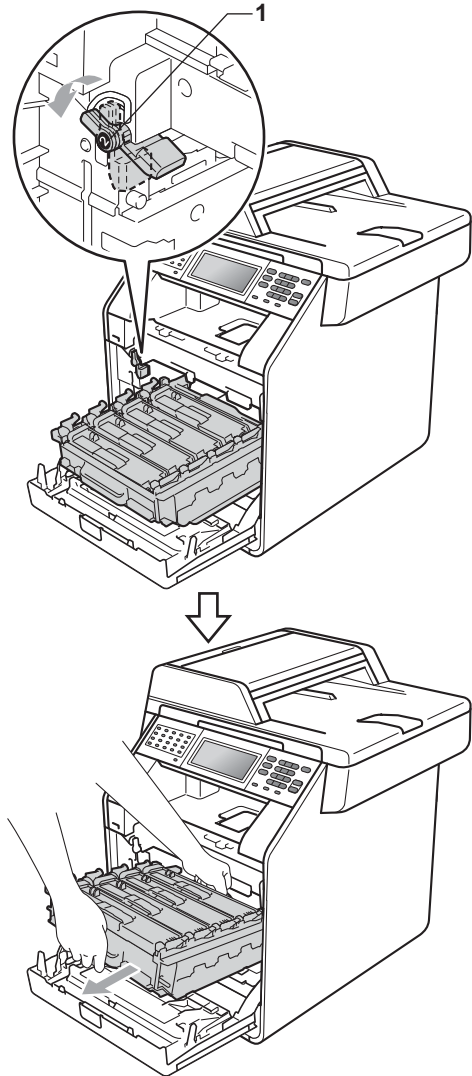


! IMPORTANT

- We recommend that you place the drum unit and/or the toner cartridge on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.
- To prevent damage to the machine from static electricity, DO NOT touch the electrodes shown in the illustration.

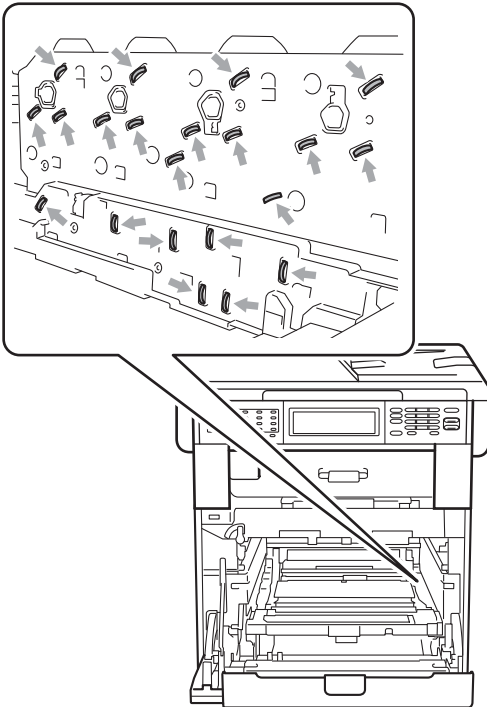


- To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations.

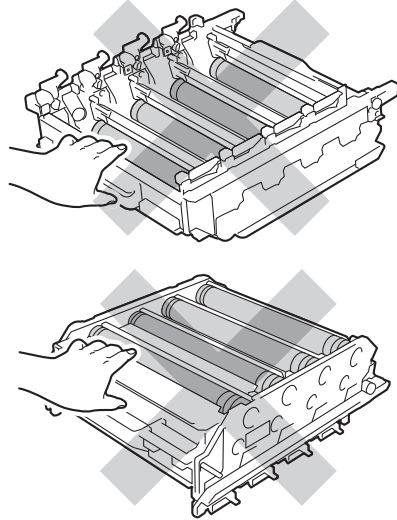


- Hold the green handles of the drum unit when you carry it. DO NOT hold the sides of the drum unit.

- 5 Hold the green handle of the belt unit with both hands and lift the belt unit up, then pull it out.

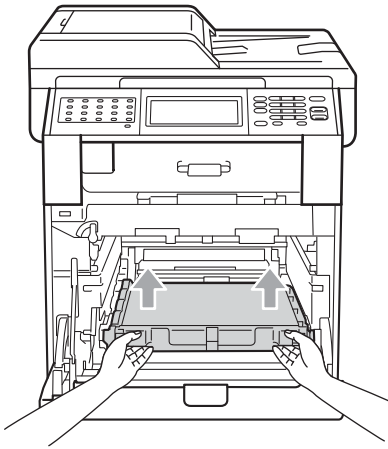


! IMPORTANT

To avoid print quality problems, DO NOT touch the shaded parts shown in the illustration.

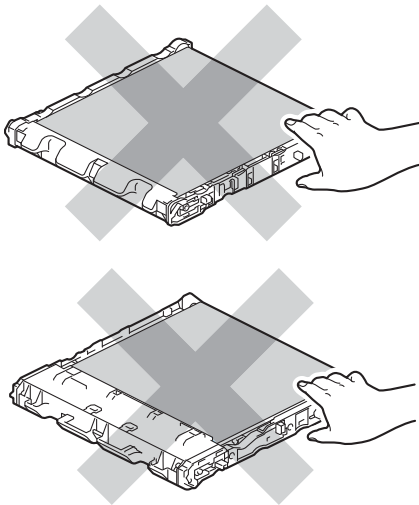

- 6 Remove the two pieces of orange packing material and discard them.

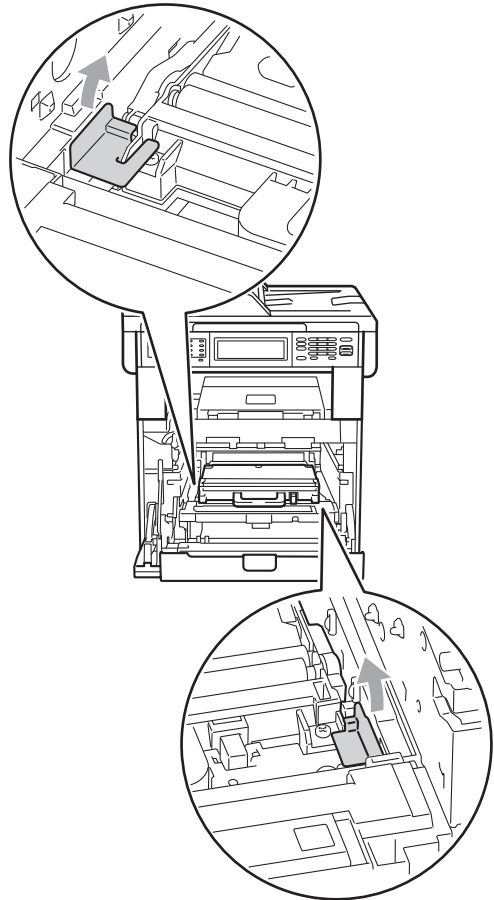


Note

This step is only necessary when you are replacing the waste toner box for the first time, and are not required for the replacement waste toner box. The orange packing pieces are installed at the factory to protect your machine during shipment.

A

- 7 Hold the green handle of the waste toner box and remove the waste toner box from the machine.

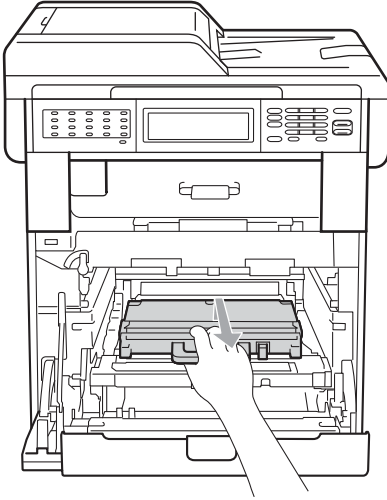


⚠ CAUTION

Handle the waste toner box carefully in case you accidentally spill or scatter toner. If toner scatters on your hands or clothes, immediately wipe or wash it off with cold water.


Note

Discard the used waste toner box according to local regulations, keeping it separate from domestic waste. If you have questions, call your local waste disposal office.


- 8 Unpack the new waste toner box and put the new waste toner box in the machine using the green handle. Make sure the waste toner box is level and fits firmly into place.

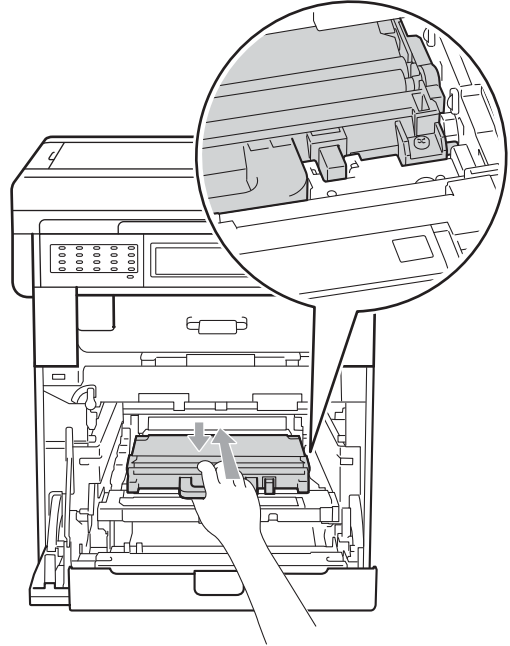


- 9 Put the belt unit back into the machine. Make sure the belt unit is level and fits firmly into place.

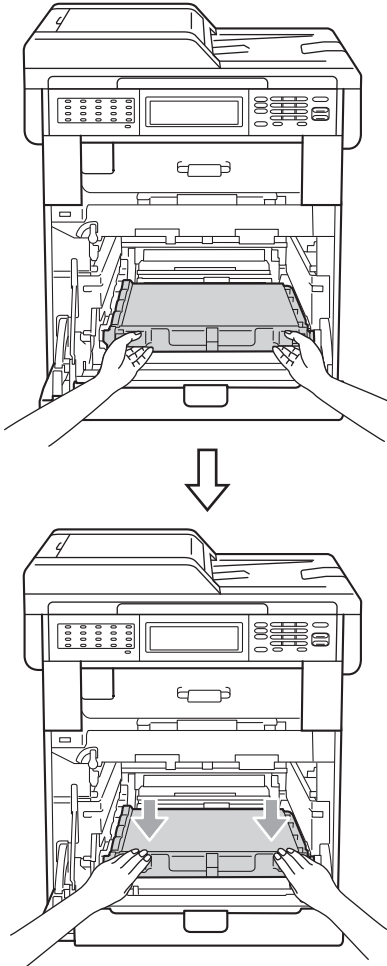


- 10 Make sure the green lock lever (1) is in the release position as shown in the illustration.

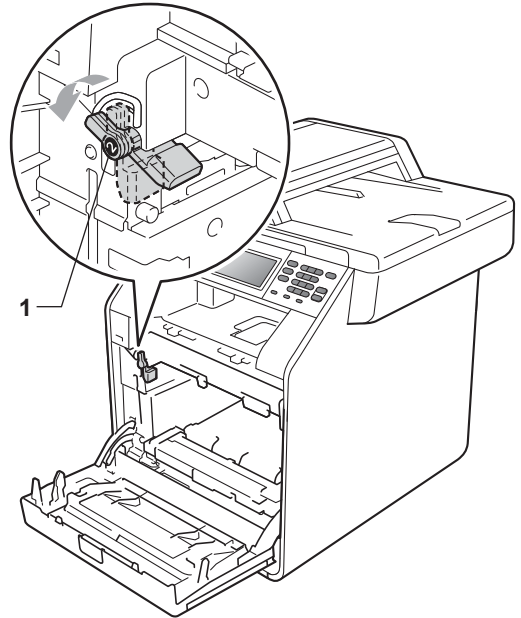


- 11 Match the guide ends (2) of the drum unit to the ► marks (1) on both sides of the machine, then gently slide the drum unit into the machine until it stops at the green lock lever.

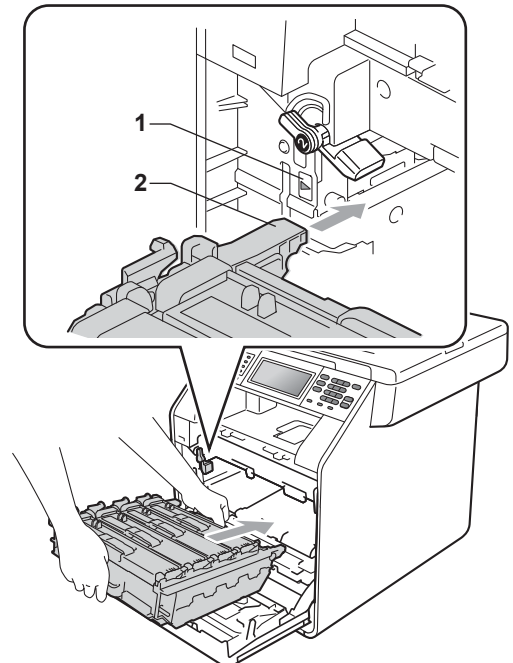

- 12 Turn the green lock lever (1) clockwise to the lock position.

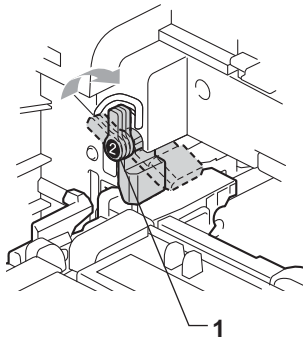

- 13 Push the drum unit in until it stops.

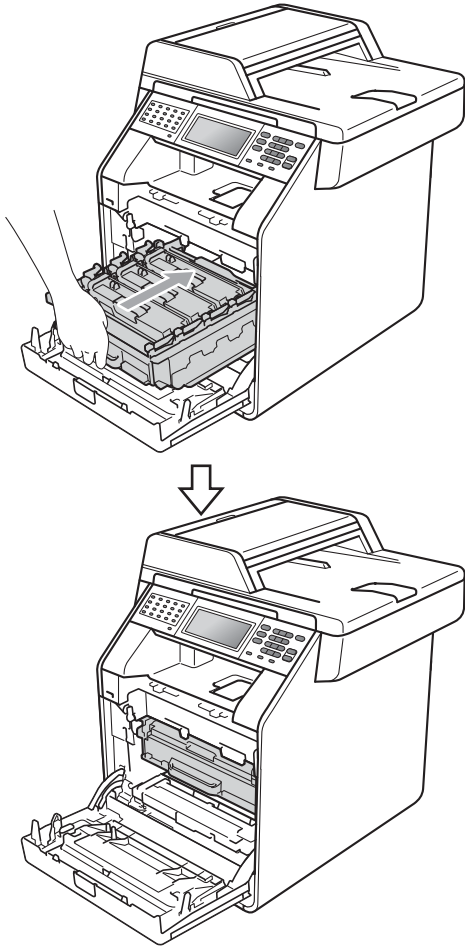

- 14 Close the front cover of the machine.

Cleaning and Checking the machine

Clean the outside and inside of the machine regularly with a dry, lint-free cloth. When you replace the toner cartridge or the drum unit, make sure that you clean the inside of the machine. If printed pages are stained with toner, clean the inside of the machine with a dry, lint-free cloth.

WARNING

DO NOT use any flammable substances, spray or organic solvent/liquids containing alcohol/ammonia to clean the inside or outside of the machine. Doing this may cause a fire or electrical shock.




Be careful not to inhale toner.

IMPORTANT

Use neutral detergents. Cleaning with volatile liquids such as thinner or benzene will damage the surface of the machine.

Cleaning the outside of the machine

- 1 Turn off the machine. Unplug the telephone line cord first, disconnect all cables, and then unplug the power cord from the electrical socket.
- 2 Pull the paper tray completely out of the machine.

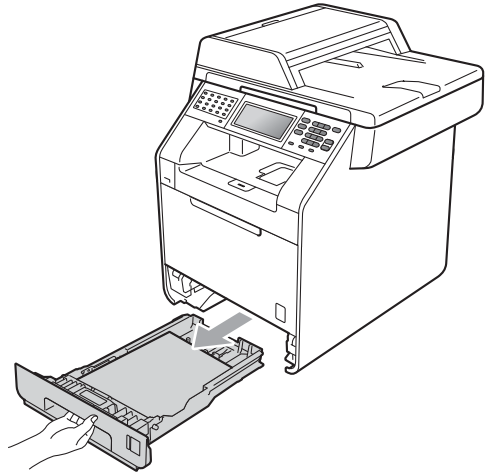


- 3 Wipe the outside of the machine with a dry, lint-free soft cloth to remove dust.



- 4 Remove any paper that is in the paper tray.


- 5 Wipe the inside and the outside of the paper tray with a dry, lint-free soft cloth to remove dust.

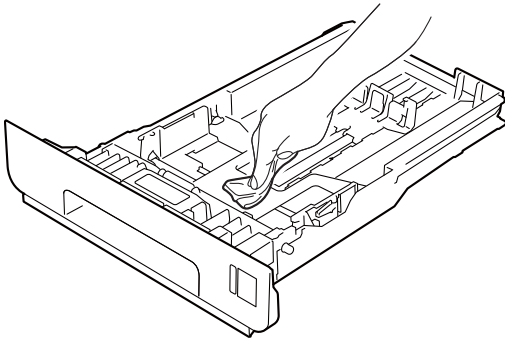


- 6 Re-load the paper and put the paper tray firmly back in the machine.
- 7 Plug the machine's power cord back into the electrical socket first, connect all cables, and then plug in the telephone line cord. Turn on the machine.

Cleaning the scanner glass


- 1 Turn off the machine. Unplug the telephone line cord first, disconnect all cables, and then unplug the power cord from the electrical socket.
- 2 Unfold the ADF document support (1) and then open the ADF cover (2). Clean the white bar (3) and the scanner glass strip (4) underneath it with a soft lint-free cloth moistened with water. Close the ADF cover (2) and fold the ADF document support (1).

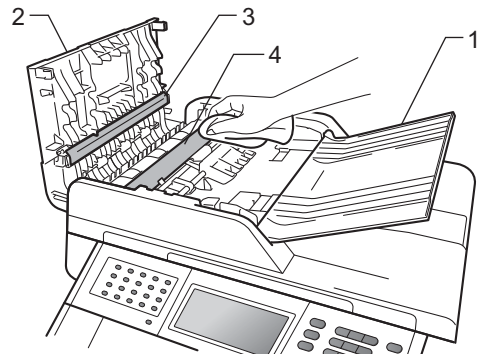

- 3 Lift the document cover (1). Clean the white plastic surface (2) and scanner glass (3) underneath it with a soft lint-free cloth moistened with water.

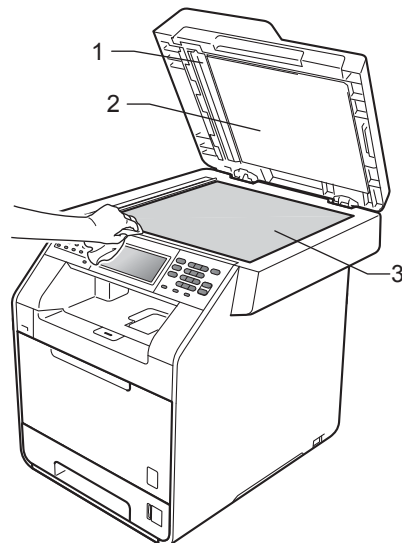

- 4 In the ADF unit, clean the white bar (1) and the scanner glass strip (2) underneath it with a soft lint-free cloth moistened with water.

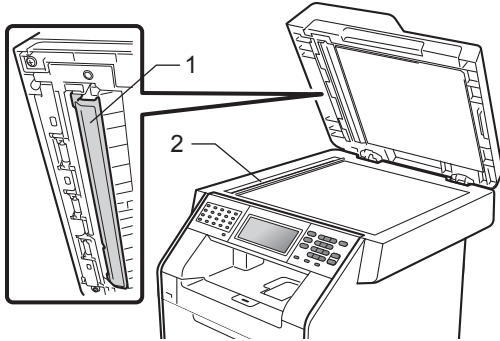


Note

In addition to cleaning the scanner glass and glass strip with a soft lint-free cloth moistened with water, run your finger tip over the glass to see if you can feel anything on it. If you feel dirt or debris, clean the glass again concentrating on that area. You may need to repeat the cleaning process three or four times. To test, make a copy after each cleaning.



- 5 Plug the machine's power cord back into the electrical socket first, connect all cables, and then plug in the telephone line cord. Turn on the machine.

Cleaning the laser scanner windows



- 1 Turn off the machine. Unplug the telephone line cord first, disconnect all cables, and then unplug the power cord from the electrical socket.
- 2 Press the front cover release button and then open the front cover.

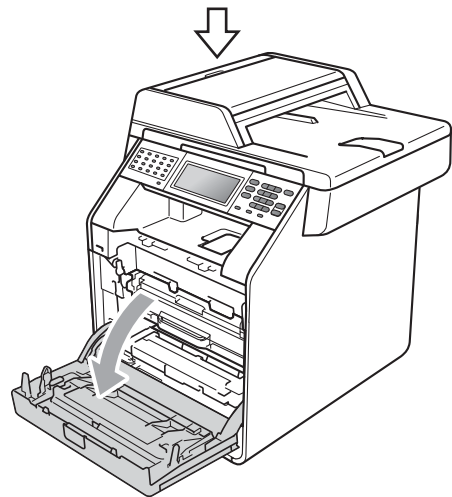

- 3 Hold the green handle of the drum unit. Pull the drum unit out until it stops.

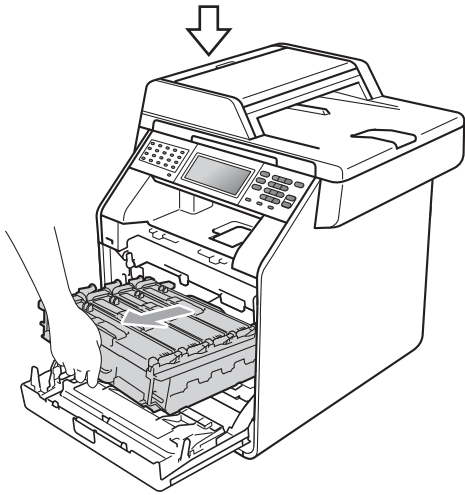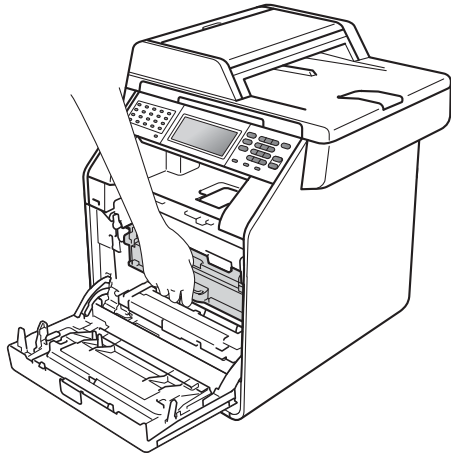


- 4 Turn the green lock lever (1) at the left of the machine anticlockwise to the release position. Holding the green handles of the drum unit, lift the front of the drum unit and remove it from the machine.

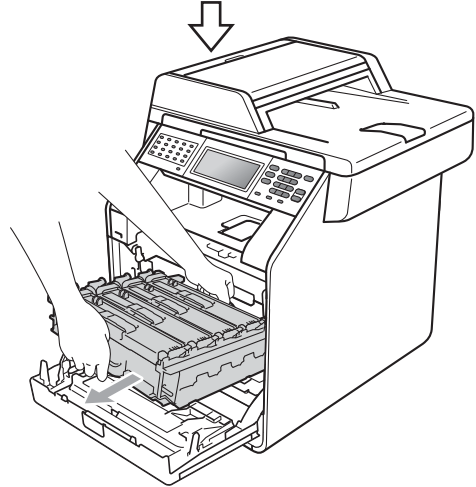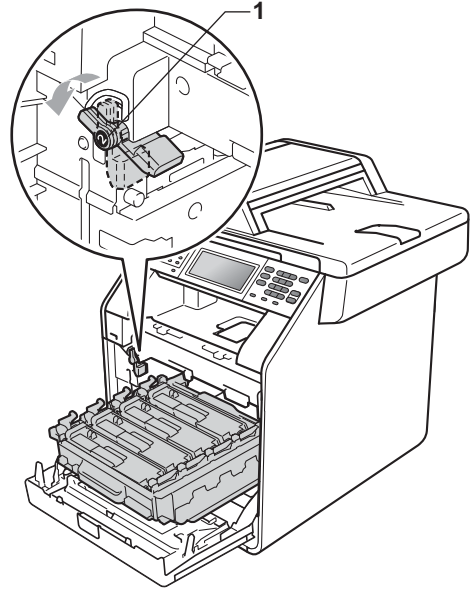



! IMPORTANT

- We recommend that you place the drum unit and/or the toner cartridge on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.
- To prevent damage to the machine from static electricity, **DO NOT** touch the electrodes shown in the illustration.

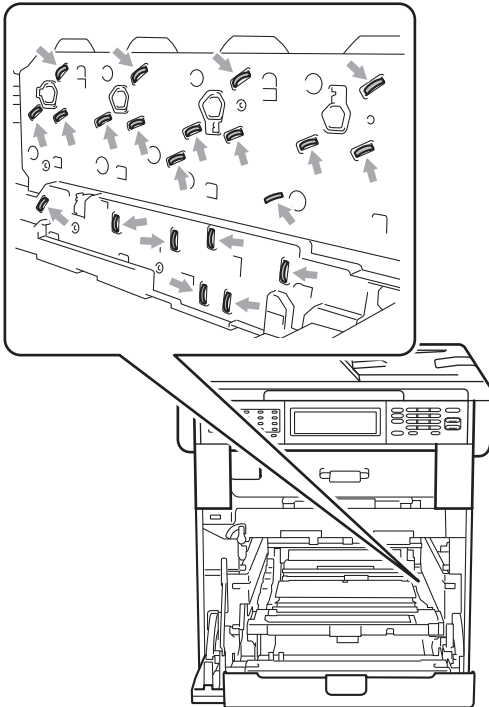


- Hold the green handles of the drum unit when you carry it. **DO NOT** hold the sides of the drum unit.


- 5 Wipe the four scanner windows (1) with a dry, lint-free cloth.

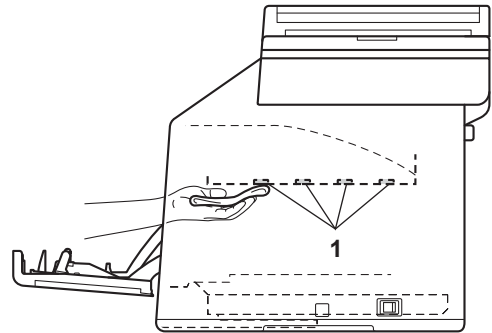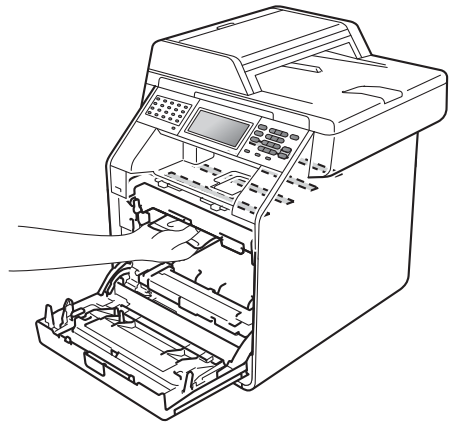


- 6 Make sure the green lock lever (1) is in the release position as shown in the illustration.

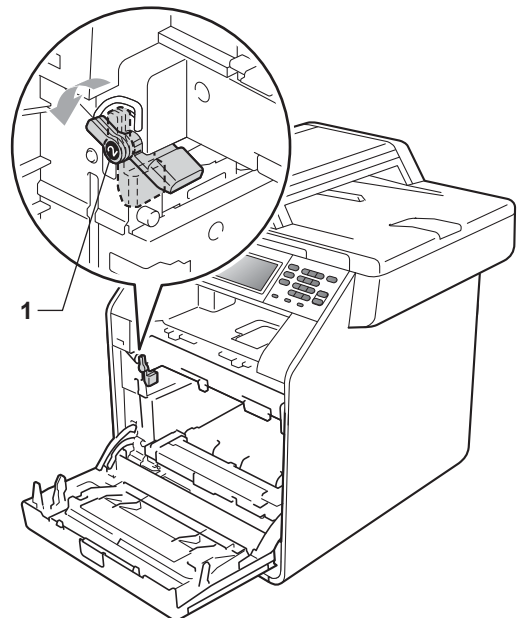


- 7 Match the guide ends (2) of the drum unit to the ► marks (1) on both sides of the machine, then gently slide the drum unit into the machine until it stops at the green lock lever.

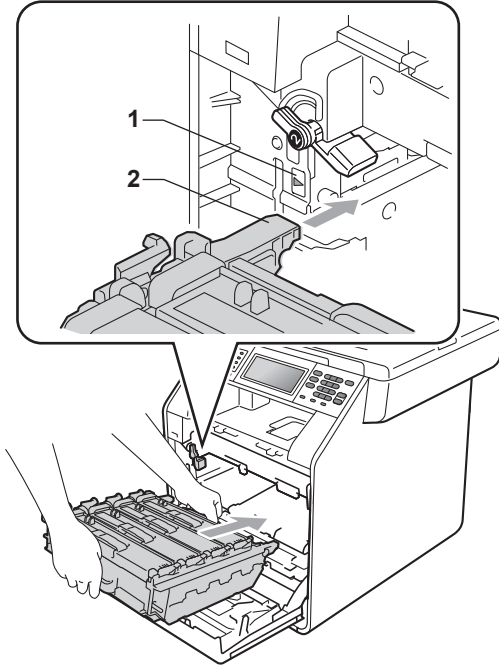

- 8 Turn the green lock lever (1) clockwise to the lock position.

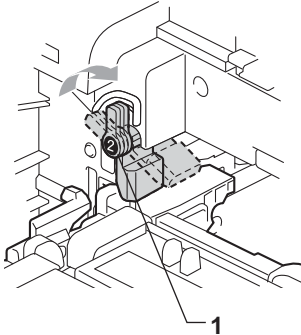

- 9 Push the drum unit in until it stops.

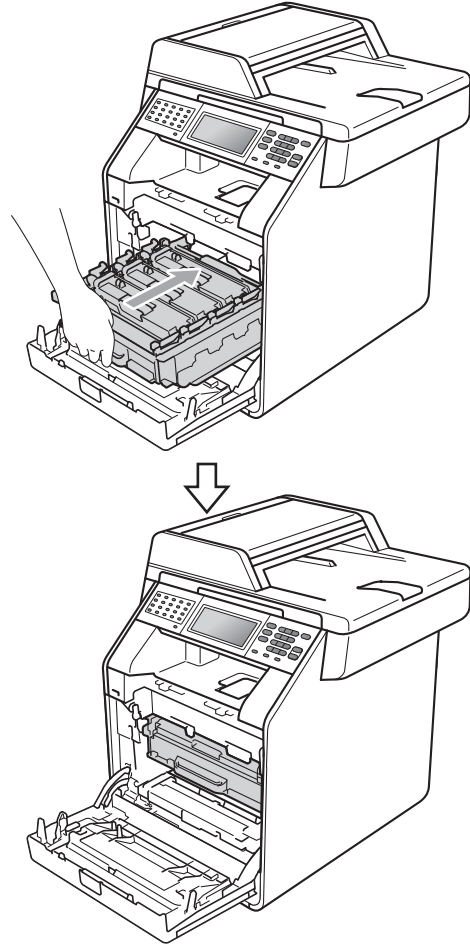


- 10 Close the front cover of the machine.

- 11 Plug the machine's power cord back into the electrical socket first, connect all cables, and then plug in the telephone line cord. Turn on the machine.


Cleaning the corona wires

If you have print quality problems, clean the four corona wires as follows:


- 1 Press the front cover release button and then open the front cover.

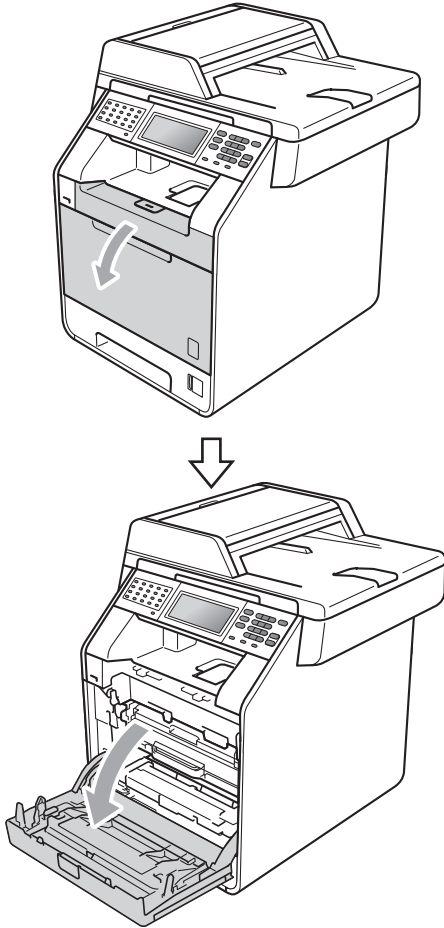


- 2 Hold the green handle of the drum unit. Pull the drum unit out until it stops.

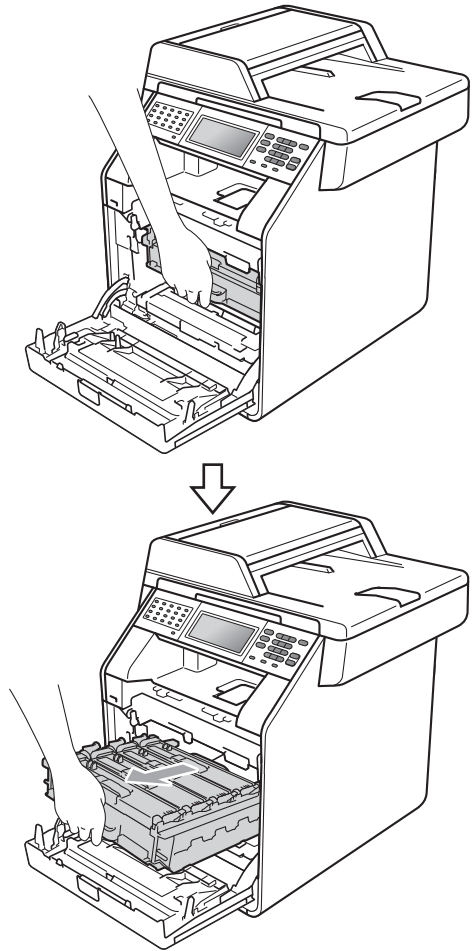


- 3 Hold the handle of the toner cartridge and slightly push it toward the machine to unlock it. Then pull it out of the drum unit. Repeat this for all the toner cartridges.

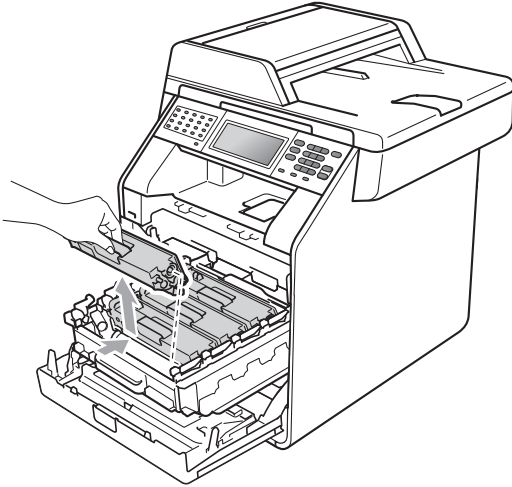


- 4 Push to release the latches of the corona wire cover (1), and then open the cover.

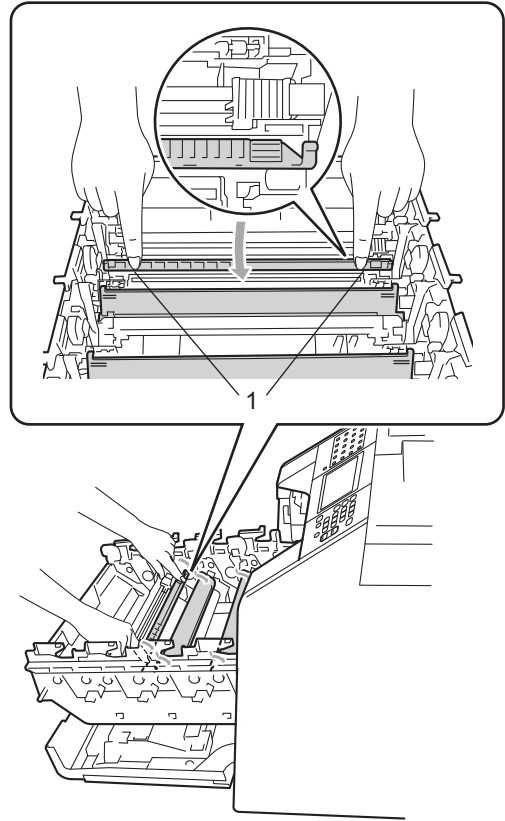

- 5 Clean the corona wires inside the drum unit by gently sliding the green tabs from left to right and right to left several times.

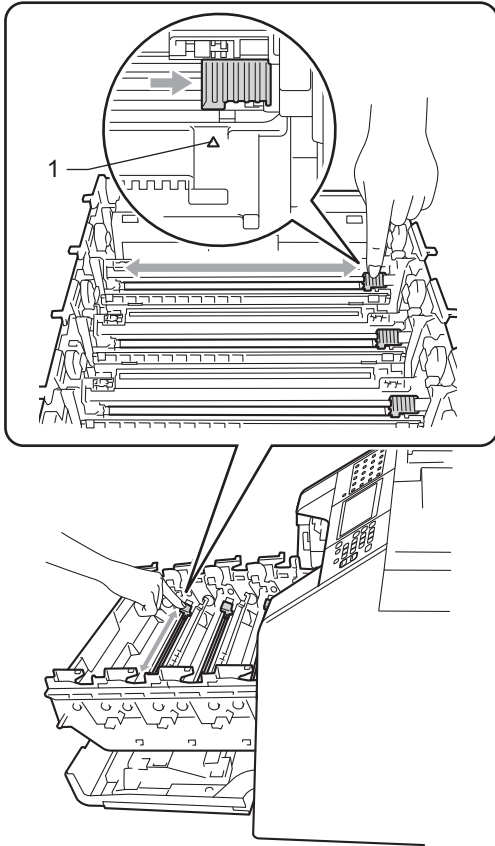

- 6 Close the corona wire cover.

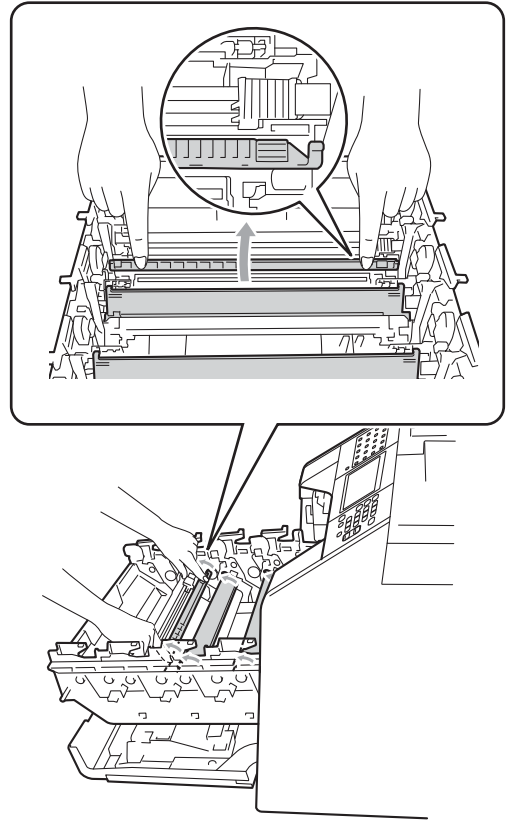




- 7 Repeat steps 4 to 6 to clean each of three remaining corona wires.



Note



Be sure to return the tab to the home position (▲) (1). If you do not, printed pages may have a vertical stripe.

- 8 Hold the handle of the toner cartridge and slide the toner cartridge into the drum unit, then slightly pull it toward you until you hear it click into place. Make sure that you match the toner cartridge colour to the same colour label on the drum unit. Repeat this for all the toner cartridges.

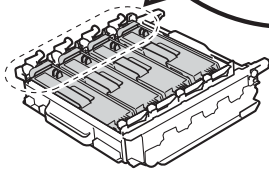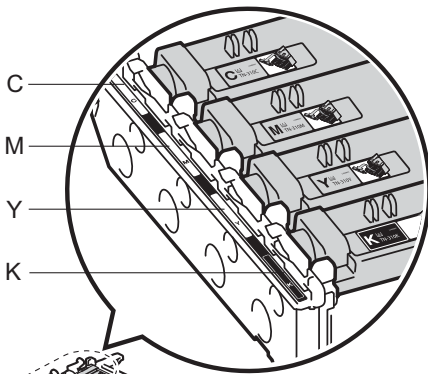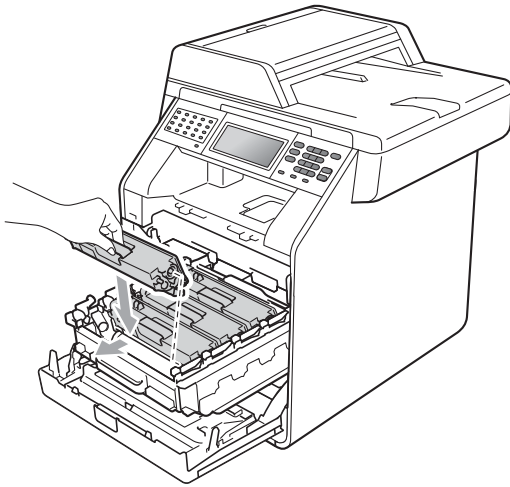

C - Cyan
M - Magenta
Y - Yellow
K - Black

- 9 Push the drum unit in until it stops.

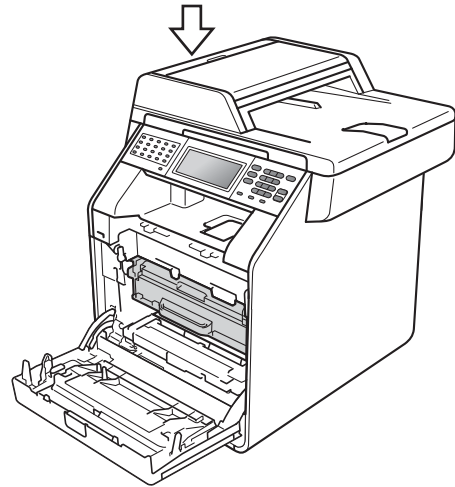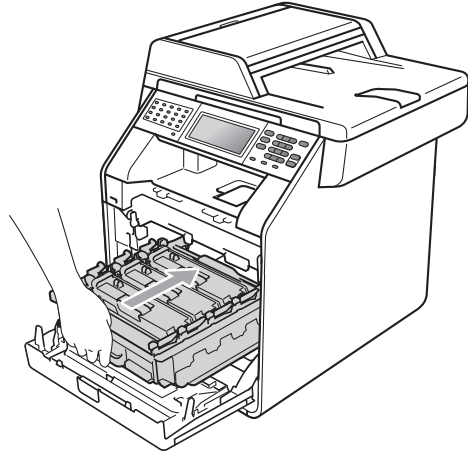


- 10 Close the front cover of the machine.

Cleaning the drum unit



If your printout has coloured dots at 94 mm intervals, follow the steps below to solve the problem.

- 1 Make sure that the machine is in the Ready mode.
- 2 Press MENU.
- 3 Press ▲ or ▼ to display Print Reports.
Press Print Reports.
- 4 Press ▲ or ▼ to display Drum Dot Print.
Press Drum Dot Print.
- 5 The machine will display Press Start.
Press **Mono Start** or **Colour Start**.
- 6 The machine will print the Drum Dot test print. Then press **Stop/Exit**.
- 7 Turn off the machine. Unplug the telephone line cord first, disconnect all cables, and then unplug the power cord from the electrical socket.



- 8 Press the front cover release button and then open the front cover.

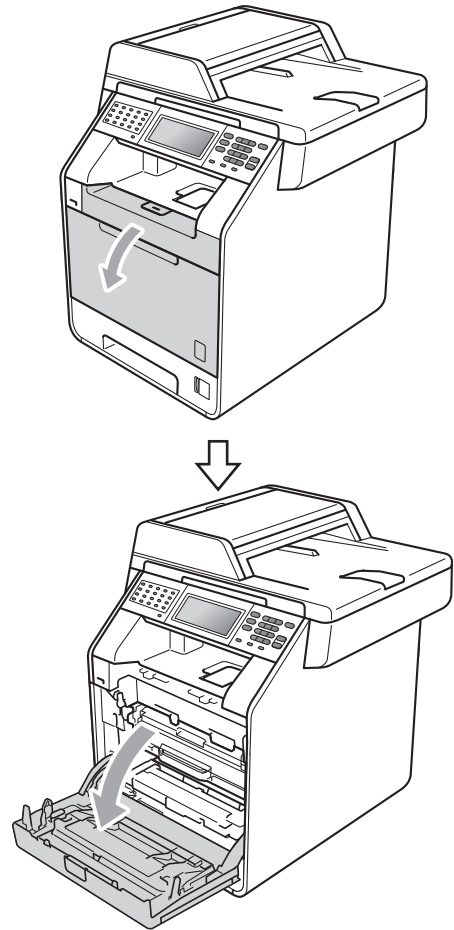

- 9 Hold the green handle of the drum unit. Pull the drum unit out until it stops.

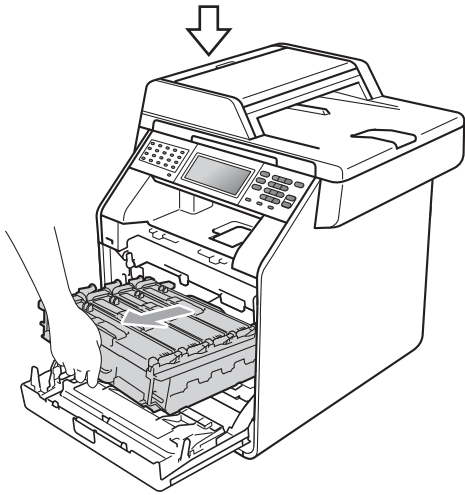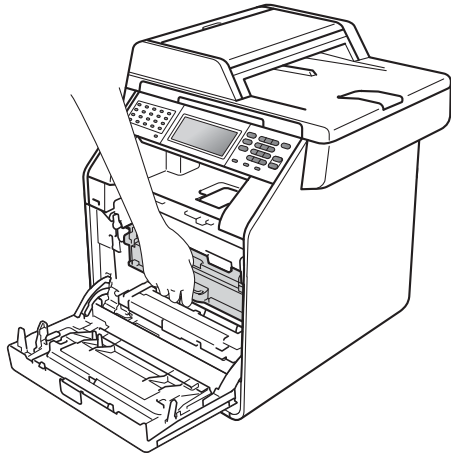


- 10 Turn the green lock lever (1) at the left of the machine anticlockwise to the release position. Holding the green handles of the drum unit, lift the front of the drum unit and remove it from the machine.

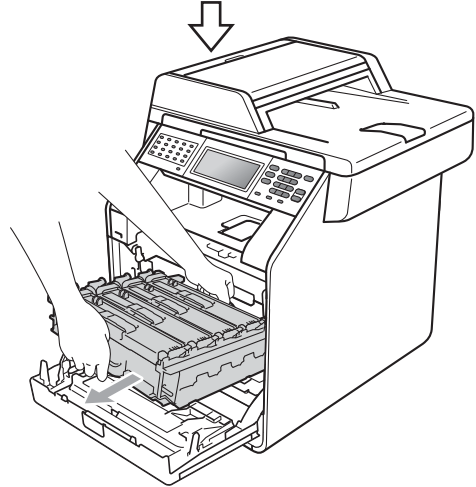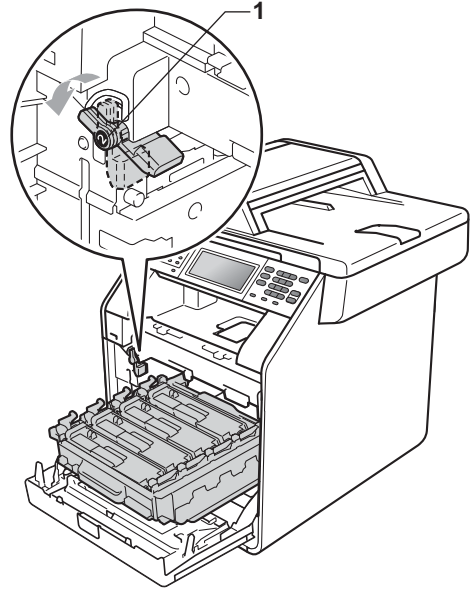


! IMPORTANT

- We recommend that you place the drum unit and/or the toner cartridge on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.
- To prevent damage to the machine from static electricity, **DO NOT** touch the electrodes shown in the illustration.

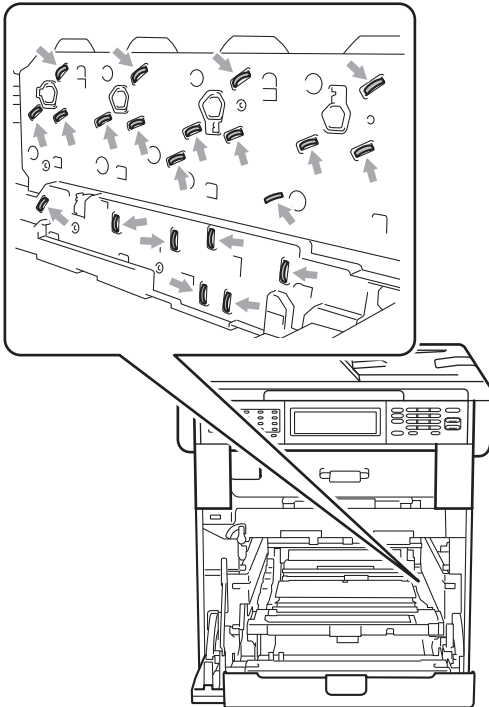


- Hold the green handles of the drum unit when you carry it. **DO NOT** hold the sides of the drum unit.

- 11** Hold the handle of the toner cartridge and slightly push it to unlock it. Then pull it out of the drum unit. Repeat this for all the toner cartridges.

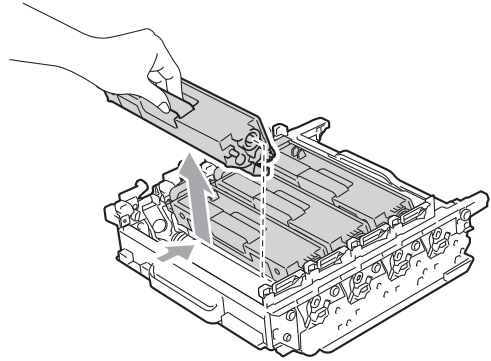


! IMPORTANT

To avoid print quality problems, **DO NOT** touch the shaded parts shown in the illustrations.

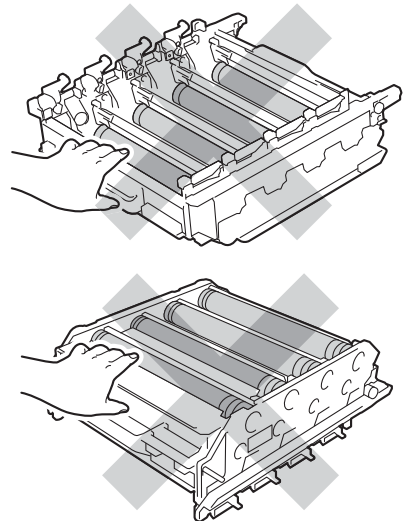

- 12 Turn the drum unit over by holding the green handles. Make sure that the drum unit gears (1) are on the left hand side.

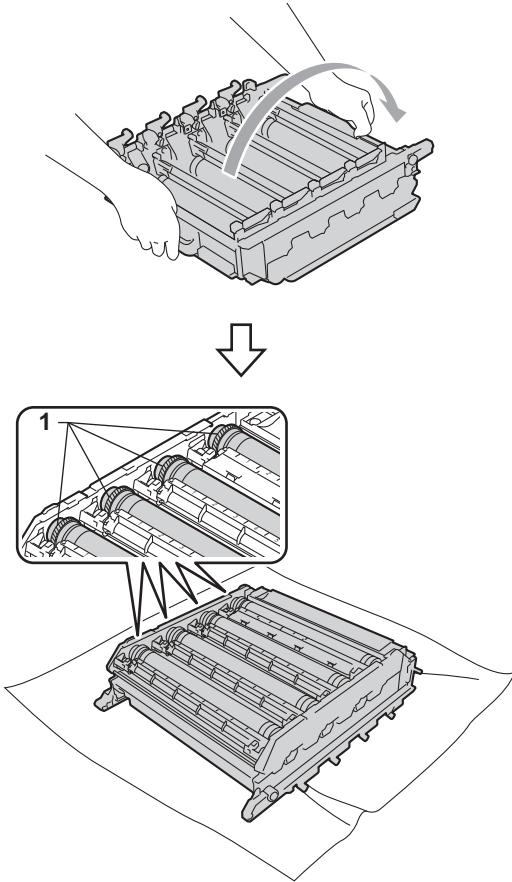

- 13 Note the following information from the drum dot check sheet:


■ Dot colour

For example, a mark on the cyan drum would produce a cyan dot on the check sheet.


■ Dot location

Note which of the printed columns the dot appears in.


- 14 On the problem colour drum, use the numbered markers next to the drum roller to find the mark. For example, a cyan dot in column 2 on the check sheet would mean that there is a mark on the cyan drum in the "2" region.

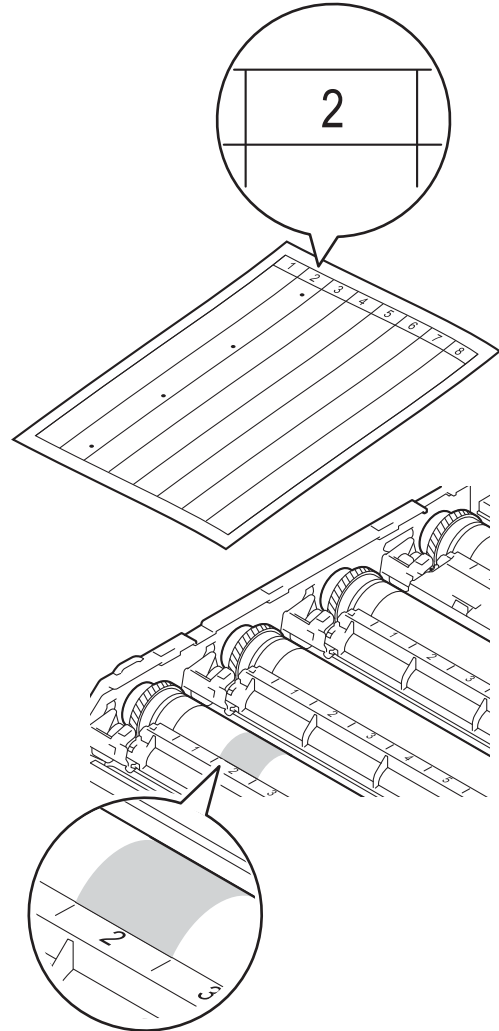



- 15 Turn the drum unit gear toward you by hand while looking at the surface of the suspected area.

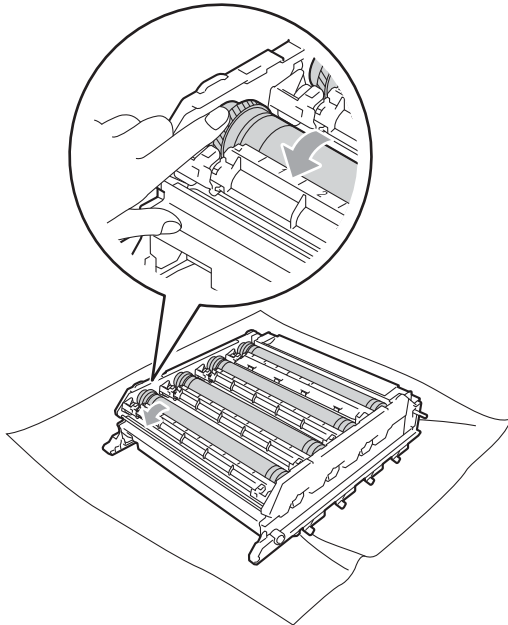

- 16 When you have found the mark on the drum that matches the drum dot check sheet, wipe the surface of the drum gently with a cotton swab until the dust or paper powder on the surface comes off.

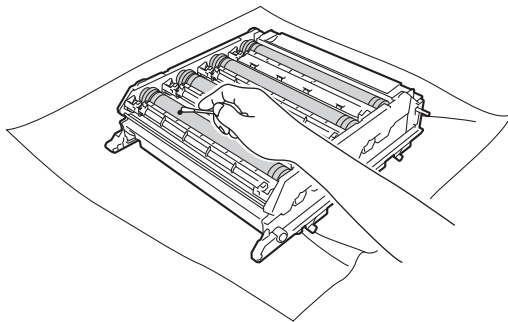

- 18 Hold the handle of the toner cartridge and slide the toner cartridge into the drum unit, then slightly pull it toward you until you hear it click into place. Make sure that you match the toner cartridge colour to the same colour label on the drum unit. Repeat this for all the toner cartridges.

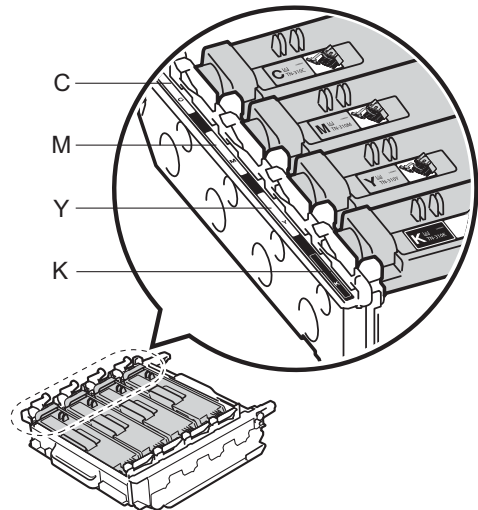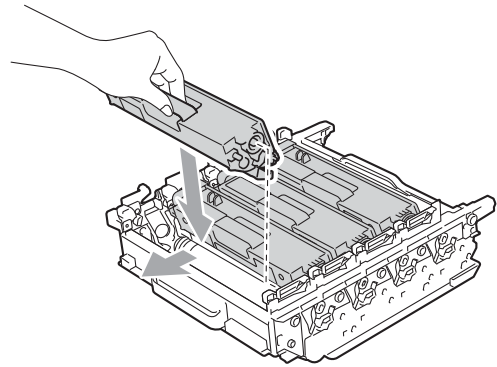

C - Cyan
Y - Yellow


M - Magenta
K - Black

! IMPORTANT


DO NOT clean the surface of the photosensitive drum with a sharp object or any liquids.

- 17 Turn the drum unit over by holding the green handles.


- 19 Make sure the green lock lever (1) is in the release position as shown in the illustration.

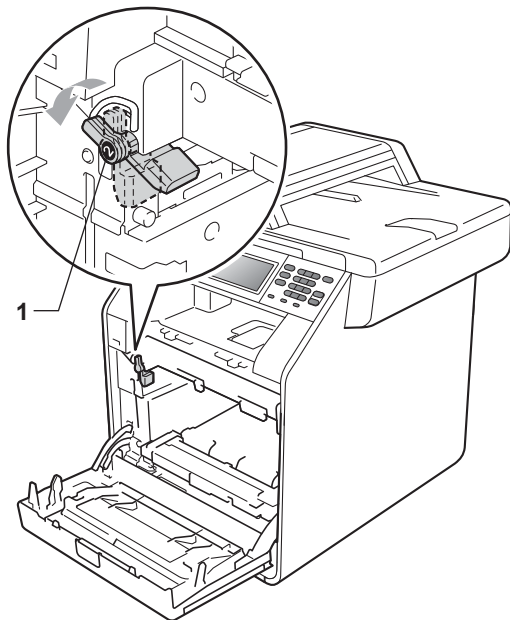


- 20 Match the guide ends (2) of the drum unit to the ► marks (1) on both sides of the machine, then gently slide the drum unit into the machine until it stops at the green lock lever.

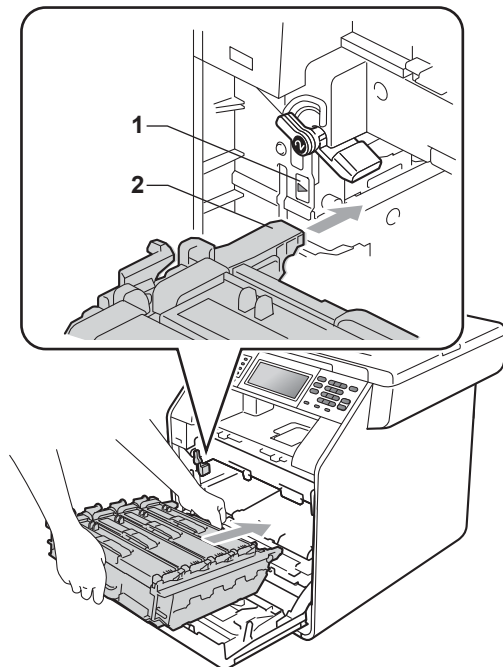

- 21 Turn the green lock lever (1) clockwise to the lock position.

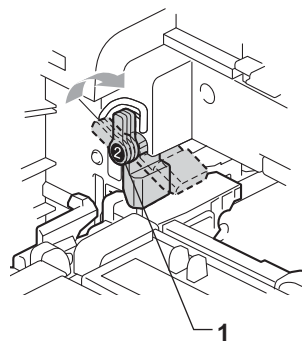

- 22 Push the drum unit in until it stops.

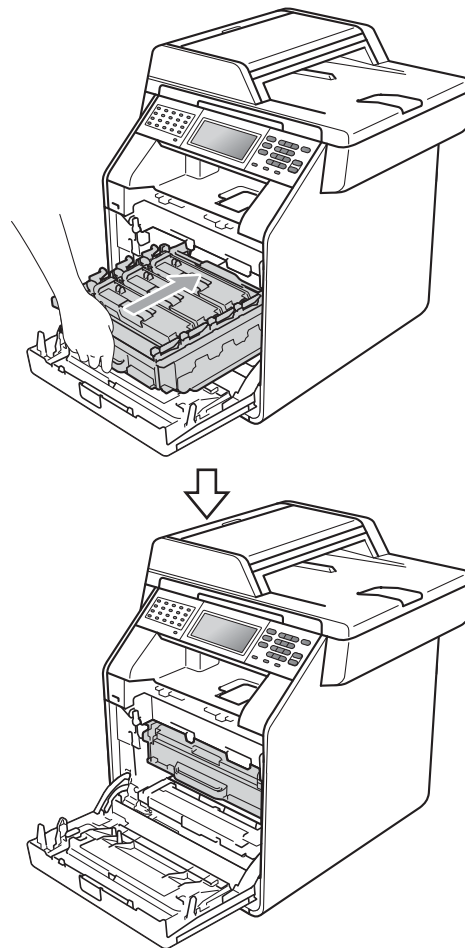


- 23 Close the front cover of the machine.

- 24 Plug the machine's power cord back into the electrical socket first, connect all cables, and then plug in the telephone line cord. Turn on the machine.


Cleaning the paper pick-up rollers

If you have paper feed problems, clean the pick-up rollers as follows:


- 1 Turn off the machine. Unplug the power cord from the electrical socket.
- 2 Pull the paper tray completely out of the machine.

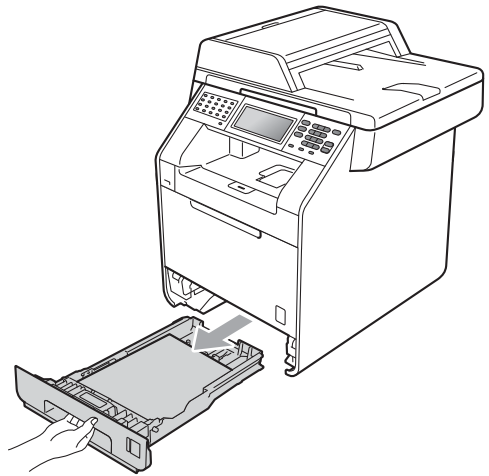

- 3 Tightly wring out a lint-free cloth soaked in lukewarm water, and then wipe the separator pad (1) of the paper tray with it to remove dust.

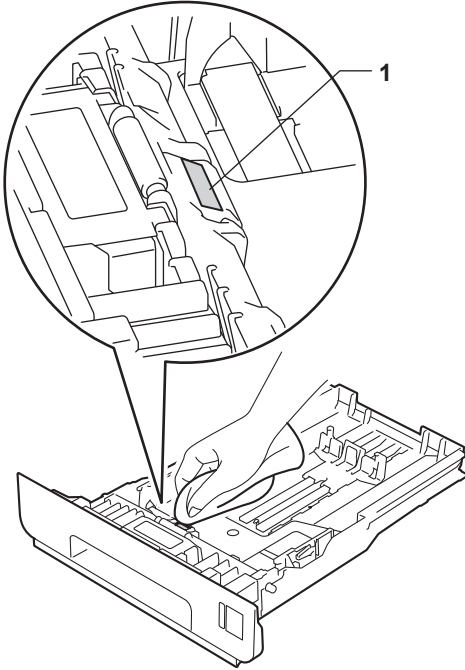

- 4 Wipe the two pick-up rollers (1) inside the machine to remove dust.

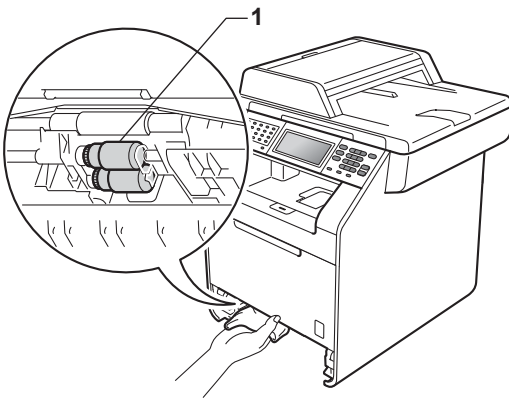

- 5 Put the paper tray back in the machine.
- 6 Plug the machine's power cord back into the electrical socket. Turn on the machine.

Calibration

The output density for each colour may vary depending on the environment the machine is in such as temperature and humidity. Calibration helps you to improve the colour density.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Printer**. Press **Printer**.
- 3 Press **▲** or **▼** to display **Calibration**. Press **Calibration**.
- 4 Press **Calibrate**.
- 5 The machine will display **Calibrate?**. Press **Yes** to confirm.
- 6 The machine will display **Completed**.
- 7 Press **Stop/Exit**.

You can reset the calibration parameters back to those set at the factory.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Printer**. Press **Printer**.
- 3 Press **▲** or **▼** to display **Calibration**. Press **Calibration**.
- 4 Press **Reset**.
- 5 The machine will display **Reset?**. Press **Yes** to confirm.
- 6 The machine will display **Completed**.
- 7 Press **Stop/Exit**.

**Note**

- If an error message is displayed, press **Mono Start** or **Colour Start** and try again. (For more information, see *Error and maintenance messages* on page 111.)
- If you print using the Windows® printer driver, the driver will get the calibration data automatically if both **Use Calibration Data** and **Get Device Data Automatically** are on. The default settings are on. (See *Advanced tab* in the *Software User's Guide*.)
- If you print using the Macintosh printer driver, you need to perform the calibration using the **Status Monitor**. After turning the **Status Monitor** on, choose **Color Calibration** from the **Control** menu. (See *Status Monitor* in the *Software User's Guide*. When the **Status Monitor** is open, choose **Control / Color Calibration** from the menu bar.)

Auto Registration

Registration

If solid areas of colour or images have cyan, magenta or yellow fringes, you can use the auto-registration feature to correct the problem.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Printer**. Press **Printer**.
- 3 Press **▲** or **▼** to display **Auto Regist..** Press **Auto Regist..**
- 4 The machine will display **Registration?.** Press **Yes**.
- 5 The machine will display **Completed**.
- 6 Press **Stop/Exit**.

Manual Registration

If colour still appears incorrectly after auto-registration, you will need to perform manual registration.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Printer**. Press **Printer**.
- 3 Press **▲** or **▼** to display **Manual Regist..**
Press **Manual Regist..**
- 4 Press **Print Chart**.
- 5 Press **Mono Start** or **Colour Start**.
- 6 When the machine has finished printing the registration chart, press **Set Regist.** to correct the colour manually.
- 7 Starting at **1 Magenta Left** on the chart, check which coloured bar has the most uniform print density. Press **1 Magenta Left** and choose the number on the Touchscreen, using **◀** or **▶** to display more numbers if necessary.
Repeat for **2 Cyan Left**,
3 Yellow Left, **4, 5, 6 to 9**.
- 8 Press **OK** if you finished entering the numbers.
- 9 Press **Stop/Exit**.

Frequency (Colour Correction)

You can set how often the colour correction (Colour Calibration and Auto Registration) occurs. The default setting is Normal. The colour correction process consumes some amount of the toner.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Printer**. Press **Printer**.
- 3 Press **▲** or **▼** to display **Frequency**. Press **Frequency**.
- 4 Press **Normal**, **Low** or **Off**.
- 5 Press **Stop/Exit**.

Error and maintenance messages

As with any sophisticated office product, errors may occur and consumable items may need to be replaced. If this happens, your machine identifies the error or required routine maintenance and shows the appropriate message. The most common error and maintenance messages are shown below.

You can clear most errors and perform routine maintenance messages by yourself. If you need more help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips:

Visit us at <http://solutions.brother.com/>.

Error Message	Cause	Action
Access Denied	The function you want to use is restricted by Secure Function Lock.	Contact your administrator to check your Secure Function Lock Settings.
Access Error	The device is removed from the USB direct interface while the data is processing.	Press Stop/Exit . Reinsert the device and try to print with Direct Print.
Calibration failed.	Calibration failed.	<ul style="list-style-type: none"> ■ Turn off the machine. Wait a few seconds, then turn it on again. ■ Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 73.) ■ Put in a new belt unit. (See <i>Replacing the belt unit</i> on page 78.) ■ Put in a new waste toner box. (See <i>Replacing the waste toner box</i> on page 84.) ■ If the problem continues, call your Brother dealer.
Cartridge Error Put the Black (K) Toner Cartridge back in. ¹	The toner cartridge is not installed correctly.	Pull out the drum unit and remove the toner cartridge for the colour that is indicated on the LCD, then re-install the toner cartridge in the drum unit. Put the drum unit back into the machine.
¹ The toner cartridge colour with the problem is shown in the message.		
Comm. Error	Poor telephone line quality caused a communication error.	Try sending the fax again or try connecting the machine to another telephone line. If the problem continues, call the telephone company and ask them to check your telephone line.

Error Message	Cause	Action
Condensation	One of the issues that can cause this error is that condensation may form inside the machine after a room temperature change.	Leave the machine powered on, and fully open the front cover. Wait 30 minutes, switch OFF and close the cover, then switch ON. If this does not clear the error, call your Brother dealer.
Connection Fail	You tried to poll a fax machine that is not in Polled Waiting mode.	Check the other fax machine's polling setup.
Cooling Down Wait for a while	The temperature of the drum unit or toner cartridge is too hot. The machine will pause its current print job and go into cooling down mode. During the cooling down mode, you will hear the cooling fan running while the LCD shows Cooling Down , and Wait for a while .	Make sure that you can hear the fan in the machine spinning and that the exhaust outlet is not blocked by something. If the fan is spinning, remove any obstacles that surround the exhaust outlet, and then leave the machine turned on but do not use it for several minutes. If the fan is not spinning, disconnect the machine from the power for several minutes, then reconnect it.
Cover is Open.	The front cover is not completely closed.	Close the front cover of the machine.
Cover is Open	The ADF cover is not completely closed.	Close the ADF cover of the machine.
	The ADF is open while loading a document.	Close the ADF cover of the machine, then press Stop/Exit .
Cover is Open	The fuser cover is not completely closed or paper was jammed in the back of the machine when you turned on the power.	<ul style="list-style-type: none"> ■ Close the fuser cover of the machine. ■ Make sure paper is not jammed inside the back of the machine, and then close the fuser cover and press Mono Start or Colour Start.
DIMM Error	<ul style="list-style-type: none"> ■ The DIMM is not installed correctly. ■ The DIMM is broken. ■ The DIMM does not meet the required specifications. 	<ul style="list-style-type: none"> ■ Turn off the machine and remove the DIMM. ■ Confirm the DIMM meets the required specifications. (See <i>Memory board in Appendix B of the Advanced User's Guide</i>.) ■ Re-install the DIMM correctly. Wait a few seconds, and then turn it on again. ■ If this error message appears again, replace the DIMM with a new one. (See <i>Installing extra memory in Appendix B of the Advanced User's Guide</i>.)
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again.

Error Message	Cause	Action
Document Jam	The document was not inserted or fed correctly, or the document scanned from the ADF was too long.	See <i>Document jams</i> on page 119 or <i>Using the automatic document feeder (ADF)</i> on page 26.
Drum Error	The corona wire on the drum unit needs to be cleaned.	Clean the corona wire on the drum unit. (See <i>Cleaning the corona wires</i> on page 97.)
Drum Stop	It is time to replace the drum unit.	Replace the drum unit. (See <i>Replacing the drum unit</i> on page 73.)
Duplex Disabled Close the Back Cover of the machine.	The back of the machine is not closed completely.	Close the back cover of the machine.
Duplex Disabled Reload paper, then press Start.	Although the size of paper in the paper tray matches the paper size that was selected from the control panel or printer driver, the machine has stopped printing when it encountered an additional, different size of paper in the tray.	Make sure the paper tray contains only the size of paper you select in either the control panel or printer driver, then press Mono Start or Colour Start .
	The paper tray was pulled out before the machine completed printing on both sides of the paper.	Re-install the paper tray and press Mono Start or Colour Start .
Fuser Error	The temperature of the fuser unit does not rise to a specified temperature within the specified time.	Turn the power switch off, wait a few seconds, and then turn it on again. Leave the machine for 15 minutes with the power on.
	The fuser unit is too hot.	
Jam Duplex	The paper is jammed underneath Paper Tray 1 or in the fuser unit.	(See <i>Paper is jammed underneath paper tray 1</i> on page 129.)
Jam Inside	The paper is jammed inside the machine.	(See <i>Paper is jammed inside the machine</i> on page 125.)
Jam MP	The paper is jammed in the MP tray of the machine.	(See <i>Paper is jammed in the MP tray</i> on page 121.)
Jam Rear	The paper is jammed in the back of the machine.	(See <i>Paper is jammed at the back of the machine</i> on page 123.)
Jam Tray 1 Jam Tray 2	The paper is jammed in the paper tray of the machine.	(See <i>Paper is jammed in paper tray 1 or tray 2</i> on page 122.)
Limit Exceeded	The number of pages you are allowed to print has been exceeded. The print job will be cancelled.	Contact your administrator to check your Secure Function Lock Settings.
Low Temperature	The room temperature is too low for the machine to operate.	Increase the room temperature to allow the machine to operate.



Error Message	Cause	Action
No Belt Unit	The belt unit is not installed correctly.	Re-install the belt unit. (See <i>Replacing the belt unit</i> on page 78.)
No Paper	The machine is out of paper or paper is not correctly loaded in the paper tray.	Do one of the following: <ul style="list-style-type: none"> ■ Refill the paper in the paper tray. ■ Remove the paper and load it again. ■ If the problem is not resolved, the paper pick-up roller may need to be cleaned. Clean the paper pick-up roller. (See <i>Cleaning the paper pick-up rollers</i> on page 107.)
No Permission	You have attempted to print in colour using a Secure Function Lock ID that is restricted to mono printing only. The print job will be cancelled.	Contact your administrator to check your Secure Function Lock Settings.
No Response/Busy	The number you dialled does not answer or is busy.	Verify the number and try again.
No Toner	The toner cartridge for the colour indicated on the LCD is not installed correctly.	Pull out the drum unit. Take out the toner cartridge for the colour indicated on the LCD, and then put it back into the drum unit.
No Tray	The paper tray indicated on the LCD is not installed properly.	Re-install the paper tray that is indicated on the LCD.
No Waste Toner	The waste toner box is not installed properly.	Re-install the waste toner box. (See <i>Replacing the waste toner box</i> on page 84.)

Error Message	Cause	Action
Out of Memory	The machine's memory is full.	<p>Fax sending or copy operation in progress</p> <p>Do one of the following:</p> <ul style="list-style-type: none"> ■ Press Mono Start or Colour Start to send or copy the scanned pages. ■ Press Stop/Exit and wait until the other operations in progress finish, and then try again. ■ Clear the faxes from the memory. <p>Print the faxes that are stored in the memory to restore the memory to 100%. Then turn off Fax Storage to avoid storing more faxes in the memory. (See <i>Printing a fax from the memory</i> in Chapter 4 of the <i>Advanced User's Guide</i> and <i>Fax Storage</i> in Chapter 4 of the <i>Advanced User's Guide</i>.)</p> <ul style="list-style-type: none"> ■ Add optional memory. (See <i>Memory board</i> in Appendix B of the <i>Advanced User's Guide</i>.) <p>Print operation in process</p> <p>Do one of the following:</p> <ul style="list-style-type: none"> ■ Reduce the print quality. (See <i>Basic tab</i> in the <i>Software User's Guide</i>.) ■ Clear the faxes from the memory. (See the above explanation.)
Print Unable XX	The machine has a mechanical problem.	<p>Do one of the following:</p> <ul style="list-style-type: none"> ■ Turn off the machine, wait for a few minutes, and then turn it on again. (See <i>Transferring your faxes or Fax Journal report</i> on page 118.) ■ If the problem continues, call your Brother dealer.
Protected Device	The protect switch of the USB Flash memory drive is on.	Turn off the protect switch of the USB Flash memory drive.
Registration failed	Registration failed.	<p>Do one of the following:</p> <ul style="list-style-type: none"> ■ Turn off the machine's power switch. Wait a few seconds, then turn it on again. ■ Try Manual Registration, MENU, Printer, Manual Regist.. (See <i>Manual Registration</i> on page 110.) ■ Put in a new belt unit. (See <i>Replacing the belt unit</i> on page 78.) ■ If the problem continues, call your Brother dealer.



Error Message	Cause	Action
Rename the File	There is already a file on the USB Flash memory drive with the same name as the file you are trying to save.	Change the name of the file on the USB Flash memory drive or the file you are trying to save.
Replace Parts Belt Unit	It is time to replace the belt unit.	Replace the belt unit. (See <i>Replacing the belt unit</i> on page 78.)
Replace Parts Drum Unit	It is time to replace the drum unit.	Replace the drum unit. (See <i>Replacing the drum unit</i> on page 73.)
	The drum unit counter was not reset when a new drum was installed.	Reset the drum unit counter. (See <i>Resetting the drum counter</i> on page 78.)
Replace Parts Fuser Unit	It is time to replace the fuser unit.	Call your Brother dealer or a Brother Authorized Service Center to replace the fuser unit.
Replace Parts PF Kit 1 PF Kit 2 PF Kit MP	It is time to replace the paper feeding kit.	Call your Brother dealer or a Brother Authorized Service Center to replace the PF Kit.
Replace Parts WT Box End Soon	The waste toner box is near the end of its life.	Buy a new waste toner box before you get a <i>Replace WT Box</i> message.
Replace Toner X	The toner cartridge is at the end of its life.	Replace the toner cartridge for the colour indicated on the LCD. (See <i>Replacing a Toner cartridge</i> on page 66.)
Replace WT Box	It is time to replace the waste toner box.	Replace the waste toner box. (See <i>Replacing the waste toner box</i> on page 84.)
Scan Unable XX	The machine has a mechanical problem.	<ul style="list-style-type: none"> ■ Turn off the machine and then turn it on again. (See <i>Transferring your faxes or Fax Journal report</i> on page 118.) ■ If the problem continues, call your Brother dealer.
	Document is too long for duplex scanning.	Press Stop/Exit . Use the suitable size of paper for duplex scanning. (See <i>Document Size</i> on page 190.)
Short paper	The length of the paper in the tray is too short for the machine to deliver it to the <i>Face-down</i> output tray.	Open the back cover (<i>face-up</i> output tray) to let the printed paper out on the <i>face-up</i> output tray. Remove the printed pages and then press Mono Start or Colour Start .
Size Error DX	The paper size defined in the printer driver is not usable for the automatic duplex printing.	Press Mono Start or Colour Start . Choose a paper size which is supported by the duplex tray. (See <i>Print media</i> on page 191.)
Size mismatch	The paper in the tray is not the correct size.	Load the correct size of paper in the tray and set the "Paper Size" (MENU, General Setup, Tray Setting). (See <i>Paper Size and Type</i> on page 18.)

Error Message	Cause	Action
Small paper	The paper size specified in the printer driver is too small for the machine to deliver it to the <i>Face-down</i> output tray.	Open the back cover (<i>face-up</i> output tray) to let the printed paper out on the <i>face-up</i> output tray and then press Mono Start or Colour Start .
Toner Error	One or more toner cartridges are not installed correctly.	Pull out the drum unit. Take out all the toner cartridges, and then put them back into the drum unit.
Toner Low	The toner cartridge is near the end of its life.	Buy a new toner cartridge for the colour that is indicated on the LCD before you get a <i>Replace Toner</i> message.
Too Many Files	There are too many files stored on the USB Flash memory drive.	Reduce the number of files stored on the USB Flash memory drive.
Unusable Device	An incompatible or defective device has been connected to the USB direct interface.	Remove the USB Flash memory drive from the USB direct interface.

Transferring your faxes or Fax Journal report

If the LCD shows:

- Print Unable XX
- Scan Unable XX

We recommend transferring your faxes to another fax machine or to your PC. (See *Transferring faxes to another fax machine* on page 118 or *Transferring faxes to your PC* on page 118.)

You can also transfer the Fax Journal report to see if there are any faxes you need to transfer. (See *Transferring the Fax Journal report to another fax machine* on page 118.)



Note

If there is an error message on the machine's LCD after the faxes have been transferred, disconnect the machine from the power source for several minutes, and then reconnect it.

Transferring faxes to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See *Enter personal information (Station ID)* in the *Quick Setup Guide*.)

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Service**. Press **Service**.
- 3 Press **Data Transfer**.
- 4 Press **Fax Transfer**.
- 5 Do one of the following:
 - If the LCD shows **No Data**, there are no faxes left in the machine's memory. Press **Stop/Exit**.
 - Enter the fax number to which faxes will be forwarded.
- 6 Press **Mono Start** or **Colour Start**.

Transferring faxes to your PC

You can transfer the faxes from your machine's memory to your PC.

- 1 Make sure that you have installed **MFL-Pro Suite** on your PC, and then turn on **PC-Fax Receiving** on the PC. (For details about PC-Fax Receive, see *PC-FAX receiving* in the *Software User's Guide*.)
- 2 Make sure that you have set **PC Fax Receive** on the machine. (See *PC-Fax Receive* in *Chapter 4* of the *Advanced User's Guide*.)
If faxes are in the machine's memory when you set up PC-Fax Receive, the LCD will ask if you want to transfer the faxes to your PC.
- 3 Do one of the following:
 - To transfer all faxes to your PC, press **Yes**. You will be asked if you want a backup print.
 - To exit and leave the faxes in the memory, press **No**.
- 4 Press **Stop/Exit**.

Transferring the Fax Journal report to another fax machine


If you have not set up your Station ID, you cannot enter fax transfer mode. (See *Enter personal information (station ID)* in the *Quick Setup Guide*.)

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Service**. Press **Service**.
- 3 Press **Data Transfer**.
- 4 Press **Report Trans..**
- 5 Enter the fax number to which the Fax Journal report will be forwarded.
- 6 Press **Mono Start** or **Colour Start**.

Document jams

Document is jammed in the top of the ADF unit


- 1 Take out any paper from the ADF that is not jammed.
- 2 Open the ADF cover.
- 3 Pull the jammed document out to the left.

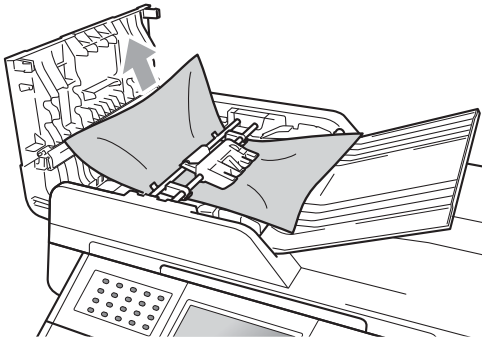

- 4 Close the ADF cover.
- 5 Press **Stop/Exit**.

Document is jammed under the document cover


- 1 Take out any paper from the ADF that is not jammed.
- 2 Lift the document cover.
- 3 Pull the jammed document out to the right.

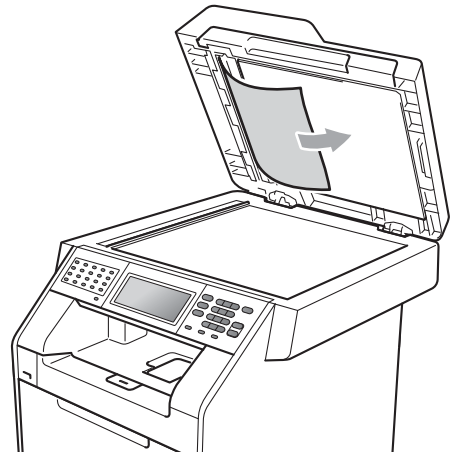

- 4 Close the document cover.
- 5 Press **Stop/Exit**.

Removing small documents jammed in the ADF

- 1 Lift the document cover.
- 2 Insert a piece of stiff paper, such as cardstock, into the ADF to push any small paper scraps through.

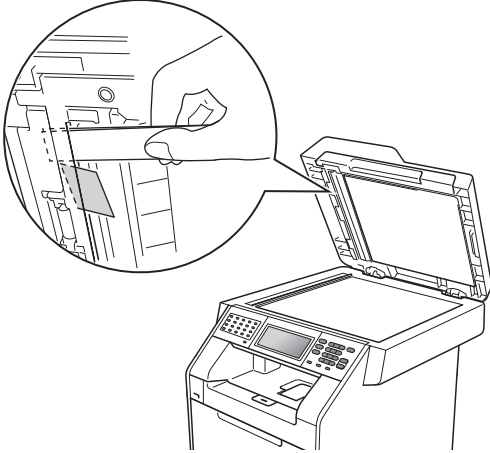

- 3 Close the document cover.
- 4 Press **Stop/Exit**.

Document is jammed at the output tray

- 1 Take out any paper from the ADF that is not jammed.
- 2 Pull the jammed document out to the right.




- 3 Press **Stop/Exit**.

Paper jams


Paper is jammed in the MP tray

If the LCD shows Jam MP, follow these steps:


- 1 Remove the paper from the MP tray.
- 2 Remove any jammed paper from in and around the MP tray.

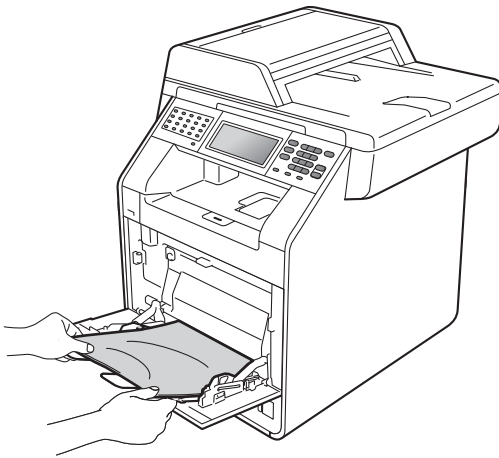

- 3 Fan the paper stack, and then put it back in the MP tray.

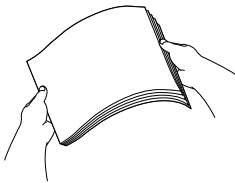

- 4 When loading paper in the MP tray, make sure that the paper stays under the maximum paper mark (1) on both sides of the tray.

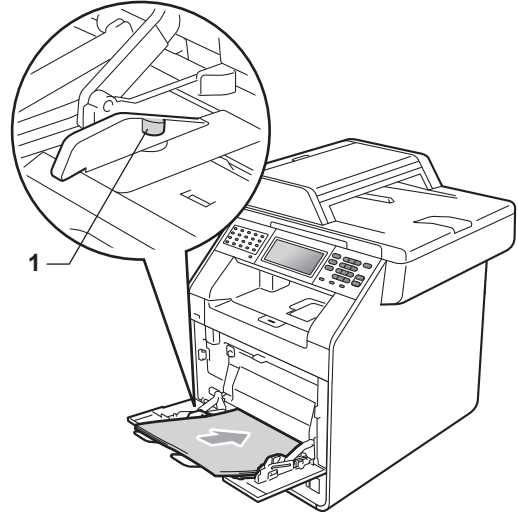


- 5 Press **Mono Start** or **Colour Start** to resume printing.

Paper is jammed in paper tray 1 or tray 2


If the LCD shows Jam Tray 1 or Jam Tray 2, follow these steps:

- 1 Pull the paper tray completely out of the machine.

For Jam Tray 1:

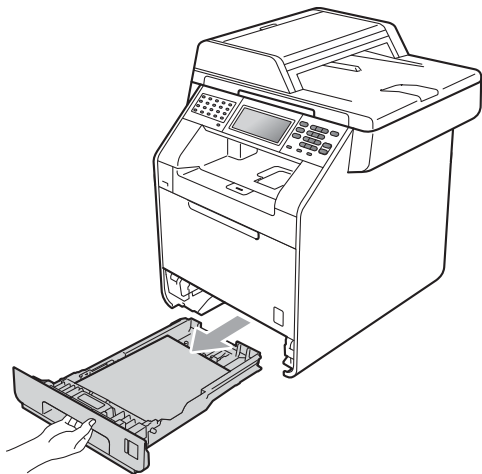


For Jam Tray 2:

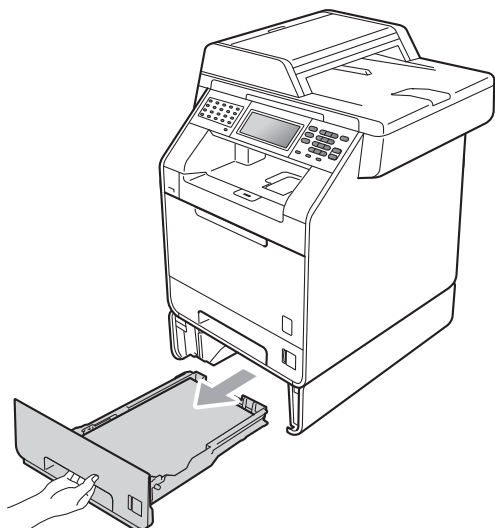


! WARNING

DO NOT touch the shaded parts shown in the illustration. These rollers may be rotating at high speed.

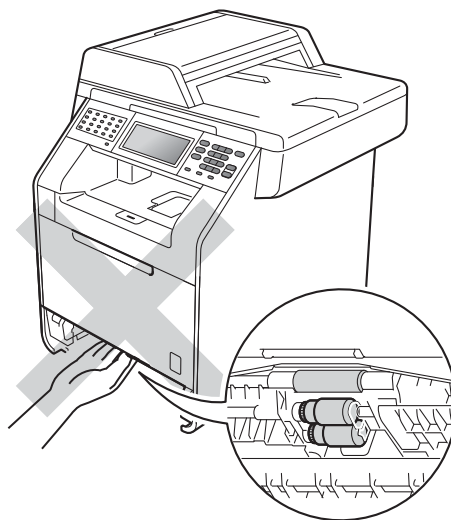

- 2 Use both hands to slowly pull out the jammed paper.

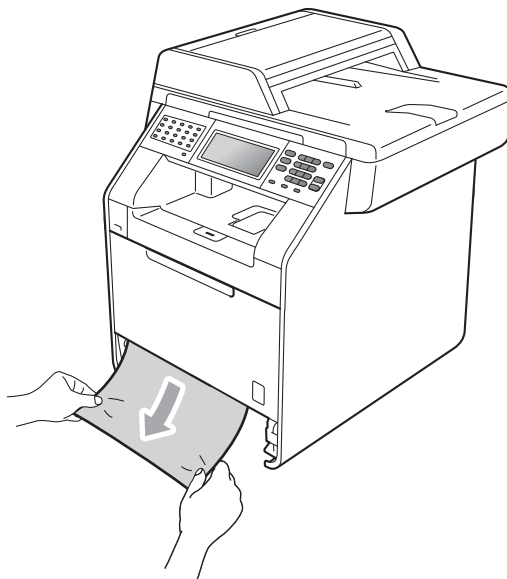

! IMPORTANT


If the paper cannot easily be removed in this direction, stop and follow the instructions for *Paper is jammed inside the machine* on page 125.



Note

Pulling out the jammed paper downwards allows you to remove the paper easier.

- 3 Make sure the paper is below the maximum paper mark (▼▼▼) (1) of the paper tray. While pressing the green paper-guide release lever, slide the paper guides to fit the paper size. Make sure that the guides are firmly in the slots. (See *Loading paper in the standard paper tray* on page 11.)

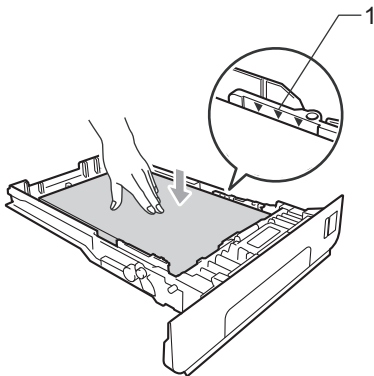


- 4 Put the paper tray firmly back in the machine.

Paper is jammed at the back of the machine

If the LCD shows *Jam Rear*, a paper jam occurred behind the back cover. Follow these steps:


- 1 Leave the machine turned on for 10 minutes to cool down.
- 2 Open the back cover.

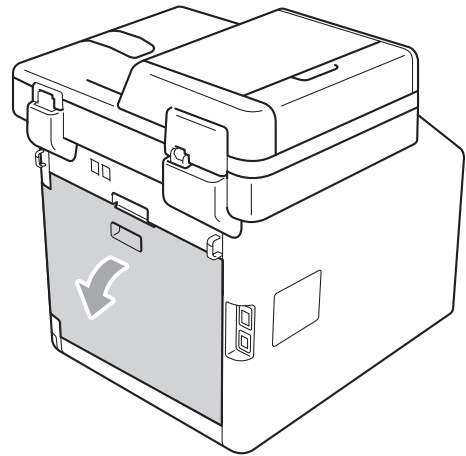


⚠ CAUTION

🔥 HOT SURFACE

After you have just used the machine, some internal parts of the machine will be extremely hot. Wait for the machine to cool down before you touch the internal parts of the machine.

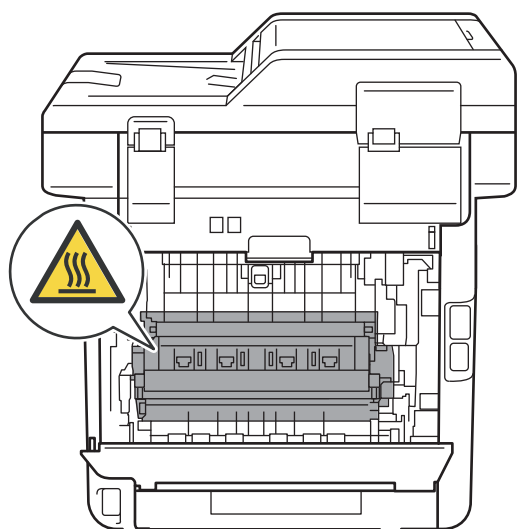


- 3** Pull the green tabs (2) at the left and right hand sides toward you and fold down the fuser cover (1).

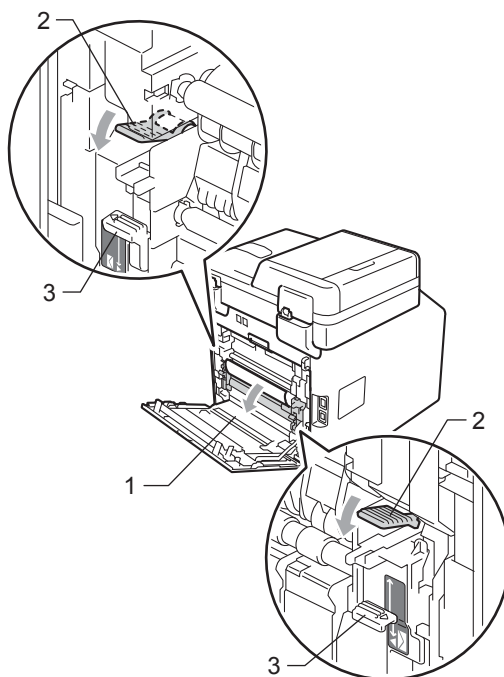


📝 Note

If the envelope levers (3) inside the back cover are pulled down to the envelope position, lift these levers to the original position before pulling the green tabs (2) down.

- 4** Using both hands, gently pull the jammed paper out of the fuser unit.

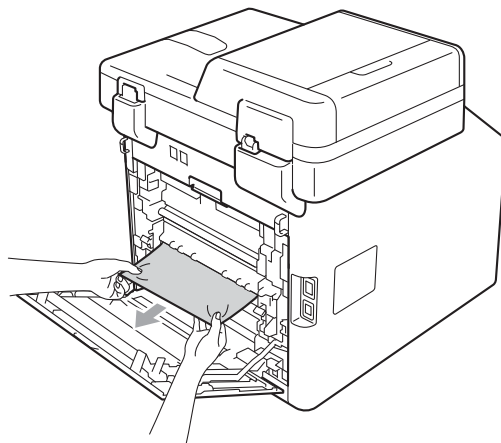

- 5 Close the fuser cover (1).

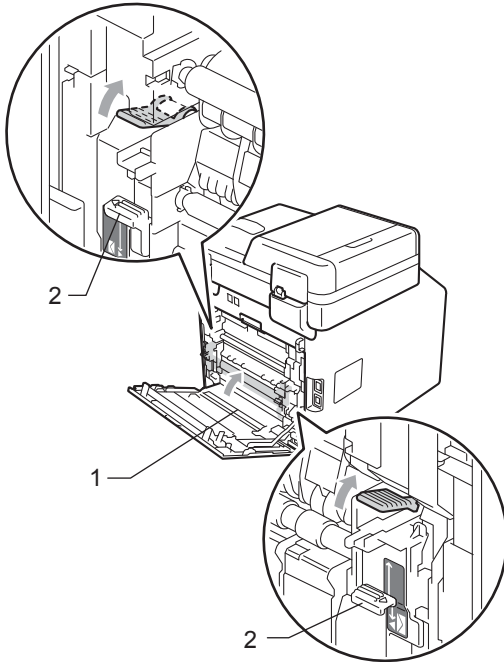

Note


If you are printing on envelopes, pull down the envelope levers (2) to the envelope position again before closing the back cover.

- 6 Fully close the back cover.



Paper is jammed inside the machine

If the LCD shows **Jam Inside**, follow these steps:



- 1 Turn off the machine. Unplug the telephone line cord first, disconnect all cables, and then unplug the power cord from the electrical socket.
- 2 Press the front cover release button and then open the front cover.

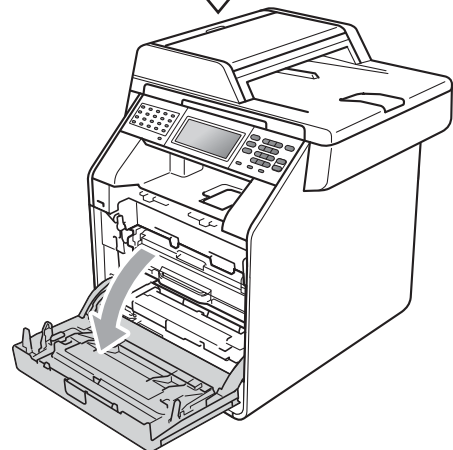

- 3 Hold the green handle of the drum unit. Pull the drum unit out until it stops.

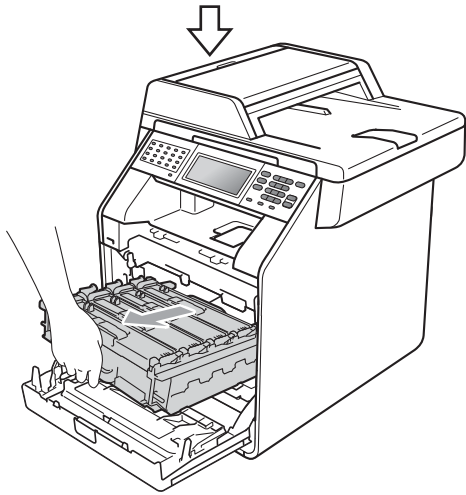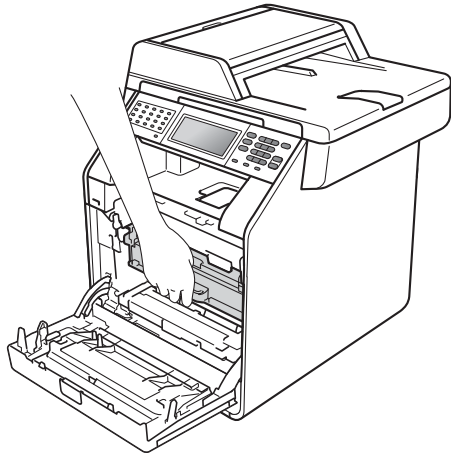


- 4 Turn the green lock lever (1) at the left of the machine anticlockwise to the release position. Holding the green handles of the drum unit, lift the front of the drum unit and remove it from the machine.

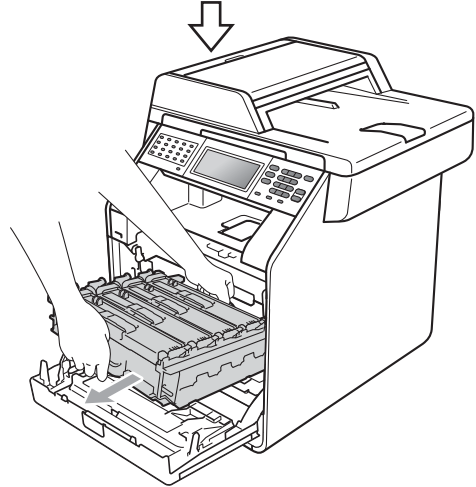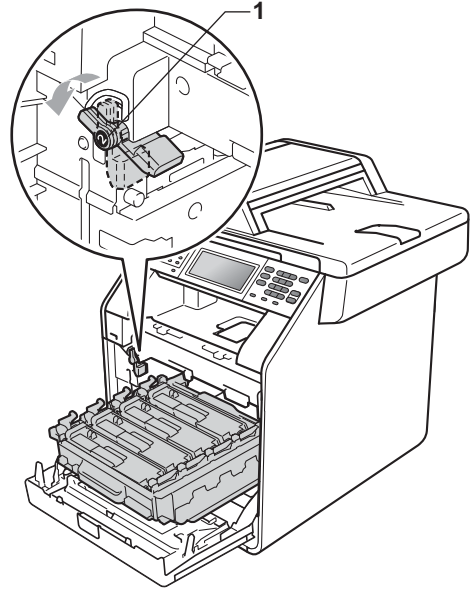


! IMPORTANT

- We recommend that you place the drum unit and the toner cartridges on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.
- To prevent damage to the machine from static electricity, **DO NOT** touch the electrodes shown in the illustration.

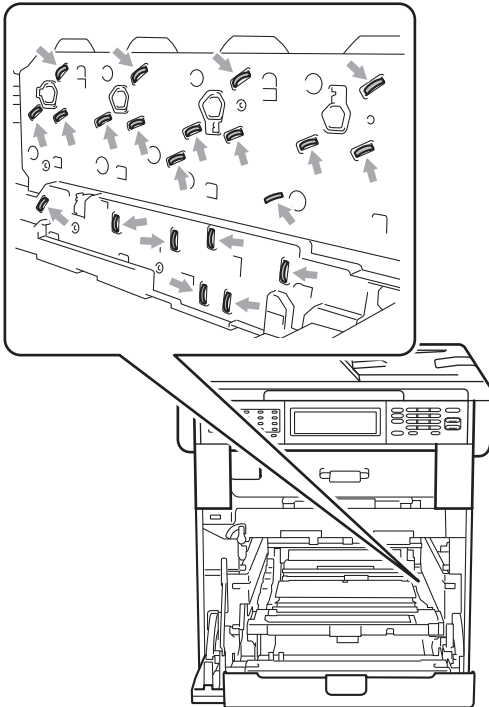


- Hold the green handles of the drum unit when you carry it. **DO NOT** hold the sides of the drum unit.


- 5 Pull out the jammed paper slowly.

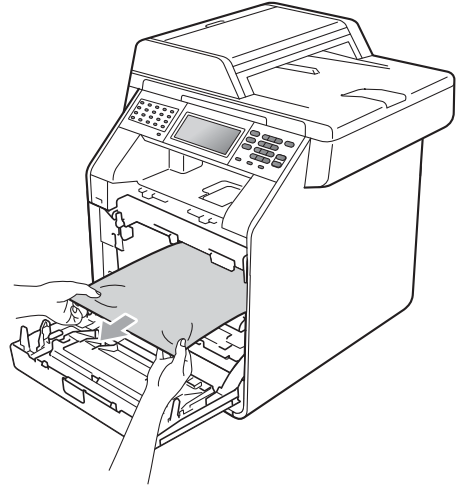


- 6 Make sure the green lock lever (1) is in the release position as shown in the illustration.

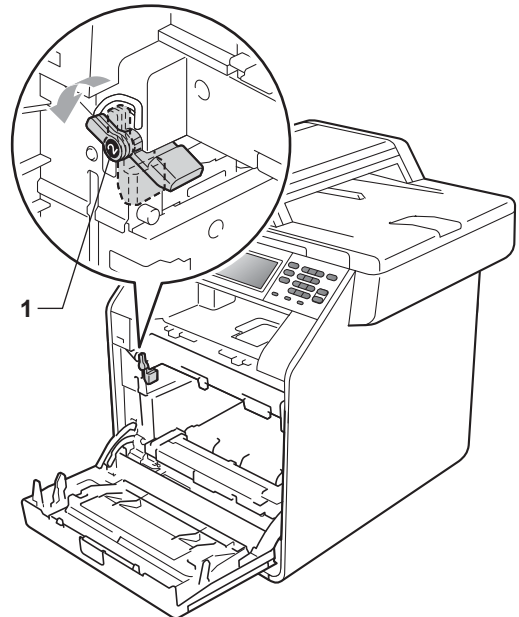


- 7 Match the guide ends (2) of the drum unit to the ► marks (1) on both sides of the machine, then gently slide the drum unit into the machine until it stops at the green lock lever.

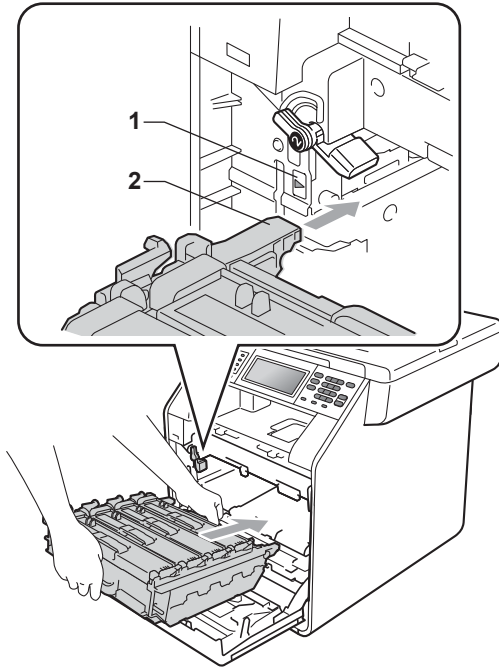

- 8 Turn the green lock lever (1) clockwise to the lock position.

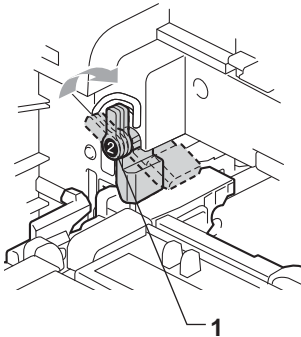

- 9 Push the drum unit in until it stops.

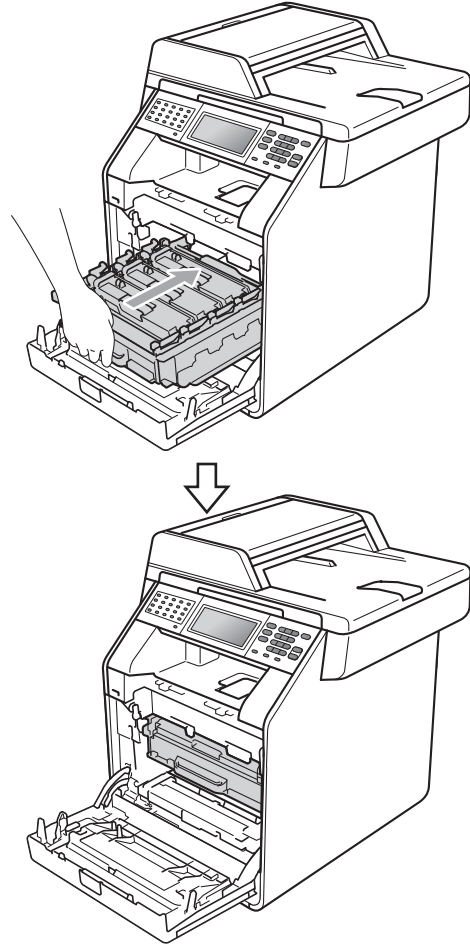

- 10 Close the front cover of the machine.

 **Note**


If you turn off the machine while the LCD shows *Jam Inside*, the machine will print incomplete data from your computer. Before you turn on the machine, delete the print spool job on your computer.

- 11 Plug the machine's power cord back into the electrical socket first, and reconnect all cables and the telephone line cord. Turn on the machine.

Paper is jammed underneath paper tray 1


If the LCD shows **Jam Duplex**, follow these steps:

- 1 Leave the machine turned on for 10 minutes to cool down.
- 2 Pull the paper tray completely out of the machine.

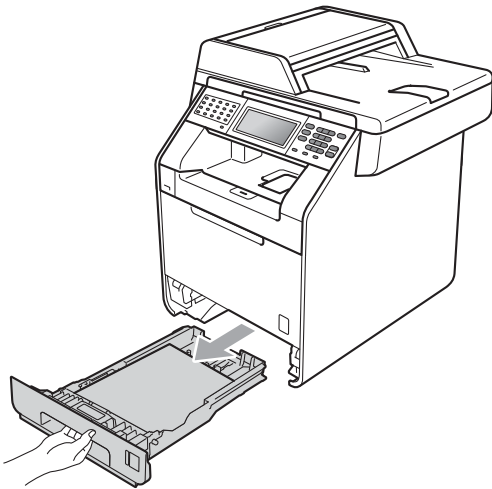


! WARNING

DO NOT touch the shaded parts shown in the illustration. These rollers may be rotating at high speed.

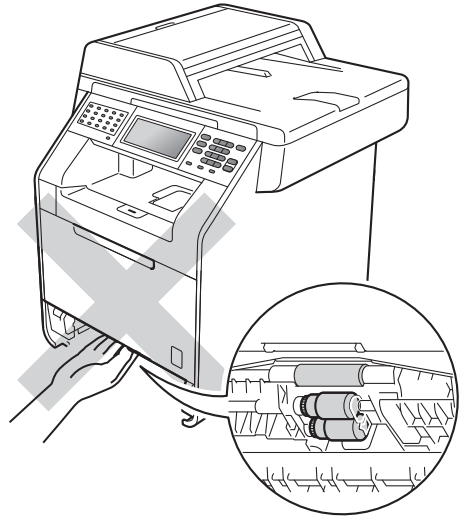


- 3 If paper is not caught inside the machine, turn the paper tray over and check underneath the paper tray.

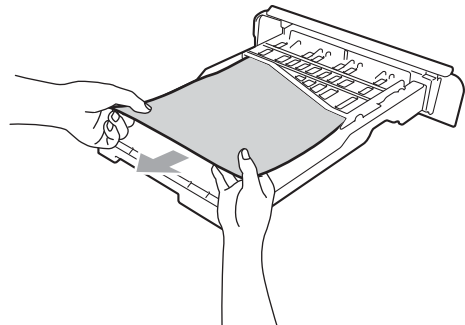

Note

DO NOT put the paper tray back in at this point.


- 4 If the paper is not caught in the paper tray, open the back cover.

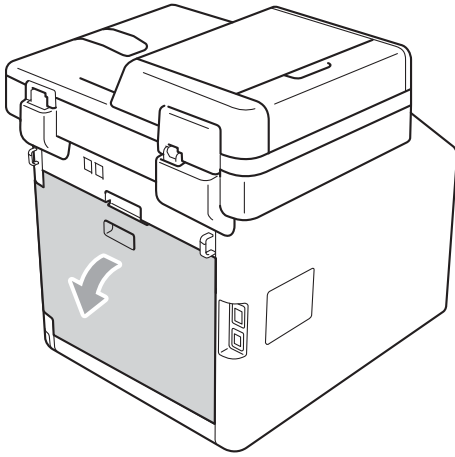


⚠ CAUTION

⚠ HOT SURFACE


After you have just used the machine, some internal parts of the machine will be extremely hot. Wait for the machine to cool down before you touch the internal parts of the machine.

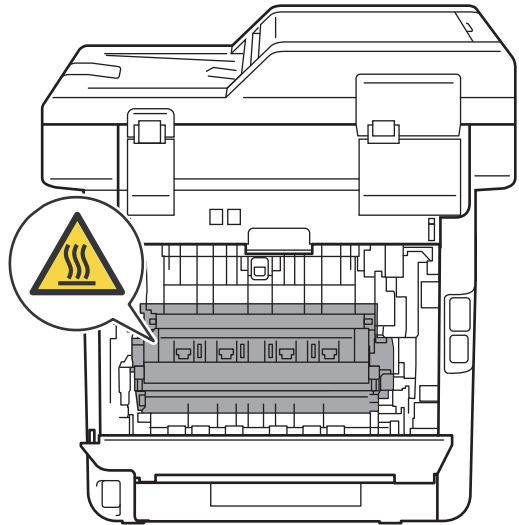


- 5** Push down and pull the green tabs at the left and right hand sides toward you and fold down the fuser cover (1).

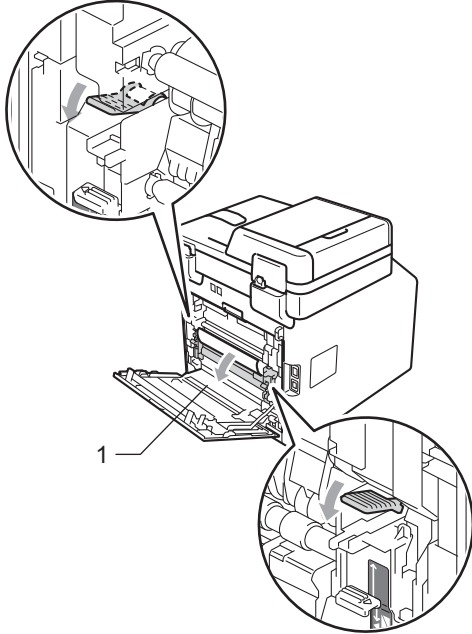

- 6** Using both hands, gently pull out the jammed paper.

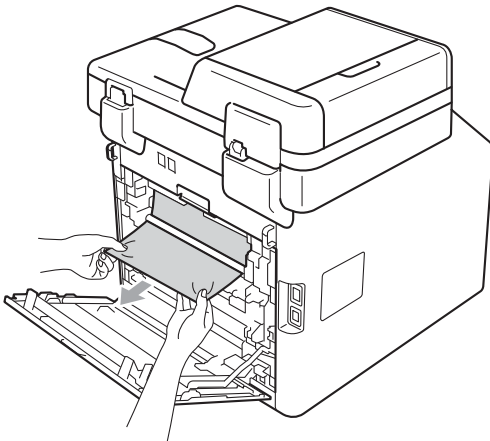

- 7** Close the fuser cover (1).

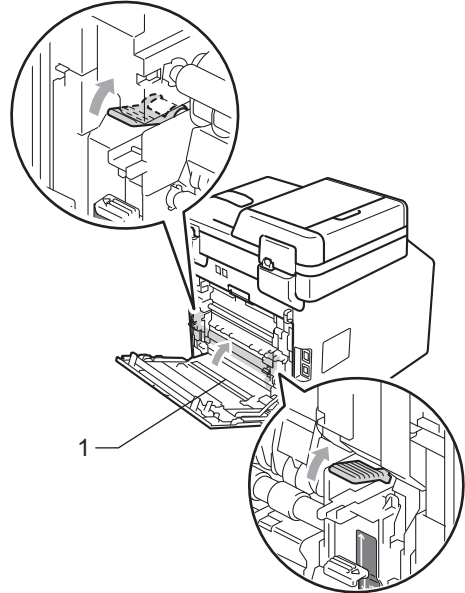

- 8** Fully close the back cover.

- 9** Put the paper tray firmly back in the machine.

If you are having difficulty with your machine

If you think there is a problem with your machine, check the chart below and follow the troubleshooting tips.

Most problems can be easily resolved by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at <http://solutions.brother.com/>.

If you think there is a problem with the way your faxes look, make a copy first. If the copy looks good, the problem may not be your machine. Check the chart below and follow the troubleshooting tips.

Printing or printing received faxes

Difficulties	Suggestions
<ul style="list-style-type: none"> ■ Condensed print ■ Horizontal streaks ■ Top and bottom sentences are cut off ■ Missing lines 	Usually this is caused by a poor telephone connection. If your copy looks good, you probably had a bad connection, with static or interference on the telephone line. Ask the other party to send the fax again.
Poor print quality	See <i>Improving the print quality</i> on page 142.
Vertical black lines when receiving	The corona wires for printing may be dirty. Clean the corona wires on the drum unit. (See <i>Cleaning the corona wires</i> on page 97.)
	The sender's scanner may be dirty. Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine.
	If the problem continues, call your dealer for service.
Received faxes appear as split or blank pages.	If the received faxes are divided and printed on two pages or if you get an extra blank page, your paper size setting may not be correct for the paper you are using. (See <i>Paper Size and Type</i> on page 18.)
	Turn on Auto Reduction. (See <i>Printing a reduced incoming fax</i> in Chapter 4 of the <i>Advanced User's Guide</i> .)

Telephone line or connections

Difficulties	Suggestions
Dialling does not work.	Check for a dial tone.
	Change Tone/Pulse setting. (See the <i>Quick Setup Guide</i> .)
	Check all line cord connections.
	Check that the machine is plugged in and switched on.
	If an external phone is connected to the machine, send a manual fax by lifting the handset of the external telephone and dialling the number. Wait to hear the fax receiving tones before pressing Mono Start or Colour Start .
The machine does not answer when called.	Make sure the machine is in the correct receive mode for your setup. (See <i>Receive Mode settings</i> on page 34.) Check for a dial tone. If possible, call your machine to hear it answer. If there is still no answer, check the telephone line cord connection. If you do not hear ringing when you call your machine, ask your telephone company to check the line.

Receiving Faxes

Difficulties	Suggestions
<p>Cannot receive a fax.</p>	<p>Check all line cord connections. Make sure the telephone line cord is plugged into the telephone wall socket and the LINE socket of the machine. If you subscribe to DSL or VoIP services, please contact your service provider for connection instructions.</p> <p>Make sure the machine is in the correct Receive Mode. This is determined by the external devices and telephone subscriber services you have on the same line as the Brother machine. (See <i>Receive Mode settings</i> on page 34.)</p> <p>If you have a dedicated fax line and want your Brother machine to automatically answer all incoming faxes, you should select Fax Only mode.</p> <p>If your Brother machine shares a line with an external answering machine, you should select the External TAD mode. In External TAD mode, your Brother machine will automatically receive incoming faxes and voice callers will be able to leave a message on your answering machine.</p> <p>If your Brother machine shares a line with other telephones and you want it to automatically answer all incoming faxes, you should select the Fax/Tel mode. In Fax/Tel mode, your Brother machine will automatically receive faxes and produce a fast double-ring to alert you to answer voice calls.</p> <p>If you do not want your Brother machine to automatically answer any incoming faxes, you should select the Manual mode. In Manual mode, you must answer every incoming call and activate the machine to receive faxes.</p> <p>Another device or service at your location may be answering the call before your Brother machine answers. To test this, lower the ring delay setting:</p> <ul style="list-style-type: none"> ■ If the answer mode is set to Fax Only or Fax/Tel, reduce the ring delay to 1 ring. (See <i>Ring Delay</i> on page 34.) ■ If the answer mode is set to External TAD, reduce the number of rings programmed on your answering machine to 2. ■ If the answer mode is set to Manual, DO NOT adjust the ring delay setting. <p>Have someone send you a test fax:</p> <ul style="list-style-type: none"> ■ If you received the test fax successfully, your machine is operating properly. Remember to reset your ring delay or answering machine setting back to your original setting. If receiving problems recur after resetting the ring delay, then a person, device, or subscriber service is answering the fax call before the machine has a chance to answer. ■ If you were not able to receive the fax, then another device or subscriber service may be interfering with your fax reception or there may be a problem with your fax line.

Receiving Faxes (continued)

Difficulties	Suggestions
Cannot receive a fax. (continued)	<p>If you are using a telephone answering machine (External TAD mode) on the same line as the Brother machine, make sure your answering machine is set up correctly. (See <i>Connecting an external TAD</i> on page 37.)</p> <ol style="list-style-type: none"> 1 Connect the external TAD as shown in the illustration on page 37. 2 Set your answering machine to answer in one or two rings. 3 Record the outgoing message on your answering machine. <ul style="list-style-type: none"> ■ Record five seconds of silence at the beginning of your outgoing message. ■ Limit your speaking to 20 seconds. ■ End your outgoing message with your Remote Activation Code for people sending manual faxes. For example: "After the beep, leave a message or press *51 and Start to send a fax." 4 Set your answering machine to answer calls. 5 Set your Brother machine's Receive Mode to External TAD. (See <i>Receive Mode settings</i> on page 34.) <p>Make sure your Brother machine's Fax Detect feature is turned On. Fax Detect is a feature that allows you to receive a fax even if you have answered the call on an external or extension telephone. (See <i>Fax Detect</i> on page 35.)</p> <p>If you often get transmission errors due to possible interference on the telephone line, try changing the Compatibility setting to Basic (for VoIP). (See <i>Telephone line interference / VoIP</i> on page 141.)</p> <p>Contact your administrator to check your Secure Function Lock Settings.</p>


Sending faxes

Difficulties	Suggestions
Poor sending quality.	Try changing your resolution to Fine or S. Fine. Make a copy to check your machine's scanner operation. If the copy quality is not good, clean the scanner. (See <i>Cleaning the scanner glass</i> on page 92.)
Transmission Verification Report says RESULT:ERROR.	<p>There is probably temporary noise or static on the line. Try sending the fax again. If you are sending a PC-Fax message and get RESULT:ERROR on the Transmission Verification Report, your machine may be out of memory. To free up extra memory, you can turn off fax storage (see <i>Changing Remote Fax Options</i> in Chapter 4 of the <i>Advanced User's Guide</i>), print fax messages in memory (see <i>Printing a fax from the memory</i> in Chapter 4 of the <i>Advanced User's Guide</i>) or cancel a delayed fax or polling job (see <i>Checking and cancelling waiting jobs</i> in Chapter 3 of the <i>Advanced User's Guide</i>). If the problem continues, ask the telephone company to check your telephone line.</p> <p>If you often get transmission errors due to possible interference on the telephone line, try changing the Compatibility setting to Basic (for VoIP). (See <i>Telephone line interference / VoIP</i> on page 141.)</p>
Sent faxes are blank.	Make sure you are loading the document properly. (See <i>Loading documents</i> on page 26.)
Vertical black lines when sending.	Black vertical lines on faxes you send are typically caused by dirt or correction fluid on the glass strip. (See <i>Cleaning the scanner glass</i> on page 92.)
Cannot send a fax.	Contact your administrator to check your Secure Function Lock Settings.

Handling incoming calls

Difficulties	Suggestions
The machine 'Hears' a voice as a CNG Tone.	If <i>Fax Detect</i> is set to On, your machine is more sensitive to sounds. It may mistakenly interpret certain voices or music on the line as a fax machine calling and respond with fax receiving tones. Deactivate the machine by pressing Stop/Exit . Try avoiding this problem by turning <i>Fax Detect</i> to Off. (See <i>Fax Detect</i> on page 35.)
Sending a Fax Call to the machine.	If you answered on an external or extension telephone, press your Remote Activation code (default setting is *51). When your machine answers, hang up.
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, Caller ID, Voice Mail, an answering machine, an alarm system or other custom feature on a single telephone line with your machine, it may create a problem sending or receiving faxes. For Example: If you subscribe to Call Waiting or some other custom service and its signal comes through the line while your machine is sending or receiving a fax, the signal can temporarily interrupt or disrupt the faxes. Brother's ECM feature should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive information on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, a separate line with no custom features is recommended.

Copy difficulties

Difficulties	Suggestions
Cannot make a copy.	<ul style="list-style-type: none"> ■ Make sure that COPY  is illuminated. (See <i>How to copy</i> on page 51.) ■ Contact your administrator to check your Secure Function Lock Settings.
Vertical black line appears in copies.	Black vertical lines on copies are typically caused by dirt or correction fluid on the glass strip, or one or more corona wires are dirty. (See <i>Cleaning the scanner glass</i> on page 92 and <i>Cleaning the corona wires</i> on page 97.)
Copies are blank.	Make sure you are loading the document properly. (See <i>Using the automatic document feeder (ADF)</i> on page 26 or <i>Using the scanner glass</i> on page 27.)

Printing difficulties

Difficulties	Suggestions
No printout.	<ul style="list-style-type: none"> ■ Check that the machine is plugged in and the power switch is turned on. ■ Check that the toner cartridge and drum unit are installed correctly. (See <i>Replacing the drum unit</i> on page 73.) ■ Check the interface cable connection on both the machine and your computer. (See the <i>Quick Setup Guide</i>.) ■ Check that the correct printer driver has been installed and chosen. ■ Check to see if the LCD is showing an error message. (See <i>Error and maintenance messages</i> on page 111.) ■ Check the machine is online: (Windows® 7 and Windows Server® 2008 R2) Click the Start button and Devices and Printers. Right-click Brother MFC-XXXX Printer. Make sure that Use Printer Offline is unchecked. (Windows Vista®) Click the Start button, Control Panel, Hardware and Sound, and then Printers. Right-click Brother MFC-XXXX Printer. Make sure that Use Printer Offline is unchecked. (Windows® XP and Windows Server® 2003/2008) Click the Start button and choose Printers and Faxes. Right-click Brother MFC-XXXX Printer. Make sure that Use Printer Offline is unchecked. (Windows® 2000) Click the Start button and choose Settings and then Printers. Right-click Brother MFC-XXXX Printer. Make sure that Use Printer Offline is unchecked. ■ Contact your administrator to check your Secure Function Lock settings. ■ If either the Cyan, Magenta or Yellow toner reaches the end of its life while printing a colour document, the print job cannot be completed. You can choose to start the print job again in Mono mode, as long as black toner is available. See <i>Basic tab</i> in the <i>Software User's Guide</i>.
The machine prints unexpectedly or it prints garbage.	<ul style="list-style-type: none"> ■ Press Job Cancel to cancel print jobs. ■ Check the settings in your application to make sure it is set up to work with your machine.
The machine prints the first couple of pages correctly, then some pages have text missing.	<ul style="list-style-type: none"> ■ Check the settings in your application to make sure that it is set up to work with your machine. ■ Your computer is not recognising the machine's input buffer's full signal. Make sure that you connected the interface cable correctly. (See the <i>Quick Setup Guide</i>.)
The headers or footers appear when the document displays on the screen but they do not show up when it is printed.	There is an unprintable area on the top and bottom of the page. Adjust the top and bottom margins in your document to allow for this. (See <i>Unscannable and unprintable areas</i> on page 17.)
The machine does not print on both sides of the paper even though the printer driver setting is Duplex.	Check the paper size setting in the printer driver. You need to choose A4 [60 to 105 g/m ²].

Printing difficulties (continued)

Difficulties	Suggestions
The machine is not printing or has stopped printing.	<ul style="list-style-type: none"> ■ If either the Cyan, Magenta or Yellow toner reaches the end of its life while printing a colour document, the print job cannot be completed. You can choose to start the print job again in Mono mode, as long as black toner is available. See <i>Basic tab</i> in the <i>Software User's Guide</i>. ■ Press Job Cancel. <p>As the machine cancels the print job and clears it from the memory it may produce an incomplete printout.</p>
The machine does not change to Direct Print mode when a USB flash memory drive is connected to the USB direct interface.	When the machine is in Deep Sleep mode, the machine does not wake up when a USB flash memory drive is connected to the USB direct interface. Press the LCD surface or any key to wake up the machine. Then press Direct Print on the LCD to display the Direct Print menu.

Scanning difficulties

Difficulties	Suggestions
TWAIN errors appear while scanning.	Make sure that the Brother TWAIN driver is chosen as the primary source. In PaperPort™ 12SE, click File, Scan or Get Photo and choose the Brother TWAIN driver.
OCR does not work.	Try increasing the scanning resolution. (Macintosh users) Presto! PageManager must be downloaded and installed before use. See <i>Accessing Brother Support (Macintosh)</i> on page 4 for further instructions.
Network scanning does not work.	See <i>Network difficulties</i> on page 139.
Cannot scan.	Contact your administrator to check your Secure Function Lock Settings.

Software difficulties

Difficulties	Suggestions
Cannot install software or print.	Run the Repair MFL-Pro Suite program on the CD-ROM. This program will repair and reinstall the software.
Cannot perform '2 in 1' or '4 in 1' printing.	Check that the paper size setting in the application and in the printer driver are the same.
The machine does not print from Adobe® Illustrator®.	Try to reduce the print quality. (See <i>Basic tab</i> in the <i>Software User's Guide</i> .)

Paper handling difficulties

Difficulties	Suggestions
<p>The machine does not feed paper.</p> <p>The LCD shows No Paper or a Paper Jam message.</p>	<ul style="list-style-type: none"> ■ If there is no paper, load a new stack of paper into the paper tray. ■ If there is paper in the paper tray, make sure it is straight. If the paper is curled, you should straighten it. Sometimes it is helpful to remove the paper, turn the stack over and put it back into the paper tray. ■ Reduce the amount of paper in the paper tray, and then try again. ■ Make sure that manual feed mode is not chosen in the printer driver. ■ Clean the paper pick-up roller. See <i>Cleaning the paper pick-up rollers</i> on page 107. ■ If the LCD shows the Paper Jam message and you still have a problem, see <i>Error and maintenance messages</i> on page 111.
<p>The machine does not feed paper from the MP tray.</p>	<ul style="list-style-type: none"> ■ Make sure that MP tray is chosen in the printer driver. ■ Fan the paper well and put it back in the tray firmly.
<p>How do I print on envelopes?</p>	<p>You can load envelopes in the MP tray. Your application must be set up to print the envelope size you are using. This is usually done in the Page Setup or Document Setup menu of your application. (See your application's manual for more information.)</p>
<p>What paper can I use?</p>	<p>You can use thin paper, plain paper, thick paper, bond paper, recycled paper, glossy paper, envelopes and labels that are made for laser machines. (For details, see <i>Acceptable paper and other print media</i> on page 21.)</p>
<p>There is a paper jam.</p>	<p>Clear the jammed paper. (See <i>Error and maintenance messages</i> on page 111.)</p>

Print quality difficulties

Difficulties	Suggestions
<p>Printed pages are curled.</p>	<ul style="list-style-type: none"> ■ Low quality thin or thick paper or not printing on the recommended side of the paper could cause this problem. Try turning over the stack of paper in the paper tray. ■ Make sure that you choose the Paper Type that suits the print media type you are using. (See <i>Acceptable paper and other print media</i> on page 21.)
<p>Printed pages are smeared.</p>	<p>The Paper Type setting may be incorrect for the type of print media you are using, or the print media may be too thick or have a rough surface. (See <i>Acceptable paper and other print media</i> on page 21 and <i>Basic tab</i> in the <i>Software User's Guide</i>.)</p>
<p>Printouts are too light.</p>	<ul style="list-style-type: none"> ■ If this problem occurs when making copies or printing received faxes, set Toner Save mode to OFF in the machine menu settings. (See <i>Toner Save</i> in <i>Chapter 1</i> of the <i>Advanced User's Guide</i>) ■ Remove the check in the Toner Save Mode check box in the Advanced tab of the printer driver. (See <i>Advanced tab</i> in the <i>Software User's Guide</i>.) ■ In the Basic tab of the printer driver, click the Settings button and check the Enhance Black Printing check box.

Network difficulties

Difficulties	Suggestions
Cannot print over a wired Network.	<p>If you are having Network problems see the <i>Network User's Guide</i> for more information.</p> <p>Make sure your machine is powered on and is on-line and in Ready mode. Print the Network Configuration Report to see your current Network settings. (See <i>Reports</i> in <i>Chapter 6</i> of the <i>Advanced User's Guide</i>.) Reconnect the LAN cable to the hub to verify that the cable and network connections are good. If possible, try connecting the machine to a different port on your hub using a different cable. You can check the current wired network status from the Network control panel menu.</p>
The network scanning feature does not work.	<p>(Windows®)</p> <p>It is necessary to set the third-party Security/Firewall Software to allow Network scanning. To add port 54925 for Network scanning, enter the information below:</p> <ul style="list-style-type: none"> ■ In Name: Enter any description, for example Brother NetScan. ■ In Port number: Enter 54925. ■ In Protocol: UDP is selected. <p>Please refer to the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.</p> <p>For more details, you can read FAQs and troubleshooting suggestions at http://solutions.brother.com/.</p> <p>(Macintosh)</p> <ul style="list-style-type: none"> ■ The network scanning feature may not work due to the firewall settings. Change or disable the firewall settings. If you are using a third-party personal Firewall software, see the User's Guide for your software or contact the software manufacturer. ■ Re-select your machine in the Device Selector application located in Macintosh HD/Library/Printers/Brother/Utilities/DeviceSelector or from the model list in ControlCenter2.
The network PC-Fax Receive feature does not work.	<p>(Windows® only)</p> <p>It is necessary to set the third-party Security/Firewall Software to allow PC-FAX Rx. To add port 54926 for Network PC-FAX Rx, enter the information below:</p> <ul style="list-style-type: none"> ■ In Name: Enter any description, for example Brother PC-FAX Rx. ■ In Port number: Enter 54926. ■ In Protocol: UDP is selected. <p>Please refer to the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.</p> <p>For more details, you can read FAQs and troubleshooting suggestions at http://solutions.brother.com/.</p>



Network difficulties (continued)

Difficulties	Suggestions
Your computer cannot find your machine.	<p>(Windows®) The firewall setting on your PC may be rejecting the necessary network connection. (For details, see the instructions above.)</p> <p>(Macintosh)</p> <ul style="list-style-type: none">■ The computer may be unable to detect the machine due to the firewall settings. Change or disable the firewall settings. If you are using a third-party personal Firewall software, see the User's Guide for your software or contact the software manufacturer.■ Re-select your machine in the Device Selector application located in Macintosh HD/Library/Printers/Brother/Utilities/DeviceSelector or from the Model pop-up menu of ControlCenter2.
Cannot connect to wireless network.	Investigate the problem using the WLAN Report . Press MENU , Print Reports , WLAN Report , and then press Mono Start or Colour Start . For more details, see the <i>Quick Setup Guide</i> .

Other

Difficulties	Suggestions
The machine will not turn on.	<p>Adverse conditions on the power connection (such as lightning or a power surge) may have triggered the machine's internal safety mechanisms. Turn the machine off and unplug the power cord. Wait for ten minutes, then plug in the power cord and turn the machine on.</p> <p>If the problem is not solved, turn off the machine. Plug the power cord into a different known working outlet and turn on the machine.</p>

Setting Dial Tone detection

When you send a fax automatically, by default your machine will wait for a fixed amount of time before it starts to dial the number. By changing the Dial Tone setting to `Detection` you can make your machine dial as soon as it detects a dial tone. This setting can save a small amount of time when sending a fax to many different numbers. If you change the setting and start having problems with dialling you should change back to the default `No Detection` setting.

- 1 Press `MENU`.
- 2 Press `▲` or `▼` to display `Initial Setup`.
Press `Initial Setup`.
- 3 Press `▲` or `▼` to display `Dial Tone`.
Press `Dial Tone`.
- 4 Press `Detection` or `No Detection`.
- 5 Press **Stop/Exit**.

Telephone line interference / VoIP

If you are having difficulty sending or receiving a fax due to possible interference on the telephone line, we recommend that you adjust the Equalization for compatibility to reduce the modem speed for fax operations.

- 1 Press `MENU`.
- 2 Press `▲` or `▼` to display `Fax`.
Press `Fax`.
- 3 Press `▲` or `▼` to display `Miscellaneous`.
Press `Miscellaneous`.
- 4 Press `Compatibility`.
- 5 Press `Basic (for VoIP)`, `Normal` or `High`.
 - `Basic (for VoIP)` reduces the modem speed to 9600 bps and turns the error correction mode (ECM) off.
For a standard telephone line: If you regularly experience interference on your standard telephone line try this setting.
If you are using VoIP: VoIP service providers offer fax support using various standards. If you regularly experience fax transmission errors try this setting.
 - `Normal` sets the modem speed at 14400 bps.
 - `High` sets the modem speed at 33600 bps.
- 6 Press **Stop/Exit**.



Note

When you change the `Compatibility` to `Basic (for VoIP)`, the ECM feature is only available for colour fax sending.

Improving the print quality



If you have a print quality problem, print a test page first (MENU, Printer, Print Options, Test Print). If the printout looks good, the problem is probably not the machine. Check the interface cable connections or try printing a different document. If the printout or test page printed from the machine has a quality problem, check the following steps first. And then, if you still have a print quality problem, check the chart below and follow the recommendations.







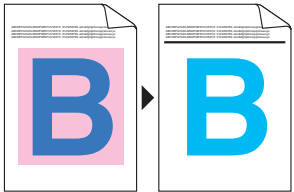
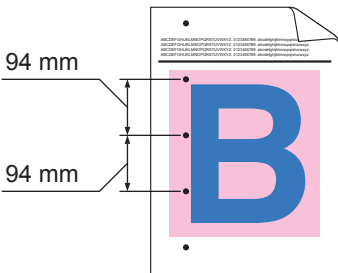
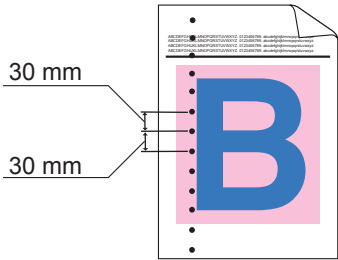

Note



Brother does not recommend the use of cartridges other than Brother Original cartridges or the refilling of used cartridges with toner from other sources.


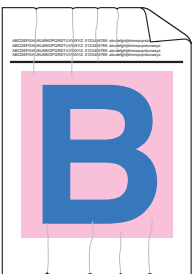
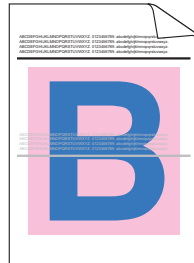
- 1 To get the best print quality, we suggest using the recommended paper. Check that you use paper that meets our specifications. (See *Acceptable paper and other print media* on page 21.)
- 2 Check that the drum unit and toner cartridges are installed properly.



Examples of poor print quality	Recommendation
<p>White lines, bands or ribbing across the page</p> 	<ul style="list-style-type: none"> ■ Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 73.)
<p>Colours are light or unclear on the whole page</p> 	<ul style="list-style-type: none"> ■ Make sure Toner Save mode is off in the control panel of the machine or the printer driver. ■ Make sure that you choose the correct media type in the printer driver or in the machine's Paper Type menu setting. (See <i>Acceptable paper and other print media</i> on page 21 and <i>Basic tab</i> in the <i>Software User's Guide</i>.) ■ Shake all four toner cartridges gently. ■ Wipe the laser scanner windows with a dry lint-free soft cloth. (See <i>Cleaning the laser scanner windows</i> on page 93.) ■ Perform the calibration. (See <i>Calibration</i> on page 108.)

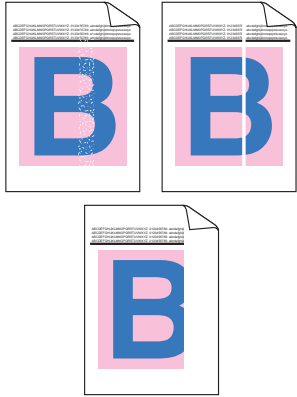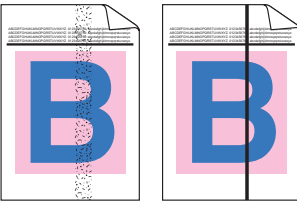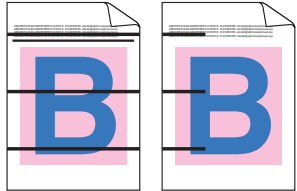Examples of poor print quality	Recommendation
<p>White streaks or bands down the page</p> 	<ul style="list-style-type: none"> ■ Clean the scanner glass and scanner glass strip. (See <i>Cleaning the scanner glass</i> on page 92.) ■ Wipe the laser scanner windows with a dry lint-free soft cloth. (See <i>Cleaning the laser scanner windows</i> on page 93.) ■ Clean the drum unit. (See <i>Cleaning the drum unit</i> on page 101.) ■ Identify the missing colour and put in a new toner cartridge. (See <i>Replacing a Toner cartridge</i> on page 66.) To identify the colour of the toner cartridge, visit us at http://solutions.brother.com/ to view our FAQs and troubleshooting tips.
<p>Coloured streaks or bands down the page</p> 	<ul style="list-style-type: none"> ■ Clean all four corona wires (one for each colour) inside the drum unit by sliding the green tab. (See <i>Cleaning the corona wires</i> on page 97.) ■ Make sure the corona wire green tabs are at their home positions (▲). ■ Clean the scanner glass and scanner glass strip. (See <i>Cleaning the scanner glass</i> on page 92.) ■ Replace the toner cartridge that matches the colour of the streak or band. (See <i>Replacing a Toner cartridge</i> on page 66.) To identify the colour of the toner cartridge, visit us at http://solutions.brother.com/ to view our FAQs and troubleshooting tips. ■ Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 73.)
<p>Coloured lines across the page</p> 	<ul style="list-style-type: none"> ■ If coloured lines appear at 30 mm intervals, replace the toner cartridge that matches the colour of the line. (See <i>Replacing a Toner cartridge</i> on page 66.) To identify the colour of the toner cartridge, visit us at http://solutions.brother.com/ to view our FAQs and troubleshooting tips. ■ If coloured lines appear at 94 mm intervals, put in a new drum unit. (See <i>Replacing the drum unit</i> on page 73.)
<p>White spots or hollow print</p> 	<ul style="list-style-type: none"> ■ Make sure that the media type settings in the printer driver and in the machine's Paper Type menu match the type of paper you are using. (See <i>Acceptable paper and other print media</i> on page 21 and <i>Basic tab</i> in the <i>Software User's Guide</i>.) ■ Check the machine's environment. Conditions such as high humidity can cause white spots or hollow print. (See <i>Choosing a location</i> in the <i>Safety and Legal Booklet</i>.) ■ Clean the drum unit. (See <i>Cleaning the drum unit</i> on page 101.)

Examples of poor print quality	Recommendation
<p>Completely blank or some colours are missing</p> 	<ul style="list-style-type: none"> ■ Put in a new toner cartridge. (See <i>Replacing a Toner cartridge</i> on page 66.) To identify the colour of the toner cartridge, visit us at http://solutions.brother.com/ to view our FAQs and troubleshooting tips. ■ Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 73.)
<p>Coloured spots at 94 mm</p> 	<ul style="list-style-type: none"> ■ If the problem is not solved after printing, the drum may have foreign material, such as glue from a label, stuck on the drum surface. Clean the drum unit. (See <i>Cleaning the drum unit</i> on page 101.) ■ Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 73.)
<p>Coloured spots at 30 mm</p> 	<ul style="list-style-type: none"> ■ Identify the colour causing the problem and put in a new toner cartridge. (See <i>Replacing a Toner cartridge</i> on page 66.) To identify the colour of the toner cartridge, visit us at http://solutions.brother.com/ to view our FAQs and troubleshooting tips.
<p>Toner scatter or toner stain</p> 	<ul style="list-style-type: none"> ■ Check the machine's environment. Conditions such as high humidity and high temperatures may cause this print quality problem. (See <i>Choosing a location</i> in the <i>Safety and Legal Booklet</i>.) ■ Identify the colour causing the problem and put in a new toner cartridge. (See <i>Replacing a Toner cartridge</i> on page 66.) To identify the colour of the toner cartridge, visit us at http://solutions.brother.com/ to view our FAQs and troubleshooting tips. ■ If the problem continues, put in a new drum unit. (See <i>Replacing the drum unit</i> on page 73.)

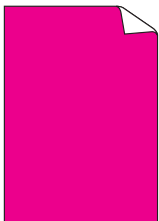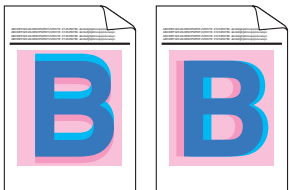Examples of poor print quality	Recommendation
<p>The colour of your printouts is not what you expected</p>	<ul style="list-style-type: none"> ■ Make sure Toner Save mode is off in the control panel of the machine or the printer driver. ■ Perform the calibration. (See <i>Calibration</i> on page 108.) ■ Adjust the colour by using the custom setting in the printer driver and by using the control panel of the machine. Colours the machine can print and colours you see on a monitor are different. The machine may not be able to reproduce the colours on your monitor. ■ If colours appear in the printed grey areas, make sure there is a check in the Improve Grey Colour check box of the printer driver. (See <i>Basic tab</i> for Windows® printer driver, <i>Advanced options</i> for Windows® BR-Script printer driver, <i>Print Settings</i> for Macintosh printer driver or <i>Printer Features</i> for Macintosh BR-Script printer driver in the <i>Software User's Guide</i>.) ■ If shaded areas look dull, remove the check from the Improve Grey Colour check box. ■ If a printed black graphic is too light, choose Enhance Black Printing mode in the printer driver. (See <i>Settings Dialog</i> for Windows® printer driver, <i>Advanced options</i> for Windows® BR-Script printer driver, <i>Print Settings</i> for Macintosh printer driver or <i>Printer Features</i> for Macintosh BR-Script printer driver in the <i>Software User's Guide</i>.) ■ Identify the colour causing the problem and put in a new toner cartridge. (See <i>Replacing a Toner cartridge</i> on page 66.) ■ Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 73.)
<p>All one colour</p> 	<ul style="list-style-type: none"> ■ Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 73.)
<p>Colour misregistration</p> 	<ul style="list-style-type: none"> ■ Make sure that the machine is on a solid level surface. ■ Perform the auto colour registration using the control panel (see <i>Auto Registration</i> on page 109) or perform the manual colour registration using the control panel (see <i>Manual Registration</i> on page 110). ■ Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 73.) ■ Put in a new belt unit. (See <i>Replacing the belt unit</i> on page 78.)

Examples of poor print quality	Recommendation
<p>Uneven density appears periodically across the page</p> 	<ul style="list-style-type: none"> ■ Perform the calibration. (See <i>Calibration</i> on page 108.) ■ Clean the scanner glass and scanner glass strip. (See <i>Cleaning the scanner glass</i> on page 92.) ■ Identify the colour that is uneven and put in a new toner cartridge for that colour. (See <i>Replacing a Toner cartridge</i> on page 66.) To identify the colour of the toner cartridge, visit us at http://solutions.brother.com/ to view our FAQs and troubleshooting tips. ■ Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 73.)
<p>Thin lines do not print</p>	<ul style="list-style-type: none"> ■ Make sure Toner Save mode is off in the control panel of the machine or the printer driver. ■ Change the print resolution. ■ If you use a Windows® printer driver, choose Improve Pattern Printing or Improve Thin Line in Settings from the Basic tab. (See <i>Settings Dialog</i> in the <i>Software User's Guide</i>.)
<p>Wrinkle</p> 	<ul style="list-style-type: none"> ■ Change to the recommended type of paper. (See <i>Recommended paper and print media</i> on page 21.) ■ Make sure that the back cover is closed properly. ■ Make sure that the two grey levers inside the back cover are in the up position. When you are using thick paper or envelopes, make sure the grey levers are in the down position to prevent wrinkling. ■ Make sure that the media type settings in the printer driver and in the machine's Paper Type menu matches the type of paper you are using. (See <i>Acceptable paper and other print media</i> on page 21 and <i>Basic tab</i> in the <i>Software User's Guide</i>.)
<p>Offset image</p> 	<ul style="list-style-type: none"> ■ Make sure that the media type settings in the printer driver and in the machine's Paper Type menu matches the type of paper you are using. (See <i>Acceptable paper and other print media</i> on page 21 and <i>Basic tab</i> in the <i>Software User's Guide</i>.) ■ Make sure that the two grey levers inside the back cover are in the up position. ■ Check the machine's environment. Conditions such as low humidity and low temperatures may cause this print quality problem. (See <i>Choosing a location</i> in the <i>Safety and Legal Booklet</i>.) ■ Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 73.)

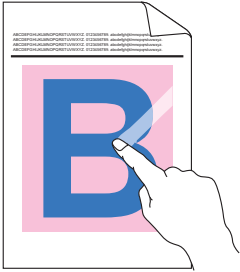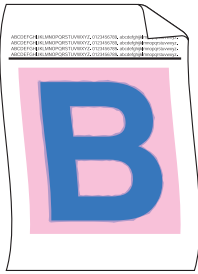Examples of poor print quality	Recommendation
<p>Poor fixing</p> 	<ul style="list-style-type: none"> ■ Make sure that the media type settings in the printer driver and in the machine's Paper Type menu matches the type of paper you are using. (See <i>Acceptable paper and other print media</i> on page 21 and <i>Basic</i> tab in the <i>Software User's Guide</i>.) ■ Make sure that the two grey levers inside the back cover are in the up position. ■ Choose Improve Toner Fixing mode in the printer driver. (See <i>Other Print Options</i> (For Windows® printer driver), <i>Advanced options</i> (For Windows® BR-Script printer driver), <i>Print Settings</i> (For Macintosh printer driver) or <i>Printer Features</i> (For Macintosh BR-Script printer driver) in the <i>Software User's Guide</i>.) If this selection does not provide enough improvement, change the printer driver setting in Media Type to a thick setting.
<p>Curled or wavy</p> 	<ul style="list-style-type: none"> ■ Choose Reduce Paper Curl mode in the printer driver when you do not use our recommended paper. (See <i>Other Print Options</i> (For Windows® printer driver), <i>Advanced options</i> (For Windows® BR-Script printer driver), <i>Print Settings</i> (For Macintosh printer driver) or <i>Printer Features</i> (For Macintosh BR-Script printer driver) in the <i>Software User's Guide</i>.) ■ If you do not use the machine often, the paper may have been in the paper tray too long. Turn over the stack of paper in the paper tray. Also, fan the paper stack and then rotate the paper 180° in the paper tray. ■ Store the paper where it will not be exposed to avoid high temperatures and high humidity. ■ Open the back cover (<i>face-up</i> output tray) to let the printed paper out on the <i>face-up</i> output tray.


Examples of poor print quality

Recommendation

Envelope creases



- Make sure that the two grey envelope levers are pulled down when you are printing envelopes.

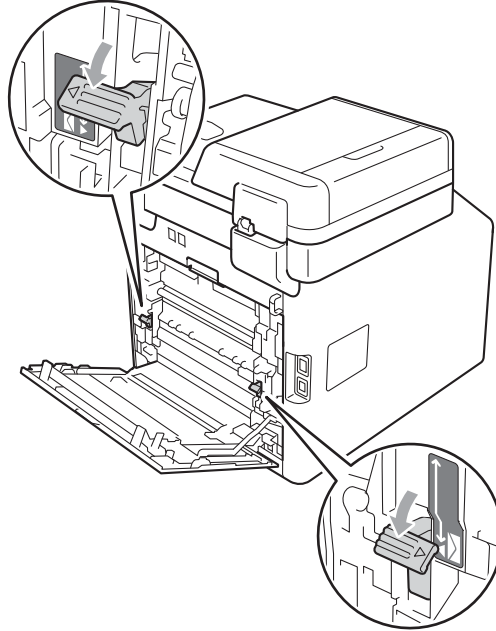

- If creases occur with the envelope levers in the envelope position, print with the back cover opened and feed one envelope at a time from the MP tray.

Machine Information

Checking the Serial Number

You can see the machine's Serial Number on the LCD.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display
Machine Info..
Press Machine Info..
- 3 The machine will display the machine's
Serial Number on the LCD.
- 4 Press **Stop/Exit**.

Reset functions

The following reset functions are available:

1 Network

You can reset the internal print server back to its default factory settings such as the password and IP address information.

2 Address & Fax

Address & Fax resets the following settings:

- Address Book
(One Touch Dial/Speed Dial/Setup Groups)
- Programmed fax jobs in the memory
(Polled TX, Delayed Fax)
- Station ID
(name and number)
- Coverpage Msg
(comments)
- Remote Fax Options
(Remote Access Code, Fax Storage, Fax Forwarding, Paging, PC-Fax Send, and PC-Fax Receive (Windows® only))
- Report settings
(Transmission Verification Report/ Tel Index List/Fax Journal)
- Setting Lock password

3 All Settings

You can reset all the machine settings back to the settings that were default factory settings.

Brother strongly recommends you perform this operation when you dispose of the machine.



Note

Unplug the interface cable before you choose **Network** or **All Settings**.

How to reset the machine

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Initial Setup**.
Press **Initial Setup**.
- 3 Press **▲** or **▼** to display **Reset**.
Press **Reset**.
- 4 Press **Network, Address & Fax** or **All settings** to choose the reset function you want to use.
- 5 Do one of the following;
 - To reset the settings, press **Yes** and go to step 6.
 - To exit without making changes, press **No** and go to step 7.
- 6 You will be asked to reboot the machine. Do one of the following;
 - To reboot the machine press **Yes** for 2 seconds. The machine will begin the reboot.
 - To exit without rebooting the machine, press **No**. Go to step 7.
- 7 Press **Stop/Exit**.



Note

You can also reset the Network settings by pressing **MENU**, **Network**, **Network Reset**.

On-screen programming






Your machine is designed to be easy to operate with LCD on-screen programming using the menu buttons on the Touchscreen. User-friendly programming helps you take full advantage of all the menu selections your machine has to offer.

Since your programming is done on the LCD, we have created step-by-step on-screen instructions to help you program your machine. All you need to do is follow the instructions as they guide you through the menu selections and programming options.

Menu table

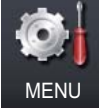You can program your machine by using the Menu table that begins on page 152. These pages list the menu selections and options.

MENU button and mode keys


 <p>MENU</p>	Access the main menu.
 <p>FAX</p>  <p>SCAN</p>  <p>COPY</p>	Access each mode and its menu of temporary settings.
 <p>Stop / Exit</p>	Exit the menu or stop the current operation.


Menu table


The menu table will help you understand the menu selections and options that are found in the machine's programs. The factory settings are shown in Bold with an asterisk.




Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
General Setup	Mode Timer	—	—	0 Sec 30 Secs 1 Min 2 Mins* 5 Mins Off	Sets the time to return to Fax mode and the time the machine will change from individual user to Public user mode when using Secure Function Lock.	See ¹ .
	Tray Setting	MP Tray	—	Paper Size A4* Letter Legal Executive A5 A5 L A6 B5 B6 Folio Any Paper Type Thin Plain* Thick Thicker Recycled Paper Glossy	Sets the size and type of paper in paper MP tray.	18
¹ See <i>Advanced User's Guide</i>						
The factory settings are shown in Bold with an asterisk.						

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
General Setup (Continued)	Tray Setting (Continued)	Tray#1	—	Paper Size A4* Letter Legal Executive A5 A5 L A6 B5 B6 Folio	Sets the size and type of paper in paper tray #1.	18
				Paper Type Thin Plain* Thick Thicker Recycled Paper		
		Tray#2 (This menu only appears if you have the optional tray#2.)	—	Paper Size A4* Letter Legal Executive A5 B5 B6 Folio	Sets the size and type of paper in paper tray #2.	18
¹ See <i>Advanced User's Guide</i>						
 The factory settings are shown in Bold with an asterisk.						

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
General Setup (Continued)	Tray Setting (Continued)	Tray Use:Copy	—	Tray#1 Only Tray#2 Only MP Only MP>T1>T2* T1>T2>MP (Tray#2 or T2 appears only if you installed the optional paper tray.)	Chooses the tray that will be used for Copy mode.	19
		Tray Use:Fax	—	Tray#1 Only Tray#2 Only MP Only MP>T1>T2 T1>T2>MP* (Tray#2 or T2 appears only if you installed the optional paper tray.)	Chooses the tray that will be used for Fax mode.	19
		Tray Use:Print	—	Tray#1 Only Tray#2 Only MP Only MP>T1>T2* T1>T2>MP (Tray#2 or T2 appears only if you installed the optional paper tray.)	Chooses the tray that will be used for Print mode.	20
¹ See <i>Advanced User's Guide</i>						
 The factory settings are shown in Bold with an asterisk.						

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page	
General Setup (Continued)	Volume	Ring	—	Off Low Med* High	Adjusts the ring volume.	10	
		Beeper	—	Off Low Med* High	Adjusts the beeper volume.	10	
		Speaker	—	Off Low Med* High	Adjusts the speaker volume.	10	
	Ecology	Toner Save	—	On Off*	Increases the page yield of the toner cartridge.	See ¹ .	
		Sleep Time	—	Range varies depending on models. 3 Mins*	Conserves power.		
	LCD Settings	Backlight	—	Light* Med Dark	You can adjust the brightness of the LCD backlight.		
		Dim Timer	—	Off* 10 Secs 20 Secs 30 Secs	You can set how long the LCD backlight stays on for after the last key press.		
	Security	Function Lock	Set Password Lock Off-On Setup ID	—	You can restrict selected machine operations for up to 25 restricted users and all other non-authorized Public users.		
		Setting Lock	Set Password Lock Off-On	—	Stops unauthorized users from changing the machine's current settings.		
	¹ See <i>Advanced User's Guide</i>						
	 The factory settings are shown in Bold with an asterisk.						



Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Fax	Setup Receive (In Fax mode only)	Ring Delay	—	(0 - 8) 2* (Example for the UK)	Sets the number of rings before the machine answers in Fax Only or Fax/Tel mode.	34
		F/T Ring Time	—	20 Secs 30 Secs* 40 Secs 70 Secs	Sets the length of the fast double-ring time in Fax/Tel mode.	34
		Fax Detect	—	On* Off	Receives fax messages automatically when you answer a call and hear fax tones.	35
		Remote Codes	—	On (*51, #51) Off*	Allows you to answer all calls at an extension or external phone and use codes to turn the machine on or off. You can personalize these codes.	41
		Auto Reduction	—	On* Off	Reduces the size of incoming faxes.	See ¹ .
		Forward/Store (Backup Print)	—	Off* Fax Forward Fax Storage PC Fax Receive	Sets the machine to forward fax messages, to store incoming faxes in the memory (so you can retrieve them while you are away from your machine), or to send faxes to your PC. If you chose Fax Forward or PC-Fax Receive, you can turn on the safety feature Backup Print.	
¹ See <i>Advanced User's Guide</i>						
 The factory settings are shown in Bold with an asterisk.						

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Fax (Continued)	Setup Receive (In Fax mode only) (Continued)	Print Density	—	-2 -1 0* +1 +2	Makes printouts darker or lighter.	See ¹ .
		Fax Rx Stamp	—	On Off*	Prints the received time and date on the top of the received faxes.	
		Duplex	—	On Off*	Prints receive faxes on both sides of the paper.	
	Setup Send	Batch TX	—	On Off*	Combines delayed faxes going to the same fax number at the same time of day into one transmission.	
		Coverpage Setting	Print Sample	—		
			Coverpage Note	—		Set up your own comments for the fax cover page.
	Report Setting	XMIT report	—	On On+Image Off* Off+Image	Choose the initial setup for the Transmission Verification Report.	30
		Journal Period	—	Off Every 50 Faxes* Every 6 Hours Every 12 Hours Every 24 Hours Every 2 Days Every 7 Days	Sets the interval for automatic printing of the Fax Journal. If you have chosen other than Off and Every 50 Faxes, you can set the time for the chosen option. If you have chosen Every 7 Days, you can also set the day of the week.	See ¹ .
	Print Document	—	—	—	Prints incoming faxes stored in the memory.	
	Remote Access	—	—	---*	Set your own code for Remote Retrieval.	

¹ See *Advanced User's Guide*



The factory settings are shown in Bold with an asterisk.

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Fax (Continued)	Dial Restrict.	Dial Pad	—	Off* Enter # twice On	You can set the machine to restrict dialling when using the dial pad.	See ¹ .
		One Touch Dial	—	Off* Enter # twice On	You can set the machine to restrict the dialling of One Touch numbers.	
		Speed Dial	—	Off* Enter # twice On	You can set the machine to restrict the dialling of Speed Dial numbers.	
		LDAP Server	—	Off* Enter # twice On	You can set the machine to restrict the dialling of LDAP server numbers.	
	Remaining Jobs	—	—	—	Check which scheduled jobs are in the memory and cancel chosen jobs.	
	Miscellaneous	Compatibility	—	High* Normal Basic(for VoIP)	Adjusts the equalization for transmission difficulties. VoIP service providers offer fax support using various standards. If you regularly experience fax transmission errors, choose Basic(for VoIP).	141
BT Call Sign (U.K. only)		—	On Off*	Used with BT Call Sign.	See ¹ .	

¹ See *Advanced User's Guide*



The factory settings are shown in Bold with an asterisk.



Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Printer	Emulation	—	—	Auto* HP LaserJet BR-Script 3	Choose the emulation mode.	See ¹ .
	Print Options	Internal Font	—	HP LaserJet BR-Script 3	Prints a list of the machine's internal fonts.	
		Configuration	—	—	Prints a list of the machine's printer settings.	
		Test Print	—	—	Prints a test page.	
	Duplex	—	—	Off* Long Edge Short Edge	Enables or disables duplex printing. You can also choose long edge or short edge duplex printing.	
	Output Color	—	—	Auto* Color B&W	Chooses colour or black & white printed documents. If you choose Auto, the machine selects a suitable option for the document (color or B&W).	
	Reset Printer	—	—	Yes No	Restores the printer settings to the original factory default settings.	
	Calibration	Calibrate	—	Yes No	Adjusts the colour density or returns the colour calibration to the factory settings.	108
		Reset	—	Yes No		
Auto Regist.	—	—	Yes No	Adjusts the print position of each colour automatically.	109	

¹ See *Software User's Guide*



The factory settings are shown in Bold with an asterisk.


Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Printer (Continued)	Manual Regist.	Print Chart	—	—	Print the chart to manually check the registration of the colours.	110
		Set Regist.	1 Magenta Left 2 Cyan Left 3 Yellow Left 4 Magenta Center 5 Cyan Center 6 Yellow Center 7 Magenta Right 8 Cyan Right 9 Yellow Right	—	Sets the correction value on the chart you printed from Print Chart.	
	Frequency	—	—	Normal* Low Off	Sets the interval time you want to carry out the auto registration and the calibration.	110

¹ See *Software User's Guide*



The factory settings are shown in Bold with an asterisk.



Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page	
Print Reports	XMIT Verify	View on LCD	—	—	Displays and prints a Transmission Verification Report for your last transmission.	See ¹ .	
		Print Report	—	—			
	Help List	—	—	—	Prints the Help List so you can see at-a-glance how to quickly program your machine.		
	Tel Index List	Numerical Order	—	—	Lists names and numbers stored in the One Touch and Speed Dial memory, in numerical or alphabetical order.		
		Alphabetical Order	—	—			
	Fax Journal	—	—	—	Lists information about your last 200 incoming and outgoing faxes. (TX means Transmit. RX means Receive.)		
	User Settings	—	—	—	Lists your settings.		
	Network Config	—	—	—	Lists your Network settings.		
	Drum Dot Print	—	—	—	Prints the drum dot check sheet.		101
	WLAN Report	—	—	—	Prints the result of wireless LAN connectivity diagnosis.		See ² .
Order Form	—	—	—	You can print an accessories order form to fill out and send to you Brother dealer.	See ¹ .		
¹ See <i>Advanced User's Guide</i> ² See <i>Quick Setup Guide</i>							
 The factory settings are shown in Bold with an asterisk.							



Level 1	Level 2	Level 3	Level 4	Level 5	Options	Descriptions
Network ¹	Wired LAN	TCP/IP	Boot Method	—	Auto* Static RARP BOOTP DHCP	Chooses the BOOT method that best suits your needs.
			(IP Boot Tries)		3* [00000-32767]	Specifies the number of setting trials when the Boot Method allows automatic IP setting.
			IP Address	—	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.
			Subnet Mask	—	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.
			Gateway	—	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.
			Node Name	—	BRNXXXXXXXXXXXX	Enter the Node name. (Up to 32 characters)
			WINS Config	—	Auto* Static	Chooses the WINS configuration mode.
WINS Server	—	Primary [000-255]. [000-255]. [000-255]. [000-255] Secondary [000-255]. [000-255]. [000-255]. [000-255]	Specifies the IP address of the primary or secondary WINS server.			

¹ See *Network User's Guide*



The factory settings are shown in Bold with an asterisk.

Level 1	Level 2	Level 3	Level 4	Level 5	Options	Descriptions
Network ¹ (Continued)	Wired LAN (Continued)	TCP/IP (Continued)	DNS Server	—	Primary [000-255]. [000-255]. [000-255]. [000-255] Secondary [000-255]. [000-255]. [000-255]. [000-255]	Specifies the IP address of the primary or secondary DNS server.
			APIPA	—	On* Off	Automatically allocates the IP address from the link-local address range.
			IPv6	—	On Off*	Enable or Disable the IPv6 protocol. If you want to use the IPv6 protocol, visit http://solutions.brother.com/ for more information.
		Ethernet	—	—	Auto* 100B-FD 100B-HD 10B-FD 10B-HD	Chooses the Ethernet link mode.
		Wired Status	—	—	Active 100B-FD Active 100B-HD Active 10B-FD Active 10B-HD InActive Wired OFF	You can see the current wired status.
		MAC Address	—	—	—	Shows the MAC address of the machine.
		Set to Default	—	—	Yes No	Restore the wired network setting to factory default.
		Wired Enable	—	—	On* Off	Enable or Disable the Wired LAN manually.

¹ See *Network User's Guide*




The factory settings are shown in Bold with an asterisk.

Level 1	Level 2	Level 3	Level 4	Level 5	Options	Descriptions
Network ¹ (Continued)	WLAN	TCP/IP	Boot Method	—	Auto* Static RARP BOOTP DHCP	Chooses the BOOT method that best suits your needs.
			(IP Boot Tries)	—	3* [00000-32767]	Specifies the number of setting trials when the Boot Method allows automatic IP setting.
			IP Address	—	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.
			Subnet Mask	—	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.
			Gateway	—	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.
			Node Name	—	BRWXXXXXXXXXXXX	Enter the Node name. (Up to 32 characters)
			WINS Config	—	Auto* Static	Chooses the WINS configuration mode.
WINS Server	—	Primary [000-255]. [000-255]. [000-255]. [000-255] Secondary [000-255]. [000-255]. [000-255]. [000-255]	Specifies the IP address of the primary or secondary WINS server.			

¹ See *Network User's Guide*



The factory settings are shown in Bold with an asterisk.


Level 1	Level 2	Level 3	Level 4	Level 5	Options	Descriptions
Network ¹ (Continued)	WLAN (Continued)	TCP/IP (Continued)	DNS Server	—	Primary [000-255]. [000-255]. [000-255]. [000-255] Secondary [000-255]. [000-255]. [000-255]. [000-255]	Specifies the IP address of the primary or secondary DNS server.
			APIPA	—	On* Off	Automatically allocates the IP address from the link-local address range.
			IPv6	—	On Off*	Enable or Disable the IPv6 protocol. If you want to use the IPv6 protocol, visit http://solutions.brother.com/ for more information.
		Setup Wizard	—	—	—	You can configure your internal print server.
		WPS/AOSS	—	—	—	You can easily configure your wireless network settings using the one-button push method.
		WPS w/PIN Code	—	—	—	You can easily configure your wireless network settings using WPS with a PIN code.
		WLAN Status	Status	—	Active (11b) Active (11g) Wired LAN Active WLAN Off AOSS Active Connection Fail	You can see the current wireless network status.
¹ See <i>Network User's Guide</i>						
 The factory settings are shown in Bold with an asterisk.						


Level 1	Level 2	Level 3	Level 4	Level 5	Options	Descriptions		
Network ¹ (Continued)	WLAN (Continued)	WLAN Status (Continued)	Signal	—	Strong Medium Weak None	You can see the current wireless network signal strength.		
			SSID	—	—	You can see the current SSID.		
			Comm. Mode	—	Ad-hoc Infrastructure	You can see the current Communication Mode.		
		MAC Address	—	—	—	Shows the MAC address of the machine.		
		Set to Default	—	—	Yes No	Restore the wireless network settings to factory default.		
		WLAN Enable	—	—	On off*	Enable or disable the wireless LAN manually.		
	E-mail/IFAX	Mail Address	—	—	—	—	Enter the mail address. (Up to 60 characters)	
			Setup Server	SMTP	SMTP Server	Name (Up to 64 characters) IP Address [000-255]. [000-255]. [000-255]. [000-255]	Enter the SMTP server address.	
						SMTP Port	25* [00001-65535]	Enter the SMTP port number.
						Auth. for SMTP	None* SMTP-AUTH POP bef. SMTP	Selects the Security method for E-mail notification.
						SMTP SSL/TLS	None* SSL TLS	You can send or receive an E-mail via an E-mail server that requires secure SSL/TLS communication.
						Verify SMTPCert.	On Off*	Verify the SMTP Server Certificate automatically.

¹ See *Network User's Guide*




The factory settings are shown in Bold with an asterisk.

Level 1	Level 2	Level 3	Level 4	Level 5	Options	Descriptions
Network ¹ (Continued)	E-mail/IFAX (Continued)	Setup Server (Continued)	POP3	POP3 Server	Name (Up to 64 characters) IP Address [000-255]. [000-255]. [000-255]. [000-255]	Enter the POP3 server address.
				POP3 Port	110* [00001-65535]	Enter the POP3 port number.
				Mailbox Name	—	Enter the mail box name. (Up to 60 characters)
				Mailbox Pwd	—	Enter the password to login to the POP3 server. (Up to 32 characters)
				POP3 SSL/TLS	None* SSL TLS	You can send or receive an E-mail via an E-mail server that requires secure SSL/TLS communication.
				Verify POP3Cert.	On Off*	Verify the POP3 Server Certificate automatically.
				APOP	On Off*	Enables or disables APOP.
		Setup Mail RX	Auto Polling	—	On* Off	Automatically checks the POP3 server for new messages.
				Poll Frequency (When Auto Polling is set to On.)	10* [01-60] Min	Sets the interval for checking for new messages on the POP3 server.
¹ See <i>Network User's Guide</i>						
 The factory settings are shown in Bold with an asterisk.						

Level 1	Level 2	Level 3	Level 4	Level 5	Options	Descriptions		
Network ¹ (Continued)	E-mail/IFAX (Continued)	Setup Mail RX (Continued)	Header	—	All Subject+From+To None*	Selects the contents of the mail header to be printed.		
			Del Error Mail	—	On* Off	Deletes error mails automatically.		
			Notification	—	On MDN Off*	Receives notification messages.		
			Setup Mail TX	Sender Subject	—	—	Displays the subject that is attached to the Internet Fax data.	
				Size Limit	—	On Off*	Limits the size of E-mail documents.	
				Notification	—	On Off*	Sends notification messages.	
		Setup Relay	Rly Broadcast	—	On Off*	Relays a document to another fax machine.		
			Relay Domain	—	—	Registers the Domain name.		
			Relay Report	—	On Off*	Prints the Relay Broadcast Report.		
		Fax to Server	—	—	—	On (Prefix/Suffix) Off*	You can store a prefix/suffix address in the machine and can send a document from a fax server system.	
		Network Reset	—	—	—	Yes No	Restore all network settings to factory default.	
		¹ See <i>Network User's Guide</i>						
		 The factory settings are shown in Bold with an asterisk.						



Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page	
Machine Info.	Serial No.	—	—	—	You can check the serial number of your machine.	149	
	Page Counter	—	—	Total Fax/List Copy Print	You can check the number of total pages the machine has printed during its life.	See ¹ .	
	Parts Life	Drum	—	—	—	You can check the percentage of a machine part's life that remains available. (PF Kit 2 appears only if you installed the optional LT-300CL paper tray.)	
		Belt Unit	—	—	—		
		Fuser	—	—	—		
		Laser	—	—	—		
		PF Kit MP	—	—	—		
		PF Kit 1	—	—	—		
PF Kit 2	—	—	—	—			
¹ See <i>Advanced User's Guide</i>							
 The factory settings are shown in Bold with an asterisk.							



Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page	
Initial Setup	Receive Mode	—	—	Fax Only* Fax/Tel External TAD Manual	Chooses the receive mode that best suits your needs.	32	
	Date&Time	Date&Time	—	—	—	Puts the date and time on the LCD and in headings of faxes you send.	See ² .
		Auto Daylight	—	—	On* Off	Changes for Daylight Savings Time automatically.	See ¹ .
		Time Zone	—	—	UTCXXX:XX	Sets the time zone for your country.	See ³ .
	Station ID	—	—	Fax: Tel: Name:	Sets up your name and fax number to appear on each page you fax.		
	Tone/Pulse	—	—	Tone* Pulse	Chooses the dialling mode.		
	Dial Tone	—	—	Detection No Detection*	You can shorten the dial tone detect pause.	141	
	Phone Line Set	—	—	Normal* ISDN PBX	Select the phone line type.	36	
	Reset	Network	—	—	Yes No	Restores all network settings to factory default.	149
		Address & Fax	—	—	Yes No	Restores all stored phone numbers and fax settings.	
All Settings		—	—	Yes No	Restores all the machine settings to the factory default.		
Local Language (in Eastern Europe)	—	—	—	(Choose your language.)	Allows you to change the LCD language for your country.	See ² .	

¹ See *Advanced User's Guide*.

² See *Quick Setup Guide*.

³ See *Network User's Guide*.



The factory settings are shown in Bold with an asterisk.

FAX ()

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Address Book	More	Set One Touch Dial	—	—	Stores up to 40 One Touch Dial numbers, so you can dial by pressing one key (and Mono Start or Colour Start).	46
		Set Speed Dial	—	—	Stores up to 300 Speed Dial numbers, so you can dial by pressing only a few keys (and Mono Start or Colour Start).	48
		Setup Groups	—	—	Sets up to 20 Group numbers for Broadcasting.	See 1.
		Change	—	—	You can change One Touch and Speed Dial numbers.	
		Delete	—	—	You can delete One Touch and Speed Dial numbers.	
Duplex Fax	—	—	—	Off* DuplexScan :LongEdge DuplexScan :ShortEdge	Sets the duplex scanning format.	
Fax Resolution	—	—	—	Standard* Fine S.Fine Photo	Sets the resolution for outgoing faxes.	
Contrast	—	—	—	Auto* Light Dark	Changes the lightness or darkness of faxes you send.	
Glass ScanSize	—	—	—	A4* Letter Legal/Folio	To fax a Letter, Legal or Folio size document, you'll need to change the Glass Scan Size setting.	29
Broadcasting	Manual	—	—	—	You can send the same fax message to more than one fax number.	See 1.
	Address Book	—	—	—		

¹ See *Advanced User's Guide*




The factory settings are shown in Bold with an asterisk.


Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Delayed Fax	—	—	—	On Off*	Sets the time of day in 24 hour format that delayed faxes will be sent.	See ¹ .
Real Time TX	—	—	—	On Off*	Sends a fax without using the memory.	
Polled TX	—	—	—	Standard Secure Off*	Sets up your machine with a document to be retrieved by another fax machine.	
Coverpage Setup	—	—	—	On Off*	Automatically sends a cover page you have programmed.	
Polling RX	—	—	—	Standard Secure Timer Off*	Sets up your machine to poll another fax machine.	
Overseas Mode	—	—	—	On Off*	If you are having difficulty sending faxes overseas, set this to On.	
Set New Default	—	—	—	Fax Resolution Contrast Glass ScanSize Real Time TX Coverpage Setup	You can save your fax settings as the default settings.	
Factory Reset	—	—	—	—	You can restore all fax settings to the factory settings.	




¹ See *Advanced User's Guide*



The factory settings are shown in Bold with an asterisk.

COPY ()


Level 1	Level 2	Level 3	Options 1	Options 2	Descriptions	Page
Quality	—	—	Auto* Text Photo Graph	—	You can choose the Copy resolution for your type of document.	See ¹ .
Enlarge/Reduce	—	—	100%*	—	—	
			Enlarge	104% EXE → LTR 141% A5 → A4 200%	You can choose the enlargement ratio for the next copy.	
			Reduce	50% 70% A4 → A5 78% LGL → LTR 83% LGL → A4 85% LTR → EXE 91% Full Page 94% A4 → LTR 97% LTR → A4	You can choose the reduction ratio for the next copy.	
			Custom (25-400%)	—	You can choose the enlargement or reduction ratio for the next copy.	
Duplex Copy	—	—	Off* 2side-2side 1side-2side LongEdgeFlip 2side-1side LongEdgeFlip 1side-2side ShortEdgeFlip 2side-1side ShortEdgeFlip	—	Enables or disables duplex printing. You can also choose long edge or short edge duplex printing.	
¹ See <i>Advanced User's Guide</i>						
 The factory settings are shown in Bold with an asterisk.						

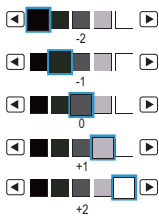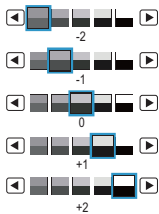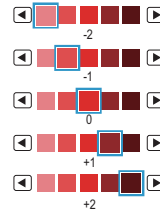Level 1	Level 2	Level 3	Options 1	Options 2	Descriptions	Page
Tray Use	—	—	Tray#1 Only Tray#2 Only MP Only MP>T1>T2* T1>T2>MP (Tray#2 or T2 appears only if you installed the optional paper tray.)	—	Chooses the tray that will be used for the copy operation.	See ¹ .
Brightness	—	—		—	Adjusts the brightness for copies.	
Contrast	—	—		—	Adjusts the contrast for copies.	
Stack / Sort	—	—	Stack* Sort	—	You can choose to stack or sort multiple copies.	
Page Layout	—	—	Off (1in1)* 2in1 (P) 2in1 (L) 2in1 (ID) 4in1 (P) 4in1 (L)	—	You can make N in 1 and 2 in 1 ID copies.	
Color Adjust	—	—	Red		Adjusts the red colour for copies.	

¹ See *Advanced User's Guide*



The factory settings are shown in Bold with an asterisk.

Level 1	Level 2	Level 3	Options 1	Options 2	Descriptions	Page
Color Adjust (Continued)	—	—	Green		Adjusts the green colour for copies.	See ¹ .
			Blue		Adjusts the blue colour for copies.	
Set New Default	—	—	Quality Brightness Contrast Color Adjust	—	You can save your copy settings as the default settings.	
Factory Reset	—	—	—	—	You can restore all copy settings to the factory settings.	
Favorite Settings	Store	Favorite:1	Rename	Quality	You can save your Favorite settings.	
		Favorite:2	Rename	Enlarge/Reduce		
		Favorite:3	Rename	Duplex Copy Tray Use Brightness Contrast Stack / Sort Page Layout Color Adjust		
	Rename	Favorite:1	Rename	—		You can rename your Favorite settings.
		Favorite:2	Rename	—		
		Favorite:3	Rename	—		
Favorite	—	—	Favorite:1 Favorite:2 Favorite:3	—	You can apply your Favorite settings as the default settings.	
¹ See <i>Advanced User's Guide</i>						
 The factory settings are shown in Bold with an asterisk.						


SCAN ()

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Scan to USB	Quality	—	—	Color 100 dpi* Color 200 dpi Color 300 dpi Color 600 dpi Gray 100 dpi Gray 200 dpi Gray 300 dpi B&W 200 dpi B&W 200x100 dpi	You can choose the scan resolution and file format for your document.	See ¹ .
	File Type	—	—	(If you chose a Color or Gray option in the Quality setting) PDF* PDF/A Secure PDF Signed PDF JPEG XPS		
				(If you chose a B&W option in the Quality setting) PDF* PDF/A Secure PDF Signed PDF TIFF		
	Duplex Scan	—	—	Off* DuplexScan :LongEdge DuplexScan :ShortEdge	Chooses the duplex scanning format.	
File Name	—	—	—	Enter a file name for the scanned data.		

¹ *Software User's Guide*



The factory settings are shown in Bold with an asterisk.

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Scan to USB (Continued)	Glass ScanSize	—	—	A4* Letter Legal/Folio	To scan a Letter, Legal or Folio size document, you'll need to change the Glass Scan Size setting.	See ¹ .
	File Size	—	—	Small Middle* Large	You can choose the file size for colour or greyscale scanning.	
	Set New Default	—	—	Quality File Type Glass ScanSize File Size	You can save your scan to USB settings as the default settings.	
	Factory Reset	—	—	—	You can restore all scan to USB settings to the factory settings.	
Scan to Network	(Profile name)	Quality	—	Color 100 dpi* Color 200 dpi Color 300 dpi Color 600 dpi Gray 100 dpi Gray 200 dpi Gray 300 dpi B&W 200 dpi B&W 200x100 dpi	You can choose the scan resolution and file format for your document.	
		File Type	—	(If you chose a Color or Gray option in the Quality setting) PDF* PDF/A Secure PDF Signed PDF JPEG XPS		
¹ <i>Software User's Guide</i>						
 The factory settings are shown in Bold with an asterisk.						

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Scan to Network (Continued)	(Profile name) (Continued)	File Type (Continued)	—	(If you chose a B&W option in the Quality setting) PDF* PDF/A Secure PDF Signed PDF TIFF		See ¹ .
		Duplex Scan	—	Off* DuplexScan :LongEdge DuplexScan :ShortEdge	Chooses the duplex scanning format.	
		Glass ScanSize	—	A4* Letter Legal/Folio	To scan a Letter, Legal or Folio size document, you'll need to change the Glass Scan Size setting.	
		File Size	—	Small Middle* Large	You can choose the file size for colour or greyscale scanning.	
		File Name	—	BRNXXXXXXXXX* Estimate Report Order sheet Contract sheet Check Receipt <Manual>	You can choose preset file names. If you choose <Manual>, you can name the file as you like.	

¹ Software User's Guide



The factory settings are shown in Bold with an asterisk.

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Scan to FTP	(Profile name)	Quality	—	Color 100 dpi* Color 200 dpi Color 300 dpi Color 600 dpi Gray 100 dpi Gray 200 dpi Gray 300 dpi B&W 200 dpi B&W 200x100 dpi	You can choose the scan resolution and file format for your document.	See ¹ .
		File Type	—	(If you chose a Color or Gray option in the Quality setting) PDF* PDF/A Secure PDF Signed PDF JPEG XPS		
				(If you chose a B&W option in the Quality setting) PDF* PDF/A Secure PDF Signed PDF TIFF		
		Duplex Scan	—	Off* DuplexScan :LongEdge DuplexScan :ShortEdge		
Glass ScanSize	—	A4* Letter Legal/Folio	To scan a Letter, Legal or Folio size document, you'll need to change the Glass Scan Size setting.			

¹ Software User's Guide



The factory settings are shown in Bold with an asterisk.

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Scan to FTP (Continued)	(Profile name) (Continued)	File Size	—	Small Middle* Large	You can choose the file size for colour or greyscale scanning.	See ¹ .
		File Name	—	BRNXXXXXXXXX* Estimate Report Order sheet Contract sheet Check Receipt <Manual>	You can choose preset file names. If you choose <Manual>, you can name the file as you like.	
Scan to E-mail	Manual/ Address Book	Quality	—	Color 100 dpi* Color 200 dpi Color 300 dpi Color 600 dpi Gray 100 dpi Gray 200 dpi Gray 300 dpi B&W 200 dpi B&W 200x100 dpi	You can choose the scan resolution and file format for your document.	
		File Type	—	(If you chose a Color or Gray option in the Quality setting) PDF* PDF/A Secure PDF Signed PDF JPEG XPS		

¹ Software User's Guide




The factory settings are shown in Bold with an asterisk.

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Scan to E-mail (Continued)	Manual/ Address Book (Continued)	File Type (Continued)	—	(If you chose a B&W option in the Quality setting) PDF* PDF/A Secure PDF Signed PDF TIFF		See ¹ .
		Duplex Scan	—	Off* DuplexScan :LongEdge DuplexScan :ShortEdge	Chooses the duplex scanning format.	
		Glass ScanSize	—	A4* Letter Legal/Folio	To scan a Letter, Legal or Folio size document, you'll need to change the Glass Scan Size setting.	
		File Size	—	Small Middle* Large	You can choose the file size for colour or greyscale scanning.	
		Number of Destinations	—	—	You can add multiple destination E-mail addresses.	
		Set New Default	—	Quality File Type Glass ScanSize File Size	You can save your scan to E-mail settings as the default settings.	
		Factory Reset	—	—	You can restore all scan to E-mail settings to the factory settings.	
		Scan to PC	E-mail	—	—	
Image	—		—	—	You can scan a colour picture into your graphics application.	

¹ *Software User's Guide*



The factory settings are shown in Bold with an asterisk.

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Scan to PC (Continued)	OCR	—	—	—	You can have your text document converted to an editable text file.	See ¹ .
	File	—	—	—	You can scan a monochrome or a colour document into your computer.	
¹ <i>Software User's Guide</i>						
 The factory settings are shown in Bold with an asterisk.						

Other Functions

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Direct Print	(Select File)	Print Settings / (Copy Pages (001–999))	Paper Size	A4* Letter Legal Executive A5 A5 L A6 B5 B6 Folio	Sets the paper size when printing directly from the USB flash memory drive.	53
			Paper Type	Thin Plain* Thick Thicker Recycled Paper Glossy	Sets the print media type when printing directly from the USB flash memory drive.	53
			Multiple Page	1in1* 2in1 4in1 9in1 16in1 25in1 1 in 2x2 pages 1 in 3x3 pages 1 in 4x4 pages 1 in 5x5 pages	Sets the page layout when printing multiple pages directly from the USB Flash memory drive.	53
			Orientation	Portrait* Landscape	Sets the page orientation when printing directly from the USB Flash memory drive.	53
			Duplex	Off* Long Edge Short Edge	Chooses the duplex print format when print directly from the USB Flash memory drive.	53

¹ See *Software User's Guide*



The factory settings are shown in Bold with an asterisk.
The **Direct Print** button on the LCD becomes active when a USB flash memory drive is connected to the USB direct interface.

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Direct Print (Continued)	(Select File) (Continued)	Print Settings/ (Copy Pages (001–999)) (Continued)	Collate	On* Off	Enables or disables page collation when printing directly from the USB Flash memory drive.	53
			Tray Use	Auto* MP Only Tray#1 Only Tray#2 Only (Tray#2 Only appears only if you installed the optional paper tray.)	Chooses the tray when printing directly from the USB Flash memory drive.	53
			Print Quality	Normal* Fine	Sets the print quality option when printing directly from the USB Flash memory drive.	53
			PDF Option	Document* Document&Markup Document&Stamps	Sets the USB direct print setting whether to print comments (Markup) or stamps in the PDF file along with the text.	53
Index Print	—	—	—	—	You can print a thumbnail page.	53
Default Settings	Paper Size	—	A4* Letter Legal Executive A5 A5 L A6 B5 B6 Folio	Sets the default paper size when printing directly from the USB flash memory drive.	54	

¹ See *Software User's Guide*



The factory settings are shown in Bold with an asterisk.
The **Direct Print** button on the LCD becomes active when a USB flash memory drive is connected to the USB direct interface.


Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Direct Print (Continued)	Default Settings (Continued)	Paper Type	—	Thin Plain* Thick Thicker Recycled Paper Glossy	Sets the default media type when printing directly from the USB flash memory drive.	54
		Multiple Page	—	1in1* 2in1 4in1 9in1 16in1 25in1 1 in 2x2 pages 1 in 3x3 pages 1 in 4x4 pages 1 in 5x5 pages	Sets the default page style when printing multiple pages directly from the USB Flash memory drive.	54
		Orientation	—	Portrait* Landscape	Sets the default page orientation when printing directly from the USB Flash memory drive.	54
		Collate	—	On* Off	Enables or disables default page collation when printing directly from the USB Flash memory drive.	54
		Print Quality	—	Normal* Fine	Sets the default print quality option when printing directly from the USB Flash memory drive.	54
		PDF Option	—	Document* Document&Markup Document&Stamps	Sets the default USB direct print setting whether to print comments (Markup) or stamps in the PDF file along with the text.	54
		Index Print	—	Simple* Details	Sets the default index print option, simple format or details.	54

¹ See *Software User's Guide*



The factory settings are shown in Bold with an asterisk.

The **Direct Print** button on the LCD becomes active when a USB flash memory drive is connected to the USB direct interface.

Level 1	Level 2	Level 3	Level 4	Options	Descriptions	Page
Secure Print	(Select User)	(Select Secure Print Job)	Password:	Print Delete	You can print data saved in the memory drive when you enter your four-digit password. (The Secure Print button on the LCD becomes active when there is secure data.)	See ¹ .
¹ See <i>Software User's Guide</i>						
 The factory settings are shown in Bold with an asterisk. The Direct Print button on the LCD becomes active when a USB flash memory drive is connected to the USB direct interface.						

Entering text

When you are setting certain menu selections, you may need to enter text into the machine.

Press **A 1 @** repeatedly to choose between letters, numbers or special characters. Press **↵** to change between upper case and lower case.



Inserting spaces

To enter a space, press the space key button or ►.

Making corrections

If you entered an incorrect character and want to change it, use the arrow buttons to move the cursor under the incorrect character. Then press **✕**. Enter the correct character. You can also insert letters by moving the cursor and entering a character.



Note

- The characters available may differ depending on your country.
- The keyboard layout may differ depending on the function you are setting.

General



Note

This chapter provides a summary of the machine's specifications. For additional specifications visit <http://www.brother.com/> for details.



Printer Type	Laser	
Print Method	Electrophotography by semiconductor laser beam scanning	
Memory Capacity	256 MB	
LCD (liquid crystal display)	Touchscreen 5 in. (12.6 cm) Colour LCD ¹	
Power Source	220 - 240 V AC 50/60Hz	
Power Consumption ²	Peak:	1200 W
	Copying (Average):	Approx. 615 W ³
	Sleep (WLAN: On) (Average):	Approx. 10 W
	Deep Sleep (Average):	Approx. 1.8 W
	Ready (Average):	Approx. 75 W

¹ Measured diagonally

² USB connection to PC

³ When making a copy from one sheet

Dimensions

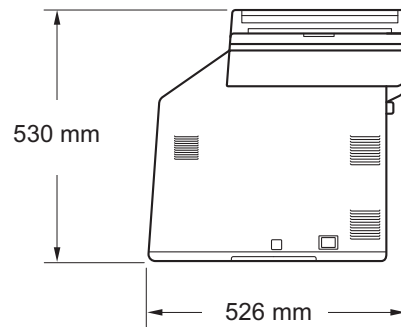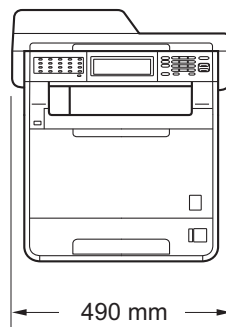

Weight

With Consumables: 28.5 kg

Noise level**Sound power**¹

Operating (Colour Copying): LWAd = 6.70 B (A)

Operating (Monochrome Copying): LWAd = 6.67 B (A)

Office equipment with LWAd > 6.30 B (A) is not suitable for use in room where people do primarily intellectual work. Such equipment should be placed in separate rooms because of the noise emission.

Ready: LWAd = 4.21 B (A)

Sound pressure

Operating (Printing): LPAM = 57 dB (A)

Ready: LPAM = 33 dB (A)

¹ Measured in accordance with ISO 9296.

Temperature

Operating: 10 to 32.5°C

Storage: 0 to 40°C

Humidity

Operating: 20 to 80% (without condensation)

Storage: 10 to 90% (without condensation)

ADF (automatic document feeder)

Up to 50 pages (Staggered) [80 g/m²]

Document Size

Document Size (Single-sided)

ADF Width: 147.3 to 215.9 mm

ADF Length: 147.3 to 356.0 mm

Scanner Glass Width: Max. 215.9 mm

Scanner Glass Length: Max. 355.6 mm

Document Size (2-sided (Duplex))

ADF Width: 147.3 to 215.9 mm

ADF Length: 147.3 to 356.0 mm

Print media

Paper Input	Paper Tray	
	■ Paper Type:	Plain paper, Thin paper or Recycled paper
	■ Paper Size:	Letter, A4, B5 (ISO/JIS), A5, A5 (Long Edge), B6 (ISO), A6, Executive, Legal and Folio
	■ Paper Weight:	60 to 105 g/m ²
	■ Maximum Paper Tray Capacity:	Up to 250 sheets of 80 g/m ² Plain paper
	Multi-purpose tray (MP tray)	
	■ Paper Type:	Envelope, Env. Thin, Env. Thick, Labels ¹ , Glossy paper, Thin paper, Thick paper, Thicker paper, Recycled paper, Bond paper or Plain paper
	■ Paper Size:	Width: 69.8 to 216 mm Length: 116 to 406.4 mm
	■ Paper Weight:	60 to 163 g/m ²
	■ Maximum Paper Tray Capacity:	Up to 50 sheets of 80 g/m ² Plain paper
	Paper Tray 2 (option)	
	■ Paper Type:	Plain paper, Thin paper or Recycled paper
	■ Paper Size:	Letter, A4, B5 (ISO/JIS), A5, B6 (ISO), Executive, Legal and Folio
	■ Paper Weight:	60 to 105 g/m ²
	■ Maximum Paper Tray Capacity:	Up to 500 sheets of 80 g/m ² Plain paper
Paper Output	Face-Down Output Tray	Up to 150 sheets (<i>face down</i> print delivery to the <i>Face-down</i> output tray)
	Face-Up Output Tray	One sheet (<i>face up</i> print delivery to the <i>Face-up</i> output tray)

Duplex Printing

■ Manual Duplex:	Yes
■ Automatic Duplex:	Yes
■ Paper Size (Automatic Duplex):	A4
■ Paper Weight (Automatic Duplex):	60 to 105 g/m ²
■ Paper Type (Automatic Duplex):	Plain paper, Thin paper, Recycled paper or Glossy paper

¹ For labels, we recommend removing printed pages from the output paper tray immediately after they exit the machine to avoid the possibility of smudging.

Fax

Compatibility	ITU-T Super Group 3	
Modem Speed	Automatic Fallback:	33,600 bps
2-sided (Duplex) Print Receiving	Yes	
Automatic 2-sided (Duplex) Sending	Yes (from ADF)	
Scanning Width	Max. 208 mm	
Printing Width	Max. 208 mm	
Greyscale	8 bit/256 levels	
Resolution	Horizontal:	8 dot/mm
	Vertical	
	■ Standard:	3.85 line/mm (Mono) 7.7 line/mm (Colour)
	■ Fine:	7.7 line/mm (Mono) 7.7 line/mm (Colour)
	■ Photo:	7.7 line/mm (Mono)
	■ Superfine:	15.4 line/mm (Mono)
One Touch Dial	40 (20 × 2)	
Speed Dial	300 stations	
Groups	Up to 20	
Broadcasting	390 stations	
Automatic Redial	3 times at 5 minute intervals	
Memory Transmission	Up to 500 ¹ pages ²	
Out of Paper Reception	Up to 500 ¹ pages ²	

¹ 'Pages' refers to the 'ITU-T Test Chart #1' (a typical business letter, Standard resolution, JBIG code). Specifications and printed materials are subject to change without prior notice.

² Black & White only

Copy

Colour/Black	Yes/Yes
Copy Width	Max. 210 mm
Automatic 2-sided (Duplex) Copy	Yes (from ADF)
Multiple Copies	Stacks or Sorts up to 99 pages
Reduce/Enlarge	25% to 400% (in increments of 1%)
Resolution	Up to 1200 × 600 dpi
First Copy Out Time (Monochrome)	Less than 19 seconds (from the READY mode and standard tray)
First Copy Out Time (Colour)	Less than 21 seconds (from the READY mode and standard tray)

Scanner

Colour/Black	Yes/Yes
TWAIN Compliant	Yes (Windows® 2000 Professional/Windows® XP/ Windows® XP Professional x64 Edition/Windows Vista®/ Windows® 7) Mac OS X 10.4.11 – 10.6.x ¹
WIA Compliant	Yes (Windows® XP/Windows Vista®/Windows® 7)
ICA Compliant	Yes (Mac OS X 10.6.x)
Colour Depth	48 bit internal / 24 bit external colour
Resolution	Up to 19200 × 19200 dpi (interpolated) ² Up to 1200 × 2400 dpi (optical) ² (from Scanner Glass) Up to 1200 × 600 dpi (optical) ² (from ADF)
Scanning Width	Max. 210 mm
Automatic 2-sided (Duplex) Scanning	Yes (from ADF)
Greyscale	256 levels

¹ For the latest driver updates for the Mac OS X you are using, visit us at <http://solutions.brother.com/>.

² Maximum 1200 × 1200 dpi scanning with the WIA driver in Windows® XP, Windows Vista® and Windows® 7 (resolution up to 19200 × 19200 dpi can be chosen by using the scanner utility)

Printer

Automatic 2-sided (Duplex) Print	Yes
Emulations	PCL6, BR-Script3 (PostScript® 3™)
Resolution	600 dpi × 600 dpi, 2400 dpi (2400 × 600) quality
Print Speed (Monochrome Duplex)	Up to 14 sides/minute (7 sheets/minute) (A4 size) ¹
Print Speed (Colour Duplex)	Up to 14 sides/minute (7 sheets/minute) (A4 size) ¹
Print Speed (Monochrome)	Up to 28 pages/minute (A4 size) ¹
Print Speed (Colour)	Up to 28 pages/minute (A4 size) ¹
First Print Out Time (Monochrome)	Less than 16 seconds (from the READY mode and standard tray)
First Print Out Time (Colour)	Less than 16 seconds (from the READY mode and standard tray)

¹ The print speed may vary depending on the type of document you print.

Interfaces

USB It is recommended you use a USB 2.0 cable (Type A/B) that is no more than 2 metres long. ^{1 2}

Ethernet ³ Use an Ethernet UTP cable category 5 or greater.

Wireless LAN ³ IEEE 802.11 b/g (Infrastructure / Ad-hoc Mode)

¹ Your machine has a Hi-Speed USB 2.0 interface. The machine can also be connected to a computer that has a USB 1.1 interface.

² Third party USB ports are not supported.

³ See *Network (LAN)* on page 203 and the Network User's Guide for detailed network specifications.

Direct Print feature

Compatibility

PDF version 1.7 ¹, JPEG, Exif + JPEG, PRN (created by Brother printer driver), TIFF (scanned by all Brother MFC or DCP models), PostScript® 3™ (created by Brother BR-Script 3 printer driver), XPS version 1.0.

Interface

USB direct interface

¹ PDF data including a JBIG2 image file, a JPEG2000 image file or a transparency file is not supported.

Scan to USB feature

File formats

Black and white

TIFF, PDF, PDF/A, Secure PDF, Signed PDF

Color and Gray document

JPEG, PDF, PDF/A, Secure PDF, Signed PDF, XPS

Computer requirements

Minimum System Requirements and Supported PC Software Functions								
Computer Platform & Operating System Version		Processor Minimum Speed	Minimum RAM	Recommended RAM	Hard Disk Space to install		Supported PC Software Functions	Supported PC Interface ³
					For Drivers	For Applications		
Windows® Operating System ¹	Windows® 2000 Professional ⁵	Intel® Pentium® II or equivalent	64 MB	256 MB	150 MB	500 MB	Printing, PC-Fax ⁴ , Scanning	USB, 10/100 Base Tx (Ethernet), Wireless 802.11 b/g
	Windows® XP Home ^{2 6} Windows® XP Professional ^{2 6}		128 MB					
	Windows® XP Professional x64 Edition ^{2 6}	64-bit (Intel®64 or AMD64) supported CPU	256 MB	512 MB				
	Windows Vista® ^{2 6}	Intel® Pentium® 4 or equivalent 64-bit (Intel®64 or AMD64) supported CPU	512 MB	1 GB	500 MB	1.2 GB		
	Windows® 7 ^{2 6}	Intel® Pentium® 4 or equivalent 64-bit (Intel®64 or AMD64) supported CPU	1 GB (32-bit) 2 GB (64-bit)	1 GB (32-bit) 2 GB (64-bit)	650 MB			

Minimum System Requirements and Supported PC Software Functions								
Computer Platform & Operating System Version		Processor Minimum Speed	Minimum RAM	Recommended RAM	Hard Disk Space to install		Supported PC Software Functions	Supported PC Interface ³
					For Drivers	For Applications		
	Windows Server [®] 2003 (print only via network)	Intel [®] Pentium [®] III or equivalent	256 MB	512 MB	50 MB	N/A	Printing	10/100 Base Tx (Ethernet), Wireless 802.11 b/g
	Windows Server [®] 2003 x64 Edition (print only via network)	64-bit (Intel [®] 64 or AMD64) supported CPU						
	Windows Server [®] 2008 (print only via network)	Intel [®] Pentium [®] 4 or equivalent 64-bit (Intel [®] 64 or AMD64) supported CPU	512 MB	2 GB				
	Windows Server [®] 2008 R2 (print only via network)	64-bit (Intel [®] 64 or AMD64) supported CPU						
Macintosh Operating System	Mac OS X 10.4.11 10.5.x	PowerPC G4/G5 Intel [®] Core [™] Processor	512 MB	1 GB	80 MB	400 MB	Printing, PC-Fax Send ⁴ , Scanning	USB, 10/100 Base Tx (Ethernet), Wireless 802.11 b/g
	Mac OS X 10.6.x	Intel [®] Core [™] Processor	1 GB	2 GB				

¹ Internet Explorer[®] 6.0 or greater.

² For WIA, 1200 x 1200 resolution. Brother Scanner Utility enables to enhance up to 19200 x 19200 dpi.

³ Third party USB ports are not supported.

⁴ PC-Fax supports black and white only. (Letter/A4 size)

⁵ PaperPort[™] 11SE supports Microsoft[®] SP4 or higher for Windows[®] 2000. (Available from the Internet)

⁶ PaperPort[™] 12SE supports Microsoft[®] SP3 or higher for Windows[®] XP and SP2 or higher for Windows Vista[®] and Windows[®] 7.

For the latest driver updates, visit <http://solutions.brother.com/>.

All trademarks, brand and product names are property of their respective companies.

Consumable items

Toner Cartridge Life	Standard Toner Cartridge:	
	TN-320BK (Black):	Approx. 2,500 pages (A4 or Letter) ¹
	TN-320C (Cyan):	Approx. 1,500 pages (A4 or Letter) ¹
	TN-320M (Magenta):	Approx. 1,500 pages (A4 or Letter) ¹
	TN-320Y (Yellow):	Approx. 1,500 pages (A4 or Letter) ¹
	High Capacity Toner Cartridge:	
	TN-325BK (Black):	Approx. 4,000 pages (A4 or Letter) ¹
	TN-325C (Cyan):	Approx. 3,500 pages (A4 or Letter) ¹
	TN-325M (Magenta):	Approx. 3,500 pages (A4 or Letter) ¹
	TN-325Y (Yellow):	Approx. 3,500 pages (A4 or Letter) ¹
	Super High Capacity Toner Cartridge:	
	TN-328BK (Black):	Approx. 6,000 pages (A4 or Letter) ¹
	TN-328C (Cyan):	Approx. 6,000 pages (A4 or Letter) ¹
	TN-328M (Magenta):	Approx. 6,000 pages (A4 or Letter) ¹
TN-328Y (Yellow):	Approx. 6,000 pages (A4 or Letter) ¹	
Drum Unit	DR-320CL	Approx. 25,000 pages (A4 or Letter) ²
Belt Unit	BU-300CL	Approx. 50,000 pages (A4 or Letter) ³
Waste Toner Box	WT-300CL	Approx. 50,000 pages (A4 or Letter) ³

¹ Approx. cartridge yield is declared in accordance with ISO/IEC 19798.

² Drum yield is approximate, and may vary by type of use.

³ Approx. yield is based on A4 or Letter single-sided pages.

Network (LAN)



Note

For details about the full Network specifications, see *Network User's Guide*.

LAN	You can connect your machine to a network for Network Printing, Network Scanning, PC-Fax Send, PC-Fax Receive (Windows® only) and Remote Setup ¹ . Also included is Brother BRAdmin Light ² Network Management software.	
Security Protocols		
■ Wired	APOP, POP before SMTP, SMTP-AUTH, SSL/TLS (IPPS, HTTPS, SMTP, POP), SNMP v3, 802.1x (EAP-MD5, EAP-FAST, PEAP, EAP-TLS, EAP-TTLS), Kerberos	
■ Wireless	APOP, POP before SMTP, SMTP-AUTH, SSL/TLS (IPPS, HTTPS, SMTP, POP), SNMP v3	
Wireless Network Security	WEP 64/128 bit, WPA-PSK (TKIP/AES), WPA2-PSK (AES), 802.1x (LEAP, EAP-FAST, PEAP, EAP-TLS, EAP-TTLS)	
Wireless Network Setup Support Utility	AOSS™	Yes
	WPS	Yes

¹ See *Computer requirements* on page 200.

² BRAdmin Professional and Web BRAdmin are available as a download from <http://solutions.brother.com/>.

E

Index

- A**
- ADF (automatic document feeder)
 - using26
 - Answering machine (TAD)
 - connecting37
 - Apple Macintosh
 - See Software User's Guide.
 - Automatic
 - fax receive33
 - Fax Detect35
 - fax redial43
- B**
- Belt unit
 - replacing78
- C**
- Cleaning
 - corona wires97
 - drum unit101
 - laser scanner windows93
 - scanner92
 - Connecting
 - external TAD (answering machine)37
 - external telephone39
 - Consumable items62, 63, 64
 - Control panel overview6
 - ControlCenter2 (for Macintosh)
 - See Software User's Guide.
 - ControlCenter4 (for Windows®)
 - See Software User's Guide.
 - Cordless telephone (non-Brother)40
- D**
- Dialling
 - a pause44
 - automatic fax redial43
 - manual42
 - One Touch42
 - Speed Dial42
 - using the Search43
 - Direct print52
 - Direct key53
 - specification 198
 - Document
 - how to load26, 27
 - Drum unit
 - cleaning97, 101
 - replacing72
- E**
- Envelopes 15, 21, 22, 24
 - Equalization 141
 - Error messages on LCD 111
 - Comm. Error 111
 - No Paper 114
 - Out of Memory 115
 - Print Unable XX 115
 - Scan Unable XX 116
 - Extension telephone, using 39, 41
 - External telephone, connecting 39
- F**
- Fax codes
 - changing 41
 - remote activation code 41
 - remote deactivation code 41
 - Fax, stand-alone
 - receiving
 - fax detect 35
 - from extension telephone 39, 41
 - ring delay, setting 34
 - telephone line interference 141
 - sending 28
 - telephone line interference 141
 - Fax/Tel mode
 - answering at extension telephones 41
 - F/T ring time (double-ring) 34
 - fax detect 35
 - receiving faxes 39
 - remote activation code 41
 - remote deactivation code 41
 - ring delay 34
 - Folio 18, 22

G

Greyscale 193, 195

H

HELP

LCD messages 151
Menu Table 152

L

Labels 13, 21, 22, 25
LCD (liquid crystal display) 6, 151

M

Machine information

how to reset the machine 150
reset functions 149
serial number 149

Macintosh

See Software User's Guide.

Maintenance, routine 91

replacing

belt unit 78
drum unit 72
toner cartridge 66
waste toner box 84

Manual

dialling 42
receive 33

Menu Table 152

Mode, entering

copy 51
fax 28
scan 6

Multi-line connections (PBX) 38

N

Network

faxing

See Software User's Guide.

printing

See Network User's Guide.

scanning

See Software User's Guide.

O

One Touch

changing 49
setting up 46
using 42

Out of Memory message 115

P

Paper 21, 191

how to load 11

in paper tray 11

in the multi-purpose tray 13

recommended 21, 22

size 18, 21

tray capacity 22

type 18, 21

PaperPort™ 12SE with OCR

See Software User's Guide and Help in the PaperPort™ 12SE application to access How-to-Guides.

PC-Fax

See Software User's Guide.

Presto! PageManager

See Software User's Guide. See also Help in the Presto! PageManager application.

Print

difficulties 132, 136

drivers 196

quality 138, 142

resolution 196

specifications 196

Printing

See Software User's Guide.

Programming your machine 151

Q

Quality	
printing	138, 142
Quick dial	46
Group dial	
changing	49
One Touch dial	
changing	49
custom scan profile	46
setting up	46
using	42
search	43
Speed Dial	
changing	49
custom scan profile	48
setting up	48
using	42

R

Redial/Pause key	43, 44
Remote setup	See Software User's Guide.
Replacing	
belt unit	78
drum unit	72
toner cartridge	66
waste toner box	84
Reports	
Transmission Verification	30
Resolution	
copy	194
fax (standard, fine, superfine, photo)	193
print	196
scan	195
Ring delay, setting	34

S

Scanner glass	
using	27
Scanning	See Software User's Guide.
Serial number	
how to find	See inside front cover
Sockets	
EXT	
external telephone	39
TAD (answering machine)	37
Speed Dial	
changing	49
setting up	48
using	42

T

TAD (telephone answering device),	
external	33
connecting	37
recording OGM	38
Tel/R key	7, 39, 40
Telephone line	
connections	37
difficulties	132
interference	141
multi-line (PBX)	38
Text, entering	187
Toner cartridge	
replacing	66
Troubleshooting	132
document jam	119, 120
error messages on LCD	111
if you are having difficulty	
copy quality	135
incoming calls	135
network	139
paper handling	138
print quality	138, 142
printing	132, 136
receiving faxes	133
scanning	137
sending faxes	134
software	137
telephone line	141
maintenance messages on LCD	111
paper jam	121, 122, 123, 125, 129

V

VoIP	141
Volume, setting	
beeper	10
ring	10
speaker	10

W

Waste toner box	
replacing	84
Windows®	
See Software User's Guide.	
Wireless Network	
See Quick Setup Guide and Network User's Guide.	

brother[®]

This machine is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.