


BASIC USER'S GUIDE

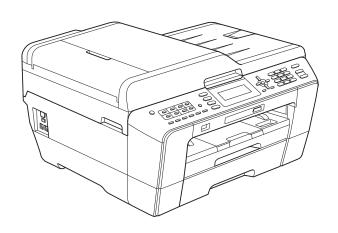

MFC-J6710DW

To create a better environment

Please cooperate

Firstly, thank you very much indeed for using our Brother products!

Brother focuses on the earth environment concerned. And make a basic policy which is to concern about the earth environment, including any workflow from product development to discard. The local citizen should be responsible for local society and its environment during these environment protection activities.

Therefore, we hope you'll take part in this environment plan, and pay attention to environment protection points as below while discarding used consumables.

- 1 Please deliver the used package materials to relevant waste disposal office for recycle.
- 2 When you discard used consumables, please follow and carry on relevant local regulations properly.
- 3 When the machine need replacing parts for the maintenance and repair, please discard used circuit boards, used electrical parts and products as disposed electrical materials.
- 4 Some parts in the machine can be used on the same series model machines which produced by the same factory.

Note: If you want to replace the parts, please contact your local Brother repair station.

User's Guides and where do I find it?

Which manual?	What's in it?	Where is it?
Safety and Legal	Read this Guide first. Please read the Safety Instructions before you set up your machine. See this Guide for trademarks and legal limitations.	Printed / In the box
Quick Setup Guide	Follow the instructions for setting up your machine and installing the drivers and software for the operating system and connection type you are using.	Printed / In the box
Basic User's Guide	Learn the basic Fax, Copy, Scan and PhotoCapture Center™ operations and how to replace consumables. See troubleshooting tips.	Printed / In the box
Advanced User's Guide	Learn more advanced operations: Fax, Copy, security features, printing reports and performing routine maintenance.	PDF file / Documentation CD-ROM
Software User's Guide	Follow these instructions for Printing, Scanning, Network Scanning, PhotoCapture Center™, Remote Setup, PC-Fax, and using the Brother ControlCenter utility.	PDF file / Documentation CD-ROM
Network Glossary	This Guide provides basic information about advanced network features of Brother machines along with explanations about general networking and common terms.	PDF file / Documentation CD-ROM
Network User's Guide	This Guide provides useful information about wired and wireless network settings and security settings using the Brother machine. You can also find supported protocol information for your machine and detailed troubleshooting tips.	PDF file / Documentation CD-ROM

Table of Contents (BASIC USER'S GUIDE)

1	General information	1
	Using the documentation	1
	Symbols and conventions used in the documentation	
	Accessing the Advanced User's Guide, Software User's Guide, Network User's	
	Guide and Network Glossary	
	Viewing Documentation	
	Accessing Brother Support (Windows®)	
	Accessing Brother Support (Macintosh)	
	Control panel overview	
	LCD screen indications	
	Basic Operations	
	Volume Settings	
	Ring Volume	
	Beeper Volume	
	Speaker Volume	
	LCD display	
	Setting the backlight brightness	
	LCD Language	
	Setting the Fax Logic (sending and receiving sequence)	9
2	Loading paper	10
	Loading paper and other print media	10
	Loading paper in paper tray #1 (upper tray)	
	Loading paper in paper tray #2 (lower tray)	
	Loading paper in the manual feed slot	
	Loading envelopes and postcards	
	Printable area	
	Paper settings	
	Paper Size and Type	
	Tray use in Copy mode	
	Tray use in Fax mode	23
	Secure Paper Feed mode for A3 size Short Grain Paper	23
	Acceptable paper and other print media	24
	Recommended print media	24
	Handling and using print media	25
	Choosing the right print media	26
3	Loading documents	28
	How to load documents	28
	Using the ADF	
	Using the scanner glass	
	Scannable area	

4	Sending a fax	
	How to send a fax	
	Stop faxing	
	Setting scanner glass size for faxing	
	Color fax transmission	
	Cancelling a fax in progress	
	How to preview an outgoing fax	
	Transmission Verification Report	
5	Receiving a fax	
	Receive Modes	
	Using Receive Modes	
	Receive Mode settings	
	Ring Delay	
	F/T Ring Time (Fax/Tel mode only)	
	Fax Detect	
	Fax Preview (Monochrome only)	
	How to preview a received fax	
6	Telephone and external devices	
	Voice operations	
	Tone or pulse	
	Fax/Tel mode	
	Phone line services	
	Do you have Voice Mail?	
	Telephone Service	
	Caller ID (Caller IDentification) (not available in certain area)	
	Advantages of Caller ID	
	Setup Method	
	Caller ID feature	
	Connecting an external TAD (telephone answering device)	
	Connections settings	
	Recording an outgoing message (OGM) on an external TAD	
	Multi-line connections (PABX)	
	External and extension telephones	
	Connecting an external or extension telephone	
	Operation from external and extension telephones	
	Using a cordless external telephone	
	Using remote codes	
7	Dialling and storing numbers	
	How to dial	
	Manual dialling	
	One Touch Dialling	
	Speed Dialling	
	Search	
	Out 01	

	Additional Dialling Operations	49
	Outgoing Call history	49
	Caller ID history	49
	Storing numbers	50
	Storing a pause	50
	Storing One Touch Dial numbers	50
	Storing Speed Dial numbers	
	Changing One Touch or Speed Dial names or numbers	52
8	Making copies	53
	How to copy	53
	Stop copying	
	Copy settings	
	Paper Options	
_		
9	Printing photos from a memory card or	
	USB Flash memory drive	55
	PhotoCapture Center™ operations	55
	Using a memory card or USB Flash memory drive	
	Getting started	
	Print Images	
	View Photos	
	PhotoCapture Center™ print settings	
	How to scan to a memory card or USB Flash memory drive	59
10	How to print from a computer	61
	Printing a document	61
11	How to scan to a computer	62
	now to scan to a computer	02
	Scanning a document	
	Scanning using the scan key	
	Scanning using a scanner driver	63
Α	Routine maintenance	64
	Replacing the ink cartridges	64
	Cleaning and checking the machine	
	Cleaning the scanner glass	
	Cleaning the print head	
	Checking the print quality	
	Checking the print alignment	

В	Troubleshooting	70
	Error and Maintenance messages	70
	Error animations display	77
	Transferring your faxes or Fax Journal report	77
	Document jam	78
	Printer jam or paper jam	79
	Troubleshooting	
	If you are having difficulty with your machine	86
	Dial Tone detection	
	Telephone line interference / VoIP	94
	Machine Information	95
	Checking the serial number	95
	Reset functions	95
	How to reset the machine	95
С	Menu and features	96
	On-screen programming	96
	Menu table	
	Entering Text	
	Inserting spaces	
	Making corrections	
	Repeating letters	
	Special characters and symbols	
)	Specifications	124
	General	124
	Print media	
	FaxCopy	
	PhotoCapture Center™	
	PictBridge	
	Scanner	
	Printer	
	Interfaces	
	Conputer requirements	
	Consumable items	
	Network (LAN)	137
E	Index	138

Table of Contents (ADVANCED USER'S GUIDE)

The Advanced User's Guide explains the following features and operations.

You can view the Advanced User's Guide on the Documentation CD-ROM.

1 General setup

Memory storage
Automatic Daylight Saving Time
Sleep Mode
LCD display
Mode Timer

2 Security features

Secure Function Lock 2.0

3 Sending a fax

Additional sending options
Additional sending operations
Polling overview

4 Receiving a fax

Memory Receive (Monochrome only) Remote Retrieval Additional receiving operations Polling overview

5 Dialling and storing numbers

Additional dialling operations
Additional ways to store numbers

6 Printing reports

Fax reports Reports

7 Making copies

Copy settings

8 Printing photos from a memory card or USB Flash memory drive

PhotoCapture Center™ operations
Print Images
PhotoCapture Center™ print settings
Scan to a memory card or USB Flash
memory drive

9 Printing photos from a camera

Printing photos directly from a PictBridge camera Printing photos directly from a digital camera (without PictBridge)

A Routine maintenance

Cleaning and checking the machine Packing and shipping the machine

B Glossary

C Index

General information

Using the documentation

Thank you for buying a Brother machine! Reading the documentation will help you make the most of your machine.

Symbols and conventions used in the documentation

The following symbols and conventions are used throughout the documentation.

Bold Bold typeface identifies specific

> buttons on the machine's control panel, or on the computer screen.

Italics Italicized typeface emphasizes

an important point or refers you

to a related topic.

Courier New

Text in the Courier New font identifies messages on the LCD of the machine.



WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.



CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.



IMPORTANT

IMPORTANT indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product functionality.



Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.



Electrical Hazard icons alert you to possible electrical shock.

Accessing the Advanced User's Guide, Software User's Guide, **Network User's Guide** and Network Glossary

This Basic User's Guide does not contain all the information about the machine such as how to use the advanced features of the Fax, Copy, PhotoCapture Center™, Printer, Scanner, PC-Fax and Network. When you are ready to learn detailed information about these operations, read the Advanced User's Guide. Software User's Guide, Network User's Guide and Network Glossary that are on the Documentation CD-ROM.

Viewing Documentation



Turn on your computer. Insert the Documentation CD-ROM into your CD-ROM drive. For Windows[®] users, go to step 3.




(Windows[®] users) If the screen does not appear automatically, go to My Computer (Computer), double-click the CD-ROM icon, and then double-click index.html.




(Macintosh users)

Double-click the Documentation CD-ROM icon, and then double-click index.html.

3 Click your country.

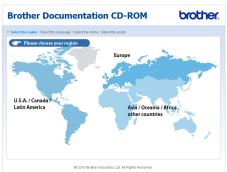

Point to your language, point to **View Guide**, and then click the guide you want to read.

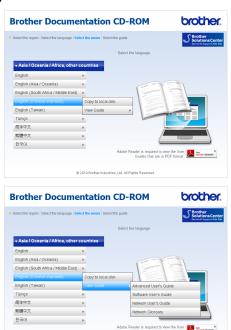



- (Windows[®] users only)
 Your Web browser may display a yellow bar
 at the top of the page that contains a security
 warning about Active X controls. For the
 page to display correctly you must click on
 the bar, click Allow Blocked Content, then
 click Yes in the Security Warning dialog box.
- (Windows[®] users only)¹
 For faster access, you can copy all user documentation in PDF format to a local folder on your computer. Point to your language, then click Copy to local disk.
 - Microsoft[®] Internet Explorer[®] 6.0 or greater.

How to find Scanning instructions

There are several ways you can scan documents. You can find the instructions as follows:

Software User's Guide

- Scanning
- ControlCenter
- Network Scanning

Presto! PageManager User's Guide (Windows[®] users)

Instructions for scanning directly from Presto! PageManager. The complete Presto! PageManager User's Guide can be viewed from the Help selection in the Presto! PageManager application.

Presto! PageManager User's Guide (Macintosh users)



Presto! PageManager must be downloaded and installed before use. See Accessing Brother Support (Macintosh) on page 3 for further instructions.

■ The complete Presto! PageManager User's Guide can be viewed from the Help selection in the Presto! PageManager application.

How to find Network setup instructions

Your machine can be connected to a wireless or wired network. You can find basic setup instructions in the Quick Setup Guide. If your wireless access point or router supports Wi-Fi Protected Setup or AOSS™, you can also follow the steps in the Quick Setup Guide. For more information about network setup please see the *Network User's Guide* on the Documentation CD-ROM.

Accessing Brother Support (Windows®)

You can find all the contacts you will need, such as Web support (Brother Solutions Center) on the Installation CD-ROM.

Click Brother Support on Top Menu. The following screen will appear:



- To access our website, click Brother Home Page.
- For the latest news and product support information, click
 Brother Solutions Center.
- To visit our website for original Brother Supplies, click **Supplies Information**.
- To access the Brother CreativeCenter for FREE photo projects and printable downloads, click **Brother CreativeCenter**.
- To return to the Top Menu, click Back or if you have finished, click Exit.

Accessing Brother Support (Macintosh)

You can find all the contacts you will need, such as Web support (Brother Solutions Center) on the Installation CD-ROM.


■ Double-click the **Brother Support** icon. The following screen will appear:



- To download and install Presto! PageManager, click Presto! PageManager.
- For the latest news and product support information, click

 Brother Solutions Center.
- To visit our website for original Brother Supplies, click **Supplies Information**.

Control panel overview

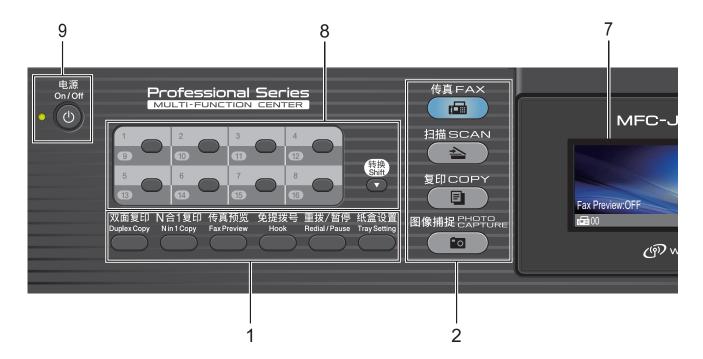

1 Fax, Telephone and Copy keys:

■ Duplex Copy

Press this key to copy on both sides of the paper.

■ N in 1 Copy

Press this key to make N in 1 or Poster copies.

■ Fax Preview

Lets you preview incoming and outgoing faxes on the LCD.

■ Hook

Press before dialling if you want to make sure a fax machine will answer, and then press **Mono Start** or **Color Start**.

Also, press this key after picking up the handset of an external telephone during the F/T pseudo/double-ring.

■ Redial/Pause

Redials one of the last 30 numbers called. It also inserts a pause when programming quick dial numbers.

■ Tray Setting

Press this key to choose the tray you want to use for printing.

2 Mode keys:

■ FAX
Lets you access Fax mode.

■ SCAN

Lets you access Scan mode.

■ COPY
Lets you access Copy mode.

PHOTO CAPTURE

Lets you access PhotoCapture Center™

mode.



3 Menu keys:

■ Volume keys



While the machine is idle, you can press these keys to adjust the ring volume.

■ Phone Book key



Lets you store, look up, and dial numbers that are stored in the memory.

■ < or >

Press to scroll backward or forward to a menu selection.

Also, press to choose options.

■ A or ▼

Press to scroll through the menus and options.

■ Menu

Access the main menu.

■ Clear

Press to delete characters or to go back to the previous menu level.

■ OK

Lets you confirm a selection.

4 Dial Pad

Use these keys to dial telephone and fax numbers and as a keyboard for entering information into the machine.

The # key lets you temporarily switch the dialling mode during a telephone call from Pulse to Tone.

5 Start keys:

■ Mono Start

Lets you start sending faxes or making copies in monochrome. Also lets you start a scanning operation (in color or mono depending on the scan setting in the ControlCenter software).

■ Color Start

Lets you start sending faxes or making copies in full color. Also lets you start a scanning operation (in color or mono, depending on the scan setting in the ControlCenter software).



Stop/Exit

Stops an operation or exits the menu.

LCD (Liquid Crystal Display)

Displays messages on the screen to help you set up and use your machine.

Also, you can adjust the angle of the LCD by lifting it.

One Touch keys

These 8 keys give you instant access to 16 previously stored numbers.

Shift

To access One Touch numbers 9 to 16, hold down **Shift** as you press the One Touch key. Also, if no number is assigned to the key, you can directly store the number by pressing the empty key.

On/Off

You can turn the machine on and off.

Press On/Off to turn the machine on.

seconds before going off.

Press and hold down On/Off to turn the machine off. The LCD will show Shutting Down and will stay on for a few

If you have connected an external telephone or TAD, it is always available.

If you turn the machine off, it will still periodically clean the print head to maintain print quality. To prolong print head life, provide the best ink cartridge economy, and maintain print quality, you should keep your machine connected to the power at all times.

LCD screen indications

The LCD shows the current machine status when the machine is idle.



Fax Preview

You can check the Fax Preview status.

2 Faxes in memory

Shows how many received faxes are in the memory.

3 Wireless Status

A four level indicator shows the current wireless signal strength if you are using a wireless connection.



4 Current Receive Mode

Lets you see the current receive mode.

- Fax (Fax Only)
- F/T (Fax/Tel)
- TAD (External TAD)
- Mnl (Manual)

5 Memory Status

Lets you see the available memory in the machine.

6 Ink indicator

Lets you see the available ink volume.

The warning icon 1 appears when there is an error or maintenance message. For details, see Error and Maintenance messages on page 70.



If you receive a fax containing multiple paper sizes (for example, a page of A4 data and a page of A3 data), the machine may create and store a file for each paper size. The LCD may show that more than one fax job has been received.

1

Basic Operations

The following steps show how to change a setting in the machine. In this example the Mode Timer setting is changed from 2 minutes to 30 seconds.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.

 


Press OK.

3 Press ▲ or ▼ to choose Mode Timer.




4 Press ◀ or ▶ to choose 30Secs.



Press OK.

You can see the current setting on the LCD:

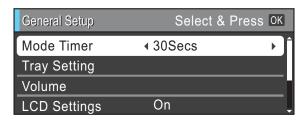

Note

Press **Clear** to go back to the previous level.

5 Press Stop/Exit.

Volume Settings

Ring Volume

You can choose a range of ring volume levels, from High to Off.

You can also change the volume through the menu, by following the instructions below:

Setting the Ring Volume from the menu

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press ▲ or ▼ to choose Volume. Press OK.
- 4 Press A or V to choose Ring.
- 5 Press ◀ or ▶ to choose Low, Med, High or Off.
 Press OK.
- 6 Press Stop/Exit.

Beeper Volume

When the beeper is on, the machine will beep when you press a key, make a mistake, or after you send or receive a fax.

You can choose a range of beeper volume levels, from High to Off.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press A or ▼ to choose Volume. Press OK.
- 4 Press **A** or **V** to choose Beeper.
- 5 Press ◀ or ▶ to choose Low, Med, High or Off.
 Press OK.
- 6 Press Stop/Exit.

Speaker Volume

You can choose a range of speaker volume levels, from High to Off.

- 1 Press Menu.
- Press ▲ or ▼ to choose

 General Setup.

 Press OK.
- 3 Press A or ▼ to choose Volume. Press OK.
- 4 Press A or ▼ to choose Speaker.
- Press ◀ or ▶ to choose Low, Med, High or Off. Press OK.
- 6 Press Stop/Exit.

LCD display

Setting the backlight brightness

If you are having difficulty reading the LCD, try changing the brightness setting.

- 1 Press Menu.
- Press ▲ or ▼ to choose

 General Setup.

 Press OK.
- 3 Press A or ▼ to choose LCD Settings. Press OK.
- 4 Press A or V to choose Backlight.
- 5 Press ◀ or ▶ to choose Light, Med or Dark.
 Press OK.
- 6 Press Stop/Exit.

LCD Language

You can change the LCD Language.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 Initial Setup.
 Press OK.
- 3 Press ▲ or ▼ to choose

 Local Language.

 Press OK.
- 4 Press ▲ or ▼ to choose English or Chinese.
 Press OK.
- 5 Press Stop/Exit.

Setting the Fax Logic (sending and receiving sequence)

You can change the process of manual fax send or receive.

If you often send or receive a fax manually to/from the other party at the end of a conversation, set the Fax Mode to Easy Mode.

If you set to Easy Mode:

You can send or receive a fax manually just simply press **Start**.

If you are a caller, press **Start** to send a fax. If you are a receiver, press **Start** to receive a fax.

If you set to Advanced Mode:

No matter you are a caller or receiver, you can choose you will send or receive a fax manually. When you press **Start**, the machine will ask you:

Send/Receive?

If you want to send a fax, press 1 to choose Send.

If you want to receive a fax, press **2** to choose Receive.



Even if you set either Easy Mode or Advanced Mode and if there is a document in the ADF, the document in the ADF will be sent by pressing **Start**.

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax.
 Press **OK**.
- 3 Press ▲ or ▼ to choose
 Miscellaneous.
 Press OK.
- 4 Press **A** or **V** to choose Fax Mode.
- Press ◀ or ▶ to choose Easy Mode or Advanced Mode. Press OK.

6 Press Stop/Exit.

Loading paper


Loading paper and other print media



For Tray #2, see Loading paper in paper tray #2 (lower tray) on page 13.


Loading paper in paper tray #1 (upper tray)

1 Pull the paper tray completely out of the machine.

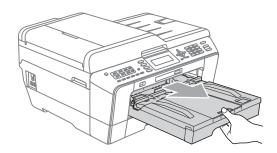




If the paper support flap (1) is open, close it, and then close the paper support (2).

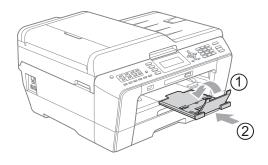


Note

When you are using A3, Legal or Ledger size paper, press the universal guide release button (1) as you slide out the front of the paper tray. Make sure that when using Legal or A3 or Ledger size paper, the triangular mark on the output paper tray cover is aligned with the line indicating Legal (2) or A3 or Ledger (3) size, as shown in the illustration.

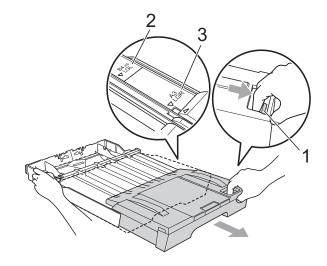


- If you are using A5 or smaller size paper, make sure that the paper tray is not extended.
- When you load a different paper size in a tray, you will need to change the paper size setting in the machine at the same time. (See Paper Size and Type on page 22.)

Open the output paper tray cover (1).

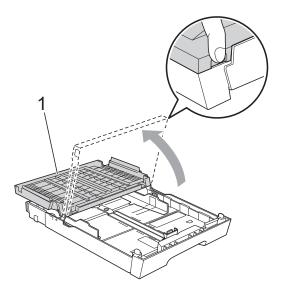


With both hands, gently press and slide the paper length guide (1) and then the paper side guides (2) to fit the paper size.

Make sure that the triangular marks (3) on the paper length guide (1) and paper side guides (2) line up with the mark for the paper size you are using.

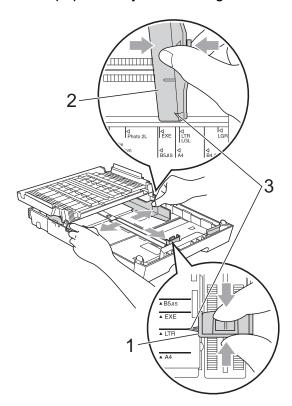


Fan the stack of paper well to avoid paper jams and misfeeds.

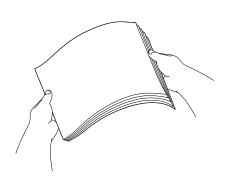




Always make sure that the paper is not curled.

Gently put the paper into the paper tray print side down and top edge in first. Check that the paper is flat in the tray.

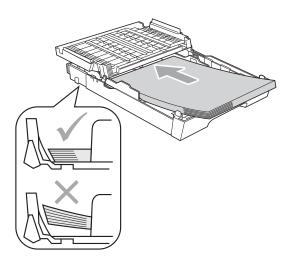




When you put Photo L size into the paper tray, you need to release the hinges on both sides of the output paper tray cover, and push the cover over. And then slide the paper length guide.

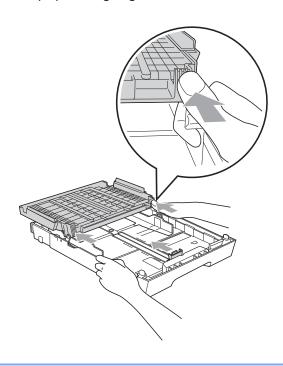


6 Gently adjust the paper side guides to the paper with both hands.

Make sure the paper side guides touch the sides of the paper.

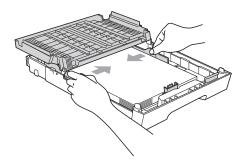




Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause feed problems. Close the output paper tray cover. Check that the paper is flat in the tray and below the maximum paper mark (1). Overfilling the paper tray may cause paper jams.

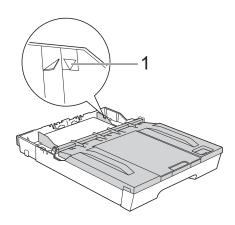

8 Slowly push the paper tray completely into the machine.

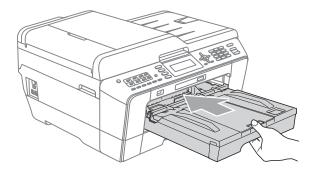

▲ WARNING


DO NOT push Tray #1 into the machine too quickly. Doing this may cause injury to your hand by trapping it between Tray #1 and Tray #2. Please push Tray #1 slowly.

While holding the paper tray in place, pull out the paper support (1) until it clicks and unfold the paper support flap (2).






Before you shorten Tray #1, take the paper out of the tray. Then shorten the tray by pressing the universal guide release button (1). Adjust the paper length guide (2) to fit the paper size you are going to use. Then put the paper into the tray.

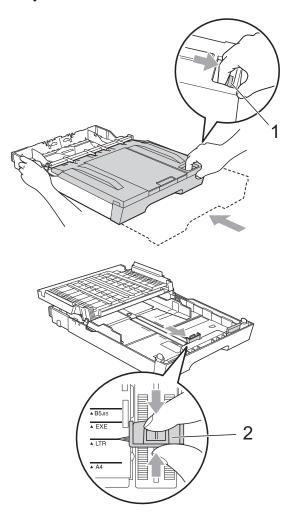

Loading paper in paper tray #2 (lower tray)




- You can only use plain paper sizes A4, A3, Ledger, Letter or Legal in Tray #2.
- When you use the Borderless printing feature paper must be fed from Tray#1.
- 1 Pull the paper tray completely out of the machine.

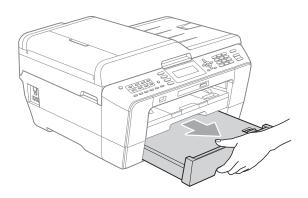




- If you are using A3, Ledger or Legal size paper, press the universal guide release button (1) as you slide out the front of the paper tray until it clicks.
- You can check if the length of the tray is adjusted correctly by opening the paper tray cover.

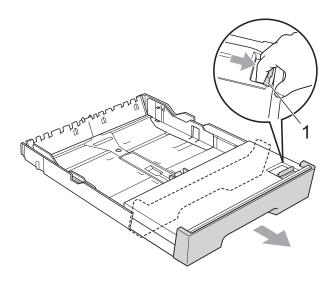


Open the paper tray cover (1).

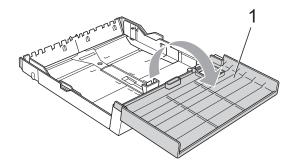

3 Using both hands, gently press and slide the paper length guide (1) and then the paper side guides (2) to fit the paper size.

Make sure that the triangular marks (3) on the paper length guide (1) and paper side guides (2) line up with the marks for the paper size you are using.

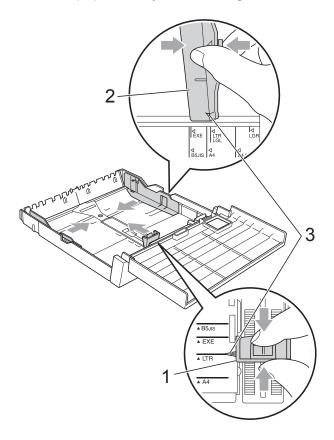

Fan the stack of paper well to avoid paper jams and misfeeds.




Always make sure that the paper is not curled.

Gently put the paper into the paper tray print side down and top edge in first.


Check that the paper is flat in the tray and below the maximum paper mark (1).

Overfilling the paper tray may cause

Overfilling the paper tray may cause paper jams.

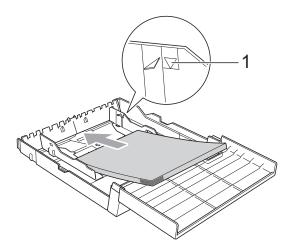


6 Using both hands, gently adjust the paper side guides so they touch the sides of the paper stack.

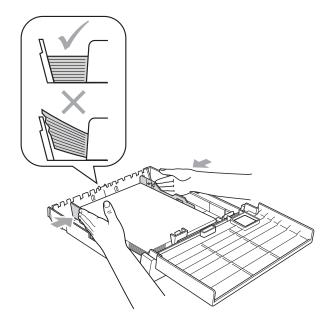




Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause feed problems.

Close the paper tray cover.

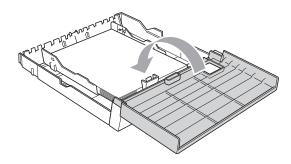

8 Slowly push the paper tray back into the machine.

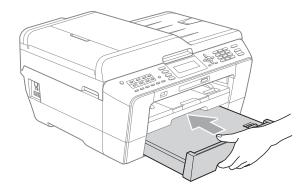

- 9 Do one of the following:
 - If you are using A3, Ledger or Legal size paper, go to step ...





When you are using large size paper in Tray #2, you may need to extend Tray #1 out over Tray #2 to prevent printed pages from falling off the output tray.

■ If you are using A4 or Letter size paper, go to step ❸.


Pull tray #1 out of the machine.

Press the universal guide release button (1) as you slide out the front of the paper tray.

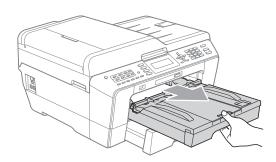

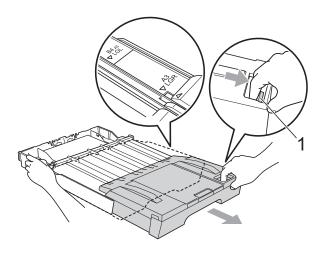


Open the output paper tray cover and adjust the paper length guide (1) for the paper.

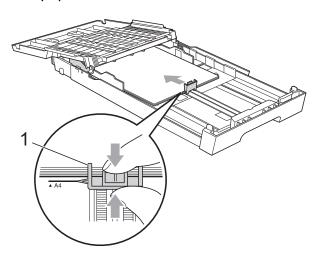


Chapter 2

Close the output paper tray cover and slowly push the paper tray into the machine.

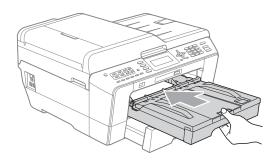



13 Pull out the paper support (1) until it clicks and unfold the paper support flap (2).

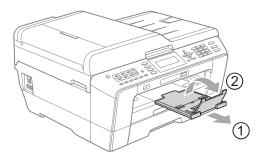



If you are finished using A3, Ledger or Legal size paper and want to use a smaller paper size, take the paper out of the tray. Then shorten the tray by pressing the universal guide release button (1). Adjust the paper length guide (2) to fit the paper size you are going to use. Then put the smaller paper into the tray.

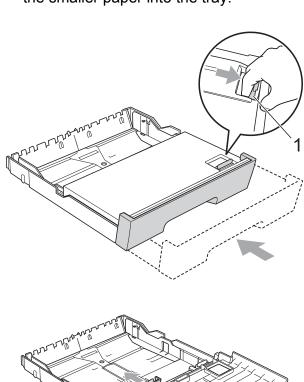

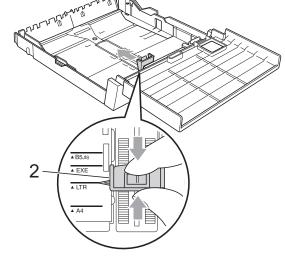



Loading paper in the manual feed slot

You can load special print media one at a time into this slot. Use the manual feed slot to print or copy on envelopes, labels or thicker paper.


Note

- The machine automatically turns on the Manual Feed mode when you put paper in the manual feed slot.
- When you use the Borderless printing feature paper must be fed from Tray#1.
- 1 Open the manual feed slot cover.

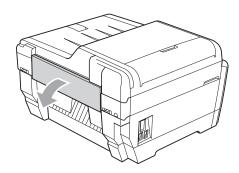


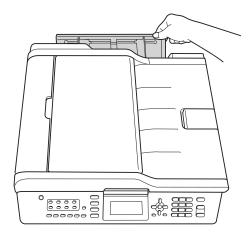

2 Slide the manual feed slot paper guides to fit the paper width that you are going to use.

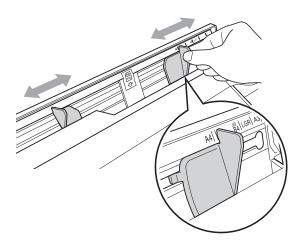

3 Put *only* one sheet of paper in the manual feed slot with the side to be printed *face up*.

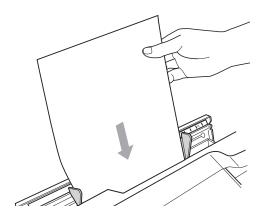


! IMPORTANT

 DO NOT put more than one sheet of paper in the manual feed slot at any time. Doing this may cause a paper jam. Wait until the LCD shows

Put paper in Manual Feed Slot Then Press Start before you feed the next sheet of paper in the manual feed slot.


 DO NOT put paper in the manual feed slot when you are printing from Tray #1 or Tray #2. Doing this may cause a paper jam. Using both hands gently adjust the manual feed slot paper guides to fit the paper.

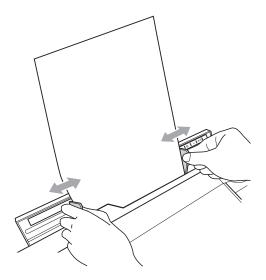



- DO NOT press the paper guides too tightly against the paper. Doing this may cause the paper to fold.
- Place the paper in the centre of the manual feed slot between the paper guides. If the paper is not centred, pull it out and insert it again at the centre position.
- 5 Using both hands, put one sheet of paper in the manual feed slot until the front edge touches the paper feed roller and the machine beeps. Let go of the paper when you feel the machine feed the paper in a short distance. The LCD will show

Manual Feed Slot ready.

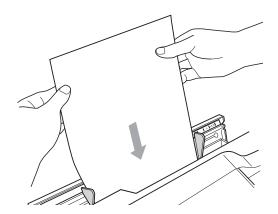



Note

When loading an envelope, or a sheet of thick paper, push the envelope into the manual feed slot until you feel it grab the envelope.

6 If the data does not fit on one page, the LCD will prompt you to load another page. Place another sheet of paper in the manual feed slot, and then press Mono Start or Color Start.



Note

- · Make sure printing has finished before you close the manual feed slot cover.
- When paper is placed in the manual feed slot, the machine always prints from the manual feed slot.
- Paper inserted in the manual feed slot while a test page, fax or report is being printed will be ejected.
- During the machine's cleaning process, paper you place in the manual feed slot will be ejected. Wait until the machine finishes its cleaning, and then put the paper into the manual feed slot again.

Loading envelopes and postcards

About envelopes

- Use envelopes that weigh between 80 to 95 g/m².
- Some envelopes need margin settings to be set in the application. Make sure you do a test print first before printing many envelopes.

! IMPORTANT

DO NOT use any of the following types of envelopes, as they will cause paper feed problems:

- That are of a baggy construction.
- · That have windows.
- That are embossed (have raised writing on them).
- That have clasps or staples.
- That are pre-printed on the inside.

Glue	Double flaps
	/ , ,

 
Occasionally you may experience paper feed problems caused by the thickness, size and flap shape of the envelopes you are using.

 
Loading envelopes and postcards

1 Before loading, press the corners and sides of envelopes or postcards to make them as flat as possible.

! IMPORTANT

If envelopes or postcards are "double-feeding", put one envelope or postcard in the paper tray at a time.









Chapter 2

Put envelopes or postcards in the paper tray with the address side down and the leading edge (top of the envelopes) in first. Using both hands, gently press and slide the paper length guide (1) and paper side guides (2) to fit the size of the envelopes or postcards.

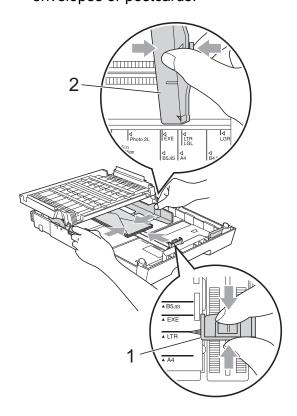

If you have problems when printing on envelopes, try the following suggestions:

- 1 Open the envelope flap.
- 2 Make sure the open flap is to the back edge of the envelope when printing.

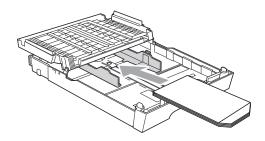


3 Adjust the size and margin in your application.


Printable area

The printable area depends on the settings in the application you are using. The figures below show the unprintable areas on cut sheet paper and envelopes. The machine can print in the shaded areas of cut sheet paper when the Borderless print feature is available and turned on. (See *Printing* for Windows[®] or *Printing* and *Faxing* for Macintosh in the *Software User's Guide*.)

Cut Sheet Paper

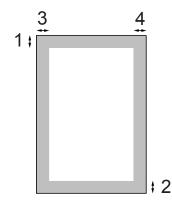

Envelopes

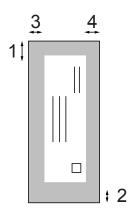

	Top (1)	Bottom (2)	Left (3)	Right (4)
Cut Sheet	3 mm	3 mm	3 mm	3 mm
Cut Sheet (Duplex print when using A3 or Ledger size)	22 mm	22 mm	3 mm	3 mm
Envelopes	22 mm ¹	22 mm	3 mm	3 mm

¹ The top margin of Y4 envelopes is 12 mm.



- The Borderless feature is not available for envelopes and duplex printing.
- When you use the Borderless printing feature paper must be fed from Tray#1.

Paper settings

Paper Size and Type

To get the best print quality, set the machine for the type of paper you are using.

You can use seven sizes of paper for printing copies: A4, A5, A3, 10×15 cm, Letter, Legal and Ledger and five sizes for printing faxes: A4, A3, Ledger, Letter and Legal. When you load a different size of paper in the machine, you will need to change the paper size setting at the same time so your machine can fit an incoming fax on the page.

- 1 Press Tray Setting.
- Press ▲ or ▼ to choose Tray#1 or Tray#2.
 Press OK.
- Oo one of the following:

Press OK.

Press ▲ or ▼ to choose Paper Size and press ◀ or ▶ to choose A4, A5, A3, 10x15cm, Letter, Legal or Ledger.

Press OK.

- 4 Press ▲ or ▼ to choose Complete. Press OK.
- Press ▲ or ▼ to choose Complete. Press OK.



- You can only use plain paper and paper sizes A3, A4, Ledger, Letter or Legal in Tray#2.
- The machine ejects paper with printed surfaces face up onto the paper tray in front of the machine. When you use transparencies or glossy paper, remove each sheet at once to prevent smudging or paper jams.

Tray use in Copy mode

You can change the default tray the machine will use for printing copies.

Auto Select will allow your machine to feed paper from either Tray #1 or Tray #2, using the paper type and size settings from the COPY key menu.

To change the default setting follow the instructions below:

- 1 Press Tray Setting.
- Press ▲ or ▼ to choose
 Tray Use:Copy.
- 3 Press ◀ or ▶ to choose Tray#1,
 Tray#2 or Auto Select.
 Press OK.
- 4 Press ▲ or ▼ to choose Complete. Press OK.



You can change the paper size and tray selection temporarily for the next copy. (See *Paper Size* on page 54 and *Tray Select* on page 54.)

Tray use in Fax mode

You can change the default tray the machine will use for printing received faxes.

Auto Select will allow your machine to take paper from Tray #1 first, or from Tray #2 if:

- Tray #2 is set to a different paper size that is more suitable for the received faxes.
- Both trays are using the same size paper and Tray #1 is not set to use plain paper.
- 1 Press Tray Setting.
- Press ▲ or ▼ to choose Tray Use: Fax.
- 3 Press ◀ or ▶ to choose Tray#1,
 Tray#2 or Auto Select.
 Press OK.
- Press ▲ or ▼ to choose Complete. Press OK.

Secure Paper Feed mode for A3 size Short Grain Paper

If your printed pages are smudged when using A3 paper, your paper may be short grain paper. Choose A3 - Short Grain and set it to On to avoid this problem.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 General Setup.
 Press OK.
- 3 Press ▲ or ▼ to choose
 A3 Short Grain.
- 4 Press ◀ or ▶ to choose on. Press **OK**.
- 5 Press Stop/Exit.



- If you are not sure about the type of paper you are using, consult the paper packaging or manufacturer for paper specifications.
- Printing will be slower when using the A3 Short Grain.

Acceptable paper and other print media

The print quality can be affected by the type of paper you use in the machine.

To get the best print quality for the settings you have chosen, always set the Paper Type to match the type of paper you load.

You can use plain paper, inkjet paper (coated paper), glossy paper, transparencies and envelopes.

We recommend testing various paper types before buying large quantities.

For best results, use Brother paper.

- When you print on inkjet paper (coated paper), transparencies and glossy paper, be sure to choose the correct print media in the "Basic" tab of the printer driver or in the Paper Type setting of the menu.
- When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
- When you use transparencies or photo paper, remove each sheet at once to prevent smudging or paper jams.
- Avoid touching the printed surface of the paper immediately after printing; the surface may not be completely dry and may stain your fingers.

Recommended print media

To get the best print quality, we suggest using Brother paper. (See the table below.)

If Brother paper is not available in your country, we recommend testing various papers before purchasing large quantities.

We recommend using "3M Transparency Film" when you print on transparencies.

Brother paper

Paper Type	Item
A3 Plain	BP60PA3
A3 Glossy Photo	BP71GA3
A3 Inkjet (Matte)	BP60MA3
A4 Plain	BP60PA
A4 Glossy Photo	BP71GA4
A4 Inkjet (Matte)	BP60MA
10 × 15 cm Glossy Photo	BP71GP


Handling and using print media

- Store paper in its original packaging, and keep it sealed. Keep the paper flat and away from moisture, direct sunlight and heat.
- Avoid touching the shiny (coated) side of photo paper. Load photo paper with the shiny side facing down.
- Avoid touching either side of transparencies because they absorb water and perspiration easily, and this may cause decreased output quality. Transparencies designed for laser printers/copiers may stain your next document. Use only transparencies recommended for inkjet printing.

! IMPORTANT

DO NOT use the following kinds of paper:

 Damaged, curled, wrinkled, or irregularly shaped paper

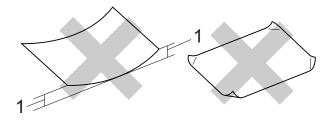

- 1 2 mm or greater curl may cause jams to occur.
- Extremely shiny or highly textured paper
- Paper that cannot be arranged uniformly when stacked
- Short grain paper

Labels (Manual feed slot only)

Labels should be arranged so that they cover the entire length and width of the sheet. Using labels with spaces may result in labels peeling off and causing serious jams or print problems.

Types of labels to avoid

Do not use labels that are damaged, curled, wrinkled or an unusual shape.









IMPORTANT

- DO NOT feed part used label sheets. The exposed carrier sheet will damage your machine.
- DO NOT reuse or insert labels that have previously been used or are missing few labels on the sheet.

Paper capacity of the output paper tray cover

Up to 50 sheets of 80 g/m² A4 paper.

Transparencies and photo paper must be picked up from the output paper tray cover one page at a time to avoid smudging.

Choosing the right print media

Paper type and size for each operation

Paper Type	Paper Size		Usage			
			Fax	Сору	Photo Capture	Printer
Cut Sheet	A3	297×420 mm (11.7 \times 16.5 in.)	Yes	Yes	Yes	Yes
	A4	210 \times 297 mm (8.3 \times 11.7 in.)	Yes	Yes	Yes	Yes
	Ledger	279.4×431.8 mm (11 \times 17 in.)	Yes	Yes	Yes	Yes
	Letter	$215.9 \times 279.4 \text{ mm} (8 \text{ 1/2} \times 11 \text{ in.})$	Yes	Yes	Yes	Yes
	Legal	$215.9 \times 355.6 \text{ mm} (8 \ 1/2 \times 14 \text{ in.})$	Yes	Yes	_	Yes
	Executive	184×267 mm (7 1/4 \times 10 1/2 in.)	_	_	_	Yes
	JIS B4	257 × 364 mm (10.1 × 14.3 in.)	_	_	_	User Defined
	JIS B5	182 × 257 mm (7.2 × 10.1 in.)	_	_	_	User Defined
	A5	148 \times 210 mm (5.8 \times 8.3 in.)	_	Yes	_	Yes
	A6	$105 \times 148 \text{ mm } (4.1 \times 5.8 \text{ in.})$	_	_	_	Yes
Cards	Photo	10 × 15 cm (4 × 6 in.)	_	Yes	Yes	Yes
	Photo L	89×127 mm (3 $1/2 \times 5$ in.)	_	_	_	Yes
	Photo 2L	13×18 cm (5 × 7 in.)	_	_	Yes	Yes
	Index Card	127 \times 203 mm (5 \times 8 in.)	_	_	_	Yes
	Postcard 1	100×148 mm (3.9 \times 5.8 in.)	_	_	_	User Defined
	Postcard 2 (Double)	$148 \times 200 \text{ mm } (5.8 \times 7.9 \text{ in.})$	_	_	_	User Defined
Envelopes	C5 Envelope	162 × 229 mm (6.4 × 9 in.)	_	_	_	Yes
	DL Envelope	110 \times 220 mm (4.3 \times 8.7 in.)	_	_	_	Yes
	COM-10	$105 \times 241 \text{ mm } (4 \text{ 1/8} \times 9 \text{ 1/2 in.})$	_	_	_	Yes
	Monarch	98×191 mm (3 7/8 \times 7 1/2 in.)	_	_	_	Yes
	Y4 Envelope	105×235 mm (4.1 \times 9.3 in.)	_	_	_	Yes
Transparencies	A4	210 × 297 mm (8.3 × 11.7 in.)	_	Yes	_	Yes
	Letter	$215.9 \times 279.4 \text{ mm} \ (8 \ 1/2 \times 11 \text{ in.})$	_	Yes	_	Yes
	Legal	$215.9 \times 355.6 \text{ mm} (8 \text{ 1/2} \times 14 \text{ in.})$	_	Yes	_	Yes
	A5	148 \times 210 mm (5.8 \times 8.3 in.)	_	Yes	_	Yes
Labels ¹			_	_	_	User Defined

Manual Feed Slot only

Paper capacity of the paper trays

	Paper size	Paper types	No. of sheets
Tray #1	A4, Ledger, A3, Legal, Executive,	Plain Paper	250 ¹
	Letter, A5, A6, JIS B4, JIS B5,	Inkjet Paper	20
	Envelopes (commercial No.10, DL, C5, Monarch, Y4), Photo,	Glossy Paper, Photo	20
	Photo L, Photo 2L, Index Card,	Index Card, Postcard	30
	Postcard 1, Postcard 2	Envelopes, Transparencies	10
Tray #2	A4, Ledger, A3, Legal, Executive, Letter, JIS B4, JIS B5	Plain Paper	250 ¹
Manual Feed Slot	A4, Ledger, A3, Legal, Executive, Letter, A5, A6, JIS B4, JIS B5, Envelopes (commercial No.10, DL, C5, Monarch, Y4), Photo, Photo L, Photo 2L, Index Card, Postcard 1, Postcard 2	Plain Paper, Inkjet Paper, Glossy Paper, Envelopes, Transparencies and Labels	1

¹ Up to 250 sheets of 80 g/m² paper.

Paper weight and thickness

Paper Type		Weight	Thickness
Cut Sheet	Plain Paper	64 to 120 g/m ²	0.08 to 0.15 mm
	(Tray #2)	64 to 105 g/m ²	0.08 to 0.15 mm
	Plain Paper		
	Inkjet Paper	64 to 200 g/m ²	0.08 to 0.25 mm
	Glossy Paper ¹	Up to 220 g/m ²	Up to 0.25 mm
Cards	Photo Card ¹	Up to 220 g/m ²	Up to 0.25 mm
	Index Card	Up to 120 g/m ²	Up to 0.15 mm
	Postcard 1	Up to 200 g/m ²	Up to 0.25 mm
	Postcard 2		
Envelopes		75 to 95 g/m ²	Up to 0.52 mm
Transparencies		_	_
Labels ²		_	_

¹ BP71 (260 g/m²) paper is especially designed for Brother inkjet machines.

² Manual feed slot only.

Loading documents

How to load documents

You can send a fax, make copies, and scan from the ADF (automatic document feeder) and from the scanner glass.

Using the ADF

The ADF can hold up to 35 pages and feeds each sheet individually. Use standard 80 g/m² paper and always fan the pages before putting them in the ADF.

Document Sizes Supported

Recommended Paper: 80 g/m² A4

Length: 148 to 431.8 mm

Width: 148 to 297 mm

Weight: 64 to 90 g/m²


How to load documents

IMPORTANT


- DO NOT pull on the document while it is feeding.
- DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, pasted or taped.
- DO NOT use cardboard, newspaper or fabric with the ADF. Instead use the scanner glass.

Make sure documents written with ink are completely dry.

1 Unfold the ADF Document Support (1) and the ADF Document Output Support Flap (2).

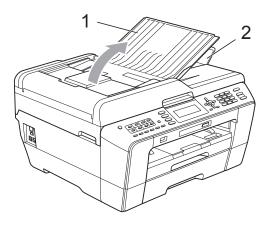

- 2 Fan the pages well.
- 3 Adjust the paper guides (1) to fit the width of your documents.

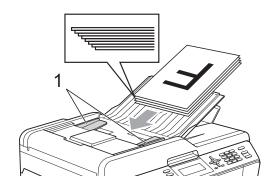

4 Place your documents, face up, top edge first in the ADF until you feel them touch the feed rollers.

! IMPORTANT

DO NOT leave thick documents on the scanner glass. If you do this, the ADF may jam.

Using the scanner glass

You can use the scanner glass to fax, copy or scan pages of a book or one page at a time.

Document Sizes Supported

Length: Up to 431.8 mm Width: Up to 297 mm Weight: Up to 2 kg


How to load documents



M Note

To use the scanner glass, the ADF must be empty.

- Lift the document cover.
- Using the document guidelines on the left and top, place the document face down in the upper left corner of the scanner glass.

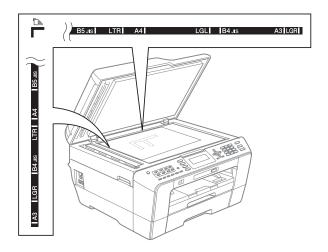




Close the document cover.

! IMPORTANT

If you are scanning a book or thick document, DO NOT slam the cover down or press on it.

Scannable area

The scannable area depends on the settings in the application you are using. The figures below show unscannable areas.

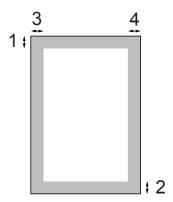

Usage	Document	Top (1)	Left (3)
	Size	Bottom (2)	Right (4)
Fax	A3	3 mm	4.5 mm
	A4	3 mm	3 mm ¹
	Ledger	3 mm	3.7 mm
	Letter	3 mm	4 mm
	Legal		
Сору	All paper	3 mm	3 mm
Scan	sizes		

The unscannable area is 1 mm when you use the ADF.


4

Sending a fax


How to send a fax

The following steps show how to send a fax.

1 When you want to send a fax, or change fax send or receive settings, press the (FAX) key to illuminate it in blue.

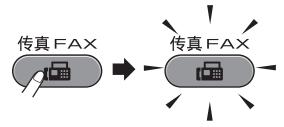

■ The LCD shows:

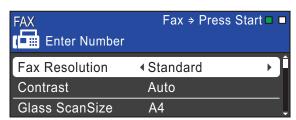

- 2 Do one of the following to load your document:
 - Place the document *face up* in the ADF. (See *Using the ADF* on page 28.)
 - Load your document face down on the scanner glass. (See *Using the* scanner glass on page 29.)



- To send color faxes with multiple pages use the ADF.
- If you send a mono fax from the ADF when the memory is full it will be sent in real time.
- You can use the scanner glass to fax pages of a book one at a time. The documents can be up to A3 or Ledger size.
- Since you can only scan one page at a time, it is easier to use the ADF if you are sending a multiple page document.

3 You can change the following fax sending settings. Press **FAX** and then press ▲ or ▼ to scroll through the fax settings. When the setting you want is highlighted, then press ◀ or ▶ to choose your option, and press **OK**.

(Basic User's Guide)

For details changing the following fax sending settings, see pages 32 to 34.

- Glass ScanSize
- Color Fax Transmission
- Preview Outgoing Fax
- Transmission Verification Report (Setup)

(Advanced User's Guide)

For more advanced fax sending operations and settings, see Chapter 3 Sending a fax in the Advanced User's Guide:

- Contrast
- Fax Resolution
- Set New Defaults
- Factory Reset
- Faxing at End of Call
- Broadcasting
- Real Time TX
- Overseas Mode
- Delayed Fax
- Batch TX
- Canceling Waiting Jobs
- Polled Transmit

4 Enter the fax number.

Using the dial pad Using the Phone Book

■ Phone Book

Using call history

- Outgoing Call
- Caller ID hist.



You can preview a fax message before sending it by setting Fax Preview to ON. (See *How to preview an outgoing fax* on page 33.)

5 Press Mono Start or Color Start.

Faxing from the ADF

■ The machine starts scanning the document.

Faxing from the scanner glass

When you press Mono Start, the machine starts scanning the first page.

Do one of the following:

 To send a single page, press 2 to choose No (Send) (or press Mono Start again).

The machine starts sending the document.

- To send more than one page, press 1 to choose Yes and place the next page on the scanner glass. Press OK. The machine starts scanning the page. (Repeat this step for each additional page.)
- If you press Color Start, the machine starts sending the document.

Stop faxing

To stop faxing, press Stop/Exit.

Setting scanner glass size for faxing

When documents are Letter size, you need to set Scan Size to Letter. If you do not, the side portion of the faxes will be missing.

- 1 Press (FAX).
- Press ▲ or ▼ to choose
 Glass ScanSize.
- 3 Press ∢ or ▶ to choose A4, A3, Letter, Legal or Ledger.
 Press OK.



- You can save the setting you use most often by setting it as default. (See Setting your changes as a new default in chapter 3 of the Advanced User's Guide.)
- This setting is only available for sending documents from the scanner glass.

Color fax transmission

Your machine can send a color fax to machines that support this feature.

Color faxes cannot be stored in the memory. When you send a color fax, the machine will send it in real time (even if Real Time TX is set to Off).

Cancelling a fax in progress

If you want to cancel a fax while the machine is scanning, dialling or sending, press **Stop/Exit**.

How to preview an outgoing fax

You can preview a fax message before you send it. You must set the Real Time Transmission and Polling RX to Off before you use this feature.

- 1 Press (FAX).
- 2 Load the document.
- 3 Enter the fax number using the dial pad, One Touch or Speed Dial.
- 4 Press Fax Preview.

 The machine starts scanning the document and the outgoing fax appears on the LCD. When the fax is open the control panel keys will perform the operations shown below.

Key	Description
*	Enlarge the fax.
#	Reduce the fax.
∆ or ▼	Scroll vertically.
∢ or ▶	Scroll horizontally.
0	Rotate the fax clockwise.
7 PORS	Go back to the previous page.
9 WXYZ	Go to the next page.



If you preview a color fax before it is sent, you will only be able to send it in black & white. To send a color fax do not press the **Fax Preview** key.

5 Press Mono Start.



The fax message in the memory will be sent and then erased when you press **Mono Start**.

Transmission Verification Report

You can use the Transmission Verification Report as proof that you sent a fax. This report lists the sender's name or fax number, the time and date of transmission, duration of transmission, number of pages sent, and whether or not the transmission was successful.

There are several settings available for the Transmission Verification Report:

- On: Prints a report after every fax you send.
- On+Image: Prints a report after every fax you send. A portion of the fax's first page appears on the report.
- Off: Prints a report if your fax is unsuccessful due to a transmission error. The report will also print if the receiving machine modifies the size of the document you fax. Off is the default setting.
- Off+Image: Prints a report if your fax is unsuccessful due to a transmission error. The report will also print if your fax is successful, but the receiving machine modifies the size of the document you fax. A portion of the fax's first page appears on the report.
- Off2: Prints a report *only* if your fax is unsuccessful due to a transmission error.
- Off2+Image: Prints a report only if your fax is unsuccessful due to a transmission error. A portion of the fax's first page appears on the report.

Chapter 4

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose
 Report Setting.
 Press OK.
- 4 Press ▲ or ▼ to choose Transmission.
- 5 Press ◀ or ▶ to choose On, On+Image, Off, Off+Image, Off2 or Off2+Image. Press OK.
- 6 Press Stop/Exit.



- If you choose On+Image, Off+Image or Off2+Image the image will only appear on the Transmission Verification Report if Real Time Transmission is set to Off. (See Real Time Transmission in chapter 3 of the Advanced User's Guide.)
- If your transmission is successful, "OK" will appear next to "RESULT" on the Transmission Verification Report. If transmission is not successful, "ERROR" will appear next to "RESULT".

5

Receiving a fax

Receive Modes

By factory default, the factory setting of Receive Mode is "Fax". Your machine will automatically receive any faxes that are sent to it. There are four receive modes of this machine as below.

For more detailed information on the receive modes, see *Using Receive Modes* on page 36.

Operation Display	LCD Display	Factory Default Ring Delay
Fax Only	Fax	Ring Delay: 2 times
		Fax detection: On
Fax/Tel	F/T	Ring Delay: 2 times
		Time: 30 seconds
Manual	Mnl	
External TAD	TAD	

To set a receive mode follow the instructions below:

- 1 Press Menu.
- Press ▲ or ▼ to choose Initial Setup.
 Press OK.
- 3 Press ▲ or ▼ to choose Receive Mode.
- 4 Press ◀ or ▶ to choose Fax Only, Fax/Tel, Manual or External TAD. Press OK.
- 5 Press **Stop/Exit**.
 The LCD will display the current receive mode.

Using Receive Modes

Mode	Function	Help
Fax (Fax Only) Each call recognized as fax and send fax signal. However, you can answer the call within the number of rings.	recognized as fax and send fax signal.	Factory setting of Ring Delay is 2 (0-10 times available, please see <i>Ring Delay</i> on page 37). After ringing 2 times, the fax machine send fax-receiving signals automatically;
	Tip: If your machine is connecting an external answering phone device, and often use it to answer incoming calls, you could set the ring time through 4 to 6 times.	
		Within the recommended ringing times, you can use the external answering phone device to answer and talk. ¹
F/T (Fax/Tel)	Automatically determine whether the incoming call is telephone or fax	Factory setting of Ring Delay is 2 (0-10 times available, please see <i>Ring Delay</i> on page 37. Factory setting of F/T ring time (a fast double-ring) is 30 seconds (20, 30, 40, 70 seconds available, please see <i>F/T Ring Time (Fax/Tel mode only)</i> on page 37).
	calls. Non-Fax call will make a fast double-ring to	According to incoming call after the fax machine rings 2 times: 1) For the fax call, send fax received signal; 2) For the telephone call, make a fast double-ring, waiting for you answer the phone.
inform you answ the phone.	_	Tip: If your machine is connecting an external answering phone device, you could set the ringing time through 4 to 6 times to answer the call. ¹
Mnl (Manual)	Machine doesn't recognize each call, only as a common	Answering the call, or if the caller wants to send you a fax, press Mono Start or Color Start button (under easy mode) to receive faxes.
	phone call that you need to determine after answering the phone.	Tip: If your machine is connecting an external answering phone device, you can use the external answering phone device to answer and talk. ¹
TAD (External TAD)	The external answering machine (TAD)	Use this mode if you have connected an external answering machine to your machine. The TAD setting works only with an external answering machine.
	automactically answers every call. Voice messages are stored on the external TAD. Fax messages are printed.	Note: Ring Delay and F/T Ring Time do not work in this setting.

If the caller wants to send a fax during a call or the caller sends you a fax call, please press **Mono Start** or **Color Start** button (under easy mode) on the control panel of the machine or press * **5 1** keys on the external answering phone device (you have to turn on the remote codes first, please see *Using remote codes* on page 45 to give fax receiving signals.

Receive Mode settings

Ring Delay

The Ring Delay sets the number of times the machine rings before it answers in Fax Only or Fax/Tel mode. If you have external or extension telephones on the same line as the machine choose the maximum number of rings.

(See Operation from external and extension telephones on page 45 and Fax Detect on page 38.)

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press A or ▼ to choose Setup Receive. Press OK.
- Press ▲ or ▼ to choose Ring Delay.
- 5 Press

 or

 to choose how many times the line rings before the machine answers.

Press OK.

If you choose 0, the line will not ring at all

6 Press Stop/Exit.

F/T Ring Time (Fax/Tel mode only)

When somebody calls your machine, you and your caller will hear the normal telephone ring sound. The number of rings is set by the ring delay setting.

If the call is a fax, then your machine will receive it; however, if it is a voice call the machine will sound the F/T Ring (a fast double-ring) for the time you have set in the F/T Ring Time setting. If you hear the F/T Ring it means that you have a voice caller on the line.

Because the F/T Ring is made by the machine, extension and external telephones will *not* ring; however, you can still answer the call on any telephone. (For more information see *Using remote codes* on page 45.)

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press A or ▼ to choose Setup Receive. Press OK.
- 4 Press ▲ or ▼ to choose F/T Ring Time.
- 5 Press ◀ or ▶ to choose how long the machine will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds. Press OK.
- 6 Press Stop/Exit.



Even if the caller hangs up during the fast double-ring, the machine will continue to ring for the set time.

Fax Detect

If Fax Detect is On:

Fax Detect is turned on as default.

The machine receives a fax call automatically, even if you answer the call. When you see Receiving on the LCD or when you hear "chirps" through the handset you are using, just replace the handset. Your machine will do the rest.

If Fax Detect is Off:

If you are at the machine and answer a fax call by lifting the handset, press **Mono Start** or **Color Start**, then press **2** to receive the fax.

If you answered at an extension or external telephone, press * **5 1**. (See *Operation from external and extension telephones* on page 45.)



- If this feature is set to On, but your machine does not connect a fax call when you lift an extension or external telephone handset, press the remote activation code * 5 1.
- If you send faxes from a computer on the same telephone line and the machine intercepts them, set Fax Detect to Off.
- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose
 Setup Receive.
 Press OK.
- 4 Press ▲ or ▼ to choose Fax Detect.
- 5 Press ◀ or ▶ to choose on (or off). Press OK.
- 6 Press Stop/Exit.

Fax Preview (Monochrome only)

How to preview a received fax

You can view received faxes on the LCD by pressing the **Fax Preview** key. When the machine is in Ready mode, a popup message will appear on the LCD to alert you of new faxes.

Setting Fax Preview

- 1 Press Fax Preview.
- 2 Press 1 to choose Yes.
 The LCD asks you again to confirm because faxes will viewed instead of automatically printed.
 Press 1 to choose OK.



- When Fax Preview is turned on, a backup copy of received faxes will not be printed for Fax Forwarding and PC-Fax Receiving operations, even if you have set Backup Print to On.
- Fax Preview is not available when Fax Forwarding is turned on.

Using Fax Preview

When you receive a fax, you will see the popup message on the LCD. (For example:

New Fax(es): 02)

1

Press Fax Preview.

You can see the new fax list.



- If you receive a fax containing multiple paper sizes (for example, a page of A4 data and a page of A3 data), the machine may create and store a file for each paper size. The LCD may show that more than one fax job has been received.
- You can also see your old fax list by pressing *. Press # to go back to your new fax list.
- Press ▲ or ▼ to choose the fax you want to see.
 Press OK.



- If your fax is large there may be a delay before it is displayed on the LCD.
- The LCD will show the current page number and total pages of the fax message. When your fax message is over 99 pages the total number of pages will be shown as "xx".
- 3 Press Stop/Exit.

When a fax is open the control panel keys will perform the operations shown below.

Key	Description
*	Enlarge the fax.
#	Reduce the fax.
∆ or ∀	Scroll vertically.
∢ or ▶	Scroll horizontally.
0	Rotate the fax clockwise.
2 ABC	Delete the fax.
	Press 1 to confirm.
7 PORS	Go back to the previous page.
9 wxyz	Go to the next page.
ОК	Go to the next step.
	(Print, Back and Exit are available.)
清除 Clear	Go back to the fax list.
	Print the fax.
	Do one of the following:
Mono Start	Press 1 to print the whole message.
	Press 2 to print only the displayed page.
	Press 3 to print from the displayed page.
	(After printing, you can choose to delete or re-print the fax.)

How to delete all faxes in the list

- 1 Press Fax Preview.
- Press ▲ or ▼ to choose Delete All. Press OK.
 Press 1 to confirm.
- 3 Press Stop/Exit.

How to print all faxes in the list

- 1 Press Fax Preview.
- Press ▲ or ▼ to choose Print All. Press OK.
- 3 Press Stop/Exit.

Telephone and external devices

Voice operations

Tone or pulse

If you have a Pulse dialling service, but need to send tone signals (for example, for telephone banking), follow the instructions below:

- 1 Pick up the handset of the external telephone.
- 2 Press # on the machine's control panel. Any digits dialled after this will send tone signals.

When you hang up, the machine will return to the Pulse dialling service.

Fax/Tel mode

When the machine is in Fax/Tel mode, it will use the F/T Ring (fast double-ring) to alert you to pick up a voice call.

If you are at an external telephone, lift the handset of the external telephone, and then press **Hook** to answer.

If you are at an extension telephone, you'll need to lift the handset during the F/T Ring Time and then press # 5 1 between the fast double-rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing * 5 1.

Phone line services

Your machine supports the Caller ID subscriber telephone service that some telephone companies offer.

Features like Voice Mail, Call Waiting, Call Waiting/Caller ID, RingMaster, answering services, alarm systems or other custom features on one phone line may create problems with the operation of your machine.

Do you have Voice Mail?

If you have Voice Mail on the phone line that you will install your new machine on, there is a strong possibility that Voice Mail and the machine will conflict with each other while receiving incoming calls. However, the Distinctive Ring feature allows you to use more than one number on your line, so both Voice Mail and the machine can work together without any problems. If each one has a separate phone number, neither will interfere with the other's operations.

If you decide to get the Distinctive Ring service from the telephone company, you will need to follow the directions on next page to 'register' the new Distinctive Ring pattern they give you. This is so your machine can recognise its incoming calls.

Telephone Service

The caller ID feature of this machine lets you use the caller ID subscriber service offered by certain telephone companies.

Caller ID (Caller IDentification) (not available in certain area)

The Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because caller IDs are received and stored in your fax machine memory. Besides the standard Caller ID feature, you can also select a single caller's phone number and call back.



FSK.

- To get the Caller ID service, you have to apply for it at your local telephone company.
- FSK and DTMF are the two modes for displaying your calls.
 The default mode of this machine is

Please ask your local telephone company for whether your mode is FSK or DTMF.

If your local telephone company uses DTMF mode, please switch your mode as follows. Contact your local telephone company or Brother dealer in the case that the feature does not work normally.

Caller ID feature is not available in the following situation:

- 1 You have not applied for it at your local telephone company.
- 2 The fax machine is connected to an internal switchboard or other switch device.
- 3 Due to the switchboard problems or line problems of local telephone companies, the feature may not work in some areas.

Advantages of Caller ID

For Business

All businesses profit from a quicker response to customer calls.

For Home

Residential customers can protect themselves from unwanted calls.

Setup Method

- Press Menu.
- Press **A** or **V** to choose Fax. Press **OK**.
- Press ▲ or ▼ to choose Miscellaneous. Press OK.
- Press ▲ or ▼ to choose Caller ID Type.
- Press ◀ or ▶ to choose AUTO, FSK or DTMF. Press **OK**.
- Press Stop/Exit.

Caller ID feature

The Caller ID feature of this machine lets you use the Caller ID subscriber service offered by many local phone companies.

You can view the list or choose one of these numbers to fax to, add to Speed Dial or delete from the history. (See Caller ID history on page 49.)

After a few rings, the screen displays the telephone number of your caller (or name, if available). Once you answer the call, the Caller ID information disappears from the screen, but the call information remains stored in the Caller ID memory.

- You will see the first 20 characters of the number or name.
- ID Unknown display means call originates outside your Caller ID service area.
- ID Withheld display means the caller has intentionally blocked transmission of information.

You can print a list of the Caller ID information received by your machine. (See How to print a report in chapter 6 in the Advanced User's Guide.)



Mote

You can print a list of Caller ID information received by your machine.

Caller ID service varies with different carriers. Call your local phone company to determine the kind of service available in your area.


Connecting an external TAD (telephone answering device)

You may choose to connect an external answering device. However, when you have an **external** TAD on the same telephone line as the machine, the TAD answers all calls and the machine "listens" for fax calling (CNG) tones. If it hears them, the machine takes over the call and receives the fax. If it does not hear CNG tones, the machine lets the TAD continue playing your outgoing message so your caller can leave you a voice message.

The TAD must answer within two rings (the recommended setting is two rings). The machine cannot hear CNG tones until the TAD has answered the call, and with four rings there are only 8 to 10 seconds of CNG tones left for the fax "handshake". Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.



If you do not receive all your faxes, shorten the Ring Delay setting on your external TAD.

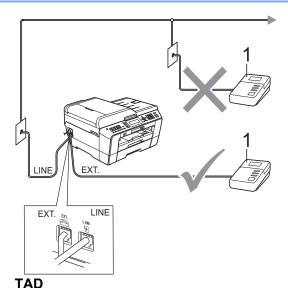

When the TAD answers a call, the LCD shows Telephone.

IMPORTANT

DO NOT connect a TAD elsewhere on the same telephone line.

Connections settings

The external TAD must be connected as shown in the previous illustration.

- 1 Set your external TAD to one or two rings. (The machine's Ring Delay setting does not apply.)
- Record the outgoing message on your external TAD.
- Set the TAD to answer calls.
- 4 Set the Receive Mode to

 External TAD. (See Receive Modes on page 35.)

Recording an outgoing message (OGM) on an external TAD

Timing is important in recording this message.

- 1 Record 5 seconds of silence at the beginning of your message. (This allows your machine time to listen for the fax CNG tones of automatic transmissions before they stop.)
- 2 Limit your speaking to 20 seconds.



We recommend beginning your OGM with an initial 5-second silence because the machine cannot hear fax tones over a resonant or loud voice. You may try omitting this pause, but if your machine has trouble receiving, then you must re-record the OGM to include it.

Multi-line connections (PABX)

Most offices use a central telephone system.

Brother recommends that all our machines be connected to a discreet (dedicated) line. Although a particular PABX may appear to work with a particular model of fax machine, we cannot guarantee that the unit will operate correctly.


While it is often relatively simple to connect a fax machine to a PABX, (Private Automatic Branch Exchange), we suggest that you contact the company that installed your telephone system and ask them to connect the fax machine for you.

Brother does not recommend the use of a PABX line. PABX limitations in general can cause some functions of the fax machine not to work correctly.

External and extension telephones

Connecting an external or extension telephone

You can connect a separate telephone to your machine as shown in the diagram below.

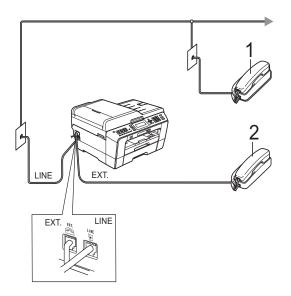

- 1 Extension telephone
- 2 External telephone

When you are using a telephone on the same phone line, the LCD shows Telephone.

Operation from external and extension telephones

If you answer a fax call on an extension or an external telephone, you can make your machine take the call by using the Remote Activation Code. When you press the Remote Activation Code * 5 1, the machine starts to receive the fax.

If the machine answers a voice call and fast double-rings for you to take over, use the Remote Deactivation Code # 5 1 to take the call at an extension telephone. (See *F/T Ring Time (Fax/Tel mode only)* on page 37.)

If you answer a call and no one is on the line:

You should assume that you're receiving a manual fax.

Press * 5 1 and wait for the chirp or until the LCD shows Receiving, and then hang up.



You can also use the Fax Detect feature to make your machine automatically take the call. (See *Fax Detect* on page 38.)

Using a cordless external telephone

Once the base unit of the cordless telephone has been connected to the same telephone line as the machine (see *External and extension telephones* on page 44), it is easier to answer calls during the Ring Delay if you carry the cordless handset around with you.

If you let the machine answer first, you will have to go to the machine so you can press **Hook** to send the call to the cordless handset.

Using remote codes

Remote Activation code

If you answer a fax call on an extension or external telephone, you can tell your machine to receive it by dialling the Remote Activation Code * 5 1. Wait for the chirping sounds then replace the handset. (See *Fax Detect* on page 38.)

If you answer a fax call at the external telephone, you can make the machine receive the fax by pressing **Mono Start** and choose Receive when you select the Fax Mode to Advanced Mode. (See Setting the Fax Logic (sending and receiving sequence) on page 9.).

Remote Deactivation Code

If you receive a voice call and the machine is in F/T mode, it will start to sound the F/T Ring (fast double-ring), after the initial ring delay. If you pick up the call on an extension telephone you can turn the F/T Ring off by pressing # 5 1 (make sure you press this between the rings).

If the machine answers a voice call and fast double-rings for you to take over, you can take the call at the external telephone by pressing **Hook**.

Changing the remote codes

If you want to use Remote Activation, you have to turn on the remote codes. The preset Remote Activation Code is * 5 1. The preset Remote Deactivation Code is # 5 1. If you want to, you can replace them with your own codes.

- 1 Press Menu.
- Press ▲ or ▼ to choose Fax. Press OK.
- 3 Press ▲ or ▼ to choose
 Setup Receive.
 Press OK.
- 4 Press ▲ or ▼ to choose Remote Codes.
- 5 Press ◀ or ▶ to choose on (or off). Press OK.
- 6 Enter the new Remote Activation Code. Press **OK**.
- 7 Press ▲ or ▼ to choose Deact.Code: and enter the new Remote Deactivation Code.
 Press OK.
- 8 Press Stop/Exit.



- If you are always disconnected when accessing your external TAD remotely, try changing the Remote Activation Code and Remote Deactivation Code to another three-digit code using the numbers 0-9, *, #.
- Remote Codes might not work with some telephone systems.

Dialling and storing numbers

How to dial

 
Manual dialling

Press all of the digits of the fax or telephone number.



One Touch Dialling

Your machine has 8 One Touch keys where you can store 16 fax or telephone numbers for automatic dialling.



Press the One Touch key that stores the number you want to call. (See *Storing One Touch Dial numbers* on page 50.) To access numbers 9 to 16, hold down **Shift** as you press the One Touch key.

Speed Dialling

1 Press (Phone Book).



You can also choose Phone Book by pressing (FAX).

- 2 Press ▲ or ▼ to choose Search.
 Press OK.
- 3 Do one of the following:
 - Press A or V to choose
 Alphabetic Order or
 Numeric Order.

Press **OK**.

If you have two numbers in the location, press ▲ or ▼ to choose the number you want to call.

Press **OK**.

■ Enter the 2-digit Speed Dial number using the dial pad. (See *Storing* Speed Dial numbers on page 51.)



If the LCD shows Not Registered when you enter or search a Speed Dial number that has not been stored at this location.

Search

You can search for names you have stored in the One Touch and Speed Dial memory.

- 1 Press (Phone Book).
 You can also choose Phone Book by pressing (FAX).
- Press ▲ or ▼ to choose Search. Press OK.
- 3 Press A or ▼ to choose
 Alphabetic Order or
 Numeric Order.
 Press OK.



- Press * to make the LCD font size larger.
- · Press # to make the LCD font size smaller.
- 4 If you chose Alphabetic Order in step ③, use the dial pad to enter the first letter of the name, and then press ▲ or ▼ to choose the name and number you want to call.

Press OK.

Fax Redial

If you are sending a fax manually and the line is busy, press **Redial/Pause**, and then press **Mono Start** or **Color Start** to try again. If you want to make a second call to a number you recently dialled, you can press **Redial/Pause** and choose one of the last 30 numbers from the Outgoing Call List.

Redial/Pause only works if you dialled from the control panel. *If you are sending a fax automatically* and the line is busy, the machine will automatically redial up to three times at five minute intervals.

- 1 Press Redial/Pause.
- Press ▲ or ▼ to choose the number you want to redial.

 Press OK.
- 3 Press A or V to choose Send a fax. Press OK.
- 4 Press Mono Start or Color Start.



In Real Time Transmission the automatic redial feature does not work when using the scanner glass.

Additional Dialling Operations

Outgoing Call history

The last 30 numbers you sent a fax to will be stored in the outgoing call history. You can choose one of these numbers to fax to, add to One Touch or Speed Dial, or delete from the history.

- 1 Press Redial/Pause.
 You can also choose Outgoing Call
 by pressing (FAX).
- Press ▲ or ▼ to choose the number you want.
 Press OK.
- 3 Do one of the following:
 - To send a fax, press \(\Delta\) or \(\Times\) to choose Send a fax.

Press **OK**.

Press Mono Start or Color Start.

■ If you want to store the number, press A or ▼ to choose Add To Phone Book.

Press OK.

(See Storing One Touch numbers from Outgoing Calls or Storing Speed Dial numbers from Outgoing Calls in chapter 5 of the Advanced User's Guide.)

- Press ▲ or ▼ to choose Delete.
 Press OK.
 Press 1 to confirm.
- 4 Press Stop/Exit.

Caller ID history

This feature requires the Caller ID subscriber service offered by many local telephone companies. (See Caller ID (Caller IDentification) (not available in certain area) on page 41.)

The numbers, or names if available, from the last 30 faxes and telephone calls you received will be stored in the Caller ID history. You can view the list or choose one of these numbers to fax to, add to One Touch or Speed Dial, or delete from the history. When the thirty-first call comes into the machine, it replaces information about the first call.



If you are not a Caller ID subscriber, you can still view call dates from the Caller ID history, and delete entries from the list.

- 1 Press Redial/Pause and press *.
 You can also choose
 Caller ID hist. by pressing
 (FAX).
- Press ▲ or ▼ to choose the number you want.
 Press OK.
- 3 Do one of the following:
 - To send a fax, press \(\Delta \) or \(\Tilde{\text{to choose}} \) Send a fax.

Press **OK**.

Press Mono Start or Color Start.

■ If you want to store the number, press ▲ or ▼ to choose

Add To Phone Book.

Press OK.

(See Storing One Touch numbers from the Caller ID history or Storing Speed Dial numbers from the Caller ID history in chapter 5 of the Advanced User's Guide.)

■ If you want to delete the number, press ▲ or ▼ to choose Delete. Press OK. Press 1 to confirm.



Press Stop/Exit.



You can print the Caller ID list. (See How to print a report in chapter 6 of the Advanced User's Guide.)

Storing numbers

You can set up your machine to do the following types of easy dialling: One Touch, Speed Dial and Groups for broadcasting faxes. When you dial a Quick Dial number, the LCD shows the number.



If you lose electrical power, the Quick Dial numbers that are in the memory will not be lost.

Storing a pause

Press Redial/Pause to put a 3.5-second pause between numbers. If you are dialling overseas, you can press Redial/Pause as many times as needed to increase the length of the pause.

Storing One Touch Dial numbers

Your machine has 8 One Touch keys where you can store 16 fax or telephone numbers for automatic dialling. To access numbers 9 to 16 hold down Shift as you press the One Touch key.



Press the One Touch key where you want to store the number. Press 1 to choose Yes.



You can also store one Touch Dial numbers pressing $\stackrel{\square}{\blacktriangle}$ (**Phone Book**).

Press ▲ or ▼ to choose Set One Touch. Press OK.

Press ▲ or ▼ to choose the location where you want to store the number. Press OK.

- 2 Do one of the following:
 - Enter the name (up to 16 characters) using the dial pad.

Press **OK**.

(To help you enter letters, see *Entering Text* on page 123.)

- To store the number without a name, press **OK**.
- 3 Enter the fax or telephone number (up to 20 digits).
 Press **OK**.



If you downloaded Internet Fax:

If you want to store an E-mail address to use with Internet fax or Scan to E-mail server, press ▲ to choose Dial Type, and then press ◄ or ▶ to change the option to E-Address. Press ▼ to choose FAX/TEL/MAIL and then enter the E-mail address. (See *Entering Text* on page 123.)

- 4 Press ▲ or ▼ to choose Complete.
 Press OK.
- 5 Press Stop/Exit.

Storing Speed Dial numbers

Names and numbers can be stored as two-digit Speed Dial locations. You can store up to 100 different Speed Dial locations. When you dial you will only have to press a few keys (for example: (Phone Book), Search, OK, the two-digit number, and Mono Start or Color Start).

- 1 Press (Phone Book).
- Press ▲ or ▼ to choose
 Set Speed Dial.
 Press OK.

Press ▲ or ▼ to choose the Speed Dial location where you want to store the number.

Press OK.

- 4 Do one of the following:
 - Enter the name (up to 16 characters) using the dial pad.

Press OK.

(To help you enter letters, see *Entering Text* on page 123.)

- To store the number without a name, press **OK**.
- Enter the fax or telephone number (up to 20 digits).

 Press **OK**.
- 6 Do one of the following:
 - Enter the second fax or telephone number (up to 20 digits).

Press OK.

- If you do not want to store a second number, press **OK**.
- 7 Press ▲ or ▼ to choose Complete.
 Press OK.
- 8 Do one of the following:
 - To store another Speed Dial number, go to step ③.
 - If you are finished storing numbers, press Stop/Exit.

Changing One Touch or Speed Dial names or numbers

You can change a One Touch or Speed Dial name or number that has already been stored.

- 1 Press [□] (Phone Book).
- Press ▲ or ▼ to choose
 Set One Touch Or
 Set Speed Dial.
 Press OK.
- Press ▲ or ▼ to choose the 2-digit One Touch or Speed Dial location you want to change. Press OK.
- Do one of the following:
 - Press ▲ or ▼ to choose Change. Press OK.
 - Press ▲ or ▼ to choose Delete. Press OK. Press 1 to confirm. Go to step ⑧.



How to change the stored name or number:

If you want to change a character, press ◀ or ▶ to position the cursor under the character you want to change, and then press Clear. Re-enter the character.

If you want to change the name, press

▲ or ▼ to choose Name, then press ▶ and enter the new name using the dial pad (up to 16 characters).

Press OK.

(See Entering Text on page 123.)

- 6 If you want to change a Fax/Tel number, do one of the following:
 - If you want to change the first Fax/Tel number, press ▲ or ▼ to choose Fax/Tel: (One Touch Dial) or Fax/Tel1: (Speed Dial), then press ▶ and enter the new fax or telephone number using the dial pad (up to 20 digits). Press OK.
 - If you want to change the second Fax/Tel number, press ▲ or ▼ to choose Fax/Tel2: (Speed Dial), then press ▶ and enter the new fax or telephone number using the dial pad (up to 20 digits). Press OK.
 - If you want to change both numbers in this Speed Dial location, repeat this step and choose the other number.
- 7 Press ▲ or ▼ to choose Complete.
 Press OK.
- 8 Press Stop/Exit.


8

Making copies


How to copy

The following steps show the basic copy operation. For details about each option, see the *Advanced User's Guide*.

1 Make sure you are in copy mode, press
(COPY) to illuminate it in blue.

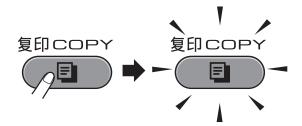

■ The LCD shows:

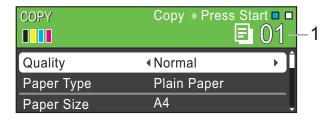

1 No. of Copies

You can enter the number of copies you want by using the dial pad.



The default setting is Fax mode. You can change the amount of time that the machine stays in Copy mode after the last copy operation. (See *Mode Timer* in *chapter 1* of the *Advanced User's Guide*.)

- 2 Do one of the following to load your document:
 - Place the document *face up* in the ADF.

(See *Using the ADF* on page 28.)

- Place the document *face down* on the scanner glass.
 - (See *Using the scanner glass* on page 29.)
- If you want more than one copy, enter the number (up to 99).
- 4 Press Mono Start or Color Start.

Stop copying

To stop copying, press Stop/Exit.

Copy settings

You can change the following copy settings. Press **COPY** and then press ▲ or ▼ to scroll through the copy settings. When the setting you want is highlighted, then press ◀ or ▶ to choose your option, and press **OK**.

(Basic User's Guide)

For details about changing the following copy settings, see page 54.

- Paper Type
- Paper Size
- Tray Select

(Advanced User's Guide)

For details about changing the following copy settings, see chapter 7:

- Quality
- Enlarge/Reduce
- Page Layout
- 2 in 1 (ID)
- Stack/Sort
- Density
- Ink Save Mode
- Thin Paper Copy
- Skew Adjustment
- Book Copy
- Watermark Copy
- Duplex Copy
- Set New Default
- Factory Reset



If you want to sort copies, use the ADF.

Paper Options

Paper Type

If you are copying on special paper, set the machine for the type of paper you are using to get the best print quality.

- 1 Press (COPY).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Paper Type.
- Fress ◀ or ▶ to choose Plain Paper, Inkjet Paper, Brother BP71, Brother BP61, Other Glossy or Transparency.

Press OK.

6 If you do not want to change additional settings, press Mono Start or Color Start.

Paper Size

If you are copying on paper other than A4 size, you will need to change the paper size setting. You can copy only on A4, A5, A3, Photo 10×15 cm, Letter, Legal or Ledger paper.

- 1 Press (COPY).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Paper Size.
- 5 Press ◀ or ▶ to choose A4, A5, A3, 10x15cm, Letter, Legal or Ledger. Press OK.
- 6 If you do not want to change additional settings, press Mono Start or Color Start.

Tray Select

You can change the tray temporarily for the next copy. To change the default tray setting see *Tray use in Copy mode* on page 22.

- 1 Press (COPY).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press A or ▼ to choose Tray Select.
- 5 Press ◀ or ▶ to choose Tray#1,
 Tray#2 or Auto Select.
 Press OK.
- 6 If you do not want to change additional settings, press Mono Start or Color Start.



Poster copy is not available when you use Tray#2.

9

Printing photos from a memory card or USB Flash memory drive

PhotoCapture Center™ operations

Even if your machine is *not* connected to your computer, you can print photos directly from digital camera media or a USB Flash memory drive. (See *Print Images* on page 58.)

You can scan documents and save them directly to a memory card or USB Flash memory drive. (See How to scan to a memory card or USB Flash memory drive on page 59.)

If your machine is connected to a computer, you can access a memory card or USB Flash memory drive that is inserted in the front of the machine from your computer.

(See *PhotoCapture Center*[™] for Windows[®] or *Remote Setup & PhotoCapture Center*[™] for Macintosh in the *Software User's Guide*.)


Using a memory card or USB Flash memory drive

Your Brother machine has media drives (slots) for use with the following popular digital camera media: Memory Stick™, Memory Stick PRO™, Memory Stick Duo™, Memory Stick PRO Duo™, SD, SDHC, MultiMedia Card, MultiMedia Card plus and USB Flash memory drives.

The PhotoCapture Center™ feature lets you print digital photos from your digital camera at high resolution to get photo quality printing.

Getting started

Firmly put a memory card or USB Flash memory drive into the correct slot.

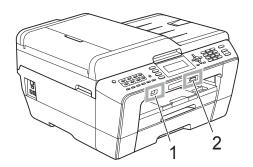

1 USB Flash memory drive



! IMPORTANT

The USB direct interface supports only a USB Flash memory drive, a PictBridge compatible camera, or a digital camera that uses the USB mass storage standard. Any other USB devices are not supported.


2 Memory card slot

Slot	Compatible memory cards	
Upper slot		Memory Stick™
		Memory Stick PRO™
		Memory Stick Duo™
	< <	Memory Stick PRO Duo™
		Memory Stick Micro™
		(Adapter required)
Lower slot		SD
		SDHC
		MultiMedia Card
		MultiMedia Card plus
		mini SD (Adapter required)
		micro SD (Adapter required)
		mini SDHC (Adapter required)
		micro SDHC (Adapter required)
		MultiMedia Card mobile (Adapter required)

! IMPORTANT

DO NOT insert a Memory Stick Duo™ into the lower SD slot, this may cause damage to the machine.

PHOTO CAPTURE key indications:

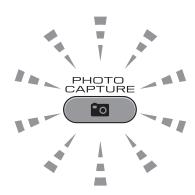

- PHOTO CAPTURE light is on, the memory card or USB Flash memory drive is correctly inserted.
- PHOTO CAPTURE light is off, the memory card or USB Flash memory drive is not correctly inserted.
- PHOTO CAPTURE light is blinking, the memory card or USB Flash memory drive is being read or written to.

! IMPORTANT

DO NOT unplug the power cord or remove the memory card or USB Flash memory drive from the media drive (slot) or USB direct interface while the machine is reading or writing to the memory card or USB Flash memory drive (the **PHOTO CAPTURE** key is blinking). **You will lose your data or damage the card.**

The machine can only read one device at a time.

Print Images

View Photos

You can preview your photos on the LCD before you print them. If your photos are large files there may be a delay before each photo is displayed on the LCD.

Make sure you have put the memory card or USB Flash memory drive in the correct slot.

> Press ((PHOTO CAPTURE).

- Press ▲ or ▼ to choose View Photo(s). Press **OK**.
- 3 Press ◀ or ▶ to choose your photo.
- 4 Enter the number of copies you want using the dial pad.
- 5 Repeat step 3 and step 4 until you have chosen all the photos.



Press Clear to go back to the previous level.

- After you have chosen all the photos, do one of the following:
 - Press **OK** and change the print settings. (See PhotoCapture Center™ print settings on page 58.)
 - If you do not want to change any settings, press Color Start to print.

PhotoCapture Center™ print settings

 
You can change the print settings temporarily.

The machine returns to its default settings after 3 minutes, or if the Mode Timer returns the machine to Fax mode. (See Mode Timer in chapter 1 of the Advanced User's Guide.)



M Note

You can save the print settings you use most often by setting them as the default. (See Setting your changes as a new default in chapter 8 of the Advanced User's Guide.)



No. of prints

(For View Photo(s), Search by Date, Slide Show)

You can see the total number of photos that will be printed.

(For Print All Photos, Print Photos, Enhance Photos, Trimming)

You can see the number of copies of each photo that will be printed.

(For DPOF printing) This does not appear.

How to scan to a memory card or USB Flash memory drive

You can scan monochrome and color documents onto a memory card or USB Flash memory drive. Monochrome documents will be stored in PDF (*.PDF) or TIFF (*.TIF) file formats. Color documents may be stored in PDF (*.PDF) or JPEG (*.JPG) file formats. The factory setting is Color 200 and the default file format is PDF. The machine automatically creates file names based on the current date. (For details, see the *Quick Setup Guide*.) For example, the fifth image scanned on July 1, 2011 would be named 01071105.PDF. You can change the color and quality.

Quality	Selectable File Format
Color 100	JPEG/PDF
Color 200	JPEG/PDF
Color 300	JPEG/PDF
Color 600	JPEG/PDF
B/W 100	TIFF/PDF
B/W 200	TIFF/PDF
B/W 300	TIFF/PDF

1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.

! IMPORTANT

DO NOT take out the memory card or USB Flash memory drive while **PHOTO CAPTURE** is blinking to avoid damaging the card, USB Flash memory drive or data stored on them.

2 Load your document.

- When you want to scan to a memory card or USB Flash memory drive, press (SCAN).
- 4 Press ▲ or ▼ to choose
 Scan to Media.



Press **OK**.

- 5 Do one of the following:
 - To change the quality, press **A** or **V** to choose Quality.

Go to step 6.

- Press Mono Start or Color Start to start scanning without changing additional settings.
- 6 Press ◀ or ▶ to choose Color 100, Color 200, Color 300, Color 600, B/W 100, B/W 200 or B/W 300. Press OK.
- 7 Do one of the following:
 - To change the file type, go to step 3.
 - Press Mono Start or Color Start to start scanning without changing additional settings.
- 8 Press ▲ or ▼ to choose File Type.

 Press ◀ or ▶ to choose JPEG, PDF or

 TIFF.

 Press OK.



- If you chose a Color resolution in step 6, you cannot choose TIFF.
- If you chose a B/W resolution in step 6, you cannot choose JPEG.

- 9 Do one of the following:
 - To change the file name, go to step **①**.
 - Press Mono Start or Color Start to start scanning without changing additional settings.



If you are using the scanner glass of the machine you can change the glass scan size.

Press ▲ or ▼ to choose Glass ScanSize and ◀ or ▶ to choose A4, A3, Letter, Legal or Ledger.

The file name is assigned automatically; however, you can enter a name of your choice using the dial pad.
Press ▲ or ▼ to choose File Name.

Enter the new name. (See Entering Text on page 123.)

You can only change the first 6 characters.

Press **OK**.



Press Clear to delete the current name.

11 Press Mono Start or Color Start.



You can place multiple documents on the scanner glass and scan them as separate files. (See *Auto Crop* in *chapter 8* of the *Advanced User's Guide*.)

10

How to print from a computer

Printing a document

The machine can receive data from your computer and print it. To print from a computer, install the printer driver.

(See *Printing* for Windows[®] or *Printing* and *Faxing* for Macintosh in the *Software User's Guide* for details about the print settings.)

- Install the Brother printer driver on the Installation CD-ROM. (See the *Quick Setup Guide*.)
- 2 From your application, choose the Print command.
- 3 Choose the name of your machine in the **Print** dialog box and click **Properties**.
- 4 Choose the settings you want in the Properties dialog box.
 - Media Type
 - Print Quality
 - Paper Size
 - Orientation
 - Colour/Greyscale
 - **Ink Save Mode**
 - Scaling
- 5 Click **OK**.
- 6 Click **OK** to begin printing.

11

How to scan to a computer

Scanning a document

There are several ways to scan documents. You can use the **SCAN** key on the machine or the scanner drivers on your computer.

- 1 To use the machine as a scanner, install a scanner driver. If the machine is on a Network, configure it with a TCP/IP address.
 - Install the scanner drivers on the Installation CD-ROM. (See the Quick Setup Guide and Scanning in the Software User's Guide.)
 - Configure the machine with a TCP/IP address if network scanning does not work. (See Configuring Network Scanning in the Software User's Guide.)
- 2 Load your document. (See How to load documents on page 28.)
 - Use the ADF to scan multiple pages of documents. It feeds each sheet automatically.
 - Use the scanner glass to scan a page of a book or one sheet at a time.
- Oo one of the following:
 - To scan using the **SCAN** key, go to Scanning using the scan key.
 - To scan using a scanner driver at your computer, go to Scanning using a scanner driver.

Scanning using the scan key

For more information, see *Using the Scankey* in the *Software User's Guide*.

- 1 Press (SCAN).
- Choose the scan mode you want.
 - Scan to File
 - Scan to Media
 - Scan to Network
 - Scan to FTP
 - Scan to E-mail
 - Scan to OCR ¹
 - Scan to Image
 - 1 (Macintosh users) Presto! PageManager must be downloaded and installed before use. See Accessing Brother Support (Macintosh) on page 3 for further instructions.
- (For network users)
 Choose the computer you want to send the data to.
- 4 Press **Start** to begin scanning.

Scanning using a scanner driver

For more information, see Scanning a document using the TWAIN driver or Scanning a document using the WIA driver in the Software User's Guide.

- 1 Start a scanning application and click the **Scan** button.
- 2 Adjust the settings such as Resolution, Brightness and Scan Type in the Scanner Setup dialog box.
- 3 Click **Start** or **Scan** to begin scanning.



Routine maintenance

Replacing the ink cartridges

Your machine is equipped with an ink dot counter. The ink dot counter automatically monitors the level of ink in each of the four cartridges. When the machine detects an ink cartridge is running out of ink, the machine will tell you with a message on the LCD.



For example, when one of the ink cartridge is nearly empty, the LCD will display Ink low (name of color).

You should purchase a replacement cartridge in preparation for when the machine indicates the color is completely empty.

When one of the ink cartridge is empty, the LCD will display Cannot Print or B&W Print Only.

You should only replace the actual ink cartridge when this message
Cannot Print or B&W Print Only appears on the LCD.

The LCD will tell you which ink cartridge is low or needs replacing. Be sure to follow the LCD prompts to replace the ink cartridges in the correct order.

Even though the machine tells you to replace an ink cartridge, there will be a small amount of ink left in the ink cartridge. It is necessary to keep some ink in the ink cartridge to prevent air from drying out and damaging the print head assembly.


IMPORTANT


Brother multifunction machines are designed to work with ink of a particular specification and will work to a level of optimum performance and reliability when used with Brother Original ink cartridges. Brother cannot guarantee this optimum performance and reliability if ink or ink cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than Brother Original cartridges or the refilling of used cartridges with ink from other sources. If damage is caused to the print head or other parts of this machine as a result of using incompatible products with this machine, any repairs required as a result may not be covered by the warranty.

Open the ink cartridge cover.

If one or more of the ink cartridges have reached the end of their life, the LCD shows B&W Print Only or Cannot Print.


Press the lock release lever as shown to release the cartridge indicated on the LCD. Remove the cartridge from the machine.

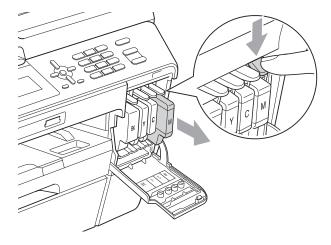


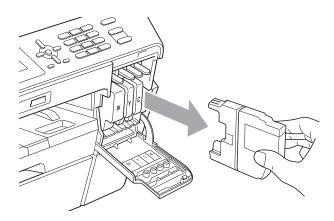


3 Open the new ink cartridge bag for the color shown on the LCD, and then take out the ink cartridge.

4 Turn the green release lever on the orange protective packing (1) clockwise until it clicks to release the vacuum seal. Then remove the orange protective packing as shown.

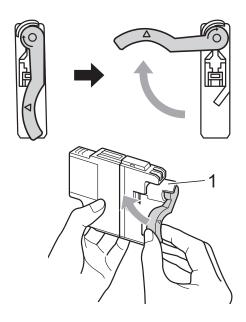


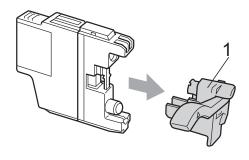

 5 Each color has its own correct position. Insert the ink cartridge in the direction of the arrow on the label.



Gently push the back of the ink cartridge marked "PUSH" until it clicks, and then close the ink cartridge cover.

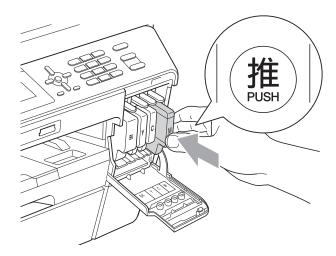

7 The machine will automatically reset the ink dot counter.



- If you replaced an ink cartridge, for example Black, the LCD may ask you to verify that it was a brand new one (for example, Did You Change BK Black). For each new cartridge you installed, press 1 (Yes) to automatically reset the ink dot counter for that color. If the ink cartridge you installed is not a brand new one, be sure to press 2 (No).
- If the LCD shows No Ink Cartridge or Cannot Detect after you install the ink cartridges, check that the ink cartridges are installed correctly.

A CAUTION

If ink gets in your eyes, wash it out with water at once and call a doctor if you are concerned.


IMPORTANT

- DO NOT take out ink cartridges if you do not need to replace them. If you do so, it may reduce the ink quantity and the machine will not know the quantity of ink left in the cartridge.
- DO NOT touch the cartridge insertion slots. If you do so, the ink may stain your skin.
- If ink gets on your skin or clothing immediately wash it off with soap or detergent.
- If you mix the colors by installing an ink cartridge in the wrong position, clean the print head several times after correcting the cartridge installation.
- Once you open an ink cartridge, install it in the machine and use it up within six months of installation. Use unopened ink cartridges by the expiration date written on the cartridge package.
- DO NOT dismantle or tamper with the ink cartridge, this can cause the ink to leak out of the cartridge.


Cleaning and checking the machine

Cleaning the scanner glass

- 1 Unplug the machine from the electrical socket.
- 2 Lift the document cover (1). Clean the scanner glass (2) and the white plastic (3) with a soft lint-free cloth moistened with a non-flammable glass cleaner.

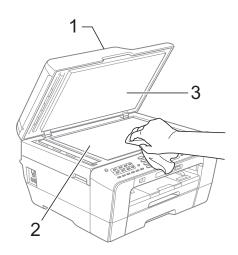

3 In the ADF unit, clean the white bar (1) and the glass strip (2) with a lint-free cloth moistened with a non-flammable glass cleaner.

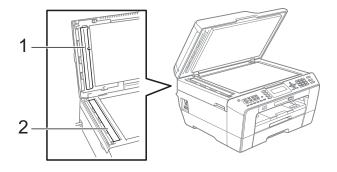

4 Re-connect the power cord.



In addition to cleaning the glass strip with a non-flammable glass cleaner, run your finger tip over the glass strip to see if you can feel anything on it. If you feel dirt or debris, clean the glass strip again concentrating on that area. You may need to repeat the cleaning process three or four times. To test, make a copy after each cleaning attempt.



When there is a spot of dirt or correction fluid on the glass strip the printed sample shows a vertical line.



After the glass strip is cleaned the vertical line is gone.

Cleaning the print head

To maintain good print quality, the machine will automatically clean the print head when needed. You can start the cleaning process manually if there is a print quality problem.

Clean the print head and ink cartridges if you get a horizontal line in the text or graphics, or blank text on your printed pages. You can clean Black only, three colors at a time (Yellow/Cyan/Magenta), or all four colors at once.

Cleaning the print head consumes ink. Cleaning too often uses ink unnecessarily.

! IMPORTANT

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 Ink Management.
 Press OK.
- 3 Press A or ▼ to choose Cleaning. Press OK.
- Press A or V to choose Black, Color or All.

Press **OK**.

The machine cleans the print head. When cleaning is finished, the machine will go back to the standby mode automatically.



If you clean the print head at least five times and the print has not improved, try installing a new Brother Original Innobella™ ink cartridge for each problem color. Try cleaning the print head again up to five more times. If the print has not improved call your Brother dealer.

Checking the print quality

If faded or streaked colors and text appear on your output, some of the nozzles may be clogged. You can check this by printing the Print Quality Check Sheet and looking at the nozzle check pattern.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 Ink Management.
 Press OK.
- 3 Press A or ▼ to choose Test Print.
 Press OK.
- Press ▲ or ▼ to choose
 Print Quality.
 Press OK.
- 5 Press Color Start.
 The machine begins printing the Print Quality Check Sheet.
- 6 Check the quality of the four color blocks on the sheet.
- 7 The LCD asks you if the print quality is OK.

Do one of the following:

- If all lines are clear and visible, press 1 (Yes) to finish the Print Quality check and go to step 1.
- If you can see missing short lines as shown below, press 2 to choose No.

OK Poor





8 The LCD asks you if the print quality is OK for black and the three colors. Press 1 (Yes) or 2 (No).

The LCD asks you if you want to start cleaning.

Press 1 (Yes).

The machine starts cleaning the print head.

10 After cleaning is finished, press Color Start.

The machine starts printing the Print Quality Check Sheet again. Return to step **6**.

11 Press Stop/Exit.

If you repeat this procedure at least five times and the print quality is still poor, replace the ink cartridge for the clogged color.

After replacing the ink cartridge, check the print quality. If the problem still exists, repeat the cleaning and test print procedures at least five times for the new ink cartridge. If ink is still missing, call your Brother dealer.

! IMPORTANT

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.





When a print head nozzle is clogged the printed sample looks like this.



After the print head nozzle is cleaned, the horizontal lines are gone.

Checking the print alignment

You may need to adjust the print alignment after transporting the machine, if your printed text becomes blurred or images become faded.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 Ink Management.
 Press OK.
- 3 Press A or ▼ to choose Test Print. Press OK.
- 4 Press ▲ or ▼ to choose Alignment. Press OK.
- 5 Press Mono Start or Color Start.
 The machine starts printing the
 Alignment Check Sheet.
- 6 For the "A" pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 7 For the "B" pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 8 For the "C" pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 9 For the "D" pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 10 Press Stop/Exit.

B

Troubleshooting

Error and Maintenance messages

As with any sophisticated office product, errors may occur and consumable items may need to be replaced. If this happens, your machine identifies the error and shows an error message. The most common error and maintenance messages are shown below.

You can correct most errors and routine maintenance by yourself. If you need more help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at http://solutions.brother.com/.

Error Message	Cause	Action
B&W Print Only Replace Ink	have reached the end of their life. Replacing the ink cartridges	
_	You can use the machine in monochrome mode for approximately four weeks depending on the number of pages you print.	on page 64.)
		If you unplug the machine, or take out the ink cartridge, you cannot use the machine until you change to a new ink
	While this message appears on the LCD, each operation works in the following way:	cartridge.
	■ Printing	
	If you click Greyscale in the Advanced tab of the printer driver you can use the machine as a monochrome printer.	
	■ Copying	
	If the paper type is set to Plain Paper you can make copies in monochrome.	
	Duplex copy is not available when this message appears.	
	■ Faxing	
	If the paper type is set to Plain Paper or Inkjet Paper, the machine will receive and print the faxes in monochrome.	
	If a sending machine has a color fax, the machine's "handshake" will ask that the fax be sent as monochrome.	
	If the paper type is set to Other Glossy, Brother BP71 or Brother BP61 the machine will stop all print operations.	

Error Message	Cause	Action
Cannot Detect	You installed a new ink cartridge too quickly and the machine did not detect it.	Take out the new ink cartridge and re-install it slowly until it clicks.
	If you are using non Brother Original ink the machine may not detect the ink cartridge.	Replace the cartridge with a Brother Original ink cartridge. If the error message remains, contact your Brother dealer.
	An ink cartridge is not installed correctly.	Take out the new ink cartridge and re-install it slowly until it clicks. (See Replacing the ink cartridges on page 64.)
Cannot Print Replace Ink	One or more of the ink cartridges have reached the end of their life. The machine will stop all print operations. While memory is available, monochrome faxes will be stored in the memory. If a sending machine has a color fax, the machine's "handshake" will ask that the fax be sent as monochrome.	Replace the ink cartridges. (See Replacing the ink cartridges on page 64.)
Comm.Error	Poor telephone line quality caused a communication error.	If the problem continues, call the telephone company and ask them to check your telephone line.
Connection Fail	You tried to poll a fax machine that is not in Polled Waiting mode.	Check the other fax machine's polling setup.
Cover is Open	The scanner cover is not completely closed.	Lift the scanner cover and then close it again.
	The ADF cover is not completely closed.	Open the ADF cover and then close it again.
	The ink cartridge cover is not completely closed.	Firmly close the ink cartridge cover until it clicks.
Data Remaining	Print data is left in the machine's memory.	Press Stop/Exit . The machine will cancel the job and clear it from the memory. Try to print again.
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again. If calls are stopped repeatedly and you are using a VoIP (Voice over IP) system, try changing the Compatibility to Basic (for VoIP). (See <i>Telephone line interference / VoIP</i> on page 94.)
Document Jam	The document was not inserted or fed correctly, or the document scanned from the ADF was too long.	(See <i>Using the ADF</i> on page 28.) (See <i>Document jam</i> on page 78.)
High Temperature	The print head is too warm.	Allow the machine to cool down.

Error Message	Cause	Action
Hub is Unusable.	A Hub or USB Flash memory drive with Hub has been connected to the USB direct interface.	A Hub or USB Flash memory drive with Hub are not supported. Unplug the device from the USB direct interface.
Image Too Long.	The proportions of your photo are irregular so effects could not be added.	Choose a regularly proportioned image.
Image Too Small.	The size of your photo is too small to trim.	Choose a larger image.
Ink Absorber Full	Internal servicing required. This problem may be caused by the use of cartridges other than Brother Original cartridges or the refilling of empty cartridges with ink from other sources. If damage is caused to the print head or other parts of this machine as a result of using other brands of ink or ink cartridges, any repairs required as a result may not be covered by the warranty.	Call Brother Customer Service / your Brother dealer.
Ink Absorber NearFull	The ink absorber box or flushing box is near full.	Call Brother Customer Service / your Brother dealer.
Ink low	One or more of the ink cartridges are near the end of their life. If a sending machine has a color fax to send, your machine's "handshake" will ask that the fax be sent as monochrome. If the sending machine has the ability to convert it, the color fax will be printed at your machine as a monochrome fax.	Order a new ink cartridge. You can continue printing until the LCD shows Cannot Print. (See Replacing the ink cartridges on page 64.)
Low Temperature	The print head is too cold.	Allow the machine to warm up.
Media Error	The memory card is either corrupted, incorrectly formatted, or there is a problem with the memory card.	Put the card firmly into the slot again to make sure it is in the correct position. If the error remains, check the media drive (slot) of the machine by putting in another memory card that you know is working.
Media is Full.	The memory card or USB Flash memory drive you are using has no available space or already contains 999 files.	Your machine can only save to your memory card or USB Flash memory drive if it contains less than 999 files. Try deleting unused files to free some space and try again.
No Caller ID	There is no incoming call history. You did not receive calls or you have not subscribed to the Caller ID service from your telephone company.	If you want to use the Caller ID feature call your telephone company. (See Caller ID (Caller IDentification) (not available in certain area) on page 41.)

Error Message	Cause	Action
No File	The memory card or USB Flash memory drive in the media drive does not contain a .JPG file.	Put the correct memory card or USB Flash memory drive into the slot again.
No Ink Cartridge	An ink cartridge is not installed correctly.	Take out the new ink cartridge and reinstall it slowly until it clicks. (See Replacing the ink cartridges on page 64.)
No Paper Fed	The machine is out of paper or paper	Do one of the following:
	is not correctly loaded in the paper tray.	Refill the paper in the paper tray, and then press Mono Start or Color Start.
		Remove the paper and load it again and then press Mono Start or Color Start. (See Loading paper and other print media on page 10.)
	The paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Printer jam or paper jam</i> on page 79.
		If you see this error often when making a duplex copy or duplex print, the paper feed rollers may be stained with ink. Clean the paper feed rollers. (See Cleaning the paper feed rollers in appendix A of the Advanced User's Guide.)
	Paper powder has accumulated on the surface of the paper pick-up rollers and the back sides of the paper feed rollers.	Clean the paper pick-up rollers and the back sides of the paper feed rollers. (See Cleaning the paper pick-up rollers in appendix A of the Advanced User's Guide.)
	The Jam Clear Cover is not closed correctly.	Check the Jam Clear Cover is closed evenly at both ends. (See <i>Printer jam or paper jam</i> on page 79.)
	The paper was not inserted in the centre position of the manual feed slot.	Remove the paper and re-insert it in the centre of the manual feed slot, and then press Mono Start or Color Start . (See <i>Loading paper in the manual feed slot</i> on page 17.)
No Response/Busy	The number you dialled does not answer or is busy.	Verify the number and try again.
Not Registered	You tried to access a One Touch or Speed Dial number that is not programmed.	Set up the One Touch or Speed Dial number. (See Storing One Touch Dial numbers on page 50 and Storing Speed Dial numbers on page 51.)

Error Message	Cause	Action
Out of Memory	The machine's memory is full.	Copy operation in progress
		Press Stop/Exit and wait until the other operations in progress finish and then try again.
	The memory card or USB Flash memory drive you are using does not have enough free space to scan the documents.	Delete unused files from your memory card or USB Flash memory drive to make some free space and then try again.
Out of Fax Memory	The fax memory is full.	Do one of the following:
		■ Clear the data in the memory. To gain extra memory, you can turn off Memory Receive. (See <i>Turning off Memory Receive operations</i> in chapter 4 of the <i>Advanced User's Guide</i> .)
		■ Print the faxes that are in the memory. (See <i>Printing a fax from the memory</i> in <i>chapter 4</i> of the <i>Advanced User's Guide</i> .)
Paper Jam [Front]	Paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Paper is jammed at the front of the machine</i> on page 79.
		Make sure the paper length guide is set to the correct paper size. DO NOT extend the paper tray when you load A5 or smaller size paper.
Paper Jam [Front, Rear]	Paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Paper is jammed at the front and back of the machine</i> on page 81.
		Make sure the paper length guide is set to the correct paper size. DO NOT extend the paper tray when you load A5 or smaller size paper.
	More than one sheet of paper was placed in the manual feed slot. —OR— Another sheet of paper was placed in the manual feed slot before the LCD showed	Do not put more than one sheet of paper in the manual feed slot at any one time. Wait until the LCD shows Put paper in Manual Feed Slot Then Press Start before you feed the next sheet of paper in the manual feed slot.
	Put paper in Manual Feed Slot Then Press Start.	Remove the jammed paper by following the steps in <i>Paper is jammed at the front and back of the machine</i> on page 81.

Error Message	Cause	Action
Paper Jam [Rear]	Paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Paper is jammed at the back of the machine</i> on page 80.
		Make sure the paper length guide is set to the correct paper size. DO NOT extend the paper tray when you load A5 or smaller size paper.
	Paper powder has accumulated on the surface of the paper pick-up rollers and the back sides of the paper feed rollers.	Clean the paper pick-up rollers and the back sides of the paper feed rollers. (See Cleaning the paper pick-up rollers in appendix A of the Advanced User's Guide.)
Unable to CleanXX	The machine has a mechanical	Open the scanner cover and remove
Unable to Init.XX	problem.	any foreign objects and paper scraps from inside the machine. If the error
Unable to PrintXX	—OR—	message continues, disconnect the
Unable to ScanXX	A foreign object such as a paper clip or ripped paper is in the machine.	machine from the power for several minutes and reconnect it.
		(The machine can be turned off for approximately 24 hours without losing faxes stored in the memory. See <i>Transferring your faxes or Fax Journal report</i> on page 77.)
Unusable Device	A broken device has been connected	Unplug the device from the USB direct
Disconnect device from front connector & turn machine off & then on	to the USB direct interface.	interface, then press On/Off to turn the machine off and then on again.
Unusable Device	A USB device or USB Flash memory	Unplug the device from the USB direct
Please Disconnect USB Device.	drive that is not supported has been connected to the USB direct interface.	interface. Turn the machine off and then on again.
	For more information, visit us at http://solutions.brother.com/ .	
Wrong Ink Color	A color ink cartridge has been installed in the Black ink cartridge position.	Check which ink cartridges are not matched by color to their ink cartridge positions and move them to their correct positions.

Error Message	Cause	A	ction
Wrong Paper Size	The Paper Size setting does not match the size of paper in the tray. Or, you did not set the paper guides in the tray to the indicators for the paper size you are using.	1	Check that the paper size you choose matches the size of paper in the tray.
		2	Make sure you loaded the paper in a Portrait position, by setting the paper guides at the indicators for your paper size.
		3	After you have checked the paper size and the paper position, press Mono Start or Color Start to continue printing.
Wrong Tray Setting	The machine's Paper Size and Tray Use settings do not match the size of paper in the tray you are using.	1	Press Tray Setting , and make sure the machine's Paper Size and Tray Use settings match the size of paper in the tray you are using. (See <i>Paper Size and Type</i> on page 22 and <i>Tray use in Copy mode</i> on page 22.)
		2	After you have checked the paper size and tray use settings, press ▲ or ▼ to choose Restart Printing, and press OK to continue printing.

Error animations display

Error animations display step-by-step instructions when paper gets jammed. You can read the steps at your own pace by pressing ▶ to see the next step and ◀ to go backward.

Transferring your faxes or Fax Journal report

If the LCD shows:

- Unable to CleanXX
- Unable to Init.XX
- Unable to PrintXX
- Unable to ScanXX

We recommend transferring your faxes to another fax machine or to your PC. (See *Transferring faxes to another fax machine* on page 77 or *Transferring faxes to your PC* on page 77.)

You can also transfer the Fax Journal report to see if there are any faxes you need to transfer. (See *Transferring the Fax Journal report to another fax machine* on page 78.)

Transferring faxes to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See *Enter personal information (Station ID)* in the *Quick Setup Guide*.)

- Press **Stop/Exit** to interrupt the error temporarily.
- 2 Press Menu.
- 3 Press ▲ or ▼ to choose Service. Press OK.
- Press ▲ or ▼ to choose
 Data Transfer.
 Press OK.

- 5 Press A or ▼ to choose Fax Transfer. Press OK.
- 6 Do one of the following:
 - If the LCD shows No Data, there are no faxes left in the machine's memory.

Press Stop/Exit.

- Enter the fax number to which faxes will be forwarded.
- 7 Press Mono Start.

Transferring faxes to your PC

You can transfer the faxes from your machine's memory to your PC.

- 1 Press **Stop/Exit** to interrupt the error temporarily.
- 2 Make sure you have installed MFL-Pro Suite on your PC, and then turn on PC FAX Receiving on the PC. (For details see PC-FAX receiving in the Software User's Guide.)
- Make sure you have set PC-Fax
 Receive on the machine. (See PC-Fax
 Receive (Windows® only) in chapter 4 of
 the Advanced User's Guide.)
 If faxes are in the machine's memory
 when you set up PC-Fax Receive, the
 LCD will ask if you want to transfer the
 faxes to your PC.
- 4 Do one of the following:
 - To transfer all faxes to your PC, press 1. You will be asked if you want a backup print.
 - To exit and leave the faxes in the memory, press 2.
- 5 Press Stop/Exit.

Transferring the Fax Journal report to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See *Enter personal information (Station ID)* in the *Quick Setup Guide*.)

- 1 Press **Stop/Exit** to interrupt the error temporarily.
- Press **Menu**.
- 3 Press ▲ or ▼ to choose Service.
 Press OK.
- Press ▲ or ▼ to choose

 Data Transfer.


 Press OK.
- 5 Press ▲ or ▼ to choose
 Report Trans..
 Press OK.
- 6 Enter the fax number to which the Fax Journal report will be forwarded.
- 7 Press Mono Start.

Document jam

Documents can jam in the ADF unit if they are not inserted or fed correctly, or if they are too long. Follow the steps below to clear a document jam.

Document is jammed in the top of the ADF unit

- 1 Take out any paper from the ADF that is not jammed.
- Open the ADF cover.
- 3 Pull the jammed document out to the right.

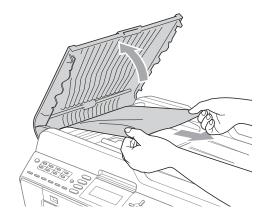


- 4 Close the ADF cover.
- 5 Press Stop/Exit.

IMPORTANT

To avoid document jams close the ADF cover correctly by pushing it gently in the middle.

Document is jammed inside the ADF unit


- 1 Take out any paper from the ADF that is not jammed.
- 2 Lift the document cover.
- Pull the jammed document out to the right.

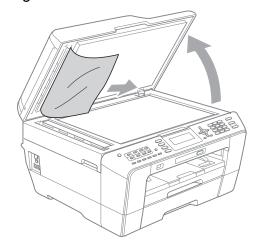

- 4 Close the document cover.
- 5 Press Stop/Exit.

Removing small documents jammed in the ADF

- 1 Lift the document cover.
- 2 Insert a piece of stiff paper, such as cardstock, into the ADF to push any small paper scraps through.

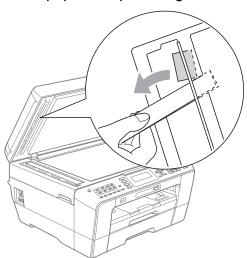

- 3 Close the document cover.
- 4 Press Stop/Exit.


Printer jam or paper jam

Take out the jammed paper depending on where it is jammed in the machine.


Paper is jammed at the front of the machine

If the LCD shows Paper Jam [Front],
follow these steps:


- 1 Unplug the machine from the electrical socket.
- Pull the paper tray (1) completely out of the machine.

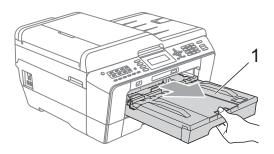


3 Pull out the jammed paper (1).

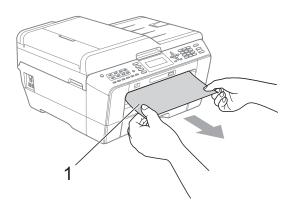

4 Lift the Jam Clear flap, and remove the jammed paper.

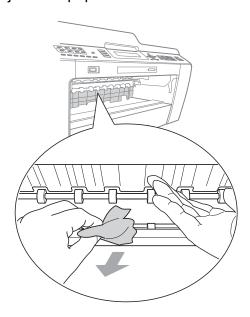

5 Put the paper tray firmly back in the machine.

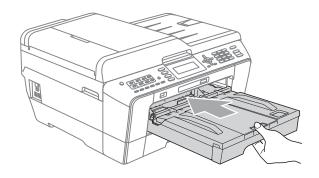



Make sure you pull out the paper support until it clicks.

6 Re-connect the power cord.



If there is a repeat paper jam, a small piece of paper may be stuck in the machine. (See *Additional paper jam clear operations* on page 84.)

Paper is jammed at the back of the machine


If the LCD shows Paper Jam [Rear], follow these steps:

1 Unplug the machine from the electrical socket.




Make sure you remove paper from the manual feed slot, and then close it.


Open the Jam Clear Cover (1) at the back of the machine.

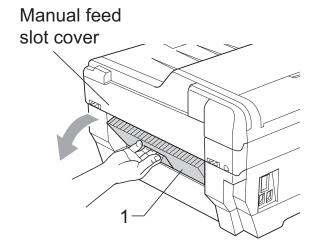

3 Pull the jammed paper out of the machine.

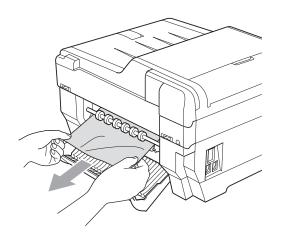

4 Close the Jam Clear Cover. Make sure the cover is closed correctly.

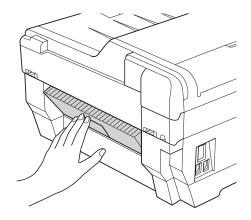

5 Re-connect the power cord.

Paper is jammed at the front and back of the machine

If the LCD shows


Paper Jam [Front, Rear], follow these
steps:


1 Unplug the machine from the electrical socket.




Make sure you remove paper from the manual feed slot, and then close it.


Pull paper tray #1 (1) and then tray #2 (2) completely out of the machine.

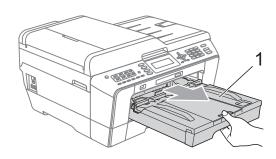

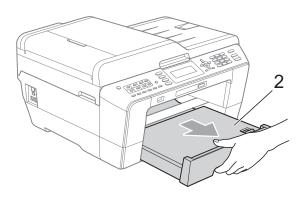


3 Pull out the jammed paper (1).

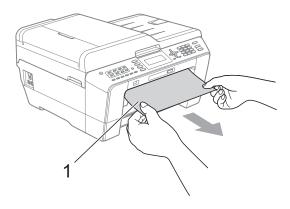

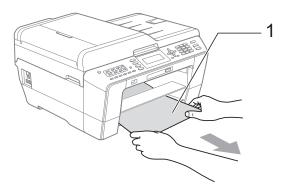


4 Lift the flap, and remove the jammed paper.


(With trays removed, go to step 6).)

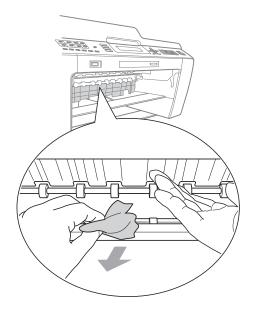


5 Open the Jam Clear Cover (1) at the back of the machine.

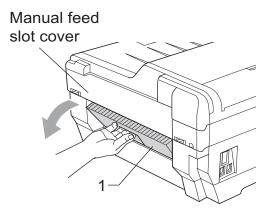


6 Pull the jammed paper out of the machine.

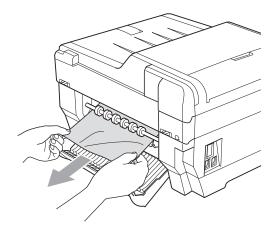


Close the Jam Clear Cover. Make sure the cover is closed correctly.

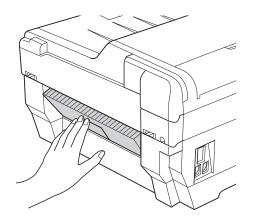


8 Put paper tray #1 (1) and then tray #2 (2) firmly back in the machine.

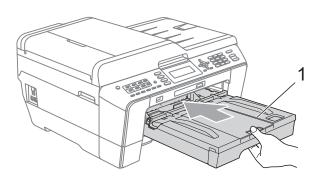

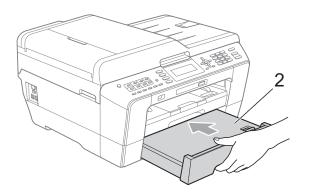


Using both hands, use the finger holds on each side of the machine to lift the scanner cover (1) into the open position. Make sure that there is no jammed paper left in the corners of the machine.

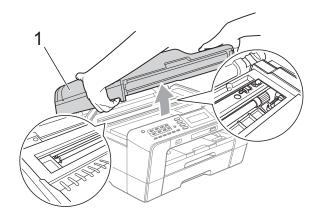


IMPORTANT

- If the paper is jammed under the print head, unplug the machine from the power source, and then move the print head to take out the paper.
- If the print head is at the right corner as shown in the illustration, you cannot move the print head. Re-connect the power cord. Hold down **Stop/Exit** until the print head moves to the middle. Then unplug the machine from the power source, and take out the paper.

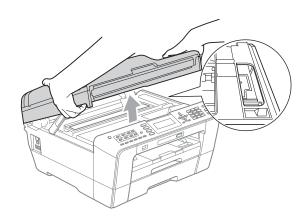

 If ink gets onto your skin, immediately wash with soap and plenty of water. Gently close the scanner cover using the finger holds on each side.

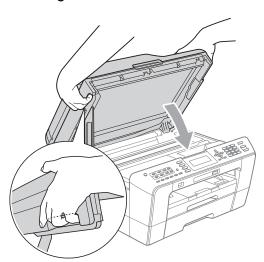

A CAUTION

Be careful not to trap your fingers under the scanner cover.

Always use the finger holds provided on each side of the scanner cover when opening and closing it.



Make sure you pull out the paper support until it clicks.

11 Re-connect the power cord.




If there is a repeat paper jam, a small piece of paper may be stuck in the machine. (See *Additional paper jam clear operations* on page 84.)

Additional paper jam clear operations


1 Using both hands, use the finger holds on each side of the machine to lift the scanner cover into the open position.



If the print head is at the right corner as shown in the illustration, hold down **Stop/Exit** until the print head moves to the middle.

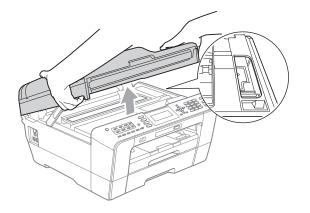

- 2 Unplug the machine from the electrical socket.
- Gently close the scanner cover using the finger holds on each side.

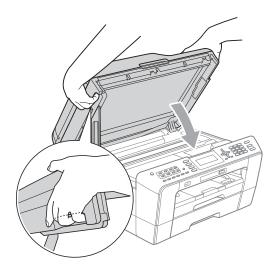


A CAUTION

Be careful not to trap your fingers under the scanner cover.


Always use the finger holds provided on each side of the scanner cover when opening and closing it.

4 Open the manual feed slot cover.

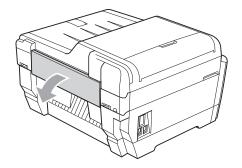

Dut only one sheet of A4 or letter sized thick paper such as glossy paper in a Landscape position in the manual feed slot.

Push it into the manual feed slot.

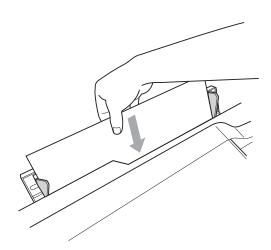

Note

- · We recommend you use glossy paper.
- If you don't push the paper deep into the manual feed slot, the machine will not feed it when you re-connect the power cord.

- 6 Re-connect the power cord.
 The paper you placed in the manual feed slot will be fed through the machine and ejected.
- 7 Using both hands, use the finger holds on each side of the machine to lift the scanner cover into the open position. Make sure that a piece of paper is not still jammed inside the machine. Gently close the scanner cover using the finger holds on each side.

Troubleshooting

If you think there is a problem with your machine, check the chart below and follow the troubleshooting tips.

Most problems can be easily resolved by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips. Visit us at http://solutions.brother.com/.

If you are having difficulty with your machine

Printing

Difficulty	Suggestions
No printout.	Check the interface cable or wireless connection on both the machine and your computer. (See the <i>Quick Setup Guide</i> .)
	Check that the machine is plugged in and that the On/Off key is on.
	One or more ink cartridges have reached the end of their life. (See <i>Replacing the ink cartridges</i> on page 64.)
	Check to see if the LCD is showing an error message. (See <i>Error and Maintenance messages</i> on page 70.)
	If the LCD shows Cannot Print and Replace Ink, see Replacing the ink cartridges on page 64.
	Check that the correct printer driver has been installed and chosen.
	Make sure that the machine is online. Click Start and then Printers and Faxes . Brother MFC-XXXXX (where XXXXX is your model name), and make sure that Use Printer Offline is unchecked.
Poor print quality.	Check the print quality. (See Checking the print quality on page 68.)
	Make sure that the Media Type setting in the printer driver or the Paper Type setting in the machine's menu matches the type of paper you are using. (See <i>Printing</i> for Windows [®] or <i>Printing and Faxing</i> for Macintosh in the <i>Software User's Guide</i> .)
	Make sure that your ink cartridges are fresh. The following may cause ink to clog:
	The expiration date written on the cartridge package has passed. (Brother Original cartridges stay usable for up to two years if kept in their original packaging.)
	■ The ink cartridge has been in your machine for over six months.
	■ The ink cartridge may not have been stored correctly before use.
	Make sure you are using Brother Original Innobella™ ink. Brother does not recommend the use of cartridges other than Brother Original cartridges or the refilling of used cartridges with ink from other sources.
	Try using the recommended types of paper. (See Acceptable paper and other print media on page 24.)
	The recommended environment for your machine is between 20 °C to 33 °C.
White horizontal lines appear in text	Clean the print head. (See Cleaning the print head on page 68.)
or graphics.	Make sure you are using Brother Original Innobella™ ink.
	Try using the recommended types of paper. (See Acceptable paper and other print media on page 24.)

Printing (continued)

Difficulty	Suggestions
The machine prints blank pages.	Clean the print head. (See Cleaning the print head on page 68.)
	Make sure you are using Brother Original Innobella™ ink.
Characters and lines are blurred.	Check the printing alignment. (See Checking the print alignment on page 69.)
Printed text or images are skewed.	Make sure the paper is loaded correctly in the paper tray and the paper side guides are adjusted correctly. (See <i>Loading paper and other print media</i> on page 10.)
	Make sure the Jam Clear Cover is closed correctly.
Smudge or stain at the top centre of the printed page.	Make sure the paper is not too thick or curled. (See Acceptable paper and other print media on page 24.)
Printing appears dirty or ink seems to run.	Make sure you are using the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 24.) Don't handle the paper until the ink is dry.
	Make sure you are using Brother Original Innobella™ ink.
	If you are using photo paper, make sure that you have set the correct paper type. If you are printing a photo from your PC, set the Media Type in the Basic tab of the printer driver.
Stains appear on the reverse side or at the bottom of the page.	Make sure the printer platen is not dirty with ink. (See Cleaning the machine's printer platen in appendix A of the Advanced User's Guide.)
	Make sure you are using Brother Original Innobella™ ink.
	Make sure you are using the paper support flap. (See Loading paper and other print media on page 10.)
The machine prints dense lines on the page.	Check Reverse Order in the Basic tab of the printer driver.
The printouts are wrinkled.	(Windows [®] users) In the printer driver Advanced tab, click Colour Settings , and uncheck Bi-Directional Printing .
	(Macintosh users) In the printer driver, choose Print Settings, click Advanced, choose Other Print Options, and uncheck Bi-Directional Printing.
	Make sure you are using Brother Original Innobella™ ink.
Cannot perform "Page Layout" printing.	Check that the paper size setting in the application and in the printer driver are the same.
Print speed is too slow.	Try changing the printer driver setting. The highest resolution needs longer data processing, sending and printing time. Try the other quality settings in the printer driver Advanced tab. Also, click Colour Settings , and make sure you uncheck Colour Enhancement .
	Turn the borderless feature off. Borderless printing is slower than normal printing. (See <i>Printing</i> for Windows [®] or <i>Printing and Faxing</i> for Macintosh in the <i>Software User's Guide</i> .)
Color Enhancement is not working correctly.	If the image data is not full color in your application (such as 256 color), Color Enhancement will not work. Use at least 24 bit color data with the Color Enhancement feature.
Photo paper does not feed correctly.	When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
	Clean the paper pick-up rollers. (See Cleaning the paper pick-up rollers in appendix A of the Advanced User's Guide.)

Printing (continued)

Difficulty	Suggestions
Machine feeds multiple pages.	Make sure the paper is loaded correctly in the paper tray. (See <i>Loading paper and other print media</i> on page 10.)
	Load only one size of paper and one type of paper in the paper tray at any one time.
	Make sure the Base Pad in the paper tray is not dirty. (See Cleaning the paper pick-up rollers in appendixA of the Advanced User's Guide.)
	If there are only a few sheets of paper in the paper tray the machine may not pick them up correctly. Make sure there are at least 10 sheets of paper in the tray.
There is a paper jam.	Make sure the paper length guide is set to the correct paper size. Do not extend the paper tray when you load A5 or smaller size paper. (See <i>Printer jam or paper jam</i> on page 79.)
Paper jam reoccurs.	If there is a repeat paper jam, a small piece of paper may be stuck in the machine. Make sure paper is not still jammed in the machine. (See <i>Additional paper jam clear operations</i> on page 84.)
The paper jams when you use duplex copy or duplex print.	Use one of the jam prevention settings, DX1 or DX2. For copying, see <i>Duplex</i> (2-sided) copying in chapter 7 of the Advanced User's Guide; for printing see <i>Duplex / Booklet</i> for Windows [®] or <i>Duplex Printing</i> for Macintosh in
	the Software User's Guide.
	If paper jams often when using duplex copy or duplex print, the paper feed rollers may be stained with ink. Clean the paper feed rollers. (See Cleaning the paper feed rollers in appendix A of the Advanced User's Guide.)
Printed pages are not stacked neatly.	Make sure you are using the paper support flap. (See Loading paper and other print media on page 10.)
Machine does not print from Adobe [®] Illustrator [®] .	Try to reduce the print resolution. (See <i>Printing</i> for Windows [®] or <i>Printing and Faxing</i> for Macintosh in the <i>Software User's Guide</i> .)

Printing Received Faxes

Difficulty	Suggestions
Condensed print and white streaks across the page or the top and bottom of sentences are cut off.	You probably had a bad connection, with static or interference on the telephone line. Ask the other party to send the fax again.
Vertical black lines when receiving.	The sender's scanner may be dirty. Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine.
Received color fax prints only in black and white.	Replace the color ink cartridges that have reached the end of their life, and then ask the other person to send the color fax again. (See <i>Replacing the ink cartridges</i> on page 64.)
Left and Right margins are cut off or a single page is printed on two pages.	Turn on Auto Reduction. (See <i>Printing a reduced incoming fax</i> in <i>chapter 4</i> of the <i>Advanced User's Guide</i> .)

Telephone Line or Connections

Difficulty	Suggestions
Dialling does not work.	Make sure the machine is plugged in and turned on.
(No dial tone)	Check the line cord connections.
	Change the Tone/Pulse setting. (See the Quick Setup Guide.)
	Lift the external telephone's handset and listen for a dial tone. If there is no dial tone, ask your telephone company to check the line and/or socket.
The machine does not answer when called.	Make sure the machine is in the correct Receive Mode for your setup. (See <i>Receive Modes</i> on page 35.) Check for a dial tone. If possible, call your machine to hear it answer. If there is still no answer, check the telephone line cord connection. If there is no ringing when you call your machine, ask your telephone company to check the line.

Sending Faxes

Difficulty	Suggestions
Cannot send a fax.	Check all line cord connections.
	Make sure that the FAX key is illuminated.
	Ask the other party to check that the receiving machine has paper.
	Print the Transmission Verification Report and check for an error. (See <i>Reports</i> in <i>chapter 6</i> of the <i>Advanced User's Guide</i> .)
Transmission Verification Report says "RESULT:ERROR".	There is probably temporary noise or static on the line. Try sending the fax again. If you send a PC FAX message and get "RESULT:ERROR" on the Transmission Verification Report, your machine may be out of memory. To gain extra memory, you can turn off Memory Receive (see <i>Turning off Memory Receive operations</i> in <i>chapter 4</i> of the <i>Advanced User's Guide</i>), print fax messages in memory (see <i>Printing a fax from the memory</i> in <i>chapter 4</i> of the <i>Advanced User's Guide</i>) or cancel a Delayed Fax or Polling Job. (see <i>Cancelling a fax in progress</i> on page 32 and <i>Checking and cancelling waiting jobs</i> in <i>chapter 3</i> of the <i>Advanced User's Guide</i> .) If the problem continues, ask the telephone company to check your telephone line.
	If you often get transmission errors due to possible interference on the telephone line, try changing the menu setting of Compatibility to Basic(for VoIP). (See Telephone line interference / VoIP on page 94.)
Poor fax send quality.	Try changing your resolution to Fine or S. Fine. Make a copy to check your machine's scanner operation. If the copy quality is not good, clean the scanner. (See Cleaning the scanner glass on page 67.)
Vertical black lines when sending.	Black vertical lines on faxes you send are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip. (See <i>Cleaning the scanner glass</i> on page 67.)

Handling Incoming Calls

Difficulty	Suggestions
The machine "Hears" a voice as a CNG Tone.	If Fax Detect is set to On, your machine is more sensitive to sounds. It may mistakenly interpret certain voices or music on the line as a fax machine calling and respond with fax receiving tones. Deactivate the machine by pressing Stop/Exit . Try avoiding this problem by turning Fax Detect to Off. (See <i>Fax Detect</i> on page 38.)
Sending a fax call to the machine.	If you answered on an extension or external telephone, press your Remote Activation Code (the factory setting is * 5 1). If you answered on an external telephone, press Start to receive the fax. When your machine answers, hang up.
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, an alarm system or other custom feature on a single telephone line with your machine, it may create a problem sending or receiving faxes.
	For example: If you subscribe to Call Waiting or some other custom service and its signal comes through the line while your machine is sending or receiving a fax, the signal can temporarily interrupt or disrupt the faxes. Brother's ECM (Error Correction Mode) feature should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive information on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, a separate telephone line with no custom features is recommended.

Copying Difficulties

Difficulty	Suggestions
Cannot make a copy.	Make sure that the COPY key is illuminated.
Poor copy results when using the ADF.	Try using the scanner glass. (See <i>Using the scanner glass</i> on page 29.)
Vertical black lines or streaks appear in copies.	Vertical black lines or streaks on copies are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip. (See <i>Cleaning the scanner glass</i> on page 67.)
Fit to Page does not work correctly.	Make sure your source document is not skewed. Reposition the document and try again.

Scanning Difficulties

Difficulty	Suggestions
TWAIN or WIA errors appear when starting to scan. (Windows®)	Make sure the Brother TWAIN/WIA driver is chosen as the primary source. In Presto! PageManager with OCR, click File , Select Source and choose the Brother TWAIN/WIA driver.
TWAIN or ICA errors appear when starting to scan. (Macintosh)	Make sure the Brother TWAIN driver is chosen as the primary source. In PageManager, click File , Select Source and choose the Brother TWAIN driver. Mac OS X 10.6.x users can also scan documents using the ICA Scanner Driver. See Scanning a document using the ICA driver (Mac OS X 10.6.x) in the Software User's Guide.
Poor scanning results when using the ADF.	Try using the scanner glass. (See <i>Using the scanner glass</i> on page 29.)
OCR does not work.	Try increasing the scanner resolution.
	(Macintosh users)
	Presto! PageManager must be downloaded and installed before use. See Accessing Brother Support (Macintosh) on page 3 for further instructions.

Software Difficulties

Difficulty	Suggestions	
Cannot install software or print.	(Windows [®] users only) Run the Repair MFL-Pro Suite program on the Installation CD-ROM. This program will repair and reinstall the software.	
"Device Busy"	Make sure the machine is not showing an error message on the LCD.	
Cannot print images from FaceFilter Studio.	To use FaceFilter Studio, you must install the FaceFilter Studio application from the Installation CD-ROM supplied with your machine. To install FaceFilter Studio see the <i>Quick Setup Guide</i> .	
	Also, before you start FaceFilter Studio for the first time, you must make sure your Brother machine is turned on and connected to your computer. This will allow you to access all the functions of FaceFilter Studio.	

PhotoCapture Center™ Difficulties

Difficulty	Suggestions
Removable Disk does not work	1 Have you installed the Windows® 2000 update? If not, do the following:
correctly.	1) Unplug the USB cable.
	2) Install the Windows [®] 2000 update using one of the following methods.
	 Install MFL-Pro Suite from the Installation CD-ROM. (See the Quick Setup Guide.)
	Download the latest service pack from the Microsoft Web site.
	Wait about 1 minute after you restart the PC, and then connect the USB cable.
	Take out the memory card or USB Flash memory drive and put it back in again.
	3 If you have tried "Eject" from within Windows [®] , take out the memory card or USB Flash memory drive before you continue.
	4 If an error message appears when you try to eject the memory card or USB Flash memory drive, it means the card is being accessed. Wait a while and then try again.
	5 If all of the above do not work, turn off your PC and machine, and then turn them on again. (You will have to unplug the power cord of the machine to turn it off.)
Cannot access Removable Disk from Desktop icon.	Make sure that you have correctly inserted the memory card or USB Flash memory drive.
Part of my photo is missing when printed.	Make sure that Borderless printing and Cropping are turned off. (See Borderless printing and Cropping in chapter 8 of the Advanced User's Guide.)

Network Difficulties

Difficulty	Suggestions
Cannot print over the network.	Make sure that your machine is powered on and is online and in Ready mode. Print a Network Configuration list (see <i>Reports</i> in <i>chapter 6</i> of the <i>Advanced User's Guide</i> .) and check the current Network settings printed in this list. Reconnect the LAN cable to the hub to verify that the cabling and network connections are good. If possible, try connecting the machine to a different port on your hub using a different cable. If the connections are good, the machine shows LAN Active for 2 seconds.
	(If you are having Network problems, see the <i>Network User's Guide</i> for more information.)

Network Difficulties (continued)

Difficulty	Suggestions
The network scanning feature does not work.	(Windows [®] users)
	It is necessary to configure third-party Security/Firewall Software to allow Network scanning. To add port 54925 for Network scanning, enter the information below:
	In Name: Enter any description, for example Brother NetScan.
	In Port number: Enter 54925.
	In Protocol: UDP is selected.
	Please refer to the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.
	(Macintosh users)
	Re-select your machine in the Device Selector application located in Macintosh HD/Library/Printers/Brother/Utilities/DeviceSelector or from the model list in ControlCenter2.
The network PC-Fax Receive	(Windows [®] users only)
feature does not work.	It is necessary to set the third-party Security/Firewall Software to allow PC-FAX Rx. To add port 54926 for Network PC-FAX Rx, enter the information below:
	In Name: Enter any description, for example Brother PC-FAX Rx.
	In Port number: Enter 54926.
	In Protocol: UDP is selected.
	Please refer to the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.
The Brother software cannot be	(Windows [®] users)
installed.	Allow network access to the following programs if your security software displays an alert message during MFL-Pro Suite installation.
	(Macintosh users)
	If you are using a firewall function of anti-spyware or antivirus security software, temporarily disable it and then install the Brother software.
Cannot connect to wireless network.	Investigate the problem using the WLAN Report. Press Menu key, choose Print Reports and then press OK. Choose WLAN Report. For details, see the Network User's Guide.
Reset the network settings.	Press Menu key, choose Network and then press OK. Choose Network Reset. For details, see the Network User's Guide.

Dial Tone detection

When you send a fax automatically, by default your machine will wait for a fixed amount of time before it starts to dial the number. By changing the Dial Tone setting to Detection you can make your machine dial as soon as it detects a dial tone. This setting can save a small amount of time when sending a fax to many different numbers. If you change the setting and start having problems with dialling you should change back to the factory No Detection setting.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 Initial Setup.
 Press OK.
- 3 Press A or ▼ to choose Dial Tone.
- 4 Press ◀ or ▶ to choose Detection or No Detection.
 Press OK.
- 5 Press Stop/Exit.

Telephone line interference / VoIP

If you are having problems sending or receiving a fax due to possible interference on the telephone line, you can change the compatibility setting, which reduces the modem speed to minimise errors.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 Initial Setup.
 Press OK.
- 3 Press ▲ or ▼ to choose Compatibility.
- 4 Press ◀ or ▶ to choose High, Normal or Basic (for VoIP).
 - Basic (for VoIP) cuts the modem speed to 9,600 bps and turns off color fax receiving and ECM, except for color fax sending. Unless interference is a recurring problem on your telephone line, you may prefer to use it only when needed.

To improve compatibility with most VoIP services, Brother recommends changing the compatibility setting to Basic (for VoIP).

- Normal sets the modem speed at 14,400 bps.
- High increases the modem speed to 33,600 bps. (factory setting)

Press OK.

6 Press Stop/Exit.



VoIP (Voice over IP) is a type of phone system that uses an internet connection, rather than a traditional phone line.

В

Machine Information

Checking the serial number

You can see the machine's serial number on the LCD.

- 1 Press Menu.
- Press ▲ or ▼ to choose
 Machine Info..
 Press OK.
- 3 Press ▲ or ▼ to choose Serial No.. Press OK.
- 4 Press Stop/Exit.

Reset functions

The following reset functions are available:

1 Network

You can reset the print server back to its default factory settings such as the password and IP address information.

2 Speed Dial&Fax

Speed Dial & Fax resets the following settings:

- Speed Dial (Speed-Dial and Setup Groups)
- Programmed fax jobs in the memory (Polled Transmit, Delayed Fax and Delayed Batch Transmission)
- Station ID (Name and Number)
- Remote Fax Options (Fax Forwarding)
- Report settings
 (Transmission Verification Report, Quick Dial List and Fax Journal)
- History

 (Caller ID history and Outgoing Call)
- Faxes in memory

3 All Settings

You can restore all settings to their factory defaults.

Brother strongly recommends you use this operation when you dispose of the machine.



Unplug the interface cable before you choose Network or All Settings.

How to reset the machine

- 1 Press Menu.
- Press ▲ or ▼ to choose
 Initial Setup.
 Press OK.
- 3 Press A or ▼ to choose Reset. Press OK.
- Press ▲ or ▼ to choose the type of reset you want to use. Press OK.
- 5 Press 1 to reboot the machine.

Press 1 to confirm.

C

Menu and features

On-screen programming

Your machine is designed to be easy to operate with LCD on-screen programming using the menu keys. User-friendly programming helps you take full advantage of all the menu selections your machine has to offer.

Since your programming is done on the LCD, we have created step-by-step on-screen instructions to help you program your machine. All you need to do is follow the instructions as they guide you through the menu selections and programming options.

Menu table

The menu table will help you understand the menu selections and options that are found in the machine's programs. The factory settings are shown in Bold with an asterisk.



Level1	Level2	Level3	Options	Descriptions	Page
Ink Management	Test Print	_	Print Quality	Lets you check the print quality or alignment.	68
			Alignment		
	Cleaning	_	Black	Lets you clean the print	68
			Color	head.	
			All		
	Ink Volume	_	_	Lets you check the available ink volume.	See ¹ .
General Setup	Mode Timer	_	Off	Sets the time to return to	
			0Sec	Fax mode.	
			30Secs		
			1Min		
			2Mins*		
			5Mins		
	Tray Setting	Tray#1	Paper Type	Sets the type of paper in	22
			(Options)	the paper tray #1.	
			Plain Paper*		
			Inkjet Paper		
			Brother BP71	Sets the size of paper in the paper tray #1.	
			Brother BP61		
			Other Glossy		
			Transparency		
			Paper Size		
			(Options)		
			A4*		
			A5		
			A3		
			10x15cm		
			Letter		
			Legal		
			Ledger		

See Advanced User's Guide.



The factory settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page
General Setup	Tray Setting	Tray#2	Paper Type	Sets the type of paper in	22
(Continued)	(Continued)		(Option)	the paper tray #2.	
			Plain Paper*		
			Paper Size	Sets the size of paper in	
			(Options)	the paper tray #2.	
			A4*		
			A3		
			Letter		
			Legal		
			Ledger		
		Tray Use:Copy	Tray#1	Choose the tray that will	22
			Tray#2	be used for Copy mode.	
			Auto Select*		
		Tray Use:Fax	Tray#1	Choose the tray that will	23
			Tray#2	be used for Fax mode.	
			Auto Select*		

See Advanced User's Guide.



The factory settings are shown in Bold with an asterisk.

.evel1	Level2	Level3	Options	Descriptions	Page
eneral Setup	Volume	Ring	Off	Adjusts the ring volume.	7
(Continued)			Low		
			Med*		
			High		
		Beeper	Off	Adjusts the volume level	8
			Low*	of the beeper.	
			Med		
			High		
		Speaker	Off	Adjusts the volume level	8
			Low	of the speaker.	
			Med*		
			High		
	LCD Settings	Backlight	Light*	You can adjust the	8
			Med	brightness of the LCD	
			Dark	backlight.	
		Dim Timer	Off	You can set how long the	See ¹ .
			10Secs	LCD backlight stays on for	
			20Secs	after the last key press.	
			30Secs*		
		Wallpaper	1*	You can choose the	
			2	wallpaper of the LCD.	
			3		
			4		
	Sleep Mode	_	1Min	You can choose how long	
			2Mins	the machine will remain	
			3Mins	idle before it goes into sleep mode.	
			5Mins*	·	
			10Mins		
			30Mins		
			60Mins		
	A3 - Short Grain	_	On	Turn on this setting when	23
			Off*	you use A3 short grain paper.	
	Function Lock	Set Password	_	You can restrict selected	See ¹ .
		Lock Off→On	_	machine operation for up to 10 restricted users and	
		Setup User	_	all other non-authorized Public users.	
	¹ See Advanced	User's Guide.	1		1
	The factory settings				

⁹⁹

Level1	Level2	Level3	Options	Descriptions	Page
Fax	Setup Receive	Ring Delay	0	Sets the number of rings	37
			1	before the machine answers in Fax Only or	
			2*	Fax/Tel mode.	
			3		
			4		
			5		
			6		
			7		
			8		
			9		
			10		
		F/T Ring Time	20Secs	Sets the fast double-ring	37
			30Secs*	time in Fax/Tel mode.	
			40Secs		
			70Secs		
		Fax Detect	On*	Receives fax messages	38
			Off	automatically when you answer a call and hear fax	
				tone.	
		Remote Codes	On*	Allows you to answer all	45
			(*51, #51)	calls at an extension or external telephone and	
			Off	use codes to turn the	
				machine on or off. You can personalize these	
				codes.	
		Auto Reduction	On*	Cuts the size of incoming	See ¹ .
			Off	faxes to fit the paper size.	
		Memory Receive	Off*	You can set the machine	
			Fax Forward	to either forward fax messages, store incoming	
			Fax Storage	faxes in the memory (so	
			PC Fax Receive	you can retrieve them while you are away from	
				your machine), or send	
				faxes to your PC.	
				If you choose Fax Forward or PC-Fax Receive, you	
				can turn on the safety	
				feature Backup Print.	

See Advanced User's Guide.



The factory settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page
Fax	Report Setting	Transmission	On	Initial setup for	33
(Continued)			On+Image	Transmission Verification Report and Fax Journal	
			Off*	Report.	
			Off+Image		
			Off2		
			Off2+Image		
		Journal Period	Off		See ¹ .
			Every 50 Faxes*		
			Every 6 Hours		
			Every 12 Hours		
			Every 24 Hours		
			Every 2 Days		
			Every 7 Days		
	Print Document	_	_	Prints incoming faxes stored in the memory.	
	Remote Access	_	*	Set your own code for Remote Retrieval.	
	Remaining Jobs	_	_	Check which jobs are in the memory and lets you cancel chosen jobs.	
	Miscellaneous	Caller ID Type	AUTO*	You can switch the mode	42
			FSK	if Caller ID cannot be displayed normally.	
			DTMF		
		Fax Mode	Easy Mode*	Selects the transmission	9
			Advanced Mode	process when sending/receiving the faxes manually.	



Network menu

Level1	Level2	Level3	Level4	Options	Descriptions
Network	Wired LAN	TCP/IP	BOOT Method	Auto*	Chooses the
				Static	BOOT method that best suits
				RARP	your needs.
				BOOTP	
				DHCP	
			IP Address	[000-255].	Enter the IP
				[000-255].	address.
				[000-255].	
				[000-255]	
			Subnet Mask	[000-255].	Enter the Subnet
				[000-255].	mask.
				[000-255].	
				[000-255]	
			Gateway	[000-255].	Enter the
				[000-255].	Gateway address.
				[000-255].	
				[000-255]	
			Node Name	BRNXXXXXXXXXXX	Enter the Node name.
			WINS Config	Auto*	Chooses the WINS
				Static	configuration mode.
			WINS Server	(Primary) 000.000.000.000	Specifies the IP address of the
				(Secondary)	primary or secondary server.
			DNS Server	(Primary) 000.000.000	Specifies the IP address of the
				(Secondary) 000.000.000	primary or secondary server.
			APIPA	On*	Automatically
				Off	allocates the IP address from the link-local address range.
			IPv6	On	Enable or disable
				Off*	the IPv6 protocol.

See Network User's Guide.



Level1	Level2	Level3	Level4	Options	Descriptions
Network	Wired LAN	Ethernet	_	Auto*	Chooses the
(Continued)	(Continued)			100B-FD	Ethernet link mode.
				100B-HD	
				10B-FD	
				10B-HD	
		MAC Address	_	_	You can see your machine's MAC address from the control panel.
	WLAN	TCP/IP	BOOT Method	Auto*	Chooses the
				Static	BOOT method that best suits
				RARP	your needs.
				BOOTP	
				DHCP	
			IP Address	[000-255].	Enter the IP
				[000-255].	address.
				[000-255].	
				[000-255]	
			Subnet Mask	[000-255].	Enter the Subnet mask.
				[000-255].	
				[000-255].	
				[000-255]	
			Gateway	[000-255].	Enter the
				[000-255].	Gateway address.
				[000-255].	
				[000-255]	
			Node Name	BRWXXXXXXXXXXX	Enter the Node name.
			WINS Config	Auto*	Chooses the
				Static	WINS configuration mode.
			WINS Server	(Primary) 000.000.000.000	Specifies the IP address of the
				(Secondary)	primary or secondary server.
			DNS Server	(Primary) 000.000.000.000	Specifies the IP address of the
				(Secondary) 000.000.000.000	primary or secondary server.

Level1	Level2	Level3	Level4	Options	Descriptions
Network (Continued)	wLAN (Continued)	TCP/IP (Continued)	APIPA	On* Off	Automatically allocates the IP address from the link-local address range.
			IPv6	On Off*	Enable or disable IPv6 protocol for a wireless LAN.
		Setup Wizard	_		You can manually configure your print server for a wireless network.
		WPS/AOSS	_	_	You can easily configure your wireless network settings using the one-button push method.
		WPS w/PIN Code	_		You can easily configure your wireless network settings using WPS with a PIN code.
		WLAN Status	Status	_	You can see the current wireless network status.
			Signal	_	You can see the current wireless network signal strength.
			SSID	_	You can see the current SSID.
			Comm. Mode	_	You can see the current Communication Mode.
	See Network Use	MAC Address	_	_	You can see your machine's MAC address from the control panel.

See Network User's Guide.



Level1	Level2	Level3	Level4	Options	Descriptions
Network (Continued)	E-mail/IFAX (Available after IFAX is	Mail Address	_	_	Enter the mail address. (Up to 60 characters)
	downloaded)	Setup Server	SMTP Server	Name (Up to 30 characters) IP Address [000-255]. [000-255]. [000-255].	Enter the SMTP server address.
			SMTP Port	[00001-65535]	Enter the SMTP port number.
			Auth. for SMTP	None*	Selects the
				SMTP-AUTH	Security method for E-mail
				POP bef.SMTP	notification.
			POP3 Server	Name (Up to 30 characters)	Enter the POP3 server address.
				IP Address [000-255]. [000-255]. [000-255]. [000-255]	
			POP3 Port	[00001-65535]	Enter the POP3 port number.
			Mailbox Name	_	Enter the mail box name. (Up to 20 characters)
			Mailbox Pwd	_	Enter the password to login to the POP3 server. (Up to 20 characters)
			APOP	On	Enables or disables APOP.

105

Level1	Level2	Level3	Level4	Options	Descriptions
Network (Continued)	E-mail/IFAX (Available after IFAX is downloaded)	Setup Mail RX	Auto Polling	On* Off	Automatically checks the POP3 server for new messages.
	(Continued)		Poll Frequency	10Min(s)*	Sets the interval for checking for new messages on the POP3 server.
			Header	All Subject+From+To None*	Selects the contents of the mail header to be printed.
			Del Error Mail	On*	Deletes error mails automatically.
			Notification	On MDN Off*	Receives notification messages.
		Setup Mail TX	Sender Subject	_	Displays the subject that is attached to the Internet Fax data.
			Size Limit	On Off*	Limits the size of E-mail documents.
			Notification	On Off*	Sends notification messages.
		Setup Relay	Rly Broadcast	On Off*	Relays a document to another fax machine over the internet.
			Relay Domain	RelayXX:	Registers the Domain name.
			Relay Report	On Off*	Prints the Relay Broadcast Report.
	Time Zone	_	UTCXXX:XX	_	Sets the time zone for your country.
	Network I/F	_	Wired LAN*	_	You can choose the network connection type.
	Network Reset	_	_	_	Restore all network settings to factory default.
	See Network User	s Guide.			

功能 Menu (Menu) (continued)

Level1	Level2	Level3	Options	Descriptions	Page
Print Reports	XMIT Verify	_	_	Prints these lists and	See ¹ .
	Help List	_	_	reports.	
	Quick Dial	_	Alphabetic Order		
			Numeric Order		
	Fax Journal	_	_		
	User Settings	_	_		
	Network Config	_	_		
	WLAN Report	_	_		
	Caller ID hist.	_	_		
Machine Info.	Serial No.	_	_	Lets you check the serial number of your machine.	95
Initial Setup	Receive Mode	_	Fax Only*	Choose the receive mode that best suits your needs.	35
			Fax/Tel		
			External TAD		
			Manual		
	Date&Time	_	_	Puts the date and time on the LCD and in headings of faxes you send.	See ² .
	Station ID	_	Fax:	Set your name and fax	
			Name:	number to appear on each page you fax.	
	Tone/Pulse	_	Tone*	Choose the dialling mode.	
			Pulse		
	Dial Tone	_	Detection	Turns Dial Tone Detection	94
			No Detection*	on or off.	
	Dial Prefix	_	On	Sets a prefix number that	See ¹ .
			Off*	will always be added before the fax number every time you dial.	

¹ See Advanced User's Guide.

See Quick Setup Guide.



Level1	Level2	Level3	Options	Descriptions	Page
Initial Setup (Continued)	Compatibility	_	High* Normal Basic(for VoIP)	Adjusts the modem speed to help resolve transmission problems.	94
	Reset	Network	_	Resets the print server back to its factory default settings, such as the password and IP address information.	95
		Speed Dial&Fax	_	Deletes all stored Speed Dial numbers and faxes, restores the Station ID, Quick Dial List, Transmission Verification Report and Fax Journal back to the factory default settings.	
		All Settings	_	Resets all the machine's settings back to the settings that were set at the factory.	
	Local Language	_	Chinese* English	Always you to change the LCD language.	8

¹ See Advanced User's Guide.

² See Quick Setup Guide.



FAX (🛅)

Level1	Level2	Level3	Options	Descriptions	Page
Fax Resolution	_	_	Standard*	Sets the resolution for	See 1.
			Fine	outgoing faxes.	
			S.Fine		
			Photo		
Contrast	_	_	Auto*	Changes the lightness or	
			Light	darkness of faxes you send.	
			Dark		
Glass ScanSize	_	_	A4*	Sets the glass scan size for	32
			A3	faxes.	
			Letter		
			Legal		
			Ledger		
Internet Fax	_	_		You can send and receive	See ² .
(Available after IFAX is downloaded)				fax documents using the Internet.	See
Phone Book	Search	_	Alphabetic Order	You can dial by pressing only a few keys (and Start).	48
			Numeric Order		
	Set One Touch	_	_	Stores One Touch Dial numbers, so you can dial by pressing only a few keys (and Start).	50
	Set Speed Dial	_	_	Stores Speed Dial numbers, so you can dial by pressing only a few keys (and Start).	51
	Setup Groups	_	_	You can set up Group numbers for Broadcasting.	See 1.
Outgoing Call	Send a fax	_	_	You can choose a number	49
	Add To Phone Book Delete			from the Outgoing Call history and then make a telephone call to it, send a fax to it, add it to Speed Dial, or delete it.	
Caller ID hist.	Send a fax Add To Phone Book Delete	_	_	You can choose a number from the Caller ID history and then send a fax to it, add it to Speed Dial, or delete it.	49

- ¹ See Advanced User's Guide.
- ² See Network User's Guide.



Level1	Level2	Level3	Options	Descriptions	Page
Broadcasting	Dial Type	_	Fax/Tel*	You can send the same fax	See ¹ .
	(Available after IFAX is downloaded)		E-Address	message to more than one fax number.	
	Add Number	_	_		
	Phone Book				
	Complete				
Delayed Fax	_	_	On	Sets the time of day in	
			Off*	24-hour format that the delayed faxes will be sent.	
Batch TX	_	_	On	Combines delayed faxes to	
			Off*	the same fax number at the same time of day into one transmission.	
Real Time TX	_	_	On	You can send a fax without	
			Off*	using the memory.	
Polled TX	_	_	Standard	Sets up the document on	
			Secure	your machine to be retrieved by another fax machine.	
			Off*	by another lax machine.	
Polling RX	_	_	Standard	Sets up your machine to poll	
			Secure	another fax machine.	
			Timer		
			Off*		
Overseas Mode	_	_	On	If you are having difficulty	
			Off*	sending faxes overseas, set this to On.	
Set New Default	_	_	Fax Resolution	You can save your fax	
			Contrast	settings.	
			Glass ScanSize		
			Real Time TX		
Factory Reset	_	_	_	You can restore all settings to the factory settings.	

¹ See Advanced User's Guide.

² See Network User's Guide.



SCAN (🔷)

Level1	Option1	Option2	Option3	Descriptions	Page
Scan to File	_	_	_	You can scan a monochrome or a color document into your computer.	See ¹ .
Scan to Media	Quality	_	Color 100	You can choose the scan	59
(when a memory card or USB			Color 200*	resolution and file format for your document.	
Flash memory			Color 300	your document.	
drive is inserted)			Color 600		
			B/W 100		
			B/W 200		
			B/W 300		
	File Type	_	(If you choose color option in Quality setting)		
			PDF*		
			JPEG		
			(If you choose Mono option in Quality setting)		
			TIFF		
			PDF*		
	Glass ScanSize	_	A4*	Sets the glass scan size for scans.	See ² .
			A3		
			Letter		
			Legal		
			Ledger		
	File Name	_	_	You can rename the file.	59
	Auto Crop	_	On	Scan multiple documents	See ² .
			Off*	placed on the scanner glass to a memory card or USB Flash memory drive one at a time.	
Set	Set New Default	_	Quality	You can save your scan	
			File Type	settings.	
			Glass ScanSize		
			Auto Crop		
	Factory Reset	_	_	You can restore all settings to the factory settings.	

- ¹ See Software User's Guide.
- ² See Advanced User's Guide.
- (Macintosh users)
 Presto! PageManager must be downloaded and installed before use. See Accessing Brother Support (Macintosh) on page 3 for further instructions.



Level1	Option1	Option2	Option3	Descriptions	Page
Scan to Network	(Profile Name)	_	_	You can send a scanned data to a CIFS server on your local network or on the internet.	See ¹ .
Scan to FTP	(Profile Name)	_	_	You can send a scanned data via FTP.	
Scan to E-mail	PC	_	_	You can scan a monochrome or a color document into your E-mail application.	
	E-mail Server (Available after	Manual	_	You can enter an E-mail address using the dial pad.	
	IFAX is downloaded)	Phone Book	Alphabetic Order Numeric Order	You can search for an E-mail address that you have stored in the machine.	
		Quality	Color 100	Chooses the file format to	
		Quality	Color 200*	send the scanned data via	
			Color 300	E-mail server.	
			Color 600		
			B/W 100		
			B/W 200		
			B/W 300		
		File Type	(If you choose color option in Quality setting)		
			PDF*		
			JPEG		
			(If you choose Mono option in Quality setting)		
			TIFF		
			PDF*		
		Glass ScanSize	A4*	Sets the glass scan size for	
			A3	scans.	
			Letter		
			Legal		
			Ledger		

- See Software User's Guide.
- ² See Advanced User's Guide.
- (Macintosh users)
 Presto! PageManager must be downloaded and installed before use. See Accessing Brother Support (Macintosh) on page 3 for further instructions.



Level1	Option1	Option2	Option3	Descriptions	Page
Scan to E-mail	E-mail Server	Set New Default	Quality	You can save your scan	See ¹ .
(Continued)	(Available after		File Type	settings.	
	IFAX is downloaded)		Glass ScanSize		
	(Continued)				
		Factory Reset	_	You can restore all settings to the factory settings.	
Scan to OCR 3	_	_	_	You can have your text document converted to an editable text file.	
Scan to Image	_	_	_	You can scan a color picture into your graphics application.	

- See Software User's Guide.
- ² See Advanced User's Guide.
- (Macintosh users)
 Presto! PageManager must be downloaded and installed before use. See Accessing Brother Support (Macintosh) on page 3 for further instructions.



COPY ()

Quality			Options	Descriptions	Page
Quality	_	_	Fast	Choose the Copy resolution	See ¹ .
			Normal*	for the next copy.	
			Best		
Paper Type	_	_	Plain Paper*	Choose the paper type that	54
			Inkjet Paper	matches the paper in the tray.	
			Brother BP71	lay.	
			Brother BP61		
			Other Glossy		
			Transparency		
Paper Size	_	_	A4*	Choose the paper size that	54
			A5 (tray #1 only)	matches the paper in the tray.	
			A3	tray.	
			10x15cm (tray #1 only)		
			Letter		
			Legal		
			Ledger		
Tray Select	_	_	Tray#1	Choose the tray that will be	54
			Tray#2	used for Copy mode.	
			Auto Select*		
Enlarge/Reduce	100%*	_	_	_	See ¹ .
	Enlarge	_	198% 10x15cm→A4	You can choose the	
			186% 10x15cm→LTR	enlargement ratio for the	
			141% A4→A3, A5→A4	next copy.	
	Reduce	_	97% LTR→A4	You can choose the	
			93% A4→LTR	reduction ratio for the next	
			83% LGL→A4	copy.	
			69% A3→A4, A4→A5		
_			47% A4→10x15cm		
	Fit to Page	_	_	Your machine will adjust the size automatically to the paper size you set.	
	Custom(25-400%)	_	_	You can choose the enlargement or reduction ratio for your type of document.	



Density	Level1	Level2	Level3	Options	Descriptions	Page
Page Layout	Density	_	_		-	See ¹ .
2 in 1 (P) 2 in 1 (L) 4 in 1 (P) 4 in 1 (L) 4 in 2 4 in 2 (When poster 2x2 is chosen) 4 in 1 (L) 4 in 2 4 in 2 (When poster 2x2 is chosen) 4 in 2 (When poster 2x2 is chosen) 4 in 3	Stack/Sort	_	_			
Duplex Copy On Flip Type LongEdge Flip(P)* LongEdge Flip(L) ShortEdge Flip(P) ShortEdge Flip(D) Advanced Normal* DX1 DX2 A3/LGR DX Setting Fit to Page* Keep Scale Off Skewed, your machine can correct the data automatically. Enables or disables duplex printing. You can also choose long edge or short edge duplex printing. Fit to Page* Keep Scale Off* Off	Page Layout		2 in 1 (P) 2 in 1 (L) 2 in 1 (ID) 4 in 1 (P) 4 in 1 (L) 1 to 2 Poster(2 x 1) Poster(2 x 2)	or Ledger: (When 2 in 1 is chosen) LGRx2 → LGRx1 LTRx2 → LGRx1 A3x2 → A3x1 A4x2 → A3x1 (When poster 2x2 is chosen) LGRx1 → LGRx4 LTRx1 → LGRx4 A3x1 → A3x4		
LongEdge Flip(L) ShortEdge Flip(P) ShortEdge Flip(L) Advanced Normal* DX1 DX2 A3/LGR DX Setting Off* Dost Date of the printing of the print	Skew Adjustment	_	_		skewed, your machine can correct the data	
Setting Keep Scale Off* — —	Duplex Copy	On	Advanced	LongEdge Flip(L) ShortEdge Flip(P) ShortEdge Flip(L) Normal* DX1 DX2	printing. You can also choose long edge or short	
			Setting —	Keep Scale		



Level1	Level2	Level3	Options	Descriptions	Page
Advanced Settings	_	_	Off*	You can choose various settings for copy such as	See ¹ .
			Ink Save Mode	Book Copy and	
			Thin Paper Copy	Watermark Copy.	
			Book Copy		
			Watermark Copy		
Set New Default	_	_	Quality	You can save your copy	
			Tray Select	settings.	
			Enlarge/Reduce		
			Density		
			Page Layout		
			Skew Adjustment		
			Ink Save Mode		
			Thin Paper Copy		
			Duplex Copy		
Factory Reset	_	_	_	You can restore all settings to the factory settings.	
	1 Soo Advanced	Hoor's Cuids	•	•	

See Advanced User's Guide.



Watermark Copy Settings

Option1	Option2	Option3	Option4	Descriptions	Page
Template	Text	_	CONFIDENTIAL*	Uses a template to place	See ¹ .
			DRAFT	text into your document as a Watermark.	
			COPY		
	Position		A		
			В		
			С		
			D		
			E*		
			F		
			G		
			Н		
			I		
			Pattern		
	Size		Small		
			Medium*		
			Large		
	Angle		-90°]	
			-45°*		
			0°		
			45°		
			90°		
	Transparency		-2		
			-1		
			0*		
			+1		
			+2		
	Colour		Red]	
			Orange		
			Yellow		
			Blue		
			Green		
			Purple		
			Black*		
	Apply		_	1	



Option1	Option2	Option3	Option4	Descriptions	Page
Media	(Select image	Position	A	Places a logo or text into	See ¹ .
	from media)		В	your document as a Watermark using an image	
			С	from removable media.	
			D		
			E*		
			F		
			G		
			Н		
			I		
			Pattern		
		Size	Small		
			Medium*		
			Large		
		Angle	-90°		
			-45°*		
			0°		
			45°		
			90°		
		Transparency	-2		
			-1		
			0*		
			+1		
			+2		
		Apply	_		
Scan	(Set watermark	Transparency	-2	You can place a logo or text	
	document and press Start .)		-1	into your document as a Watermark by scanning a	
			0*	paper document.	
			+1		
			+2		
		Apply	_		

¹ See Advanced User's Guide.



PHOTO CAPTURE ()



Level1	Level2	Level3	Options	Descriptions	Page
View Photo(s)	_	_	See the print settings in the following table.	You can preview your photos on the LCD.	58
Print Index	Layout Format	_	6 Images/Line* 5 Images/Line	You can print a thumbnail page.	See ¹
	Paper Type		Plain Paper*		
			Inkjet Paper		
			Brother BP71		
			Brother BP61		
			Other Glossy		
	Paper Size		A4*		
			Letter		
Print Photos	_	_	See the print settings in the	You can print an individual image.	
Enhance Photos	Auto Correct	_	following table.	You can adjust your photos with these settings.	
	Enhance Skin				
	Enhance Scenery				
	Remove Red-Eye				
	Night Scene				
	Fill Light				
	Whiteboard				
	Monochrome				
	Sepia				
Search by Date	_	_		You can search your photos in date order. You can print all photos in your memory card or USB Flash memory drive.	
Print All Photos	_	_			
Slide Show	_	_		The machine starts a Slide Show of your photos.	
Trimming	_	_		You can trim your photo and print a part of the image.	

¹ See Advanced User's Guide.



Print Settings

Option1	Option2	Option3	Option4	Descriptions	Page
Print Quality	Normal	_	_	Choose the print quality.	See 1.
(Not available for DPOF printing.)	Photo*				
Paper Type	Plain Paper	_	_	Choose the paper type.	
	Inkjet Paper				
	Brother BP71				
	Brother BP61				
	Other Glossy*				
Paper Size	10x15cm*	(When A4 or	_	Choose the paper and print	
	13x18cm	Letter is chosen)		size.	
	A4	8 x 10cm			
	A3	9 x 13cm			
	Letter	10 x 15cm			
	Ledger	13 x 18cm			
		15 x 20cm			
		Max. Size*			
Brightness		_	-	Adjusts the brightness.	
(Not available					
<pre>when Enhance Photos</pre>	*				
is chosen.)					
Contrast			<u> </u>	Adjusts the contrast.	
(Not available				Adjusts the contrast.	
when					Ì
Enhance Photos					
is chosen.)					
	¹ See Advanced	User's Guide.			
	The factory setting	s are shown in Bold	with an asterisk.		



Option1	Option2	Option3	Option4	Descriptions	Page
Color Enhance (Not available when Enhance Photos is chosen.)	On Off*	White Balance	+2 · · · · · · · · · · · · · · · · · · ·	Adjusts the hue of the white areas.	See ¹ .
		Sharpness	+2 · · · · · · · · · · · · · · · · · · ·	Enhances the detail of the image.	
		Color Density	+2 · · · · · · · · · · · · · · · · · · ·	Adjusts the total amount of color in the image.	
Cropping	On*	_	_	Crops the image around the margin to fit the paper size or print size. Turn this feature off if you want to print whole images or prevent unwanted cropping.	
Borderless	On*	_	_	Expands the printable area to fit the edges of the paper.	
Date Print	On	_	_	Prints the date on your	-
(Not available for DPOF printing.)	Off*			photo.	
Set New Default	Print Quality Paper Type Paper Size	_	_	You can save your print settings.	
	Brightness Contrast				
	Color Enhance				
	Cropping				
	Borderless				
	Date Print				
Factory Reset	_	_	_	You can restore all the settings to factory settings.	

¹ See Advanced User's Guide.



Phone Book (♣)

Level1	Level2	Level3	Options	Descriptions	Page
Search	_	_	Alphabetic Order Numeric Order	You can search for names you have stored in the Speed Dial memory.	48
Set One Touch	_	_	_	You can store your most frequently called numbers on the One Touch keys.	50
Set Speed Dial			_	Stores Speed Dial numbers, so you can dial by pressing only a few keys (and Start).	51
Setup Groups	_	_	_	Sets up Group numbers for Broadcasting.	See ¹ .
	¹ See Advanced	User's Guide.			



The factory settings are shown in Bold with an asterisk.

重拨/暂停 Redial/Pause (Redial/Pause)



Level1	Level2	Level3	Options	Descriptions	Page
Outgoing Call	Send a fax Add To Phone Book Delete	_	_	You can choose a number from the Outgoing Call history and then make a telephone call to it, send a fax to it, add it to Speed Dial, or delete it.	49
Caller ID hist.	Send a fax Add To Phone Book Delete	_	_	You can choose a number from the Caller ID history and then send a fax to it, add it to Speed Dial, or delete it.	49
	The factory setting	s are shown in Bold	with an asterisk.		•





Level1	Level2	Level3	Options	Descriptions	Page
Fax Preview	_	_	ON	You can view faxes you	38
			OFF*	send and receive on the LCD screen.	
	The factory setting	s are shown in Bold	with an asterisk.		

Entering Text

When you are setting certain menu selections, such as the Station ID, you may need to enter text into the machine. Most dial pad keys have three or four letters printed on keys. The keys for # and * do not have printed letters because they are used for special characters.

Press the appropriate dial pad key the number of times shown in this reference table to access the character you want.

Press Key	one time	two times	three times	four times	five times
2	Α	В	С	2	Α
3	D	Е	F	3	D
4	G	Н	1	4	G
5	J	K	L	5	J
6	M	N	Ο	6	М
7	Р	Q	R	S	7
8	Т	U	V	8	Т
9	W	Χ	Υ	Z	9

Inserting spaces

To enter a space in a fax number, press ▶ once between numbers. To enter a space in a name, press ▶ twice between characters.

Making corrections

If you entered an incorrect character and want to change it, press ◀ or ▶ to move the cursor under the incorrect character. Then press **Clear**. Re-enter the correct character. You can also back up and insert characters.

Repeating letters

If you need to enter a letter that is on the same key as the letter before, press ▶ to move the cursor to the right before you press the key again.

Special characters and symbols

Press * or #, repeatedly until you see the special character or symbol you want.

```
Press * for (space)!"#$% &'()*+,-./
Press # for :;<=>?@[]^_
```

D

Specifications

General



This chapter provides a summary of the machines' specifications. For additional specifications visit http://www.brother.com/ for details.

Printer Type Inkjet

Print Method Mono: Piezo with 210×1 nozzle

Color: Piezo with 210×3 nozzles

Memory Capacity 64 MB

LCD (Liquid Crystal

Display)

Wide 3.3 in. (82.8 mm) TFT Color LCD

Power Source AC 220 to 240 V 50/60 Hz

Power Consumption ¹ Copying Mode: Approx. 26 W ²


Ready Mode: Approx. 7.5 W
Sleep Mode: Approx. 4 W
Off: Approx. 0.3 W

Measured when the machine is connected to the USB interface.

When using ADF, single-side printing, resolution: standard / document: ISO/IEC 24712 printed pattern.

Ш

Dimension

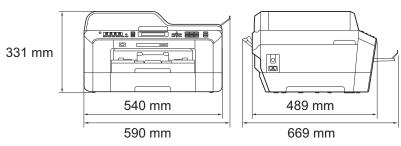

Weight 18.2 kg

NoiseOperating:50 dB or less 1TemperatureOperating:10 to 35 °CBest Print Quality:20 to 33 °C

Humidity Operating: 20 to 80% (without condensation)

Best Print Quality: 20 to 80% (without condensation)

ADF (automatic Up to 35 pages

document feeder)

Paper: 80 g/m² A4 or Letter size

Document Size ADF Width: 148 mm to 297 mm

ADF Length: 148 mm to 431.8 mm Scanner Glass Width: Max. 297 mm Scanner Glass Length: Max. 431.8 mm

Noise depends on printing conditions.

Print media

Paper Input

Paper Tray #1

■ Paper type:

Plain paper, inkjet paper (coated paper), glossy paper ¹ and transparency ^{1 2}

■ Paper size:

A4, Ledger, A3, Legal, Executive, Letter, A5, A6, JIS B4, JIS B5, Envelopes (commercial No.10, DL, C5, Monarch, Y4), Photo 10×15 cm, Photo L 89×127 mm, Photo 2L 13×18 cm, Index Card and PostCard 3

Width: 89 mm - 297 mm

Length: 127 mm - 431.8 mm

For more details, see Paper weight and thickness on page 27.

Maximum paper tray capacity:

Approx. 250 sheets of 80 g/m² plain paper

Paper Tray #2

■ Paper type:

Plain paper

Paper size:

A4, Ledger, A3, Legal, Executive, Letter, JIS B4, JIS B5

Width: 182 mm - 297 mm

Length: 257 mm - 431.8 mm

For more details, see *Paper weight and thickness* on page 27.

■ Maximum paper tray capacity:

Approx. 250 sheets of 80 g/m² plain paper

For glossy paper or transparencies, remove printed pages from the output paper tray immediately after they exit the machine to avoid smudging.

² Use only transparencies recommended for inkjet printing.

³ See Paper type and size for each operation on page 26.

Paper Input

Manual Feed Slot

(Continued)

■ Paper type:

Plain paper, inkjet paper (coated paper), glossy paper ¹, transparency ^{1 2}, envelopes and Labels

■ Paper size:

A4, Ledger, A3, Legal, Executive, Letter, A5, A6, JIS B4, JIS B5, Envelopes (commercial No.10, DL, C5, Monarch, Y4), Photo 10×15 cm, Photo L 89×127 mm, Photo 2L 13×18 cm,

Index Card and PostCard 3

Width: 89 mm - 297 mm

Length: 127 mm - 431.8 mm

For more details, see Paper weight and thickness on page 27.

■ Maximum paper tray capacity:

1 sheet of special print media

Paper Output

Up to 50 sheets of A4 plain paper (face up print delivery to the output paper tray) ¹

For glossy paper or transparencies, remove printed pages from the output paper tray immediately after they exit the machine to avoid smudging.

² Use only transparencies recommended for inkjet printing.

³ See Paper type and size for each operation on page 26.

Fax

CompatibilityITU-T Super Group 3Modem SpeedAutomatic Fallback

33,600 bps

Scanning Width288 mm (A3)Printing Width291 mm (A3)

Greyscale Levels: 64 (B&W) / 256 (Color)

Resolution Standard

203 × 98 dpi (Mono) 203 × 196 dpi (Color)

Fine

203 × 196 dpi (Mono/Color)

Superfine

203 × 392 dpi (Mono)

Photo

203 × 196 dpi (Mono)

One Touch Dial $16 (8 \times 2)$

Speed Dial 100 stations \times 2 numbers

Groups Up to 6

Broadcasting 266 (200 Speed Dial/16 One Touch Dial/ 50 Manual Dial)

Automatic Redial 3 times at 5 minute intervals

Memory Transmission Up to 400 ¹ pages

Out of Paper Reception Up to 400 ¹ pages

¹ "Pages" refers to the "ITU-T Test Chart #1" (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

Copy

Color/Monochrome Yes/Yes

Copy Width Max. 291 mm

Multiple Copies Stacks/Sorts up to 99 pages

Enlarge/Reduce 25% to 400% (in increments of 1%)

Resolution Prints up to 1200 × 1200 dpi

Duplex ■ Paper type:

Plain paper

■ Paper size:

A4, Ledger ¹, A3 ¹, Legal, Letter, A5

Minimum top and bottom margins of 22 mm

PhotoCapture Center™

Compatible Media ¹ Memory Stick™ (16 MB - 128 MB)

Memory Stick PRO™ (256 MB - 32 GB) Memory Stick Duo™ (16 MB - 128 MB) Memory Stick PRO Duo™ (256 MB - 32 GB) Memory Stick Micro™ (M2™) with Adapter

MultiMedia Card (32 MB - 2 GB) MultiMedia Card plus (128 MB - 4 GB)

MultiMedia Card mobile with Adapter (64 MB - 1 GB)

SD (16 MB to 2 GB) miniSD with Adapter microSD with Adapter SDHC (4 GB to 32 GB) miniSDHC with Adapter microSDHC with Adapter USB Flash memory drive ²

Resolution Up to $1200 \times 2400 \text{ dpi}$

File Extension

(Media Format) DPOF (ver. 1.0, ver. 1.1), Exif DCF (up to ver. 2.1)

(Image Format) Photo Print: JPEG ³, AVI ⁴, MOV ⁴

Scan to Media: JPEG, PDF (Color)

TIFF, PDF (Monochrome)

Number of Files Up to 999 files

(The folder inside memory cards or USB Flash memory drive is

also counted.)

Folder File must be stored in the 4th folder level of the memory card or

USB Flash memory drive.

Borderless A4, Letter, Ledger, A3, Photo 10×15 cm,

Photo 2L 13 \times 18 cm ⁵

² USB 2.0 Standard

USB Mass Storage standard from 16 MB to 32 GB

Support format: FAT12/FAT16/FAT32

¹ Memory cards, adapters and USB Flash memory drive are not included.

³ Progressive JPEG format is not supported.

⁴ Motion JPEG only

⁵ See Paper type and size for each operation on page 26.

PictBridge

Supports the Camera & Imaging Products Association PictBridge standard CIPA DC-001. Compatibility

Visit http://www.cipa.jp/pictbridge/ for more information.

Interface USB direct interface

Scanner

Color/Monochrome Yes/Yes

TWAIN Compliant Yes (Windows® 2000 Professional/Windows® XP/

Windows® XP Professional x64 Edition/Windows Vista®/

Windows[®] 7)

Mac OS X 10.4.11, 10.5.x, 10.6.x ¹

WIA Compliant

Yes (Windows® XP ²/Windows Vista®/Windows® 7)

ICA Compliant Yes (Mac OS X 10.6.x)

Color Depth 48 bit color Processing (Input)

24 bit color Processing (Output)

Resolution Up to 19200×19200 dpi (interpolated) ³

Up to 2400 × 2400 dpi (optical) (Scanner Glass)

Up to 2400×1200 dpi (optical) (ADF)

Scanning Speed Monochrome: up to 3.49 sec.

Color: up to 3.37 sec.

(A4 size at 100×100 dpi)

Scanning Width Up to 291 mm
Scanning Length Up to 426 mm
Greyscale 256 levels

For the latest driver updates for the Mac OS X you are using, visit us at http://solutions.brother.com/.

Windows® XP in this User's Guide includes Windows® XP Home Edition, Windows® XP Professional, and Windows® XP Professional x64 Edition.

Maximum 1200×1200 dpi scanning when using the WIA Driver for Windows[®] XP, Windows Vista[®] and Windows[®] 7 (resolution up to 19200×19200 dpi can be selected by using the Brother scanner utility).

Printer

Resolution Up to $1200 \times 6000 \text{ dpi}$

Printing Width 291 mm [297 mm (borderless) 1] 3

Borderless A4, Letter, Ledger, A3, A6, B4, Photo 10 × 15 cm,

Index Card 127 × 203 mm

Photo L 89 \times 127 mm, Photo 2L 13 \times 18 cm ²

Duplex ■ Paper type:

Plain paper

■ Paper size:

A4, Letter, Ledger 4, A3 4, Legal, A5, A6, Executive

Print Speed ⁵

When the Borderless feature is set to On.

² See Paper type and size for each operation on page 26.

³ When printing on A3 size paper.

⁴ Minimum top and bottom margins of 22 mm

⁵ For detailed specifications visit http://www.brother.com/.

Interfaces

USB 12 A USB 2.0 interface cable that is no longer than 2 m.

LAN cable ³ Ethernet UTP cable category 5 or greater.

Wireless LAN IEEE 802.11b/g/n (Infrastructure/Ad-hoc Mode)

- Third party USB ports are not supported.
- 3 See the *Network User's Guide* for detailed network specifications.

Your machine has a Hi-Speed USB 2.0 interface. The machine can also be connected to a computer that has a USB 1.1 interface.

D

Computer requirements

SUPPORTED OPERATING SYSTEMS AND SOFTWARE FUNCTIONS								
Computer Platform & Operating System Version		Supported PC Software Functions	PC Interface	Processor Minimum Speed	Minimum RAM	Recommended RAM	Hard Disk Space to install	
							For Drivers	For Applications
Windows [®] Operating System ¹	Windows [®] 2000 Professional	Printing, PC Fax ⁴ , Scanning, Removable Disk ⁵	USB, 10/100 Base-TX (Ethernet), Wireless 802.11b/g/n	Intel [®] Pentium [®] II or equivalent	64 MB	256 MB	150 MB	500 MB
	Windows [®] XP Home ² Windows [®] XP Professional ²				128 MB		150 MB	500 MB
	Windows [®] XP Professional x64 Edition ²			64-bit (Intel [®] 64 or AMD64) supported CPU	256 MB	512 MB	150 MB	500 MB
	Windows Vista ^{® 2}			Intel [®] Pentium [®] 4	512 MB	1 GB	500 MB	1.2 GB
	Windows [®] 7 ²			or equivalent 64-bit (Intel [®] 64 or AMD64) supported CPU	1 GB (32 bit) 2 GB (64 bit)	1 GB (32 bit) 2 GB (64 bit)	650 MB	1.2 GB
	Windows Server [®] 2003 (print only via network)	Printing	10/100 Base-TX	Intel [®] Pentium [®] III or equivalent	256 MB	512 MB	50 MB	N/A
	Windows Server [®] 2003 x64 Edition (print only via network)		(Ethernet), Wireless 802.11b/g/n	64-bit (Intel [®] 64 or AMD64) supported CPU				
	Windows Server [®] 2003 R2 (print only via network)			Intel [®] Pentium [®] III or equivalent				
	Windows Server® 2003 R2 x64 Edition (print only via network)			64-bit (Intel [®] 64 or AMD64) supported CPU	512 MB	1 GB		
	Windows Server [®] 2008 (print only via network)			Intel [®] Pentium [®] 4 or equivalent 64-bit (Intel [®] 64 or AMD64) supported CPU		2 GB		
	Windows Server® 2008 R2 (print only via network)			64-bit (Intel [®] 64 or AMD64) supported CPU				
Macintosh Operating System	Mac OS X 10.4.11, 10.5.x	Printing, PC Fax Send ⁴ , Scanning, Removable Disk ⁵	USB ³ , 10/100 Base-TX (Ethernet), Wireless 802.11b/g/n	PowerPC G4/G5 Intel [®] Core™ Processor	512 MB	1 GB	80 MB	400 MB
	Mac OS X 10.6.x			Intel [®] Core™ Processor	1 GB	2 GB		

Conditions:

- Microsoft[®] Internet Explorer[®] 6.0 or greater.
- For WIA, 1200 × 1200 resolution. Brother Scanner Utility enables to enhance up to 19200 × 19200 dpi.
- Third party USB ports are not supported.
- ⁴ PC Fax supports black and white only.
- 5 Removable disk is a function of PhotoCapture Center™.

For the latest driver updates, visit us at http://solutions.brother.com/.

All trademarks, brand and product names are the property of their respective companies.

Consumable items

Ink The machine uses individual Black, Yellow, Cyan and Magenta ink

cartridges that are separate from the print head assembly.

Service Life of Ink

The first time you install a set of ink cartridges the machine will use an amount of ink to fill the ink delivery tubes for high quality

printouts. This process will only happen once. After this process is complete the cartridges provided with your machine will have a lower yield than standard cartridges (65%). With all following ink

cartridges you can print the specified number of pages.

Replacement Consumables

<Super High Yield Black> LC450XLBK

<Super High Yield Yellow> LC450XLY

<Super High Yield Cyan> LC450XLC

<Super High Yield Magenta> LC450XLM

Black - Approximately 2,400 pages ¹

Yellow, Cyan, Magenta - Approximately 1,200 pages 1

<High Yield Black> LC400BK

<High Yield Yellow> LC400Y

<High Yield Cyan> LC400C

<High Yield Magenta> LC400M

Black, Yellow, Cyan, Magenta - Approximately 600 pages 1

For more information about the replacement consumables, visit us at http://www.brother.com/pageyield/.

What is Innobella™?

Innobella™ is a range of genuine consumables offered by Brother. The name "Innobella™" derives from the words "Innovation" and "Bella" (meaning "Beautiful" in Italian) and is a representation of the "innovative" technology providing you with "beautiful" and "long lasting" print results.



When you print photo images, Brother recommends Innobella™ glossy photo paper (BP71 series) for high quality. Brilliant prints are made easier with Innobella™ Ink and paper.

¹ Approx. cartridge yield is declared in accordance with ISO/IEC 24711.

Network (LAN)



For details about the full Network specifications, see the Network User's Guide.

LAN You can connect your machine to a network for Network Printing,

Network Scanning, PC Fax Send, PC Fax Receive (Windows[®] only), Remote Setup, and access photos from PhotoCapture Center[™] ¹. Also included is Brother BRAdmin Light ² Network Management

software.

Wireless Network

Security

SSID (32 chr), WEP 64/128 bit, WPA-PSK (TKIP/AES),

WPA2-PSK (AES)

Setup Support Utility AOSS™ Yes

WPS Yes

See the Computer Requirements chart on page 135.

If you require more advanced printer management, use the latest Brother BRAdmin Professional utility version that is available as a download from http://solutions.brother.com/.

Index

<u>A</u>	U	
ADF (automatic document feeder)	Dialling a pause	rs52 47 47 49
Brother	E	
CreativeCenter3		
	Envelopes 17, 19,	-
C	Error messages on LCD	
0.1110.	B&W Print Only	
Caller ID	Cannot Detect	
Caller ID history49	Cannot Print	
Add To Phone Book49	Comm. Error	
Delete	Cover is Open	
Send a fax49	Data Remaining	
Cleaning	Document Jam	
print head68	Ink Absorber Full	
scanner67	Ink Absorber NearFull	
Connecting external TAD (answering machine)43	Ink Low No Ink Cartridge	
external telephone44	No Paper Fed	
Consumable items136	Not Registered	
Control panel overview4	Out of Memory	
Control Parier Overview	Paper Jam	
See Software User's Guide.	Unable to Clean	
Copy	Unable to Clean	
paper size54	Unable to Print	
paper type54	Unable to 1 mit	
tray use22	Wrong Paper Size	
using scanner glass29	Wrong Tray Setting	
Cordless telephone45	Extension telephone, using	
Custom telephone features on a single	External telephone, connecting	
line90		

Fax codes	Jams
changing46	document78
Remote Activation Code 38, 45	paper79
Remote Deactivation Code45	
using45	L
Fax Detect38	
Fax, from PC	Labels 17, 25, 26, 27
See Software User's Guide.	LCD (Liquid Crystal Display)96
Fax, stand-alone	Brightness8
receiving35	
difficulties88	M
F/T Ring Time, setting37	
Fax Detect38	Macintosh
Fax Preview38, 39	See Software User's Guide.
from extension telephone45	Maintenance, routine
Ring Delay, setting37	replacing ink cartridges64
telephone line interference / VoIP94	Manual
tray use23	dialling 47
sending31	receive
change scanner glass size32	Manual feed slot17
color fax32	Mode, entering
difficulties89	Copy 4
Fax Preview33	Fax 4
telephone line interference / VoIP94	PhotoCapture4
Transmission Verification Report33	Scan
Fax/Tel mode	Multi-line connections (PABX)44
answering at extension telephones45	,
Remote Activation Code45	N
Remote Deactivation Code45	
Ring Delay37	Network
3	Printing
G	See Network User's Guide.
	Scanning
Greyscale 128, 132	See Software User's Guide.
,	
H	0
Help	One touch
LCD messages96	changing 52
Menu Table97	setting up50
	using 47
I and the second	Outgoing Call
<u>-</u>	Add To Phone Book49
Ink cartridges	Delete49
ink dot counter64	Send a fax49
replacing64	
Innobella™136	

F

P

Paper	.24, 126, 127
capacity	27
loading	
loading envelopes and postc	ard19
printable area	21
size of document	28
type	22, 26
PhotoCapture Center™	
from PC	
See Software User's Guide	
Memory Stick PRO™	55
Memory Stick™	55
MultiMedia Card	55
Preview photos	58
Print settings	58
Scan to Media	
change file name	59
SD	55
SDHC	55
specifications	130
Presto! PageManager	
See Software User's Guide.	See also Help
in the Presto! PageManager	application.
Print	
difficulties	86
paper jams	79
printable area	
resolution	
specifications	133
Printing	
See Software User's Guide.	
Programming your machine	96

Q

Quick Dial	50		
changing	52		
One Touch Dial			
custom scan profile	50		
setting up			
Search			
Speed Dial			
changing	52		
using			
Ç			
R			
Receive Mode			
External TAD			
Fax Only			
Fax/Tel			
Manual			
Redial/Pause	48		
Remote Setup			
See Software User's Guide.			
Resolution			
copy	129		
fax	128		
print	133		
scan	132		
Ring Delay, setting	37		
S			
Scannable area	30		
Scanning			
See Software User's Guide.			
Sockets			
EXT			
External telephone	44		
Speed Dial			
changing	52		
setting up	51		
using			

T

TAD (telephone answering device),	
external	, 43
connecting	•
receive mode	
recording OGM	
Telephone line	_
connections	43
difficulties	89
interference / VoIP	94
multi-line (PABX)	
Text, entering	
special characters	123
Transferring your faxes or Fax Journal	
report	
Transparencies 24, 25, 27, 126,	127
Tray Select key	
Troubleshooting	86
document jam	
error messages on LCD	70
if you are having difficulty	
copying	
document jam	
incoming calls	
Network	
PhotoCapture Center™	
printing	
printing received faxes	
scanning	
software	
telephone line or connections	
maintenance messages on LCD	
paper jam	79
3.4	
V	
Volume, setting	
beeper	Ω
ring	
speaker	
opeanor	0
W	
Windows®	
See Software User's Guide.	
Wireless Network	
See Quick Setup Guide and Network	
User's Guide.	



Visit us on the World Wide Web http://www.brother.com/

This machine is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.