


brother®

ADVANCED USER'S GUIDE

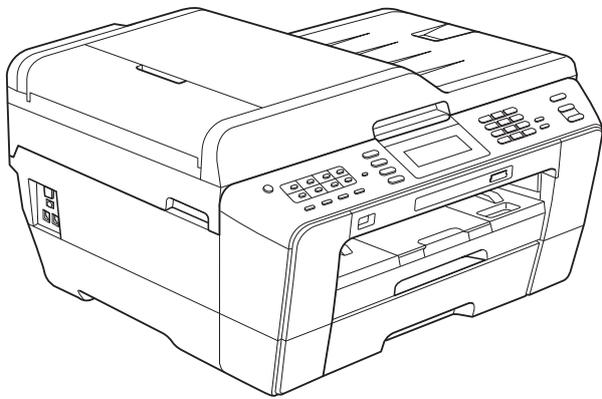

MFC-J6910DW

Version 0

CHN-ENG

User's Guides and where do I find it?

Which manual?	What's in it?	Where is it?
Safety and Legal	Read this Guide first. Please read the Safety Instructions before you set up your machine. See this Guide for trademarks and legal limitations.	Printed / In the box
Quick Setup Guide	Follow the instructions for setting up your machine and installing the drivers and software for the operating system and connection type you are using.	Printed / In the box
Basic User's Guide	Learn the basic Fax, Copy, Scan and PhotoCapture Center™ operations and how to replace consumables. See troubleshooting tips.	Printed / In the box
Advanced User's Guide	Learn more advanced operations: Fax, Copy, security features, printing reports and performing routine maintenance.	PDF file / Documentation CD-ROM
Software User's Guide	Follow these instructions for Printing, Scanning, Network Scanning, PhotoCapture Center™, Remote Setup, PC-Fax, and using the Brother ControlCenter utility.	PDF file / Documentation CD-ROM
Network Glossary	This Guide provides basic information about advanced network features of Brother machines along with explanations about general networking and common terms.	PDF file / Documentation CD-ROM
Network User's Guide	This Guide provides useful information about wired and wireless network settings and security settings using the Brother machine. You can also find supported protocol information for your machine and detailed troubleshooting tips.	PDF file / Documentation CD-ROM

Table of Contents

1	General setup	1
	Memory storage.....	1
	Sleep Mode	1
	LCD display	2
	Setting the Dim Timer for the backlight	2
	Dial Prefix	2
	Setting up or changing the prefix number.....	2
	Mode Timer.....	3
2	Security features	4
	Secure Function Lock 2.0.....	4
	Before you begin to use Secure Function Lock 2.0.....	4
	Setting and changing the Administrator Password.....	5
	Setting up restricted users.....	6
	Turning Secure Function Lock on/off.....	6
	Switching users	7
	Changing to the Public mode	7
3	Sending a fax	8
	Additional sending options.....	8
	Sending faxes using multiple settings	8
	Stop faxing.....	8
	Contrast	8
	Changing fax resolution.....	9
	Setting your changes as a new default.....	9
	Restoring fax settings to the factory settings.....	9
	Additional sending operations.....	10
	Sending a duplex (2-sided) fax from the ADF	10
	Sending a fax manually	10
	Sending a fax at the end of a conversation	11
	Dual Access (Monochrome only).....	11
	Broadcasting (Monochrome only).....	11
	Real Time Transmission.....	13
	Overseas Mode	13
	Delayed Faxing (Monochrome only).....	13
	Delayed Batch Transmission (Monochrome only).....	14
	Checking and cancelling waiting jobs.....	14
	Polling overview.....	15
	Polled Transmit (Monochrome only).....	15

4 Receiving a fax 16

Memory Receive (Monochrome only).....	16
Out of Paper Reception	16
Fax Forwarding.....	16
Fax Storage	17
Printing a fax from the memory	17
PC-Fax Receive (Windows® only).....	18
Turning off Memory Receive operations.....	19
Changing Memory Receive operations	19
Remote Retrieval	20
Setting a Remote Access Code.....	20
Using your Remote Access Code.....	20
Remote Fax commands	21
Retrieving fax messages	22
Changing your Fax Forwarding number	22
Additional receiving operations.....	23
Printing a reduced incoming fax	23
Polling overview.....	23
Polling receive	23

5 Dialling and storing numbers 26

Additional dialling operations.....	26
Combining Quick Dial numbers	26
Additional ways to store numbers.....	27
Storing One Touch numbers from Outgoing Calls.....	27
Storing One Touch numbers from the Caller ID history.....	27
Storing Speed Dial numbers from Outgoing Calls.....	28
Storing Speed Dial numbers from the Caller ID history.....	29
Setting up groups for broadcasting.....	30

6 Printing reports 32

Fax reports.....	32
Transmission Verification Report.....	32
Fax Journal (activity report).....	32
Reports.....	33
How to print a report.....	33

7 Making copies 34

Copy settings.....	34
Stop copying.....	34
Changing copy speed and quality.....	34
Enlarging or reducing the copied image.....	35
Making N in 1 copies or a poster (Page Layout).....	36
2 in 1 ID Copy.....	38
Sorting copies using the ADF.....	39
Adjusting Density.....	39
Ink Save Mode.....	39
Thin Paper Copy.....	40
Skew Adjustment.....	40
Book Copy.....	41
Watermark Copy.....	41
Duplex (2-sided) copying.....	42
Setting your favourites.....	45

8 Printing photos from a memory card or USB Flash memory drive 46

PhotoCapture Center™ operations.....	46
Memory cards, USB Flash memory drive and folder structures.....	46
Movie printing.....	47
Print Images.....	47
Print Index (Thumbnails).....	47
Printing Photos.....	48
Enhance Photos.....	48
DPOF printing.....	50
PhotoCapture Center™ print settings.....	51
Print Quality.....	51
Paper options.....	51
Adjusting Brightness, Contrast and Color.....	52
Cropping.....	53
Borderless printing.....	54
Date Print.....	54
Setting your changes as a new default.....	54
Restoring all settings to the factory settings.....	54
Scan to a memory card or USB Flash memory drive.....	55
Glass Scan Size.....	55
Auto Crop.....	55
How to set a new default.....	56
How to reset to factory settings.....	56

9	Printing photos from a camera	57
	Printing photos directly from a PictBridge camera.....	57
	PictBridge requirements	57
	Setting your digital camera	57
	Printing Images.....	58
	DPOF printing.....	58
	Printing photos directly from a digital camera (without PictBridge).....	59
	Printing Images.....	59
A	Routine maintenance	60
	Cleaning and checking the machine.....	60
	Cleaning the outside of the machine	60
	Cleaning the machine's printer platen	61
	Cleaning the paper feed rollers	62
	Cleaning the paper pick-up rollers.....	63
	Cleaning the paper pick-up rollers for paper tray #2	64
	Checking the ink volume	64
	Packing and shipping the machine	65
B	Glossary	67
C	Index	71

Memory storage

Even if there is a power failure, you will not lose the settings you have chosen using the **MENU** button because they are stored permanently. Also, you will not lose your settings in the **FAX, SCAN, COPY** and **PHOTO CAPTURE** mode key menus if you have chosen **Set New Default** or **Favorite Settings**. You may have to reset the date and time.



Note

During a power failure the machine will retain messages that are in the memory for approximately 24 hours.

Sleep Mode

You can choose how long the machine will remain idle (from 1 to 60 minutes) before it goes into Sleep Mode. The timer will restart if any operation is carried out on the machine.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **Sleep Mode**.
- 5 Press **Sleep Mode**.
- 6 Press **1 Min, 2 Mins, 3 Mins, 5 Mins, 10 Mins, 30 Mins** or **60 Mins**, which is the length of time the machine is idle before entering sleep mode.
- 7 Press **Stop/Exit**.

LCD display

Setting the Dim Timer for the backlight

You can set how long the LCD backlight stays on after the last key press.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display General Setup.
- 3 Press General Setup.
- 4 Press **▲** or **▼** to display LCD Settings.
- 5 Press LCD Settings.
- 6 Press Dim Timer.
- 7 Press 10 Secs, 20 Secs, 30 Secs or Off.
- 8 Press **Stop/Exit**.

Dial Prefix

The Dial Prefix setting will automatically dial a predefined number before every fax number you dial. For example, if your telephone system requires a 9 to dial an outside number use this setting to automatically dial 9 for every fax you send.

Setting up or changing the prefix number

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display Initial Setup.
- 3 Press Initial Setup.
- 4 Press **▲** or **▼** to display Dial Prefix.
- 5 Press Dial Prefix.
- 6 Press On (or Off).
- 7 Press Dial Prefix.
- 8 Enter the prefix number (up to 5 digits) by pressing the buttons on the Touchscreen.
- 9 Press **OK**.



Note

- If your telephone system requires a timed break recall (hookflash), press **Hook** to enter the break.
- You cannot use ! with any other numbers or characters.
- If the pulse dialing mode is on, # and * are not available to use.

- 10 Press **Stop/Exit**.

Mode Timer

The machine has four temporary mode keys on the control panel: **FAX**, **SCAN**, **COPY** and **PHOTO CAPTURE**. You can change the amount of time the machine takes after the last Scan, Copy or PhotoCapture operation before it returns to Fax mode. If you choose **Off**, the machine stays in the mode you used last by default.



- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display General Setup.
- 3 Press General Setup.
- 4 Press **▲** or **▼** to display Mode Timer.
- 5 Press Mode Timer.
- 6 Press **0 Sec**, **30 Secs**, **1 Min**, **2 Mins**, **5 Mins** or **Off**.
- 7 Press **Stop/Exit**.

2

Security features

Secure Function Lock 2.0

Secure Function Lock lets you restrict public access to certain machine functions:

- Fax Tx (Fax Transmit)
- Fax Rx (Fax Receive)
- Copy
- Scan
- PhotoCapture Center™ (PCC)
- PC Print
- Color Print
- Page Limit

This feature also prevents users from changing the default settings of the machine by limiting access to the menu settings.

Before using the security features, you must first enter an administrator password.

Access to restricted operations can be enabled by creating a restricted user. Restricted users must enter a user password to use the machine.

Make a careful note of your password. If you forget it, please call your Brother dealer for service.

Note

- Only administrators can set limitations and make changes for each user.
- If Fax Tx is disabled, you cannot use any functions in the Fax menu.
- Polling Receive is enabled only when both Fax Tx and Fax Rx are enabled.

Before you begin to use Secure Function Lock 2.0

You can configure Secure Function Lock 2.0 settings using a Web browser. Before configuration, following preparations are needed.

- 1 Start your Web browser.
- 2 Type “http://machine’s IP address/” into your browser’s address bar (where “machine’s IP address” is the machine’s IP address).


- For example:

http://192.168.1.2/

Note

You can find the machine's IP address in the Network Configuration List. (See *Printing the Network Configuration List* in the *Network User's Guide*.)

- 3 Enter a password in the **Login** box. (This is a password to log into the machine's Web page, not the administrator password for Secure Function Lock.) Click .

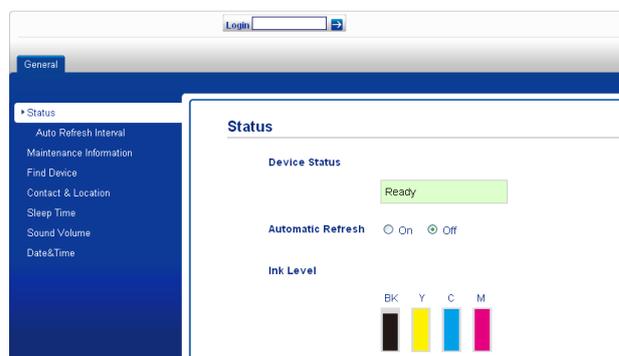

**Note**

If you are using a Web browser to configure the machine's setting for the first time, set a password.

- 1 Click **Please configure the password.**
- 2 Enter a password you want to use (up to 32 characters).
- 3 Re-enter the password in **Confirm new password** box.
- 4 Click **Submit.**

Setting and changing the Administrator Password


You can configure these settings using a Web browser. To set up the Web page, see *Before you begin to use Secure Function Lock 2.0* on page 4. Then follow the instructions below.

Setting the administrator password

The password you set in these steps is for the administrator. This password is used to set up users and to turn Secure Function Lock on or off. (See *Setting up restricted users* on page 6 and *Turning Secure Function Lock on/off* on page 6.)

- 1 Click **Administrator.**
- 2 Click **Secure Function Lock.**

- 3 Enter a four-digit number for the password in the **New Password** box.

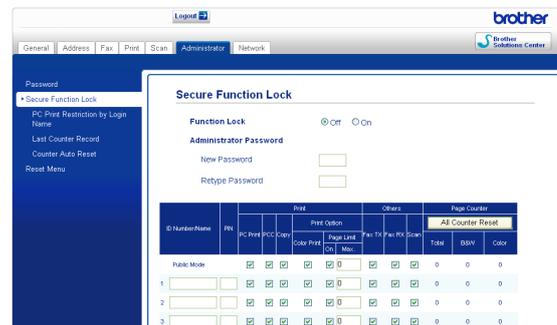

- 4 Re-enter the password in the **Retype Password** box.
- 5 Click **Submit.**

Changing the administrator password

- 1 Click **Administrator.**
- 2 Click **Secure Function Lock.**
- 3 Enter a four-digit number for the new password in the **New Password** box.
- 4 Re-enter the new password in the **Retype Password** box.
- 5 Click **Submit.**


Setting up restricted users

You can set up users with restrictions and a password. You can set up to 10 users.

You can configure these settings using a Web browser.

To set up the Web page, see *Before you begin to use Secure Function Lock 2.0* on page 4. Then follow the instructions below.

- 1 Click **Administrator**.
- 2 Click **Secure Function Lock**.
- 3 Enter an alphanumeric group name or user name (up to 15 characters) in the **ID Number/Name** box and then enter a four-digit password in the **PIN** box.

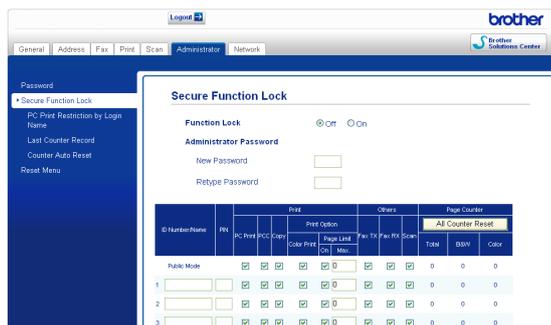

- 4 Uncheck the functions that you want to restrict in the **Print** box or the **Others** box. If you want to configure the maximum page count, check the **On** box in **Page Limit**, and then enter the number in the **Max.** box. Then click **Submit**.

Note

- You cannot use the same password as another user's password.
- You can set up one Public user. Public users do not need to enter a password. For more information, see the *Network User's Guide*.

Turning Secure Function Lock on/off

Note

If you enter the wrong password, the LCD will show **Wrong Password**. Enter the correct password.

Turning Secure Function Lock on

- 1 Press **MENU**.
- 2 Press **General Setup**.
- 3 Press **▲** or **▼** to display **Function Lock**.
- 4 Press **Function Lock**.
- 5 Press **Lock Off→On**.
- 6 Enter your four-digit administrator password using the buttons on the LCD. Press **OK**.

Turning Secure Function Lock off

- 1 Press **Public**.
- 2 Press **Lock On→Off**.
- 3 Enter your four-digit administrator password using the buttons on the LCD. Press **OK**.

Switching users

This setting allows a restricted user to log on the machine when Secure Function Lock is turned on.

- 1 Hold down **Shift** as you press *****.
Or, on the LCD, press 
or  (where xxxxx is the user's name). Then press **Change User**.
- 2 Press **▲** or **▼** to display your user name.
- 3 Press your user name.
- 4 Enter your four-digit user password using the buttons on the LCD.
Press **OK**.

Changing to the Public mode

- 1 Press  (where xxxxx is the user's name).
- 2 Press **Go to Public**.



Note

After a restricted user has finished using the machine, it will return to the Public setting within the same time as the Mode Timer setting. (See *Mode Timer* on page 3.)

3


Sending a fax

Additional sending options

Sending faxes using multiple settings

When you send a fax you can choose any combination of these settings: resolution, contrast, scan size, etc.

- 1 Press  (**FAX**).
The LCD shows:

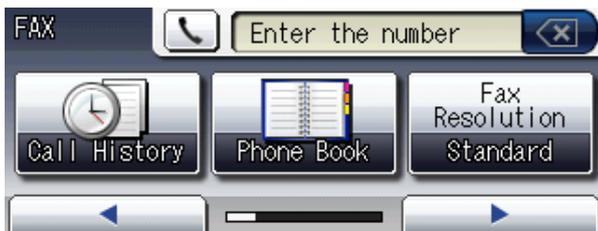

- 2 Press ◀ or ▶ to display a setting you want to change. When the setting is displayed, press it.
- 3 Press an option.
- 4 Go back to 2 to change more settings.

Note

- Most settings are temporary and the machine returns to its default settings after you send a fax.
- You can save some of the settings you use most often by setting them as the default. These settings will stay until you change them again. (See *Setting your changes as a new default* on page 9.)

Stop faxing

To stop faxing, press **Stop/Exit**.

Contrast

If your document is very light or very dark, you may want to change the contrast. For most documents the factory setting **Auto** can be used. It automatically chooses the suitable contrast for your document.

Choose **Light** when sending a light document. Choose **Dark** when sending a dark document.

- 1 Press  (**FAX**).
- 2 Press ◀ or ▶ to display **Contrast**.
- 3 Press **Contrast**.
- 4 Press **Auto**, **Light** or **Dark**.

Note

Even if you choose **Light** or **Dark**, the machine will send the fax using the **Auto** setting in any of the following conditions:

- When you send a color fax.
- When you choose **Photo** as the Fax Resolution.

Changing fax resolution

The quality of a fax can be improved by changing the fax resolution.

- 1 Press  (**FAX**).
- 2 Press ◀ or ▶ to display Fax Resolution.
- 3 Press Fax Resolution.
- 4 Press the resolution you want.



Note

You can choose four different resolution settings for monochrome faxes and two for color.

Monochrome	
Standard	Suitable for most typed documents.
Fine	Good for small print and transmits a little slower than Standard resolution.
S.Fine	Good for small print or artwork and transmits slower than Fine resolution.
Photo	Use when the document has varying shades of grey or is a photograph. Photo has the slowest transmission.

Color	
Standard	Suitable for most typed documents.
Fine	Use when the document is a photograph. The transmission time is slower than Standard resolution.

If you choose S.Fine or Photo and then use the **Color Start** key to send a fax, the machine will send the fax using the Fine setting.

Setting your changes as a new default

You can save the fax settings for Fax Resolution, Contrast, Glass Scan Size, Preview and Real Time TX you use most often by setting them as default. These settings will stay until you change them again.

- 1 Press  (**FAX**).
- 2 Press ◀ or ▶ to choose the menu option that you want to change. Press your new option.

Repeat this step for each setting you want to change.

- 3 After changing the last setting, press ◀ or ▶ to display Set New Default.
- 4 Press Set New Default.
- 5 Press Yes.
- 6 Press **Stop/Exit**.

Restoring fax settings to the factory settings

You can restore all the fax settings you have changed to the factory settings. These settings will stay until you change them again.


- 1 Press  (**FAX**).
- 2 Press ◀ or ▶ to display Factory Reset.
- 3 Press Factory Reset.
- 4 Press Yes.
- 5 Press **Stop/Exit**.

Additional sending operations


Sending a duplex (2-sided) fax from the ADF

You can send 2-sided documents up to Legal size from the ADF.

- 1 Press **Duplex** on the machine's panel.
- 2 Load your document in the ADF.
- 3 Press **Fax**.
- 4 Do one of the following:
 - If your document is flipped on the Long edge, press **DuplexScan :LongEdge**.

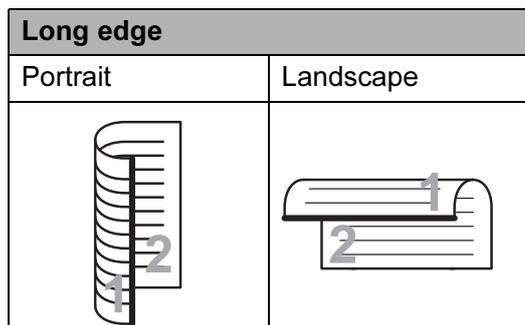

- If your document is flipped on the Short edge, press **DuplexScan :ShortEdge**.

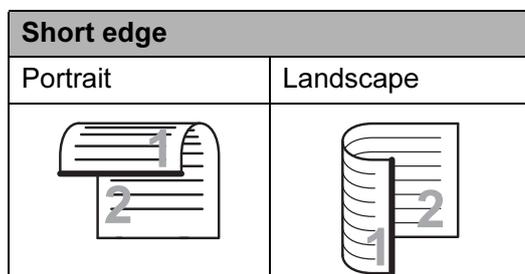

- 5 Enter the fax number.
- 6 Press **Mono Start** or **Color Start**.

The machine will now scan and send your document.

Sending a fax manually

Manual transmission lets you hear the dialling, ringing and fax-receiving tones while sending a fax.



Note

To send a multiple page fax, use the ADF.

- 1 Press **(FAX)**.
- 2 Load your document.
- 3 To listen for a dial tone press **Hook** or pick up the handset of the external telephone.
- 4 Dial the fax number.



Note

If your network supports the LDAP protocol you can search for fax numbers and E-mail addresses on your server. (See *LDAP operation* in the *Network User's Guide*.)

- 5 When you hear the fax tone, press **Mono Start** or **Color Start**. Press **Send** when you select the **Fax Mode to Advanced Mode** and send the fax from the scanner glass. (See *Setting the Fax Logic (sending and receiving sequence)* in *chapter 1* in the *Basic User's Guide*.)
- 6 Replace the handset of the external phone.

Sending a fax at the end of a conversation

At the end of a conversation you can send a fax to the other party before you both hang up.

- 1 Ask the other party to wait for fax tones (beeps) and then to press the Start or Send key before hanging up.
- 2 Press  (**FAX**).
- 3 Load your document.
- 4 Press **Mono Start** or **Color Start**.
 - If you are using the scanner glass, press **Send** to send the fax (when you select the **Fax Mode** to **Advanced Mode**).
- 5 Replace the handset of the external phone.

Dual Access (Monochrome only)

You can dial a number and start scanning the fax into memory—even when the machine is sending from memory, receiving faxes or printing PC data. The LCD shows the new job number and available memory.

The number of pages you can scan into the memory will vary depending on the data that is printed on them.



Note

If the **Out of Memory** message appears, press **Stop/Exit** to cancel or **Mono Start** to send the pages scanned so far.

Broadcasting (Monochrome only)

Broadcasting is when the same fax message is automatically sent to more than one fax number. You can include Groups, One Touch, Speed Dial numbers, and up to 50 manually dialled numbers in the same broadcast.

After the broadcast is finished, a Broadcast Report will be printed.

Before you begin the broadcast

One Touch and Speed Dial numbers must be stored in the machine's memory before they can be used in a broadcast. (See *Storing One Touch Dial numbers* and *Storing Speed Dial numbers* in chapter 7 of the *Basic User's Guide*.)

Group numbers must also be stored in the machine's memory before they can be used in a broadcast. Group numbers include many stored One Touch Dial and Speed Dial numbers for easier dialling. (See *Setting up groups for broadcasting* on page 30.)

How to broadcast a fax

- 1 Press  (**FAX**).
- 2 Load your document.
- 3 Press ◀ or ▶ to display *Broadcasting*.
- 4 Press *Broadcasting*.
- 5 You can add numbers to the broadcast in the following ways:
 - Press *Add Number* and enter a number using the buttons on the LCD.

Press **OK**.



Note

If you downloaded Internet Fax:

If you want to broadcast using an E-mail address, press , enter the E-mail address, and press **OK**. (See *Entering Text* in appendix C of the *Basic User's Guide*.)

- Press *Phone Book*. Press  to search by *Alphabetical Order* or *Numerical Order*. Press the entries that you want to add to the broadcast.
- Press **OK**.



Note

If you chose Numerical Order:

Speed Dial numbers start with #.
One Touch numbers start with *.

- 6 After you have entered all the fax numbers by repeating step 5, press **OK**.
- 7 Press **Mono Start**.



Note

- If you did not use up any of the numbers for Groups, you can “broadcast” faxes to as many as 266 different numbers.
- The available memory will vary depending on the types of jobs in the memory and the number of locations used for broadcasting. If you broadcast to the maximum numbers available, you will not be able to use dual access and delayed fax.
- If the *Out of Memory* message appears, press **Stop/Exit** to cancel or **Mono Start** to send the pages scanned so far.

Cancelling a Broadcast in progress

- 1 Press **Stop/Exit**.
- 2 Do one of the following:
 - To cancel the entire broadcast, press *Entire Broadcast*. Go to step 3.
 - To cancel the current job, press the button that displays the number being dialled. Go to step 4.
 - To exit without cancelling, press **Stop/Exit**.
- 3 When the LCD asks if you want to cancel the entire broadcast, do one of the following:
 - Press *Yes* to confirm.
 - To exit without cancelling, press *No* or **Stop/Exit**.
- 4 Do one of the following:
 - To cancel the current job, press *Yes*.
 - To exit without cancelling, press *No* or **Stop/Exit**.

Real Time Transmission

When you are sending a fax, the machine will scan the documents into the memory before sending. Then, as soon as the telephone line is free, the machine will start dialling and sending.

Sometimes, you may want to send an important document immediately, without waiting for memory transmission. You can do this by turning on `Real Time TX`.

- 1 Press  (**FAX**).
- 2 Load your document.
- 3 Press ◀ or ▶ to display `Real Time TX`.
- 4 Press `Real Time TX`.
- 5 Press `On`.



Note

- If the memory is full and you are sending a black & white fax from the ADF, the machine will send the document in real time (even if `Real Time TX` is set to `Off`). Faxes from the scanner glass cannot be sent until you clear some of the memory.
- In Real Time Transmission, the automatic redial feature does not work when using the scanner glass.

Overseas Mode

If you are having difficulty sending a fax overseas due to possible interference on the telephone line, we recommend that you turn on the Overseas mode. After you send a fax using this feature, the feature will turn itself off.

- 1 Press  (**FAX**).
- 2 Load your document.
- 3 Press ◀ or ▶ to display `Overseas Mode`.
- 4 Press `Overseas Mode`.
- 5 Press `On` (or `Off`).

Delayed Faxing (Monochrome only)

You can store up to 50 faxes in the memory to be sent within 24 hours. These faxes will be sent at the time of day you enter in step 6.

- 1 Press  (**FAX**).
- 2 Load your document.
- 3 Press ◀ or ▶ to display `Delayed Fax`.
- 4 Press `Delayed Fax`.
- 5 Press `On`.
- 6 Enter the time you want the fax to be sent (in 24-hour format) using the buttons on the LCD.
(For example, enter 19:45 for 7:45 PM.)
Press `OK`.



Note

The number of pages you can scan into the memory depends on the amount of data that is printed on each page.

Delayed Batch Transmission (Monochrome only)

Before sending the delayed faxes, your machine will help you economize by sorting all the faxes in the memory by destination and scheduled time. All delayed faxes that are scheduled to be sent at the same time to the same fax number will be sent as one fax to save transmission time.

- 1 Press  (FAX).
- 2 Press ◀ or ▶ to display Batch TX.
- 3 Press Batch TX.
- 4 Press On.
- 5 Press **Stop/Exit**.

Checking and cancelling waiting jobs

You can check which jobs are still waiting in the memory to be sent, or cancel a job. (If there are no jobs, the LCD shows No Jobs Waiting.)

- 1 Press MENU.
- 2 Press ▲ or ▼ to display Fax.
- 3 Press Fax.
- 4 Press ▲ or ▼ to display Remaining Jobs.
- 5 Press Remaining Jobs. Any waiting jobs appear on the LCD.
- 6 Press ▲ or ▼ to scroll through the jobs and press the job you want to cancel. Press OK.
- 7 Do one of the following:
 - To cancel, press Yes.
If you want to cancel another job go to step 6.
 - To exit without cancelling, press No.
- 8 When you have finished, press **Stop/Exit**.

Polling overview

Polling lets you set up your machine so other people can receive faxes from you, but they pay for the call. It also lets you call somebody else's fax machine and receive a fax from it, so you pay for the call. The polling feature needs to be set up on both machines for this to work. Not all fax machines support polling.

Polled Transmit (Monochrome only)

Polled transmit lets you set up your machine to wait with a document so another fax machine can call and retrieve it.

The document will be stored and can be retrieved by any other fax machine until you delete it from the memory. (See *Checking and cancelling waiting jobs* on page 14.)

Setup for polled transmit

- 1 Press  (FAX).
- 2 Load your document.
- 3 Press ◀ or ▶ to display Polled TX.
- 4 Press Polled TX.
- 5 Press Standard.
- 6 Press ◀ or ▶ to display any settings you want to change, and press it. Then choose your option. After each setting is accepted, you can continue to change more settings.
- 7 Press **Mono Start**.
- 8 If you are using the scanner glass, the LCD will prompt you to choose one of the following options:
 - Press **Yes** to scan another page. Go to step 9.
 - Press **No** or **Mono Start** to send the document.

- 9 Place the next page on the scanner glass and press **Mono Start**. Repeat steps 8 and 9 for each additional page. Your machine will automatically send the fax when it is polled.

Setup for polled transmit with secure code

Secure Polling lets you restrict who can get the documents you set up to be polled.

Secure Polling only works with Brother fax machines. If another person wants to retrieve a fax from your machine, they will have to enter the secure code.

- 1 Press  (FAX).
- 2 Load your document.
- 3 Press ◀ or ▶ to display Polled TX.
- 4 Press Polled TX.
- 5 Press Secure.
- 6 Enter a four-digit number. Press OK.
- 7 Press ◀ or ▶ to display any settings you want to change, and press it. Then choose your option. After each setting is accepted, you can continue to change more settings.
- 8 Press **Mono Start**.
- 9 If you are using the scanner glass, the LCD will prompt you to choose one of the following options:
 - Press **Yes** to scan another page. Go to step 10.
 - Press **No** or **Mono Start** to send the document.
- 10 Place the next page on the scanner glass and press **Mono Start**. Repeat steps 9 and 10 for each additional page. Your machine will automatically send the fax.

4

Receiving a fax

Memory Receive (Monochrome only)

You can only use one Memory Receive operation at a time:

- Fax Forwarding
- Fax Storage
- PC-Fax Receive
- Off

You can change your selection at any time. If received faxes are still in the machine's memory when you change the Memory Receive operation, a message will appear on the LCD. (See *Changing Memory Receive operations* on page 19.)

Out of Paper Reception

As soon as the paper tray becomes empty during fax reception, the LCD shows `No Paper Fed`. Put some paper in the paper tray. (See *Loading paper and other print media* in chapter 2 of the *Basic User's Guide*.)

If you don't put paper in the paper tray, the machine will carry on receiving the fax, with the remaining pages being stored in memory, if enough memory is available.

Further incoming faxes will also be stored in memory until the memory is full. To print the faxes, put fresh paper in the tray. When the memory is full the machine will stop automatically answering calls.

Fax Forwarding

When you choose Fax Forward, your machine stores the received fax in the memory. The machine will then dial the fax number you have programmed and forward the fax message.

- 1 Press `MENU`.
- 2 Press `▲` or `▼` to display `Fax`.
- 3 Press `Fax`.
- 4 Press `▲` or `▼` to display `Setup Receive`.
- 5 Press `Setup Receive`.
- 6 Press `▲` or `▼` to display `Memory Receive`.
- 7 Press `Memory Receive`.
- 8 Press `Fax Forward`.
- 9 Enter the forwarding number (up to 20 digits) by using the buttons on the LCD. Press `OK`.
- 10 Press `Backup Print:On` or `Backup Print:Off`.

! IMPORTANT

- If you choose `Backup Print:On`, the machine will also print the fax at your machine so you will have a copy. This is a safety feature in case there is a power failure before the fax is forwarded or a problem at the receiving machine.
- When you receive a color fax, your machine prints the color fax at your machine but does not send the fax to the fax forwarding number you programmed.

- 11 Press `Stop/Exit`.

Fax Storage

If you choose Fax Storage, your machine stores the received fax in the memory. You will be able to retrieve fax messages from another location using the remote retrieval commands.

If you have set Fax Storage, a backup copy will automatically be printed at the machine.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Setup Receive**.
- 5 Press **Setup Receive**.
- 6 Press **▲** or **▼** to display **Memory Receive**.
- 7 Press **Memory Receive**.
- 8 Press **Fax Storage**.
- 9 Press **Stop/Exit**.



Note

Color faxes cannot be stored in the memory. When you receive a color fax your machine prints the color fax at your machine.

Printing a fax from the memory

If you have chosen Fax Storage, you can still print a fax from the memory when you are at your machine.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Print Document**.
- 5 Press **Print Document**.
- 6 Press **Mono Start**.
- 7 Press **Stop/Exit**.



Note

When you print a fax from the memory, the fax data will be erased.

PC-Fax Receive (Windows® only)

If you turn on the PC-Fax Receive feature your machine will store received faxes in memory and send them to your PC automatically. You can then use your PC to view and store these faxes.

Even if you have turned off your PC (at night or on the weekend, for example), your machine will receive and store your faxes in its memory. The number of received faxes that are stored in the memory will appear on the LCD.

When you start your PC and the PC-FAX Receiving software runs, your machine transfers your faxes to your PC automatically.

To transfer the received faxes to your PC you must have the PC-FAX Receiving software running on your PC. (For details, see *PC-FAX receiving* in the *Software User's Guide*.)

If you choose `Backup Print:On` the machine will also print the fax.

- 1 Press `MENU`.
- 2 Press `▲` or `▼` to display `Fax`.
- 3 Press `Fax`.
- 4 Press `▲` or `▼` to display `Setup Receive`.
- 5 Press `Setup Receive`.
- 6 Press `▲` or `▼` to display `Memory Receive`.
- 7 Press `Memory Receive`.
- 8 Press `PC Fax Receive`.
- 9 The LCD shows the message `Run PC-Fax on your computer..`
Press `OK`.
- 10 Press `<USB>` or the PC you want to receive faxes.

- 11 Press `OK`.
- 12 Press `Backup Print:On` or `Backup Print:Off`.
- 13 Press **Stop/Exit**.



Note

- PC-Fax Receive is not supported in the Mac OS.
- Before you can set up PC-Fax Receive you must install the MFL-Pro Suite software on your PC. Make sure your PC is connected and turned on. (For details see *PC-FAX receiving* in the *Software User's Guide*.)
- If you get an error message and the machine cannot print the faxes in memory, you can use this setting to transfer your faxes to your PC. (For details, see *Transferring your faxes or Fax Journal report* in *appendix B* of the *Basic User's Guide*.)
- When you receive a color fax, your machine prints the color fax at your machine but does not send the fax to your PC.

Changing the destination PC

- 1 Press `MENU`.
- 2 Press `▲` or `▼` to display `Fax`.
- 3 Press `Fax`.
- 4 Press `▲` or `▼` to display `Setup Receive`.
- 5 Press `Setup Receive`.
- 6 Press `▲` or `▼` to display `Memory Receive`.
- 7 Press `Memory Receive`.
- 8 Press `PC Fax Receive`.

- 9 The LCD shows the message
Run PC-Fax on your computer..
Press OK.
- 10 Press <USB>, or the PC you want to
receive faxes.
- 11 Press OK.
- 12 Press Backup Print:On or
Backup Print:Off.
- 13 Press **Stop/Exit**.

Turning off Memory Receive operations

- 1 Press MENU.
- 2 Press ▲ or ▼ to display Fax.
- 3 Press Fax.
- 4 Press ▲ or ▼ to display
Setup Receive.
- 5 Press Setup Receive.
- 6 Press ▲ or ▼ to display
Memory Receive.
- 7 Press Memory Receive.
- 8 Press Off.
- 9 Press **Stop/Exit**.



Note

The LCD will give you more options if there are received faxes still in the machine's memory. (See *Changing Memory Receive operations* on page 19.)

Changing Memory Receive operations

If received faxes remain in your machine's memory when you change the Memory Receive Operations, the LCD will ask you one of the following questions:

- Erase All Doc?
- Print All Fax?
 - If you press Yes, faxes in the memory will be erased or printed before the setting changes. If a backup copy has already been printed it will not be printed again.
 - If you press No, faxes in the memory will not be erased or printed and the setting will be unchanged.

If received faxes are left in the machine's memory when you change to PC Fax Receive from another option [Fax Forward or Fax Storage], press ▲ or ▼ to choose the PC.

The LCD will ask you the following question:

- Send Fax to PC?
 - If you press Yes, faxes in the memory will be sent to your PC before the setting changes. You will be asked if you want to turn on Backup Print. (For details, see *PC-Fax Receive (Windows® only)* on page 18.)
 - If you press No, faxes in the memory will not be erased or transferred to your PC and the setting will be unchanged.

Remote Retrieval

You can call your machine from any touch-tone telephone or fax machine and then use the remote access code and remote commands to retrieve fax messages.

Setting a Remote Access Code

The remote access code lets you access the remote retrieval features when you are away from your machine. Before you can use the remote access and retrieval features, you have to set up your own code. The factory default code is the inactive code (---*).

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Remote Access**.
- 5 Press **Remote Access**.
- 6 Enter a three-digit code using numbers 0-9, *, or # by pressing the buttons on the LCD.
Press **OK**.
(The preset '*' cannot be changed.)

Note

Do not use the same code as your Remote Activation Code (* 5 1) or Remote Deactivation Code (# 5 1). (See *Operation from external and extension telephones* in chapter 6 of the *Basic User's Guide*.)

- 7 Press **Stop/Exit**.

Note

You can change your code at any time by entering a new one. If you want to make your code inactive, press **Clear** in step 6 to restore the inactive setting (---*) and press **OK**.

Using your Remote Access Code

- 1 Dial your fax number from a touch-tone telephone or another fax machine.
- 2 When your machine answers, enter your remote access code (3 digits followed by *) at once.
- 3 The machine signals if it has received messages:
 - 1 long beep — Fax messages
 - No beeps — No messages
- 4 When the machine gives two short beeps, enter a command.
The machine will hang up if you wait longer than 30 seconds to enter a command.
The machine will beep three times if you enter an invalid command.
- 5 Press **9 0** to stop Remote Access when you have finished.
- 6 Hang up.

Note

If your machine is set to **Manual** mode and you want to use the remote retrieval features, wait for about 100 seconds after it starts ringing, and then enter the remote access code within 30 seconds.

Remote Fax commands

Follow the commands below to access features when you are away from the machine. When you call the machine and enter your remote access code (3 digits followed by *), the system will give two short beeps and you must enter a remote command.

Remote commands		Operation details
95	Change the Fax Forwarding or Fax Storage settings	
	1 OFF	You can choose <code>OFF</code> after you have retrieved or erased all your messages.
	2 Fax Forwarding	One long beep means the change is accepted. If you hear three short beeps, the change was not accepted because something has not been set up (for example, a Fax Forwarding number has not been registered). You can register your Fax Forwarding number by entering 4. (See <i>Changing your Fax Forwarding number</i> on page 22.) Once you have registered the number, Fax Forwarding will work.
	4 Fax Forwarding number	
6 Fax Storage		
96	Retrieve a fax	
	2 Retrieve all faxes	Enter the number of a remote fax machine to receive stored fax messages. (See <i>Retrieving fax messages</i> on page 22.)
	3 Erase faxes from the memory	If you hear one long beep, fax messages have been erased from the memory.
97	Check the receiving status	
	1 Fax	You can check whether your machine has received any faxes. If yes, you will hear one long beep. If no, you will hear three short beeps.
98	Change the Receive Mode	
	1 External TAD	If you hear one long beep, your change has been accepted.
	2 Fax/Tel	
	3 Fax Only	
90	Exit	Pressing 9 0 allows you to exit remote retrieval. Wait for the long beep, then replace the handset.

Retrieving fax messages

You can call your machine from any touch-tone telephone and have your fax messages sent to a machine. Before you use this feature, you have to turn on Fax Storage.

- 1 Dial your fax number.
- 2 When your machine answers, enter your remote access code (3 digits followed by *) at once. If you hear one long beep, you have messages.
- 3 When you hear two short beeps, press **9 6 2**.
- 4 Wait for a long beep, and then use the dial pad to enter the number of the remote fax machine where you want your fax messages sent, followed by **# #** (up to 20 digits).



Note

You cannot use * and # as dial numbers. However, press # if you want to create a pause.

- 5 Hang up after you hear your machine beep. Your machine will call the other fax machine, which will then print your fax messages.

Changing your Fax Forwarding number

You can change the default setting of your fax forwarding number from another touch-tone telephone or fax machine.

- 1 Dial your fax number.
- 2 When your machine answers, enter your remote access code (3 digits followed by *) at once. If you hear one long beep, you have messages.
- 3 When you hear two short beeps, press **9 5 4**.
- 4 Wait for the long beep, enter the new number (up to 20 digits) of the remote fax machine you want your fax messages forwarded to using the dial pad, then enter **# #**.



Note

You cannot use * and # as dial numbers. However, press # if you want to create a pause.

- 5 Press **9 0** to stop Remote Access when you have finished.
- 6 Hang up after you hear your machine beep.

Additional receiving operations

Printing a reduced incoming fax

If you choose **On**, the machine automatically reduces each page of an incoming fax to fit on one page of A4, A3, Letter, Legal or Ledger size paper. The machine calculates the reduction ratio by using the page size of the fax and your Paper Size setting. (See *Paper Size* in *chapter 2* of the *Basic User's Guide*.)

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Setup Receive**.
- 5 Press **Setup Receive**.
- 6 Press **▲** or **▼** to display **Auto Reduction**.
- 7 Press **Auto Reduction**.
- 8 Press **On** (or **Off**).
- 9 Press **Stop/Exit**.

Polling overview

Polling lets you set up your machine so other people can receive faxes from you, but they pay for the call. It also lets you call somebody else's fax machine and receive a fax from it, so you pay for the call. The polling feature needs to be set up on both machines for this to work. Not all fax machines support polling.

Polling receive

Polling receive lets you call another fax machine to receive a fax.

Setup to receive polling

- 1 Press  (**FAX**).
- 2 Press **◀** or **▶** to display **Polling RX**.
- 3 Press **Polling RX**.
- 4 Press **Standard**.
- 5 Enter the fax number you are polling using **One Touch**, **Phone Book** or the dial pad on the control panel.
- 6 Press **Mono Start** or **Color Start**.

Setup to receive polling with secure code

Secure Polling lets you restrict who can get the documents you set up to be polled.

Secure Polling only works with Brother fax machines. If you want to get a fax from a secured Brother machine you have to enter the secure code.

- 1 Press  (**FAX**).
- 2 Press **◀** or **▶** to display **Polling RX**.
- 3 Press **Polling RX**.
- 4 Press **Secure**.

- 5 Enter a four-digit secure code using the buttons on the LCD.
This is the same as the security code of the fax machine you are polling.
Press **OK**.
- 6 Enter the fax number you are polling using **One Touch**, **Phone Book** or the dial pad on the control panel.
- 7 Press **Mono Start** or **Color Start**.

Setup to receive delayed polling

Delayed polling lets you set the machine to begin polling receive at a later time. You can only set up *one* delayed polling operation.

- 1 Press  (**FAX**).
- 2 Press ◀ or ▶ to display **Polling RX**.
- 3 Press **Polling RX**.
- 4 Press **Timer**.
- 5 Enter the time (in 24-hour format) you want to start polling.
For example, enter 21:45 for 9:45 PM.
Press **OK**.
- 6 Enter the fax number you are polling using **One Touch**, **Phone Book** or the dial pad on the control panel.
- 7 Press **Mono Start** or **Color Start**.
The machine makes the polling call at the time you entered.

Sequential polling (Monochrome only)

Sequential polling lets you request documents from several fax machines in one operation.

- 1 Press  (**FAX**).
- 2 Press ◀ or ▶ to display **Polling RX**.
- 3 Press **Polling RX**.
- 4 Press **Standard**, **Secure** or **Timer**.
- 5 Do one of the following:
 - If you chose **Standard**, go to step 6.
 - If you chose **Secure**, enter a four-digit number, press **OK**, go to step 6.
 - If you chose **Timer**, enter the time (24-hour format) you want to begin polling and press **OK**, go to step 6.
- 6 Press ◀ or ▶ to display **Broadcasting**.
- 7 Press **Broadcasting**.
- 8 Do one of the following:
 - Press **Add Number** and enter a number using the buttons on the LCD.
Press **OK**.
 - Press **Phone Book**. Press  to choose **Alphabetical Order** or **Numerical Order**. Press ▲ or ▼ to select a number.
Press **OK**.



Note

If you chose Numerical Order:

Speed Dial numbers start with #.
One Touch numbers start with *.

- 9 After you have entered all the fax numbers by repeating step 8, press **OK**.

- 10 Press **Mono Start**.
The machine polls each number or group in turn for a document.

Press **Stop/Exit** while the machine is dialling to cancel the polling process.

To cancel all sequential polling receive jobs, see *Checking and cancelling waiting jobs* on page 14.

Cancelling a Sequential Polling Job

- 1 Press **Stop/Exit**.
- 2 Do one of the following:
 - To cancel the entire sequential polling job, press `Entire Seq. Poll.` Go to step 3.
 - To cancel the current job, press the button that displays the number being dialled. Go to step 4.
 - To exit without cancelling, press **Stop/Exit**.
- 3 When the LCD asks if you want to cancel the entire sequential polling job, do one of the following:
 - Press `Yes` to confirm.
 - To exit without cancelling, press `No` or **Stop/Exit**.
- 4 Do one of the following:
 - To cancel the current job, press `Yes`.
 - To exit without cancelling, press `No` or **Stop/Exit**.

Additional dialling operations

Combining Quick Dial numbers

Sometimes, you may want to choose from several long distance carriers when you send a fax. Rates may vary depending on the time and destination. To take advantage of low rates, you can store the access codes of long-distance carriers and credit card numbers as One Touch and Speed Dial numbers. You can store these long dialling sequences by dividing them and setting them up as separate One Touch and Speed Dial numbers in any combination. You can even include manual dialling using the dial pad. (See *Storing One Touch Dial numbers* or *Storing Speed Dial numbers* in chapter 7 of the *Basic User's Guide*.)

For example, you might have stored '555' on Speed Dial: 03 and '7000' on One Touch: 02. You can use them both to dial '555-7000' if you press the following keys:

- 1 Press  (Phone Book).
- 2 Press #03.



Note

Speed Dial numbers start with #.
One Touch numbers start with *.

- 3 Press Send a fax.
- 4 Press Phone Book.
- 5 Press *02.
- 6 Press Send a fax.
- 7 Press **Mono Start** or **Color Start**.
You will dial '555-7000'.

To temporarily change a number, you can substitute part of the number with manual dialling using the dial pad. For example, to change the number to 555-7001 you could press  (Phone Book), press #03, press Send a fax, and then press **7001** using the dial pad.



Note

If you must wait for another dial tone or signal at any point in the dialling sequence, create a pause in the number by pressing **Redial/Pause**. Each key press adds a 3.5-second delay.

Additional ways to store numbers

Storing One Touch numbers from Outgoing Calls

You can store One Touch numbers from the Outgoing Call history.

- 1 Press **Redial/Pause**.
You can also choose by pressing  (Call History).
- 2 Press **Outgoing Call** tab.
- 3 Press **▲** or **▼** to display the number you want to store.
- 4 Press the number you want to store.
- 5 Press **More**.
- 6 Press **Add to One Touch Dial**.
- 7 To choose where the number will be stored, do one of the following:
 - To accept the displayed next available One Touch location, press **OK**.
 - To enter a different One Touch location, press a number using the buttons on the LCD.
Press **OK**.



Note

If the One Touch location you choose is already taken, the **OK** button on the LCD will not work. Choose a different location.

- 8 Do one of the following:
 - Enter the name using the buttons on the LCD (up to 16 characters).
Press **OK**.

(To help you enter letters, see *Entering Text* in appendix C of the *Basic User's Guide*.)
 - To store the number without a name, press **OK**.
- 9 Press **OK** to accept the displayed telephone or fax number.
- 10 When the LCD displays your settings, press **OK** to confirm.
- 11 Press **Stop/Exit**.

Storing One Touch numbers from the Caller ID history

If you have the Caller ID subscriber service from your telephone company you can also store One Touch numbers from incoming calls in the Caller ID History. (See *Caller ID* in chapter 6 of the *Basic User's Guide*.)

- 1 Press  (Call History).
- 2 Press the **Caller ID hist. tab**.
- 3 Press **▲** or **▼** to display the number you want to store.
- 4 Press the number you want to store.
- 5 Press **More**.
- 6 Press **Add to One Touch Dial**.

- 7 To choose where the number will be stored, do one of the following:
 - To accept the displayed next available One Touch location, press OK.
 - To enter a different One Touch location, press a number using the buttons on the LCD. Press OK.



Note

If the One Touch location you choose is already taken, the OK button on the LCD will not work. Choose a different location.

- 8 Do one of the following:
 - Enter the name (up to 16 characters) using the buttons on the LCD. Press OK.
(To help you enter letters, see *Entering Text* in appendix C of the *Basic User's Guide*.)
 - To store the number without a name, press OK.
- 9 Press OK to confirm the fax or telephone number.
- 10 When the LCD displays your settings, press OK to confirm.
- 11 Press **Stop/Exit**.

Storing Speed Dial numbers from Outgoing Calls

You can also store Speed Dial numbers from the Outgoing Call history.

- 1 Press **Redial/Pause**. You can also choose the number by pressing  (Call History).
- 2 Press the **Outgoing Call** tab.
- 3 Press ▲ or ▼ to display the name or number you want to store.
- 4 Press the name or number you want to store.
- 5 Press **More**.
- 6 Press **Add to Speed Dial**.
- 7 Do one of the following:
 - Enter the name (up to 16 characters) using the buttons on the LCD. Press OK.
(To help you enter letters, see *Entering Text* in appendix C of the *Basic User's Guide*.)
 - To store the number without a name, press OK.
- 8 Press OK to confirm the fax or telephone number you want to store.
- 9 Do one of the following:
 - Enter the second fax or telephone number (up to 20 digits) using the buttons on the LCD. Press OK.
 - If you do not want to store a second number, press OK.

- 10 To choose where the number will be stored, do one of the following:
- To accept the displayed next available Speed Dial location, press **OK**.
 - To enter a different Speed Dial location, press a 2-digit number using the buttons on the LCD.
Press **OK**.



Note

- Speed Dial numbers begin with # (for example, # 0 2).
- If the 2-digit Speed Dial location you choose is already taken, the **OK** button on the LCD will not work. Choose a different location.

- 11 When the LCD displays your settings, press **OK** to confirm.
- 12 Press **Stop/Exit**.

Storing Speed Dial numbers from the Caller ID history

If you have the Caller ID subscriber service from your telephone company you can also store Speed Dial numbers from incoming calls in the Caller ID History. (See *Caller ID* in chapter 6 of the *Basic User's Guide*.)

- 1 Press  (Call History).
- 2 Press the **Caller ID hist.** tab.
- 3 Press **▲** or **▼** to display the number you want to store.
- 4 Press the number you want to store.
- 5 Press **More**.
- 6 Press **Add to Speed Dial**.

- 7 Do one of the following:
- Enter the name (up to 16 characters) using the buttons on the LCD.
Press **OK**.
(To help you enter letters, see *Entering Text* in appendix C of the *Basic User's Guide*.)
 - To store the number without a name, press **OK**.

- 8 Press **OK** to confirm the fax or telephone number you want to store.

- 9 Do one of the following:
- Enter a second fax or telephone number (up to 20 digits) using the buttons on the LCD.
Press **OK**.
 - If you do not want to store a second number, press **OK**.

- 10 To choose where the number will be stored, do one of the following:
- To accept the displayed next available Speed Dial location, press **OK**.
 - To enter a different Speed Dial location, press a 2-digit number using the buttons on the LCD.
Press **OK**.



Note

- Speed Dial numbers begin with # (for example, # 0 2).
- If the 2-digit Speed Dial location you choose is already taken, the **OK** button on the LCD will not work. Choose a different location.

- 11 When the LCD displays your settings, press **OK** to confirm.
- 12 Press **Stop/Exit**.

Setting up groups for broadcasting

Groups, which can be stored in a One Touch or Speed Dial location, allow you to send the same fax message to many fax numbers by pressing only One Touch key or

 (Phone Book), the two-digit location, Send a fax and **Mono Start**.

First, you'll need to store each fax number in a One Touch or Speed Dial location. Then you can include them as numbers in the Group. Each Group uses up a One Touch or Speed Dial location. You can have up to six Groups, or you can assign up to 215 numbers in a large Group.

(See *Broadcasting (Monochrome only)* on page 11 and *Storing Speed Dial numbers in chapter 7 of the Basic User's Guide.*)

- 1 Press  (Phone Book).
- 2 Press **More**.
- 3 Press **Setup Groups**.
- 4 Press **Set Speed Dial** or **Set One Touch Dial**.
If you choose **Set Speed Dial**, go to step 6.
- 5 To accept the next available One Touch key number, press **OK**.
- 6 Enter the group name (up to 16 characters) using the buttons on the LCD.
Press **OK**.
- 7 When the LCD displays the next available Group number, press **OK**.
This Group number and name will automatically be assigned to the next available Speed Dial location.

- 8 Add One Touch or Speed Dial numbers to the Group by pressing them to display a red checkmark. Press **OK**.
If you want to list the numbers by alphabetical order, press .



Note

Speed Dial numbers start with #.
One Touch numbers start with *.

- 9 When the LCD displays the Group Name and numbers, press **OK** to confirm.
- 10 Do one of the following:
 - To store another Group for broadcasting, repeat steps 2 to 9.
 - To finish storing Groups for broadcasting, press **Stop/Exit**.



Note

You can print a list of all the One Touch and Speed Dial numbers. Group numbers will be marked in the GROUP column. (See *Reports* on page 33.)

Changing a Group name

- 1 Press  (Phone Book).
- 2 Press More.
- 3 Press Change.
- 4 Press ▲ or ▼ to display the Group you want to change.
- 5 Press the Group.
- 6 Press Name : .
- 7 Enter the new name (up to 16 characters) using the buttons on LCD.
Press OK.
(See *Entering Text* in appendix C of the *Basic User's Guide*. For example, type NEW CLIENTS.)



Note

How to change the stored name or number:

If you want to change a character, press ◀ or ▶ to position the cursor under the character you want to change, and then press . Re-enter the character.

- 8 Press OK.
- 9 Press **Stop/Exit**.

Deleting a Group

- 1 Press  (Phone Book).
- 2 Press More.
- 3 Press Delete.
- 4 Press ▲ or ▼ to display the Group you want to delete.
- 5 Press the Group Name.
- 6 Press OK.
Press Yes to confirm.
- 7 Press **Stop/Exit**.

Deleting a number from a Group

- 1 Press  (Phone Book).
- 2 Press More.
- 3 Press Change.
- 4 Press ▲ or ▼ to display the Group you want to change.
- 5 Press the Group.
- 6 Press Add/Del..
- 7 Press ▲ or ▼ to display the number you want to delete from the Group.
- 8 Press the check box of the number you want to delete to uncheck it.
Press OK to confirm.
- 9 Press OK.
- 10 Press **Stop/Exit**.

6

Printing reports

Fax reports

Use the **MENU** buttons on the LCD to set up the Transmission Verification Report and the Journal Period.

Transmission Verification Report

You can use the Transmission Verification Report as proof that you sent a fax. (For details about how to set up the type of report you want, see *Transmission Verification Report* in chapter 4 of the *Basic User's Guide*.)

Fax Journal (activity report)

You can set the machine to print a journal at specific intervals (every 50 faxes, 6, 12 or 24 hours, 2 or 7 days). If you set the interval to **Off**, you can still print the report by following the steps in *How to print a report* on page 33. The factory setting is **Every 50 Faxes**.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Report Setting**.
- 5 Press **Report Setting**.
- 6 Press **Journal Period**.

- 7 Press **◀** or **▶** to choose an interval. If you choose **Every 50 Faxes**, go to step 10.

- **6, 12, 24 hours, 2 or 7 days**

The machine will print the report at the chosen time and then erase all jobs from its memory. If the machine's memory is filled with the maximum 200 jobs before the time you chose has passed, the machine will print the Journal early and then erase all jobs from the memory. If you want an extra report before it is due to print, you can print it without erasing the jobs from the memory.

- **Every 50 Faxes**

The machine will print the Journal when the machine has stored 50 jobs.

- 8 Enter the time to start printing in 24-hour format. Press **OK**. (For example: enter 19:45 for 7:45 PM.)
- 9 If you choose **Every 7 Days**, the LCD will ask you to choose the first day for the 7-day countdown.
- 10 Press **Stop/Exit**.

Reports

The following reports are available:

- XMIT Verify
Prints a Transmission Verification Report for your last transmission.
- Help List
A help list showing how to program your machine.
- Quick Dial
Lists names and numbers stored in the One Touch and Speed Dial memory, in alphabetical or numerical order.
- Fax Journal
Lists information about the last incoming and outgoing faxes.
(TX: Transmit.) (RX: Receive.)
- User Settings
Lists your settings.
- Network Config
Lists your Network settings.
- WLAN Report
Prints a WLAN connection report.
- Caller ID hist.
Lists the available Caller ID information about the last 30 received faxes and telephone calls.

How to print a report

- 1 Press MENU.
- 2 Press ▲ or ▼ to display Print Reports.
- 3 Press Print Reports.
- 4 Press the report you want.
- 5 (Quick Dial Only) Press Alphabetical Order or Numerical Order.
- 6 Press **Mono Start**.
- 7 Press **Stop/Exit**.

Copy settings

You can change the copy settings temporarily for multiple copies.

The machine returns to its default settings after 1 minute, or if the Mode Timer returns the machine to Fax mode. (See *Mode Timer* on page 3.)

To change a setting, press **COPY** and then press ◀ or ▶ to scroll through the copy settings. When the setting you want is displayed, press it and choose your option.

When you are finished choosing settings, press **Mono Start** or **Color Start**.



Note

- You can save some of the settings that you use most often by setting them as default. These settings will stay until you change them again. (See *Setting your favourites* on page 45.)
- The Ink Save Mode, Thin Paper Copy, Book Copy and Watermark Copy features are supported by technology from Reallusion,

Inc.  **REALLUSION**

Stop copying

To stop copying, press **Stop/Exit**.

Changing copy speed and quality

You can choose from a range of speed and quality. The factory setting is **Normal**.

■ Fast

Fast copy speed and lowest amount of ink used. Use to save time printing documents to be proof-read, large documents or many copies.

■ Normal

Normal is the recommended mode for ordinary print outs. This produces good copy quality with good copy speed.

■ Best

Use Best mode to copy precise images such as photographs. This provides the highest resolution and slowest speed.

1 Press  (**COPY**).

2 Load your document.

3 Enter the number of copies you want.

4 Press ◀ or ▶ to display **Quality**.

5 Press **Quality**.

6 Press **Fast**, **Normal** or **Best**.

7 If you do not want to change additional settings, press **Mono Start** or **Color Start**.

Enlarging or reducing the copied image

You can choose an enlargement or reduction ratio. If you choose **Fit to Page**, your machine will adjust the size automatically to the paper size you set.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display Enlarge/Reduce.
- 5 Press Enlarge/Reduce.
- 6 Press 100%, Enlarge, Reduce, Fit to Page or Custom(25-400%).
- 7 Do one of the following:
 - If you chose Enlarge or Reduce, press the enlargement or reduction ratio you want.
 - If you chose Custom(25-400%), enter an enlargement or reduction ratio from 25% to 400%.
Press OK.
 - If you chose 100% or Fit to Page, go to step 8.

198% 10x15cm→A4
186% 10x15cm→LTR
141% A4→A3, A5→A4
100%
97% LTR→A4
93% A4→LTR
83% LGL→A4
69% A3→A4, A4→A5
47% A4→10x15cm
Fit to Page
Custom(25-400%)

- 8 If you do not want to change additional settings, press **Mono Start** or **Color Start**.



Note

- Page Layout is not available with Enlarge/Reduce.
- Page Layout, Book Copy, Sort, Thin Paper Copy and Watermark Copy are not available with Fit to Page.
- Fit to Page does not work correctly when the document on the scanner glass is skewed more than 3 degrees. Using the document guidelines on the left and top, place your document in the upper left hand corner, with the document face down on the scanner glass.
- Fit to Page is not available for a Legal size document.
- When using A3 or Ledger size paper, 1side→2side and 2side→2side of Duplex Copy is not available with Enlarge/Reduce.

Making N in 1 copies or a poster (Page Layout)

The N in 1 copy feature can help you save paper by letting you copy two or four pages onto one printed page.

The 1 to 2 feature copies one A3 or Ledger size page onto two A4 or Letter size pages. If you use this setting, use the scanner glass.

You can also produce a poster. When you use the poster feature your machine divides your document into sections, then enlarges the sections so you can assemble them into a poster. If you want to print a poster, use the scanner glass.

! IMPORTANT

- Make sure the paper size is set to A4, A3, Letter or Ledger.
- If you are producing multiple color copies, N in 1 copy is not available.
- (P) means Portrait and (L) means Landscape.
- You can only make one poster copy and 1 to 2 copy at a time.
- Poster copy is not available when using transparencies.

Note

- Watermark Copy, Book Copy, Sort, Thin Paper Copy, Ink Save Mode and Enlarge/Reduce are not available with Page Layout.
- Skew Adjustment is not available with Poster and 1 to 2 copy.
- Duplex Copy is not available with Poster copy.
- 2side→2side and 2side→1side of Duplex Copy are not available with 1 to 2.

- 1 Press  (COPY).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display Page Layout.
- 5 Press Page Layout.
- 6 Press ◀ or ▶ to display Off(1in1), 2in1(P), 2in1(L), 4in1(P), 4in1(L), 1 to 2, Poster (2 x 1), Poster (2 x 2), Poster (3 x 3) or 2 in 1 (ID)¹.

¹ For details about 2 in 1 (ID), see *2 in 1 ID Copy* on page 38.

If you chose 2in1 or Poster (2 x 2) with A3 or Ledger, go to step 7 to choose the paper size of your document. If you choose another setting, go to step 8.

- 7 Do one of the following:
 - If you chose 2in1(P) or 2in1(L), press LGRx2 → LGRx1, LTRx2 → LGRx1, A3x2 → A3x1 or A4x2 → A3x1.
 - If you chose Poster (2 x 2), press LGRx1 → LGRx4, LTRx1 → LGRx4, A3x1 → A3x4 or A4x1 → A3x4.

- 8 If you do not want to change additional settings, press **Mono Start** or **Color Start** to scan the page. If you placed the document in the ADF or are making a poster, the machine scans the document and starts printing.

If you are using the scanner glass, go to step 9.

- 9 After the machine scans the page, press Yes to scan the next page.

- 10 Place the next page on the scanner glass. Press **Mono Start** or **Color Start** to scan the document if you do not want to adjust any settings. Repeat steps 9 and 10 for each page of the layout.

- 11 After all the pages have been scanned, press **No** to finish.



Note

If you have chosen photo paper as the Paper Type for N in 1 copies, the machine will print the images as if plain paper had been chosen.

If you are copying from the ADF, insert the document face up in the direction shown below:


- 2in1 (P)




- 2in1 (L)



- 4in1 (P)

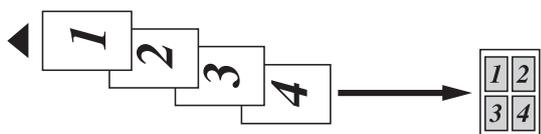

- 4in1 (L)

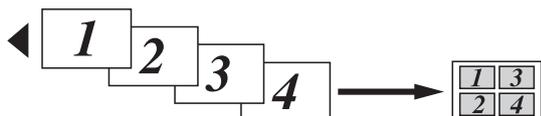


If you are copying from the scanner glass, place the document face down in the direction shown below:

- 2in1 (P)



- 2in1 (L)

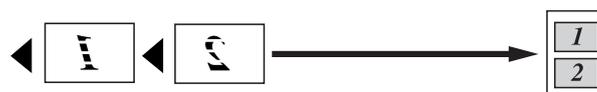

- 4in1 (P)




- 4in1 (L)




- 1 to 2




- Poster (2 x 1)

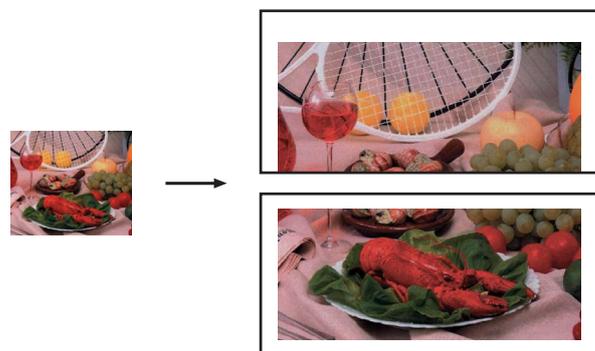

■ Poster (2 x 2)

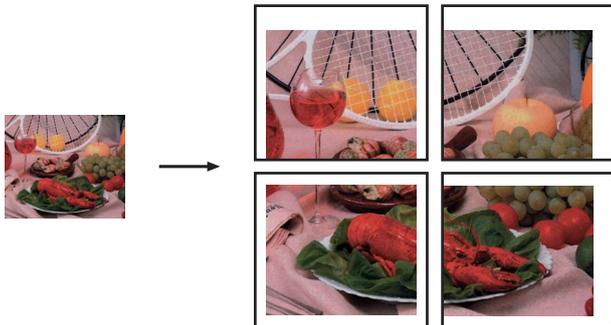

■ Poster (3 x 3)

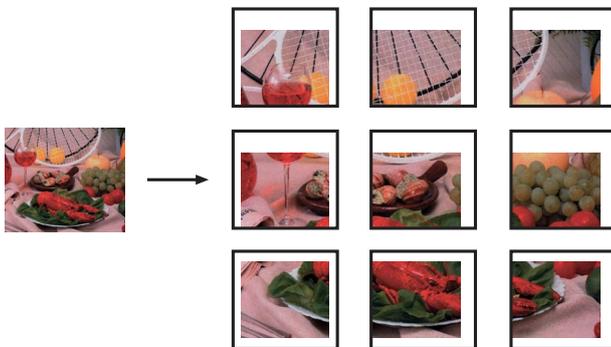

2 in 1 ID Copy


You can copy both sides of your identification card onto one page, keeping the original card size. Make sure the paper size is set to A4 or Letter.

 **Note**

You can copy an identification card to the extent permitted under applicable laws. See *Unlawful use of copying equipment* in the *Safety and Legal Booklet*.

- 1 Press  (COPY).

- 2 Place your identification card face down at the left corner of the scanner glass.

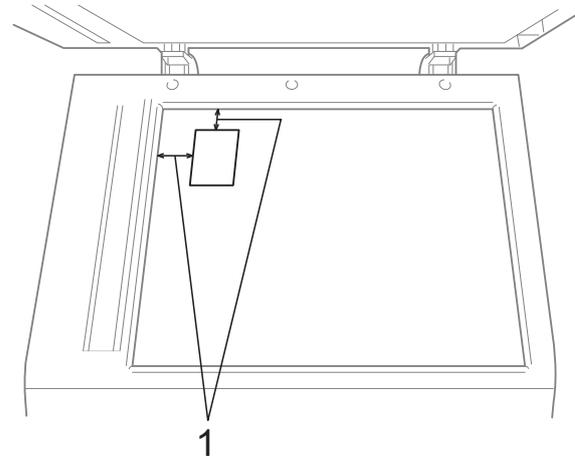

1 3 mm or greater (top, left)

- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display Page Layout.
- 5 Press Page Layout.
- 6 Press ◀ or ▶ to display 2 in 1 (ID).
- 7 Press 2 in 1 (ID).
- 8 Press **Mono Start** or **Color Start**. The machine starts scanning the first page.
- 9 After the machine copies the one side, press Yes. Turn over the identification card and press **Mono Start** or **Color Start** to scan the another side.

 **Note**

- Watermark Copy, Book Copy, Sort, Duplex Copy, Thin Paper Copy, Ink Save Mode and Enlarge/Reduce are not available with 2 in 1 (ID).
- If you are producing multiple color copies, 2 in 1 (ID) copy is not available.

Sorting copies using the ADF

You can sort multiple copies. Pages will be stacked in the order 321, 321, 321, and so on.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display *Stack/Sort*.
- 5 Press *Stack/Sort*.
- 6 Press *Sort*.
- 7 If you do not want to change additional settings, press **Mono Start** or **Color Start**.



Note

Fit to Page, *Page Layout* and *Book Copy* are not available with *Sort*.

Adjusting Density

You can adjust the copy density to make copies darker or lighter.


- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display *Density*.
- 5 Press *Density*.
- 6 Press ◀ or ▶ to make a lighter or darker copy.
Press **OK**.
- 7 If you do not want to change additional settings, press **Mono Start** or **Color Start**.

Ink Save Mode


Ink Save Mode can help you save ink. The machine prints the colors lighter and emphasises the outlines of the images as shown below:

The amount of ink saved will vary depending on the document.

Ink Save Mode: Off

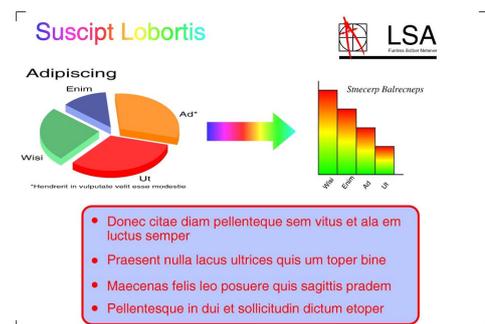

Ink Save Mode: On

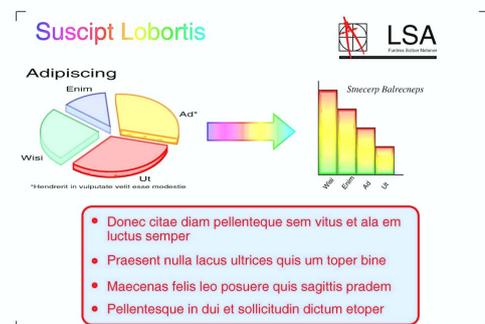

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display *Advanced Settings*.
- 5 Press *Advanced Settings*.
- 6 Press *Ink Save Mode*.

- 7 If you do not want to change any additional settings, press **Mono Start** or **Color Start**.



Note

- Watermark Copy, Book Copy, Skew Adjustment, Thin Paper Copy and Page Layout are not available with Ink Save Mode.
- Ink Save Mode may make your printouts look different from your original document.

Thin Paper Copy

If your document is a duplex copy on thin paper, choose Thin Paper Copy so the print on the other side does not bleed through.

- 1 Press  (COPY).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display Advanced Settings.
- 5 Press Advanced Settings.
- 6 Press Thin Paper Copy.
- 7 Press **Mono Start** or **Color Start**.



Note

Fit to Page, Page Layout, Skew Adjustment, Ink Save Mode, Book Copy and Watermark Copy are not available with Thin Paper Copy.

Skew Adjustment

If your scanned copy is skewed, your machine can correct the data automatically. This setting is only available when using the scanner glass.

- 1 Press  (COPY).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display Skew Adjustment.
- 5 Press Skew Adjustment.
- 6 Press Auto (or Off).
- 7 If you do not want to change additional settings, press **Mono Start** or **Color Start**.



Note

- 1 to 2, Poster, Ink Save Mode, Thin Paper Copy, Book Copy, Watermark Copy, 2side→2side and 2side→1side of Duplex Copy are not available with Skew Adjustment.
- You cannot use this setting with Ledger, A3 or paper smaller than 64 mm × 91 mm.
- This setting is only available for paper that is rectangular or square.
- Skew Adjustment is only available if the document is skewed by less than 3 degrees.
- Skew Adjustment may not work correctly if your document is too thick.

Book Copy

Book copy corrects dark borders and skew when copying from the scanner glass. Your machine can correct the data automatically or you can make specific corrections.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display Advanced Settings.
- 5 Press Advanced Settings.
- 6 Press Book Copy.
- 7 If you have finished making corrections, press **Mono Start** or **Color Start**.



Note

Page Layout, Sort, Duplex Copy, Skew Adjustment, Ink Save Mode, Fit to Page, Thin Paper Copy and Watermark Copy are not available with Book Copy.

Watermark Copy

You can place a logo or text into your document as a Watermark. You can select one of the template watermarks, data from your media cards or USB Flash memory drive, or scanned data.



Note

Fit to Page, Page Layout, Thin Paper Copy, Skew Adjustment, Ink Save Mode and Book Copy are not available with Watermark Copy.

Using a template

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display Advanced Settings.
- 5 Press Advanced Settings.
- 6 Press Watermark Copy.
- 7 Press Edit Template.
- 8 Change the settings from the options displayed on the LCD if required.
- 9 Press OK to confirm to use watermark.
- 10 If you do not want to change additional settings, press **Mono Start** or **Color Start**.

Using a media cards or USB Flash memory drive data

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display Advanced Settings.
- 5 Press Advanced Settings.
- 6 Press Watermark Copy.
- 7 Press Use Image.
- 8 Insert a media card or USB Flash memory drive. Press Media.
- 9 Press the data you want to use for the watermark.

- 10 Change any additional settings from the options shown on the LCD.
- 11 Press **OK** to confirm to use watermark.
- 12 If you do not want to change additional settings, press **Mono Start** or **Color Start**.

! IMPORTANT

DO NOT take out the memory card or USB Flash memory drive while **PHOTO CAPTURE** is blinking to avoid damaging the card, USB Flash memory drive, or the data stored on them.

Using a scanned paper document as your watermark

- 1 Press  (**COPY**).
- 2 Enter the number of copies you want.
- 3 Press **◀** or **▶** to display Advanced Settings.
- 4 Press **Advanced Settings**.
- 5 Press **Watermark Copy**.
- 6 Press **Use Image**.
- 7 Press **Scan**. Place the page that you want to use as a watermark on the scanner glass.
- 8 Press **Mono Start** or **Color Start**.
- 9 Take out the watermark document you scanned and load the document you want to copy.
- 10 Press **Transparency**, and then press **◀** or **▶** to change the Transparency of the watermark. Press **OK**.
- 11 Press **OK**.

- 12 Press **OK** to confirm to use watermark.
- 13 If you do not want to change any additional settings, press **Mono Start** or **Color Start**.



Note

You cannot enlarge or reduce the scanned watermark.

Duplex (2-sided) copying

You can reduce the amount of paper used for copies by copying on both sides of the paper.

We recommend you load your document in the ADF for duplex copying.



Note

- You can copy 2-sided documents up to Legal size from the ADF.
- You can only use plain paper sizes A4, A5, A3, Letter, Legal or Ledger.

- 1 Press **Duplex** on the machine's panel.
- 2 Load your document. If you want to copy a 2-sided document, load your document in the ADF.
- 3 Press **Copy**.
- 4 Do one of the following:
 - If you are copying A3 or Ledger size document, go to step 5.
 - If you are copying A4, A5, Letter or Legal size document, go to step 8.
- 5 Press **More**.
- 6 Press **A3/LGR Duplex Copy Setting**.



Note

N in 1 copy is not available with A3/LGR Duplex Copy Setting.

- 7 Press **Fit to Page** or **Keep Scale**.



Note

If you choose **Fit to Page**, your machine will reduce the document size automatically to fit the printable area. If you choose **Keep Scale**, your machine will not change the document size. The top and bottom might be cut off depending on the document size.

- 8 Press ◀ or ▶ to display the duplex copy type you want, and press it. (See *Duplex copying type* on page 44.)

- 9 Enter the number of copies you want.



Note

If you want to sort multiple copies, press ◀ or ▶ to display **Stack/Sort**, then press **Sort**.

- 10 Press **Mono Start** or **Color Start**. If you placed the document in the ADF, the machine scans the pages and starts printing. If you are using the scanner glass, go to step 11.

- 11 Press **Scan** and place the next page on the scanner glass. Press **Mono Start** or **Color Start**. The machine starts printing.

- 12 If you pressed **Sort** for multiple copies, repeat step 11 for each additional page. After all the pages have been scanned, press **Complete**. The machine starts printing.

DO NOT touch printed pages until they are ejected the second time. The machine will print and eject the first side, and then pull the paper back in to print the second side.



Note


- If your document causes paper jams, try using one of the special duplex copy settings. Press **More** after step 6. Press **Advanced**, and then press one of the jam prevention settings: **DX1** or **DX2**. **DX1** helps avoid paper jams when copying by allowing more time for the ink to dry. **DX2** allows more time for the ink to dry while also using less ink.
- **DX1** is not available for **A3** or **Ledger** size paper.
- **2 in 1 (ID)**, **Poster** and **Book Copy** are not available with **Duplex Copy**.
- **1 to 2** and **Skew Adjustment** are not available with **2side→2side** and **2side→1side**.
- When using **A3** or **Ledger** size paper, **Enlarge/Reduce** is not available with **1side→2side** and **2side→2side**.
- **Fit to Page** is not available with **1side→2side** and **2side→2side**.

Duplex copying type


■ 1 sided → 2 sided

(long edge flip)

Portrait

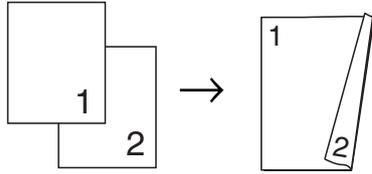


Landscape

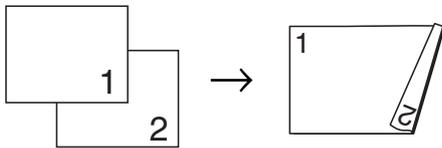


(short edge flip)

Portrait

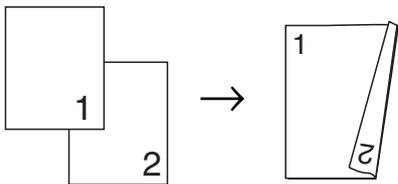


Landscape

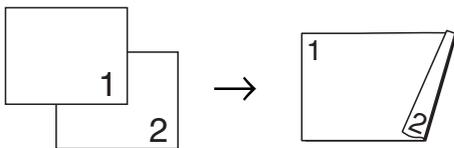


■ 2 sided → 2 sided

Portrait

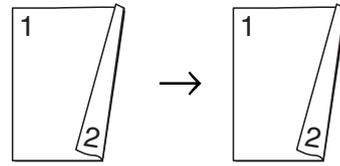


Landscape

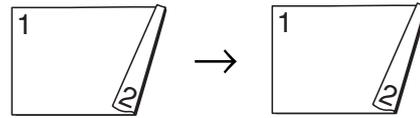


■ 2 sided → 1 sided

(long edge flip)

Portrait

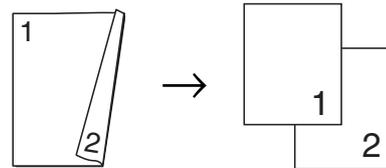


Landscape

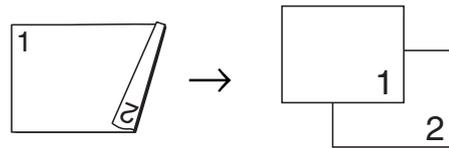


(short edge flip)

Portrait

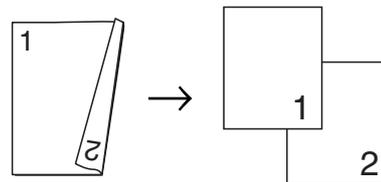

Landscape

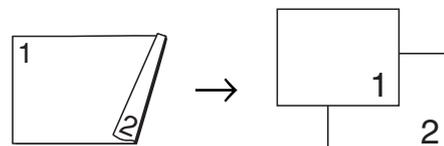

Setting your favourites

You can store the copy settings that you use most often by setting them as a favourite. You can set up to three favourites.

- 1 Press  (**COPY**).
- 2 Choose the copy option and settings you want to store.
- 3 Press ◀ or ▶ to display Favorite Settings.
- 4 Press Favorite Settings.
- 5 Press Store.



Note

Set Watermark Copy to Off or Template when storing Favorite Settings.

- 6 Press the location where you want to store your setting for Favorite:1, Favorite:2 or Favorite:3.
- 7 Do one of the following:
 - If you want to rename your setting, press  to delete characters. Then enter the new name (up to 12 characters).
Press OK. (See *Entering Text* in appendix C of the *Basic User's Guide*.)
 - If you do not want to rename your setting, press OK.

Retrieving your favourite setting

When you are ready to use one of your favourite set of settings, you can recall it.

- 1 Press  (**COPY**).
- 2 Press Favorite.
- 3 Press the favourite setting you want to retrieve.

Rename your favourite setting

After you stored your favourite setting, you can rename it.

- 1 Press  (**COPY**).
- 2 Press ◀ or ▶ to display Favorite Settings.
- 3 Press Favorite Settings.
- 4 Press Rename.
- 5 Press the favourite setting you want to rename.
- 6 Enter the new name (up to 12 characters). (See *Entering Text* in appendix C of the *Basic User's Guide*.)
- 7 Press OK.

PhotoCapture Center™ operations

Memory cards, USB Flash memory drive and folder structures

Your machine is designed to be compatible with modern digital camera image files, memory cards and USB Flash memory drives; however, please read the points below to avoid errors:

- The image file extension must be .JPG (other image file extensions like .JPEG, .TIF, .GIF and so on will not be recognized).
- Direct PhotoCapture Center™ printing must be performed separately from PhotoCapture Center™ operations using the PC. (Simultaneous operation is not available.)
- The machine can read up to 999 files on a memory card or USB Flash memory drive.
- The DPOF file on the memory cards must be in a valid DPOF format. (See *DPOF printing* on page 50.)

Please be aware of the following:

- When printing an index or image, the PhotoCapture Center™ will print all the valid images, even if one or more images have been corrupted. Corrupted images will not be printed.

■ (memory card users)

Your machine is designed to read memory cards that have been formatted by a digital camera.

When a digital camera formats a memory card it creates a special folder into which it copies image data. If you need to modify the image data stored on a memory card with your PC, we recommend that you do not modify the folder structure created by the digital camera. When saving new or modified image files to the memory card we also recommend you use the same folder your digital camera uses. If the data is not saved to the same folder, the machine may not be able to read the file or print the image.

■ (USB Flash memory drive users)

This machine supports USB Flash memory drives that have been formatted by Windows®.

Movie printing

You can print images from movie files that are stored on a memory card or USB Flash memory drive.

Movie files are automatically split by duration into 9 parts, and placed in 3 rows so you can see and print the scenes.

Note

- You cannot choose a particular movie scene.
- You can use AVI or MOV movie file formats (Motion JPEG only). However, if an AVI file size is 1 GB or more (the shooting time is about 30 minutes) or a MOV file size is 2 GB or more (the shooting time is about 60 minutes), these files cannot be printed.

Print Images

Print Index (Thumbnails)

The PhotoCapture Center™ assigns numbers for images (such as No.1, No.2, No.3, and so on).




→ NO.1
DEI.JPG 01.01.2009
100KB

The PhotoCapture Center™ uses these numbers to identify each picture. You can print a thumbnail page to show all the pictures on the memory card or USB Flash memory drive.


Note

- Only file names that are 8 characters or less will be printed correctly on the index sheet.
- File names cannot be printed correctly if they are Chinese. However it does not affect any functions.

- 1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.
Press  (**PHOTO CAPTURE**).
- 2 Press Index Print.
- 3 Press Index Sheet and choose 6 Images/Line or 5 Images/Line.

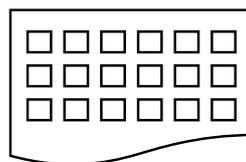

6 Images/Line

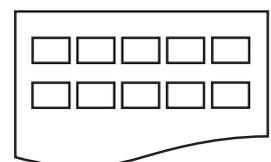

5 Images/Line

Print time for 5 Images/Line will be slower than 6 Images/Line, but the quality is better.

- 4 Do one of the following:
 - Press **Print Setting** to change the paper type or the paper size you are using.
 - If you do not want to change the paper settings, go to 7.
- 5 Press **Paper Type**. Choose the paper type you are using, Plain Paper, Inkjet Paper, Brother BP71, Brother BP61 or Other Glossy.
- 6 Press **Paper Size**. Choose the paper size you are using, A4 or Letter.
- 7 Press **Color Start** to print.

Printing Photos

Before you can print an individual image, you have to know the image number.

- 1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.
Press  (**PHOTO CAPTURE**).
- 2 Print the Index. (See *Print Index (Thumbnails)* on page 47.)
- 3 Press **Index Print**.
- 4 Press **Print Photos**.
- 5 Enter the image number that you want to print from the thumbnails printed on the Index page.
After you have chosen the image numbers, press **OK**.



Note

- You can enter the numbers at one time by using a comma or a hyphen. For example, Enter 1,3,6 to print images No.1, No.3 and No.6. Enter 1-5 to print images No.1 to No.5.
- You can enter up to 12 characters (including commas) for the image numbers you want to print.

- 6 Enter the number of copies you want either by pressing the number box directly and enter the number you want or pressing **+** or **-**.
- 7 Do one of the following:
 - Press **Print Setting** to change the print settings. (See page 51.)
 - If you do not want to change any settings, press **Color Start** to print.

Enhance Photos

You can edit and add effects to your photos and view them on the LCD before printing.



Note

The **Enhance Photo** feature is supported by technology from Reallusion, Inc.  **REALLUSION**

- 1 Make sure you have put a memory card or USB Flash memory drive in the correct slot.
Press  (**PHOTO CAPTURE**).
- 2 Press **Enhance Photo**.

 **Note**

- Four thumbnails are displayed at a time with the current page number and total number of pages listed under the thumbnails.
- Press ◀ or ▶ repeatedly to select each page of photos, or hold down to scroll through all pages of photos.
- Press  to start Slide Show.

- 3 Press a photo from the thumbnails.
- 4 Press **Enhance** or **Trim**. You can also choose both together. Press **OK**.
- 5 Do one of the following:
 - If you chose **Enhance**, press **OK**, go to step 6.
 - If you chose **Trim**, press **OK**, go to step 7.
- 6 Press the effect you wish to add. Press **OK**. Go to step 8.

 **Note**

- You have 10 ways to add effects to your photo.

	(Auto Correct) The machine decides the suitable effect for your photo.
	(Enhance Skin) Best used for adjusting portrait photographs. It adjusts human skin color. Press ◀ or ▶ to adjust the level of contrast.
	(Enhance Scenery) Best used for adjusting landscape photographs. It highlights green and blue areas in your photo. Press ◀ or ▶ to adjust the level of contrast.

	(Remove Red-Eye) The machine will attempt to remove red-eye from your photo. If red-eye detection fails, you can press the Try Again button to re-detect.
	(Night Scene) Night Scene is best used for adjusting night view photographs to make them more vivid.
	(Fill Light) Fill Light is best used for adjusting photographs against the light.
	(Whiteboard) Whiteboard is best used for adjusting photographs. It detects letters on a whiteboard in your photo and makes them more legible.
	(Monochrome) You can convert your photo to monochrome.
	(Sepia) You can convert the color of your photo to sepia.
	(Auto Correct & Remove Red-Eye) The machine decides the suitable effects for your photo. Also, it will attempt to remove red-eye from your photo.

- There are some cases when red-eye may not be removed.
 - When the face is too small in the image.
 - When the face is turning too far up, down, left or right.
- After adding each effect, you can enlarge the view of the image by pressing . To go back to the original size, press .
- While the image is enlarged, you can move around the image with **up** () , **down** () , **left** () and **right** () .
- Press **Cancel** to return to the list of effects.

- 7 Adjust the red frame around your photo. The part inside of the red frame will be printed.

- Press **+** or **-** to enlarge or reduce the frame size.
- Press **▲**, **▼**, **◀** or **▶** to move the position of the frame.
- Press  to rotate the frame.

Press **OK** when you have finished adjusting the frame setting.
Press **OK** to confirm.



Note

If your photo is very small or of irregular proportions you may not be able to trim the photo. The LCD will display

Image Too Small. or

Image Too Long..

- 8 Enter the number of copies you want either by pressing the number box directly and enter the number you want or pressing **+** or **-**.

Press **OK**.

- 9 Do one of the following.

- Press **Print Setting** and change the print settings. (See page 51.)
- If you do not want to change any settings, press **Color Start** to print.

DPOF printing

DPOF stands for Digital Print Order Format.

Major digital camera manufacturers (Canon Inc., Eastman Kodak Company, FUJIFILM Corporation, Panasonic Corporation and Sony Corporation) created this standard to make it easier to print images from a digital camera.

If your digital camera supports DPOF printing, you will be able to choose on the digital camera display the images and number of copies you want to print.

When a memory card containing DPOF information is put into your machine, you can print the chosen image easily.

- 1 Make sure you have put the memory card in the correct slot.
Press  (**PHOTO CAPTURE**).
The machine will ask you if you want to use DPOF settings.
The DPOF file on the memory card must be in a valid DPOF format.
- 2 Press **Yes**.
- 3 Do one of the following:
 - Press **Print Setting** to change the print settings. (See page 51.)
 - If you do not want to change any settings, press **Color Start** to print.



Note

A DPOF File error can occur if the print order that was created on the camera has been corrupted. Delete and recreate the print order using your camera to correct this problem. For instructions on how to delete or recreate the print order, refer to your camera manufacturer's support website or accompanying documentation.

PhotoCapture Center™ print settings

You can change the print settings temporarily.

The machine returns to its default settings after 3 minutes, or if the Mode Timer returns the machine to Fax mode. (See *Mode Timer* on page 3.)



Note

You can save the print settings you use most often by setting them as the default. (See *Setting your changes as a new default* on page 54.)



Print Quality

- 1 Press Print Setting.
- 2 Press ▲ or ▼ to display Print Quality.
- 3 Press Print Quality.
- 4 Press Normal or Photo.
- 5 If you do not want to change additional settings, press . Press **Color Start** to print.

Paper options





Paper Type

- 1 Press Print Setting.
- 2 Press ▲ or ▼ to display Paper Type.
- 3 Press Paper Type.
- 4 Press the paper type you are using, Plain Paper, Inkjet Paper, Brother BP71, Brother BP61 or Other Glossy.
- 5 If you do not want to change additional settings, press . Press **Color Start** to print.

Paper and print size

- 1 Press Print Setting.
- 2 Press ▲ or ▼ to display Paper Size.
- 3 Press Paper Size.
- 4 Press the paper size you are using, 10x15cm, 13x18cm, A4, A3, Letter or Ledger.
Do one of the following:
 - If you chose Letter or A4, go to step 5.
 - If you chose another size of paper, go to step 6.

5 Press the Print Size.

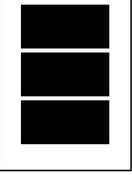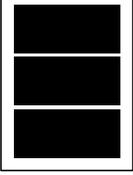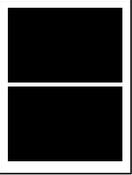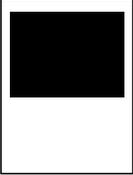Example: Printed position for A4 paper		
1 8 x 10cm	2 9 x 13cm	3 10 x 15cm
		
4 13 x 18cm	5 15 x 20cm	6 Max. Size
		

- 6 If you do not want to change additional settings, press . Press **Color Start** to print.

Adjusting Brightness, Contrast and Color

Brightness

- 1 Press **Print Setting**.
- 2 Press **▲** or **▼** to display **Brightness**.
- 3 Press **Brightness**.
- 4 Press **◀** or **▶** to make a darker or lighter print. Press **OK**.
- 5 If you do not want to change additional settings, press . Press **Color Start** to print.

Contrast

You can choose the contrast setting. Increasing the contrast will make an image look sharper and more vivid.

- 1 Press **Print Setting**.
- 2 Press **▲** or **▼** to display **Contrast**.
- 3 Press **Contrast**.
- 4 Press **◀** or **▶** to change the contrast. Press **OK**.
- 5 If you do not want to change additional settings, press . Press **Color Start** to print.

Color Enhancement

You can turn on the color enhancement feature to print more vivid images. Printing time will be slower.

- 1 Press **Print Setting**.
- 2 Press **▲** or **▼** to display **Color Enhance**.
- 3 Press **Color Enhance**.
- 4 Do one of the following:
 - If you want to customize the **White Balance**, **Sharpness** or **Color Density**, press **On**, and then go to step 5.
 - If you do not want to customize, press **Off**. Go to step 8.
- 5 Press **White Balance**, **Sharpness** or **Color Density**.
- 6 Press **◀** or **▶** to adjust the degree of the setting. Press **OK**.

- 7 Do one of the following:
- If you want to customize another color enhancement, repeat steps 5 to 6.
 - If you want to change other settings, press  to display the print setting menu and press the setting you want to change. (See page 51.)
- 8 If you do not want to change additional settings, press . Press **Color Start** to print.



Note

• White Balance

This setting adjusts the hue of the white areas of an image. Lighting, camera settings and other influences will affect the appearance of white. The white areas of a picture may be slightly pink, yellow or some other color. By using this setting, you can correct that effect and bring the white areas back to pure white.

• Sharpness

This setting enhances the detail of an image, similar to adjusting the fine focus on a camera. If the image is not in true focus and you cannot see the fine details of the picture, then adjust the sharpness.

• Color Density

This setting adjusts the total amount of color in the image. You can increase or decrease the amount of color in an image to improve a washed out or weak picture.


Cropping

If your photo is too long or wide to fit the available space on your chosen layout, part of the image will automatically be cropped.


The factory setting is On. If you want to print the whole image, turn this setting to Off. When you set **Cropping** to Off, also set **Borderless** to Off. (See *Borderless printing* on page 54.)

- 1 Press **Print Setting**.
- 2 Press **▲** or **▼** to display **Cropping**.
- 3 Press **Cropping**.
- 4 Press **Off** (or **On**).
- 5 If you do not want to change additional settings, press . Press **Color Start** to print.

Cropping: On

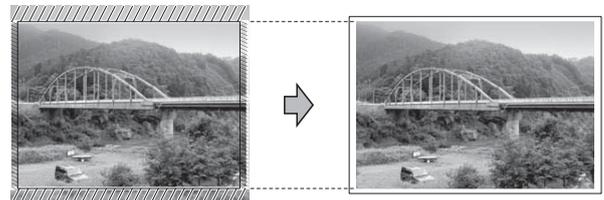

Cropping: Off

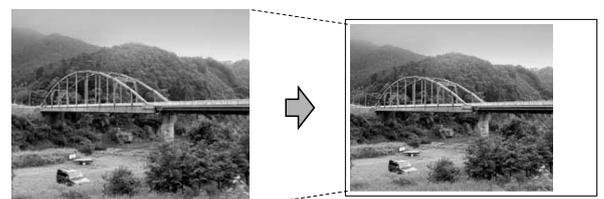

Borderless printing

This feature expands the printable area to the edges of the paper. Printing time will be slightly slower.

- 1 Press `Print Setting`.
- 2 Press `▲` or `▼` to display `Borderless`.
- 3 Press `Borderless`.
- 4 Press `Off` (or `On`).
- 5 If you do not want to change additional settings, press . Press **Color Start** to print.

Date Print

You can print the date if it is already in the data on your photo. The date will be printed on the lower right corner. If the data doesn't have the date information, you cannot use this function.

- 1 Press `Print Setting`.
- 2 Press `▲` or `▼` to display `Date Print`.
- 3 Press `Date Print`.
- 4 Press `On` (or `Off`).
- 5 If you do not want to change additional settings, press . Press **Color Start** to print.



Note

The DPOF setting on your camera must be turned off to use the `Date Print` feature.

Setting your changes as a new default

You can save the print settings you use most often by setting them as the default settings. These settings will stay until you change them again.

- 1 Press your new setting. Repeat this step for each setting you want to change.
- 2 After changing the last setting, press `▲` or `▼` to choose `Set New Default`.
- 3 Press `Set New Default`.
- 4 Press `Yes` to confirm.
- 5 Press **Stop/Exit**.

Restoring all settings to the factory settings

You can restore the PhotoCapture settings

`Print Quality`, `Paper Type`, `Paper Size`, `Brightness`, `Contrast`, `Color Enhance`, `Cropping`, `Borderless` and `Date Print`, that you have changed, to the factory settings.

- 1 Press `Print Setting`.
- 2 Press `▲` or `▼` to display `Factory Reset`.
- 3 Press `Factory Reset`.
- 4 Press `Yes` to confirm.
- 5 Press **Stop/Exit**.

Scan to a memory card or USB Flash memory drive

Glass Scan Size

To scan a Letter, Legal, Ledger, or A3 size document, you need to change the Glass Scan Size setting. The default setting is A4.

- 1 Press  (**SCAN**).
- 2 Press to Media.
- 3 Press ◀ or ▶ to display Glass Scan Size.
- 4 Press Glass Scan Size.
- 5 Press A4, A3, Letter, Legal or Ledger.




Note

- You can save the setting you use most often by setting it as the default. (See *Setting your changes as a new default* on page 54.)
- This setting is only available for scanning documents from the scanner glass.

Auto Crop

You can scan multiple documents placed on the scanner glass. An individual document can be previewed on the LCD before you save it. When you choose *Auto Crop*, the machine will scan each document and create separate files. For example, if you place three documents on the scanner glass, the machine will scan and create three separate files. If you want to create a three page file, choose *PDF* or *TIFF* for *File Type*.

(If you choose *JPEG*, each document is created as three separate files.)

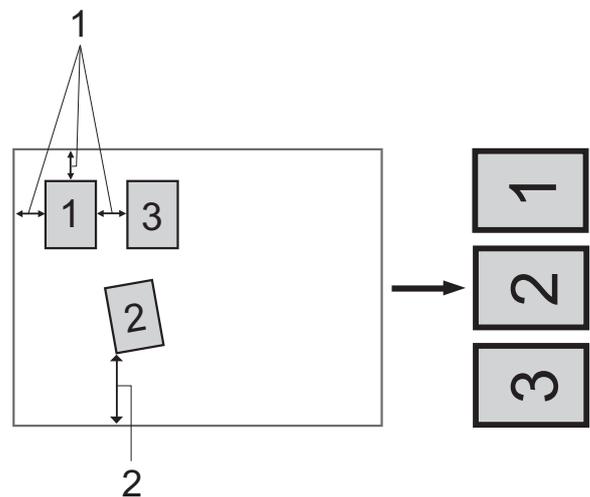

- 1 10 mm or greater (top, left, right)
- 2 20 mm or greater (bottom)



Note

- *Auto Crop* works correctly for all Glass Scan Size settings.
- *Auto Crop* is supported by technology from Reallusion, Inc.



REALLUSION

- 1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.
- 2 Load your document.
- 3 Press  (**SCAN**).

- 4 Press to Media.
- 5 Press ◀ or ▶ to display Auto Crop.
- 6 Press Auto Crop.
- 7 Press On.
- 8 If you do not want to change additional settings, press **Mono Start** or **Color Start** to start scanning.
- 9 The number of the scanned documents appears on the LCD.
Press OK.
- 10 Press ◀ or ▶ to preview each document data.
- 11 Press Save All to save the data.



Note

- Auto Crop is available for paper with right angles of 90 degrees at all four corners. If one of the angles is not square, Auto Crop cannot detect the document.
- If your document is too long or wide, this setting does not work correctly.
- You must place the documents away from the edges of the scanner glass as shown in the illustration.
- You must place the documents at least 10 mm apart from each other.
- Auto Crop adjusts the skew of the document on the scanner glass, but if your document is skewed more than 10 degrees, this setting will not work.
- The ADF must be empty to use the Auto Crop.
- The Auto Crop feature is available for up to a maximum of 16 documents depending on the size of your documents.

! IMPORTANT

DO NOT take out the memory card or USB Flash memory drive while **PHOTO CAPTURE** is blinking to avoid damaging the card, USB Flash memory drive or the data stored on them.

How to set a new default

You can save the Scan to Media settings (Quality, File Type, Glass Scan Size and Auto Crop) you use most often by setting them as the default settings. These settings will stay until you change them again.

- 1 Press  (**SCAN**).
- 2 Press to Media.
- 3 Press ◀ or ▶ to display Set New Default.
- 4 Press Set New Default.
- 5 Press Yes to confirm.
- 6 Press **Stop/Exit**.

How to reset to factory settings

You can restore all the Scan to Media settings (Quality, File Type, Glass Scan Size and Auto Crop), that you have changed, to the factory settings.

- 1 Press  (**SCAN**).
- 2 Press to Media.
- 3 Press ◀ or ▶ to choose Factory Reset.
- 4 Press Factory Reset.
- 5 Press Yes to confirm.
- 6 Press **Stop/Exit**.

Printing photos directly from a PictBridge camera



Your Brother machine supports the PictBridge standard, allowing you to connect to and print photos directly from any PictBridge compatible digital camera.

If your camera is using the USB Mass Storage standard, you can also print photos from a digital camera without PictBridge. (See *Printing photos directly from a digital camera (without PictBridge)* on page 59.)

PictBridge requirements

To avoid errors, remember the following points:

- The machine and the digital camera must be connected using a suitable USB cable.
- The image file extension must be .JPG (other image file extensions like .JPEG, .TIF, .GIF and so on will not be recognized).
- PhotoCapture Center™ operations are not available when using the PictBridge feature.

Setting your digital camera

Make sure your camera is in PictBridge mode. The following PictBridge settings may be available from the LCD of your PictBridge compatible camera.

Depending on your camera some of these settings may not be available.

Camera Menu Selections	Options
Paper Size	A4, A3, Ledger, Letter, 10 × 15 cm, Printer Settings (Default setting) ²
Paper Type	Plain Paper, Glossy Paper, Inkjet Paper, Printer Settings (Default setting) ²
Layout	Borderless: On, Borderless: Off, Printer Settings (Default setting) ²
DPOF setting ¹	-
Print Quality	Normal, Fine, Printer Settings (Default setting) ²
Color Enhancement	On, Off, Printer Settings (Default setting) ²
Date Print	On, Off, Printer Settings (Default setting) ²

¹ See *DPOF printing* on page 58 for more details.

² If your camera is set to use the Printer Settings (Default setting), the machine will print your photo using the following settings.

Settings	Options
Paper Size	10 × 15 cm
Paper Type	Other Glossy
Layout	Borderless: On
Print Quality	Photo
Color Enhancement	Off
Date Print	Off

- When your camera does not have any menu selections, these settings are also used.
- The names and availability of each setting depends on the specification of your camera.

Please refer to the documentation supplied with your camera for more detailed information on changing PictBridge settings.


Printing Images



Note

Remove any memory cards or USB Flash memory drive from the machine before connecting a digital camera.

- 1 Make sure that your camera is turned off. Connect your camera to the USB direct interface (1) on the machine using the USB cable.

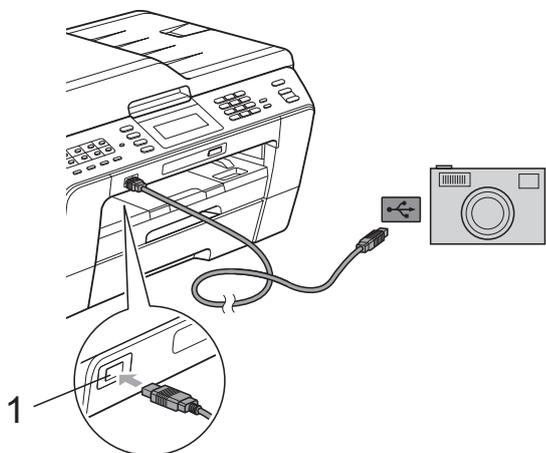

1 USB direct interface

- 2 Turn on the camera. When the machine has recognized the camera, the LCD shows *Camera Connected*.
- 3 Choose the photo you want to print following the instructions from your camera. When the machine starts printing a photo, the LCD will show *Printing*.

! IMPORTANT

To prevent damage to your machine, do not connect any device other than a digital camera or USB Flash memory drive to the USB direct interface.

DPOF printing

DPOF stands for Digital Print Order Format.

Major digital camera manufacturers (Canon Inc., Eastman Kodak Company, FUJIFILM Corporation, Panasonic Corporation and Sony Corporation) created this standard to make it easier to print images from a digital camera.

If your digital camera supports DPOF printing, you will be able to choose on the digital camera display the images and number of copies you want to print.



Note

A DPOF File error can occur if the print order that was created on the camera has been corrupted. Delete and recreate the print order using your camera to correct this problem. For instructions on how to delete or recreate the print order, refer to your camera manufacturer's support website or accompanying documentation.

Printing photos directly from a digital camera (without PictBridge)

If your camera supports the USB Mass Storage standard, you can connect your camera in storage mode. This enables you to print photos from your camera.

(If you would like to print photos in PictBridge mode, see *Printing photos directly from a PictBridge camera* on page 57.)

Note


The name, availability and operation differ among digital cameras. Please refer to the documentation supplied with your camera for detailed information, such as how to switch from PictBridge mode to USB mass storage mode.

Printing Images

Note

Remove any memory cards or USB Flash memory drive from the machine before connecting a digital camera.

- 1 Make sure that your camera is turned off. Connect your camera to the USB direct interface (1) on the machine using the USB cable.

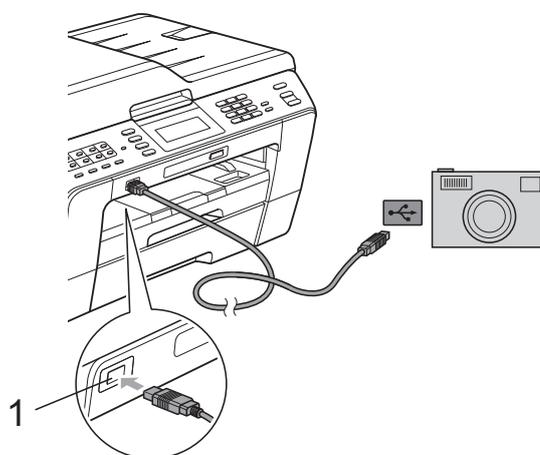

1 USB direct interface

- 2 Turn on the camera.
- 3 Follow the steps in *Print Images* on page 47.

! IMPORTANT

To prevent damage to your machine, do not connect any device other than a digital camera or USB Flash memory drive to the USB direct interface.

A

Routine maintenance

Cleaning and checking the machine


Cleaning the outside of the machine

Clean the Touchscreen as follows:

! IMPORTANT

- Turn off the power switch when you clean the Touchscreen.
- DO NOT use any type of liquid cleaners (including ethanol).

- 1 Clean the Touchscreen with a *dry* soft lint-free cloth.


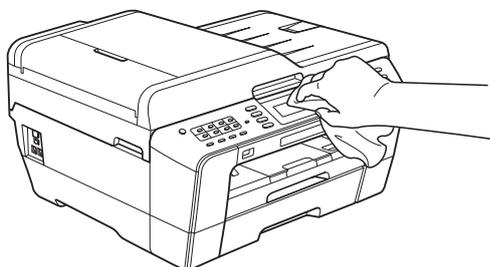


Clean the outside of the machine as follows:


! IMPORTANT

- Use neutral detergents. Cleaning with volatile liquids such as thinner or benzine will damage the outside surface of the machine.
- DO NOT use cleaning materials that contain ammonia.
- DO NOT use isopropyl alcohol to remove dirt from the control panel. It may crack the panel.

- 1 Pull the paper trays (1) completely out of the machine.

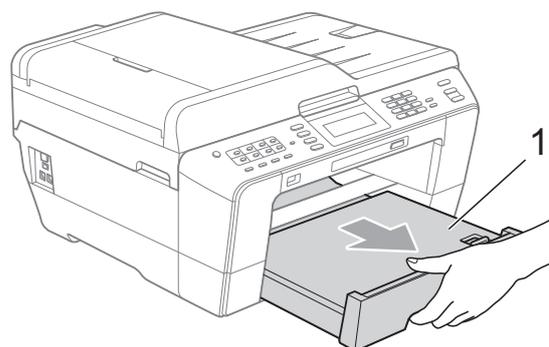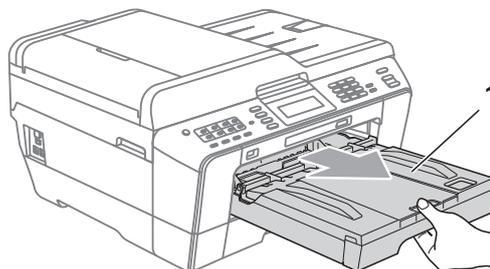


- Wipe the outside of the machine with a *dry*, soft lint-free cloth to remove dust.

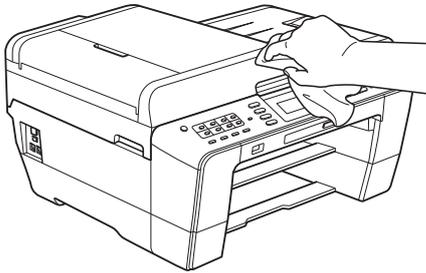

- Lift the output paper tray cover and remove anything that is stuck inside the paper tray.

- Wipe the paper tray with a *dry*, soft lint-free cloth to remove dust.

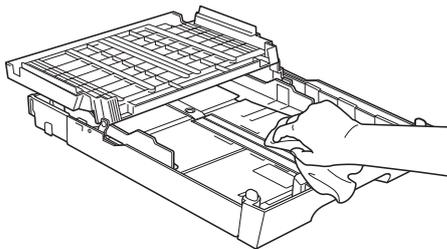


- Close the output paper tray cover and put the output paper tray firmly back in the machine.

Cleaning the machine's printer platen

⚠ CAUTION

Be sure to unplug the machine from the electrical socket before cleaning the printer platen.

- Using both hands, use the finger holds on each side of the machine to lift the scanner cover into the open position.
- Clean the machine's printer platen (1) and the area around it, wiping off any scattered ink with a *dry*, soft lint-free cloth.

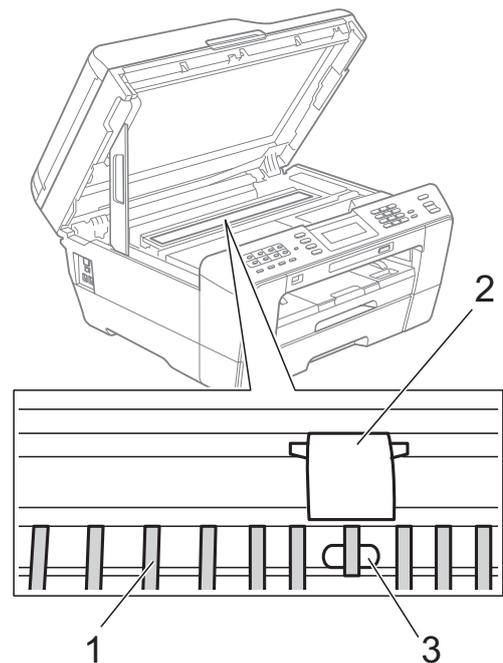


⚠ IMPORTANT

DO NOT touch the plate (2) and lever (3). Doing this may cause damage to the machine.

Cleaning the paper feed rollers

If the paper feed rollers are stained with ink, it may cause paper feed problems.


- 1 Unplug the machine from the electrical socket. Pull the paper tray completely out of the machine.

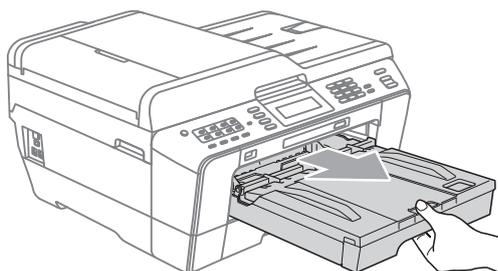


Note

If the paper support flap is open, close it, and then close the paper support.

- 2 Clean the front side of the Paper Feed Rollers (1) with a soft lint-free cloth moistened with water, using a side-to-side motion. After cleaning, wipe the rollers with a *dry*, soft lint-free cloth to remove all moisture.

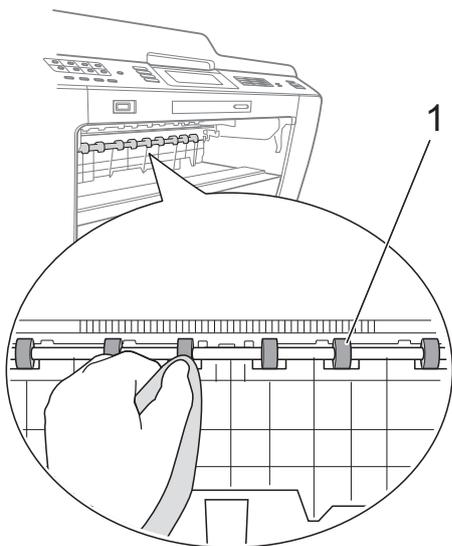

- 3 Lift the Jam Clear flap (2), and then clean the back side of the Paper Feed Rollers (1) with a soft lint-free cloth moistened with water. After cleaning, wipe the rollers with a *dry*, soft lint-free cloth to remove all moisture.

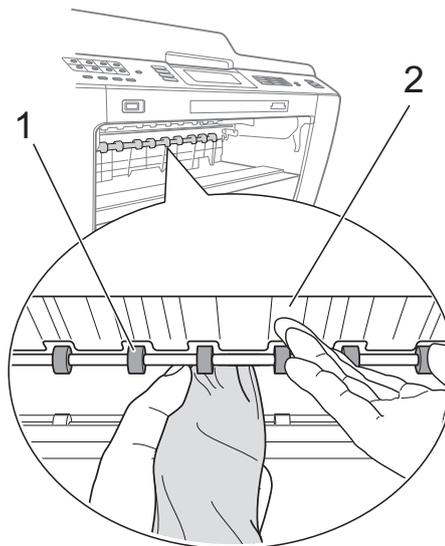

- 4 Put the paper tray firmly back in the machine.
- 5 Re-connect the power cord.

Note

Do not use the machine again until the rollers are dry. Using the machine before the rollers are dry may cause paper feed problems.

Cleaning the paper pick-up rollers


- 1 Unplug the machine from the electrical socket.
- 2 Pull the paper tray completely out of the machine.



Note


If the machine starts multiple-feeding the last few sheets of paper in the tray, clean the Base Pad (1) with a soft lint-free cloth moistened with water.

After cleaning, wipe the pad with a *dry*, soft lint-free cloth to remove all moisture.

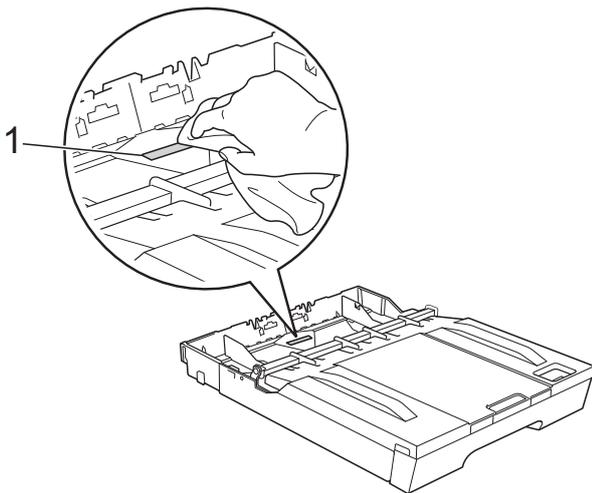


- 3 Open the Jam Clear Cover (1) at the back of the machine.


Manual feed slot cover

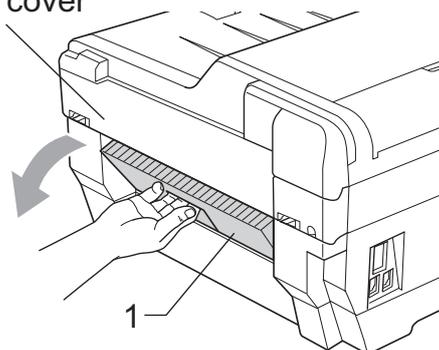

- 4 Clean the Paper Pick-up Rollers (1) with a soft lint-free cloth moistened with water. Slowly turn the rollers so that the whole surface is cleaned. After cleaning, wipe the rollers with a *dry*, soft lint-free cloth to remove all moisture.

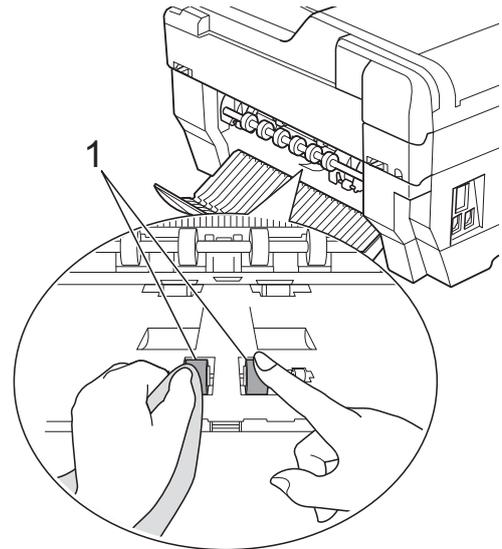

- 5 Clean the Back Paper Feed Rollers (1) with a soft lint-free cloth moistened with water. Slowly turn the rollers so that the whole surface is cleaned. After cleaning, wipe the rollers with a *dry*, soft lint-free cloth to remove all moisture.

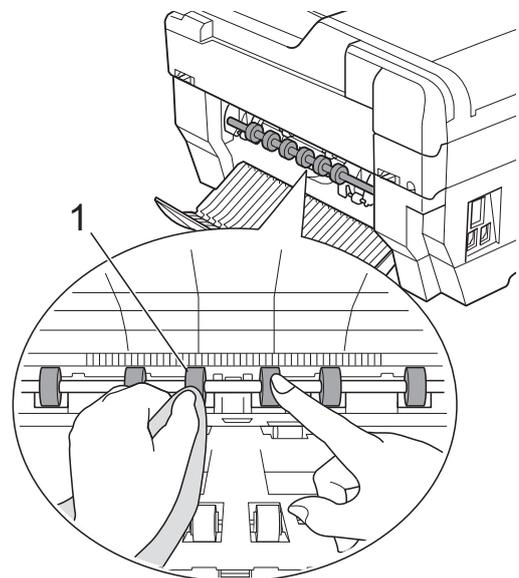



Note

Do not touch the metal shaft.

- 6 Close the Jam Clear Cover. Make sure the cover is closed completely.
- 7 Put the paper tray firmly back in the machine.
- 8 Re-connect the power cord.

Cleaning the paper pick-up rollers for paper tray #2


- 1 Unplug the machine from the electrical socket. Pull tray #2 completely out of the machine.



Note

If the paper support flap is open, close it, and then close the paper support.

- 2 Clean the paper pick-up rollers for tray #2 (1) with a soft lint-free cloth moistened with water. Slowly turn the rollers so that the whole surface is cleaned. After cleaning, wipe the rollers with a *dry*, soft lint-free cloth to remove all moisture.

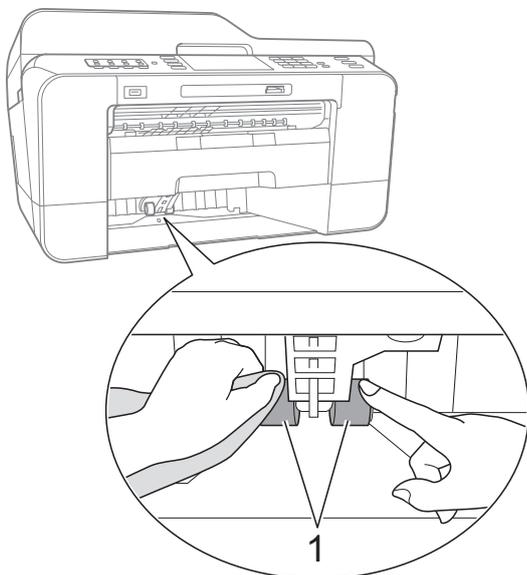

- 3 Put tray #2 firmly back in the machine.
- 4 Re-connect the power cord.

Checking the ink volume

Although an ink volume icon appears on the LCD, you can use the ink menu to see a large graph showing the ink that is left in each cartridge.

- 1 Press .
- 2 Press **Ink Volume**. The LCD shows the ink volume.
- 3 Press **Stop/Exit**.



Note

You can check the ink volume from your computer. (See *Printing for Windows*[®] or *Printing and Faxing for Macintosh* in the *Software User's Guide*.)

Packing and shipping the machine


When you transport the machine, use the packing materials that came with your machine. Follow the instructions below to correctly pack your machine. Damage caused to your machine during transit may not be covered by your warranty.

! IMPORTANT


It is important to allow the machine to “park” the print head after a print job. Listen carefully to the machine before unplugging it to make sure that all mechanical noise has stopped. Not allowing the machine to finish this parking process may lead to print problems and possible damage to the print head.

- 1 Unplug the machine from the telephone wall socket and take the telephone line cord out of the machine.
- 2 Unplug the machine from the electrical socket.
- 3 Using both hands, use the finger holds on each side of the machine to lift the scanner cover into the open position. Then unplug the interface cable from the machine, if it is connected.

- 4 Remove the orange protective part from the inside right corner of the machine.

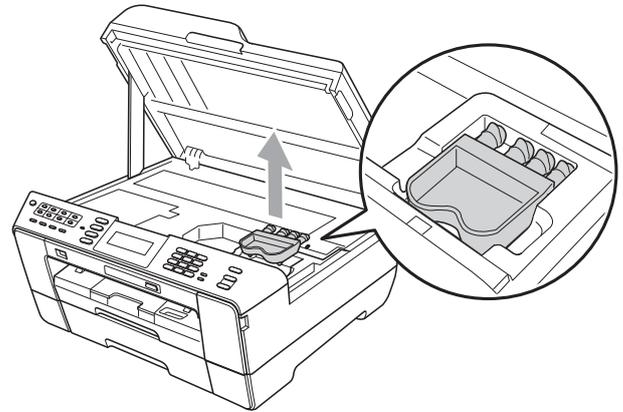

- 5 Gently close the scanner cover using the finger holds on each side.

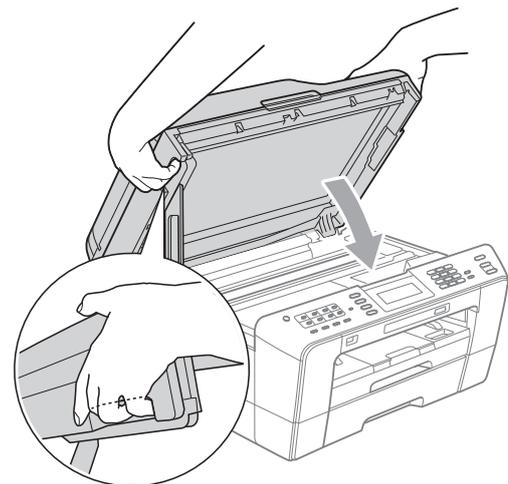


! WARNING

Be careful not to trap your fingers under the scanner cover.

Always use the finger holds provided on each side of the scanner cover when opening and closing it.


- 6 Open the ink cartridge cover.
- 7 Remove all four ink cartridges. Press the ink release lever above each cartridge to release it. (See *Replacing the ink cartridges* in appendix A of the *Basic User's Guide*.)

- 8 Install the orange protective part and then close the ink cartridge cover.

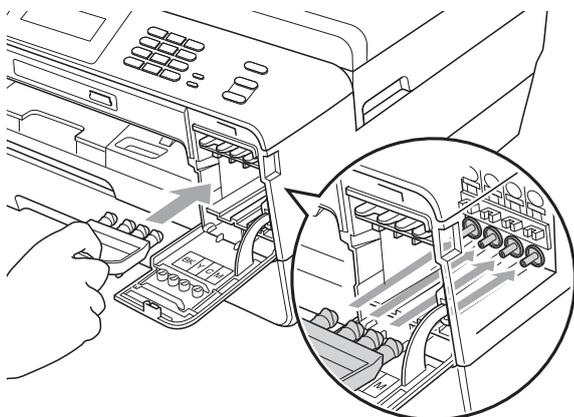


! IMPORTANT

- Make sure the plastic tab on the right side of the orange protective part (1) clicks securely into place (2).

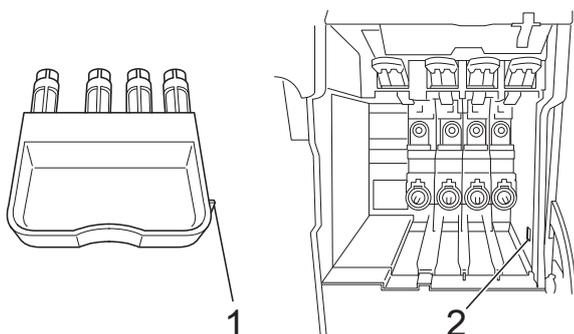


- If you are not able to find the orange protective part, DO NOT remove the ink cartridges before shipping. It is essential that the machine be shipped with either the orange protective part or the ink cartridges in position. Shipping without them will cause damage to your machine and may void your warranty. When travelling with the ink cartridges still in the machine please keep the machine upright as this will protect the machine from leakage.

- 9 Wrap the machine in the bag.

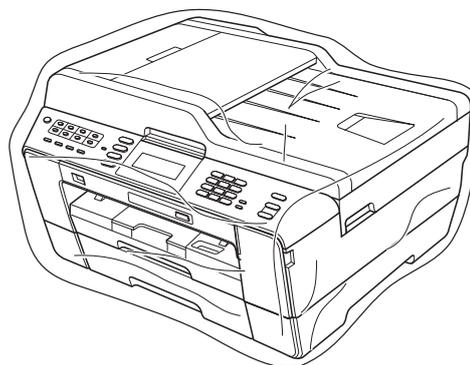

- 10 Pack the machine and the printed materials in the original carton with the original packing material as shown below. Do not pack the used ink cartridges in the carton.

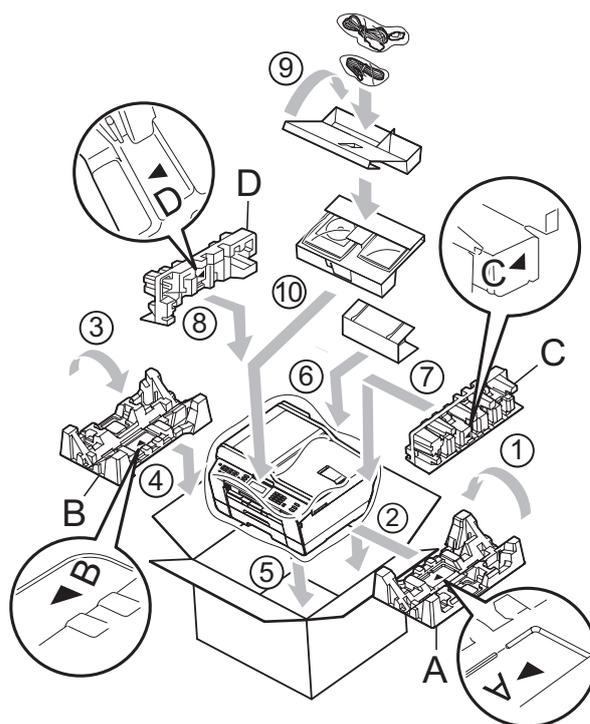

- 11 Close the carton and tape it shut.

B

Glossary

This is a comprehensive list of features and terms that appear in Brother manuals. Availability of these features depends on the model you purchased.

ADF (automatic document feeder)

The document can be placed in the ADF and scanned one page at a time automatically.

Auto Reduction

Reduces the size of incoming faxes.

Automatic fax transmission

Sending a fax without picking up the handset of an external telephone.

Automatic Redial

A feature that enables your machine to redial the last fax number after five minutes if the fax did not go through because the line was busy.

Backup Print

Your machine prints a copy of every fax that is received and stored in memory. This is a safety feature so you will not lose messages during a power failure.

Batch Transmission

(Black and white faxes only) As a cost saving feature, all delayed faxes to the same fax number can be sent as one transmission.

Beeper Volume

Volume setting for the beep when you press a key or make an error.

Brightness

Changing the Brightness makes the whole image lighter or darker.

Broadcasting

The ability to send the same fax message to more than one location.

Caller ID

A service purchased from the telephone company that lets you see the number (or name) of the party calling you.

CNG tones

The special tones (beeps) sent by fax machines during automatic transmission to tell the receiving machine that a fax machine is calling.

Coding method

Method of coding the information contained in the document. All fax machines must use a minimum standard of Modified Huffman (MH). Your machine is capable of greater compression methods, Modified Read (MR), Modified Modified Read (MMR) and JPEG, if the receiving machine has the same capability.

Color Enhancement

Adjusts the color in the image for better print quality by improving sharpness, white balance and color density.

Communication error (Comm. Error)

An error during fax sending or receiving, usually caused by line noise or static.

Compatibility group

The ability of one fax unit to communicate with another. Compatibility is assured between ITU-T Groups.

Contrast

Setting to compensate for dark or light documents, by making faxes or copies of dark documents lighter and light documents darker.

Delayed Fax

Sends your fax at a specified time later.

Density

Changing the Density makes the whole image lighter or darker.

Dual Access

Your machine can scan outgoing faxes or scheduled jobs into memory at the same time it is sending a fax from memory or receiving or printing an incoming fax.

ECM (Error Correction Mode)

Detects errors during fax transmission and resends the pages of the fax that had an error.

Extension telephone

A telephone using the same line as your fax but plugged into a separate wall socket.

External telephone

A TAD (telephone answering device) or telephone that is connected to your machine.

F/T Ring Time

The length of time that the Brother machine rings (when the Receive Mode setting is Fax/Tel) to notify you to pick up a voice call that it answered.

Fax Detect

Enables your machine to respond to CNG tones if you interrupt a fax call by answering it.

Fax Forwarding

Sends a fax received into the memory to another pre-programmed fax number.

Fax Journal

Lists information about the last 200 incoming and outgoing faxes. TX means Transmit. RX means Receive.

Fax Preview

If you choose Fax Preview you will be able to view received faxes on the LCD by pressing the **Fax Preview** key or **Fax Preview** button on the LCD.

Fax Storage

You can store received faxes in memory.

Fax tones

The signals sent by sending and receiving fax machines while communicating information.

Fax/Tel

You can receive faxes and telephone calls. Do not use this mode if you are using a telephone answering device (TAD).

Fine resolution

Resolution is 203 × 196 dpi. It is used for small print and graphs.

Greyscale

The shades of grey available for copying, scanning and faxing photographs.

Group number

A combination of One Touch and Speed Dial numbers that are stored on a One Touch key or in a Speed Dial location for Broadcasting.

Help list

A printout of the complete Menu table that you can use to program your machine when you do not have the Basic User's Guide with you.

Innobella™

Innobella™ is a range of genuine consumables offered by Brother. For best quality results Brother recommends Innobella™ Ink and Paper.

Journal Period

The pre-programmed time period between automatically printed Fax Journal Reports. You can print the Fax Journal on demand without interrupting the cycle.

LCD (Liquid Crystal Display)

The display screen on the machine that shows interactive messages during On-Screen Programming and shows the date and time when the machine is idle.

Manual fax

When you lift the handset of your external telephone you can hear the receiving fax machine answer before you press **Mono Start** or **Color Start** to begin sending the fax.

Memory Receive

Receives faxes into the machine's memory when the machine is out of paper.

Menu mode

Programming mode for changing your machine's settings.

OCR (optical character recognition)

Presto! PageManager software application converts an image of text to text you can edit.

One Touch

Keys on the machine's control panel where you can store numbers for easy dialling. You can store a second number on each key if you hold down **Shift** as you press the One Touch key.

Overseas Mode

Makes temporary changes to the fax tones to accommodate noise and static on overseas telephone lines.

Pause

Allows you to place a 3.5 second delay in the dialling sequence while you are dialling using the dial pad or while you are storing One Touch and Speed Dial numbers. Press the **Redial/Pause** key on the control panel or the **Pause** button on the LCD as many times as needed for longer pauses.

PhotoCapture Center™

Allows you to print digital photos from your digital camera at high resolution for photo quality printing.

Photo resolution (Mono only)

A resolution setting that uses varying shades of grey for the best representation of photographs.

PictBridge

Allows you to print photos directly from your digital camera at high resolution for photo quality printing.

Polling

The process of a fax machine calling another fax machine to retrieve waiting fax messages.

Pulse

A form of rotary dialling on a telephone line.

Quick Dial List

A listing of names and numbers stored in One Touch and Speed Dial memory, in numerical order.

Real Time Transmission

When memory is full, you can send faxes in real time.

Remaining jobs

You can check which jobs are waiting in memory and cancel jobs individually.

Remote Access Code

Your own four-digit code (---*) that allows you to call and access your machine from a remote location.

Remote Activation Code

Press this code (* 5 1) when you answer a fax call on an extension or external telephone.

**Remote Deactivation Code
(For Fax/Tel mode only)**

When the machine answers a voice call, it fast double-rings. You can pick up at an extension telephone by pressing this code (# 5 1).

Remote Retrieval Access

The ability to access your machine remotely from a touch-tone telephone.

Resolution

The number of vertical and horizontal lines per inch. See: Standard, Fine, Super Fine and Photo.

Ring Delay

The number of rings before the machine answers in **Fax Only** and **Fax/Tel** modes.

Ring Volume

Volume setting for the machine's ring.

Scanning

The process of sending an electronic image of a paper document into your computer.

Scan to Media

You can scan a monochrome or color document into a memory card or USB Flash memory drive. Monochrome images will be in TIFF or PDF file format and color images may be in PDF or JPEG file format.

Search

An electronic, numerical or alphabetical listing of stored One Touch, Speed Dial and Group numbers.

Speed Dial

A pre-programmed number for easy dialling. You must press

 (Phone Book), the two digit code, and **Mono Start** or **Color Start** to start the dialling process.

Standard resolution

203 × 97 dpi. It is used for regular size text and quickest transmission.

Station ID

The stored information that appears on the top of faxed pages. It includes the sender's name and fax number.

Super Fine resolution (Mono only)

392 × 203 dpi. Best for very small print and line art.

TAD (telephone answering device)

You can connect an external TAD to your machine.

Temporary settings

You can choose certain options for each fax transmission and copy without changing the default settings.

Tone

A form of dialling on the telephone line used for touch-tone telephones.

Transmission

The process of sending faxes over the phone lines from your machine to the receiving fax machine.

Transmission Verification Report

A listing for each fax sent, that shows its date, time and number.

User Settings

A printed report that shows the current settings of the machine.

WLAN Report

A printed report that shows the result of the WLAN Connection.

Numerics

2 in 1 ID Copy 38

A

Access codes, storing and dialling 26

Apple Macintosh

See Software User's Guide.

B

Broadcasting 11

setting up Groups for 30

C

Caller ID

Caller ID History report 33

Cancelling

Fax Forwarding 19, 21

Fax Storage 19

jobs awaiting redial 14

Cleaning

paper feed roller 62

printer platen 61

ControlCenter

See Software User's Guide.

Copy

2 in 1 ID 38

book 41

density 39

duplex 42

enlarge/reduce 35

favourite settings 45

ink save mode 39

page layout (N in 1) 36

poster 36

quality 34

skew adjustment 40

sort (ADF only) 39

thin paper 40

using ADF 39

Watermark 41

using a media card 41

using a paper document 42

using a template 41

using a USB Flash memory drive 41

D

Dialing

dial prefix 2

Dialling

Groups (Broadcasting) 11

Direct printing

from a non-PictBridge camera 59

from a PictBridge camera 57

Dual Access 11

Duplex (2-sided)

copy 42

fax 10

F

Fax codes

changing 20

Remote Access Code 20

Fax Forwarding

changing remotely 21, 22

programming a number 16

Fax Storage

printing from memory 17

turning off 19

turning on 17

Fax, from PC

See Software User's Guide.

Fax, stand-alone

receiving

Fax Forwarding 21

into PC 18

into the memory 16

out of paper reception 16

printing from memory 17

reducing to fit on paper 23

retrieving from a remote site 21, 22

sending	8
at end of conversation	11
Broadcasting	11
cancelling from memory	14
contrast	8
delayed batch transmission	14
delayed fax	13
duplex (2-sided)	10
from memory (Dual Access)	11
manual	10
overseas	13
Real Time Transmission	13
Resolution	9
return to factory setting	9
set new default	9
Function Lock	4

G

Groups for Broadcasting	30
-------------------------------	----

I

ID Copy	38
Ink cartridges	
checking ink volume	64

L

LCD (Liquid Crystal Display)	
Dim Timer	2
Help List	33

M

Macintosh	
See Software User's Guide.	
Manual	
transmission	10
Memory Security	15
Memory Storage	1
Mode, entering	
Timer	3
Movie printing	47

N

Network	
Printing	
See Network User's Guide.	
Scanning	
See Software User's Guide.	

O

One Touch	
setting up from Caller ID history	27
setting up from outgoing calls	27

P

Packing and shipping the machine	65
PhotoCapture Center™	
Adding Effect	48
DPOF printing	50
from PC	
See Software User's Guide.	
Photo Effects	
Auto Correct	48
Enhance Scenery	48
Enhance Skin	48
Fill Light	48
Monochrome	48
Night Scene	48
Remove Red-Eye	48
Sepia	48
Trim	48
Whiteboard	48
Print settings	
Borderless	54
Brightness	52
Color enhancement	52
Contrast	52
Cropping	53
Date Print	54
Paper type & size	51
Quality	51
Return to factory setting	54
Set new default	54

Printing	
index	47
photos	48
Scan to Media	
auto crop	55
memory card	55
USB Flash memory	55
PictBridge	
DPOF Printing	58
Power failure	1
Presto! PageManager	
See Software User's Guide. See also Help in the Presto! PageManager application.	
Print	
fax from memory	17
report	33
Printing	
See Software User's Guide.	

Q

Quick Dial	
Broadcasting	11
deleting Groups	31
using Groups	11
Group dial	
changing	31
setting up Groups for Broadcasting ...	30
One Touch	
setting up from Caller ID history	27
setting up from outgoing calls	27
Speed Dial	
setting up from Caller ID history	29
setting up from outgoing calls	28

R

Reducing	
copies	35
incoming faxes	23
Remote Retrieval	20
commands	21
getting your faxes	22
remote access code	20

Remote Setup	
See Software User's Guide.	
Reports	32
Caller ID	33
Caller ID History Report	33
Fax Journal	33
Journal Period	32
Help List	33
how to print	33
Network Configuration	33
Quick Dial List	33
Transmission Verification	32, 33
User Settings	33
WLAN Report	33
Resolution	
setting for next fax	9
Restricted users	6

S

Scanning	
See Software User's Guide.	
Security	
Secure function lock	
administrator password	5
restricted users	6
Shipping the machine	65
Sleep Mode	1
Speed Dial	
setting up from Caller ID history	29
setting up from outgoing calls	28

T

Troubleshooting	
checking ink volume	64

W

Windows®	
See Software User's Guide.	
Wireless Network	
See Quick Setup Guide and Network User's Guide.	

brother®

Visit us on the World Wide Web
<http://www.brother.com/>

This machine is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.