


ADVANCED USER'S GUIDE

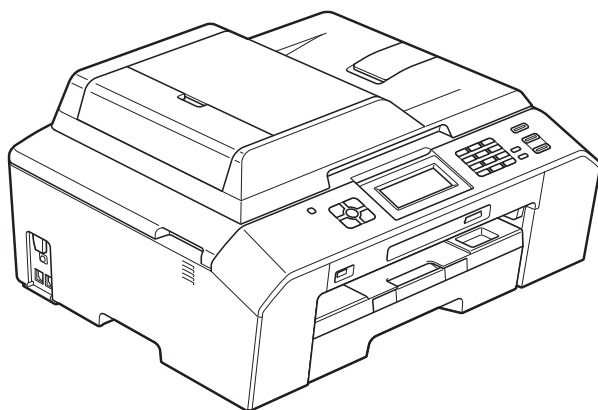

MFC-J5910DW

User's Guides and where to find them?

Which manual?	What's in it?	Where is it?
Product Safety Guide	Read this Guide first. Please read the Safety Instructions before you set up your machine. See this Guide for trademarks and legal limitations.	Printed / In the box
Quick Setup Guide	Follow the instructions for setting up your machine and installing the drivers and software for the operating system and connection type you are using.	Printed / In the box
Basic User's Guide	Learn the basic Fax, Copy, Scan and PhotoCapture Center™ operations and how to replace consumables. See troubleshooting tips.	Printed / In the box
Advanced User's Guide	Learn more advanced operations: Fax, Copy, security features, printing reports and performing routine maintenance.	PDF file / CD-ROM
Software User's Guide	Follow these instructions for Printing, Scanning, Network Scanning, PhotoCapture Center™, Remote Setup, PC-Fax, Web Services (Scan), and using the Brother ControlCenter utility.	PDF file / CD-ROM
Network Glossary	This Guide provides basic information about advanced network features of Brother machines along with explanations about general networking and common terms.	PDF file / CD-ROM
Network User's Guide	This Guide provides useful information about wired and wireless network settings and security settings using the Brother machine. You can also find supported protocol information for your machine and detailed troubleshooting tips.	PDF file / CD-ROM
Mobile Print/Scan Guide	This Guide provides useful information about printing data from your mobile phone and transmitting scanned data from the Brother machine to your mobile phone.	PDF file / Brother Solutions Center ¹

¹ Visit us at <http://solutions.brother.com/>.

Table of Contents

1	General setup	1
	Memory Storage	1
	Setting Daylight Saving Time	1
	Sleep Mode	2
	LCD display	2
	LCD Contrast	2
	Setting the Dim Timer for the backlight	3
	Dial Prefix	3
	Setting up or changing the prefix number	3
	Mode Timer	4
2	Security features	5
	Secure Function Lock 2.0	5
	Before you begin to use Secure Function Lock 2.0	5
	Setting and changing the Administrator Password	6
	Setting up restricted users	7
	Turning Secure Function Lock on/off	7
	Switching users	8
	Changing to the Public mode	8
3	Sending a fax	9
	Additional sending options	9
	Sending faxes using multiple settings	9
	Stop faxing	9
	Contrast	9
	Changing fax resolution	10
	Setting your changes as a new default	10
	Restoring fax settings to the factory default	11
	Additional sending operations	11
	Sending a fax manually	11
	Sending a fax at the end of a conversation	11
	Dual Access (Monochrome only)	12
	Broadcasting (Monochrome only)	12
	Real Time Transmission	14
	Overseas Mode	14
	Delayed Faxing (Monochrome only)	14
	Delayed Batch Transmission (Monochrome only)	15
	Checking and cancelling waiting jobs	15
	Polling overview	16
	Polled Transmit (Monochrome only)	16

4 Receiving a fax 17

Memory Receive (Monochrome only).....	17
Fax Forwarding.....	17
Fax Storage	18
Printing a fax from the memory	18
PC-Fax Receive (Windows® only).....	19
Turning off Memory Receive operations.....	20
Changing Memory Receive operations	20
Remote Retrieval	21
Setting a Remote Access Code.....	21
Using your Remote Access Code.....	21
Remote Fax commands	22
Retrieving fax messages	23
Changing your Fax Forwarding number	23
Additional receiving operations.....	24
Out of Paper Reception	24
Printing a reduced incoming fax	24
Polling overview.....	25
Polling receive	25

5 Dialling and storing numbers 27

Additional dialling operations	27
Combining Quick Dial numbers	27
Additional ways to store numbers.....	28
Storing Speed Dial numbers from Outgoing Calls.....	28
Storing Speed Dial numbers from the Caller ID history.....	29
Setting up Groups for Broadcasting	30

6 Printing reports 32

Fax reports.....	32
Transmission Verification Report.....	32
Fax Journal (activity report)	32
Reports	33
How to print a report	33

7	Making copies	34
	Copy settings	34
	Stop copying	34
	Changing copy speed and quality	34
	Enlarging or reducing the copied image	35
	Making N in 1 copies or a poster (Page Layout)	36
	2 in 1 ID Copy	38
	Sorting copies using the ADF	38
	Adjusting Density	39
	Ink Save Mode	39
	Thin Paper Copy	40
	Book Copy	40
	Duplex (2-sided) copying	41
	Setting your changes as a new default	42
	Restoring all settings to the factory default	43
8	Printing photos from a memory card or USB Flash memory drive	44
	PhotoCapture Center™ operations	44
	Memory cards, USB Flash memory drive and folder structures	44
	Print Images	45
	Print Index (Thumbnails)	45
	Printing Photos	45
	Printing All Photos	46
	DPOF printing	46
	PhotoCapture Center™ print settings	47
	Print Quality	47
	Paper options	47
	Adjusting Brightness, Contrast and Colour	48
	Cropping	50
	Borderless printing	50
	Date Print	50
	Setting your changes as a new default	51
	Restoring all settings to the factory default	51
	Scan to a memory card or USB Flash memory drive	52
	How to set a new default	52
	How to reset to the factory default	52
9	Printing photos from a camera	53
	Printing photos directly from a PictBridge camera	53
	PictBridge requirements	53
	Setting your digital camera	54
	Printing Images	55
	DPOF printing	55
	Printing photos directly from a digital camera (without PictBridge)	56
	Printing Images	56

A	Routine maintenance	57
	Cleaning and checking the machine	57
	Cleaning the outside of the machine	57
	Cleaning the machine's printer platen	58
	Cleaning the paper feed rollers	58
	Cleaning the paper pick-up rollers	60
	Checking the ink volume	61
	Packing and shipping the machine	62
B	Glossary	64
C	Index	68

Memory Storage

Your menu settings are stored permanently, and in the event of a power failure will not be lost. Temporary settings (for example, `Overseas Mode`) will be lost. If you have chosen `Set New Default` for your **FAX**, **SCAN**, **COPY** and **PHOTO** preferred settings, those settings will not be lost. Also, during a power failure the machine will retain the date and time and programmed fax timer jobs (for example, `Delayed Fax`) for up to 24 hours.

Setting Daylight Saving Time

You can set the machine to change for daylight saving time. When selecting `On` it will forward the time by an hour and backward one hour when selecting `Off`. Make sure you have set the correct date and time in the `Date&Time` setting.

- 1 Press `Menu`.
- 2 Press `▲` or `▼` to display `General Setup`.
- 3 Press `General Setup`.
- 4 Press `▲` or `▼` to display `Daylight Save`.
- 5 Press `Daylight Save`.
- 6 Press `Off` (or `On`).
- 7 Press **Stop/Exit**.

Sleep Mode

You can choose how long the machine will remain idle before it goes into Sleep Mode (up to 60 minutes). The timer will restart if any operation is carried out on the machine.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **Sleep Mode**.
- 5 Press **Sleep Mode**.
- 6 Press **▲** or **▼** to display **1Min, 2Mins, 3Mins, 5Mins, 10Mins, 30Mins or 60Mins** to choose the length of time the machine is idle before entering Sleep Mode. Press the option you want to set.
- 7 Press **Stop/Exit**.

LCD display

LCD Contrast

You can adjust the LCD contrast. If you are having difficulty reading the LCD, try changing the contrast setting.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **LCD Settings**.
- 5 Press **LCD Settings**.
- 6 Press **▲** or **▼** to display **LCD Contrast**.
- 7 Press **LCD Contrast**.
- 8 Press **◀** to increase the contrast and press **▶** to decrease the contrast. Press **OK**.
- 9 Press **Stop/Exit**.

Setting the Dim Timer for the backlight

You can set how long the LCD backlight stays on after the last key press.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **LCD Settings**.
- 5 Press **LCD Settings**.
- 6 Press **▲** or **▼** to display **Dim Timer**.
- 7 Press **Dim Timer**.
- 8 Press **▲** or **▼** to display **10Secs**, **20Secs**, **30Secs** or **Off**, and then press the option you want to set.
- 9 Press **Stop/Exit**.

Dial Prefix

The Dial Prefix setting will automatically dial a predefined number before every fax number you dial. For example, if your telephone system requires a 9 to dial an outside number, use this setting to automatically dial 9 for every fax you send.

Setting up or changing the prefix number

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Initial Setup**.
- 3 Press **Initial Setup**.
- 4 Press **▲** or **▼** to display **Dial Prefix**.
- 5 Press **Dial Prefix**.
- 6 Press **On** (or **Off**).
- 7 Press **Dial Prefix**.
- 8 Enter the prefix number (up to 5 digits) by pressing the buttons on the screen.
- 9 Press **OK**.



Note

- To access an outside line, press **!**.
- You cannot use **!** with any other numbers or characters.
- (Not available in New Zealand) If the pulse dialling mode is on, **#** and ***** are not available to use.

- 10 Press **Stop/Exit**.

Mode Timer

The machine has four temporary mode keys on the control panel: **FAX**, **SCAN**, **COPY** and **PHOTO**. You can change the amount of time the machine takes after the last Scan, Copy or PhotoCapture operation before it returns to FAX mode. If you choose *Off*, the machine stays in the mode you used last by default.



- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **Mode Timer**.
- 5 Press **Mode Timer**.
- 6 Press **▲** or **▼** to display **0Sec**, **30Secs**, **1Min**, **2Mins**, **5Mins** or **Off**, and then press the option you want to set.
- 7 Press **Stop/Exit**.

Secure Function Lock 2.0

Secure Function Lock lets you restrict public access to certain machine functions:

- Fax Tx (Fax Transmit)
- Fax Rx (Fax Receive)
- Copy
- Scan
- PCC (PhotoCapture Center™)
- PC Print
- Colour Print
- Page Limit

This feature also prevents users from changing the default settings of the machine by limiting access to the menu settings.

Before using the security features, you must first enter an administrator password.

Access to restricted operations can be enabled by creating a restricted user. Restricted users must enter a password to use the machine.

Make a careful note of your password. If you forget it, please contact Brother customer service for support.



Note

- Only administrators can set limitations and make changes for each user.
- If Fax Tx is disabled, you cannot use any functions in the Fax menu.
- Polled Transmit and Polling Receive are enabled only when both Fax Tx and Fax Rx are enabled.

Before you begin to use Secure Function Lock 2.0

You can configure Secure Function Lock 2.0 settings using a Web browser. Before configuration, the following preparations are needed.

- 1 Start your Web browser.
- 2 Type "http://machine's IP address/" into your browser's address bar (where "machine's IP address" is the Brother machine's IP address).


- For example:


http://192.168.1.2/



Note

You can find the machine's IP address in the Network Configuration List. (►►Network User's Guide: *Printing the Network Configuration Report*)

- 3 Enter a password in the **Login** box. (This is a password to log into the machine's Web page, not the administrator password for Secure Function Lock.) Click .

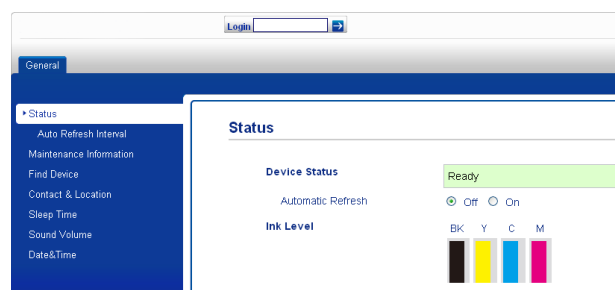

**Note**

If you are using a Web browser to configure the machine's settings for the first time, set a password.

- 1 Click **Please configure the password.**
- 2 Enter a password you want to use (up to 32 characters).
- 3 Re-enter the password in the **Confirm new password** box.
- 4 Click **Submit.**

Setting and changing the Administrator Password

You can configure these settings using a Web browser. Set up the Web page. (*Before you begin to use Secure Function Lock 2.0* >> page 5) Then follow the instructions below.

Setting the administrator password

The password you set in these steps is for the administrator. This password is used to set up users and to turn Secure Function Lock on or off. (*Setting up restricted users* >> page 7 and *Turning Secure Function Lock on/off* >> page 7)

- 1 Click **Administrator.**
- 2 Click **Secure Function Lock.**

- 3 Enter a four-digit number for the password in the **New Password** box.

- 4 Re-enter the password in the **Retype Password** box.
- 5 Click **Submit.**

Changing the administrator password

- 1 Click **Administrator.**
- 2 Click **Secure Function Lock.**
- 3 Enter a four-digit number for the new password in the **New Password** box.
- 4 Re-enter the new password in the **Retype Password** box.
- 5 Click **Submit.**


Setting up restricted users

You can set up users with restrictions and a password. You can set up to 10 users.

You can configure these settings using a Web browser.

Set up the Web page. (*Before you begin to use Secure Function Lock 2.0* ►► page 5)
Then follow the instructions below.

- 1 Click **Administrator**.
- 2 Click **Secure Function Lock**.
- 3 Enter an alphanumeric Group name or User name (up to 15 characters) in the **ID Number/Name** box and then enter a four-digit password in the **PIN** box.

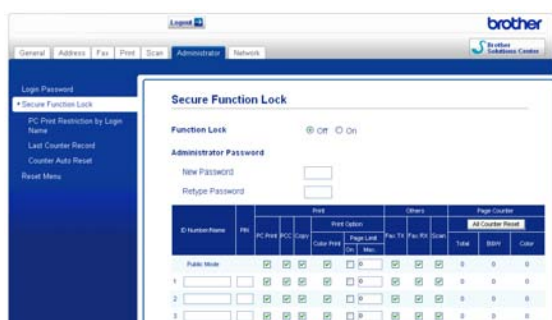

- 4 Uncheck the functions that you want to restrict in the **Print** box or the **Others** box. If you want to configure the maximum page count, check the **On** box in **Page Limit**, and then enter the number in the **Max.** box. Then click **Submit**.

Note

- You cannot use the same password as another user's password.
- You can set up one Public user. Public users do not need to enter a password. For more information ►►Network User's Guide.

Turning Secure Function Lock on/off



Note



If you enter the wrong password, the LCD will show **Wrong Password**. Enter the correct password. If you forget it, please contact Brother customer service for support.

2

Turning Secure Function Lock on



- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **Function Lock**.
- 5 Press **Function Lock**.
- 6 Press **Lock Off→On**.
- 7 Enter your four-digit administrator password by pressing the buttons on the Touchscreen.
Press **OK**.

Turning Secure Function Lock off


- 1 Press  or .
- 2 Press **Lock On→Off**.
- 3 Enter your four-digit administrator password by pressing the buttons on the Touchscreen.
Press **OK**.

Switching users

This setting allows a restricted user to log on to the machine when the Secure Function Lock is turned on.

- 1 On the Touchscreen, press  or  (where xxxxx is the user's name), and then press \wedge or \vee to display `Change User`.
- 2 Press `Change User`.
- 3 Press \wedge or \vee to display your user name.
- 4 Press your user name.
- 5 Enter your four-digit user password by pressing the buttons on the Touchscreen.
Press `OK`.

Changing to the Public mode

- 1 Press  (where xxxxx is the user's name).
- 2 Press `Go to Public`.



Note

After a restricted user has finished using the machine, it will return to the Public setting within the same time as the Mode Timer setting. (*Mode Timer* >> page 4)

Additional sending options

Sending faxes using multiple settings

When you send a fax you can choose a combination of settings, such as Fax Resolution, Contrast, Glass ScanSize, and Real Time TX.

You can also choose: History, Speed Dial, Broadcasting, Delayed Fax, Batch TX, Polled TX, Polling RX, Overseas Mode, Set New Default, and Factory Reset.

Some settings are only available when sending mono faxes.

- 1 Press  (FAX).
The LCD shows:



- 2 Press **Options**.
- 3 Press **^** or **v** to display the setting you want to change. When the setting is displayed, press it.
- 4 Press **^** or **v** to display the available options, and then press the option you want to set.
- 5 Go back to step 3 to change more settings.



Note

- Most settings are temporary and the machine returns to its default settings after you send a fax.
- You can save some of the settings you use most often by setting them as the default. These settings will remain until you change them again. (*Setting your changes as a new default* >> page 10)


Stop faxing

To stop faxing, press **Stop/Exit**.

Contrast

If your document is very light or very dark, you may want to change the contrast. For most documents the factory setting **Auto** can be used. It automatically chooses the suitable contrast for your document.

Choose **Light** when sending a light document. Choose **Dark** when sending a dark document.

- 1 Press  (FAX).
- 2 Press **Options**.
- 3 Press **^** or **v** to display **Contrast**.
- 4 Press **Contrast**.
- 5 Press **^** or **v** to display **Auto**, **Light** or **Dark**, and then press the option you want to set.




Note

Even if you choose **Light** or **Dark**, the machine will send the fax using the **Auto** setting in any of the following conditions:

- When you send a colour fax.
- When you choose **Photo** as the Fax Resolution.

Changing fax resolution

The quality of a fax can be improved by changing the fax resolution.

- 1 Press  (FAX).
- 2 Press **Options**.
- 3 Press **▲** or **▼** to display Fax Resolution.
- 4 Press **Fax Resolution**.
- 5 Press **▲** or **▼** to display the resolution options, and then press the option you want to set.



Note

You can choose four different resolution settings for monochrome faxes and two for colour.


Monochrome	
Standard	Suitable for most typed documents.
Fine	Good for small print and transmits a little slower than Standard resolution.
S.Fine	Good for small print or artwork and transmits slower than Fine resolution.
Photo	Use when the document has varying shades of grey or is a photograph. Photo has the slowest transmission.

Colour	
Standard	Suitable for most typed documents.
Fine	Use when the document is a photograph. The transmission time is slower than Standard resolution.

If you choose **S.Fine** or **Photo** and then use the **Colour Start** key to send a fax, the machine will send the fax using the **Fine** setting.

Setting your changes as a new default

You can save the settings for the fax options you use most often by setting them as default, such as Fax Resolution, Contrast, Real Time TX, and Glass ScanSize. These settings will remain until you change them again.

- 1 Press  (FAX).
- 2 Press **Options**.
- 3 Press **▲** or **▼** to choose the menu option that you want to change. Press your new option.

Repeat this step for each setting you want to change.

- 4 After changing the last setting, press **▲** or **▼** to display **Set New Default**.
- 5 Press **Set New Default**.
- 6 Press **OK**.
- 7 Press **Yes**.
- 8 Press **Stop/Exit**.

Restoring fax settings to the factory default

You can restore all the fax settings you have changed back to the factory default. These settings will remain until you change them again.

- 1 Press  (FAX).
- 2 Press **Options**.
- 3 Press **▲** or **▼** to display **Factory Reset**.
- 4 Press **Factory Reset**.
- 5 Press **Yes**.
- 6 Press **Stop/Exit**.

Additional sending operations


Sending a fax manually

Manual transmission lets you hear the dialling, ringing and fax-receiving tones while sending a fax.




Note

To send a multi-page fax, use the ADF.

- 1 Press  (FAX).
- 2 Load your document.
- 3 To listen for a dial tone, press **Hook**.
- 4 Dial the fax number.
- 5 When you hear the fax tones, press **Mono Start** or **Colour Start**.
If you are using the scanner glass, press **Send** on the Touchscreen to send the fax.

Sending a fax at the end of a conversation

At the end of a conversation, you can send a fax to the other party before you both hang up.

- 1 Ask the other party to wait for fax tones (beeps) and then to press the **Start** or **Send** key before hanging up.
- 2 Press  (FAX).
- 3 Load your document.
- 4 Press **Mono Start** or **Colour Start**.
■ If you are using the scanner glass, press **Send** to send the fax.
- 5 Replace the handset of the external phone.

Dual Access (Monochrome only)

You can dial a number and start scanning the fax into memory—even when the machine is sending from memory, receiving faxes or printing PC data. The LCD shows the new job number.

The number of pages you can scan into the memory will vary depending on the data that is printed on them.



Note

If the **Out of Memory** message appears, press **Stop/Exit** to cancel or **Mono Start** to send the pages scanned so far.

Broadcasting (Monochrome only)

Broadcasting is when the same fax message is automatically sent to more than one fax number. You can include Groups and Speed Dial numbers in the same broadcast.



After the broadcast is finished, a Broadcast Report will be printed.

Before you begin the broadcast

Speed Dial numbers must be stored in the machine's memory before they can be used in a broadcast. (►►Basic User's Guide: *Storing Speed Dial numbers*)

Group numbers must also be stored in the machine's memory before they can be used in a broadcast. Group numbers include many stored Speed Dial numbers for easier dialling. (*Setting up Groups for Broadcasting* ►► page 30)

How to broadcast a fax

- 1 Press  (FAX).
- 2 Load your document.
- 3 Press **Options**.
- 4 Press **▲** or **▼** to display **Broadcasting**.
- 5 Press **Broadcasting**.
- 6 Press
Add number from SpeedDial.
Press  to search by
Alphabetical Order or Numerical Order.
Press the check boxes of the numbers
you want to add to the broadcast.
After you have checked all the numbers
you want to add, press **OK**.



Note

If you have downloaded Internet Fax:

You can broadcast to an E-mail address if you stored it as a Speed Dial number.
(►►Basic User's Guide: *Storing Speed Dial numbers*)

- 7 Press **OK**.

8 Press **Mono Start**.

Faxing from the ADF

- The machine starts scanning the document.

Faxing from the scanner glass

When the LCD asks you `Next Page?`, do one of the following:

- To send a single page, press `No (Send)` (or press **Mono Start** again).

The machine starts sending the document.

- To send more than one page, press `Yes` and place the next page on the scanner glass.

Press `OK`.

The machine starts scanning the page. (Repeat this step for each additional page.)



Note

- If you did not use up any of the numbers for Groups, you can “broadcast” faxes to as many as 200 different numbers.
- The machine’s available memory will vary depending on the types of jobs in the memory and the number of locations used for broadcasting. If you broadcast to the maximum numbers available, you will not be able to use dual access and delayed fax.
- If the `Out of Memory` message appears, press **Stop/Exit** to cancel or **Mono Start** to send the pages scanned so far.

Cancelling a Broadcast in progress

1 Press **Stop/Exit**.

2 Do one of the following:

- To cancel the entire broadcast, press `Entire Broadcast`. Go to step 3.
- To cancel the current job, press the button that displays the number being dialled. Go to step 4.
- To exit without cancelling, press **Stop/Exit**.

3 When the LCD asks if you want to cancel the entire broadcast, do one of the following:

- Press `Yes` to confirm.
- To exit without cancelling, press `No` or **Stop/Exit**.



4 Do one of the following:

- To cancel the current job, press `Yes`.
- To exit without cancelling, press `No` or **Stop/Exit**.

Real Time Transmission

When you are sending a fax, the machine will scan the documents into the memory before sending. Then, as soon as the telephone line is free, the machine will start dialling and sending.

Sometimes, you may want to send an important document immediately, without waiting for memory transmission. You can do this by turning on **Real Time TX**.

- 1 Press  (**FAX**).
- 2 Load your document.
- 3 Press **Options**.
- 4 Press **^** or **v** to display **Real Time TX**.
- 5 Press **Real Time TX**.
- 6 Press **On**.
- 7 Press  so you can continue sending your fax.





Note

- If you are sending a colour fax or if the memory is full and you are sending a black & white fax from the ADF, the machine will send the document in real time (even if **Real Time TX** is set to **Off**).
- In Real Time Transmission, the automatic redial feature does not work when you are using the scanner glass.


Overseas Mode

If you are having difficulty sending a fax overseas due to possible interference on the telephone line, we recommend that you turn on **Overseas Mode**. After you send a fax using this feature, the feature will automatically turn itself off.

- 1 Press  (**FAX**).
- 2 Load your document.
- 3 Press **Options**.
- 4 Press **^** or **v** to display **Overseas Mode**.
- 5 Press **Overseas Mode**.
- 6 Press **On** (or **Off**).
- 7 Press  so you can continue sending your fax.


Delayed Faxing (Monochrome only)

You can store up to 50 faxes in the memory to be sent within 24 hours. These faxes will be sent at the time of day you enter in step 7.

- 1 Press  (**FAX**).
- 2 Load your document.
- 3 Press **Options**.
- 4 Press **^** or **v** to display **Delayed Fax**.
- 5 Press **Delayed Fax**.
- 6 Press **On**.
- 7 Enter the time you want the fax to be sent (in 24-hour format) by pressing the buttons on the Touchscreen.
(For example, enter 19:45 for 7:45 PM.)
Press **OK**.


**Note**

The number of pages you can scan into the memory depends on the amount of data that is printed on each page.

- 8 Press , and then enter the fax number and press **Mono Start**.

Delayed Batch Transmission (Monochrome only)

Before sending the delayed faxes, your machine will help you economize by sorting all the faxes in the memory by destination and scheduled time. All delayed faxes that are scheduled to be sent at the same time to the same fax number will be sent as one fax to save transmission time.

- 1 Press  (**FAX**).
- 2 Press **Options**.
- 3 Press **▲** or **▼** to display **Batch TX**.
- 4 Press **Batch TX**.
- 5 Press **On**.
- 6 Press **Stop/Exit**.

Checking and cancelling waiting jobs

You can check which jobs are still waiting in the memory to be sent, or cancel a job. (If there are no jobs, the LCD shows **No Jobs Waiting**.)

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Remaining Jobs**.
- 5 Press **Remaining Jobs**. Any waiting jobs appear on the LCD.
- 6 Press **▲** or **▼** to scroll through the jobs and press the job you want to cancel. Press **OK**.
- 7 Do one of the following:
 - To cancel, press **Yes**.
If you want to cancel another job go to step 6.
 - To exit without cancelling, press **No**.
- 8 When you have finished, press **Stop/Exit**.

Polling overview


Polling lets you set up your machine so other people can receive faxes from you, but they pay for the call. It also lets you call somebody else's fax machine and receive a fax from it, so you pay for the call. The polling feature needs to be set up on both machines for this to work. Not all fax machines support polling.

Polled Transmit (Monochrome only)

Polled transmit lets you set up your machine to wait with a document so another fax machine can call and retrieve it.

The document will be stored and can be retrieved by any other fax machine until you delete it from the memory. (*Checking and cancelling waiting jobs* >> page 15)

Setup for polled transmit


- 1 Press  (FAX).
- 2 Load your document.
- 3 Press **Options**.
- 4 Press **^** or **v** to display **Polled TX**.
- 5 Press **Polled TX**.
- 6 Press **^** or **v** to display **Standard**.
- 7 Press **Standard**.
- 8 Press **Mono Start**.
- 9 If you are using the scanner glass, the LCD will prompt you to choose one of the following options:
 - Press **Yes** to scan another page. Go to step 10.
 - Press **No (Send)** or **Mono Start** to store the document in memory. Other fax machines can now call your machine and retrieve the document.

- 10 Place the next page on the scanner glass and press **OK**. Repeat steps 9 and 10 for each additional page. The document will be stored in memory and wait to be polled.

Setup for polled transmit with secure code

Secure Polling lets you restrict who can get the documents you set up to be polled.

Secure Polling only works with Brother fax machines. If another person wants to retrieve a fax from your machine, they will have to enter the secure code.

- 1 Press  (FAX).
- 2 Load your document.
- 3 Press **Options**.
- 4 Press **^** or **v** to display **Polled TX**.
- 5 Press **Polled TX**.
- 6 Press **^** or **v** to display **Secure**.
- 7 Press **Secure**.
- 8 Enter a four-digit number. Press **OK**.
- 9 Press **Mono Start**.
- 10 If you are using the scanner glass, the LCD will prompt you to choose one of the following options:
 - Press **Yes** to scan another page. Go to step 11.
 - Press **No (Send)** or **Mono Start** to send the document.
- 11 Place the next page on the scanner glass and press **OK**.
- 12 Repeat steps 10 and 11 for each additional page. The document will be stored in memory and wait to be polled.

Memory Receive (Monochrome only)

You can only use one Memory Receive operation at a time:

- Fax Forwarding
- Fax Storage
- PC-Fax Receive
- Off

You can change your selection at any time. If received faxes are still in the machine's memory when you change the Memory Receive operation, a message will appear on the LCD. (*Changing Memory Receive operations* >> page 20)

Fax Forwarding

When you choose Fax Forward, your machine stores the received fax in the memory. The machine will then dial the fax number you have programmed and forward the fax message.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Setup Receive**.
- 5 Press **Setup Receive**.
- 6 Press **▲** or **▼** to display **Memory Receive**.
- 7 Press **Memory Receive**.
- 8 Press **▲** or **▼** to display **Fax Forward**.
- 9 Press **Fax Forward**.

- 10 Enter the forwarding number (up to 20 digits) by pressing the buttons on the Touchscreen.
Press **OK**.

- 11 Press **Backup Print:On** or **Backup Print:Off**.

! IMPORTANT

- If you choose **Backup Print:On**, the machine will also print the fax at your machine so you will have a copy. This is a safety feature in case there is a power failure before the fax is forwarded or a problem at the receiving machine.
- When you receive a colour fax, your machine prints the colour fax at your machine but does not forward the fax to the fax forwarding number you programmed.

- 12 Press **Stop/Exit**.

Fax Storage

If you choose Fax Storage, your machine stores received faxes in the memory. You will be able to retrieve fax messages from another location using the remote retrieval commands.

If you have turned on Fax Storage, a backup copy will automatically be printed at the machine.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Setup Receive**.
- 5 Press **Setup Receive**.
- 6 Press **▲** or **▼** to display **Memory Receive**.
- 7 Press **Memory Receive**.
- 8 Press **▲** or **▼** to display **Fax Storage**.
- 9 Press **Fax Storage**.
- 10 Press **Stop/Exit**.



Note

Colour faxes cannot be stored in the memory. When you receive a colour fax, your machine prints the colour fax at your machine.

Printing a fax from the memory

If you have chosen Fax Storage, you can still print a fax from the memory when you are at your machine.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Print Document**.
- 5 Press **Print Document**.
- 6 Press **Start**.
- 7 Press **Stop/Exit**.



Note

When you print a fax from the memory, the fax data will be erased from your machine.

PC-Fax Receive (Windows® only)

If you turn on the PC-Fax Receive feature your machine will store received faxes in memory and send them to your PC automatically. You can then use your PC to view and store these faxes.

Even if you have turned off your PC (at night or on the weekend, for example), your machine will receive and store your faxes in its memory.

When you start your PC and the PC-FAX Receiving software runs, your machine transfers your faxes to your PC automatically.

To transfer the received faxes to your PC you must have the PC-FAX Receiving software running on your PC.

(►►Software User's Guide: *PC-FAX receiving*)

If you choose `Backup Print:On` the machine will also print the fax.

- 1 Press `Menu`.
- 2 Press `▲` or `▼` to display `Fax`.
- 3 Press `Fax`.
- 4 Press `▲` or `▼` to display `Setup Receive`.
- 5 Press `Setup Receive`.
- 6 Press `▲` or `▼` to display `Memory Receive`.
- 7 Press `Memory Receive`.
- 8 Press `▲` or `▼` to display `PC Fax Receive`.
- 9 Press `PC Fax Receive`.
- 10 The LCD shows the message `Run PC-Fax on your computer.` Press `OK`.

- 11 Press `<USB>` or, for network users, the name of the PC you want to receive faxes to.

- 12 Press `Backup Print:On` or `Backup Print:Off`.

- 13 Press **Stop/Exit**.



Note

- PC-Fax Receive is not supported by Mac OS.
- Before you can set up PC-Fax Receive you must install the MFL-Pro Suite software on your PC. Make sure your PC is connected and turned on. (►►Software User's Guide: *PC-FAX receiving*)
- If you get an error message and the machine cannot print the faxes in memory, you can use this setting to transfer your faxes to your PC. (►►Basic User's Guide: *Transferring your faxes or Fax Journal report*)
- When you receive a colour fax, your machine prints the colour fax at your machine but does not send the fax to your PC.
- To change the destination PC, repeat steps 1 to 13.

Turning off Memory Receive operations

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Setup Receive**.
- 5 Press **Setup Receive**.
- 6 Press **▲** or **▼** to display **Memory Receive**.
- 7 Press **Memory Receive**.
- 8 Press **Off**.
- 9 Press **Stop/Exit**.



Note

The LCD will show you more options if there are received faxes still in the machine's memory. (*Changing Memory Receive operations* ►► page 20)

Changing Memory Receive operations

If there are received faxes in your machine's memory when you change the Memory Receive Operations, the LCD will ask you one of the following questions:

If all the received faxes have already been printed

■ Erase All Doc?

- If you press **Yes**, faxes in the memory will be erased before the setting changes.
- If you press **No**, faxes in the memory will not be erased and the setting will be unchanged.

If unprinted faxes remain in the memory

■ Print All Fax?

- If you press **Yes**, faxes in the memory will be printed before the setting changes. If a backup copy has already been printed it will not be printed again.
- If you press **No**, faxes in the memory will not be printed and the setting will be unchanged.

If received faxes are left in the machine's memory when you change to **PC Fax Receive** from another option [**Fax Forward** or **Fax Storage**], press **▲** or **▼** to choose the **PC**.

The LCD will ask you the following question:

■ Send Fax to PC?

- If you press **Yes**, faxes in the memory will be sent to your PC before the setting changes. You will be asked if you want to turn on Backup Print. (For details: *PC-Fax Receive (Windows® only)* ►► page 19.)
- If you press **No**, faxes in the memory will not be erased or transferred to your PC and the setting will be unchanged.

Remote Retrieval

You can call your machine from any touch-tone telephone or fax machine and then use the remote access code and remote commands to retrieve fax messages.

Setting a Remote Access Code

The Remote Access Code lets you access the remote retrieval features when you are away from your machine. Before you can use the remote access and retrieval features, you have to set up your own code. The factory default code is the inactive code (---*).

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Remote Access**.
- 5 Press **Remote Access**.
- 6 Enter a three-digit code using numbers 0-9, *, or # by pressing the buttons on the Touchscreen.
Press **OK**.
(The preset '*' cannot be changed.)




Note

Do not use the same code as your Remote Activation Code (* **5 1** (* **9 1** for New Zealand)) or Remote Deactivation Code (# **5 1** (# **9 1** for New Zealand)).
(►►Basic User's Guide: *Operation from external and extension telephones*)

- 7 Press **Stop/Exit**.



Note

You can change your code at any time by entering a new one. If you want to make your code inactive, press  in step 6 to restore the inactive setting (---*) and press **OK**.

Using your Remote Access Code

- 1 Dial your fax number from a touch-tone telephone or another fax machine.
- 2 When your machine answers, enter your remote access code (3 digits followed by *) at once.
- 3 The machine signals if it has received messages:
 - **1 long beep — Fax messages**
 - **No beeps — No messages**
- 4 When the machine gives two short beeps, enter a command.
The machine will hang up if you wait longer than 30 seconds to enter a command.
The machine will beep three times if you enter an invalid command.
- 5 Press **9 0** to stop Remote Access when you have finished.
- 6 Hang up.



Note

If your machine is set to **Manual** mode and you want to use the remote retrieval features, wait for about 100 seconds after it starts ringing, and then enter the remote access code within 30 seconds. This function may not be available in some countries e.g. Australia.

Remote Fax commands

Follow the commands below to access features when you are away from the machine. When you call the machine and enter your remote access code (3 digits followed by *), the system will give two short beeps and you must enter a remote command.

Remote commands		Operation details
95	Change the Fax Forwarding or Fax Storage settings	
	1 OFF	You can choose Off after you have retrieved or erased all your messages.
	2 Fax Forwarding	One long beep means the change is accepted. If you hear three short beeps, the change was not accepted because something has not been set up (for example, a Fax Forwarding number has not been registered). You can register your Fax Forwarding number by entering 4. (<i>Changing your Fax Forwarding number</i> >> page 23) Once you have registered the number, Fax Forwarding will work.
	4 Fax Forwarding number	
	6 Fax Storage	
96	Retrieve a fax	
	2 Retrieve all faxes	Enter the number of a remote fax machine to receive stored fax messages. (<i>Retrieving fax messages</i> >> page 23)
	3 Erase faxes from the memory	If you hear one long beep, fax messages have been erased from the memory.
97	Check the receiving status	
	1 Fax	You can check whether your machine has received any faxes. If yes, you will hear one long beep. If no, you will hear three short beeps.
98	Change the Receive Mode	
	1 External TAD	If you hear one long beep, your change has been accepted.
	2 Fax/Tel	
	3 Fax Only	
90	Exit	Pressing 9 0 allows you to exit remote retrieval. Wait for the long beep, then replace the handset.

Retrieving fax messages

You can call your machine from any touch-tone telephone and have your fax messages sent to another machine. Before you use this feature, you have to turn on Fax Storage. (*Fax Storage* ►► page 18)

- 1 Dial your fax number.
- 2 When your machine answers, enter your remote access code (3 digits followed by *) at once. If you hear one long beep, you have messages.
- 3 When you hear two short beeps, press **9 6 2**.
- 4 Wait for a long beep, and then use the dial pad to enter the number of the remote fax machine where you want your fax messages sent, followed by **# #** (up to 20 digits).



Note

You cannot use * and # as dial numbers. However, press # if you want to create a pause.

- 5 Hang up after you hear your machine beep. Your machine will call the other fax machine, which will then print your fax messages.

Changing your Fax Forwarding number

You can change the default setting of your fax forwarding number from another touch-tone telephone or fax machine.

- 1 Dial your fax number.
- 2 When your machine answers, enter your remote access code (3 digits followed by *) at once. If you hear one long beep, you have messages.
- 3 When you hear two short beeps, press **9 5 4**.
- 4 Wait for the long beep, enter the new number (up to 20 digits) of the remote fax machine you want your fax messages forwarded to using the dial pad, then enter **# #**.



Note

You cannot use * and # as dial numbers. However, press # if you want to create a pause.

- 5 Press **9 0** to stop Remote Access when you have finished.
- 6 Hang up after you hear your machine beep.

Additional receiving operations

Out of Paper Reception

As soon as the paper tray becomes empty during fax reception, the LCD shows `No Paper Fed`. Put some paper in the paper tray. (➤➤Basic User's Guide: *Loading paper and other print media*)

If you don't put paper in the paper tray, the machine will carry on receiving the fax, with the remaining pages being stored in memory, if enough memory is available.

Further incoming faxes will also be stored in memory until the memory is full. To print the faxes, put fresh paper in the tray. When the memory is full, the machine will stop automatically answering calls.

Printing a reduced incoming fax

If you choose `On`, the machine automatically reduces each page of an incoming fax to fit on one page of A4, A3, Letter, Legal or Ledger size paper. The machine calculates the reduction ratio by using the page size of the fax and your Paper Size setting.

(➤➤Basic User's Guide: *Paper Size*)

- 1 Press `Menu`.
- 2 Press `▲` or `▼` to display `Fax`.
- 3 Press `Fax`.
- 4 Press `▲` or `▼` to display `Setup Receive`.
- 5 Press `Setup Receive`.
- 6 Press `▲` or `▼` to display `Auto Reduction`.
- 7 Press `Auto Reduction`.
- 8 Press `On` (or `Off`).
- 9 Press **Stop/Exit**.


Polling overview

Polling lets you set up your machine so other people can receive faxes from you, but they pay for the call. It also lets you call somebody else's fax machine and receive a fax from it, so you pay for the call. The polling feature needs to be set up on both machines for this to work. Not all fax machines support polling.

Polling receive

Polling receive lets you call another fax machine to receive a fax.

Setup to receive polling

- 1 Press  (FAX).
- 2 Press **Options**.
- 3 Press **▲** or **▼** to display **Polling RX**.
- 4 Press **Polling RX**.
- 5 Press **▲** or **▼** to display **Standard**.
- 6 Press **Standard**.
- 7 Enter the fax number you are polling using Speed Dial or the dial pad on the control panel.
- 8 Press **Mono Start** or **Colour Start**.

Setup to receive polling with secure code

Secure Polling lets you restrict who can get the documents you set up to be polled.


Secure Polling only works with Brother fax machines. If you want to get a fax from a secured Brother machine you have to enter the secure code.

- 1 Press  (FAX).
- 2 Press **Options**.

- 3 Press **▲** or **▼** to display **Polling RX**.
- 4 Press **Polling RX**.
- 5 Press **▲** or **▼** to display **Secure**.
- 6 Press **Secure**.
- 7 Enter a four-digit secure code by pressing the buttons on the screen. This is the same as the security code of the fax machine you are polling. Press **OK**.
- 8 Enter the fax number you are polling by either using a Speed Dial or the dial pad on the control panel.
- 9 Press **Mono Start** or **Colour Start**.



Setup to receive delayed polling

Delayed polling lets you set the machine to begin polling receive at a later time. You can only set up *one* delayed polling operation.

- 1 Press  (FAX).
- 2 Press **Options**.
- 3 Press **▲** or **▼** to display **Polling RX**.
- 4 Press **Polling RX**.
- 5 Press **Timer**.
- 6 Enter the time (in 24-hour format) you want to start polling. For example, enter 21:45 for 9:45 PM. Press **OK**.
- 7 Enter the fax number you are polling by either using a Speed Dial or the dial pad on the control panel.
- 8 Press **Mono Start** or **Colour Start**. The machine makes the polling call at the time you entered.

Sequential polling (Monochrome only)

Sequential polling lets you request documents from several fax machines in one operation.

- 1 Press  (FAX).
- 2 Press **Options**.
- 3 Press **^** or **v** to display **Polling RX**.
- 4 Press **Polling RX**.
- 5 Press **Standard**, **Secure** or **Timer**.
- 6 Do one of the following:
 - If you chose **Standard**, go to step 7.
 - If you chose **Secure**, enter a four-digit number, press **OK**, go to step 7.
 - If you chose **Timer**, enter the time (24-hour format) you want to begin polling and press **OK**, go to step 7.
- 7 Press **Options**. Press **^** or **v** to display **Broadcasting**.
- 8 Press **Broadcasting**.
- 9 Press
Add number from **SpeedDial**.
Press  to choose alphabetical order or numerical order. Press the check boxes of the numbers you want to add to the broadcast.
After you have checked all the numbers you want add, press **OK**.
- 10 Press **OK**.
- 11 Press **Mono Start**.
The machine polls each number or group in turn for a document.

Press **Stop/Exit** while the machine is dialling to cancel the polling process.

To cancel all sequential polling receive jobs:
Cancelling a Sequential Polling Job
➤➤ page 26.

Cancelling a Sequential Polling Job

- 1 Press **Stop/Exit**.
- 2 Do one of the following:
 - To cancel the entire sequential polling job, press **Entire Seq. Poll**. Go to step 3.
 - To cancel the current job, press the button that displays the number being dialled. Go to step 4.
 - To exit without cancelling, press **Stop/Exit**.
- 3 When the LCD asks if you want to cancel the entire sequential polling job, do one of the following:
 - Press **Yes** to confirm.
 - To exit without cancelling, press **No** or **Stop/Exit**.
- 4 Do one of the following:
 - To cancel the current job, press **Yes**.
 - To exit without cancelling, press **No** or **Stop/Exit**.

Additional dialling operations

Combining Quick Dial numbers

Sometimes, you may want to choose from several long-distance carriers when you send a fax. Rates may vary depending on the time and destination. To take advantage of low rates, you can store the access codes of long-distance carriers and credit card numbers as Speed Dial numbers. You can store these long dialling sequences by dividing them and setting them up as separate Speed Dial numbers in any combination. You can even include manual dialling using the dial pad. (►►Basic User's Guide: *Storing Speed Dial numbers*)

For example, you might have stored '01632' on Speed Dial: 03 and '960555' on Speed Dial: 02. You can use them both to dial '01632-960555' if you press the following buttons on the Touchscreen:

- 1 Press **SpeedDial**.
- 2 Press **Numerical**.
- 3 Press **▲** or **▼** to display #03.
- 4 Press **#03**.
- 5 Press **Send a fax**.
- 6 Press **Options**.
- 7 Press **▲** or **▼** to display **Speed Dial**.
- 8 Press **Speed Dial**.
- 9 Press **Numerical**.
- 10 Press **▲** or **▼** to display #02.
- 11 Press **#02**.

12 Press **Send a fax**.

13 Press **Mono Start** or **Colour Start**.
You will dial '01632-960555'.

To temporarily change a number, you can substitute part of the number with manual dialling using the dial pad. For example, to change the number to 01632-960556 you could press **SpeedDial**, press **03**, press **Send a fax**, and then press **960556** using the dial pad.



Note

If you must wait for another dial tone or signal at any point in the dialling sequence, create a pause in the number by pressing **Redial/Pause**. Each key press adds a 3.5 second delay. You can press **Redial/Pause** as many times as needed to increase the length of the pause.

Additional ways to store numbers

Storing Speed Dial numbers from Outgoing Calls

You can also store Speed Dial numbers from the Outgoing Call history.

- 1 Press **History**.
You can also press **Redial/Pause**.



Note

You can also add numbers from the history in a different way by pressing **Menu**, **Fax**, **Setup Speed Dial**, **Set Speed Dial**, and **Add Number from History**.

- 2 Press **▲** or **▼** to display the name or number you want to store.
- 3 Press the name or number you want to store.
- 4 Press **More**.
- 5 Press **Add Speed Dial**.
- 6 Do one of the following:
 - Enter the name (up to 16 characters) by pressing the buttons on the Touchscreen.
(➤➤Basic User's Guide: *Entering Text*)
Press **OK**.
 - To store the number without a name, press **OK**.
- 7 Press **OK** to confirm the fax or telephone number you want to store.

- 8 Do one of the following:
 - Enter the second fax or telephone number (up to 20 digits) by pressing the buttons on the Touchscreen.
Press **OK**.
 - If you do not want to store a second number, press **OK**.
- 9 To choose where the number will be stored, do one of the following:
 - To accept the displayed next available Speed Dial location, press **OK**.
 - To enter a different Speed Dial location, press **⏮** and then enter a 2-digit number by pressing the buttons on the Touchscreen.
Press **OK**.



Note

If the 2-digit Speed Dial location you choose is already taken, the **OK** button on the LCD will not work. Choose a different location.

- 10 When the LCD displays your settings, press **OK** to confirm.
- 11 Press **Stop/Exit**.

Storing Speed Dial numbers from the Caller ID history

If you have the Caller ID subscriber service from your telephone company, you can also store Speed Dial numbers from incoming calls in the Caller ID History.


(►►Basic User's Guide: *Caller ID*)


- 1 Press **History**.
You can also press **Redial/Pause**.



Note

You can also add numbers from the history in a different way by pressing **Menu**, **Fax**, **Setup Speed Dial**, **Set Speed Dial**, and **Add Number from History**.

- 2 Press .
- 3 Press **▲** or **▼** to display the number you want to store.
- 4 Press the number you want to store.
- 5 Press **More**.
- 6 Press **Add Speed Dial**.
- 7 Do one of the following:
 - Enter the name (up to 16 characters) by pressing the buttons on the Touchscreen.
(►►Basic User's Guide: *Entering Text*)
Press **OK**.
 - To store the number without a name, press **OK**.
- 8 Press **OK** to confirm the fax or telephone number you want to store.

- 9 Do one of the following:
 - Enter a second fax or telephone number (up to 20 digits) by pressing the buttons on the Touchscreen.
Press **OK**.
 - If you do not want to store a second number, press **OK**.
- 10 To choose where the number will be stored, do one of the following:
 - To accept the displayed next available Speed Dial location, press **OK**.
 - To enter a different Speed Dial location, press  and then enter a 2-digit number by pressing the buttons on the Touchscreen.
Press **OK**.



Note

If the 2-digit Speed Dial location you choose is already taken, the **OK** button on the LCD will not work. Choose a different location.

- 11 When the LCD displays your settings, press **OK** to confirm.
- 12 Press **Stop/Exit**.

Setting up Groups for Broadcasting

A Group, which can be stored on a Speed Dial location, allows you to send the same fax message to many fax numbers by pressing **SpeedDial**, the two-digit location, **Send a fax** and **Mono Start**.

First, you'll need to store each fax number in a Speed Dial location.

(➤➤Basic User's Guide: *Storing Speed Dial numbers*) Then you can include them as numbers in the Group. Each Group uses up a Speed Dial location. You can have up to six Groups, or you can assign up to 198 numbers to a large Group.

(*Broadcasting (Monochrome only)*
➤➤ page 12)

- 1 Press **SpeedDial**.
- 2 Press **Alphabetical** or **Numerical**.
- 3 Press **More**.
- 4 Press **▲** or **▼** to display **Setup Groups**.
- 5 Press **Setup Groups**.
- 6 Enter the group name (up to 16 characters) by pressing the buttons on the Touchscreen. Press **OK**.
- 7 When the LCD displays the next available Group number, press **OK**. This Group number and name will automatically be assigned to the next available Speed Dial location.
- 8 Add Speed Dial numbers to the Group by pressing them to display a red checkmark. Press **OK**. If you want to list the numbers in alphabetical order, press **#01** **A**.

- 9 When the LCD displays the Group Name and numbers, press **OK** to confirm.
- 10 Do one of the following:
 - To store another Group for broadcasting, repeat steps 3 to 9.
 - To finish storing Groups for broadcasting, press **Stop/Exit**.



Note

You can print a list of all the Speed Dial numbers. (*Reports* ➤➤ page 33)

Changing a Group name

- 1 Press **SpeedDial**.
- 2 Press **Alphabetical** or **Numerical**.
- 3 Press **More**.
- 4 Press **▲** or **▼** to display **Change**.
- 5 Press **Change**.
- 6 Press **▲** or **▼** to display the Group you want to change.
- 7 Press the Group.
- 8 Press **Name**.
- 9 Enter the new name (up to 16 characters) by pressing the buttons on the Touchscreen. Press **OK**. (For example, type NEW CLIENTS.)



Note

How to change the stored name:

If you want to change a character, press **◀** or **▶** to position the cursor under the character you want to change, and then press **ⓧ**. Re-enter the character.

(➤➤Basic User's Guide: *Entering Text*)

- 10 Press **OK**.
- 11 Press **Stop/Exit**.

Deleting a Group

- 1 Press **SpeedDial**.
- 2 Press **Alphabetical or Numerical**.
- 3 Press **More**.
- 4 Press **▲** or **▼** to display **Delete**.
- 5 Press **Delete**.
- 6 Press **▲** or **▼** to display the Group you want to delete.
- 7 Press the Group Name.
- 8 Press **OK**.
Press **Yes** to confirm.
- 9 Press **Stop/Exit**.

Adding or Deleting a number in a Group

- 1 Press **SpeedDial**.
- 2 Press **Alphabetical or Numerical**.
- 3 Press **More**.
- 4 Press **▲** or **▼** to display **Change**.
- 5 Press **Change**.
- 6 Press **▲** or **▼** to display the Group you want to change.
- 7 Press the Group.
- 8 Press **▲** or **▼** to display **Change**.
- 9 Press **Change**.
- 10 Press **▲** or **▼** to display the number you want to add or delete.
- 11 Do the following for each number you want to change:
 - To add a number to the Group, press the check box of the number to *add* a check mark.
 - To delete a number from the Group, press the check box of the number to *remove* the check mark.Press **OK** to confirm all your changes.
- 12 Press **OK**.
- 13 Press **Stop/Exit**.

Fax reports

Use the buttons on the Touchscreen to set up the Transmission Verification Report and the Journal Period.

Transmission Verification Report

You can use the Transmission Verification Report as proof that you sent a fax.

(►►Basic User's Guide: *Transmission Verification Report*)

Fax Journal (activity report)

You can set the machine to print a journal at specific intervals (every 50 faxes, 6, 12 or 24 hours, 2 or 7 days). If you set the interval to **Off**, you can still print the report by following the steps in *How to print a report* ►► page 33. The factory default is **Every 50 Faxes**.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Report Setting**.
- 5 Press **Report Setting**.
- 6 Press **Journal Period**.

- 7 Press **▲** or **▼** to choose an interval.
If you choose **Every 50 Faxes**, go to step 10.

- 6, 12, 24 hours, 2 or 7 days

The machine will print the report at the chosen time and then erase all jobs from its memory. If the machine's memory is filled with the maximum 200 jobs before the time you chose has passed, the machine will print the Journal early and then erase all jobs from the memory. If you want an extra report before it is due to print, you can print it without erasing the jobs from the memory.

- **Every 50 Faxes**

The machine will print the Journal when the machine has stored 50 jobs.

- 8 Enter the time to start printing in 24-hour format.
Press **OK**.
(For example: enter 19:45 for 7:45 PM.)
- 9 If you choose **Every 7 Days**, choose the first day for the 7-day countdown.
- 10 Press **Stop/Exit**.

Reports

The following reports are available:

- **XMIT Verify**
Prints a Transmission Verification Report for your last transmission.
- **Quick Dial**
Lists names and numbers stored in the Speed Dial memory, in alphabetical or numerical order.
- **Fax Journal**
Lists information about the last incoming and outgoing faxes.
(TX: Transmit.) (RX: Receive.)
- **User Settings**
Lists your settings.
- **Network Config**
Lists your Network settings.
- **WLAN Report**
Prints a WLAN connection report.
- **Caller ID hist.**
Lists the available Caller ID information about the last 30 received faxes and telephone calls.

How to print a report

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Print Reports**.
- 3 Press **Print Reports**.
- 4 Press the report you want.
- 5 (Quick Dial Only) Press **Alphabetical Order** or **Numerical Order**.
- 6 Press **Start**.
- 7 Press **Stop/Exit**.

Copy settings

You can change the copy settings temporarily for the next copy.

The machine returns to its default settings after being idle for 1 minute, or if the Mode Timer returns the machine to Fax mode.

(*Mode Timer* >> page 4)

To change a setting, press **COPY**, **Options** and then press **▲** or **▼** to scroll through the copy settings. When the setting you want is displayed, press it and choose your option.

When you are finished choosing settings, press **Mono Start** or **Colour Start**.



Note

- You can save some of the settings that you use most often by setting them as default. These settings will remain until you change them again. (*Setting your changes as a new default* >> page 42)
- The Ink Save Mode, Thin Paper Copy and Book Copy features are supported by technology from Reallusion, Inc.



REALLUSION

Stop copying

To stop copying, press **Stop/Exit**.

Changing copy speed and quality

You can choose from a range of speed and quality. The factory default is **Normal**.

■ Fast


Fast copy speed and lowest amount of ink used. Use to save time printing documents to be proof-read, large documents or many copies.

■ Normal

Normal is the recommended mode for ordinary print outs. This produces good copy quality with good copy speed.


■ Best

Use Best mode to copy precise images such as photographs. This provides the highest resolution and slowest speed.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **▲** or **▼** to display **Quality**.
- 6 Press **Quality**.
- 7 Press **▲** or **▼** to display **Fast**, **Normal** or **Best**, and then press the option you want to use.
- 8 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.

Enlarging or reducing the copied image

You can choose an enlargement or reduction ratio. If you choose **Fit to Page**, your machine will adjust the size automatically to the paper size you set.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **▲** or **▼** to display **Enlarge/Reduce**.
- 6 Press **Enlarge/Reduce**.
- 7 Press **▲** or **▼** to display the available options, and then press the option you want to change.
- 8 Do one of the following:
 - If you chose **Enlarge** or **Reduce**, press the enlargement or reduction ratio you want.
 - If you chose **Custom (25-400%)**, enter an enlargement or reduction ratio from 25% to 400%.
Press **OK**.
 - If you chose **100%** or **Fit to Page**, go to step 9.

198% 10x15cm→A4
186% 10x15cm→LTR
141% A4→A3, A5→A4
100%
97% LTR→A4
93% A4→LTR
83% LGL→A4
69% A4→A5
47% A4→10x15cm
Fit to Page
Custom (25-400%)

- 9 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.



Note

- Page Layout is not available with **Enlarge/Reduce**.
- Page Layout, Duplex Copy, Book Copy, Sort and Thin Paper Copy are not available with **Fit to Page**.
- **Fit to Page** does not work correctly when the document on the scanner glass is skewed more than 3 degrees. Using the document guidelines on the left and top, place your document in the upper left hand corner, with the document face down on the scanner glass.
- **Fit to Page** is not available when using the ADF.
- **Fit to Page** is not available for Legal sized documents.
- When using A3 or Ledger size paper, Duplex Copy is not available with **Enlarge/Reduce**.

Making N in 1 copies or a poster (Page Layout)

The N in 1 copy feature can help you save paper by letting you copy two or four pages onto one printed page.

You can also produce a poster. When you use the poster feature your machine divides your document into sections, then enlarges the sections so you can assemble them into a poster. If you want to print a poster, use the scanner glass.




! IMPORTANT



- Make sure the paper size is set to A4, A3, Letter or Ledger.
- If you are producing multiple colour copies, N in 1 copy is not available.
- (P) means Portrait and (L) means Landscape.
- Poster copy is not available when using transparencies.
- 4in1 (P), 4in1 (L), Poster (2x1) and Poster (3x3) are not available when using A3 or Ledger size paper.



Note

- Book Copy, Sort, Thin Paper Copy, Ink Save Mode and Enlarge/Reduce are not available with Page Layout.
- Duplex Copy is not available with Poster copy.

- 1 Press  (COPY).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press Options.
- 5 Press  or  to display Page Layout.
- 6 Press Page Layout.

- 7 Press  or  to display Off (1in1), 2in1 (P), 2in1 (L), 2in1 (ID) ¹, 4in1 (P), 4in1 (L), Poster (2x1), Poster (2x2) or Poster (3x3). Press the option you want to set.

¹ For details about 2 in 1 (ID): 2 in 1 ID Copy
 >> page 38

- 8 If you do not want to change additional settings, press **Mono Start** or **Colour Start** to scan the page. If you placed the document in the ADF or are making a poster, the machine scans the document and starts printing.

If you are using the scanner glass, go to step 9.

- 9 After the machine scans the page, press Yes to scan the next page.
- 10 Place the next page on the scanner glass. Press OK to scan the document. Repeat steps 9 and 10 for each page of the layout.
- 11 After all the pages have been scanned, press No to finish.

If you are copying from the ADF, insert the document face up in the direction shown below:


■ 2in1 (P)



■ 2in1 (L)



■ 4in1 (P)

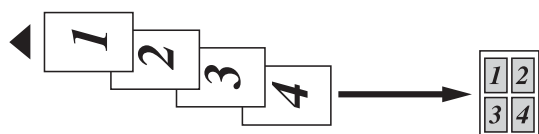

■ 4in1 (L)

 


If you are copying from the scanner glass, place the document face down in the direction shown below:

■ 2in1 (P)



■ 2in1 (L)




■ 4in1 (P)




■ 4in1 (L)




■ Poster (2x1)

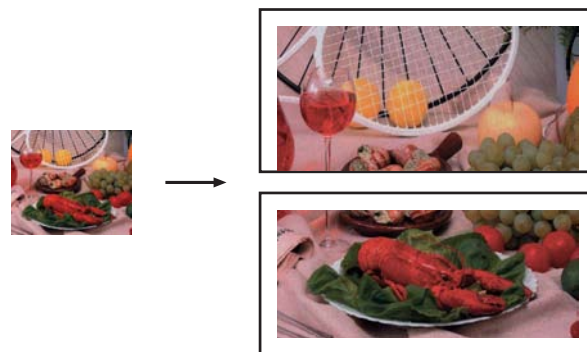

■ Poster (2x2)

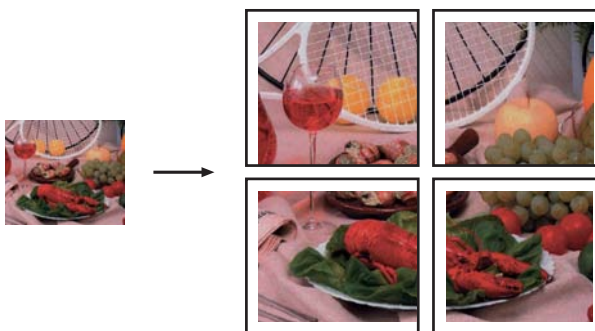

■ Poster (3x3)

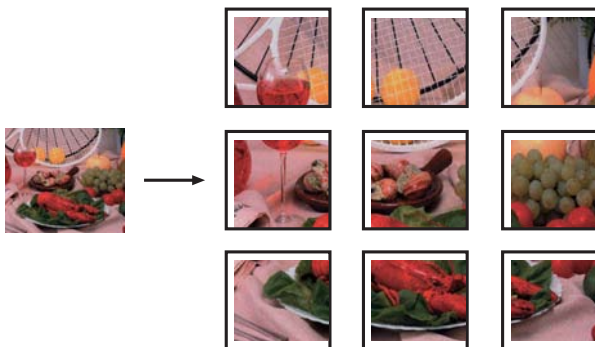


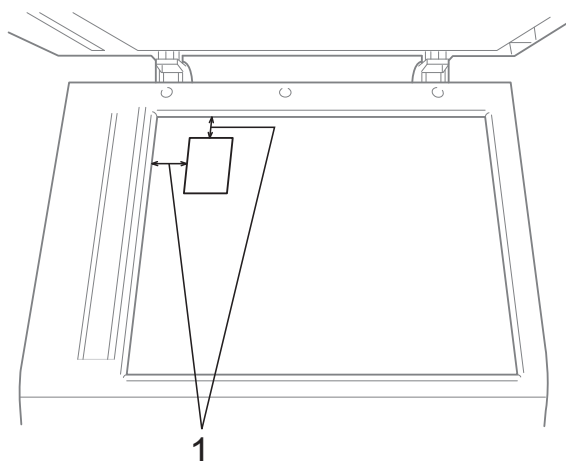
2 in 1 ID Copy

You can copy both sides of your identification card onto one page, keeping the original card size. Make sure the paper size is set to A4 or Letter.

Note

You can copy an identification card to the extent permitted under applicable laws.
(►►Product Safety Guide: *Unlawful use of copying equipment*)

- 1 Press  (**COPY**).
- 2 Place your identification card face down near the left corner of the scanner glass as shown below.



1 3 mm or greater (top, left)

- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **^** or **v** to display **Page Layout**.
- 6 Press **Page Layout**.
- 7 Press **^** or **v** to display **2in1 (ID)**.
- 8 Press **2in1 (ID)**.
- 9 Press **Mono Start** or **Colour Start**.
The machine starts scanning the first page.


- 10 After the machine has scanned one side, press **Yes**. Turn over the identification card and press **OK** to scan the other side.

Note

- Book Copy, Sort, Duplex Copy, Thin Paper Copy, Ink Save Mode and Enlarge/Reduce are not available with 2in1 (ID).
- If you are producing multiple colour copies, 2 in 1 (ID) copy is not available.

Sorting copies using the ADF

You can sort multiple copies. Pages will be stacked in the order 321, 321, 321, and so on.


- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **^** or **v** to display **Stack/Sort**.
- 6 Press **Stack/Sort**.
- 7 Press **Sort**.
- 8 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.

Note

Fit to Page, Page Layout and Book Copy are not available with Sort.

Adjusting Density

You can adjust the copy density to make copies darker or lighter.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **^** or **v** to display **Density**.
- 6 Press **Density**.
- 7 Press **◀** or **▶** to make a lighter or darker copy.
Press **OK**.
- 8 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.

Ink Save Mode


Ink Save Mode can help you save ink. The machine prints the colours lighter and emphasises the outlines of the images as shown below:


The amount of ink saved will vary depending on the document.

Ink Save Mode: Off



Ink Save Mode: On

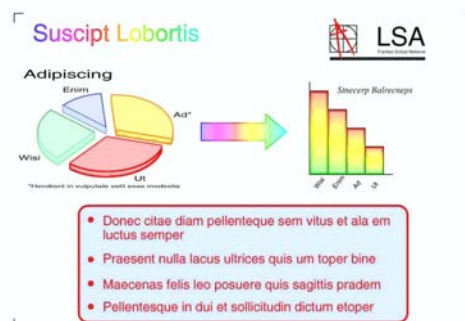

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **^** or **v** to display **Advanced Settings**.
- 6 Press **Advanced Settings**.
- 7 Press **Ink Save Mode**.

- 8 If you do not want to change any additional settings, press **Mono Start** or **Colour Start**.




Note

- Book Copy, Thin Paper Copy and Page Layout are not available with Ink Save Mode.
- Ink Save Mode may make your printouts look different from your original document.

Thin Paper Copy

If your document is a duplex copy on thin paper, choose Thin Paper Copy so the print on the other side does not bleed through.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **^** or **v** to display **Advanced Settings**.
- 6 Press **Advanced Settings**.
- 7 Press **^** or **v** to display **Thin Paper Copy**.
- 8 Press **Thin Paper Copy**.
- 9 Press **Mono Start** or **Colour Start**.




Note

Fit to Page, Page Layout, Ink Save Mode and Book Copy are not available with Thin Paper Copy.

Book Copy

Book copy corrects dark borders and skew when copying from the scanner glass. Your machine can correct the data automatically.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **^** or **v** to display **Advanced Settings**.
- 6 Press **Advanced Settings**.
- 7 Press **^** or **v** to display **Book Copy**.
- 8 Press **Book Copy**.
- 9 If you have finished making corrections, press **Mono Start** or **Colour Start**.



Note

Page Layout, Sort, Duplex Copy, Ink Save Mode, Fit to Page and Thin Paper Copy are not available with Book Copy.


Duplex (2-sided) copying

You can reduce the amount of paper used for copies by copying on both sides of the paper.


We recommend you load single-sided documents in the ADF for duplex copying. For 2-sided documents and books use the scanner glass.

(long edge flip)

Portrait

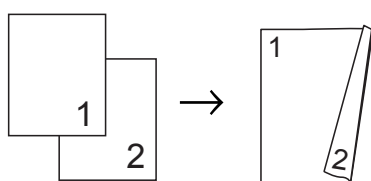


Landscape

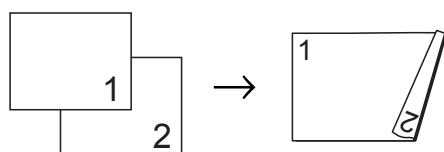


(short edge flip)

Portrait

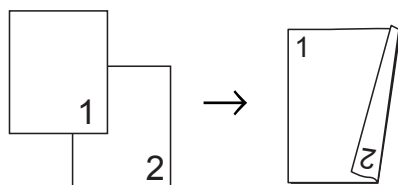


Landscape

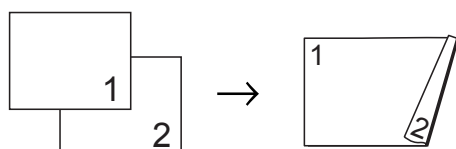

Note

- 2in1 (ID), Poster, Book Copy and Fit to Page are not available with Duplex Copy.
- You can only use plain paper sizes A4, A5, A3, Letter, Legal or Ledger.
- When using A3 or Ledger size paper, Enlarge/Reduce is not available with Duplex Copy.

- 1 Press  (**COPY**).
- 2 Enter the number of copies you want.
- 3 Press **Options**.
- 4 If you want to sort multiple copies, press **^** or **v** to display **Stack/Sort**.
- 5 Press **Stack/Sort**.
- 6 Press **Sort**.
- 7 Press **^** or **v** to display **Duplex Copy**.
- 8 Press **Duplex Copy**.
- 9 Press **^** or **v** to display the duplex copy type you want, and press **Portrait LongEdgeFlip**, **Landscape LongEdgeFlip**, **Portrait ShortEdgeFlip** or **Landscape ShortEdgeFlip**.
- 10 Press **OK** after reading the message on the screen.
- 11 Load your document.
- 12 Press **Mono Start** or **Colour Start**. If you placed the document in the ADF, the machine scans the pages and starts printing.

If you are using the scanner glass, go to step 13.

13 The screen shows:

Set the next page, then press Scan. When you finish, press Complete.

Place the next page on the scanner glass and press Scan.
Press OK.
The machine starts printing.

14 If you pressed **Sort** for multiple copies, repeat step **13** for each additional page. After all the pages have been scanned, press **Complete**.
The machine starts printing.

DO NOT touch printed pages until they are ejected the second time. The machine will print and eject the first side, and then pull the paper back in to print the second side.


**Note**

- If your document causes paper jams, try using one of the special duplex copy settings. Press **Advanced** after step **8**. Press **^** or **v** to choose **Duplex1** or **Duplex2**.
Duplex1 helps avoid paper jams when copying by allowing more time for the ink to dry. Choosing **Duplex2** allows more time for the ink to dry while also using less ink.
- **Duplex1** is not available for A3 or Ledger size paper.

Setting your changes as a new default


You can save the settings for the copy options you use most often by setting them as default, such as **Quality**, **Enlarge/Reduce**, **Density**, **Page Layout**, **Ink Save Mode**, **Thin Paper Copy** and **Duplex Copy**.

These settings will remain until you change them again.

- 1** Press  (**COPY**).
- 2** Press **Options**.
- 3** Press **^** or **v** to display the settings, and press on the setting you want to change. Then press the new option. Repeat this step for each setting you want to change.
- 4** After changing the last setting, press **^** or **v** to display **Set New Default**.
- 5** Press **Set New Default**.
- 6** Press **OK**.
The LCD asks you again to confirm if you want to set the change as the new default.
Press **Yes**.
- 7** Press **Stop/Exit**.

Restoring all settings to the factory default

You can restore the copy settings Quality, Enlarge/Reduce, Density, Page Layout, Ink Save Mode, Thin Paper Copy and Duplex Copy that you have changed to the factory default.

- 1 Press  (**COPY**).
- 2 Press Options.
- 3 Press **^** or **v** to display Factory Reset.
- 4 Press Factory Reset.
- 5 Press Yes.
- 6 Press **Stop/Exit**.

PhotoCapture Center™ operations

Memory cards, USB Flash memory drive and folder structures

Your machine is designed to be compatible with modern digital camera image files, memory cards and USB Flash memory drives; however, please read the points below to avoid errors:

- The image file extension must be .JPG (other image file extensions like .JPEG, .TIF, .GIF and so on will not be recognized).
- Direct PhotoCapture Center™ printing must be performed separately from PhotoCapture Center™ operations using the PC. (Simultaneous operation is not available.)
- The machine can read up to 999 files ¹ on a memory card or USB Flash memory drive.

¹ The folder inside memory cards or USB Flash memory drive is also counted.

- The DPOF file on the memory cards must be in a valid DPOF format. (*DPOF printing* ➤➤ page 46)

Please be aware of the following:

- When printing an index or image, the PhotoCapture Center™ will print all the valid images, even if one or more images have been corrupted. Corrupted images will not be printed.

■ (memory card users)

Your machine is designed to read memory cards that have been formatted by a digital camera.

When a digital camera formats a memory card it creates a special folder into which it copies image data. If you need to modify the image data stored on a memory card with your PC, we recommend that you do not modify the folder structure created by the digital camera. When saving new or modified image files to the memory card, we also recommend you use the same folder your digital camera uses. If the data is not saved to the same folder, the machine may not be able to read the file or print the image.

■ (USB Flash memory drive users)

This machine supports USB Flash memory drives that have been formatted by Windows®.

Print Images

Print Index (Thumbnails)

The PhotoCapture Center™ assigns numbers for images (such as No.1, No.2, No.3, and so on).




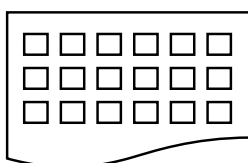
The PhotoCapture Center™ uses these numbers to identify each picture. You can print a thumbnail page to show all the pictures on the memory card or USB Flash memory drive.




Note

Only file names that are 20 characters or less will be printed correctly on the index sheet.

- 1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.
Press  (**PHOTO**).
- 2 Press **^** or **v** to display Index Print.
- 3 Press Index Print.
- 4 Press Index Sheet and choose 6 IMGs/Line or 5 IMGs/Line.



6 IMGs/Line

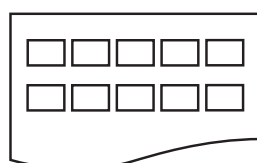


5 IMGs/Line

Print time for 5 IMGs/Line will be slower than 6 IMGs/Line, but the print quality is better.

- 5 Do one of the following:
 - Press **Options** to change the paper type or the paper size you are using. Go to step 6.
 - If you do not want to change the paper settings, press **Start**.
- 6 Press **Paper Type**. Press **^** or **v** to display the paper type you are using, and choose Plain Paper, Inkjet Paper, Brother BP71, Brother BP61 or Other Glossy.
- 7 Press **Paper Size**. Press **A4** or **Letter**.
- 8 Press **Colour Start** to print.

Printing Photos

Before you can print an individual image, you have to know the image number.

- 1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.
Press  (**PHOTO**).
- 2 Print the Index. (*Print Index (Thumbnails)* >> page 45)
- 3 Press **^** or **v** to display Index Print.
- 4 Press Index Print.
- 5 Press Print Photos.
- 6 Enter the image number that you want to print from the thumbnails printed on the Index page.
After you have chosen the image numbers, press **OK**.

- 7 Press **OK**.



Note

- You can enter the numbers at one time by using a comma or a hyphen. For example, Enter 1,3,6 to print images No.1, No.3 and No.6. Enter 1-5 to print images No.1 to No.5.
- You can enter up to 12 characters (including commas and hyphens) for the image numbers you want to print.

- 8 Do one of the following:

- Press **Options** to change the print settings. (page 47)
- If you do not want to change any settings, press **Start** to print.

Printing All Photos

You can print all the photos on your memory card or USB Flash memory drive.

- 1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.

Press  (**PHOTO**).

- 2 Press **^** or **v** to display **Print All**.

- 3 Press **Print All**.

- 4 Do one of the following:

- Press **Options** to change the print settings. (page 47)
- If you do not want to change any settings, press **Start** to print.

DPOF printing

DPOF stands for Digital Print Order Format.

Major digital camera manufacturers (Canon Inc., Eastman Kodak Company, FUJIFILM Corporation, Panasonic Corporation and Sony Corporation) created this standard to make it easier to print images from a digital camera.

If your digital camera supports DPOF printing, you will be able to choose on the digital camera display the images and number of copies you want to print.

When a memory card containing DPOF information is put into your machine, you can print the chosen image easily.

- 1 Make sure you have put the memory card in the correct slot.

Press  (**PHOTO**).

The machine will ask you if you want to use DPOF settings.

The DPOF file on the memory card must be in a valid DPOF format.

- 2 Press **Yes**.

- 3 Do one of the following:

- Press **Options** to change the print settings. (page 47)
- If you do not want to change any settings, press **Start** to print.



Note

A DPOF File error can occur if the print order that was created on the camera has been corrupted. Delete and recreate the print order using your camera to correct this problem. For instructions on how to delete or recreate the print order, refer to your camera manufacturer's support website or accompanying documentation.

PhotoCapture Center™ print settings

You can change the print settings temporarily for the next print job.

The machine returns to its default settings after being idle for 3 minutes, or if the Mode Timer returns the machine to Fax mode.
(*Mode Timer* >> page 4)




Note

You can save the print settings you use most often by setting them as the default.
(*Setting your changes as a new default* >> page 51)




Print Quality


- 1 Press  (PHOTO).
Do one of the following:
 - Press View Photos and press \wedge or \vee to display each photo. When the photo you want to print is displayed, press OK.
 - Press Print All.
- 2 Press Options.
- 3 Press \wedge or \vee to display Print Quality.
- 4 Press Print Quality.
- 5 Press Normal or Photo.

- 6 If you do not want to change additional settings, press .
Press Start to print.

Paper options

Paper Type

- 1 Press  (PHOTO).
Do one of the following:
 - Press View Photos and press \wedge or \vee to display each photo. When the photo you want to print is displayed, press OK.
 - Press Print All.
- 2 Press Options.
- 3 Press \wedge or \vee to display Paper Type.
- 4 Press Paper Type.
- 5 Press \wedge or \vee to display Plain Paper, Inkjet Paper, Brother BP71, Brother BP61 or Other Glossy.
Press the option you want to set.







- 6 If you do not want to change additional settings, press .
Press Start to print.

Paper and print size

- 1 Press  (PHOTO).
Do one of the following:
 - Press View Photos and press \wedge or \vee to display each photo. When the photo you want to print is displayed, press OK.
 - Press Print All.
- 2 Press Options.
- 3 Press \wedge or \vee to display Paper Size.

- 4 Press **Paper Size**.
- 5 Press **▲** or **▼** to display 10x15cm, 13x18cm, A4, A3, Letter or Ledger. Press the option you want to set. Do one of the following:
 - If you chose A4 or Letter, go to step 6.
 - If you chose another size of paper, go to step 7.


- 6 Press the **Print Size**.

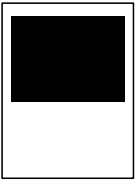Example: Printed position for A4 paper		
1 8x10cm	2 9x13cm	3 10x15cm
		
4 13x18cm	5 15x20cm	6 Max. Size
		

- 7 If you do not want to change additional settings, press **↩**. Press **Start** to print.


Adjusting Brightness, Contrast and Colour


Brightness

- 1 Press  (**PHOTO**). Do one of the following:
 - Press **View Photos** and press **▲** or **▼** to display each photo. When the photo you want to print is displayed, press **OK**.
 - Press **Print All**.
- 2 Press **Options**.
- 3 Press **▲** or **▼** to display **Brightness**.
- 4 Press **Brightness**.
- 5 Press **◀** or **▶** to make the print darker or lighter. Press **OK**.
- 6 If you do not want to change additional settings, press **↩**. Press **Start** to print.

Contrast



You can choose the contrast setting. Increasing the contrast will make an image look sharper and more vivid.




- 1 Press  (**PHOTO**). Do one of the following:
 - Press **View Photos** and press **▲** or **▼** to display each photo. When the photo you want to print is displayed, press **OK**.
 - Press **Print All**.
- 2 Press **Options**.
- 3 Press **▲** or **▼** to display **Contrast**.
- 4 Press **Contrast**.

- 5 Press ◀ or ▶ to change the contrast.
Press OK.
- 6 If you do not want to change additional settings, press .
Press Start to print.

Colour Enhancement

You can turn on the colour enhancement feature to print more vivid images. Printing time will be slower with this feature and also, depending on the image you are printing, it may use more ink.

- 1 Press  (PHOTO).
Do one of the following:
 - Press View Photos and press ▲ or ▼ to display each photo. When the photo you want to print is displayed, press OK.
 - Press Print All.
- 2 Press Options.
- 3 Press ▲ or ▼ to display Color Enhance.
- 4 Press Color Enhance.
- 5 Do one of the following:
 - If you want to customize the White Balance, Sharpness or Color Density, press Color Enhance and then press On.
Go to step 6.
 - If you do not want to customize, press Color Enhance and then press Off.
Press .
Go to step 9.
- 6 Press ▲ or ▼ to display White Balance, Sharpness or Color Density, and then press the option you want to change.

- 7 Press ◀ or ▶ to adjust the degree of the setting.
Press OK.
- 8 Do one of the following:
 - If you want to customize another colour enhancement, repeat steps 6 to 7.
Press .
 - If you want to change other settings, press  to display the print setting menu and press the setting you want to change. (page 47)
- 9 If you do not want to change additional settings, press .
Press Start to print.



Note

• White Balance

This setting adjusts the hue of the white areas of an image. Lighting, camera settings and other influences will affect the appearance of white. The white areas of a picture may be slightly pink, yellow or some other colour. By using this setting, you can correct that effect and bring the white areas back to pure white.

• Sharpness

This setting enhances the detail of an image, similar to adjusting the fine focus on a camera. If the image is not in true focus and you cannot see the fine details of the picture, then adjust the sharpness.



• Colour Density

This setting adjusts the total amount of colour in the image. You can increase or decrease the amount of colour in an image to improve a washed out or weak picture.


Cropping

If your photo is too long or too wide to fit the available space on your chosen layout, part of the image will automatically be cropped.

The default setting is **On**. If you want to print the whole image, turn this setting to **Off**. If you set **Cropping** to **Off**, also set **Borderless** to **Off**. (*Borderless printing* >> page 50)

- 1 Press  (**PHOTO**).
Do one of the following:
 - Press **View Photos** and press **^** or **v** to display each photo. When the photo you want to print is displayed, press **OK**.
 - Press **Print All**.
- 2 Press **Options**.
- 3 Press **^** or **v** to display **Cropping**.
- 4 Press **Cropping**.
- 5 Press **Off** (or **On**).
- 6 If you do not want to change additional settings, press .
Press **Start** to print.

Cropping: On

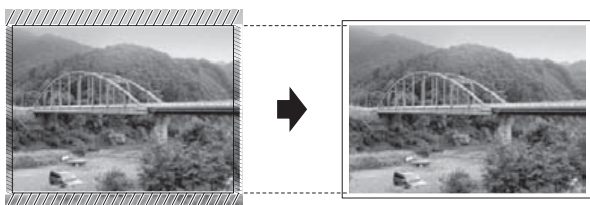



Cropping: Off




Borderless printing


This feature expands the printable area to the edges of the paper. Printing time will be slightly slower.

- 1 Press  (**PHOTO**).
Do one of the following:
 - Press **View Photos** and press **^** or **v** to display each photo. When the photo you want to print is displayed, press **OK**.
 - Press **Print All**.
- 2 Press **Options**.
- 3 Press **^** or **v** to display **Borderless**.
- 4 Press **Borderless**.
- 5 Press **Off** (or **On**).
- 6 If you do not want to change additional settings, press .
Press **Start** to print.

Date Print

You can print the date if it is already in the data on your photo. The date will be printed on the lower right corner. If the data doesn't have the date information, you cannot use this function.

- 1 Press  (**PHOTO**).
Do one of the following:
 - Press **View Photos** and press **^** or **v** to display each photo. When the photo you want to print is displayed, press **OK**.
 - Press **Print All**.
- 2 Press **Options**.
- 3 Press **^** or **v** to display **Date Print**.
- 4 Press **Date Print**.

- 5 Press On (or Off).
- 6 If you do not want to change additional settings, press . Press Start to print.








Note

The DPOF setting on your camera must be turned off to use the Date Print feature.





 
Setting your changes as a new default

You can save the print settings you use most often by setting them as the default settings, such as Print Quality, Paper Type, Paper Size, Brightness, Contrast, Color Enhance, Cropping, Borderless and Date Print. These settings will remain until you change them again.

- 1 Press  (PHOTO).
Do one of the following:
 - Press View Photos and press  or  to display each photo. When the photo you want to print is displayed, press OK.
 - Press Print All.
- 2 Press Options.
- 3 Press your new setting.
Repeat this step for each setting you want to change.
- 4 After changing the last setting, press  or  to choose Set New Default.
- 5 Press Set New Default.
- 6 Press OK.
The LCD asks you again to confirm if you set the change as the new default. Press Yes.
- 7 Press Stop/Exit.

Restoring all settings to the factory default


You can restore the PhotoCapture settings you have changed back to the factory default for, Print Quality, Paper Type, Paper Size, Brightness, Contrast, Color Enhance, Cropping, Borderless and Date Print.

- 1 Press  (PHOTO).
Do one of the following:
 - Press View Photos and press  or  to display each photo. When the photo you want to print is displayed, press OK.
 - Press Print All.
- 2 Press Options.
- 3 Press  or  to display Factory Reset.
- 4 Press Factory Reset.
- 5 Press Yes to confirm.
- 6 Press Stop/Exit.

Scan to a memory card or USB Flash memory drive

How to set a new default

You can save the Scan to Media settings (Quality and File Type) you use most often by setting them as the default settings. These settings will remain until you change them again.

- 1 Press  (**SCAN**).
- 2 Press **^** or **v** to display Scan to Media.
- 3 Press Scan to Media.
- 4 Press Options.
- 5 Press Quality or File Type. Then press the option you want to change. Repeat this step for each setting you want to change.
- 6 After you are finished choosing you preferred settings, press **^** or **v** to display Set New Default.
- 7 Press Set New Default.
- 8 Press OK.
The LCD asks you again to confirm if you want to set the change as the new default.
Press Yes.
- 9 Press **Stop/Exit**.

How to reset to the factory default

You can restore all the Scan to Media settings (Quality and File Type), that you have changed, back to the factory default.

- 1 Press  (**SCAN**).
- 2 Press **^** or **v** to display Scan to Media.
- 3 Press Scan to Media.
- 4 Press Options.
- 5 Press **^** or **v** to display Factory Reset.
- 6 Press Factory Reset.
- 7 Press Yes to confirm.
- 8 Press **Stop/Exit**.

Printing photos directly from a PictBridge camera



Your Brother machine supports the PictBridge standard, allowing you to connect to and print photos directly from any PictBridge compatible digital camera.

If your camera is using the USB Mass Storage standard, you can also print photos from a digital camera without PictBridge.
(*Printing photos directly from a digital camera (without PictBridge)* ►► page 56)

PictBridge requirements

To avoid errors, remember the following points:

- The machine and the digital camera must be connected using a suitable USB cable.
- The image file extension must be .JPG (other image file extensions like .JPEG, .TIF, .GIF and so on will not be recognized).
- PhotoCapture Center™ operations are not available when using the PictBridge feature.

Setting your digital camera

Make sure your camera is in PictBridge mode. The following PictBridge settings may be available from the LCD of your PictBridge compatible camera.

Depending on your camera some of these settings may not be available.

Camera Menu Selections	Options
Paper Size	A3, A4, Ledger, Letter, 10 x 15 cm, Printer Settings (Default setting) ²
Paper Type	Plain Paper, Glossy Paper, Inkjet Paper, Printer Settings (Default setting) ²
Layout	Borderless: On, Borderless: Off, Printer Settings (Default setting) ²
DPOF setting ¹	-
Print Quality	Normal, Fine, Printer Settings (Default setting) ²
Colour Enhancement	On, Off, Printer Settings (Default setting) ²
Date Print	On, Off, Printer Settings (Default setting) ²

¹ *DPOF printing* ►► page 55 for more details

² If your camera is set to use the Printer Settings (Default setting), the machine will print your photo using the following settings.

Settings	Options
Paper Size	10 × 15 cm
Paper Type	Other Glossy
Layout	Borderless: On
Print Quality	Photo
Colour Enhancement	Off
Date Print	Off

- When your camera does not have any menu selections, these settings are also used.
- The name and availability of each setting depends on the specification of your camera.

Please refer to the documentation supplied with your camera for more detailed information on changing PictBridge settings.


Printing Images



Note

Remove any memory cards or USB Flash memory drives from the machine before connecting a digital camera.

- 1 Make sure that your camera is turned off. Connect your camera to the USB direct interface (1) on the machine using the USB cable.

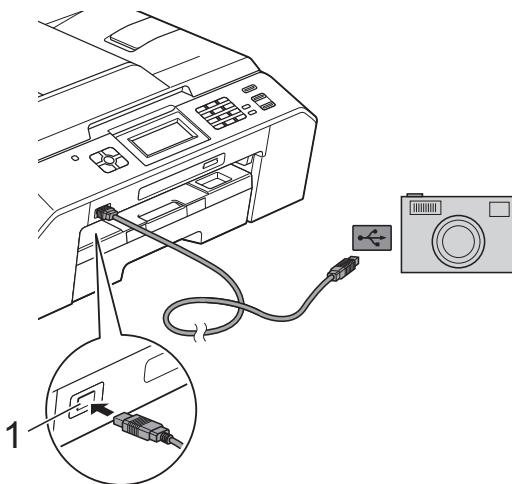

1 USB direct interface

- 2 Turn on the camera.
When the machine has recognized the camera, the LCD shows `Camera Connected`.
- 3 Choose the photo you want to print following the instructions from your camera.
When the machine starts printing a photo, the LCD will show `Printing`.



IMPORTANT

To prevent damage to your machine, do not connect any device other than a digital camera or USB Flash memory drive to the USB direct interface.

DPOF printing

DPOF stands for Digital Print Order Format.

Major digital camera manufacturers (Canon Inc., Eastman Kodak Company, FUJIFILM Corporation, Panasonic Corporation and Sony Corporation) created this standard to make it easier to print images from a digital camera.

If your digital camera supports DPOF printing, you will be able to choose the images and the number of copies you want to print on the display of the digital camera.



Note

A DPOF File error can occur if the print order that was created on the camera has been corrupted. Delete and recreate the print order using your camera to correct this problem. For instructions on how to delete or recreate the print order, refer to your camera manufacturer's support website or accompanying documentation.

Printing photos directly from a digital camera (without PictBridge)

If your camera supports the USB Mass Storage standard, you can connect your camera in storage mode. This enables you to print photos from your camera.

(If you would like to print photos in PictBridge mode, *Printing photos directly from a PictBridge camera* >> page 53)

Note


The name, availability and operation differ among digital cameras. Please refer to the documentation supplied with your camera for detailed information, such as how to switch from PictBridge mode to USB mass storage mode.

Printing Images

Note

Remove any memory cards or USB Flash memory drives from the machine before connecting a digital camera.

- 1 Make sure that your camera is turned off. Connect your camera to the USB direct interface (1) on the machine using the USB cable.

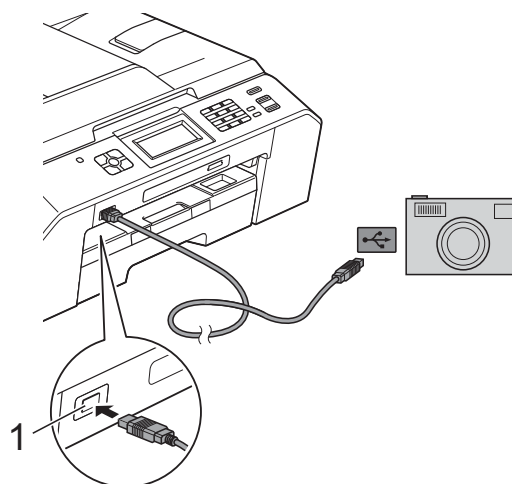

1 USB direct interface

- 2 Turn on the camera.
- 3 Follow the steps in *Print Images* >> page 45.

! IMPORTANT

To prevent damage to your machine, do not connect any device other than a digital camera or USB Flash memory drive to the USB direct interface.

A

Routine maintenance

Cleaning and checking the machine


Cleaning the outside of the machine

Clean the Touchscreen as follows:

! IMPORTANT

- Turn off the power switch when you clean the Touchscreen.
- DO NOT use any type of liquid cleaners (including ethanol).

- 1 Clean the Touchscreen with a *dry*, soft lint-free cloth.

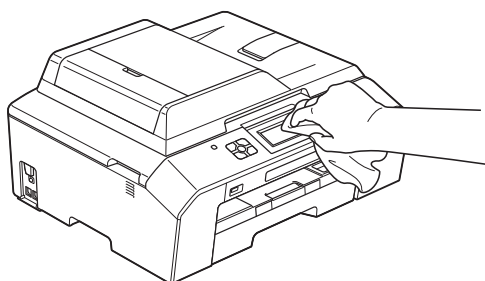


Clean the outside of the machine as follows:


! IMPORTANT

- Use neutral detergents. Cleaning with volatile liquids such as thinner or benzene will damage the outside surface of the machine.
- DO NOT use cleaning materials that contain ammonia.
- DO NOT use isopropyl alcohol to remove dirt from the control panel. It may crack the panel.

- 1 Pull the paper tray (1) completely out of the machine.

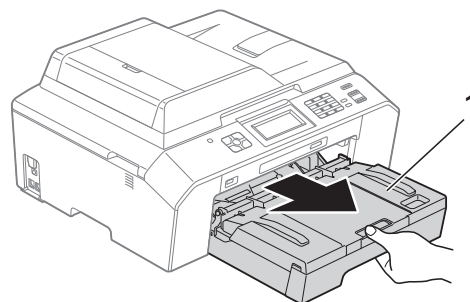


- 2 Wipe the outside of the machine with a *dry*, soft lint-free cloth to remove dust.

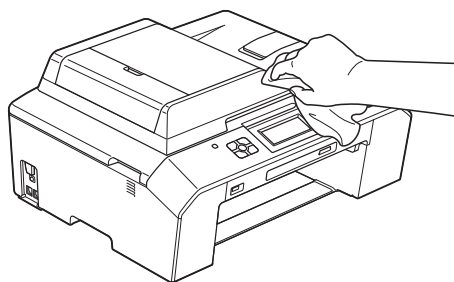

- 3 Lift the output paper tray cover and remove anything that is stuck inside the paper tray.

- 4 Wipe the inside and outside of the paper tray with a *dry*, soft lint-free cloth to remove dust.

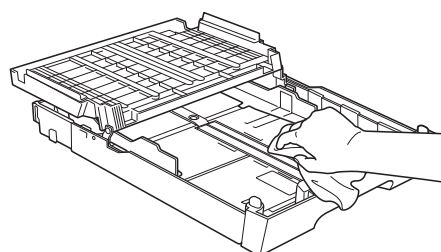

- 5 Close the output paper tray cover and put the paper tray firmly back in the machine.

A


Cleaning the machine's printer platen

WARNING



Be sure to unplug the machine from the electrical socket before cleaning the printer platen to avoid an electrical shock.

- 1 Using both hands, use the finger holds on each side of the machine to lift the scanner cover into the open position.
- 2 Clean the machine's printer platen (1) and the area around it, wiping off any scattered ink with a soft, *dry* lint-free cloth.

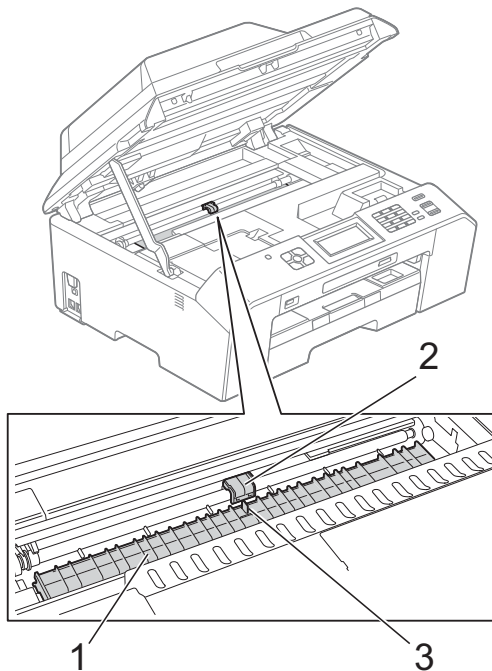

IMPORTANT


DO NOT touch the plate (2) and lever (3). Doing this may cause damage to the machine.

- 3 Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover using both hands.
- 4 Re-connect the power cord.

Cleaning the paper feed rollers

If the paper feed rollers are stained with ink, it may cause paper feed problems.


- 1 Unplug the machine from the electrical socket. Pull the paper tray (1) completely out of the machine.

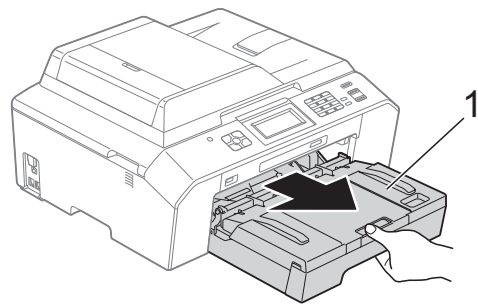


Note

If the paper support flap is open, close it, and then close the paper support.

- 2 Clean the front side of the Paper Feed Rollers (1) with a soft lint-free cloth slightly moistened with water, using a side-to-side motion. After cleaning, wipe the rollers with a *dry*, soft lint-free cloth to remove all moisture.

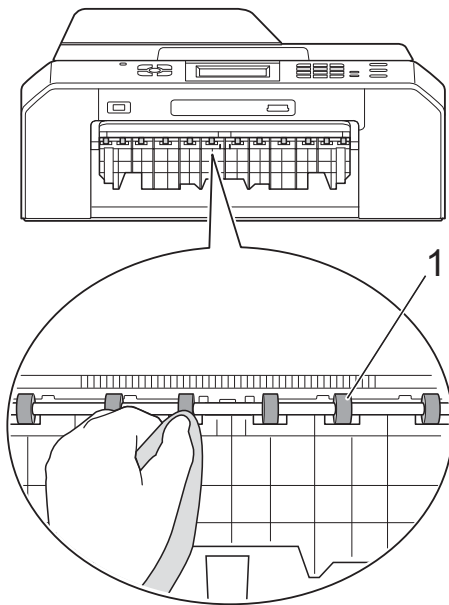

- 3 Lift the Jam Clear Flap (2), and then clean the back side of the Paper Feed Rollers (1) with a soft lint-free cloth slightly moistened with water. After cleaning, wipe the rollers with a *dry*, soft lint-free cloth to remove all moisture.

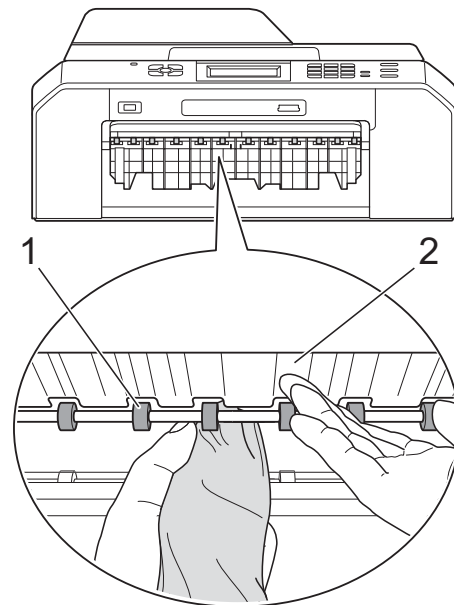

- 4 Put the paper tray firmly back in the machine.
- 5 Re-connect the power cord.



Note

Do not use the machine again until the rollers are completely dry. Using the machine before the rollers are dry may cause paper feed problems.

Cleaning the paper pick-up rollers


- 1 Unplug the machine from the electrical socket.
- 2 Pull the paper tray completely out of the machine.




Note

If the machine starts to multi-feed the last few sheets of paper in the tray, clean the Base Pad (1) with a soft lint-free cloth slightly moistened with water.


After cleaning, wipe the pad with a *dry*, soft lint-free cloth to remove all moisture.

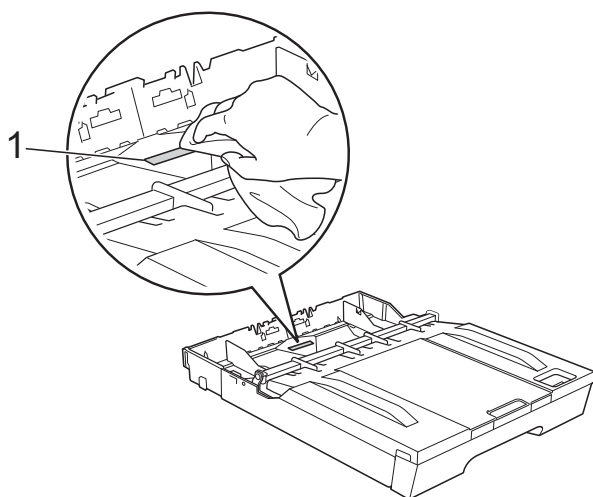


- 4 Clean the Paper Pick-up Rollers (1) with a soft lint-free cloth slightly moistened with water.
Slowly turn the rollers so that the whole surface is cleaned.
After cleaning, wipe the rollers with a *dry*, soft lint-free cloth to remove all moisture.

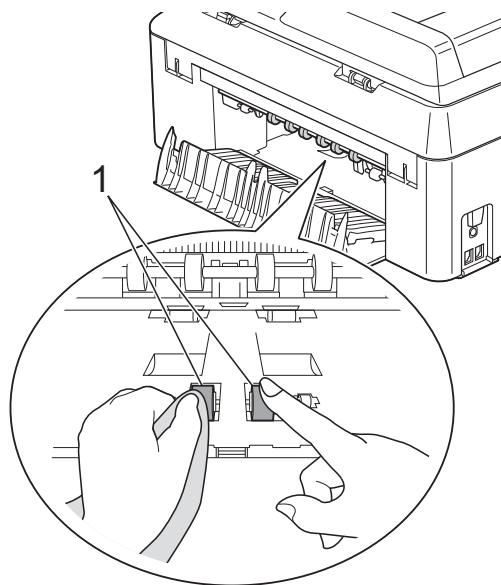

- 3 Open the Jam Clear Cover (1) at the back of the machine.

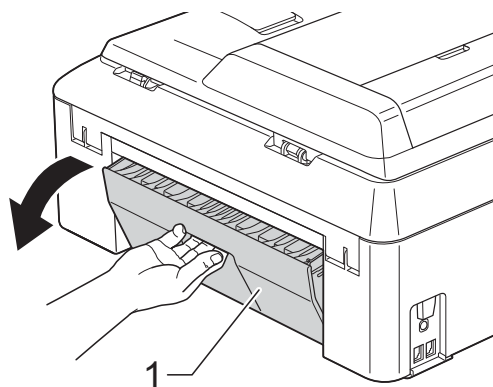

- 5 Clean the Back Paper Feed Rollers (1) with a soft lint-free cloth slightly moistened with water. Slowly turn the rollers so that the whole surface is cleaned. After cleaning, wipe the rollers with a *dry*, soft lint-free cloth to remove all moisture.

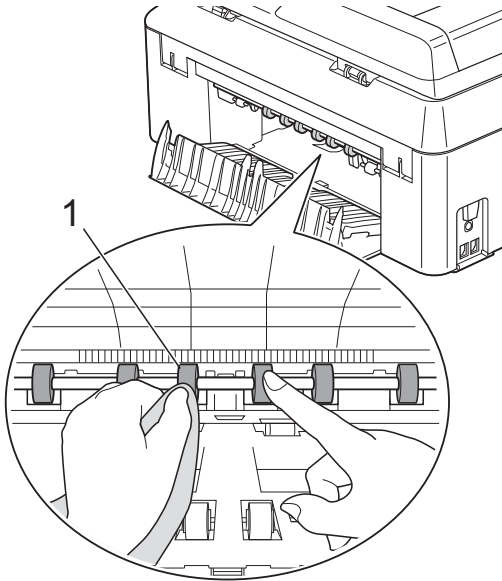
**Note**

Don't touch the metal shaft.

- 6 Close the Jam Clear Cover. Make sure the cover is closed completely.
- 7 Put the paper tray firmly back in the machine.
- 8 Re-connect the power cord.

Checking the ink volume

Although an ink volume icon appears on the LCD, you can use the ink menu to see a large graph showing the ink that is left in each cartridge.

- 1 Press  (Ink).
- 2 Press **▲** or **▼** to display Ink Volume.
- 3 Press Ink Volume.
The LCD shows the ink volume.
- 4 Press **Stop/Exit**.

**Note**

You can check the ink volume from your computer.

➤➤Software User's Guide: *Printing* (Windows®)

➤➤Software User's Guide: *Printing and Faxing* (Macintosh)


Packing and shipping the machine

When you transport the machine, use the packing materials that came with your machine. Follow the instructions below to correctly package your machine. Damage caused to your machine during transit may not be covered by your warranty.


! IMPORTANT

It is important to allow the machine to “park” the print head after a print job. Listen carefully to the machine before unplugging it to make sure that all mechanical noises have stopped. Not allowing the machine to finish this process may lead to print problems and possible damage to the print head.


- 1 Unplug the machine from the telephone wall socket and take the telephone line cord out of the machine.
- 2 Unplug the machine from the electrical socket.
- 3 Using both hands, use the finger holds on each side of the machine to lift the scanner cover into the open position. Then unplug the interface cable from the machine, if it is connected.
- 4 Remove the orange protective part from the inside right corner of the machine.

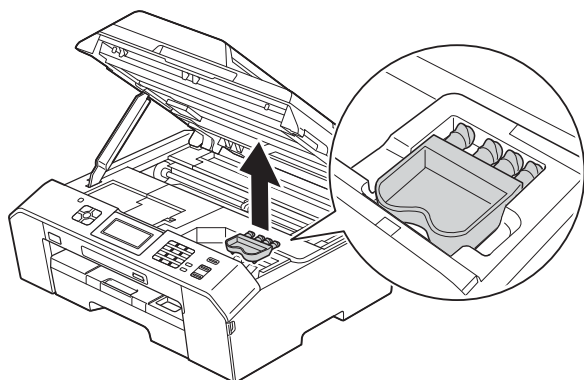

- 5 Lift the scanner cover (1) to release the lock. Gently push the scanner cover support down (2) and close the scanner cover (3) using both hands.

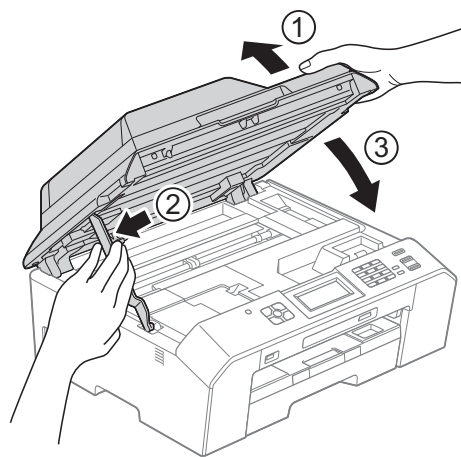


- 6 Open the ink cartridge cover.
- 7 Remove all four ink cartridges. Press the ink release lever above each cartridge to release it. (➤➤Basic User's Guide: *Replacing the ink cartridges*)
- 8 Install the orange protective part and then close the ink cartridge cover.

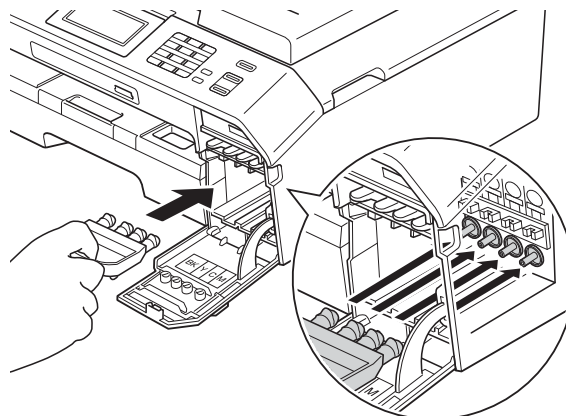


! IMPORTANT

- Make sure the plastic tab on the right side of the orange protective part (1) clicks securely into place (2).

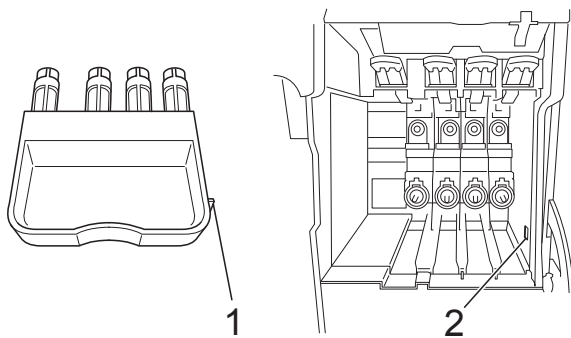


- If you are not able to find the orange protective part, ship the machine without it. **DO NOT** install the ink cartridges as an alternative before shipping.

- 9 Wrap the machine in the bag.

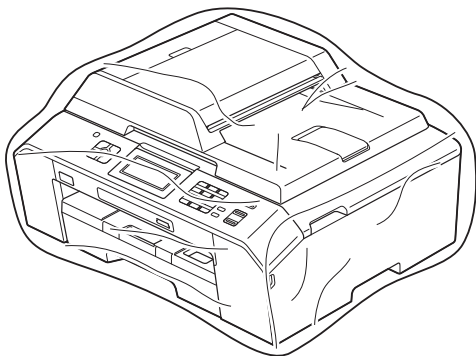

- 10 Pack the machine and the printed materials in the original carton with the original packing material as shown below.

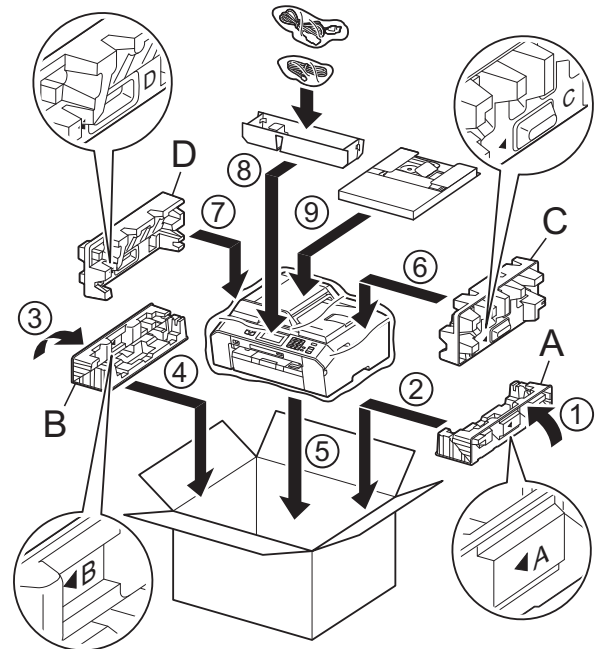

- 11 Close the carton and tape it shut.

B

Glossary

This is a comprehensive list of features and terms that appear in Brother manuals. Availability of these features depends on the model you purchased.

ADF (automatic document feeder)

The document can be placed in the ADF and scanned one page at a time automatically.

Auto Reduction

Reduces the size of incoming faxes.

Automatic fax transmission

Sending a fax without picking up the handset of an external telephone.

Automatic Redial

A feature that enables your machine to redial the last fax number after five minutes if the fax did not go through because the line was busy.

Backup Print

Your machine prints a copy of every fax that is received and stored in its memory. This is a safety feature so you will not lose messages during a power failure.

Batch Transmission

(Monochrome faxes only) As a cost-saving feature, all delayed faxes to the same fax number can be sent as one transmission.

Beeper Volume

Volume setting for the beep when you press a key or make an error.

Brightness

Changing the Brightness makes the whole image lighter or darker.

Broadcasting

The ability to send the same fax message to more than one location.

Caller ID

A service purchased from the telephone company that lets you see the number (or name) of the party calling you.

CNG tones

The special tones (beeps) sent by fax machines during automatic transmission to tell the receiving machine that a fax machine is calling.

Coding method

Method of coding the information contained in the document. All fax machines must use a minimum standard of Modified Huffman (MH). Your machine is capable of greater compression methods, Modified Read (MR), Modified Modified Read (MMR) and JPEG, if the receiving machine has the same capability.

Colour Enhancement

Adjusts the colour in the image for better print quality by improving sharpness, white balance and colour density.

Communication error (Comm. Error)

An error during fax sending or receiving, usually caused by line noise or static.

Compatibility group

The ability of one fax unit to communicate with another. Compatibility is assured between ITU-T Groups.

Contrast

Setting to compensate for dark or light documents, by making faxes or copies of dark documents lighter and light documents darker.

Delayed Fax

Sends your fax at a specified time later.

Density

Changing the Density makes the whole image lighter or darker.

Dual Access

Your machine can scan outgoing faxes or scheduled jobs into the memory at the same time it is sending a fax from memory or receiving or printing an incoming fax.

ECM (Error Correction Mode)

Detects errors during fax transmission and resends the pages of the fax that had an error.

Extension telephone

A telephone using the same line as your fax but plugged into a separate wall socket.

External telephone

A TAD (telephone answering device) or telephone that is connected to your machine.

F/T Ring Time

The length of time that the Brother machine rings (when the Receive Mode setting is Fax/Tel) to notify you to pick up a voice call that it answered.

FaxAbility (New Zealand only)

A subscriber service purchased from the telephone company that provides another phone number on an existing phone line. The Brother fax machine uses the new number to simulate a dedicated fax line.

Fax Detect

Enables your machine to respond to CNG tones if you interrupt a fax call by answering it.

Fax Forwarding

Sends a fax received into the memory to another pre-programmed fax number.

Fax Journal

Lists information about the last 200 incoming and outgoing faxes. TX means Transmit. RX means Receive.

Fax Storage

You can store received faxes in memory.

Fax tones

The signals sent by sending and receiving fax machines while communicating information.

Fax/Tel

You can receive faxes and telephone calls. Do not use this mode if you are using a telephone answering device (TAD).

Fine resolution

Resolution is 203 × 196 dpi. It is used for small print and graphs.

Greyscale

The shades of grey available for copying, scanning and faxing photographs.

Group number

A combination of Speed Dial numbers that are stored in a Speed Dial location for Broadcasting.

Innobella™

Innobella™ is a range of genuine consumables offered by Brother. For best quality results Brother recommends Innobella™ Ink and Paper.

Journal Period

The pre-programmed time period between automatically printed Fax Journal Reports. You can print the Fax Journal on demand without interrupting the cycle.

LCD (Liquid Crystal Display)

The display screen on the machine that shows interactive messages during On-Screen Programming and shows the date and time when the machine is idle.

Manual fax

You can press **Hook** to hear the receiving fax machine answer before you press **Mono Start** or **Colour Start** to begin sending the fax.

Memory Receive

Receives faxes into the machine's memory when the machine is out of paper.

Menu mode

Programming mode for changing your machine's settings.

OCR (optical character recognition)

ScanSoft™ PaperPort™ 12SE with OCR or Presto! PageManager software application converts an image of text to text you can edit.

Overseas Mode

Makes temporary changes to the fax tones to accommodate noise and static on overseas telephone lines.

Pause

Allows you to place a 3.5 second delay in the dialling sequence while you are dialling using the dial pad or while you are storing Speed Dial numbers. Press the **Redial/Pause** key on the control panel or the **PAUSE** button on the Touchscreen as many times as needed for longer pauses.

PhotoCapture Center™

Allows you to print digital photos from your digital camera at high resolution for photo quality printing.

Photo resolution (Mono only)

A resolution setting that uses varying shades of grey for the best representation of photographs.

PictBridge

Allows you to print photos directly from your digital camera at high resolution for photo quality printing.

Polling

The process of a fax machine calling another fax machine to retrieve waiting fax messages.

Pulse (Not available in New Zealand)

A form of rotary dialling on a telephone line.

Quick Dial List

A listing of names and numbers stored in Speed Dial memory, in numerical order.

Real Time Transmission

When memory is full, you can send faxes in real time.

Remaining jobs

You can check which jobs are waiting in memory and cancel jobs individually.

Remote Access Code

Your own four-digit code (---*) that allows you to call and access your machine from a remote location.

Remote Activation Code

Press this code (* **5 1** (* **9 1** for New Zealand)) when you answer a fax call on an extension or external telephone.

Remote Deactivation Code (For Fax/Tel mode only)

When the machine answers a voice call, it fast double-rings. You can pick up at an extension telephone by pressing this code (**# 5 1** (**# 9 1** for New Zealand)).

Remote Retrieval Access

The ability to access your machine remotely from a touch-tone telephone.

Resolution

The number of vertical and horizontal lines per inch. See: Standard, Fine, Super Fine and Photo.

Ring Delay

The number of rings before the machine answers in **Fax Only** and **Fax/Tel** modes.

Ring Volume

Volume setting for the machine's ring.

Scanning

The process of sending an electronic image of a paper document into your computer.

Scan to Media

You can scan a monochrome or colour document on to a memory card or USB Flash memory drive. Monochrome images will be in TIFF or PDF file format and colour images may be in PDF or JPEG file format.

Search

A numerical or alphabetical electronic listing of stored Speed Dial and Group numbers.

Speed Dial

A pre-programmed number for easy dialling.

Standard resolution

203 × 98 dpi (monochrome).

203 × 196 dpi (colour). It is used for regular sized text and the quickest transmission.

Station ID

The stored information that appears on the top of faxed pages. It includes the sender's name and fax number.

Super Fine resolution (Mono only)

203 × 392 dpi. Best for very small print and line art.

TAD (telephone answering device)

You can connect an external TAD to your machine.

Temporary settings

You can choose certain options for each fax transmission and copy without changing the default settings.

Tone (Not available in New Zealand)

A form of dialling on the telephone line used for touch-tone telephones.

Transmission

The process of sending faxes over the phone lines from your machine to the receiving fax machine.

Transmission Verification Report

A listing for each fax sent, that shows its date, time and number.

User Settings

A printed report that shows the current settings of the machine.

WLAN Report

A printed report that shows the result of the WLAN Connection.

C

Index

Numerics

2 in 1 ID Copy 38

A

Access codes, storing and dialling 27
 Apple Macintosh
 See Software User's Guide.

B

Broadcasting 12
 setting up Groups for 30

C

Caller ID
 Caller ID History report 33
 Cancelling
 Fax Forwarding 20, 22
 Fax Storage 20
 jobs awaiting redial 15
 Cleaning
 paper feed rollers 58
 paper pick-up rollers 60
 printer platen 58
 ControlCenter
 See Software User's Guide.
 Copy
 2 in 1 ID 38
 book 40
 density 39
 duplex 41
 enlarge/reduce 35
 ink save mode 39
 page layout (N in 1) 36
 poster 36
 quality 34
 set new default 42
 sort (ADF only) 38
 thin paper 40
 using ADF 38

D

Dialling
 access codes and credit card
 numbers 27
 dial prefix 3
 Groups (Broadcasting) 12
 Direct printing
 from a non-PictBridge camera 56
 from a PictBridge camera 53
 Dual Access 12
 Duplex (2-sided)
 copy 41

F

Fax codes
 changing 21
 Remote Access Code 21
 Fax Forwarding
 changing remotely 22, 23
 programming a number 17
 Fax Storage 18
 printing from memory 18
 turning off 20
 turning on 18
 Fax, from PC
 See Software User's Guide.
 Fax, stand-alone
 receiving
 Fax Forwarding 22
 into PC 19
 into the memory 24
 out of paper reception 24
 printing from memory 18
 reducing to fit on paper 24
 retrieving from a remote site 22, 23

sending	9
at end of conversation	11
Broadcasting	12
cancelling from memory	15
contrast	9
delayed batch transmission	15
delayed fax	14
from memory (Dual Access)	12
manual	11
overseas	14
Real Time Transmission	14
Resolution	10
return to factory default	11
set new default	10
Function Lock	5

G

Groups for Broadcasting	30
-------------------------------	----

I

ID Copy	38
Ink cartridges	
checking ink volume	61

L

LCD (Liquid Crystal Display)	
Contrast	2
Dim Timer	3

M

Macintosh	
See Software User's Guide.	
Manual	
transmission	11
Memory Storage	1
Mode, entering	
Timer	4

N

Network	
Printing	
See Network User's Guide.	
Scanning	
See Software User's Guide.	

P

Packing and shipping the machine	62
PaperPort™ 12SE with OCR	
See Software User's Guide. Also see Help in the PaperPort™ 12SE application.	
PhotoCapture Center™	
DPOF printing	46
from PC	
See Software User's Guide.	
Print settings	
Borderless	50
Brightness	48
Colour enhancement	49
Contrast	48
Cropping	50
Date Print	50
Paper type & size	47
Quality	47
Return to factory default	51
Set new default	51
Printing	
all photos	46
index	45
photos	45
Scan to Media	
memory card	52
USB Flash memory	52
PictBridge	
DPOF Printing	55
Power failure	1
Presto! PageManager	
See Software User's Guide. Also see Help in the Presto! PageManager application.	
Print	
fax from memory	18
report	33
Printing	
See Software User's Guide.	

Q

Quick Dial	
Broadcasting	12
deleting Groups	31
using Groups	12
Group dial	
changing	30
setting up Groups for Broadcasting ...	30
Speed Dial	
setting up from Caller ID history	29
setting up from outgoing calls	28

R

Reducing	
copies	35
incoming faxes	24
Remote Retrieval	21
commands	22
getting your faxes	23
remote access code	21
Remote Setup	
See Software User's Guide.	
Reports	32
Caller ID	33
Caller ID History Report	33
Fax Journal	33
Journal Period	32
how to print	33
Network Configuration	33
Quick Dial List	33
Transmission Verification	32, 33
User Settings	33
WLAN Report	33
Resolution	
setting for next fax	10
Restricted users	7

S

Scanning	
See Software User's Guide.	
Security	
Secure function lock	
administrator password	6
restricted users	7
Shipping the machine	62
Sleep Mode	2
Speed Dial	
setting up from Caller ID history	29
setting up from outgoing calls	28

T

Troubleshooting	
checking ink volume	61

W

Windows®	
See Software User's Guide.	
Wireless Network	
See Quick Setup Guide and Network User's Guide.	



Visit us on the World Wide Web
<http://www.brother.com/>

This machine is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.