

# Advanced User's Guide

**MFC-8950DW**  
**MFC-8950DWT**



Not all models are available in all countries.

# User's Guides and where do I find them?

Which Guide?	What's in it?	Where is it?
<b>Product Safety Guide</b>	Read this Guide first. Please read the Safety Instructions before you set up your machine. See this Guide for trademarks and legal limitations.	Printed / In the box
<b>Quick Setup Guide</b>	Follow the instructions for setting up your machine and installing the drivers and software for the operating system and connection type you are using.	Printed / In the box
<b>Basic User's Guide</b>	Learn the basic Fax, Copy, Scan and Direct Print operations and how to replace consumables. See troubleshooting tips.	Printed / In the box  For Czech Republic, Republic of Bulgaria, Republic of Hungary, Republic of Poland, Romania, Slovak Republic : PDF file / Installer CD-ROM / In the box
<b>Advanced User's Guide</b>	Learn more advanced operations: Fax, Copy, security features, printing reports and performing routine maintenance.	PDF file / Installer CD-ROM / In the box
<b>Software User's Guide</b>	Follow these instructions for Printing, Scanning, Network Scanning, Remote Setup, PC-Fax, and using the Brother ControlCenter utility.	PDF file / Installer CD-ROM / In the box
<b>Network User's Guide</b>	This Guide provides useful information about wired and wireless network settings and security settings using the Brother machine. You can also find supported protocol information for your machine and detailed troubleshooting tips.	PDF file / Installer CD-ROM / In the box
<b>Wi-Fi Direct™ Guide</b>	This Guide provides details on how to configure and use your Brother machine for wireless printing directly from a mobile device supporting the Wi-Fi Direct™ standard.	PDF file / Brother Solutions Center <sup>2</sup>
<b>Google Cloud Print Guide</b>	This Guide provides details on how to configure your Brother machine to a Google account and use Google Cloud Print services for printing over the Internet from devices using Gmail™ for mobile, GOOGLE DOCS™ for mobile and applications for the Chrome OS.	PDF file / Brother Solutions Center <sup>2</sup>

Which Guide?	What's in it?	Where is it?
<b>Mobile Print/Scan Guide for Brother iPrint&amp;Scan</b>	This Guide provides useful information about printing JPEG and PDF <sup>1</sup> files from your mobile device and scanning from your Brother machine to your mobile device when connected on a Wi-Fi network.	PDF file / Brother Solutions Center <sup>2</sup>
<b>Web Connect Guide</b>	This Guide provides details about how to configure and use your Brother machine to scan, load and view images and files on certain Web sites that provide these services.	PDF file / Brother Solutions Center <sup>2</sup>

<sup>1</sup> PDF printing is not supported on Windows® Phone.

<sup>2</sup> Visit us at <http://solutions.brother.com/>.

# Table of Contents

<b>1</b>	<b>General Setup</b>	<b>1</b>
	IMPORTANT NOTE.....	1
	Memory storage.....	1
	Automatic Daylight Saving Time.....	1
	Ecology features.....	2
	Toner Save.....	2
	Sleep Time.....	2
	Deep Sleep mode.....	3
	Quiet mode feature.....	3
	Quiet mode.....	3
	LCD screen.....	4
	Setting the backlight brightness.....	4
	Setting the Dim Timer for the backlight.....	4
<b>2</b>	<b>Security features</b>	<b>5</b>
	Secure Function Lock 2.0.....	5
	Setting and changing the Administrator Password.....	6
	Setting up and changing the Public user mode.....	7
	Setting up and changing restricted users.....	7
	Turning Secure Function Lock on/off.....	9
	Switching Users.....	10
	Setting Lock.....	11
	Setting up the password.....	11
	Changing your Setting Lock password.....	12
	Turning Setting Lock on/off.....	12
	Restricting dialling.....	13
	Dial pad restriction.....	13
	One Touch restriction.....	13
	Speed Dial restriction.....	13
	LDAP server restriction.....	14

<b>3</b>	<b>Sending a fax</b>	<b>15</b>
	Additional sending options.....	15
	Sending faxes using multiple settings .....	15
	Changing a 2-sided fax layout .....	16
	Contrast .....	16
	Changing Fax Resolution .....	17
	Additional sending operations.....	17
	Sending a fax manually .....	17
	Dual access .....	18
	Broadcasting.....	18
	Real Time Transmission .....	20
	Overseas Mode .....	20
	Delayed Fax .....	21
	Delayed batch transmission .....	21
	Checking and cancelling waiting jobs.....	22
	Setting your changes as the new default.....	22
	Restoring all fax settings to the factory settings .....	23
	Electronic cover page .....	23
	Destination Display.....	25
	Polling overview.....	26
	Polled transmit.....	26
<b>4</b>	<b>Receiving a fax</b>	<b>27</b>
	Remote Fax Options.....	27
	Fax Forwarding.....	27
	Fax Storage .....	28
	Changing Remote Fax Options .....	28
	Remote retrieval .....	29
	Remote fax commands.....	32
	Additional receiving operations.....	33
	Printing a reduced incoming fax .....	33
	Duplex (2-sided) printing for Fax mode .....	33
	Setting the Fax Receive Stamp .....	34
	Setting the Print Density .....	34
	Printing a fax from the memory .....	35
	Out of Paper Reception .....	35
	Polling overview.....	36
	Polling receive .....	36
<b>5</b>	<b>Dialling and storing numbers</b>	<b>38</b>
	Telephone line services.....	38
	BT Call Sign (U.K. only).....	38
	Additional dialling operations .....	38
	Combining quick dial numbers .....	38
	Additional ways to store numbers.....	39
	Setting up Groups for Broadcasting .....	39
	Options for Setting Up Groups .....	41
	Changing Group numbers .....	42
	Deleting Group numbers .....	43

<b>6</b>	<b>Printing reports</b>	<b>44</b>
	Fax reports.....	44
	Transmission Verification Report.....	44
	Fax Journal (Activity Report) .....	44
	Reports .....	45
	How to print a report.....	45
<b>7</b>	<b>Making copies</b>	<b>46</b>
	Copy settings .....	46
	Stop copying .....	46
	Improving copy quality .....	46
	Enlarging or reducing the image copied .....	47
	Duplex (2-sided) Copying .....	48
	Tray selection .....	49
	Adjusting Brightness and Contrast .....	50
	Sorting copies .....	50
	Making N in 1 copies (page layout) .....	51
	2 in 1 ID Copy .....	53
	Setting your changes as the new default.....	54
	Restoring all copy settings to the factory settings .....	54
	Setting your favourites .....	54
<b>A</b>	<b>Routine maintenance</b>	<b>56</b>
	Cleaning and checking the machine.....	56
	Checking the Page Counters .....	57
	Checking the remaining life of parts .....	57
	Replacing periodic maintenance parts.....	57
	Packing and shipping the machine .....	58
<b>B</b>	<b>Options</b>	<b>61</b>
	Optional paper tray (LT-5400) .....	61
	Memory board.....	61
	SO-DIMM Types .....	61
	Installing extra memory .....	62
<b>C</b>	<b>Glossary</b>	<b>64</b>
<b>D</b>	<b>Index</b>	<b>68</b>

## IMPORTANT NOTE

- Most of the illustrations in this User's Guide show the MFC-8950DW.

## Memory storage

Your menu settings are stored permanently, and in the event of a power failure will *not* be lost. Temporary settings (for example, Contrast and Overseas Mode) *will* be lost. Also, during a power failure the machine will retain the date and time and programmed fax timer jobs (e.g. Delayed Fax) for up to 60 hours. Other fax jobs in the machine's memory will not be lost.

## Automatic Daylight Saving Time

You can set the machine to change automatically for Daylight Saving Time. It will set itself forward one hour in the Spring, and back one hour in the Autumn.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Initial Setup**.  
Press **Initial Setup**.
- 3 Press **▲** or **▼** to display **Date&Time**.  
Press **Date&Time**.
- 4 Press **Auto Daylight**.
- 5 Press **On** or **Off**.
- 6 Press **Stop/Exit**.

## Ecology features

### Toner Save

You can save toner using this feature. When you set Toner Save to **On**, prints appear lighter. The default setting is **Off**.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.  
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Ecology**.  
Press **Ecology**.
- 4 Press **Toner Save**.
- 5 Press **On** or **Off**.
- 6 Press **Stop/Exit**.



#### Note

We do not recommend Toner Save for printing Photo or Greyscale images.

### Sleep Time

The Sleep mode setting can reduce power consumption. When the machine is in Sleep mode (Power Save mode) it acts as though it is turned off. The machine will wake up and start printing when it receives a print job.

You can choose how long the machine must be idle before it goes into Sleep mode. The timer will restart if any operation is carried out on the machine, such as receiving a fax or a print job. The default setting is 3 minutes.

When the machine goes into Sleep mode, the LCD backlight turns off.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.  
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Ecology**.  
Press **Ecology**.
- 4 Press **Sleep Time**.
- 5 Using the dial pad on the Touchscreen, enter the length of time (0-90 minutes) the machine will remain idle before entering Sleep mode.  
Press **OK**.
- 6 Press **Stop/Exit**.



## Deep Sleep mode

If the machine is in Sleep mode and does not receive any jobs for a certain length of time, the machine will go into Deep Sleep mode automatically. Deep Sleep mode uses less power than Sleep mode. The machine will wake up when it receives a fax or a print job.

When the machine is in Deep Sleep mode, the LCD backlight is Off and the Home key is dimmed.

If a wireless network is enabled, the machine will not enter Deep Sleep mode.

For the procedure to disable the wireless network >> Network User's Guide: *Control panel setup*

If the machine has secure print data it will not enter Deep Sleep mode.

## Quiet mode feature

### Quiet mode

The Quiet mode setting can reduce noise while printing. When Quiet Mode is turned On, the print speed becomes slower. The default setting is Off.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.  
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Quiet Mode**.  
Press **Quiet Mode**.
- 4 Press **On** or **Off**.
- 5 Press **Stop/Exit**.

## LCD screen

### Setting the backlight brightness

---

You can adjust the brightness of the LCD backlight. If you are having difficulty reading the LCD, try changing the brightness setting.

- 1 Press Menu.
- 2 Press ▲ or ▼ to display General Setup.  
Press General Setup.
- 3 Press ▲ or ▼ to display LCD Settings.  
Press LCD Settings.
- 4 Press Backlight.
- 5 Press Light, Med or Dark.
- 6 Press **Stop/Exit**.

### Setting the Dim Timer for the backlight

---

You can set how long the LCD backlight stays on after you go back to the Ready screen.

- 1 Press Menu.
- 2 Press ▲ or ▼ to display General Setup.  
Press General Setup.
- 3 Press ▲ or ▼ to display LCD Settings.  
Press LCD Settings.
- 4 Press Dim Timer.
- 5 Press 10 Secs, 20 Secs, 30 Secs or Off.
- 6 Press **Stop/Exit**.

## Secure Function Lock 2.0

Secure Function Lock lets you restrict Public access to the following machine functions:

- Fax Tx
- Fax Rx
- Copy
- Scan <sup>1</sup>
- Direct Print
- Print <sup>2</sup>
- Page Limit <sup>3</sup>
- Web Connect

<sup>1</sup> Scan includes scan jobs via Brother iPrint&Scan.

<sup>2</sup> Print includes print jobs via Google Cloud Print and Brother iPrint&Scan.

<sup>3</sup> Page Limit is configured using Web Based Management.

This feature also prevents users from changing the default settings of the machine by limiting access to the Menu settings.

Before using the security features you must first enter an administrator password.

Access to restricted operations can be enabled by creating a restricted user. Restricted users must enter a password to use the machine.

Make a careful note of your password. If you forget it, you will have to reset the password stored in the machine. For information about how to reset the password call Brother Customer Service.



### Note

- Secure Function Lock can be set manually at the control panel, or by using Web Based Management or BRAdmin Professional 3 (Windows® only). We recommend using Web Based Management or BRAdmin Professional 3 (Windows® only) to configure this feature. (►► Network User's Guide)
- Only administrators can set limitations and make changes for each user.
- Polling Receive is enabled only when both Fax Tx and Fax Rx are enabled.

## Setting and changing the Administrator Password

### Setting up the password

The password you set in these steps is for the administrator. This password is used to set up users and to turn the Secure Function Lock on or off. (See *Setting up and changing restricted users* >> page 7 and *Turning Secure Function Lock on/off* >> page 9.)



#### Note

Make a careful note of the administrator password. If you enter the wrong password, the LCD will show **Wrong Password**. Re-enter the correct password. If you forget it, please call your Brother dealer for service.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.  
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Security**.  
Press **Security**.
- 4 Press **Function Lock**.
- 5 Enter a four-digit number for the password by pressing the buttons on the Touchscreen.  
Press **OK**.
- 6 Re-enter the password when the LCD shows **Verify:.**  
Press **OK**.
- 7 Press **Stop/Exit**.

### Changing the password

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.  
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Security**.  
Press **Security**.
- 4 Press **Function Lock**.
- 5 Press **Set Password**.
- 6 Enter the registered four-digit password by pressing the buttons on the Touchscreen.  
Press **OK**.
- 7 Enter a four-digit number for the new password by pressing the buttons on the Touchscreen.  
Press **OK**.
- 8 Re-enter the password when the LCD shows **Verify:.**  
Press **OK**.
- 9 Press **Stop/Exit**.

## Setting up and changing the Public user mode

Public user mode restricts the functions that are available for Public users. Public users do not need to enter a password to access the features made available through this setting. You can set up one Public user.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.  
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Security**.  
Press **Security**.
- 4 Press **Function Lock**.
- 5 Press **Setup ID**.
- 6 Enter the administrator password by pressing the buttons on the Touchscreen.  
Press **OK**.
- 7 Press **▲** or **▼** to display **Public**.  
Press **Public**.
- 8 Do one of the following:
  - To set up the Public user, press **Enable** or **Disable** for each operation, as follows: Press **Fax Tx**. Then press **Enable** or **Disable**. After you have set **Fax Tx**, repeat these steps for **Fax Rx**, **Copy**, **Scan**, **Direct Print**, **Print** and **Web Connect**.
  - To change the Public user settings, press **▲** or **▼** to display the setting you want to change. Press the setting and press **Enable** or **Disable**. Repeat this step until you finish changing settings.
- 9 Press **Stop/Exit**.


## Setting up and changing restricted users

You can set up users with a password and restrict the functions that are available to them. You can set up more advanced restrictions, such as by page count or PC user login name, through Web Based Management or BRAdmin Professional 3 (Windows® only). (►► Network User's Guide) You can set up to 25 restricted users.

### Setting up restricted users

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.  
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Security**.  
Press **Security**.
- 4 Press **Function Lock**.
- 5 Press **Setup ID**.
- 6 Enter the four-digit administrator password by pressing the buttons on the Touchscreen.  
Press **OK**.
- 7 Press **▲** or **▼** to display **UserXX**.  
Press **UserXX**.
- 8 Enter the user name by pressing the buttons on the Touchscreen. (►► Basic User's Guide: *Entering text*)  
Press **OK**.
- 9 Enter a four-digit user password by pressing the buttons on the Touchscreen.  
Press **OK**.

- 10 To set up a restricted user, press **Enable** or **Disable** for each operation, as follows: Press **Fax Tx**. Then press **Enable** or **Disable**. After you have set **Fax Tx**, repeat these steps for **Fax Rx**, **Copy**, **Scan**, **Direct Print**, **Print** and **Web Connect**.

- 11 Press  and repeat steps 7 to 10 for entering each additional user and password.

- 12 Press **Stop/Exit**.

**Note**

You cannot use the same name as another user's name.

### Changing user name, password or settings for restricted users

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**. Press **General Setup**.
- 3 Press **▲** or **▼** to display **Security**. Press **Security**.
- 4 Press **Function Lock**.
- 5 Press **Setup ID**.
- 6 Enter the four-digit administrator password by pressing the buttons on the Touchscreen. Press **OK**.
- 7 Press **▲** or **▼** to display the existing restricted user you want to change. Press the user name.
- 8 Press **Change**. To change the user name, enter a new user name by pressing the buttons on the Touchscreen. (►► Basic User's Guide: *Entering text*) Press **OK**.

- 9 To change the password, enter a new four-digit user password by pressing the buttons on the Touchscreen. Press **OK**.

- 10 To change a restricted user's settings, press **▲** or **▼** to display the setting you want to change. Press the setting and then press **Enable** or **Disable**. Repeat this step until you are finished making changes.

- 11 Press **Stop/Exit**.

**Note**

You cannot use the same name as another user's name.

### Reset existing restricted users

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**. Press **General Setup**.
- 3 Press **▲** or **▼** to display **Security**. Press **Security**.
- 4 Press **Function Lock**.
- 5 Press **Setup ID**.
- 6 Enter the four-digit administrator password by pressing the buttons on the Touchscreen. Press **OK**.
- 7 Press **▲** or **▼** to display the existing restricted user you want to reset. Press the user name.
- 8 Press **Reset**.
- 9 Press **Yes** to reset the existing restricted user.
- 10 Press **Stop/Exit**.

## Turning Secure Function Lock on/off

---

### Turning Secure Function Lock on

- 1 Press Menu.
- 2 Press ▲ or ▼ to display General Setup.  
Press General Setup.
- 3 Press ▲ or ▼ to display Security.  
Press Security.
- 4 Press Function Lock.
- 5 Press Lock Off⇒On.
- 6 Enter the registered four-digit administrator password by pressing the buttons on the Touchscreen.  
Press OK.

### Turning Secure Function Lock off

- 1 Press Public or xxxxxx (where xxxxx is the user's name).
- 2 Press Lock On⇒Off.
- 3 Enter the registered four-digit administrator password by pressing the buttons on the Touchscreen.  
Press OK.



#### Note

---

If you enter the wrong password, the LCD will show Wrong Password. Re-enter the correct password.

---

## Switching Users

This setting allows you to switch between registered restricted users or Public mode when Secure Function Lock is turned on.

### Changing to the restricted user mode

- 1 Press **Public** or **xxxxxx** (where **xxxxxx** is the user's name).  
Press **Change User**.
- 2 Press **▲** or **▼** to display your user name.
- 3 Press your user name.
- 4 Enter the registered four-digit user password by pressing the buttons on the Touchscreen.  
Press **OK**.



### Note

- If the current ID is restricted for the function you want to use, **Access Denied** will appear on the LCD.
- If your ID has set page limit restrictions and already reached the maximum number of pages, the LCD will show **Limit Exceeded** when you print data. Contact your administrator to check your Secure Function Lock Settings.

### Changing to the Public mode

- 1 Press **xxxxxx**. (where **xxxxxx** is the user's name.)
- 2 Press **Go to Public**.



### Note

- After a restricted user has finished using the machine, it will return to the Public setting within one minute.
- If the function you want to use is restricted for all users, **Access Denied** will appear on the LCD and the machine will go back to the Ready mode. You cannot access the function you want to use. Contact your administrator to check your Secure Function Lock Settings.



## Setting Lock

Setting Lock lets you set a password to stop other people from accidentally changing your machine settings.

Make a careful note of your password. If you forget it, you will have to reset the passwords stored in the machine. Please call your administrator or Brother Customer Service.

While the Setting Lock is On, you cannot access the **Menu** button or edit the numbers you stored in the **Address Book**. You can still use the **Address Book** button to send faxes and E-mail messages to previously stored numbers.

Machine settings cannot be changed through the **Remote Setup** utility while Setting Lock is On.

## Setting up the password

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.  
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Security**.  
Press **Security**.
- 4 Press **Setting Lock**.
- 5 Enter a four-digit number for the password by pressing the buttons on the Touchscreen.  
Press **OK**.
- 6 Re-enter the password when the LCD shows **Verify:**.  
Press **OK**.
- 7 Press **Stop/Exit**.

## Changing your Setting Lock password

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.  
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Security**.  
Press **Security**.
- 4 Press **Setting Lock**.
- 5 Press **Set Password**.
- 6 Enter the registered four-digit password by pressing the buttons on the Touchscreen.  
Press **OK**.
- 7 Enter a four-digit number for the new password by pressing the buttons on the Touchscreen.  
Press **OK**.
- 8 Re-enter the password when the LCD shows **Verify:.**  
Press **OK**.
- 9 Press **Stop/Exit**.

## Turning Setting Lock on/off

If you enter the wrong password when following the instructions below, the LCD will show **Wrong Password**. Re-enter the correct password.

### Turning Setting Lock on

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.  
Press **General Setup**.
- 3 Press **▲** or **▼** to display **Security**.  
Press **Security**.
- 4 Press **Setting Lock**.
- 5 Press **Lock Off⇒On**.
- 6 Enter the registered four-digit administrator password by pressing the buttons on the Touchscreen.  
Press **OK**.

The LCD will show locks on the **Setting Lock** and **Menu** buttons.



### Turning Setting Lock off

- 1 Press **Setting Lock** on the LCD.
- 2 Enter the registered four-digit administrator password by pressing the buttons on the Touchscreen.  
Press **OK**.

## Restricting dialling

This feature is to prevent users from sending a fax or call to a wrong number by mistake. You can set the machine to restrict dialling when you use the dial pad, One Touch, Speed Dial or LDAP search.

If you choose **Off**, the machine does not restrict the dialling method.

If you choose **Enter # twice**, the machine will prompt you to re-enter the number, and then if you re-enter the same number correctly, the machine will start dialling. If you re-enter the wrong number, the LCD will show an error message.

If you choose **On**, the machine will restrict all fax sending and outbound calls for that dialling method.

### Dial pad restriction

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.  
Press **Fax**.
- 3 Press **▲** or **▼** to display **Dial Restrict..**  
Press **Dial Restrict..**
- 4 Press **Dial Pad**.
- 5 Press **Enter # twice**, **On** or **Off**.
- 6 Press **Stop/Exit**.

### One Touch restriction

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.  
Press **Fax**.
- 3 Press **▲** or **▼** to display **Dial Restrict..**  
Press **Dial Restrict..**
- 4 Press **One Touch Dial**.
- 5 Press **Enter # twice**, **On** or **Off**.
- 6 Press **Stop/Exit**.

### Speed Dial restriction

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.  
Press **Fax**.
- 3 Press **▲** or **▼** to display **Dial Restrict..**  
Press **Dial Restrict..**
- 4 Press **Speed Dial**.
- 5 Press **Enter # twice**, **On** or **Off**.
- 6 Press **Stop/Exit**.

## LDAP server restriction

---

- 1 Press Menu.
- 2 Press ▲ or ▼ to display Fax.  
Press Fax.
- 3 Press ▲ or ▼ to display Dial Restrict..  
Press Dial Restrict..
- 4 Press LDAP Server.
- 5 Press Enter # twice, On or Off.
- 6 Press **Stop/Exit**.



### Note

---

- The Enter # twice setting will not work if you lift an external handset before entering the number. You will not be asked to re-enter the number.
  - The machine cannot restrict dialling from **Redial/Pause**.
  - If you chose On or Enter # twice, you cannot use the Broadcasting feature and cannot combine quick dial numbers when dialling.
-

## Additional sending options

### Sending faxes using multiple settings


Before you send a fax, you can change any combination of these settings:

- Duplex Fax
- Contrast
- Fax Resolution
- Real Time TX
- Overseas Mode
- Delayed Fax
- Batch TX
- Coverpage Note
- Coverpage Setup

- 1 Press **Fax** on the Touchscreen.



The LCD shows:

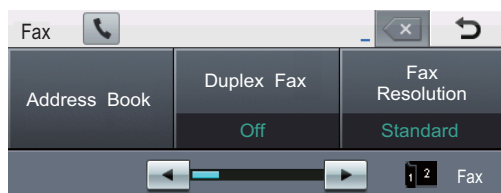

- 2 Press ◀ or ▶ to display a setting you want to change and press the setting, then press the option you want.

- 3 Do one of the following:

- Repeat step 2 to change more settings.
- If you are finished choosing settings, go to the next step for sending your fax.





#### Note

- Most settings are temporary and the machine returns to its default settings after you send a fax.
- You can save some of the settings you use most often by setting them as the default. These settings will stay until you change them again. (See *Setting your changes as the new default* ►► page 22.)

 

## Changing a 2-sided fax layout

You need to choose the duplex scanning format before you send a 2-sided fax. The format you choose will depend on the layout of your 2-sided document.

- 1 Press **Fax**.
- 2 Press **◀** or **▶** to display **Duplex Fax**. Press **Duplex Fax**.
- 3 Do one of the following:
  - If your document is flipped on the Long edge, press  
**DuplexScan : LongEdge**.

Long edge	
Portrait	Landscape
	

- If your document is flipped on the Short edge, press  
**DuplexScan : ShortEdge**.

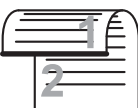Short edge	
Portrait	Landscape
	

## Contrast

For most documents the default setting of **Auto** will give the best results.

**Auto** automatically chooses the suitable contrast for your document.

If your document is very light or very dark, changing the contrast may improve the quality of the fax.

Use **Dark** to make the faxed document lighter.

Use **Light** to make the faxed document darker.

- 1 Press **Fax**.
- 2 Press **◀** or **▶** to display **Contrast**. Press **Contrast**.
- 3 Press **Auto**, **Light** or **Dark**.



### Note

Even if you choose **Light** or **Dark**, the machine will send the fax using the **Auto** setting if you choose **Photo** as the Fax Resolution.

## Changing Fax Resolution

The quality of a fax can be improved by changing the Fax Resolution. Resolution can be changed for the next fax.

- 1 Press **Fax**.
- 2 Press ◀ or ▶ to display **Fax Resolution**. Press **Fax Resolution**.
- 3 Press **Standard**, **Fine**, **S.Fine** or **Photo**.



### Note

You can choose four different resolution settings.

Black & white	
Standard	Suitable for most typed documents.
Fine	Good for small print and transmits a little slower than Standard resolution.
S.Fine	Good for small print or artwork and transmits slower than Fine resolution.
Photo	Use when the document has varying shades of grey or is a photograph. This has the slowest transmission time.

## Additional sending operations

### Sending a fax manually

#### Manual transmission

Manual transmission lets you hear the dialling, ringing and fax-receiving tones while sending a fax.

- 1 Press **Fax**.
- 2 Load your document.
- 3 Pick up the handset of an external telephone and listen for a dial tone.
- 4 Dial the fax number using the external telephone.
- 5 When you hear the fax tones, press **Start**.
  - If you are using the scanner glass, press **Send**.
- 6 Replace the handset of an external telephone.

## Dual access

---

You can dial a number and start scanning the fax into memory—even when the machine is sending from memory, receiving faxes or printing PC data. The LCD will show the new job number.

The number of pages you can scan into the memory will vary depending on the data that is printed on them.



### Note

---

If you get an *Out of Memory* message while scanning the first page of a fax, press **Stop/Exit** to cancel scanning. If you get an *Out of Memory* message while scanning a subsequent page, you can press **Start** to send the pages scanned so far, or press **Stop/Exit** to cancel the operation.

---

## Broadcasting

---

Broadcasting lets you send the same fax message to more than one fax number. You can include Groups, One Touch, Speed Dial numbers and up to 50 manually dialled numbers in the same broadcast.

You can broadcast to 382 different numbers. This will depend on how many Groups, access codes or credit card numbers you have saved, and how many delayed or stored faxes are in the memory.

### Before you begin the broadcast

One Touch and Speed Dial numbers must be stored in the machine's memory before they can be used in a broadcast. (►► *Basic User's Guide: Storing One Touch Dial numbers and Storing Speed Dial numbers*)

Group numbers must also be stored in the machine's memory before they can be used in a broadcast. Group numbers include many previously stored One Touch Dial and Speed Dial numbers for easier dialling. (See *Setting up Groups for Broadcasting* ►► page 39.)



## How to broadcast a fax




### Note

To help you choose numbers easily, press



(Search).

- 1 Press **Fax**.
- 2 Load your document.
- 3 Press ◀ or ▶ to display **Broadcasting**. Press **Broadcasting**.
- 4 You can add numbers to the broadcast in the following ways:
  - Press **Manual** and enter a number by pressing the buttons on the Touchscreen. (➤➤ Basic User's Guide: *How to dial*)  
Press **OK**.
  - Press **Address Book**. Press  to search by Alphabetical Order or Numerical Order. Put a check in the check box beside each number you want to include in the broadcast.  
Press **OK**.



### Note

One Touch Dial numbers begin with \*.  
Speed Dial numbers begin with #.

- 5 After you have entered all the fax numbers by repeating step 4, press **OK**.
- 6 Press **Start**.

After the broadcast is finished the machine will print a broadcast report to let you know the results.



### Note

The scan profile of the One Touch, Speed Dial or Group number you chose *first* will be applied to the broadcast.

## Cancelling a Broadcast in progress

While broadcasting you can cancel the fax currently being sent or the whole broadcast job.

- 1 Press **Stop/Exit**.
- 2 Do one of the following:
  - To cancel the entire broadcast, press **Entire Broadcast**. Go to step 3.
  - To cancel the current job, press the button that displays the number being dialled. Go to step 4.
  - To exit without cancelling, press **Stop/Exit**.
- 3 When the LCD asks if you want to cancel the entire broadcast, do one of the following:
  - Press **Yes** to confirm.
  - To exit without cancelling, press **No** or **Stop/Exit**.
- 4 Do one of the following:
  - To cancel the current job, press **Yes**.
  - To exit without cancelling, press **No** or **Stop/Exit**.

## Real Time Transmission

When you are sending a fax, the machine will scan the documents into the memory before sending it. Then, as soon as the telephone line is free, the machine will start dialling and sending.

Sometimes, you may want to send an important document immediately, without waiting for memory transmission. You can turn on **Real Time TX**.



### Note

- If the memory is full and you are sending a fax from the ADF, the machine will send the document in real time (even if **Real Time TX** is set to Off). If the memory is full, faxes from the scanner glass cannot be sent until you clear some of the memory.
- In **Real Time Transmission**, the automatic redial feature does not work when using the scanner glass.

- 1 Press **Fax**.
- 2 Load your document.
- 3 Press ◀ or ▶ to display **Real Time TX**. Press **Real Time TX**.
- 4 Press **On**.

## Overseas Mode

If you are having difficulty sending a fax overseas due to a bad connection, then turning on **Overseas Mode** may help.

This is a temporary setting, and will only be active for your next fax.

- 1 Press **Fax**.
- 2 Load your document.
- 3 Press ◀ or ▶ to display **Overseas Mode**. Press **Overseas Mode**.
- 4 Press **On**.

## Delayed Fax

You can store up to 50 faxes in the memory to be sent within a twenty-four hour period.

- 1 Press **Fax**.
- 2 Load your document.
- 3 Press **◀** or **▶** to display **Delayed Fax**.  
Press **Delayed Fax**.
- 4 Press **On**.
- 5 Enter the time you want the fax to be sent (in 24-hour format) by pressing the buttons on the Touchscreen.  
Press **OK**.



### Note

The number of pages you can scan into the memory depends on the amount of data printed on each page.

## Delayed batch transmission

Before sending the delayed faxes, your machine will help you economize by sorting all the faxes in the memory by destination and scheduled time.

All delayed faxes that are scheduled to be sent at the same time to the same fax number will be sent as one fax to save transmission time.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.  
Press **Fax**.
- 3 Press **▲** or **▼** to display **Setup Send**.  
Press **Setup Send**.
- 4 Press **Batch TX**.
- 5 Press **On** or **Off**.
- 6 Press **Stop/Exit**.

## Checking and cancelling waiting jobs

Check which jobs are still waiting in the memory to be sent. If there are no jobs, the LCD will show **No Jobs Waiting**. You can cancel a fax job that is stored and waiting in the memory.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**. Press **Fax**.
- 3 Press **▲** or **▼** to display **Remaining Jobs**. Press **Remaining Jobs**. Jobs that are waiting will appear on the LCD.
- 4 Press **▲** or **▼** to scroll through the waiting jobs and press the job you want to cancel. Press **OK**.
- 5 Do one of the following:
  - To cancel, press **Yes**. If you want to cancel another job go to step 4.
  - To exit without cancelling, press **No**.
- 6 When you have finished cancelling jobs, press **Stop/Exit**.

## Setting your changes as the new default

You can save the fax settings for **Fax Resolution**, **Contrast**, **Real Time TX**, **Glass ScanSize** and **Coverpage Setup** you use most often by setting them as the default. These settings will stay until you change them again.

- 1 Press **Fax**.
- 2 Press **◀** or **▶** to choose the setting you want to change, and then press the new option. Repeat this step for each setting you want to change.
- 3 After changing the last setting, press **◀** or **▶** to display **Set New Default**. Press **Set New Default**.
- 4 Press **Yes**.
- 5 Press **Stop/Exit**.

## Restoring all fax settings to the factory settings

You can restore all the fax settings you have changed to the factory settings. These settings will stay until you change them again.

- 1 Press **Fax**.
- 2 Press **◀** or **▶** to display **Factory Reset**.  
Press **Factory Reset**.
- 3 Press **Yes**.
- 4 Press **Stop/Exit**.

## Electronic cover page

This feature will *not* work unless you have programmed your Station ID. (▶▶ Quick Setup Guide)

You can automatically send a cover page with every fax. Your cover page includes your Station ID, a comment, and the name (or number) stored in the One Touch or Speed Dial memory.

By choosing **On** you can also display the number of pages on the cover page.

You can choose one of the following preset comments.

1. **Comment Off**
2. **Please Call**
3. **Urgent**
4. **Confidential**

Instead of using one of the preset comments, you can enter two personal messages of your own, up to 27 characters long.

(See *Composing your own comments* ▶▶ page 24.)

5. **(User Defined)**
6. **(User Defined)**

## Composing your own comments

You can set up two comments of your own.

- 1 Press **Menu**.
- 2 Press ▲ or ▼ to display **Fax**.  
Press **Fax**.
- 3 Press ▲ or ▼ to display **Setup Send**.  
Press **Setup Send**.
- 4 Press **Coverpage Setting**.
- 5 Press **Coverpage Note**.
- 6 Press 5 or 6 to store your own comment.
- 7 Enter your own comment by pressing the buttons on the Touchscreen.  
Press **OK**.  
Press **A 1 @** to choose numbers, letters or special characters. (►► Basic User's Guide: *Entering text*)
- 8 Press **Stop/Exit**.

## Send a cover page for all faxes

You can set the machine to send a cover page whenever you send a fax.

- 1 Press **Fax**.
- 2 Press ◀ or ▶ to display **Coverpage Setup**.  
Press **Coverpage Setup**.
- 3 Press **On (or Off)**.
- 4 Press the comment you want to add.
- 5 Enter two digits to show the number of pages you are sending.  
Press **OK**.  
For example, enter 0, 2 for 2 pages or 0, 0 to leave the number of pages blank.  
If you make a mistake, press **Clear** to back up and re-enter the number of pages.
- 6 Press ◀ or ▶ to display **Set New Default**.  
Press **Set New Default**.
- 7 Press **Yes**.
- 8 Press **Stop/Exit**.

## Using a printed cover page

If you want to use a printed cover page that you can write on, you can print the sample page and attach it to your fax.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.  
Press **Fax**.
- 3 Press **▲** or **▼** to display **Setup Send**.  
Press **Setup Send**.
- 4 Press **Coverpage Setting**.
- 5 Press **Print Sample**.
- 6 Press **Start**.
- 7 After the machine prints a copy of your cover page, press **Stop/Exit**.

## Destination Display

The machine displays the information registered in the address book or the number you dialed to send a fax. You can set the machine to hide the destination information on the LCD.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.  
Press **Fax**.
- 3 Press **▲** or **▼** to display **Setup Send**.  
Press **Setup Send**.
- 4 Press **Destination**.
- 5 Press **Hidden or Display**.
- 6 Press **Stop/Exit**.

## Polling overview

Polling lets you set up your machine so other people can receive faxes from you, but they pay for the call. It also lets you call somebody else's fax machine and receive a fax from it, so you pay for the call. The polling feature needs to be set up on both machines for this to work. Not all fax machines support polling.

### Polled transmit

Polled transmit lets you set up your machine to wait with a document so another fax machine can call and retrieve it.

#### Setup for polled transmit

- 1 Press **Fax**.
- 2 Load your document.
- 3 Press **◀** or **▶** to display **Polled TX**. Press **Polled TX**.
- 4 Press **Standard**.
- 5 Press **Start**.  
If you are using the ADF, go to step 8.
- 6 If you are using the scanner glass, the LCD will prompt you to choose one of the following options:
  - Press **Yes** to scan another page. Go to step 7.
  - Press **No** or **Start** if you are finished scanning pages.
- 7 Place the next page on the scanner glass and press **Start**. Repeat step 6 for each additional page you want to scan from the scanner glass.
- 8 Your machine will automatically send the fax when it is polled.



#### Note

The document will be stored and can be retrieved from any other fax machine until you delete the fax from memory.

To delete the fax from memory, press **Menu, Fax, Remaining Jobs**. (See *Checking and cancelling waiting jobs* >> page 22.)

### Setup for polled transmit with a secure code

Secure polling lets you restrict who can get the documents you set up to be polled. Secure polling only works with Brother fax machines. If another person wants to retrieve a fax from your machine they will have to enter the secure code.

- 1 Press **Fax**.
- 2 Load your document.
- 3 Press **◀** or **▶** to display **Polled TX**. Press **Polled TX**.
- 4 Press **Secure**.
- 5 Enter a four-digit number. Press **OK**.
- 6 Press **Start**.
- 7 If you are using the scanner glass, the LCD will prompt you to choose one of the following options:
  - Press **Yes** to scan another page. Go to step 8.
  - Press **No** or **Start** if you are finished scanning pages.
- 8 Place the next page on the scanner glass and press **Start**. Repeat steps 7 and 8 for each additional page.
- 9 Your machine will automatically send the fax when it is polled.



## Remote Fax Options

Remote Fax Options let you receive faxes while you are away from the machine.

You can use *only one* Remote Fax Option at a time.

### Fax Forwarding

The Fax Forwarding feature lets you automatically forward your received faxes to another machine. If you choose Backup Print On, the machine will also print the fax.

- 1 Press Menu.
- 2 Press ▲ or ▼ to display Fax.  
Press Fax.
- 3 Press ▲ or ▼ to display Setup Receive.  
Press Setup Receive.
- 4 Press ▲ or ▼ to display Forward/Store.  
Press Forward/Store.
- 5 Press Fax Forward.
- 6 Do one of the following:
  - Press Manual to enter the forwarding fax number (up to 20 characters) or E-mail address (up to 60 characters) using the buttons on the Touchscreen. (➤➤ Basic User's Guide: *Entering text*)  
Press OK.
  - Press Address Book.  
Press ▲ or ▼ to scroll until you find the fax number or E-mail address you want your faxes to be forwarded to.  
Press the fax number or E-mail address you want to use.



#### Note

- You can enter an E-mail address by pressing on the Touchscreen.
- You can display your stored numbers and E-mail addresses in alphabetical order by pressing on the Touchscreen.
- Depending on the E-mail address you choose, you will be asked for the File Type. Choose TIFF or PDF and go to step 7.
- If you choose a Group number from the Address Book, the faxes will be forwarded to multiple fax numbers.

7

Press Backup Print:On or  
Backup Print:Off.



#### Important

If you choose Backup Print On, the machine will also print received faxes at your machine so you will have a copy. This is a safety feature in case there is a power failure before the fax is forwarded or a problem at the receiving machine.

8

Press Stop/Exit.

## Fax Storage

The Fax Storage feature lets you store your received faxes in the machine's memory. You can retrieve stored fax messages from a fax machine at another location using the remote retrieval commands. (See *Retrieving fax messages* ►► page 30.) Your machine will automatically print a copy of the stored fax.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.  
Press **Fax**.
- 3 Press **▲** or **▼** to display  
**Setup Receive**.  
Press **Setup Receive**.
- 4 Press **▲** or **▼** to display  
**Forward/Store**.  
Press **Forward/Store**.
- 5 Press **Fax Storage**.
- 6 Press **Stop/Exit**.

## Changing Remote Fax Options

If received faxes are left in your machine's memory when you change to another Remote Fax Option, the LCD will ask you one of the following questions:

- Erase All Doc?
- Print All Fax?
  - If you press **Yes**, faxes in the memory will be erased or printed before the setting changes. If a backup copy has already been printed the faxes will not be printed again.
  - If you press **No**, faxes in the memory will not be erased or printed and the setting will be unchanged.

If received faxes are left in the machine's memory when you change to PC Fax Receive from another remote fax option (Fax Forward or Fax Storage), the LCD will ask you the following question:

- Send Fax to PC?
  - If you press **Yes**, faxes in the memory will be sent to your PC before the setting changes.
  - If you press **No**, faxes in the memory will not be erased or transferred to your PC and the setting will be unchanged.
- Backup Print:On  
Backup Print:Off  
Press Backup Print:On or  
Backup Print:Off.

### ! Important

If you choose Backup Print On, the machine will also print received faxes at your machine so you will have a copy. This is a safety feature in case there is a power failure before the fax is forwarded or a problem at the receiving machine.

## Turning off Remote Fax Options

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.  
Press **Fax**.
- 3 Press **▲** or **▼** to display  
**Setup Receive**.  
Press **Setup Receive**.
- 4 Press **▲** or **▼** to display  
**Forward/Store**.  
Press **Forward/Store**.
- 5 Press **Off**.



### Note

The LCD will give you more options if there are received faxes still in your machine's memory. (See *Changing Remote Fax Options* >> page 28.)

- 6 Press **Stop/Exit**.

## Remote retrieval

The remote retrieval feature lets you retrieve your stored fax messages when you are not at the machine. You can call your machine from any touch tone phone or fax machine, then use the Remote Access Code to retrieve your messages.

### Setting a Remote Access Code

The Remote Access Code feature lets you access the remote retrieval features when you are away from your machine. Before you use the remote access and retrieval features, you have to set up your own code. The default code is the inactive code: --\*.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.  
Press **Fax**.
- 3 Press **▲** or **▼** to display  
**Remote Access**.  
Press **Remote Access**.
- 4 Enter a three-digit code using the numbers 0 – 9, \* or #.  
Press **OK**.
- 5 Press **Stop/Exit**.



### Note

DO NOT use the same code used for your Remote Activation code (\*51) or Remote Deactivation code (#51). (>> Basic User's Guide: *Using Remote Codes*)

You can change your code at any time. If you want to make your code inactive, press **Clear** and **OK** in 4 to restore the default setting --\*.

## Using your Remote Access Code

- 1 Dial your fax number from a telephone or another fax machine using touch tone dialling.
- 2 When your machine answers, immediately enter your Remote Access Code
- 3 The machine signals if it has received messages:
  - *No beeps*  
No messages received.
  - *1 long beep*  
Fax message received.
- 4 The machine gives two short beeps to tell you to enter a command. The machine will hang up if you wait longer than 30 seconds before entering a command. If you enter an invalid command the machine will beep three times.
- 5 Press **9 0** to reset the machine when you have finished.
- 6 Hang up.



### Note

If your machine is set to **Manual** mode, you can still access the remote retrieval features. Dial the fax number as usual and let the machine ring. After 100 seconds you will hear a long beep to tell you to enter the remote access code. You will then have 30 seconds to enter the code.

## Retrieving fax messages

- 1 Dial your fax number from a telephone or another fax machine using touch tone dialling.
- 2 When your machine answers, immediately enter your Remote Access Code (3 digits followed by \*). If you hear one long beep, you have messages.
- 3 When you hear two short beeps, use the dial pad to press **9 6 2**.
- 4 Wait for a long beep, and then use the dial pad to enter the number of the remote fax machine where you want your fax messages sent, followed by **##** (up to 20 digits).
- 5 Hang up after you hear your machine beep. Your machine will call the remote machine, which will then print your fax messages.



### Note

You can insert a pause in a fax number by using the **#** key.

## Changing the Fax Forwarding number

You can change the default setting of your fax forwarding number from another telephone or fax machine using touch tone dialling.

- 1 Dial your fax number from a telephone or another fax machine using touch tone dialling.
- 2 When your machine answers, immediately enter your Remote Access Code (3 digits followed by \*). If you hear one long beep, you have messages.
- 3 When you hear two short beeps, use the dial pad to press **9 5 4**.
- 4 Wait for a long beep, and then use the dial pad to enter the new number of the remote fax machine where you want your fax messages forwarded followed by **##** (up to 20 digits).
- 5 Press **9 0** to reset the machine when you have finished.
- 6 Hang up after you hear your machine beep.



### Note

You can insert a pause in a fax number by using the # key.

## Remote fax commands

Follow the commands below to access features when you are away from the machine. When you call the machine and enter your Remote Access Code (3 digits followed by \*), the system will give two short beeps and you must enter a remote command.

Remote commands		Operation details
95	<b>Change the fax forwarding or fax storage settings</b>	
	1 OFF	You can choose <b>OFF</b> after you have retrieved or erased all your messages.
	2 Fax Forwarding	One long beep means the change is accepted. If you hear three short beeps, you cannot change because the conditions have not been met (for example, registering a fax forwarding number). You can register the maximum number of rings. (See <i>Changing the Fax Forwarding number</i> >> page 31.) Once you have registered the number, fax forwarding will work.
	4 Fax Forwarding number	
	6 Fax Storage	
96	<b>Retrieve a fax</b>	
	2 Retrieve all faxes	Enter the number of a remote fax machine to receive stored fax messages. (See <i>Retrieving fax messages</i> >> page 30.)
	3 Erase faxes from the memory	If you hear one long beep, fax messages have been erased from the memory.
97	<b>Check the receiving status</b>	
	1 Fax	You can check whether your machine has received any faxes. If yes, you will hear one long beep. If no, you will hear three short beeps.
98	<b>Change the Receive Mode</b>	
	1 External TAD	If you hear one long beep, your change has been accepted.
	2 Fax/Tel	
	3 Fax Only	
90	<b>Exit</b>	Press <b>9 0</b> to exit remote retrieval. Wait for the long beep, then replace the handset.

## Additional receiving operations

### Printing a reduced incoming fax

If you choose **On**, the machine automatically reduces each page of an incoming fax to fit on one page of A4, Letter, Legal or Folio size paper.

The machine calculates the reduction ratio by using the page size of the fax and your Paper Size and Tray Use settings. (►► Basic User's Guide: *Paper Size and Type* and *Tray Use in Fax Mode*)

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**. Press **Fax**.
- 3 Press **▲** or **▼** to display **Setup Receive**. Press **Setup Receive**.
- 4 Press **▲** or **▼** to display **Auto Reduction**. Press **Auto Reduction**.
- 5 Press **On** or **Off**.
- 6 Press **Stop/Exit**.

### Duplex (2-sided) printing for Fax mode


Your machine can automatically print received faxes onto both sides of the paper when Duplex is set to **On**.

You can use A4 size paper for this function (60 to 105 g/m<sup>2</sup>).

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**. Press **Fax**.
- 3 Press **▲** or **▼** to display **Setup Receive**. Press **Setup Receive**.
- 4 Press **▲** or **▼** to display **Duplex**. Press **Duplex**.
- 5 Press **On** or **Off**.
- 6 Press **Stop/Exit**.



#### Note

- When Duplex is turned on incoming faxes will automatically be reduced to fit the size of paper in the paper tray.
- When Duplex is set to **On**, the LCD displays  (Duplex icon).

## Setting the Fax Receive Stamp

---

You can set the machine to print the received date and time in the top centre of each received fax page.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.  
Press **Fax**.
- 3 Press **▲** or **▼** to display  
**Setup Receive**.  
Press **Setup Receive**.
- 4 Press **▲** or **▼** to display **Fax Rx Stamp**.  
Press **Fax Rx Stamp**.
- 5 Press **On** or **Off**.
- 6 Press **Stop/Exit**.



### Note

---

- The received time and date will not appear when using Internet Fax.
  - Make sure you have set the current date and time on the machine. (➤➤ Quick Setup Guide)
- 

## Setting the Print Density

---

You can adjust the Print Density setting to make your printed pages darker or lighter.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.  
Press **Fax**.
- 3 Press **▲** or **▼** to display  
**Setup Receive**.  
Press **Setup Receive**.
- 4 Press **▲** or **▼** to display  
**Print Density**.  
Press **Print Density**.
- 5 Press **►** to make the print darker.  
Or, press **◄** to make the print lighter.  
Press **OK**.
- 6 Press **Stop/Exit**.



## Printing a fax from the memory

If you are using the Fax Storage feature (Menu, Fax, Setup Receive, Forward/Store), you can still print a fax from the memory when you are at your machine. (See *Fax Storage* >> page 28.)

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**. Press **Fax**.
- 3 Press **▲** or **▼** to display **Print Document**. Press **Print Document**.
- 4 Press **Start**.
- 5 Press **Stop/Exit**.

## Out of Paper Reception

As soon as the paper tray becomes empty during fax reception, the LCD shows **No Paper**. Put some paper in the paper tray. (>> Basic User's Guide: *Loading paper and print media*)

The machine will carry on receiving the fax, with the remaining pages being stored in the memory, if enough memory is available.

Incoming faxes will continue to be stored in the memory until the memory becomes full or paper is loaded in the paper tray. When the memory is full the machine will stop automatically answering calls. To print the faxes, put fresh paper in the tray.

## Polling overview

Polling lets you set up your machine so other people can receive faxes from you, but they pay for the call. It also lets you call somebody else's fax machine and receive a fax from it, so you pay for the call. The polling feature needs to be set up on both machines for this to work. Not all fax machines support polling.

### Polling receive

Polling receive lets you call another fax machine to receive a fax.

- 1 Press **Fax**.
- 2 Press ◀ or ▶ to display **Polling RX**. Press **Polling RX**.
- 3 Press **Standard**.
- 4 Enter the fax number you are polling using **One Touch**, **Speed Dial**, or the dial pad. Press **Start**.

### Secure polling

Secure polling lets you restrict who can get the documents you set up to be polled. Secure polling only works with Brother fax machines. If you want to get a fax from a secured Brother machine you have to enter the secure code.

- 1 Press **Fax**.
- 2 Press ◀ or ▶ to display **Polling RX**. Press **Polling RX**.
- 3 Press **Secure**.
- 4 Enter a four-digit number. Press **OK**.
- 5 Enter the fax number you are polling. Press **Start**.

### Delayed polling


Delayed polling lets you set the machine to begin polling receive at a later time. You can only set up *one* delayed polling operation.

- 1 Press **Fax**.
- 2 Press ◀ or ▶ to display **Polling RX**. Press **Polling RX**.
- 3 Press **Timer**.
- 4 Enter the time (in 24-hour format) you want to begin polling. Press **OK**.
- 5 Enter the fax number you are polling. Press **Start**.  
The machine makes the polling call at the time you entered.

### Sequential polling

Sequential polling lets you request documents from several fax machines in one operation.

- 1 Press **Fax**.
- 2 Press ◀ or ▶ to display **Polling RX**. Press **Polling RX**.
- 3 Press **Standard**, **Secure** or **Timer**.
- 4 Choose one of the options below.
  - If you choose **Standard** go to step 5.
  - If you choose **Secure**, enter a four-digit number, press **OK**, go to step 5.
  - If you chose **Timer**, enter the time (in 24-hours format) you want to begin polling and press **OK**, go to step 5.
- 5 Press ◀ or ▶ to display **Broadcasting**. Press **Broadcasting**.

- 6 Do one of the following:
- Press **Manual** and enter a number by pressing the buttons on the Touchscreen.  
Press **OK**.
  - Press **Address Book**. Press  to choose **Alphabetical Order** or **Numerical Order**. Press **▲** or **▼** to select a number.  
Press **OK**.



### Note

One Touch Dial numbers begin with \*.  
Speed Dial numbers begin with #.

- 7 After you have entered all the fax numbers by repeating step 6, press **OK**.
- 8 Press **Start**.  
The machine polls each number or Group number in turn for a document.

## Stop Polling

To cancel the polling process, press **Stop/Exit** while the machine is dialling.

To cancel all sequential polling receive jobs, see *Cancelling a Sequential Polling Job* >> page 37.

## Cancelling a Sequential Polling Job

- 1 Press **Stop/Exit**.
- 2 Do one of the following:
- To cancel the entire sequential polling job, press **Entire Seq. Poll**. Go to step 3.
  - To cancel the current job, press the button that displays the number being dialled. Go to step 4.
  - To exit without cancelling, press **Stop/Exit**.
- 3 When the LCD asks if you want to cancel the entire sequential polling job, do one of the following:
- Press **Yes** to confirm.
  - To exit without cancelling, press **No** or **Stop/Exit**.
- 4 Do one of the following:
- To cancel the current job, press **Yes**.
  - To exit without cancelling, press **No** or **Stop/Exit**.

## Telephone line services

### BT Call Sign (U.K. only)

The BT Call Sign subscriber service is a way to have a separate number for your machine, it allows you to have at least two separate telephone numbers on one phone line. Each phone number has its own distinctive ringing pattern.

You can set up your machine so that it only responds to the second number.

When you set the BT Call Sign feature to ON, the receive mode is set to **Manual** automatically. **Manual** mode will not respond to incoming telephone calls, since the number you use for telephone calls will use the normal ring pattern. If you turn the feature off, your receive mode will remain on **Manual**.

### To enable the machine to work with BT Call Sign

This feature will only work with your external phone.


- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**. Press **Fax**.
- 3 Press **▲** or **▼** to display **Miscellaneous**. Press **Miscellaneous**.
- 4 Press **BT Call Sign**.
- 5 Press **On** or **Off**.
- 6 Press **Stop/Exit**.

## Additional dialling operations

### Combining quick dial numbers


Sometimes you may want to choose from several long distance carriers when you send a fax. Rates may vary depending on the time and destination. To take advantage of low rates, you can store the access codes of long distance carriers and credit card numbers as **One Touch** and **Speed Dial** numbers. You can store these long dialling sequences by dividing them and setting them up as separate **One Touch** and **Speed Dial** numbers in any combination. You can even include manual dialling using the dial pad. (►► Basic User's Guide: *Storing numbers*)

For example, you might have stored '01632' in **Speed Dial #003** and '960555' in **Speed Dial #002**. You can use them both to dial '01632-960555' if you press the following keys:

Press  (Address Book), #003 and Send a fax.

Press **Address Book**, #002, Send a fax and **Start**.

Numbers can be added manually by entering them on the dial pad:

Press  (Address Book), #003, Send a fax, **960556** (on the dial pad), and **Start**.

This would dial '01632-960556'. You can also add a pause by pressing the **Redial/Pause** key.

# Additional ways to store numbers


## Setting up Groups for Broadcasting

If you often want to send the same fax message to many fax numbers you can set up a Group.

Groups are stored on a One Touch button or a Speed Dial number. Each Group uses up a One Touch button or a Speed Dial location. You can then send the fax message to all the numbers stored in a Group just by pressing a One Touch button or entering a Speed Dial number, pressing **Send a fax** or **Send a E-mail**, and then pressing **Start**.

Before you can add numbers to a Group, you need to store them as One Touch or Speed Dial numbers. You can set up to 20 small Groups, or you can assign up to 331 numbers to one large Group.



For a listing of the options available when you set up Group numbers, see the table >> page 41.

- 1 Press  (Address Book).
- 2 Press **Edit**.
- 3 Press **Setup Groups (One Touch)** or **Setup Groups (Speed Dial)** where you want to store the new Group.



### Note

The machine automatically allocates an available Speed Dial number or One Touch Dial location for the new Group.

- 4 Do one of the following:
  - Press **OK** to accept the displayed One Touch or Speed Dial number.
  - Enter a new number using the buttons on the Touchscreen.
 Press **OK**.
- 5 Enter the Group name (up to 15 characters) by pressing the buttons on the Touchscreen.  
 Press  to choose numbers, letters or special characters. (>> Basic User's Guide: *Entering text*)  
 Press **OK**.
- 6 Do one of the following:
  - Press **OK** to accept the displayed Group number.
  - Enter a new Group number using the buttons on the Touchscreen.
 Press **OK**.
- 7 To select the Registration Type (Dial type) and the file type, press ◀ or ▶ to display  
 Fax/IFAX,  
 E-Mail B&W PDF,  
 E-Mail B&W TIFF,  
 E-Mail Color PDF,  
 E-Mail Color JPEG,  
 E-Mail Color XPS,  
 E-Mail Gray PDF,  
 E-Mail Gray JPEG,  
 E-Mail Gray XPS.  
 Press the option you want.
- 8 Add One Touch or Speed Dial numbers to the Group by pressing the check box to display a red check mark.  
 If you want to list the numbers in alphabetical order, press .  
 Press **OK**.

**Note**

- One Touch Dial numbers begin with \*. Speed Dial numbers begin with #.
- If the stored Registration Type (Dial type) of a One Touch Dial number or a Speed Dial number is not compatible with the Registration Type (Dial type) selected in step 7, the One Touch Dial number or Speed Dial number will be dimmed on the LCD.

- 9 To choose the fax/scan resolution for the Group number, go to the appropriate next step as shown in the following table.

Option selected in step 7	Go to step
Fax/IFAX	10
E-Mail B&W PDF	11
E-Mail B&W TIFF	
E-Mail Color PDF	12
E-Mail Color JPEG	
E-Mail Color XPS	
E-Mail Gray PDF	13
E-Mail Gray JPEG	
E-Mail Gray XPS	

- 10 Select the resolution from Standard, Fine, S.Fine<sup>1</sup> or Photo and go to step 15.

<sup>1</sup> S.Fine is available if the Group includes only fax numbers.

- 11 Select the resolution from 300 dpi, 200 dpi or 200 x 100 dpi.
- If you chose E-Mail B&W PDF, go to step 14.
  - If you chose E-Mail B&W TIFF, go to step 15.

- 12 Select the resolution from 100 dpi, 200 dpi, 300 dpi, 600 dpi or Auto.

- If you chose E-Mail Color PDF, go to step 14.
- If you chose E-Mail Color JPEG or E-Mail Color XPS, go to step 15.

- 13 Select the resolution from 100 dpi, 200 dpi, 300 dpi or Auto.

- If you chose E-Mail Gray PDF, go to step 14.
- If you chose E-Mail Gray JPEG or E-Mail Gray XPS, go to step 15.

- 14 Select the PDF type from PDF, PDF/A, Secure PDF or Signed PDF that will be used to send E-mail.

**Note**

If you choose Secure PDF, the machine will ask you to enter a four-digit password using the numbers 0-9 before it starts scanning.

- 15 Press OK to confirm.

- 16 Press **Stop/Exit**.

## Options for Setting Up Groups

The following chart shows the selections for setting up Group numbers. When you store numbers, the LCD instructs you to choose from the options shown in the following steps.

Step 1 Enter Group Location	Step 2 Enter Group Name	Step 3 Enter Group Number	Step 4 Select Registration Type (Dial Type)	Step 5 Add Stored One Touch and Speed Dial Numbers to the Group	Step 6 Select Resolution	Step 7 Select File Type
One Touch or Speed Dial	(Name) Press OK	(1 to 20)	Fax/IFAX	Fax Number or E-mail Address	Standard, Fine, S.Fine <sup>1</sup> , Photo	-
			E-Mail B&W PDF	E-mail Address	300 dpi, 200 dpi, 200 x 100 dpi	PDF, PDF/A, Secure PDF, Signed PDF
			E-Mail B&W TIFF		300 dpi, 200 dpi, 200 x 100 dpi	-
			E-Mail Color PDF		100 dpi, 200 dpi, 300 dpi, 600 dpi, Auto	PDF, PDF/A, Secure PDF, Signed PDF
			E-Mail Color JPEG		100 dpi, 200 dpi, 300 dpi, 600 dpi, Auto	-
			E-Mail Color XPS		100 dpi, 200 dpi, 300 dpi, 600 dpi, Auto	-
			E-Mail Gray PDF		100 dpi, 200 dpi, 300 dpi, Auto	PDF, PDF/A, Secure PDF, Signed PDF
			E-Mail Gray JPEG		100 dpi, 200 dpi, 300 dpi, Auto	-
			E-Mail Gray XPS		100 dpi, 200 dpi, 300 dpi, Auto	-

<sup>1</sup> S.Fine does not appear if you add an E-mail address in step 5.




### Note

- PDF/A is a PDF file format intended for long-term archiving. This format contains all the necessary information to be able to reproduce the document after long-term storage.
- Secure PDF is a PDF file format that has been password-protected.
- Signed PDF is a PDF file format that helps prevent data tampering and the impersonation of an author by including a digital certificate within the document. If you choose Signed PDF, you must install a certificate on your machine using Web Based Management. Choose **Signed PDF** from **Administrator** in Web Based Management. (See How to install a certificate ►► Network User's Guide.)

## Changing Group numbers

You can change a Group number that has already been stored. If the Group has a fax forwarding number, it will be dimmed on the LCD. You cannot select the number to make changes.

### Changing a Group name, Resolution or PDF type


- 1 Press  (Address Book).
- 2 Press **Edit**.
- 3 Press **Change**.
- 4 Press **▲** or **▼** to display the Group you want to change.  
Press the Group.
- 5 You can change the Group settings:
  - If you chose Name, enter the name (up to 15 characters) by pressing the buttons on the Touchscreen.  
Press **OK**.
  - If you chose Resolution, press one of the available resolution options displayed on the LCD.
  - If you chose PDF type, press one of the available file type options displayed on the LCD.

The LCD will display your new setting.



### Note


How to change the stored name:

If you want to change a character, press **◀** or **▶** to position the cursor under the character you want to change, and then press . Re-enter the character.

- 6 When you are finished making changes to the Group, press **OK**.
- 7 Press **Stop/Exit**.

### Adding and deleting numbers in a Group


If a number in the Group has a fax forwarding number, it will be dimmed on the LCD and cannot be deleted from the Group.

- 1 Press  (Address Book).
- 2 Press **Edit**.
- 3 Press **Change**.
- 4 Press **▲** or **▼** to display the Group you want to change.  
Press the Group.
- 5 Press **Add/Delete**.
- 6 Press **▲** or **▼** to display the number you want to add or delete.
- 7 Press the check box of each number you want to add to check it.  
Press the check box of each number you want to delete to uncheck it.  
Press **OK** to confirm.
- 8 Press **OK**.
- 9 Press **Stop/Exit**.



## Deleting Group numbers

You can delete a Group number that has already been stored. If a Group has a scheduled job or fax forwarding number, it will be dimmed on the LCD. You cannot select the number to delete it.

- 1 Press  (Address Book).
- 2 Press **Edit**.
- 3 Press **Delete**.
- 4 Press **▲** or **▼** to display the Group you want to delete.  
Press the check box of the Group you want to delete to check it.  
Press **OK**.
- 5 When the LCD shows **Erase This Data?**, do one of the following:
  - To Delete the Group, press **Yes**.
  - To exit without deleting the Group, press **No**.
- 6 Press **Stop/Exit**.

## Fax reports

Some fax reports (Transmission Verification Report and Fax Journal) can be printed automatically and manually.

### Transmission Verification Report

You can use the Transmission Verification Report as proof that you sent a fax. (►► Basic User's Guide: *Transmission Verification Report*)

### Fax Journal (Activity Report)

You can set the machine to print a journal at specific intervals (every 50 faxes, 6, 12 or 24 hours, 2 or 7 days). If you set the interval to **Off**, you can still print the report by following the steps in *How to print a report* ►► page 45. The factory setting is **Every 50 Faxes**.

If you set the interval to **Off**, you can still print the report by following the procedure in *Reports* ►► page 45.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.  
Press **Fax**.
- 3 Press **▲** or **▼** to display **Report Setting**.  
Press **Report Setting**.
- 4 Press **Journal Period**.

- 5 Press **◀** or **▶** to choose an interval.  
If you choose **Every 50 Faxes**, go to step 8

- 6, 12, 24 hours, 2 or 7 days

The machine will print the report at the chosen time and then erase all jobs from its memory.

If the machine's memory becomes full with 200 jobs before the time you chose has passed, the machine will print the Journal early and then erase all jobs from the memory. If you want an extra report before it is due to print, you can print it without erasing the jobs from the memory.

- **Every 50 Faxes**

The machine will print the Journal when the machine has stored 50 jobs.

- 6 Enter the time to start printing in 24-hour format.  
Press **OK**.
- 7 If you chose **Every 7 Days** in step 5, press **◀** or **▶** to choose the day of the week to print the journal.
- 8 Press **Stop/Exit**.

# Reports

The following reports are available:

- 1 **XMIT Verify**  
Displays the Transmission Verification Report for your last outgoing 200 faxes and prints the last report.
- 2 **Tel Index List**  
Prints a list of names and numbers stored in the One Touch and Speed Dial memory in numerical or alphabetical order.
- 3 **Fax Journal**  
Prints a list of information about your last 200 incoming and outgoing faxes. (TX: transmit.) (RX: receive.)
- 4 **User Settings**  
Prints a list of your current settings.
- 5 **Network Config**  
Lists your network settings.
- 6 **Drum Dot Print**  
Prints the drum dot check sheet to troubleshoot a dotted print problem.
- 7 **WLAN Report**  
Prints the result of wireless LAN connectivity diagnosis.

## How to print a report

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Print Reports**.  
Press **Print Reports**.
- 3 Press **▲** or **▼** to display the report you want to print.  
Press the report you want to print.
- 4 Do one of the following:
  - If you chose **XMIT Verify**, go to step 5.
  - If you chose **Tel Index List**, press **Numerical Order** or **Alphabetical Order**.  
Go to step 6.
  - For other reports, go to step 6.
- 5 Do one of the following:
  - To view the **Transmission Verification Report**, press **View on LCD**.
  - To print the **Transmission Verification Report**, press **Print Report**.
- 6 Press **Start**.
- 7 Press **Stop/Exit**.

## Copy settings

You can change the copy settings temporarily for the next copy.

Press **Copy** on the Touchscreen and then press ◀ or ▶ to scroll through the copy settings. When the setting you want is displayed, press the button.

When you are finished changing settings, press **Start**.

## Stop copying

To stop copying, press **Stop/Exit**.

## Improving copy quality

You can choose from a range of quality settings. The default setting is **Auto**.

### ■ Auto

Auto is the recommended mode for ordinary printouts. Suitable for documents that contain both text and photographs.

### ■ Text

Suitable for documents containing mainly text.

### ■ Photo

Better copy quality for photographs.

### ■ Graph

Suitable for copying receipts.

- 1 Press **Copy**.
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display **Quality**. Press **Quality**.
- 5 Press **Auto**, **Text**, **Photo** or **Graph**.
- 6 If you do not want to change additional settings, press **Start**.

## Enlarging or reducing the image copied

To enlarge or reduce the next copy follow the instructions below:

- 1 Press **Copy**.
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **◀** or **▶** to display **Enlarge/ Reduce**. Press **Enlarge/ Reduce**.
- 5 Press **100%**, **Enlarge**, **Reduce**, **Auto** or **Custom (25-400%)**.
- 6 Do one of the following:
  - If you chose **Enlarge** or **Reduce**, press the enlargement or reduction ratio button you want.
  - If you chose **Custom (25-400%)**, enter an enlargement or reduction ratio from 25% to 400%. Press **OK**.
  - If you chose **100%** or **Auto**<sup>1</sup>, go to step 7.

<b>100%*</b>
104% <b>EXE</b> ⇒ <b>LTR</b>
141% <b>A5</b> ⇒ <b>A4</b>
200%
50%
70% <b>A4</b> ⇒ <b>A5</b>
78% <b>LGL</b> ⇒ <b>LTR</b>
83% <b>LGL</b> ⇒ <b>A4</b>
85% <b>LTR</b> ⇒ <b>EXE</b>
91% <b>Full Page</b>
94% <b>A4</b> ⇒ <b>LTR</b>
97% <b>LTR</b> ⇒ <b>A4</b>
<b>Auto</b> <sup>1</sup>
<b>Custom (25-400%)</b>

\* The factory setting is shown in **Bold** with an asterisk.

<sup>1</sup> **Auto** sets the machine to calculate the reduction ratio that best fits the size of paper. **Auto** is only available when using the ADF.

- 7 If you do not want to change additional settings, press **Start**.



### Note

Page Layout Options **2in1 (P)**, **2in1 (L)**, **2in1 (ID)**, **4in1 (P)** and **4in1 (L)** are *not* available with **Enlarge/Reduce**.

## Duplex (2-sided) Copying


If you want to use the automatic duplex copy feature, load your document in the ADF.

If you get an Out of Memory message while you are making duplex copies, try installing extra memory. (See *Installing extra memory* ►► page 62.)


You must choose a 2-sided copy layout from the following options before you can start duplex copying. The layout of your document determines which 2-sided copy layout you should choose.

Portrait


### ■ 2side→2side

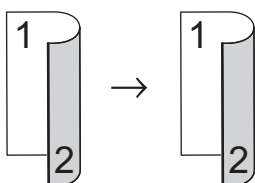


### ■ 1side→2side Long Edge Flip

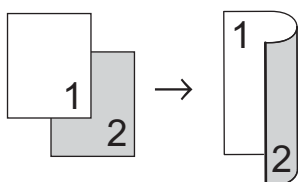


### ■ 2side→1side Long Edge Flip

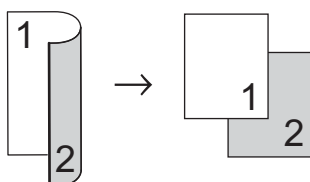

### ■ 1side→2side Short Edge Flip

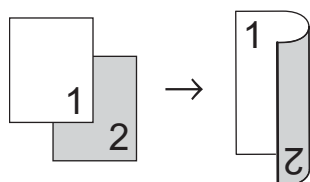


### ■ 2side→1side Short Edge Flip

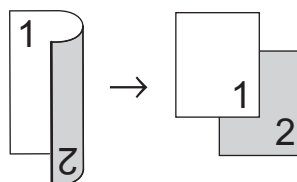


Landscape


### ■ 2side→2side

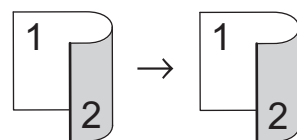


### ■ 1side→2side Long Edge Flip

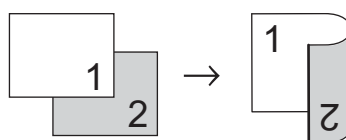


### ■ 2side→1side Long Edge Flip

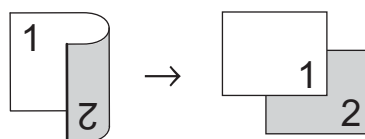

### ■ 1side→2side Short Edge Flip

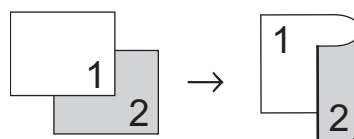

### ■ 2side→1side Short Edge Flip

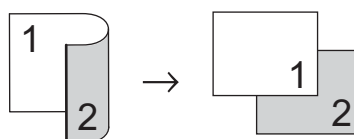

- 1 Press **Copy**.
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display **Duplex Copy**.  
Press **Duplex Copy**.
- 5 Press ◀ or ▶ to display the following layout options:  
2side⇒2side,  
1side⇒2side LongEdgeFlip,  
2side⇒1side LongEdgeFlip,  
1side⇒2side ShortEdgeFlip,  
2side⇒1side ShortEdgeFlip,  
Off

Press the option you want.

- 6 If you do not want to change additional settings, press **Start**.

## Tray selection

---

You can temporarily change the Tray Use option for the next copy.

- 1 Press **Copy**.
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display **Tray Use**.  
Press **Tray Use**.
- 5 Press MP>T1, MP>T1>T2<sup>1</sup>, T1>MP,  
T1>T2>MP<sup>1</sup>, Tray#1 Only,  
Tray#2 Only<sup>1</sup> or MP Only.

<sup>1</sup> T2 and Tray#2 Only appears only if Tray 2 is installed.

- 6 If you do not want to change additional settings, press **Start**.



### Note

---

To change the default setting for Tray Use  
 >> Basic User's Guide: *Tray Use in Copy mode*

---

## Adjusting Brightness and Contrast

### Brightness

Adjust the copy brightness to make copies darker or lighter.

- 1 Press **Copy**.
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **◀** or **▶** to display **Brightness**. Press **Brightness**.
- 5 Press **◀** to make a darker copy or press **▶** to make a lighter copy. Press **OK**.
- 6 If you do not want to change additional settings, press **Start**.

### Contrast

Adjust the contrast to help an image look sharper and more vivid.

- 1 Press **Copy**.
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **◀** or **▶** to display **Contrast**. Press **Contrast**.
- 5 Press **◀** to decrease the contrast or press **▶** to increase the contrast. Press **OK**.
- 6 If you do not want to change additional settings, press **Start**.

## Sorting copies

You can sort multiple copies. Pages will be stacked in the order 1 2 3, 1 2 3, 1 2 3, and so on.

- 1 Press **Copy**.
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **◀** or **▶** to display **Stack/Sort**. Press **Stack/Sort**.
- 5 Press **Sort**.
- 6 If you do not want to change additional settings, press **Start** to scan the page. If you placed the document in the ADF, the machine scans the pages and starts printing.

**If you are using the scanner glass, go to step 7.**

- 7 After the machine scans the page, press **Yes** to scan the next page.
- 8 Put the next page on the scanner glass. Press **Start**. Repeat steps 7 and 8 for each page of the layout.
- 9 After all the pages have been scanned, press **No** in step 7 to finish.



## Making N in 1 copies (page layout)

You can reduce the amount of paper used when copying by using the N in 1 copy feature. This allows you to copy two or four pages onto one page. If you want to copy both sides of an ID card onto one page, see *2 in 1 ID Copy* >> page 53.

### ! Important

- Please make sure the paper size is set to A4, Letter, Legal or Folio.
- You cannot use the Enlarge/Reduce setting with the N in 1 feature.
- (P) means Portrait and (L) means Landscape.

- 1 Press **Copy**.
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display **Page Layout**. Press **Page Layout**.
- 5 Press ◀ or ▶ to display **Off (1in1)**, **2in1 (P)**, **2in1 (L)**, **2in1 (ID)**<sup>1</sup>, **4in1 (P)** or **4in1 (L)**. Press the button you want.

<sup>1</sup> For details about **2in1 (ID)**, see *2 in 1 ID Copy* >> page 53.

- 6 If you do not want to change additional settings, press **Start** to scan the page. If you placed the document in the ADF, the machine scans the pages and starts printing.

**If you are using the scanner glass, go to step 7.**

- 7 After the machine scans the page, press **Yes** to scan the next page.
- 8 Put the next page on the scanner glass. Press **Start**. Repeat steps 7 and 8 for each page of the layout.
- 9 After all the pages have been scanned, press **No** in step 7 to finish.

 
### If you are copying from the ADF:

Insert your document *face up* in the direction shown below:

#### ■ 2in1(P)




#### ■ 2in1(L)



#### ■ 4in1(P)


 
#### ■ 4in1(L)




## If you are copying from the scanner glass:

Insert your document *face down* in the direction shown below:

### ■ 2in1(P)


 
### ■ 2in1(L)



### ■ 4in1(P)



### ■ 4in1(L)



## 2 in 1 ID Copy

You can copy both sides of your identification card onto one page, keeping the original card size.




### Note

You can copy an identification card to the extent permitted under applicable laws.

(►► Product Safety Guide: *Unlawful use of copying equipment (MFC and DCP only)*)

- 1 Press **Copy**.
- 2 Place your identification card *face down* at the left corner of the scanner glass.

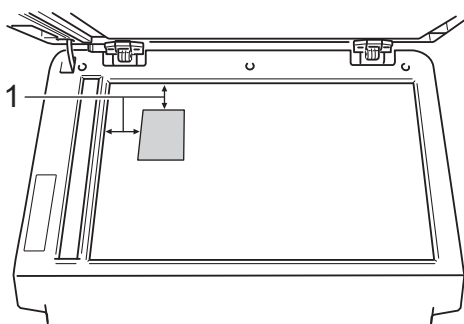

### 1 4 mm or greater (top, left)

- Even if a document is placed on the ADF, the machine scans the data from the scanner glass when in this mode.

- 3 Enter the number of copies you want.
- 4 Press ◀ or ▶ to display **Page Layout**. Press **Page Layout**.
- 5 Press ◀ or ▶ to display **2in1 (ID)**. Press **2in1 (ID)**.
- 6 Press **Start**.  
After the machine scans the first side of the card, the LCD will display **Turn over the ID Card Then Press Start**.

- 7 Turn over your identification card and place it on the left side of the scanner glass.
- 8 Press **Start**. The machine scans the other side of the card and prints the page.



### Note

When 2 in 1 ID Copy is chosen, the machine sets the quality to **Photo** and the contrast to **+2**.

## Setting your changes as the new default

You can save the copy settings for **Quality**, **Brightness** and **Contrast** you use most often by setting them as the default. These settings will stay until you change them again.

- 1 Press **Copy**.
- 2 Press ◀ or ▶ to choose the setting you want to change, and then press the new option.  
Repeat this step for each setting you want to change.
- 3 After changing the last setting, press ◀ or ▶ to display **Set New Default**. Press **Set New Default**.
- 4 Press **Yes**.
- 5 Press **Stop/Exit**.

 
## Restoring all copy settings to the factory settings

You can restore all the copy settings you have changed to the factory settings. These settings will stay until you change them again.

- 1 Press **Copy**.
- 2 Press ◀ or ▶ to display **Factory Reset**. Press **Factory Reset**.
- 3 Press **Yes**.
- 4 Press **Stop/Exit**.


## Setting your favourites

You can store the copy settings that you use most often by setting them as a favourite. You can set up to three favourites.

- 1 Press **Copy**.
- 2 Choose the copy option and settings you want to store.
- 3 Press ◀ or ▶ to display **Favorite Settings**. Press **Favorite Settings**.
- 4 Press **Store**.
- 5 Press the location where you want to store your setting for **Favorite:1**, **Favorite:2** or **Favorite:3**.
- 6 Do one of the following:
  - If you want to rename your setting, press  to delete characters. Then enter the new name (up to 12 characters). Press **OK**.
  - If you do not want to rename your setting, press **OK**.
- 7 Press **Stop/Exit**.

## Retrieving your favourite setting

When you are ready to use one of your favourite set of settings, you can recall it.

- 1 Press **Copy**.
- 2 Press  **Favorite**.
- 3 Press the favourite setting you want to retrieve.
- 4 Press **Start**.

## Rename your favourite setting

After you stored your favourite setting, you can rename it.

- 1 Press **Copy**.
- 2 Press **◀** or **▶** to display  
Favorite Settings.  
Press **Favorite Settings**.
- 3 Press **Rename**.
- 4 Press the favourite setting you want to  
rename.
- 5 Enter the new name (up to 12  
characters).
- 6 Press **OK**.
- 7 Press **Stop/Exit**.

# A

## Routine maintenance

### Cleaning and checking the machine

Clean the outside and inside of the machine regularly with a dry, lint-free cloth. When you replace the toner cartridge or the drum unit, make sure that you clean the inside of the machine. If printed pages are stained with toner, clean the inside of the machine with a dry, lint-free cloth.

#### Important

Use neutral detergents. Cleaning with volatile liquids such as thinner or benzene will damage the surface of the machine.

#### WARNING



- DO NOT put a toner cartridge or a toner cartridge and drum unit assembly into a fire. It could explode, resulting in injuries.
- DO NOT use flammable substances, any type of spray, or an organic solvent/liquid containing alcohol or ammonia to clean the inside or outside of the product. Doing so could cause a fire or electrical shock. Instead, use only a dry, lint-free cloth.

(>> Product Safety Guide: *General precautions*)



## Checking the Page Counters

You can see the machine's Page Counters for copies, printed pages, reports and lists, faxes or a summary total.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display  
Machine Info..  
Press Machine Info..
- 3 Press **Page Counter**.  
The LCD shows number of pages for  
Total, Fax/List, Copy or Print.
- 4 Press **Stop/Exit**.

## Checking the remaining life of parts

You can see the machine's parts life on the LCD.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display  
Machine Info..  
Press Machine Info..
- 3 Press **Parts Life**.
- 4 Press **▲** or **▼** to see the approximate  
remaining parts life of the Drum, Fuser,  
Laser, PF Kit MP, PF Kit 1 and  
PF Kit 2<sup>1</sup>.

<sup>1</sup> When Tray 2 is installed.

- 5 Press **Stop/Exit**.

## Replacing periodic maintenance parts

The periodic maintenance parts will need to be replaced regularly to maintain the print quality. The parts listed below will have to be replaced after printing approximately 50,000 pages<sup>1</sup> for PF Kit MP and 100,000 pages<sup>1</sup> for PF Kit 1, PF Kit 2, Fuser and Laser. Please call Brother Customer Service when the following messages appear on the LCD.

LCD message	Description
Replace Parts Fuser Unit	Replace the fuser unit.
Replace Parts Laser Unit	Replace the laser unit.
Replace Parts PF Kit 1	Replace the paper feeding kit for the paper tray.
Replace Parts PF Kit 2 <sup>2</sup>	Replace the paper feeding kit for the lower tray (option).
Replace Parts PF Kit MP	Replace the paper feeding kit for the multi-purpose tray.


<sup>1</sup> A4 or Letter size single-sided pages.

<sup>2</sup> When Tray 2 is installed.

# Packing and shipping the machine

## WARNING

This machine is heavy and weighs more than 17.7 kg. To prevent possible injuries at least two people should lift the machine. Be careful not to pinch your fingers when you put the machine down.

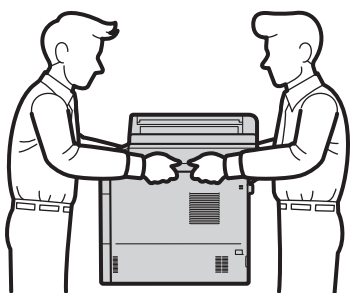


If you use a Lower Tray, DO NOT carry the machine with the Lower Tray as you may be injured or cause damage to the machine because it is not attached to the Lower Tray.



## Note


If for any reason you must ship your machine, carefully repack the machine in the original packaging to avoid any damage during transit. The machine should be adequately insured with the carrier.

- 1 Turn off the machine. Leave the machine turned off for at least 10 minutes to cool down.
- 2 Disconnect all the cables, and then unplug the power cord from the electrical socket.
- 3 Put the packing material (1) into the carton.

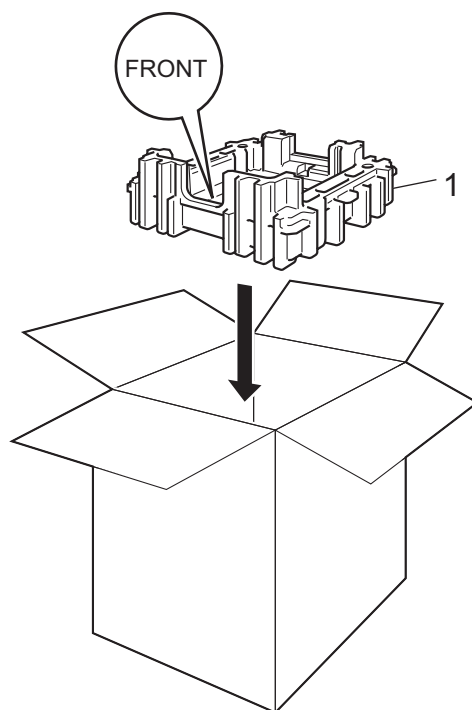




- 4 Wrap the machine in a plastic bag, then put it on the bottom packing material (1).

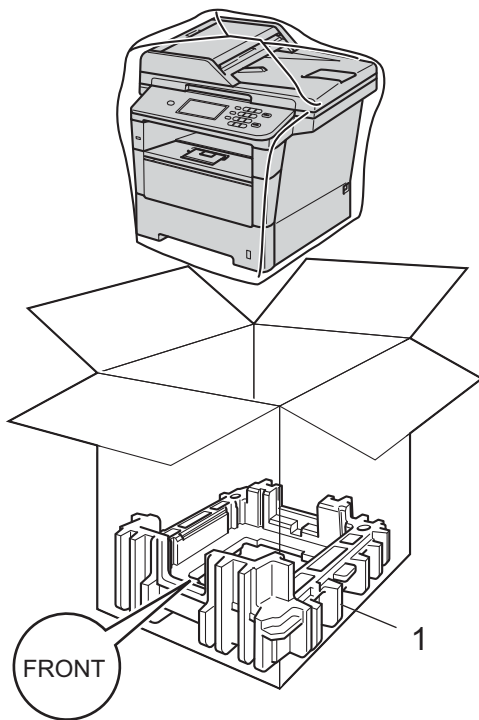


- 5 Put the packing material (2) marked "RIGHT" on the right of the machine. Put the packing material (3) marked "LEFT" on the left of the machine. Put the AC power cord and printed materials in the original carton as shown in the illustration.

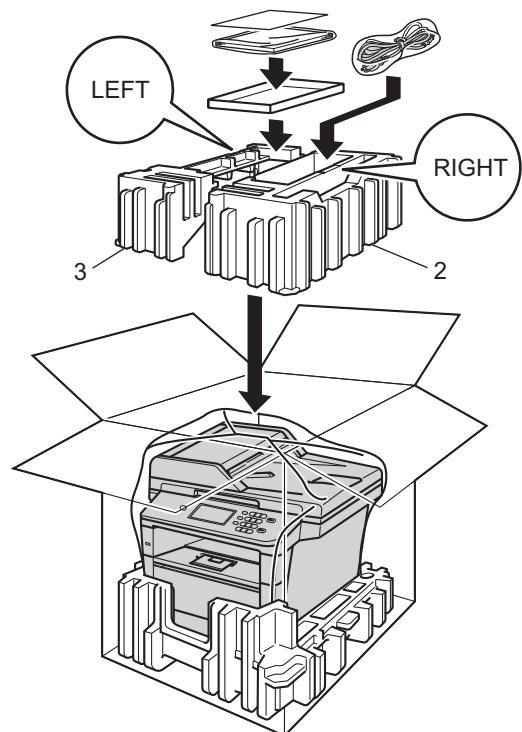

- 6 Close the carton and tape it shut.


- 7 <If you have a Lower Tray>  
Repack the lower tray as shown in the illustration.

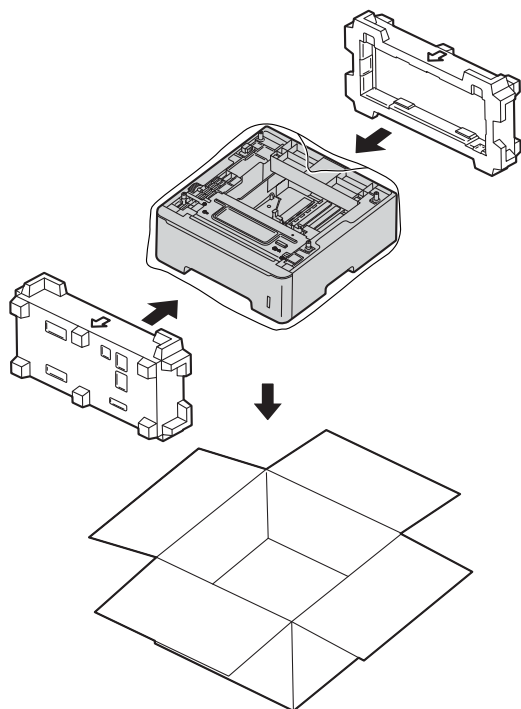

## Optional paper tray (LT-5400)

An optional lower tray can be installed on the MFC-8950DW<sup>1</sup>, and it can hold up to 500 sheets of 80 g/m<sup>2</sup> paper.

When an optional tray is installed, the machine can hold up to 1050 sheets of plain paper.

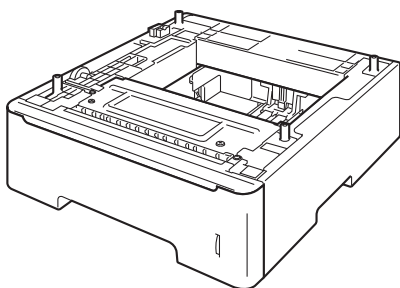

For setup, see the Instructions that we have supplied with the lower tray unit.

<sup>1</sup> Tray 2 is standard on MFC-8950DWT.

### WARNING

If you use a Lower Tray, DO NOT carry the machine with the Lower Tray as you may be injured or cause damage to the machine because it is not attached to the Lower Tray.

## Memory board

MFC-8950DW(T) has 128 MB of standard memory. The machine has one slot for optional memory expansion. You can increase the memory up to maximum of 384 MB by installing one SO-DIMM (Small Outline Dual In-line Memory Module).

### SO-DIMM Types

You can install the following SO-DIMMs:

- 256 MB Kingston KTH-LJ2015/256
- 256 MB Transcend TS256MHP423A



#### Note

- For more information, visit the Kingston Technology website at <http://www.kingston.com/>.
- For more information, visit the Transcend website at <http://www.transcend.com.tw/>.

In general, the SO-DIMM must have the following specifications:

Type	144-pin and 16-bit output
CAS latency	4
Clock frequency	267 MHz (533 Mb/S/Pin) or more
Capacity	256 MB
Height	30.0 mm
DRAM type	DDR2 SDRAM



#### Note

- There might be some SO-DIMMs that will not work with the machine.
- For more information, call the dealer you bought the machine from or Brother Customer Service.

## Installing extra memory


- 1 Turn off the machine's power switch. Unplug the telephone line cord.
- 2 Disconnect the interface cable from the machine, and then unplug the power cord from the electrical socket.



### Note

Be sure to turn off the machine's power switch before you install or remove the SO-DIMM.

- 3 Remove the plastic SO-DIMM cover (1).

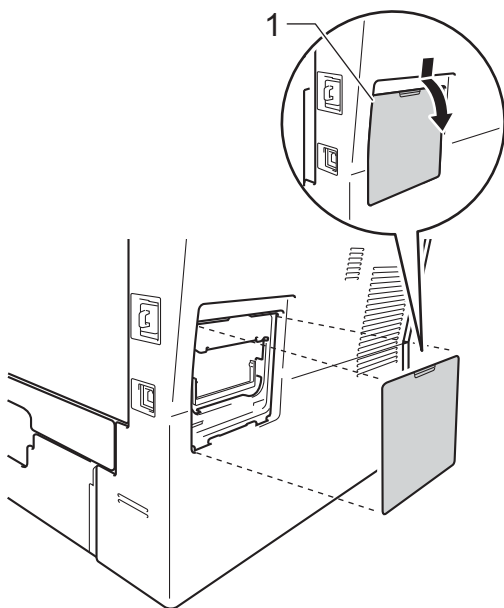


- 4 Unpack the SO-DIMM and hold it by its edges.




### Important

To prevent damage to the machine from static electricity, DO NOT touch the memory chips or the board surface.

- 5 Hold the SO-DIMM by the edges and align the notches in the SO-DIMM with the protrusions in the slot. Insert the SO-DIMM diagonally (1), then tilt it toward the interface board until it clicks into place (2).

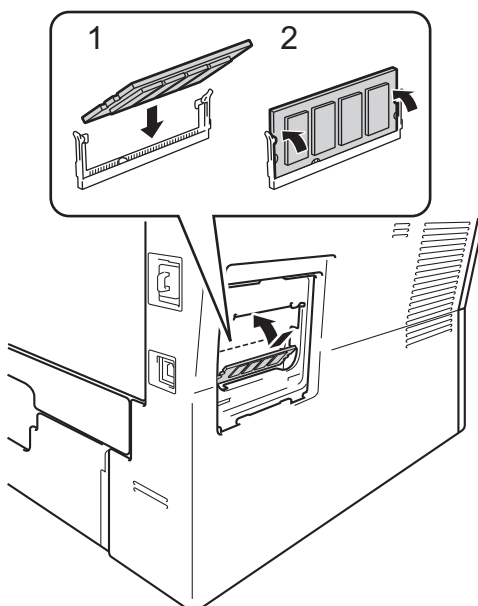

- 6 Put the plastic SO-DIMM cover (1) back on.

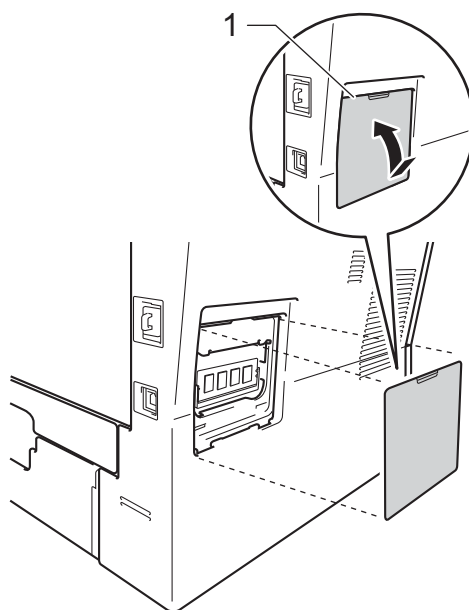

- 7 Plug the machine's power cord back into the electrical socket first, and then connect the interface cable.
- 8 Plug in the telephone line cord. Turn on the machine's power switch.

**Note**

To make sure that you have installed the SO-DIMM correctly, you can print the User Settings List that shows the current RAM SIZE. (See *How to print a report* >> page 45.)

This is a comprehensive list of features and terms that appear in Brother manuals. Availability of these features depends on the model you purchased.

**ADF (automatic document feeder)**

The document can be placed in the ADF and scanned one page at a time automatically.

**Auto Reduction**

Reduces the size of incoming faxes.

**Automatic fax transmission**

Sending a fax without picking up the handset of the external telephone.

**Automatic Redial**

A feature that enables your machine to redial the last fax number after five minutes if the fax did not go through because the line was busy.

**Backup Print**

Your machine prints a copy of every fax that is received and stored in memory. This is a safety feature so you will not lose messages during a power failure.

**Batch Transmission**

As a cost saving feature, all delayed faxes to the same fax number will be sent as one transmission.

**Beeper Volume**

Volume setting for the beep when you press a key or make an error.

**Broadcasting**

The ability to send the same fax message to more than one location.

**BT Call Sign**

A subscriber service purchased from the telephone company in the U.K. that gives you another phone number on an existing phone line. The Brother machine uses the new number to simulate a dedicated fax line.

**Cancel Job**

Cancels a programmed print job and clears it from the machine's memory.

**CNG tones**

The special tones (beeps) sent by fax machines during automatic transmission to tell the receiving machine that a fax machine is calling.

**Coding method**

Method of coding the information contained in the document. All fax machines must use a minimum standard of Modified Huffman (MH). Your machine is capable of greater compression methods, Modified Read (MR), Modified Modified Read (MMR) and JBIG, if the receiving machine has the same capability.

**Communication error (or Comm. Error)**

An error during fax sending or receiving, usually caused by line noise or static.

**Compatibility group**

The ability of one fax unit to communicate with another. Compatibility is assured between ITU-T Groups.

**Contrast**

Setting to compensate for dark or light documents, by making faxes or copies of dark documents lighter and light documents darker.

**Delayed Fax**

Sends your fax at a specified later time that day.

**Dual Access**

Your machine can scan outgoing faxes or scheduled jobs into memory at the same time it is sending a fax or receiving or printing an incoming fax.

**ECM (Error Correction Mode)**

Detects errors during fax transmission and resends the pages of the fax that had an error.

**Extension telephone**

A telephone on the fax number that is plugged into a separate wall socket.

**External phone**

A TAD (telephone answering device) or telephone that is connected to your machine.

**F/T Ring Time**

The length of time that the Brother machine fast double-rings (when the Receive Mode setting is Fax/Tel) to notify you to pick up a voice call that it answered.

**Fax Detect**

Enables your machine to respond to CNG tones if you interrupt a fax call by answering it.

**Fax Forwarding**

Sends a fax received into the memory to another pre-programmed fax number.

**Fax Journal**

Lists information about the last 200 incoming and outgoing faxes. TX means Transmit. RX means Receive.

**Fax Storage**

You can store faxes in the memory.

**Fax tones**

The signals sent by sending and receiving fax machines while communicating information.

**Fax/Tel**

You can receive faxes and telephone calls. Do not use this mode if you are using a telephone answering device (TAD).

**Fine resolution**

Resolution is 203 × 196 dpi. It is used for small print and graphs.

**Greyscale**

The shades of grey available for copying and faxing photographs.

**Group number**

A combination of One Touch and Speed Dial numbers that are stored on an One Touch button or in a Speed Dial location for Broadcasting.

**Journal Period**

The pre-programmed time period between automatically printed Fax Journal Reports. You can print the Fax Journal on demand without interrupting the cycle.

**LCD (liquid crystal display)**

The display screen on the machine that shows interactive messages during On-Screen Programming and shows the date and time when the machine is idle.

**Manual fax**

When you lift the handset of your external telephone so you can hear the receiving fax machine answer before you press **Start** to begin transmission.

**Menu mode**

Programming mode for changing your machine's settings.

**OCR (optical character recognition)**

Nuance™ PaperPort™ 12SE or Presto! PageManager software application converts an image of text to text you can edit.

**One Touch**

Buttons on the machine's Touchscreen where you can store numbers for easy dialling. You can store a second number on each key if you press **\*17-\*32** and then press the One Touch button where you want to store the second number.

**Out of Paper Reception**

Receives faxes into the machine's memory when the machine is out of paper.

## **Overseas Mode**

Makes temporary changes to the fax tones to accommodate noise and static on overseas telephone lines.

## **Pause**

Allows you to place a 2.8 second delay in the dialling sequence while you are dialling using the dial pad or while you are storing One Touch and Speed Dial numbers. Press **Redial/Pause** as many times as needed for longer pauses.

## **Polling**

The process of a fax machine calling another fax machine to retrieve waiting fax messages.

## **Pulse**

A form of rotary dialling on a telephone line.

## **Real Time Transmission**

When memory is full, you can send faxes in real time.

## **Remaining Jobs**

You can check which programmed fax jobs are waiting in the memory and cancel the jobs individually.

## **Remote Access Code**

Your own four-digit code (— — —\*) that allows you to call and access your machine from a remote location.

## **Remote Activation code**

Press this code (\*51) when you answer a fax call on an extension or external telephone.

## **Remote Deactivation code (Fax/Tel mode only)**

When the machine answers a voice call, it fast double-rings. You can pick up at an extension or external telephone by pressing this code (#51).

## **Remote Retrieval Access**

The ability to access your machine remotely from a touch tone telephone.

## **Resolution**

The number of vertical and horizontal lines per inch.

## **Ring Delay**

The number of rings before the machine answers in Fax Only and Fax/Tel modes.

## **Ring Volume**

Volume setting for the machine's ring.

## **Scanning**

The process of sending an electronic image of a paper document into your computer.

## **Search**

An electronic, alphabetical listing of stored One Touch, Speed Dial, Group numbers and LDAP.

## **Speed Dial**

A pre-programmed number for easy dialling.

## **Station ID**

The stored information that appears on the top of faxed pages. It includes the sender's name and fax number.

## **TAD (telephone answering device)**

You can connect an external TAD to your machine.

## **Tel Index List**

A listing of names and numbers stored in One Touch and Speed Dial memory, in numerical order.

## **Temporary settings**

You can choose certain options for each fax transmission and copy without changing the default settings.

## **Tone**

A form of dialling on the telephone line used for Touch Tone telephones.

## **Transmission**

The process of sending faxes over the telephone lines from your machine to the receiving fax machine.



**User Settings List**

A printed report that shows the current settings of the machine.

**Xmit Report (Transmission Verification Report)**

A listing for each transmission, that shows its date, time and number.

**A**

Apple Macintosh  
See Software User's Guide.

**B**

Broadcasting .....18  
cancelling .....19  
setting up Groups for .....39

**C**

Cancelling  
broadcast in process .....19  
fax jobs in memory .....22  
fax storage .....28  
jobs awaiting redial .....22  
remote fax options .....29

ControlCenter2 (for Macintosh)

See Software User's Guide.

ControlCenter4 (for Windows®)

See Software User's Guide.

Copy

2 in 1 ID Copy .....53  
brightness .....50  
button .....46  
contrast .....50  
duplex .....48  
Enlarge/Reduce .....47  
N in 1 (page layout) .....51  
quality .....46  
sort .....50  
temporary settings .....46  
using scanner glass ..... 50, 51

Cover page .....23  
custom comments .....24  
for all faxes .....24  
printed form .....25

**D**

Daylight Saving Time ..... 1  
Deep Sleep mode ..... 3  
Delayed batch transmission ..... 21  
Destination Display ..... 25  
Dialling  
Groups (broadcasting) ..... 18  
restricting dialling ..... 13  
Drum unit  
checking (remaining life) ..... 57  
Dual access ..... 18  
Duplex copy ..... 48

**E**

Enlarge/Reduce ..... 47

**F**

Fax codes  
changing ..... 29  
remote access code ..... 29  
Fax forwarding  
changing remotely ..... 31, 32  
programming a number ..... 27  
Fax storage ..... 28  
printing from memory ..... 35  
turning off ..... 29  
turning on ..... 28  
Fax, stand-alone  
receiving  
fax forwarding ..... 27, 32  
fax receive stamp ..... 34  
into memory (fax storage) ..... 28  
polling receive ..... 36  
reducing to fit on paper ..... 33  
retrieving from a remote site ..... 30, 32

sending .....	15
broadcasting .....	18
cancelling from memory .....	22
contrast .....	16
delayed batch .....	21
delayed fax .....	21
destination display .....	25
from memory (dual access) .....	18
manual .....	17
overseas .....	20
polled transmit .....	26
real time transmission .....	20
resolution .....	17

## G

Groups for broadcasting .....	39
-------------------------------	----

## L

LCD (liquid crystal display)	
backlight brightness .....	4

## M

Machine information	
checking remaining life of parts .....	57
page counts .....	57
Macintosh	
See Software User's Guide.	
Maintenance, routine .....	56
checking the remaining life of parts .....	57
Manual	
transmission .....	17
Memory	
adding DIMM (option) .....	61
installing .....	62
storage .....	1

## N

N in 1 (page layout) .....	51
Network	
faxing	
See Software User's Guide.	
printing	
See Network User's Guide.	
scanning	
See Software User's Guide.	
Nuance™ PaperPort™ 12SE	
See Software User's Guide and Help in the PaperPort™ 12SE application to access How-to-Guides.	

## P

Page layout (N in 1) .....	51
PC-Fax	
See Software User's Guide.	
Polling	
polled transmit .....	26
polling receive .....	36
Power failure .....	1
Presto! PageManager	
See Software User's Guide. See also Help in the Presto! PageManager application.	
Print	
fax from memory .....	35
reports .....	45
Printing	
See Software User's Guide.	

## Q

Quality	
copying .....	46
Quick dial	
broadcasting .....	18
using Groups .....	18
Group dial	
setting up Groups for broadcasting ...	39
Quiet mode .....	3

## R

---

Redial/Pause key .....	66
Reducing	
copies .....	47
incoming faxes .....	33
Remote retrieval .....	29
access code .....	29, 30
commands .....	32
getting your faxes .....	30
Remote setup	
See Software User's Guide.	
Reports .....	44, 45
Drum Dot Print .....	45
Fax Journal .....	44, 45
journal period .....	44
how to print .....	45
Network Configuration .....	45
Tel Index List .....	45
Transmission Verification .....	44
User Settings .....	45
WLAN Report .....	45
Resolution	
fax (standard, fine, superfine, photo) ....	17
setting for next fax .....	17
Restricted users .....	7

## S

---

Scanning	
See Software User's Guide.	
Security	
restricting dialling .....	13
Secure function lock	
administrator password .....	6
Public user mode .....	7
restricted users .....	7
Setting lock .....	11
Sleep mode .....	2
Sort .....	50

## T

---

Temporary copy settings .....	46
Toner Save .....	2

## W

---

Wi-Fi Direct™ .....	i
Windows®	
See Software User's Guide.	
Wireless Network	
See Quick Setup Guide and Network User's Guide.	



**Visit us on the World Wide Web**  
**<http://www.brother.com/>**

These machines are approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.