brother®

Network User's Guide

Multi-Protocol On-board Ethernet Print Server and Wireless Print Server

This Network User's Guide provides useful information on wired and wireless network settings and security settings using your Brother machine. You can also find supported protocol information and detailed troubleshooting tips.

To download the latest manual, please visit the Brother Solutions Center at (<u>http://solutions.brother.com/</u>). You can also download the latest drivers and utilities for your machine, read FAQs and troubleshooting tips, or learn about special printing solutions from the Brother Solutions Center.

Applicable models

This User's Guide applies to the following models. HL-3170CDW

Definitions of notes

The following icons are used throughout this User's Guide.

IMPORTANT	<u>IMPORTANT</u> indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product functionality.
NOTE	Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.

IMPORTANT NOTE

- This product is approved for use in the country of purchase only. Do not use this product outside the country of purchase as it may violate the wireless telecommunication and power regulations of that country.
- Windows[®] XP in this document represents Windows[®] XP Professional, Windows[®] XP Professional x64 Edition and Windows[®] XP Home Edition.
- Windows Server[®] 2003 in this document represents Windows Server[®] 2003 and Windows Server[®] 2003 x64 Edition.
- Windows Server[®] 2008 in this document represents Windows Server[®] 2008 and Windows Server[®] 2008 R2.
- Windows Server[®] 2012 in this document represents all editions of Windows Server[®] 2012.
- Windows Vista[®] in this document represents all editions of Windows Vista[®].
- Windows[®] 7 in this document represents all editions of Windows[®] 7.
- Windows[®] 8 in this document represents all editions of Windows[®] 8.
- Please go to the Brother Solutions Center at <u>http://solutions.brother.com/</u> and click Manuals on your model page to download the other manuals.

Table of Contents

Section I Network Operation

1	Introduction	2
	Network features	2
	Other Network features	3
2	Changing your machine's network settings	4
	How to change your machine's network settings	
	(IP address, Subnet mask and Gateway)	4
	Using the control panel	4
	Using the BRAdmin Light utility	4
	Other Management Utilities	7
	Web Based Management (web browser)	7
	BRAdmin Professional 3 utility (Windows®)	7
	BRPrint Auditor (Windows [®])	8
3	Configuring your machine for a wireless network	9
	Overview	9
	Confirm vour network environment	10
	Connected to a computer with a WLAN access point/router in the network (Infrastructure mode)	10
	Connected to a wireless capable computer without a WLAN access point/router in the network	
	(Ad-hoc mode)	11
	Wireless configuration temporarily using a USB cable (Recommended)	12
	Configuration using the machine's control panel Setup Wizard	17
	Manual configuration from the control panel	18
	Configuring your machine when the SSID is not broadcast	20
	Configuring your machine for an enterprise wireless network	22
	One push configuration using WPS (Wi-Fi Protected Setup) or AOSS™	26
	Configuration using the PIN Method of WPS (Wi-Fi Protected Setup)	28
	Configuration in Ad-hoc mode	31
	Using configured SSID	31
	Using a New SSID	32
4	Control panel setup	34
	Overview	34
	Network menu	35
	TCP/IP	35
	Ethernet (wired network only)	37
	Wired Status	37
	Setup Wizard (wireless network only)	37
	WPS (Wi-Fi Protected Setup)/AOSS [™] (wireless network only)	37
	WPS (Wi-Fi Protected Setup) w/PIN Code (wireless network only)	37
	WLAN Status	37
	MAC Address	38

Set to Default	38
Wired Enable	38
WLAN Enable	38
Reset the network settings to the factory default	39
Printing the Network Configuration Report	39
Printing the WLAN report.	40
Function table and default factory settings	41

5 Web Based Management

Overview	44
How to configure the machine settings using Web Based Management (web browser)	44
Setting a password	45
Secure Function Lock 2.0	46
How to configure the Secure Function Lock 2.0 settings using Web Based Management	
(web browser)	46
How to configure the SNTP protocol using Web Based Management	48
Store Print Log to Network.	49
How to configure the Store Print Log to Network settings using Web Based Management	
(web browser)	49
Error Detection Setting	51
Understanding Error Messages	52
5 5	

6 Security features

Overview	53
Using Certificates for device security	54
Configure certificate using Web Based Management	55
Creating and installing a certificate	56
Choosing the certificate	
How to install the self-signed certificate on your computer	
Import and export the certificate and private key	63
Import and export a CA certificate	64
Managing multiple certificates	65
Managing your network machine securely using SSL/TLS	66
Secure Management using Web Based Management (web browser)	66
Secure Management using BRAdmin Professional 3 (Windows®)	
To use the BRAdmin Professional 3 utility securely, you need to follow the points below	68
Printing documents securely using SSL/TLS.	69
Sending an E-mail securely	70
Configuration using Web Based Management (web browser)	70
Sending an E-mail with user authentication	70
Sending an E-mail securely using SSL/TLS	71
Using IEEE 802.1x authentication	72
IEEE 802.1x authentication configuration using Web Based Management (web browser)	72

53

44

8	Types of network connections and protocols	83
	Types of network connections	83
	Wired network connection example	83
	Protocols	85
	TCP/IP protocols and functions	85
9	Configuring your machine for a network	89
	IP addresses, subnet masks and gateways	
	IP address	
	Subnet mask	90
	Gateway (and router)	90
	IEEE 802.1x Authentication	91
10	Wireless network terms and concepts	93
	Specifying your network	
	SSID (Service Set Identifier) and channels	93
	Security terms	93
	Authentication and encryption	93
	Authentication and Encryption methods for a personal wireless network	94
	Authentication and Encryption methods for an enterprise wireless network	
11	Additional network settings from Windows [®]	97
	Types of additional network settings	
	Installing drivers used for printing via Web Services	
	(Windows Vista [®] , Windows [®] 7 and Windows [®] 8)	97
	Uninstalling drivers used for printing via Web Services	
	(Windows Vista [®] , Windows [®] 7 and Windows [®] 8)	
	Network printing installation for Infrastructure mode when using Vertical Pairing	
	(Windows [®] 7 and Windows [®] 8)	
12	(Windows [®] 7 and Windows [®] 8)	99 100
12	(Windows [®] 7 and Windows [®] 8)	
12	(Windows [®] 7 and Windows [®] 8) Security terms and concepts Security features	
12	(Windows [®] 7 and Windows [®] 8) Security terms and concepts Security features	
12	Windows [®] 7 and Windows [®] 8) Security terms and concepts Security features	

Identifying your problem75

Section II Network Glossary

Troubleshooting

7

75

Section III Appendixes

Α	Appendix A	104
	Supported protocols and security features	104
В	Appendix B	105
	Using services	
	Other ways to set the IP address (for advanced users and administrators)	
	Using DHCP to configure the IP address	
	Using RARP to configure the IP address	
	Using BOOTP to configure the IP address	
	Using APIPA to configure the IP address	
	Using ARP to configure the IP address	
	Using the TELNET console to configure the IP address	109
С	Index	110

Section I

Network Operation

Introduction	2
Changing your machine's network settings	4
Configuring your machine for a wireless network	9
Control panel setup	34
Web Based Management	44
Security features	53
Troubleshooting	75

Introduction

Network features

Your Brother machine can be shared on a 10/100 MB wired or IEEE 802.11b/g/n wireless Ethernet network using the internal network print server. The print server supports various functions and methods of connection depending on the operating system you are running on a network supporting TCP/IP. The following chart shows what network features and connections are supported by each operating system.

NOTE

- Although the Brother machine can be used in both a wired and wireless network, only one connection method can be used at a time. However, a wireless network connection and Wi-Fi Direct[™] connection, or a wired network connection and Wi-Fi Direct connection can be used at the same time.
- For details, please refer to the Wi-Fi Direct[™] Guide located on the Manuals download page for your model on the Brother Solutions Center (<u>http://solutions.brother.com/</u>).

Operating Systems	Windows [®] XP Windows Vista [®] Windows [®] 7 Windows [®] 8	Windows Server [®] 2003/2008/2012	Mac OS X v10.6.8, 10.7.x, 10.8.x
Printing	<i>v</i>	~	~
BRAdmin Light ¹	~	~	~
See page 4.	•	·	•
BRAdmin Professional 3 ²	~	~	
See page 7.		•	
Web Based Management (web browser)	~	~	~
See page 44.			
Status Monitor			
See User's Guide		· ·	
Driver Deployment Wizard	~	~	
Vertical Pairing			
See page 99.			

¹ BRAdmin Light for Macintosh is available as a download from <u>http://solutions.brother.com/</u>.

² BRAdmin Professional 3 is available as a download from <u>http://solutions.brother.com/</u>.

 3 $\,$ Windows $^{\ensuremath{\mathbb{R}}}$ 7 and Windows $^{\ensuremath{\mathbb{R}}}$ 8 only.

Other Network features

Security

Your Brother machine employs some of the latest network security and encryption protocols available. (See *Security features* on page 53.)

Secure Function Lock 2.0

Secure Function Lock 2.0 increases security by restricting the use of functions. (See *Secure Function Lock 2.0* on page 46.)

Store Print Log to Network

The Store Print Log to Network feature allows you to save the print log file from your Brother machine to a network server using CIFS. (See *Store Print Log to Network* on page 49.)

Changing your machine's network settings

How to change your machine's network settings (IP address, Subnet mask and Gateway)

The machine's network settings can be changed using the control panel, BRAdmin Light, Web Based Management, and BRAdmin Professional 3. Please read this chapter for details.

Using the control panel

2

You can configure your machine for a network using the Network control panel menu. (See *Control panel setup* on page 34.)

Using the BRAdmin Light utility

The BRAdmin Light utility is designed for initial setup of Brother network connected devices. It also can search for Brother products in a TCP/IP environment, view the status and configure basic network settings, such as IP address.

Installing BRAdmin Light for Windows[®]

- Please make sure that your machine is ON.
- 2 Turn on your computer. Close any applications running before configuration.
- Out the installer CD-ROM into your CD-ROM drive. The opening screen will appear automatically. If the model name screen appears, choose your machine. If the language screen appears, choose your language.
- 4 The CD-ROM main menu will appear. Click Install Other Drivers or Utilities.
- 5 Click BRAdmin Light and follow the on-screen instructions.

Installing BRAdmin Light for Macintosh

You can download Brother's latest BRAdmin Light utility from http://solutions.brother.com/.

Setting the IP address, Subnet Mask and Gateway using BRAdmin Light

NOTE

- You can download Brother's latest BRAdmin Light utility from http://solutions.brother.com/.
- If you require more advanced machine management, use the latest version of BRAdmin Professional 3 utility that is available as a download from <u>http://solutions.brother.com/</u>. This utility is only available for Windows[®] users.
- If you are using a firewall function of anti-spyware or antivirus applications, temporarily disable them. Once you are sure that you can print, re-enable the application.
- Node name: The Node name appears in the current BRAdmin Light window. The default node name of the print server in the machine is "BRNxxxxxxxxx" for a wired network or "BRWxxxxxxxxx" for a wireless network. ("xxxxxxxxxx" is your machine's MAC Address / Ethernet Address.)
- No password is required by default. Enter a password if you have set one and press OK.

Start the BRAdmin Light utility.

■ Windows[®]

Click Start/ All Programs / Brother / BRAdmin Light / BRAdmin Light.

Macintosh

When the download has completed, double click the **BRAdmin Light.jar** file to start the BRAdmin Light utility.

2 BRAdmin Light will search for new devices automatically.

Changing your machine's network settings



Windows®



Macintosh



NOTE

- If the print server is set to its factory default settings (if you do not use a DHCP/BOOTP/RARP server), the device will appear as **Unconfigured** in the BRAdmin Light utility screen.
- You can find the Node Name and MAC Address (Ethernet Address) by printing the Network Configuration Report, see *Printing the Network Configuration Report* on page 39). You can also find the MAC Address from the control panel. (See *Chapter 4: Control panel setup*.)

Choose STATIC from Boot Method. Enter the IP Address, Subnet Mask and Gateway (if needed) for your machine.

Windows®

nfigure TCP/IP Ad	dress			×
etwork				
Bo	ot Method			
) AUTO			
	STATIC			
0	DHCP			
(RARP			
0	BOOTP			
IP Addres	s	~		
Subpat M	ack	-		
Sabilection	334			
<u>G</u> ateway				

Macintosh

O AUTO	
• STATIC	
O DHCP	
O BOOTP	
IP Address	

Click OK.

With the correctly programmed IP address, you will see the Brother machine in the device list.

Other Management Utilities

Your Brother machine has the following management utilities other than the BRAdmin Light utility. You can change your network settings using these utilities.

Web Based Management (web browser)

A standard web browser can be used to change your print server settings using the HTTP (Hyper Text Transfer Protocol) or HTTPS (Hyper Text Transfer Protocol over Secure Socket Layer). (See *How to configure the machine settings using Web Based Management (web browser)* on page 44.)

BRAdmin Professional 3 utility (Windows[®])

BRAdmin Professional 3 is a utility for more advanced management of network connected Brother devices. This utility can search for Brother products on your network and view the device status from an easy to read Explorer style window that changes color identifying the status of each device. You can configure network

and device settings along with the ability to update device firmware from a Windows[®] computer on your LAN. BRAdmin Professional 3 can also log activity of Brother devices on your network and export the log data in an HTML, CSV, TXT, or SQL format.

For users who want to monitor locally connected machines, install the Print Auditor Client software on the client PC. This utility allows you to monitor machines that are connected to a client PC via the USB or parallel interface from BRAdmin Professional 3.

For more information and to download the software, visit us at http://solutions.brother.com/.

NOTE

- Please use the latest version of the BRAdmin Professional 3 utility that is available as a download from http://solutions.brother.com/. This utility is only available for Windows[®] users.
- If you are using a firewall function of anti-spyware or antivirus applications, temporarily disable them. Once you are sure that you can print, configure the software settings following the instructions.
- Node name: The Node name for each Brother device on the network appears in BRAdmin Professional 3. The default Node name is "BRNxxxxxxxxx" for a wired network or "BRWxxxxxxxxx" for a wireless network. ("xxxxxxxxxxx" is your machine's MAC Address / Ethernet Address.)

BRPrint Auditor (Windows[®])

The BRPrint Auditor software brings the monitoring power of Brother network management tools to locally connected machines. This utility allows a client computer to collect usage and status information from a Brother machine connected via the parallel or USB interface. The BRPrint Auditor can then pass this information to another computer on the network running BRAdmin Professional 3. This allows the administrator to check items such as page counts, toner and drum status and the firmware version. In addition to reporting to Brother network management applications this utility can E-mail the usage and status information directly to a predefined E-mail address in a CSV or XML file format (SMTP Mail support required). The BRPrint Auditor utility also supports E-mail notification for reporting warning and error conditions.

3

Configuring your machine for a wireless network

Overview

To connect your machine to your wireless network, we recommend following one of the setup methods outlined in the Quick Setup Guide.

The wireless setup method using the installer CD-ROM and a USB cable is the easiest method for setup.

For additional wireless configuration methods, please read this chapter for more details on how to configure the wireless network settings. For information on TCP/IP settings, see *How to change your machine's network settings (IP address, Subnet mask and Gateway)* on page 4.

NOTE

 To achieve optimum results with normal everyday document printing, place the Brother machine as close to the WLAN access point/router as possible with minimal obstructions. Large objects and walls between the two devices as well as interference from other electronic devices can affect the data transfer speed of your documents.

Due to these factors, wireless may not be the best method of connection for all types of documents and applications. If you are printing large files, such as multi-page documents with mixed text and large graphics, you may want to consider choosing wired Ethernet for a faster data transfer, or USB for the fastest throughput speed.

- Although the Brother machine can be used in both a wired and wireless network, only one connection method can be used at a time. However, a wireless network connection and Wi-Fi Direct connection, or a wired network connection and Wi-Fi Direct connection can be used at the same time.
- For details, please refer to the Wi-Fi Direct[™] Guide located on the Manuals download page for your model on the Brother Solutions Center (<u>http://solutions.brother.com/</u>).
- Before configuring wireless settings, you will need to know your Network name: (SSID) and Network Key. If you are using an enterprise wireless network, you also need to know the User ID and Password.

Confirm your network environment

Connected to a computer with a WLAN access point/router in the network (Infrastructure mode)



1 WLAN access point/Router¹

- ¹ If your computer supports Intel[®] MWT (My WiFi Technology), you can use your computer as a WPS (Wi-Fi Protected Setup) supported access point.
- 2 Wireless network machine (your machine)
- 3 Wireless capable computer connected to the WLAN access point/router
- 4 Wired computer which is not wireless capable connected to the WLAN access point/router with a network cable

Configuration method

The following instructions will offer four methods for configuring your Brother machine in a wireless network environment. Choose the method you prefer for your environment.

■ Wireless configuration temporarily using a USB cable (Recommended)

See Wireless configuration temporarily using a USB cable (Recommended) on page 12.

Wireless configuration using the Setup Wizard from the control panel

See Configuration using the machine's control panel Setup Wizard on page 17.

- One push wireless configuration using WPS (Wi-Fi Protected Setup[™]) or AOSS[™] See One push configuration using WPS (Wi-Fi Protected Setup) or AOSS[™] on page 26.
- PIN Method wireless configuration using WPS

See Configuration using the PIN Method of WPS (Wi-Fi Protected Setup) on page 28.

Connected to a wireless capable computer without a WLAN access point/router in the network (Ad-hoc mode)

This type of network does not have a central WLAN access point/router. Each wireless client communicates directly with each other. When the Brother wireless machine (your machine) is part of this network, it receives all print jobs directly from the computer sending the print data.



1 Wireless network machine (your machine)

2 Wireless capable computer

We do not guarantee the wireless network connection with Windows Server[®] products in Ad-hoc mode. To set up your machine in Ad-hoc mode, see *Configuration in Ad-hoc mode* on page 31.

Wireless configuration temporarily using a USB cable (Recommended)

It is recommended that you use a computer wirelessly connected to your network for this method.

You can remotely configure the machine from the computer on the network using a USB cable (A)¹.



¹ You can configure the wireless settings of the machine using a USB cable temporarily connected to a wired or wireless computer.

IMPORTANT

- The following instructions will install your Brother machine in a network environment using the Brother installer application found on the CD-ROM we have provided with the machine.
- If you have previously configured the wireless settings of the machine, you must reset the LAN settings before you can configure the wireless settings again.

To reset the LAN settings, see Reset the network settings to the factory default on page 39.

- If you are using the Windows[®] Firewall or a firewall function of anti-spyware or antivirus applications, temporarily disable them. Once you are sure that you can print, please re-enable your firewall.
- You need to temporarily use a USB cable during configuration.
- You must know your wireless network settings before you proceed with this installation.

If you are going to connect your Brother machine to your network, we recommend that you contact your system administrator prior to installation.

 If your router uses WEP encryption, enter the key used as the first WEP key. Your Brother machine supports the use of the first WEP key only. Before configuring your machine, we recommend you write down your wireless network settings. You will need this information before you continue with the configuration.

For a personal wireless network configuration

If you are configuring your machine for a smaller wireless network, such as your home environment, record your SSID and the Network key.

If you are using Windows[®] XP or using a network cable to connect your computer with your wireless access point/router, you need to know the SSID and Network Key of your WLAN access point/router before you proceed.

Network name: (SSID)	Network Key

For example:

Network name: (SSID)	Network Key
HELLO	12345678

For an enterprise wireless network configuration

If you are configuring your machine for an IEEE 802.1x supported wireless network, record your Authentication method, Encryption method, User ID and Password.

Network name: (SSID)		

Communication Mode	Authentication method	Encryption mode	User ID	Password
Infrastructure	LEAP	CKIP		
	EAP-FAST/NONE	AES		
		TKIP		
	EAP-FAST/MS-CHAPv2	AES		
		TKIP		
	EAP-FAST/GTC	AES		
		TKIP		
	PEAP/MS-CHAPv2	AES		
		TKIP		
	PEAP/GTC	AES		
		TKIP		
	EAP-TTLS/CHAP	AES		
		TKIP		
	EAP-TTLS/MS-CHAP	AES		
		TKIP		
	EAP-TTLS/MS-CHAPv2	AES		
		TKIP		
	EAP-TTLS/PAP	AES		
		TKIP		
	EAP-TLS	AES		—
		TKIP		_

For example:

Network name: (SSID)	
HELLO	

Communication Mode	Authentication method	Encryption mode	User ID	Password
Infrastructure	EAP-FAST/MS-CHAPv2	AES	Brother	12345678

NOTE

- If you configure your machine using EAP-TLS Authentication, you must install the Client Certificate issued by a CA (Certificate Authority) before you start configuration. Contact your network administrator about the Client Certificate. If you have installed more than one certificate, we recommend you write down the certificate name you want to use. For details on installing the certificate, see Using Certificates for device security on page 54.
- If you verify your machine using the Common Name of the Server Certificate, we recommend you write down the Common Name before you start configuration. Contact your network administrator about the Common Name of the Server Certificate.
- 2 Turn on your computer and put the installer CD-ROM into your CD-ROM drive.

(Windows[®])

1 The opening screen will appear automatically.

Choose your machine and the language.

2 The CD-ROM main menu will appear. Click **Install Printer Driver** and click **Yes** if you accept the license agreements. Follow the on-screen instructions.

NOTE

- If the Brother screen does not appear automatically, go to **Computer** (**My Computer**), double-click the CD-ROM icon, and then double-click **start.exe**.
- When the User Account Control screen appears,

(Windows Vista[®]) click **Allow**.

(Windows[®] 7/Windows[®] 8) click **Yes**.

- 3 Choose Wireless Network Connection, and then click Next.
- 4 Choose Brother Peer-to-Peer Network Printer or Network Shared Printer, and then click Next.
- 5 When you choose **Network Shared Printer**, choose your machine's queue on the **Browse for Printer** screen, and then click **OK**.
- 6 Choose the option of the Firewall setting in the **Firewall/AntiVirus detected** screen, and then click **Next**.

(Macintosh)

- 1 The opening screen will appear automatically. Click **Start Here OSX**. Choose your machine and click **Next**.
- 2 Choose Wireless Network Connection and then click Next.
- 3 Choose Yes, I have a USB cable to use for installation. and then click Next.
- 4 Follow the on-screen instructions to configure the wireless settings.

NOTE

- When the Available Wireless Networks screen appears, if your access point is set to not broadcast the SSID, you can manually add it by clicking the Advanced button. Follow the on-screen instructions for entering the Name (SSID).
- If the wireless setup failure screen appears, click **Retry** and try again.



After you have completed the wireless setup, you can proceed to the printer driver installation. Click Next in the installation dialog box and follow the on-screen instructions.

Configuration using the machine's control panel Setup Wizard

You can use the machine's control panel to configure your wireless network settings. By using the control panel Setup Wizard function, you can easily connect your Brother machine to your wireless network. You must know your wireless network settings before you proceed with this installation.

IMPORTANT

 If you have previously configured the wireless settings of the machine, you must reset the LAN settings before you can configure the wireless settings again.

To reset the LAN settings, see Reset the network settings to the factory default on page 39.

- If your router uses WEP encryption, enter the key used as the first WEP key. Your Brother machine supports the use of the first WEP key only.
- If you are configuring your machine for a smaller wireless network, such as your home environment:
 - To configure your machine for an existing wireless network using the SSID and Network Key (if required), see *Manual configuration from the control panel* on page 18.
 - If your WLAN access point/router is set to not broadcast the SSID name, see Configuring your machine when the SSID is not broadcast on page 20.
 - If you are configuring your machine for Ad-hoc mode, see Configuration in Ad-hoc mode on page 31.
- If you are configuring your machine for an IEEE 802.1x supported wireless network, see Configuring your machine for an enterprise wireless network on page 22.
- If your WLAN access point/router supports WPS or AOSS™, see One push configuration using WPS (Wi-Fi Protected Setup) or AOSS™ on page 26.
- If you are configuring your machine using WPS (PIN Method), see Configuration using the PIN Method of WPS (Wi-Fi Protected Setup) on page 28.

Manual configuration from the control panel

Before configuring your machine, we recommend you write down your wireless network settings. You
will need this information before you continue with the configuration.

Check and record the current wireless network settings.

Network name: (SSID)	Network Key

For example:

Network name: (SSID)	Network Key
HELLO	12345678

NOTE

If your router uses WEP encryption, enter the key used as the first WEP key. Your Brother machine supports the use of the first WEP key only.

- Press ▲ or ▼ to choose Network. Press OK.
- 3 Press ▲ or ▼ to choose WLAN. Press OK.
- Press ▲ or ▼ to choose Setup Wizard. Press OK.
- 5 When WLAN Enable? is displayed, press ▲ to accept. This will start the wireless setup wizard. To cancel, press Cancel.
- 6 The machine will search for available SSIDs. If a list of SSIDs is displayed, use ▲ or ▼ to choose the SSID you wrote down in step ① and then press OK. Do one of the following:
 - If you are using an authentication and encryption method that requires a Network Key, go to step 1.
 - If your authentication method is Open System and your encryption mode is None, go to step 9.
 - If your WLAN access point/router supports WPS, WPS is available appears. Press ▲. To connect your machine using the automatic wireless mode, press ▲ to choose Yes. (If you press ▼ to choose No, go to ⑦ to enter the Network Key.) When Press WPS on rtr appears, press the WPS button on your WLAN access point/router, and then press ▲ twice. Go to step ⑧.

NOTE

When the SSID is not broadcast, see *Configuring your machine when the SSID is not broadcast* on page 20.

Enter the Network Key you wrote down in step 1. (For information on how to enter text: see Quick Setup Guide.)

When you have entered all the characters press **OK**, and then press ▲ for Yes to apply your settings. Go to step ③.

8 Your machine will now try to connect to your wireless network using the information you have entered.

9 If your wireless device is connected successfully, the display shows Connected. The machine will print your machine's wireless status report. If the connection failed, check the error code on the printed report. See Quick Setup Guide: *Troubleshooting*.

OK!

(Windows[®])

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Install Printer Driver from the CD-ROM menu.

(Macintosh)

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Start Here OSX from the CD-ROM menu.

Configuring your machine when the SSID is not broadcast

Before configuring your machine, we recommend you write down your wireless network settings. You will need this information before you continue with the configuration.

Check and record the current wireless network settings.

Network name: (SSID)

Communication Mode	Authentication method	Encryption mode	Network key
Infrastructure	Open system	NONE	—
		WEP	
	Shared key	WEP	
	WPA/WPA2-PSK	AES	
		TKIP ¹	

¹ TKIP is supported for WPA-PSK only.

For example:

Network name: (SSID)	
HELLO	

Communication Mode	Authentication method	Encryption mode	Network key
Infrastructure	WPA2-PSK	AES	12345678

NOTE

If your router uses WEP encryption, enter the key used as the first WEP key. Your Brother machine supports the use of the first WEP key only.

2	Press ▲ or V to choose Network	Ξ.
	Press OK .	

- 3 Press ▲ or ▼ to choose WLAN. Press OK.
- 4 Press ▲ or ▼ to choose Setup Wizard. Press OK.
- 5 When WLAN Enable? is displayed, press ▲ to accept. This will start the wireless setup wizard. To cancel, press Cancel.
- 6 The machine will search for your network and display a list of available SSIDs. Choose <New SSID> using ▲ or ▼. Press OK.

7 Enter the SSID name. (For information on how to enter text: see Quick Setup Guide.) Press OK. 8 Using ▲ or V, choose Infrastructure when instructed. Press OK. 9 Choose the Authentication method using ▲ or ▼, and press OK. Do one of the following: If you chose Open System, go to step (). If you chose Shared Key, go to step (). If you chose WPA/WPA2-PSK, go to step (2). **(10)** Choose the Encryption type None or WEP using \blacktriangle or \forall , and press OK. Do one of the following: If you chose None, go to step (). If you chose WEP, go to step **①**. 1) Enter the WEP key you wrote down in step 1. Press **OK**. Go to step 1. (For information on how to enter text: see Quick Setup Guide.) 12 Choose the Encryption type, TKIP or AES using ▲ or V. Press OK. Go to step (B). 13 Enter the WPA key you wrote down in step 1 and press OK. Go to step 1. (For information on how to enter text: see Quick Setup Guide.) **14** To apply the settings, choose Yes. To cancel, choose No. Do one of the following: If you chose Yes, go to step (). If you chose No, go back to step 6. 15 The machine will attempt to connect to the wireless network you have chosen. **16** If your wireless device is connected successfully, the display shows Connected. The machine will print your machine's wireless status report. If the connection failed, check the error code on the printed report. See Quick Setup Guide: *Troubleshooting*.



(Windows[®])

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Install Printer Driver from the CD-ROM menu.

(Macintosh)

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Start Here OSX from the CD-ROM menu.

Configuring your machine for an enterprise wireless network

Before configuring your machine, we recommend you write down your wireless network settings. You will need this information before you continue with the configuration.

Check and record the current wireless network settings.

Network name: (SSID)

Communication Mode	Authentication method	Encryption mode	User ID	Password
Infrastructure	LEAP	CKIP		
	EAP-FAST/NONE	AES		
		TKIP		
	EAP-FAST/MS-CHAPv2	AES		
		TKIP		
	EAP-FAST/GTC	AES		
		TKIP		
	PEAP/MS-CHAPv2	AES		
		TKIP		
	PEAP/GTC	AES		
		TKIP		
	EAP-TTLS/CHAP	AES		
		TKIP		
	EAP-TTLS/MS-CHAP	AES		
		TKIP		
	EAP-TTLS/MS-CHAPv2	AES		
		TKIP		
	EAP-TTLS/PAP	AES		
		TKIP		
	EAP-TLS	AES		—
		TKIP		—

For example:

Network name: (SSID)	
IELLO	

Communication Mode	Authentication method	Encryption mode	User ID	Password
Infrastructure	EAP-FAST/MS-CHAPv2	AES	Brother	12345678

NOTE

- If you configure your machine using EAP-TLS Authentication, you must install the Client Certificate issued by a CA before you start configuration. Contact your network administrator about the Client Certificate. If you have installed more than one certificate, we recommend you write down the certificate name you want to use. For details on installing the certificate, see *Using Certificates for device security* on page 54.
- If you verify your machine using the Common Name of the Server Certificate, we recommend you write down the Common Name before you start configuration. Contact your network administrator about the Common Name of the Server Certificate.
- Press ▲ or ▼ to choose Network. Press OK.
- 3 Press ▲ or ▼ to choose WLAN. Press OK.
- Press ▲ or ▼ to choose Setup Wizard. Press OK.
- 5 When WLAN Enable? is displayed, press ▲ to accept. This will start the wireless setup wizard. To cancel, press Cancel.
- 6 The machine will search for your network and display a list of available SSIDs. You should see the SSID you wrote down earlier. If the machine finds more than one network use ▲ or ▼ key to choose your network, then press OK. Go to step ①. If your access point is set to not broadcast the SSID, you will have to manually add the SSID name. Go to step ⑦.
- 7 Choose <New SSID> using ▲ or ▼. Press OK. Go to step ⑧.
- 8 Enter the SSID name. (For information on how to enter text: see Quick Setup Guide.) Press OK. Go to step 9.
- 9 Using ▲ or ▼, choose Infrastructure when instructed. Press OK.
- Choose the Authentication method using ▲ or ▼, and press OK. Do one of the following:
 If you chose LEAP, go to step .
 If you chose EAP-FAST, go to step .
 If you chose PEAP, go to step .
 If you chose EAP-TTLS, go to step .
 If you chose EAP-TLS, go to step .
- Choose the Inner Authentication method NONE, CHAP, MS-CHAP, MS-CHAPv2, GTC or PAP using ▲ or V, and press OK.
 Go to step (2).

Configuring your machine for a wireless network

NOTE

Depending on your Authentication method, the Inner Authentication method selections differ.

12 Choose encryption type TKIP or AES using ▲ or ▼, and press OK. Do one of the following: If your Authentication method is EAP-TLS, go to step [®]. For other Authentication methods, go to step [®].

13 The machine will display a list of available Client Certificates. Choose the certificate and go to step

14 Choose the verification method No Verification, CA or CA + Server ID using ▲ or V, and press OK. Do one of the following:

If you chose CA + Server ID, go to step (). For other selections, go to step ().

NOTE

If you have not imported a CA certificate in your machine, the machine will display No Verification. To import a CA certificate, see Using Certificates for device security on page 54.

15 Enter the server ID. (For information on how to enter text: see Quick Setup Guide.) Go to step 6.

- Enter the user ID you wrote down in step ①. Press OK. (For information on how to enter text: see Quick Setup Guide.)
 Do one of the following:
 If your Authentication method is EAP-TLS, go to step ⑧.
 For other Authentication methods, go to step ⑨.
- 17 Enter the Password you wrote down in step 1. Press OK. Go to step 18.

18 To apply the settings, choose Yes. To cancel, choose No. Do one of the following: If you chose Yes, go to step (). If you chose No, go back to step ().

- 19 The machine will attempt to connect to the wireless network you have chosen.
- If your wireless device is connected successfully, the display shows Connected. The machine will print your machine's wireless status report. If the connection failed, check the error code on the printed report. See Quick Setup Guide: *Troubleshooting*.

OK!

(Windows[®])

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Install Printer Driver from the CD-ROM menu.

(Macintosh)

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Start Here OSX from the CD-ROM menu.

One push configuration using WPS (Wi-Fi Protected Setup) or AOSS™

You can use WPS or AOSS[™] from the control panel menu to configure your wireless network settings if your WLAN access point/router (A) supports either WPS (PBC ¹) or AOSS[™].



¹ Push Button Configuration

IMPORTANT

- If you are going to connect your Brother machine to your network, we recommend that you contact your system administrator prior to installation. You must know your wireless network settings before you proceed with this installation.
- If you have previously configured the wireless settings of the machine, you must reset the LAN settings before you can configure the wireless settings again.

To reset the LAN settings, see Reset the network settings to the factory default on page 39.



Press ▲ or ▼ to choose WLAN. Press OK.

3 Press ▲ or ▼ to choose wPS/AOSS. Press OK. When WLAN Enable? is displayed, press ▲ to accept. This will start the wireless setup wizard. To cancel, press Cancel.

- 5 When the LCD shows Press Key on rtr, press the WPS or AOSS[™] button on your wireless access point/router. See the user's guide for your wireless access point/router for instructions. Then press ▲ and your machine will now automatically detect which mode (WPS or AOSS[™]) your wireless access point/router uses and try to connect to your wireless network.
- 6 If your wireless device is connected successfully, the display shows Connected. The machine will print your machine's wireless status report. If the connection failed, check the error code on the printed report. See Quick Setup Guide: *Troubleshooting*.

OK!

(Windows[®])

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Install Printer Driver from the CD-ROM menu.

(Macintosh)

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Start Here OSX from the CD-ROM menu.

Configuration using the PIN Method of WPS (Wi-Fi Protected Setup)

If your WLAN access point/router supports WPS (PIN Method), you can configure the machine easily. The PIN (Personal Identification Number) Method is one of the connection methods developed by the Wi-Fi

Alliance[®]. By inputting a PIN which is created by an Enrollee (your machine) to the Registrar (a device that manages the wireless LAN), you can setup the WLAN network and security settings. See the user's guide supplied with your WLAN access point/router for instructions on how to access the WPS mode.

Connection when the WLAN access point/router (A) doubles as a Registrar ¹.



Connection when another device (C), such as a computer is used as a Registrar¹.



¹ The Registrar is a device that manages the wireless LAN.

NOTE

Routers or access points that support WPS have a symbol as shown below.



Configuring your machine for a wireless network

- Press ▲ or ▼ to choose Network. Press OK.
- Press ▲ or ▼ to choose WLAN. Press OK.
- 3 Press ▲ or ▼ to choose WPS w/PIN Code. Press OK.
- When WLAN Enable? is displayed, press ▲ to accept. This will start the wireless setup wizard. To cancel, press Cancel.
- 5 The LCD will show an 8 digit PIN and the machine starts searching for a WLAN access point/router.
- 6 Using a computer that is on the network, type "http://access point's IP address/" into your browser. (Where "access point's IP address" is the IP address of the device that is used as the Registrar ¹) Go to the WPS setting page and input the PIN which the LCD shows in step ③ to the Registrar and follow the on-screen instructions.
 - ¹ The Registrar is normally the WLAN access point/router.

NOTE

The setting page is different, depending on the brand of WLAN access point/router. See the instruction supplied with your WLAN access point/router.

Windows Vista[®]/Windows[®] 7

If you are using your computer as a Registrar, follow these steps:

NOTE

- To use a Windows Vista[®] or Windows[®] 7 computer as a Registrar, you need to register it to your network in advance. See the instruction supplied with your WLAN access point/router.
- If you use Windows[®] 7 as a Registrar, you can install the printer driver after the wireless configuration by following the on-screen instructions. If you want to install the full driver and software package: see Quick Setup Guide.

- (Windows Vista[®])
 Click the button and then Network.
 (Windows[®] 7)
 Click the button and then Devices and Printers.
- 2 (Windows Vista[®]) Click Add a wireless device. (Windows[®] 7) Click Add a device.
- 3 Choose your machine and click **Next**.
- 4 Input the PIN which the LCD shows in step (5), and then click **Next**.
- **5** Choose your network that you want to connect to, and then click **Next**.
- 6 Click Close.
- 7 If your wireless device is connected successfully, the display shows Connected. The machine will print your machine's wireless status report. If the connection failed, check the error code on the printed report. See Quick Setup Guide: *Troubleshooting*.

ΟΚ!

(Windows[®])

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Install Printer Driver from the CD-ROM menu.

(Macintosh)

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Start Here OSX from the CD-ROM menu.
Configuration in Ad-hoc mode

Using configured SSID

If you are trying to pair the machine to a computer that is already in Ad-hoc mode with a configured SSID, you will need to complete the following steps:

Before configuring your machine, we recommend you write down your wireless network settings. You will need this information before you continue with the configuration.

Check and record the current wireless network settings of your computer you are connecting with.

NOTE

The wireless network settings of the computer you are connecting with must be set to Ad-hoc mode with an SSID already configured. For instructions on how to configure your computer to Ad-hoc mode, please see the information included with your computer or contact your network administrator.

Network name: (SSID)

Communication Mode	Encryption mode	Network key
Ad-hoc	NONE	_
	WEP	

For example:

Network name: (SSID)	
HELLO	

Communication Mode	Encryption mode	Network key
Ad-hoc	WEP	12345

NOTE

Your Brother machine supports the use of the first WEP key only.

 Press ▲ or ▼ to choose Network. Press OK.

- 3 Press ▲ or ▼ to choose WLAN. Press **OK**.
- 4 Press ▲ or ▼ to choose Setup Wizard. Press OK.
- 5 When WLAN Enable? is displayed, press ▲ to accept. This will start the wireless setup wizard. To cancel, press Cancel.

6 The machine will search for your network and display a list of available SSIDs.
 If a list of SSIDs is displayed, press ▲ or ▼ to choose the SSID you wrote down in step ●. Select the SSID you want to connect with.
 Press OK.
 Do one of the following:

If you chose WEP, go to step **()**.

7 Enter the WEP key you wrote down in step 1. Press OK. Go to step 3. (For information on how to enter text: see Quick Setup Guide.)

To apply the settings, choose Yes. To cancel, choose No. Do one of the following:
 If you chose Yes, go to step ③.
 If you chose No, go back to step ⑤.

- 9 The machine will attempt to connect to the wireless device you have chosen.
- If your wireless device is connected successfully, the display shows Connected. The machine will print your machine's wireless status report. If the connection failed, check the error code on the printed report. See Quick Setup Guide: *Troubleshooting*.
- OK!

(Windows[®])

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Install Printer Driver from the CD-ROM menu.

(Macintosh)

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Start Here OSX from the CD-ROM menu.

Using a New SSID

If you are using a new SSID then all other devices will connect using the SSID that you assign to the machine in the following steps. You will need to connect to this SSID from your computer when it is placed in Ad-hoc mode.



- 3 Press ▲ or ▼ to choose Setup Wizard. Press OK.
- When WLAN Enable? is displayed, press ▲ to accept. This will start the wireless setup wizard. To cancel, press Cancel.

- 5 The machine will search for your network and display a list of available SSIDs. Choose <New SSID> using ▲ or ▼. Press OK.
- 6 Enter the SSID name. (For information on how to enter text: see Quick Setup Guide.) Press **OK**.
- Vising ▲ or ▼, choose Ad-hoc when instructed. Press OK.
- 8 Choose the Encryption type None or WEP using ▲ or ▼, and press OK. Do one of the following: If you chose None, go to step ①. If you chose WEP, go to step ③.
- 9 Enter the WEP key. Press OK. Go to step 1. (For information on how to enter text: see Quick Setup Guide.)

NOTE

Your Brother machine supports the use of the first WEP key only.

- To apply the settings, choose Yes. To cancel, choose No. Do one of the following:
 If you chose Yes, go to step ①.
 If you chose No, go back to step ⑤.
- 11 The machine will attempt to connect to the wireless device you have chosen.
- 12 If your wireless device is connected successfully, the display shows Connected. The machine will print your machine's wireless status report. If the connection failed, check the error code on the printed report. See Quick Setup Guide: *Troubleshooting*.
- OK!

(Windows[®])

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Install Printer Driver from the CD-ROM menu.

(Macintosh)

You have completed the wireless network setup. If you would like to continue installing the printer driver, please choose Start Here OSX from the CD-ROM menu.

4 Control panel setup

Overview

Your machine has one backlit Liquid Crystal Display (LCD), seven keys on the control panel. The LCD is a 16 character single line display.



With the control panel you can do the following:

Change the print server settings using the control panel

See Network menu on page 35.

Reset the network settings to the factory default

See Reset the network settings to the factory default on page 39.

Print a Network Configuration Report

See Printing the Network Configuration Report on page 39.

Print a WLAN report

See Printing the WLAN report on page 40.

Network menu

The Network menu selections of the control panel allow you to set up the Brother machine for your network configuration. (For more information on how to use the control panel: see User's Guide.) Press any of the Menu keys (▲, ▼, OK, or Back) to display the main menu. Then press ▲ or ▼ to choose Network. Proceed to the menu selection you wish to configure. (For additional information on the menu, see *Function table and default factory settings* on page 41.)

Please note that the machine is supplied with the BRAdmin Light utility ¹ or Web Based Management applications, which also can be used to configure many aspects of the network. (See *Other Management Utilities* on page 7.)

¹ For Macintosh users, you can download Brother's latest BRAdmin Light utility from <u>http://solutions.brother.com/</u>.

TCP/IP

If you connect the machine with a network cable to your network, use the Wired LAN menu selections. If you connect the machine to a wireless Ethernet network, use the WLAN menu selections.

Boot Method

This selection controls how the machine obtains an IP address.

Auto mode

In this mode, the machine will scan the network for a DHCP server. If it can find one, and if the DHCP server is configured to allocate an IP address to the machine, then the IP address supplied by the DHCP server will be used. If no DHCP server is available, the IP Address is set using the APIPA protocol. After the machine is initially powered ON, it may take a few minutes for the machine to scan the network for a server.

Static mode

In this mode the machine's IP address must be manually assigned. Once entered the IP address is locked to the assigned address.

NOTE

If you do not want your print server configured via DHCP, BOOTP, or RARP, you must set the Boot Method to Static so that the print server has a static IP address. This will prevent the print server from trying to obtain an IP address from any of these systems. To change the Boot Method, use the machine's control panel, BRAdmin Light utility, or Web Based Management.

IP Address

This field displays the current IP address of the machine. If you have chosen a Boot Method of Static, enter the IP address that you wish to assign to the machine (check with your network administrator for the IP address to use). If you have chosen a method other than Static, the machine will attempt to determine its IP address using the DHCP or BOOTP protocols. The default IP address of your machine will probably be incompatible with the IP address numbering scheme of your network. We recommend that you contact your network administrator for an IP address for the network the unit will be connected on.

Control panel setup

Subnet Mask

This field displays the current subnet mask used by the machine. If you are not using DHCP or BOOTP to obtain the subnet mask, enter the desired subnet mask. Check with your network administrator for the subnet mask to use.

Gateway

This field displays the current gateway or router address used by the machine. If you are not using DHCP or BOOTP to obtain the gateway or router address, enter the address you wish to assign. If you do not have a gateway or router, leave this field blank. Check with your network administrator if you are unsure.

IP Boot Tries

This field displays the number of attempts the machine will try to obtain an IP address when the Boot Method is set to any setting except Static.

APIPA

The setting of On will cause the print server to automatically allocate a Link-Local IP address in the range (169.254.1.0 - 169.254.254.255) when the print server cannot obtain an IP address through the Boot Method you have set. (See *Boot Method* on page 35.) Choosing Off means the IP address does not change, when the print server cannot obtain an IP address through the Boot Method you have set.

IPv6

This machine is compatible with IPv6, the next generation Internet protocol. If you want to use the IPv6 protocol, choose On. The default setting for IPv6 is Off. For more information on the IPv6 protocol, visit <u>http://solutions.brother.com/</u>.

- If you set IPv6 to On, turn off the power switch and then turn it back on to enable this protocol.
- After you choose IPv6 On, this setting will be applied to both the wired and wireless LAN interface.

Ethernet (wired network only)

Ethernet link mode. Auto allows the print server to operate in 100BASE-TX full or half duplex, or in 10BASE-T full or half duplex mode by auto negotiation.

NOTE

If you set this value incorrectly, you may not be able to communicate with your print server.

Wired Status

This field displays the current wired network status.

Setup Wizard (wireless network only)

The Setup Wizard guides you through the wireless network configuration. (For more information: see Quick Setup Guide or *Manual configuration from the control panel* on page 18.)

WPS (Wi-Fi Protected Setup)/AOSS[™] (wireless network only)

If your WLAN access point/router supports either WPS (PBC ¹) or AOSS[™] (Automatic Wireless mode), you can configure the machine easily. (For more information: see Quick Setup Guide or *One push configuration using WPS (Wi-Fi Protected Setup) or AOSS*[™] on page 26.)

¹ Push Button Configuration

WPS (Wi-Fi Protected Setup) w/PIN Code (wireless network only)

If your WLAN access point/router supports WPS (PIN Method), you can configure the machine easily. (For more information, see *Configuration using the PIN Method of WPS (Wi-Fi Protected Setup)* on page 28.)

WLAN Status

Status

This field displays the current wireless network status.

Signal

This field displays the current wireless network signal strength.

Control panel setup

Channel

This field displays the current wireless network channel.

Speed

This field displays the current wireless network speed.

SSID

This field displays the current wireless network SSID. The display shows up to 32 characters of the SSID name.

Comm. Mode

This field displays the current wireless network communication mode.

MAC Address

The MAC address is a unique number assigned for the machine's network interface. You can check your machine's MAC address from the control panel.

Set to Default

The Set to Default allows you to reset each wired or wireless settings to the factory default. If you want to reset both wired and wireless settings, see *Reset the network settings to the factory default* on page 39.

Wired Enable

If you want to use the wired network connection, set Wired Enable to On.

WLAN Enable

If you want to use the wireless network connection, set WLAN Enable to On.

NOTE

If a network cable is connected to your machine, set Wired Enable to Off.

Reset the network settings to the factory default

You can reset the print server back to its default factory settings (resetting all information such as the password and IP address information).

NOTE

- This function resets all wired and wireless network settings to the factory default.
- You can also reset the print server back to its factory default settings using the BRAdmin applications or Web Based Management. (For more information, see *Other Management Utilities* on page 7.)
- Press ▲ or ▼ to choose Network. Press OK.
- Press ▲ or ▼ to choose Network Reset. Press OK.
- 3 Press ▲ to choose Yes for reboot.
- The machine will re-start.

Printing the Network Configuration Report

NOTE

Node name: The Node name appears on the Network Configuration Report. The default node name is "BRNxxxxxxxxxx" for a wired network or "BRWxxxxxxxxx" for a wireless network. ("xxxxxxxxxx" is your machine's MAC Address / Ethernet Address.)

The Network Configuration Report prints a report listing all the current network configuration including the network print server settings.

- Press ▲ or ▼ to choose Machine Info.. Press OK.
- 2 Press ▲ or ▼ to choose Print NetSetting. Press OK.

NOTE

If the IP Address on the Network Configuration Report shows 0.0.0.0, wait for one minute and try again.

Printing the WLAN report

The Print WLANReport prints your machine's wireless status report. If the wireless connection failed, check the error code on the printed report. See Quick Setup Guide: Troubleshooting.



1 Press ▲ or V to choose Machine Info... Press OK.



Function table and default factory settings

Factory settings are shown in Bold with asterisk.

Main menu	Submenu	Menu Selections Options		Options
Network	Wired LAN	TCP/IP	Boot Method	Auto*
				Static
				RARP
				BOOTP
				DHCP
			IP Address	(000.000.000.000)* ¹
			Subnet Mask	(000.000.000.000)* ¹
			Gateway	(000.000.000.000)* ¹
			IP Boot Tries	0/1/2/ 3* /32767
			APIPA	On*
				Off
			IPv6	On
				Off*
		Ethernet	—	Auto*
				100B-FD
				100B-HD
				10B-FD
				10B-HD
		Wired Status	—	Active 100B-FD
				Active 100B-HD
				Active 10B-FD
				Active 10B-HD
				Inactive
				Wired OFF
		MAC Address	—	—
		Set to Default	Restores wired networl to the factory default.	k settings of the internal print server
		Wired Enable	—	On*
				Off

Main menu	Submenu	Menu Selections Options		
Network	WLAN	TCP/IP	Boot Method	Auto*
(continued)				Static
				RARP
				BOOTP
				DHCP
			IP Address	(000.000.000.000)* ¹
			Subnet Mask	(000.000.000.000)* ¹
			Gateway	(000.000.000.000)* ¹
			IP Boot Tries	0/1/2/ 3* /32767
			APIPA	On*
				Off
			IPv6	On
				Off*
		Setup Wizard	—	
		WPS/AOSS	—	—
		WPS w/PIN Code	—	—
		WLAN Status	Status	Active(11n)
				Active(11b)
				Active(11g)
				Wired LAN Active
				WLAN OFF
				AOSS Active
				Connection Fail
			Signal	(Appears only when
			Channel	WLAN Enable is On.)
			Speed	
			SSID	
			Comm. Mode	Ad-hoc
				Infrastructure
		MAC Address	—	—
		Set to Default	Restores wireless netw server to the factory de	vork settings of the internal print efault.
		WLAN Enable	—	On
				Off*

1

Main menu	enu Submenu Menu Sel			Options	
Network	Wi-Fi Direct ²	Push Button	—	—	
(continued)		PIN Code	—	—	
		Manual	—	—	
		Group Owner	—	On	
				Off*	
		Device Info.	Device Name	—	
			SSID	—	
			IP Address	—	
		Status Info.	Status	G/O Active(**)	
				** = number of devices	
				Client Active	
				Not Connected	
				Off	
				Wired LAN Active	
			Signal	Strong	
				Medium	
				Weak	
				None	
				(When Group Owner is On, the signal is set to Strong.)	
			Channel	—	
			Speed	—	
		I/F Enable	—	On	
				Off*	
	Network Reset	Restores all network settings of the internal p		print server to the factory default.	

On connection to the network, the machine will automatically set the IP address and Subnet Mask to values appropriate for your network.

² For details, please see the Wi-Fi Direct[™] Guide located on the Manuals download page for your model on the Brother Solutions Center (<u>http://solutions.brother.com/</u>).

5

Web Based Management

Overview

A standard Web Browser can be used to manage your machine using the HTTP (Hyper Text Transfer Protocol) or HTTPS (Hyper Text Transfer Protocol over Secure Socket Layer). You can perform the function listed or get the following information from a machine on your network using a web browser.

- Machine status information
- Change network settings such as TCP/IP information
- Configure Secure Function Lock 2.0 (See Secure Function Lock 2.0 on page 46.)
- Configure Store Print Log to Network (See Store Print Log to Network on page 49.)
- Software version information of the machine and print server
- Change network and machine configuration details

NOTE

We recommend to use Windows[®] Internet Explorer[®] 8.0/9.0 or Safari 5.0 for Macintosh. Please also make sure that JavaScript and Cookies are always enabled in whichever browser you use. If a different web browser is used, make sure it is compatible with HTTP 1.0 and HTTP 1.1.

You must use the TCP/IP protocol on your network and have a valid IP address programmed into the print server and your computer.

How to configure the machine settings using Web Based Management (web browser)

A standard web browser can be used to change your print server settings using the HTTP (Hyper Text Transfer Protocol) or HTTPS (Hyper Text Transfer Protocol over Secure Socket Layer).

- We recommend to use HTTPS protocol for your security when configuring the settings using Web Based Management.
- When you use the HTTPS protocol for Web Based Management configuration, your browser will display a warning dialog box.
- 1 Start your web browser.
- 2 Type "http://machine's IP address/" into your browser's address bar (where "machine's IP address" is the IP address of the machine or the print server name).
 - For example: http://192.168.1.2/

NOTE

- If you are using a Domain Name System or enable a NetBIOS name, you can enter another name such as "SharedPrinter" instead of the IP address.
 - For example: http://SharedPrinter/
 - If you enable a NetBIOS name, you can also use the node name.
 - For example: http://brnxxxxxxxxx/

Network Configuration Report (See Printing the Network Configuration Report on page 39).

• For Macintosh users, you can have easy access to the Web Based Management System by clicking the machine icon on the **Status Monitor** screen. For more information: see User's Guide.

 $\frac{3}{2}$ No password is required by default. If you have previously set a password, enter it and press \rightarrow .

4 You can now change the print server settings.

NOTE

If you have changed the protocol settings, restart the machine after clicking **Submit** to activate the configuration.

Setting a password

We recommend setting a login password to prevent unauthorized access to the Web Based Management.

1 Click Administrator.

- Enter the password you want to use (up to 32 characters).
- 3 Re-enter the password in Confirm New Password box.

4 Click Submit.

From the next time you access the Web Based Management, enter the password in the Login box, and then click \rightarrow .

After configuring the settings, logout by clicking \rightarrow .

NOTE

You can also set a password by clicking **Please configure the password** on the machine's web page if you are not setting a login password.

Secure Function Lock 2.0

Secure Function Lock 2.0 from Brother helps you to save money and increase security by restricting the functions available on your Brother machine.

Secure Function Lock allows you to configure passwords for selected users, granting them access to some, or all, of these functions, or limiting them to a page limit. This means that only authorized people can use them.

You can configure and change the following Secure Function Lock 2.0 settings using Web Based Management or BRAdmin Professional 3 (Windows[®] only).

- Print ¹²
- Color Print ¹²³
- Page Limit ³
- Page Counter ³
- ¹ Print includes print jobs sent via AirPrint, Google Cloud Print and Brother iPrint&Scan.
- ² If you register the PC user login names, you can restrict PC print without the user entering a password. For more detail, see Restricting PC print by PC user login name on page 47.
- ³ Available for **Print**.

How to configure the Secure Function Lock 2.0 settings using Web Based Management (web browser)

Basic configuration

- Click Administrator on the machine's web page, and then click Secure Function Lock.
- 2 Choose **On** from **Function Lock**.
- 3 Enter an up to 15 digit alphanumeric group name or user name in the **ID Number/Name** box, and then enter a four-digit password in the **PIN** box.
- Uncheck the functions that you want to restrict in the **Print Activities** box. If you want to configure the maximum page count, check the **On** check box in **Page Limit**, and then enter the number in the **Max.** box. Then click **Submit**.

NOTE

If you want to restrict the PC printing by PC user login name, click **PC Job Restriction by Login Name** and configure the settings. (See *Restricting PC print by PC user login name* on page 47.)

Setting up public mode

You can set up the public mode to restrict what functions are available for public users. Public users do not need to enter a password to access the features made available through this setting.

NOTE

Public mode includes print jobs sent via AirPrint, Google Cloud Print and Brother iPrint&Scan.

1 Uncheck the check box for the function that you want to restrict in the **Public Mode** box.

2 Click Submit.

Restricting PC print by PC user login name

By configuring this setting, the machine can authenticate by PC user login name to allow a print job from a registered computer.

- 1 Click PC Job Restriction by Login Name.
- 2 Choose On from PC Job Restriction.
- Choose the ID Number you set in the ID Number/Name in step ③. See Basic configuration on page 46 from the ID Number pull-down list for each Login Name and then enter the PC user login name in the Login Name box.

4 Click Submit.

NOTE

- If you want to restrict PC print per group, choose the same ID Number for each PC login name you want in the group.
- If you are using the PC login name feature, you must also make sure that the **Use PC Login Name** box in the printer driver is checked. For more information about the printer driver: see User's Guide.
- The Secure Function Lock feature does not support the BR-Script3 driver for printing.

Other features

You can set up the following features in Secure Function Lock 2.0:

All Counter Reset

You can reset the page counter by clicking All Counter Reset.

Export to CSV file

You can export the current page counter, including **ID Number/Name** information, as a CSV file.

Last Counter Record

The machine retains the page count after the counter has been reset.

How to configure the SNTP protocol using Web Based Management

SNTP is the protocol used to synchronize the time used by the machine for authentication with the SNTP time server.



1 Click **Network**, and then click **Protocol**.

Select the **SNTP** check box to activate the setting.

Click Advanced Setting.

Status

Displays whether the SNTP server settings are enabled or disabled.

SNTP Server Method

Choose AUTO or STATIC.

AUTO

If you have a DHCP server on your network, the SNTP server will automatically obtain the address from that server.

STATIC

Enter the address you want to use.

Primary SNTP Server Address, Secondary SNTP Server Address

Enter the server address (up to 64 characters).

The Secondary SNTP server address is used as a backup to the Primary SNTP server address. If the Primary server is unavailable, the machine will contact the Secondary SNTP server. If you have a Primary SNTP server, but no Secondary SNTP server, simply leave this field blank.

Primary SNTP Server Port, Secondary SNTP Server Port

Enter the Port number (1 to 65535).

The Secondary SNTP server port is used as a backup to the Primary SNTP server port. If the Primary port is unavailable, the machine will contact the Secondary SNTP port. If you have a Primary SNTP port, but no Secondary SNTP port, simply leave this field blank.

Synchronization Interval

Enter the number of hours between server synchronization attempts (1 to 168 hours).

Synchronization Status

You can confirm the latest synchronization status.

Click **Submit** to apply the settings.

Store Print Log to Network

The Store Print Log to Network feature allows you to save the print log file from your Brother machine to a network server using CIFS¹. You can record the ID, type of print job, job name, user name, date, time and the number of printed pages for every print job.

¹ CIFS is the Common Internet File System protocol that runs over TCP/IP allowing computers on a network to share files over an intranet or the Internet.

The following print functions are recorded in the print log:

Print jobs from your computer

NOTE

- The Store Print Log to Network feature supports Kerberos Authentication and NTLMv2 Authentication.
 You must configure the SNTP protocol (network time server) for Authentication. (For information about setting SNTP, see How to configure the SNTP protocol using Web Based Management on page 48.)
- You can set the file type to **TXT** or **CSV** when storing a file to the server.

How to configure the Store Print Log to Network settings using Web Based Management (web browser)

1 Click Administrator on the machine's web page, and then click Store Print Log to Network.

2 Choose **On** from **Print Log**.

3 You can configure the following settings using a web browser.

Host Address

The Host Address is the Host name of the CIFS server. Enter the Host Address (for example: mypc.example.com) (up to 64 characters) or the IP address (for example: 192.168.56.189).

Store Directory

Enter the destination folder where your log will be stored on the CIFS server (for example: brother\abc) (up to 60 characters).

File Name

Enter the file name you want to use for the print log up to 15 characters.

File Type

Choose the file type for the print log **TXT** or **CSV**.

Auth. Method

Choose the authentication method required for access to the CIFS server **Auto**, **Kerberos**¹, or **NTLMv2**².

- Kerberos is an authentication protocol which allows devices or individuals to securely prove their identity to network servers using a single sign-on.
- ² NTLMv2 is the authentication method used by Windows to log into servers.

- Auto: If you choose Auto, the machine will initially search for a Kerberos server. If the Kerberos server is not detected, NTLMv2 will be used for the authentication method.
- Kerberos: Choose Kerberos to use Kerberos Authentication only.
- NTLMv2: Choose NTLMv2 to use NTLMv2 Authentication only.

For Kerberos and NTLMv2 Authentication, you must also configure the SNTP protocol (network time server).

For configuring the SNTP settings, see How to configure the SNTP protocol using Web Based Management on page 48.

Username

Enter the Username for the authentication up to 96 characters.

NOTE

If the username is part of a domain, please input the username in one of the following styles: user@domain or domain/user.

Password

Enter the password for the authentication up to 32 characters.

Kerberos Server Address (if needed)

Enter the KDC Host Address (for example: mypc.example.com) (up to 64 characters) or the IP address (for example: 192.168.56.189).

- Error Detection Setting (See Error Detection Setting on page 51.)
- 4 In the **Connection Status**, you can confirm the last log status. For more information, see *Understanding Error Messages* on page 52.
- Click Submit to display the Test Print Log to Network page.
 To test your settings, click Yes and go to step ⁽⁶⁾.
 To skip the test, click No. Your settings will be submitted automatically.
- 6 The machine will test your settings.
- 7 If your settings are accepted, Test OK appears on the page. If Test Error appears, check all settings, and then click Submit to display the Test page again.

Error Detection Setting

You can choose what action is taken when the print log cannot be stored to the server due to a network error.

Choose Cancel Print or Ignore Log & Print in the Error Detection Setting of Store Print Log to Network.

Cancel Print

If you choose **Cancel Print**, the print jobs are canceled when the print log cannot be stored to the server.

■ Ignore Log & Print

If you choose **Ignore Log & Print**, the machine prints the document even if the print log cannot be stored to the server.

When the store print log function has recovered, the print log is recorded as follows:

- If the log cannot be stored at the end of printing, the print log except the number of printed pages will be recorded. (1)
- If the Print Log cannot be stored at the beginning and the end of printing, the print log of the job will not be recorded. When the function has recovered, the occurrence of an error is shown in the log. (2)

Example of the print log:



- Click Submit to display the Test Print Log to Network page. To test your settings, click Yes and go to step 3. To skip the test, click No. Your settings will be submitted automatically.
- 3 The machine will test your settings.
- If your settings are accepted, Test OK appears on the page. If Test Error appears, check all settings, and then click Submit to display the Test page again.

Understanding Error Messages

You can confirm the error status on the LCD of your machine or **Connection Status** in Web Based Management.

Server Timeout, contact your administrator.

This message will appear when you cannot connect to the server. Make sure that:

- · Your server address is correct.
- Your server is connected to the network.
- The machine is connected to the network.

Authentication Error, contact your administrator.

The message will appear when your **Authentication Setting** is not correct. Make sure that:

- The Username ¹ and Password in Authentication Setting are correct.
 - ¹ If the username is part of a domain, please input the username in one of the following styles: user@domain or domain\user.
- The time of the log file server matches the time from the SNTP server settings.
- The SNTP time server settings are configured correctly so the time matches the time used for authentication by Kerberos or NTLMv2.

File Access Error, contact your administrator.

This message will appear when you cannot access the destination folder. Make sure that:

- The store directory name is correct.
- The store directory is write-enabled.
- The File is not locked.

■ Wrong Date&Time, contact your administrator.

This message will appear when your machine does not obtain the time from the SNTP time server. Using Web Based Management, confirm that the settings to access the SNTP time server are correctly configured.

NOTE

If you choose the **Cancel Print** option in Web Based Management the Log Access Error message will remain on the LCD for about 30 seconds.

6

Security features

Overview

In today's world, there are many security threats to your network and the data that travels over it. Your Brother machine employs some of the latest network security and encryption protocols available today. These network features can be integrated into your overall network security plan to help protect your data and prevent unauthorized access to the machine. This chapter explains how to configure them.

You can configure the following security features:

- Managing your network machine securely using SSL/TLS (See Managing your network machine securely using SSL/TLS on page 66.)
- Managing your network machine securely using SNMPv3 protocol (See Secure Management using Web Based Management (web browser) on page 66 or Secure Management using BRAdmin Professional 3 (Windows[®]) on page 68.)
- Secure Management using BRAdmin Professional 3 (Windows[®]) (See Secure Management using BRAdmin Professional 3 (Windows[®]) on page 68.)
- Printing documents securely using SSL/TLS (See Printing documents securely using SSL/TLS on page 69.)
- Sending an E-mail securely (See Sending an E-mail securely on page 70.)
- Using IEEE 802.1x authentication (See Using IEEE 802.1x authentication on page 72.)
- Certificate for secure management (See Using Certificates for device security on page 54.)
- Managing multiple certificates (See Managing multiple certificates on page 65.)

NOTE

We recommend to disable the Telnet, FTP and TFTP protocols. Accessing the machine using these protocols is not secure. (For how to configure the protocol settings, see *How to configure the machine settings using Web Based Management (web browser)* on page 44.)

Using Certificates for device security

Your Brother machine supports the use of multiple security certificates allowing secure management, authentication and communication with the machine. The following security certificate features can be used with the machine.

- SSL/TLS communication
- IEEE 802.1x authentication
- SSL communication for SMTP/POP3

The Brother machine supports the following certificates.

Pre-installed certificate

Your machine has a pre-installed self-signed certificate.

Using this certificate, you can easily use the SSL/TLS communication without creating or installing a certificate.

NOTE

The pre-installed self-signed certificate cannot protect your communication from spoofing. We recommend using a certificate that is issued by a trusted organization for better security.

Self-signed certificate

This print server issues its own certificate. Using this certificate, you can easily use the SSL/TLS communication without having a certificate from a CA. (See *Creating and installing a certificate* on page 56.)

Certificate from a CA

There are two methods for installing a certificate from a CA. If you already have a certificate from a CA or if you want to use a certificate from an external trusted CA:

- When using a CSR (Certificate Signing Request) from this print server. (See *How to create a CSR* on page 57.)
- When importing a certificate and a private key. (See *Import and export the certificate and private key* on page 63.)
- CA certificate

If you use a CA certificate that identifies the CA (Certificate Authority) itself and owns its private key, you must import a CA certificate from the CA, prior to the configuration. (See *Import and export a CA certificate* on page 64.)

- If you are going to use SSL/TLS communication, we recommend that you contact your system administrator first.
- When you reset the print server back to its default factory settings, the certificate and the private key that are installed will be deleted. If you want to keep the same certificate and the private key after resetting the print server, export them before resetting and re-install them. (See *How to export the self-signed certificate, the certificate issued by a CA, and the private key* on page 64.)

Configure certificate using Web Based Management

This feature can be configured using Web Based Management only. Follow these steps to access the configure certificate page using Web Based Management.

- 1 Start your web browser.
- 2 Type "http://machine's IP address/" into your browser's address bar (where "machine's IP address" is the IP address of the machine or the print server name).
 - For example: http://192.168.1.2/
- 3 No password is required by default. If you have previously set a password, enter it and press ⇒.
- 4 Click Network.
- 5 Click Security.
- 6 Click Certificate.
- 7 You can configure the certificate settings from the screen below.

Certificate List			
Certificate Name	Issuer	Validity Period	
Create Self-Signed Co	ertificate>>		
Create CSR>>			
Install Certificate			
Import Certificate and	I Private Key>>		

- The functions that are grayed and unlinked indicate they are not available.
- For more information on configuration, see the Help text in the Web Based Management.

Creating and installing a certificate

Step by step chart for creating and installing a certificate



How to create and install a self-signed certificate

- 1 Click Create Self-Signed Certificate on the Certificate page.
- 2 Enter a **Common Name** and a **Valid Date**.

- The length of the **Common Name** must be less than 64 characters. Enter an identifier such as an IP address, node name, or domain name to use when accessing this machine through SSL/TLS communication. The node name is displayed by default.
- A warning will pop-up if you use the IPPS or HTTPS protocol and enter a different name in the URL than the Common Name that was used for the self-signed certificate.
- 3 You can choose the **Public Key Algorithm** and **Digest Algorithm** settings from the pull-down list. The default settings are **RSA(2048bit)** for **Public Key Algorithm** and **SHA256** for **Digest Algorithm**.
- Click Submit.
- 5 The self-signed certificate is created and saved in your machine's memory successfully. To use SSL/TLS communication, the self-signed certificate also needs to be installed on your computer. For more information, see *How to install the self-signed certificate on your computer* on page 59.

How to create a CSR



Click Create CSR on the Certificate page.

2 Enter a **Common Name** and your information, such as **Organization**.

NOTE

- We recommend that the Root Certificate from the CA be installed on your computer before creating the CSR.
- The length of the Common Name must be less than 64 characters. Enter an identifier such as an IP address, node name, or domain name to use when accessing this printer through SSL/TLS communication. The node name is displayed by default. The **Common Name** is required.
- A warning will pop-up if you enter a different name in the URL than the Common Name that was used for the certificate.
- The length of the Organization, the Organization Unit, the City/Locality and the State/Province must be less than 64 characters.
- The Country/Region should be an ISO 3166 country code composed of two characters.
- If you are configuring X.509v3 certificate extension, choose the Configure extended partition check box and then choose Auto (Register IPv4) or Manual.
- 3 You can choose the **Public Key Algorithm** and **Digest Algorithm** settings from the pull-down list. The default settings are RSA(2048bit) for Public Key Algorithm and SHA256 for Digest Algorithm.

4 Click Submit.

- 5 When the contents of the CSR appear, click **Save** to save the CSR file to your computer.
- The CSR is created.

- Follow your CA policy regarding the method to send a CSR to your CA.
- If you are using Enterprise root CA of Windows Server[®] 2003/2008/2012, we recommend using the Web Server for the certificate template when creating the Client Certificate for secure management. If you are creating a Client Certificate for an IEEE 802.1x environment with EAP-TLS authentication, we recommend using User for the certificate template. For more information, see the SSL communication page from the top page for your model at http://solutions.brother.com/.

How to install the certificate to your machine

When you receive the certificate from a CA, follow the steps below to install it into the print server.

NOTE

Only a certificate issued with this machine's CSR can be installed. When you want to create another CSR, make sure that the certificate is installed before creating another CSR. Create another CSR after installing the certificate to the machine. Otherwise the CSR you have made before installing will be invalid.

Click Install Certificate on the Certificate page.

2 Specify the file of the certificate that has been issued by a CA, and then click **Submit**.

3 Now the certificate is created and saved in your machine memory successfully. To use SSL/TLS communication, the Root Certificate from the CA needs to be installed on your computer. Contact your network administrator about installation.

Choosing the certificate

After you install the certificate, follow the steps below to choose the certificate you want to use.

- 1 Click Network.
- 2 Click Protocol.
- 3 Click HTTP Server Settings and then choose the certificate from the Select the Certificate pull-down list.

If secure communication is req is selected.)	uired we recommend using SSL.(The recommended security settings will be set after the certificate
Select the Certificate	Preset
(You can select or release the	following protocols for the SSL certificate to work with.)
Web Based Management	
HTTPS(Port 443)	
HTTP(Port 80)	
IPP	
HTTPS(Port 443)	
✓ HTTP	
Port 80	
Port 631	
Web Services	
IN HTTP	
<u>Certificate>></u>	

How to install the self-signed certificate on your computer

NOTE

- The following steps are for Windows[®] Internet Explorer[®]. If you use another web browser, follow the help text of the web browser itself.
- You must have administrator rights to install the self-signed certificate.

For Windows Vista[®], Windows[®] 7 and Windows Server[®] 2008 users that have administrator rights

- 1 Click the 👩 button and All Programs.
- 2 Right-click Internet Explorer, and then click Run as administrator.



NOTE

If the User Account Control screen appears,

(Windows Vista[®]) Click Continue (Allow).

(Windows[®] 7/Windows[®] 8) Click **Yes**.

3 Type "https://machine's IP address/" into your browser to access your machine (where "machine's IP address" is the machine's IP address or the node name that you assigned for the certificate). Then click **Continue to this website (not recommended).**



Click Certificate Error, and then click View certificates. For the rest of the instructions, follow the steps from step (1) in For Windows[®] XP and Windows Server[®] 2003 users on page 61.

Brother HL-xxxx series - Windows Internet	: Explorer		
🕒 🕞 💌 😰 https://192.168.1.95/gene	al/status.html	▼ ② Certificate Error + × P ing	۹.
👷 Favorites 🛛 🎪 🔊 Suggested Sites 🕶	Web Slice Gallery •	VIntrusted Cerunicate	🚔 🕶 Page 🕶 Safety 🕶 Tgols 🕶 😝 🖛
HL-xxxx series	Please configure the password >>	wholte was not issued by a trusted certificate subhority. This problem might indicate an attempt to feel you or intercept any data you send to the server.	brother Solutions Center
Status Auto Refresh Istewal Maintenance Information List@Reports Find Dexice Contact & Location Sleep Trate Auto Power Of Language	Status Device Status Automatic Refresh Toner Level	We construct that you choe this webpage View confilcates Ready © Off © On EX, C M Y	
- arei	Web Language	Auto	
	Device Location	Contact:	

For Windows[®] XP and Windows Server[®] 2003 users

- 1) Start your web browser.
- 2 Type "https://machine's IP address/" into your browser to access your machine (where "machine's IP address" is the IP address or the node name that you assigned for the certificate).
- 3 When the security alert dialog box appears, do one of the following:
 - Click Continue to this website (not recommended). Click Certificate Error, and then click View certificates.
 - If the following dialog box appears, click View Certificate.



Click Install Certificate... from the General tab.



5 When the **Certificate Import Wizard** appears, click **Next**.

6 You need to specify a location to install the certificate. We recommend you choose **Place all certificates** in the following store, and then click **Browse...**.

Certificate	Import Wizard
Certifical	te Store
Certifi	icate stores are system areas where certificates are kept.
Windc	ws can automatically select a certificate store, or you can specify a location for Automatically select the certificate store based on the type of certificate Place all certificates in the following store Certificate store: Browse
	< Back Next > Cancel

Choose Trusted Root Certification Authorities, and then click OK.



8 Click Next.



Click Finish.

Olick **Yes**, if the fingerprint (thumbprint) is correct.



NOTE

The fingerprint (thumbprint) is printed on the Network Configuration Report (See *Printing the Network Configuration Report* on page 39).

1 Click OK.

2 The self-signed certificate is now installed on your computer, and SSL/TLS communication is available.

Import and export the certificate and private key

You can store the certificate and private key on the machine and manage them by importing and exporting.

How to import the self-signed certificate, the certificate issued by a CA, and the private key

- Click Import Certificate and Private Key on the Certificate page.
- Specify the file that you want to import.
- 3 Enter the password if the file is encrypted, and then click Submit.
- 4 Now the certificate and private key are imported to your machine successfully. To use SSL/TLS communication, the Root Certificate from the CA needs to also be installed on your computer. Contact your network administrator about the installation.

Security features

How to export the self-signed certificate, the certificate issued by a CA, and the private key

- 1 Click Export shown with Certificate List on the Certificate page.
- 2 Enter the password if you want to encrypt the file.

NOTE

If a blank password is used, the output is not encrypted.

- **3** Enter the password again for confirmation, and then click **Submit**.
- 4 Specify the location where you want to save the file.
- 5 Now the certificate and private key are exported to your computer.

NOTE

You can import the file that you exported.

Import and export a CA certificate

You can store a CA certificate on the machine by importing and exporting.

How to import a CA certificate

- 1 Click CA Certificate on the Security page.
- 2 Click Import CA Certificate and choose the certificate. Click Submit.

How to export a CA certificate

- 1 Click CA Certificate on the Security page.
- 2 Choose the certificate you want to export and click **Export**. Click **Submit**.
- 3 Click **Save** to choose the destination folder.
- 4 Choose the destination you want to save the exported certificate and then save the certificate.

Managing multiple certificates

This multiple certificate feature allows you to manage each certificate that you have installed using Web Based Management. After installing certificates, you can view what certificates are installed from the **Certificate** page and then view each certificate's content, delete, or export the certificate. For information on how to access the **Certificate** page, see *Configure certificate using Web Based Management* on page 55. The Brother machine allows you to store up to three self-signed certificates or up to three certificates issued by a CA. You can use the stored certificates for using the HTTPS/IPPS protocol or IEEE 802.1x authentication.

You can also store up to four CA certificates for using IEEE 802.1x authentication and SSL for SMTP/POP3.

We recommend you store one certificate less and keep the last free to deal with certificate expiration. For example, if you want to store a CA certificate, store three certificates and leave one storage as a backup. In the case of re-issuing the certificate, such as when the certificate is expired, you can import a new certificate to the backup and then you can delete the expired certificate, to avoid configuration failure.

- When you use HTTPS/IPPS protocol or IEEE 802.1x, you must choose which certificate you are using.
- When you use SSL for SMTP communications, you do not have to choose the certificate. The necessary certificate will be chosen automatically.

Managing your network machine securely using SSL/TLS

To manage your network machine securely, you need to use the management utilities with security protocols.

Secure Management using Web Based Management (web browser)

We recommend to use HTTPS protocol for secure management. To use these protocols, the following machine settings are required.

NOTE

HTTPS protocol is enabled by default.

You can change the HTTPS protocol settings and the certificate on the Web Based Management screen by clicking **Network**, **Protocol** and then **HTTP Server Settings**.

- 1 Start your web browser.
- 2 Type "http://machine's IP address/" into your browser. (If you use the created certificate, type "http://Common Name/" into your browser. Where "Common Name" is the Common Name that you assigned for the certificate, such as an IP address, node name, or domain name. For how to assign a Common Name for the certificate, see Using Certificates for device security on page 54.)
 - For example:

http://192.168.1.2/ (if the Common Name is the machine's IP address)

3 No password is required by default. If you have previously set a password, enter it and press \rightarrow .

4 You can now access the machine using HTTPS. If you use the SNMPv3 protocol, follow the steps below.

NOTE

You can also change the SNMP settings by using BRAdmin Professional 3.

5 Click Network.

Click **Protocol**.
7 Make sure that the SNMP setting is enabled, and then click Advanced Setting of SNMP.

8 You can configure the SNMP settings from the screen below.

Status	Enabled	
SNMP Mode of C	Operation	
SNMP v1/v2c read-v	vrite access	
SNMPv3 read-write	access and v1/v2c read-only access	
SNMPv3 read-write	access	
SNMP v1/v2c Mo	ode Settings	
Enable network mar	agement with older versions of BRAdmin	
Cancel Submit		

There are three SNMP connection modes of operation.

■ SNMP v1/v2c read-write access

In this mode, the print server uses version 1 and version 2c of the SNMP protocol. You can use all Brother applications under this mode. However, it is not secure since it will not authenticate the user and the data will not be encrypted.

■ SNMPv3 read-write access and v1/v2c read-only access

In this mode, the print server uses the read-write access of version 3 and the read-only access of version 1 and version 2c of the SNMP protocol.

NOTE

When you use the **SNMPv3 read-write access and v1/v2c read-only access** mode, some Brother applications (e.g. BRAdmin Light) that access to the print server do not work properly since they authorize the read-only access of version 1 and version 2c. If you want to use all applications, use the **SNMP v1/v2c read-write access** mode.

Security features

SNMPv3 read-write access

With this mode, the print server uses version 3 of the SNMP protocol. If you want to manage the print server securely, use this mode.

NOTE

- When you use the **SNMPv3 read-write access** mode, please note the following.
 - You can manage the print server by using BRAdmin Professional 3 or Web Based Management only.
 - Except for BRAdmin Professional 3, all applications that use SNMPv1/v2c will be restricted. To allow the use of SNMPv1/v2c applications, use SNMPv3 read-write access and v1/v2c read-only access or SNMP v1/v2c read-write access mode.
- For more information, see the Help text in Web Based Management.

Secure Management using BRAdmin Professional 3 (Windows[®])

To use the BRAdmin Professional 3 utility securely, you need to follow the points below

- We strongly recommend to use the latest version of the BRAdmin Professional 3 utility that is available as a download from <u>http://solutions.brother.com/</u>. If you use an older version of BRAdmin¹ to manage your Brother machines the user authentication will not be secure.
- If you want to avoid access to your machine from older versions of BRAdmin¹, you need to disable the access from older versions of BRAdmin¹ from Advanced Setting of SNMP on Protocol page using Web Based Management. (See Secure Management using Web Based Management (web browser) on page 66.)
- If you use BRAdmin Professional 3 and Web Based Management together, use Web Based Management with the HTTPS protocol.
- If you are managing a mixed group of older print servers ² and print servers with BRAdmin Professional 3, we recommend using a different password in each group. This will ensure security is maintained on the new print servers.
- ¹ BRAdmin Professional older than Ver. 2.80, BRAdmin Light for Macintosh older than Ver. 1.10
- ² NC-2000 series, NC-2100p, NC-3100h, NC-3100s, NC-4100h, NC-5100h, NC-5200h, NC-6100h, NC-6200h, NC-6300h, NC-6400h, NC-8000, NC-100h, NC-110h, NC-120w, NC-130h, NC-140w, NC-8100h, NC-9100h, NC-7100w, NC-7200w, NC-2200w

Printing documents securely using SSL/TLS

To print documents securely with IPP protocol, you can use the IPPS protocol.

To Configure IPPS settings using a web browser:

- 1 On the machine's web page, click **Network**, and then click **Protocol**. If the **IPP** check box is already selected, go to step **6**.
- 2 Select the IPP check box, and then click Submit.
- **3** Restart the machine to activate the configuration.
- 4 On the machine's web page, click **Network**, and then click **Protocol**.
- Olick HTTP Server Settings.
- 6 Select the HTTPS(Port443) check box, and then click Submit.
- **7** Restart the machine to activate the configuration.

NOTE

Communication using IPPS cannot prevent unauthorized access to the print server.

Sending an E-mail securely

Configuration using Web Based Management (web browser)

You can configure secured E-mail sending with user authentication or E-mail sending using SSL/TLS on the Web Based Management screen.

- 1 Start your web browser.
- 2 Type "http://machine's IP address/" into your browser's address bar (where "machine's IP address" is the IP address of the machine or the print server name).
 - For example: http://192.168.1.2/
- 3 No password is required by default. If you have previously set a password, enter it and press ⇒.
- 4 Click Network.
- 5 Click Protocol.
- 6 Click Advanced Setting of POP3/SMTP and make sure that the status of POP3/SMTP is Enabled.
- 7 You can configure the **POP3/SMTP** settings on this page.

NOTE

- For more information, see the Help text in Web Based Management.
- You can also confirm whether the E-mail settings are correct after configuration by sending a test E-mail.
- If you do not know the POP3/SMTP server settings, please contact your system administrator or ISP (Internet Service Provider) for details.
- 8 After configuring, click **Submit**. The Test E-mail Send Configuration dialog box appears.
- 9 Follow the instructions on-screen if you want to test with the current settings.

Sending an E-mail with user authentication

This machine supports POP before SMTP and SMTP-AUTH methods to send an E-mail via an E-mail server that requires user authentication. These methods prevent an unauthorized user from accessing the E-mail server. You can use Web Based Management or BRAdmin Professional 3 to configure these settings. You can use POP before SMTP and SMTP-AUTH methods for E-mail Notification.

E-mail server settings

You need to match the settings of SMTP authentication method with the method used by your E-mail server. Contact your network administrator or your ISP (Internet Service Provider) about the E-mail server configuration.

You will also need to check **SMTP-AUTH** of **SMTP Server Authentication Method** to enable the SMTP server authentication.

SMTP settings

- You can change the SMTP port number using Web Based Management. This is useful if your ISP (Internet Service Provider) implements the "Outbound Port 25 Blocking (OP25B)" service.
- By changing the SMTP port number to a specific number which your ISP is using for the SMTP server (for example, port 587), you would then be able to send an E-mail via the SMTP server.
- If you can use both POP before SMTP and SMTP-AUTH, we recommend choosing SMTP-AUTH.
- If you choose POP before SMTP for the SMTP Server Authentication Method, you need to configure the POP3 settings. You can also use the APOP method if needed.

Sending an E-mail securely using SSL/TLS

This machine supports SSL/TLS methods to send an E-mail via an E-mail server that requires secure SSL/TLS communication. To send E-mail via an E-mail server that is using SSL/TLS communication, you must configure SMTP over SSL/TLS or POP3 over SSL/TLS correctly.

Verifying Server Certificate

- If you choose SSL or TLS for SMTP over SSL/TLS or POP3 over SSL/TLS, the Verify Server Certificate check box will be automatically checked to verify the Server Certificate.
 - Before you verify the Server Certificate, you must import the CA certificate that has been issued by the CA that signed the Server Certificate. Contact your network administrator or your ISP (Internet Service Provider) to confirm whether a CA certificate import is necessary. For importing the certificate, see *Import and export a CA certificate* on page 64.
 - If you do not need to verify the Server Certificate, uncheck Verify Server Certificate.

Port Number

- If you choose SSL or TLS, the SMTP Port or POP3 Port value will be changed to match the protocol. If you want to change the port number manually, enter the port number after you choose SMTP over SSL/TLS or POP3 over SSL/TLS.
- You must configure the POP3/SMTP communication method to match the E-mail server. For details of the E-mail server settings, contact your network administrator or ISP (Internet Service Provider).

In most cases, the secured webmail services require the following settings:

(SMTP) SMTP Port: 587 SMTP Server Authentication Method: SMTP-AUTH SMTP over SSL/TLS: TLS (POP3) POP3 Port: 995 POP3 over SSL/TLS: SSL

Using IEEE 802.1x authentication

You can configure IEEE 802.1x authentication for a wired or a wireless network.

IEEE 802.1x authentication configuration using Web Based Management (web browser)

If you are configuring IEEE 802.1x authentication for a wired or a wireless network using Web Based Management, follow the instructions.

You can also configure IEEE 802.1x authentication using:

(Wired network)

BRAdmin Professional 3

(Wireless network)

- Wireless setup wizard from the control panel (For details, see Configuring your machine for an enterprise wireless network on page 22.)
- Wireless setup wizard on the CD-ROM (For details, see Wireless configuration temporarily using a USB cable (Recommended) on page 12.)
- BRAdmin Professional 3

NOTE

- If you configure your machine using EAP-TLS Authentication, you must install the Client Certificate issued by a CA before you start configuration. Contact your network administrator about the Client Certificate. If you have installed more than one certificate, we recommend you write down the certificate you want to use. For details on installing the certificate, see Using Certificates for device security on page 54.
- Before you verify the Server Certificate, you must import the CA certificate that has been issued by the CA that signed the Server Certificate. Contact your network administrator or your ISP (Internet Service Provider) to confirm whether a CA certificate import is necessary. For details on importing the certificate, see *Import and export a CA certificate* on page 64.
- For the details of each certificate, see Using Certificates for device security on page 54.
- Start your web browser.
- Type "http://machine's IP address/" into your browser's address bar (where "machine's IP address" is the IP address of the machine or the print server name).

For example: http://192.168.1.2/

NOTE

- If you are using a Domain Name System or enable a NetBIOS name, you can enter another name such as "SharedPrinter" instead of the IP address.
 - For example: http://SharedPrinter/
 - If you enable a NetBIOS name, you can also use the node name.
 - For example: http://brnxxxxxxxxx/

The NetBIOS name can be seen in the Network Configuration Report (See *Printing the Network Configuration Report* on page 39).

- For Macintosh users, you can have easy access to the Web Based Management System by clicking the machine icon on the **Status Monitor** screen. For more information: see User's Guide.
- 3 No password is required by default. If you have previously set a password, enter it and press ightarrow.

4 Click Network.

- (Wired) Click Wired and then choose Wired 802.1x Authentication. (Wireless) Click Wireless and then choose Wireless (Enterprise).
- 6 Now you can configure the IEEE 802.1x authentication settings.
 - If you want to enable IEEE 802.1x authentication for wired network, check Enabled for Wired 802.1x status on the Wired 802.1x Authentication page.
 - For the details of IEEE 802.1x authentication and the inner authentication methods, see IEEE 802.1x Authentication on page 91.
 - If you are using EAP-TLS authentication, you must choose the Client Certificate that has been installed (shown with Certificate Name) for verification from the Client Certificate pull-down list.
 - If you choose EAP-FAST, PEAP, EAP-TTLS, or EAP-TLS authentication, you can choose the verification method from the Server Certificate Verification pull-down list. You can verify the Server Certificate by using the CA certificate, imported to the machine in advance, that has been issued by the CA that signed the Server Certificate.

You can choose one of the following verification methods from the **Server Certificate Verification** pull-down list.

No Verification

The Server Certificate can always be trusted. The verification is not performed.

CA Cert.

The verification method to check the CA reliability of the Server Certificate, using the CA certificate that has been issued by the CA that signed the Server Certificate.

CA Cert. + ServerID

The verification method to check the Common Name ¹ value of the Server Certificate, in addition to the CA reliability of the Server Certificate.

The Common Name verification compares the Common Name of the Server Certificate to the character string configured for the **Server ID**. Before you use this method, contact your system administrator about the Server Certificate's Common Name and then configure **Server ID**.

7 After configuring, click **Submit**.

(Wired)

After configuring, connect your machine to the IEEE 802.1x supported network. After a few minutes, print the Network Configuration Report to check the **<Wired IEEE 802.1x> Status.** (See *Printing the Network Configuration Report* on page 39.)

Success

The wired IEEE 802.1x function is enabled and the authentication was successful.

Failed

The wired IEEE 802.1x function is enabled, however, the authentication failed.

Off

The wired IEEE 802.1x function is not available.

(Wireless)

Shortly after configuring, WLAN report will be printed automatically. Check your wireless configuration on the report. See *Printing the WLAN report* on page 40.

Troubleshooting

Overview

This chapter explains how to resolve typical network problems you may encounter when using the Brother machine. If, after reading this chapter, you are unable to resolve your problem, please visit the Brother Solutions Center at: <u>http://solutions.brother.com/</u>.

Please go to the Brother Solutions Center at <u>http://solutions.brother.com/</u> and click Manuals on your model page to download the other manuals.

Identifying your problem

Make sure that the following items are configured before reading this chapter.

First check the following:
The power cord is connected properly and the Brother machine is turned on.
The access point (for wireless), router or hub are turned on and its link button is blinking.
All protective packaging has been removed from the machine.
The toner cartridges and drum unit are installed properly.
The top and back covers are fully closed.
Paper is inserted properly in the paper tray.
(For wired networks) A network cable is securely connected to the Brother machine and the router or hub.

Go to the page for your solution from the lists below

- I cannot complete the wireless network setup configuration. (See page 76.)
- The Brother machine is not found on the network during the printer driver installation. (See page 77.)
- The Brother machine cannot print over the network. (See page 78.)
- The Brother machine is not found on the network even after successful installation. (See page 78.)
- I'm using security software. (See page 80.)
- I want to check that my network devices are working properly. (See page 81.)

75

I cannot complete the wireless network setup configuration.

Question	Interface	Solution
My machine does not connect during wireless setup?	wireless	Turn your wireless router Off and back On. Then try and configure the wireless settings again.
Are your security settings	wireless	Reconfirm and choose the correct security settings.
(SSID/Network Key) correct?		 The manufacturer's name or model number of the WLAN access point/router may be used as the default security settings.
		 See the instructions supplied with your WLAN access point/router for information on how to find the security settings.
		 Ask the manufacturer of your WLAN access point/router or ask your Internet provider or network administrator.
		For information on what the SSID and Network Key are, see Wireless network terms and concepts on page 93.
Are you using MAC address filtering?	wireless	Confirm the MAC address of the Brother machine is allowed in the filter. You can find the MAC address from the Brother machine's control panel. (See <i>Function table and default factory settings</i> on page 41.)
Is your WLAN access	wireless	You should type the correct SSID name or Network Key by hand.
point/router in a stealth mode? (not broadcasting the SSID)		Check the SSID name or the Network Key in the instructions supplied with your WLAN access point/router and reconfigure the wireless network setup. (For more information, see <i>Configuring your machine</i> when the SSID is not broadcast on page 20.)
I have checked and tried all of the above, but still cannot complete the wireless configuration. Is there anything else I can do?	wireless	Use the Network Connection Repair Tool. See <i>The Brother machine cannot print over the network. The Brother machine is not found on the network even after successful installation.</i> on page 78.

The Brother machine is not found on the network during the printer driver installation.

Question	Interface	Solution
Is your machine connected to the network and does it have a valid IP address?	wired/ wireless	Print the Network Configuration Report and check that Ethernet Link Status or Wireless Link Status is Link OK . See <i>Printing the Network</i> <i>Configuration Report</i> on page 39.
Are you using security software?	wired/ wireless	Choose to search for the Brother machine again on the installer dialog box.
		Allow access when the alert message of the security software appears during the printer driver installation.
		For more information about security software, see I'm using security software. on page 80.
Is your Brother machine placed too far from the WLAN access point/router?	wireless	Place your Brother machine within about 3.3 feet (1 meter) from the WLAN access point/router when you configure the wireless network settings.
Are there any obstructions (walls or furniture, for example) between your machine and the WLAN access point/router?	wireless	Move your Brother machine to an obstruction-free area or closer to the WLAN access point/router.
Is there a wireless computer, Bluetooth supported device, microwave oven, or digital cordless phone near the Brother machine or the WLAN access point/router?	wireless	Move all the devices away from the Brother machine or WLAN access point/router.

The Brother machine cannot print over the network. The Brother machine is not found on the network even after successful installation.

	Solution
red/ reless	See I'm using security software. on page 80.
red/ reless	 (Windows[®]) Confirm the IP address and the Subnet Mask using the Network Connection Repair Tool.
	Use the Network Connection Repair Tool to fix the Brother machine's network settings. It will assign the correct IP address and the Subnet Mask.
	To use the Network Connection Repair Tool, ask the network administrator for the details, and then follow the steps below:
	NOTE
	 (Windows[®] XP/XP Professional x64 Edition/Windows
	Vista [®] /Windows [®] 7/Windows [®] 8) You must log on with Administrator rights.
	Make sure that the Brother machine is turned on and is connected to the same network as your computer.
	ed/ eless ed/ eless

The Brother machine cannot print over the network. The Brother machine is not found on the network even after successful installation. (continued)

Question	Interface	Solution
Is your Brother machine assigned with an available IP address?	wired/ wireless	 (Windows[®] XP, Windows Server[®] 2003/2008) Click the Start button, All Programs, Accessories and Windows Explorer, and then My Computer (Computer).
(continued)		(Windows Vista [®] /Windows [®] 7)
		Click the 🚱 button and Computer .
		2 Double-click Local Disk (C:), Program Files or Program Files (x86) for 64-bit OS users, Browny02, Brother, BrotherNetTool.exe to run the program.
		If the User Account Control screen appears, permit the window to continue the installation.
		3 Follow the on-screen instructions.
		4 Make sure that you can print.
		NOTE
		The Network Connection Repair Tool will start automatically if you check the Enable Connection Repair Tool box using Status Monitor. Right- click on the Status Monitor screen, click Options , Details , and then click the Diagnostic tab. This is not recommended when your network administrator has set the IP address to static, since it will automatically change the IP address.
		If the correct IP address and the Subnet mask are still not assigned even after using the Network Connection Repair Tool, ask the network administrator for this information, or visit the Brother Solutions Center at <u>http://solutions.brother.com/</u> .

The Brother machine cannot print over the network. The Brother machine is not found on the network even after successful installation. (continued)

Question	Interface	Solution
Did your previous printing job fail?	wired/ wireless	If the failed printing job is still in the print queue of your computer, delete it.
		Double-click the printer icon in the following folder and then choose the Cancel All Documents in the Printer menu:
		(Windows [®] XP/Windows Server [®] 2003)
		Start and Printers and Faxes.
		(Windows Vista [®])
		[5], Control Panel, Hardware and Sound, and then Printers.
		(Windows [®] 7)
		Bevices and Printers, and then Printers and Faxes.
		(Windows Server [®] 2008)
		Start, Control Panel and Printers.
Are you connecting the Brother machine to the network using wireless capabilities?	wireless	Print the WLAN report to confirm the state of the wireless connection. (For how to print, see <i>Printing the WLAN report</i> on page 40.)
		If there is an error code on the printed WLAN report: see Quick Setup Guide: <i>Troubleshooting</i> .
		See The Brother machine is not found on the network during the printer driver installation. on page 77.
I have checked and tried all of above, however the Brother machine does not print. Is there anything else I can do?	wired/ wireless	Uninstall the printer driver and reinstall it.

I'm using security software.

Question	Interface	Solution
Did you choose to accept the security alert dialog box during the printer driver installation, applications' start-up process, or when using the printing features?	wired/ wireless	If you did not choose to accept the security alert dialog box, the firewall function of your security software may be rejecting access. Some security software might block access without showing a security alert dialog box. To allow access, see the instructions of your security software or ask the manufacturer.
I want to know the necessary port number for the security software settings.	wired/ wireless	 The following port numbers are used for Brother network features: ■ Network printing ¹ → Port number 161 and 137/ Protocol UDP ■ BRAdmin Light ¹ → Port number 161 / Protocol UDP ¹ Windows[®] only. For details on how to open the port, see the instructions of the security software or ask the manufacturer.

I want to check my network devices are working properly.

Question	Interface	Solution
Is your Brother machine, access point/router, or network hub turned on?	wired/ wireless	Make sure you have confirmed all instructions in <i>First check the following:</i> on page 75.
Where can I find my Brother machine's network settings, such as IP address?	wired/ wireless	Print the Network Configuration Report. See <i>Printing the Network Configuration Report</i> on page 39.
How can I check the link status of my Brother machine?	wired/ wireless	Print the Network Configuration Report and check that Ethernet Link Status or Wireless Link Status is Link OK . See <i>Printing the Network</i> <i>Configuration Report</i> on page 39.
Can I "ping" the Brother machine from my	wired/ wireless	Ping the Brother machine from your computer using the IP address or the node name.
computer?		■ Successful → Your Brother machine is working correctly and connected to the same network as your computer.
		■ Unsuccessful → Your Brother machine is not connected to the same network as your computer.
		(Windows [®]) Ask the network administrator and use the Network Connection Repair Tool to fix the IP address and the subnet mask automatically. For the
		detail of the Network Connection Repair Tool, see (Windows [®]) Confirm the IP address and the Subnet Mask using the Network Connection Repair Tool. in Is your Brother machine assigned with an available IP address? on page 78.
Is the Brother machine connecting to the wireless network?	wireless	Print the WLAN report to confirm the state of the wireless connection. For how to print, see <i>Printing the WLAN report</i> on page 40. If there is an error code on the printed WLAN report: see Quick Setup Guide: <i>Troubleshooting</i> .
I have checked and tried all of the above, however, I'm still having problems. Is there anything else I can do?	wireless	See the instructions supplied with your WLAN access point/router to find the SSID and the Network Key information and set them correctly. For details of the SSID and the Network Key, See <i>Are your security settings</i> (<i>SSID/Network Key</i>) correct? in <i>I cannot complete the wireless network setup configuration.</i> on page 76.

Section II



Network Glossary

Types of network connections and protocols	83
Configuring your machine for a network	89
Wireless network terms and concepts	93
Additional network settings from Windows [®]	97
Security terms and concepts	100

8

Types of network connections and protocols

Types of network connections

Wired network connection example

Peer-to-Peer printing using TCP/IP

In a Peer-to-Peer environment, each computer directly sends and receives data to each device. There is no central server controlling file access or machine sharing.



- 1 Router
- 2 Network machine (your machine)
- In a smaller network of 2 or 3 computers, we recommend the Peer-to-Peer printing method as it is easier to configure than the Network Shared printing method. See Network Shared printing on page 84.
- Each computer must use the TCP/IP Protocol.
- The Brother machine needs an appropriate IP address configuration.
- If you are using a router, the Gateway address must be configured on the computers and the Brother machine.

Network Shared printing

In a Network Shared environment, each computer sends data via a centrally controlled computer. This type of computer is often called a "Server" or a "Print Server". Its job is to control the printing of all print jobs.



- 1 Client computer
- 2 Computer known as "Server" or "Print server"
- 3 TCP/IP, USB, or parallel (where available)
- 4 Network machine (your machine)
- In a larger network, we recommend a Network Shared printing environment.
- The "server" or the "print server" must use the TCP/IP print protocol.
- The Brother machine needs to have an appropriate IP address configuration unless the machine is connected via the USB or the parallel interface at the server.

Protocols

TCP/IP protocols and functions

Protocols are the standardized sets of rules for transmitting data on a network. Protocols allow users to gain access to network connected resources.

The print server used on the Brother machine supports the TCP/IP (Transmission Control Protocol/Internet Protocol) protocol.

TCP/IP is the most popular set of protocols used for communication such as Internet and E-mail. This protocol can be used in almost all operating systems such as Windows[®], Windows Server[®], Mac OS X and Linux[®]. The following TCP/IP protocols are available on the Brother machine.

NOTE

- You can configure the protocol settings by using the HTTP interface (web browser). (See *How to configure the machine settings using Web Based Management (web browser)* on page 44.)
- To find what protocols your Brother machine supports, see *Supported protocols and security features* on page 104.
- For information about supported security protocols, see Security protocols on page 101.

DHCP/BOOTP/RARP

By using the DHCP/BOOTP/RARP protocols, the IP address can be automatically configured.

NOTE

To use the DHCP/BOOTP/RARP protocols, please contact your network administrator.

APIPA

If you do not assign an IP address manually (using the control panel of the machine or the BRAdmin software) or automatically (using a DHCP/BOOTP/RARP server), the Automatic Private IP Addressing (APIPA) protocol will automatically assign an IP address from the range 169.254.10 to 169.254.254.255.

ARP

Address Resolution Protocol performs mapping of an IP address to a MAC address in a TCP/IP network.

DNS client

The Brother print server supports the Domain Name System (DNS) client function. This function allows the print server to communicate with other devices by using its DNS name.

NetBIOS name resolution

Network Basic Input/Output System name resolution enables you to obtain the IP address of the other device using its NetBIOS name during the network connection.

WINS

Windows[®] Internet Name Service is an information providing service for the NetBIOS name resolution by consolidating an IP address and a NetBIOS name that is in the local network.

LPR/LPD

Commonly used printing protocols on a TCP/IP network.

SMTP client

Simple Mail Transfer Protocol (SMTP) client is used to send E-mails via the Internet or Intranet.

Custom Raw Port (Default is Port 9100)

Another commonly used printing protocol on a TCP/IP network. It enables interactive data transmission.

IPP

The Internet Printing Protocol allows you to print documents directly to any accessible machine via the Internet.

NOTE

For details of the IPPS protocol, see Security protocols on page 101.

mDNS

mDNS allows the Brother print server to automatically configure itself to work in a Mac OS X Simple Network Configured system.

Types of network connections and protocols

TELNET

The TELNET protocol allows you to control the remote network devices on a TCP/IP network from your computer.

SNMP

The Simple Network Management Protocol (SNMP) is used to manage network devices including computers, routers and Brother network ready machines. The Brother print server supports SNMPv1, SNMPv2c and SNMPv3.

NOTE

For details of the SNMPv3 protocol, see Security protocols on page 101.

LLMNR

The Link-Local Multicast Name Resolution protocol (LLMNR) resolves the names of neighboring computers if the network does not have a Domain Name System (DNS) server. The LLMNR Responder function works in both the IPv4 or IPv6 environment when using a computer that has the LLMNR Sender function such as Windows Vista[®], Windows[®] 7 and Windows[®] 8.

Web Services

The Web Services protocol enables Windows Vista[®], Windows[®] 7 or Windows[®] 8 users to install the drivers used for printing by right-clicking the machine icon from the **Network** folder. (See *Installing drivers used for printing via Web Services (Windows Vista[®], Windows[®] 7 and Windows[®] 8)* on page 97.) The Web Services also lets you check the current status of the machine from your computer.

HTTP

The HTTP protocol is used to transmit the data between a web server and a web browser.

NOTE

For details of the HTTPS protocol, see Security protocols on page 101.

Types of network connections and protocols

SNTP

The Simple Network Time Protocol is used to synchronize computer clocks on a TCP/IP network. You can configure the SNTP settings using Web Based Management (web browser). (For the details, see *How to configure the SNTP protocol using Web Based Management* on page 48.)

CIFS

The Common Internet File System is the standard way that computer users share files and printers in Windows[®].

IPv6

IPv6 is the next generation internet protocol. For more information on the IPv6 protocol, visit the model page for the machine you are using at <u>http://solutions.brother.com/</u>.

9

Configuring your machine for a network

IP addresses, subnet masks and gateways

To use the machine in a networked TCP/IP environment, you need to configure its IP address and subnet mask. The IP address you assign to the print server must be on the same logical network as your host computers. If it is not, you must properly configure the subnet mask and the gateway address.

IP address

An IP address is a series of numbers that identifies each device connected to a network. An IP address consists of four numbers separated by dots. Each number is between 0 and 255.

- Example: In a small network, you would normally change the final number.
 - 192.168.1.<u>1</u>
 - 192.168.1.<u>2</u>
 - 192.168.1.<u>3</u>

How the IP address is assigned to your print server:

If you have a DHCP/BOOTP/RARP server in your network the print server will automatically obtain its IP address from that server.

NOTE

On smaller networks, the DHCP server may also be the router.

For more information on DHCP, BOOTP and RARP, see: Using DHCP to configure the IP address on page 105. Using BOOTP to configure the IP address on page 107. Using RARP to configure the IP address on page 106.

If you do not have a DHCP/BOOTP/RARP server, the Automatic Private IP Addressing (APIPA) protocol will automatically assign an IP address from the range 169.254.1.0 to 169.254.254.255. For more information on APIPA, see *Using APIPA to configure the IP address* on page 107.

Subnet mask

Subnet masks restrict network communication.

Example: Computer 1 can talk to Computer 2

Computer 1

IP Address: 192.168. 1. 2

Subnet Mask: 255.255.255.000

Computer 2

IP Address: 192.168. 1. 3

Subnet Mask: 255.255.255.000

Where the 0 is in the Subnet mask, there is no limit to communication at this part of the address. What this means in the above example is, we can communicate with any device that has an IP address that begins with 192.168.1.x. (where x. are numbers between 0 and 255).

Gateway (and router)

A gateway is a network point that acts as an entrance to another network and sends data transmitted via the network to an exact destination. The router knows where to direct data that arrives at the gateway. If a destination is located on an external network, the router transmits data to the external network. If your network communicates with other networks, you may need to configure the Gateway IP address. If you do not know the Gateway IP address, then contact your Network Administrator.

IEEE 802.1x Authentication

IEEE 802.1x is an IEEE standard for wired and wireless networks that limits access from unauthorized network devices. Your Brother machine (supplicant) sends an authentication request to a RADIUS server (Authentication server) through your access point (authenticator). After your request has been verified by the RADIUS server, your machine can access the network.

Authentication methods

LEAP (For wireless network)

Cisco LEAP (Lightweight Extensible Authentication Protocol) has been developed by Cisco Systems, Inc. which uses a user ID and password for authentication.

EAP-FAST

EAP-FAST (Extensible Authentication Protocol-Flexible Authentication via Secured Tunneling) has been developed by Cisco Systems, Inc. which uses a user ID and password for authentication, and symmetric key algorithms to achieve a tunneled authentication process.

The Brother machine supports the following inner authentication methods:

- EAP-FAST/NONE
- EAP-FAST/MS-CHAPv2
- EAP-FAST/GTC
- EAP-MD5 (For wired network)

EAP-MD5 (Extensible Authentication Protocol-Message Digest Algorithm 5) uses a user ID and password for challenge-response authentication.

PEAP

PEAP (Protected Extensible Authentication Protocol) has been developed by Microsoft Corporation, Cisco Systems and RSA Security. PEAP creates an encrypted SSL (Secure Sockets Layer)/TLS (Transport Layer Security) tunnel between a client and an authentication server, for sending a user ID and password. PEAP provides mutual authentication between the server and the client.

The Brother machine supports the following inner authentications:

- PEAP/MS-CHAPv2
- PEAP/GTC

Configuring your machine for a network

EAP-TTLS

EAP-TTLS (Extensible Authentication Protocol-Tunneled Transport Layer Security) has been developed by Funk Software and Certicom. EAP-TTLS creates a similar encrypted SSL tunnel to PEAP, between a client and an authentication server, for sending a user ID and password. EAP-TTLS provides mutual authentication between the server and the client.

The Brother machine supports the following inner authentications:

- EAP-TTLS/CHAP
- EAP-TTLS/MS-CHAP
- EAP-TTLS/MS-CHAPv2
- EAP-TTLS/PAP
- EAP-TLS

EAP-TLS (Extensible Authentication Protocol-Transport Layer Security) requires digital certificate authentication both at a client and an authentication server.

10

Wireless network terms and concepts

Specifying your network

SSID (Service Set Identifier) and channels

You need to configure the SSID and a channel to specify the wireless network you want to connect to.

SSID

Each wireless network has its own unique network name and it is technically referred to as SSID. The SSID is a 32-byte or less value and is assigned to the access point. The wireless network devices you want to associate to the wireless network should match the access point. The access point and wireless network devices regularly send wireless packets (referred to as beacons) which have the SSID information. When your wireless network device receives a beacon, you can identify wireless networks that are enough to connect to.

Channels

Wireless networks use channels. Each wireless channel is on a different frequency. There are up to 14 different channels that can be used when using a wireless network. However, in many countries the number of channels available is restricted.

Security terms

Authentication and encryption

Most wireless networks use some kind of security settings. These security settings define the authentication (how the device identifies itself to the network) and encryption (how the data is encrypted as it is sent on the network). **If you do not correctly specify these options when you are configuring your Brother wireless machine, it will not be able to connect to the wireless network.** Therefore care must be taken when configuring these options. Please see *Supported protocols and security features* on page 104 for which authentication and encryption methods your Brother wireless machine supports.

Authentication and Encryption methods for a personal wireless network

A personal wireless network is a small network, such as a home wireless network, without IEEE 802.1x support.

If you want to use your machine in an IEEE 802.1x supported wireless network, see Authentication and Encryption methods for an enterprise wireless network on page 95.

Authentication methods

Open system

Wireless devices are allowed to access the network without any authentication.

Shared key

A secret pre-determined key is shared by all devices that will access the wireless network.

The Brother wireless machine uses the WEP key as the pre-determined key.

WPA-PSK/WPA2-PSK

Enables a Wi-Fi Protected Access[™] Pre-shared key (WPA-PSK/WPA2-PSK), which enables the Brother wireless machine to associate with access points using TKIP for WPA-PSK or AES for WPA-PSK and WPA2-PSK (WPA-Personal).

Encryption methods

None

No encryption method is used.

■ WEP

When using WEP (Wired Equivalent Privacy), the data is transmitted and received with a secure key.

TKIP

TKIP (Temporal Key Integrity Protocol) provides per-packet key mixing, a message integrity check and rekeying mechanism.

AES

AES (Advanced Encryption Standard) provides stronger data protection by using a symmetric-key encryption.

NOTE

- IEEE 802.11n does not support WEP or TKIP for the encryption method.
- If you want to connect to your wireless network using IEEE 802.11n, we recommend to choose AES.

Network key

Open system/Shared key with WEP

This key is a 64-bit or 128-bit value that must be entered in an ASCII or hexadecimal format.

• 64 (40) bit ASCII:

Uses 5 text characters. e.g. "WSLAN" (this is case sensitive)

• 64 (40) bit hexadecimal:

Uses 10 digits of hexadecimal data. e.g. "71f2234aba"

• 128 (104) bit ASCII:

Uses 13 text characters. e.g. "Wirelesscomms" (this is case sensitive)

• 128 (104) bit hexadecimal:

Uses 26 digits of hexadecimal data. e.g. "71f2234ab56cd709e5412aa2ba"

■ WPA-PSK/WPA2-PSK and TKIP or AES

Uses a Pre-Shared Key (PSK) that is 8 or more characters in length, up to a maximum of 63 characters.

Authentication and Encryption methods for an enterprise wireless network

An enterprise wireless network is a large network, for example using your machine in a business enterprise wireless network, with IEEE 802.1x support. If you configure your machine in an IEEE 802.1x supported wireless network, you can use the following authentication and encryption methods.

Authentication methods

LEAP

For LEAP, see LEAP (For wireless network) on page 91.

EAP-FAST

For EAP-FAST, see EAP-FAST on page 91.

PEAP

For PEAP, see *PEAP* on page 91.

EAP-TTLS

For EAP-TTLS, see EAP-TTLS on page 92.

EAP-TLS

For EAP-TLS, see EAP-TLS on page 92.

Wireless network terms and concepts

Encryption methods

TKIP

For TKIP, see TKIP on page 94.

AES

For AES, see AES on page 94.

CKIP

The original Key Integrity Protocol for LEAP by Cisco Systems, Inc.

User ID and password

The following security methods use a user ID less than 64 characters and a password of less than 32 characters in length.

- LEAP
- EAP-FAST
- PEAP
- EAP-TTLS
- EAP-TLS (For user ID)

Additional network settings from $Windows^{\ensuremath{\mathbb{R}}}$

Types of additional network settings

The following features are available to use if you want to configure additional network settings.

- Web Services for printing (Windows Vista[®], Windows[®] 7 and Windows[®] 8)
- Vertical Pairing (Windows[®] 7 and Windows[®] 8)

NOTE

Verify the host computer and the machine are either on the same subnet or that the router is properly configured to pass data between the two devices.

Installing drivers used for printing via Web Services (Windows Vista[®], Windows[®] 7 and Windows[®] 8)

The Web Services feature allows you to monitor machines on the network. This also simplifies the driver installation process. Drivers used for printing via Web Services can be installed by right-clicking the printer icon on the computer, and the computer's Web Services port (WSD port) will be created automatically.

NOTE

- You must configure the IP address on your machine before you configure this setting.
- For Windows Server[®] 2008/2012, you must install Print Services.

Insert the installer CD-ROM.

- 2 Choose your CD-ROM drive/install/driver/gdi/32_64.
- 3 Double-click **dpinst86.exe** or **dpinst64.exe**.

NOTE

If the User Account Control screen appears,

(Windows Vista[®]) Click **Allow**.

(Windows[®] 7/Windows[®] 8) Click **Yes**.

Additional network settings from Windows®

(Windows Vista[®])

Click 🧐 , then choose Network.

(Windows[®] 7)

Click 🚱 , Control Panel, Network and Internet, and then View network computers and devices.

5 The machine's Web Services Name will be shown with the printer icon. Right-click the machine you want to install.

NOTE

The Web Services Name for the Brother machine is your model name and the MAC Address (Ethernet Address) of your machine (e.g. Brother HL-XXXX (model name) [XXXXXXXXXXX] (MAC Address / Ethernet Address).

6 From the pull down menu, click Install.

Uninstalling drivers used for printing via Web Services (Windows Vista[®], Windows[®] 7 and Windows[®] 8)

To uninstall Web Services from a computer, follow the instructions below.

(Windows Vista[®])

Click 👩 , then choose Network.

(Windows[®] 7)

Click (69), Control Panel, Network and Internet and then View network computers and devices.

- 2 The machine's Web Services Name will be shown with the printer icon. Right-click the machine you want to uninstall.
- 3 From the pull down menu, click **Uninstall**.

Network printing installation for Infrastructure mode when using Vertical Pairing (Windows[®] 7 and Windows[®] 8)

Windows[®] Vertical Pairing is a technology to allow your Vertical Pairing supported wireless machine to connect to your Infrastructure network using the PIN Method of WPS and the Web Services feature. This also enables the printer driver installation from the printer icon that is in the **Add a device** screen.

If you are in Infrastructure mode, you can connect your machine to the wireless network and then install the printer driver using this feature. Follow the steps below:

NOTE

- If you have set your machine's Web Services feature to Off, you must set it back to On. The default setting of the Web Services for the Brother machine is On. You can change the Web Services setting by using Web Based Management (web browser) or BRAdmin Professional 3.
- Make sure your WLAN access point/router includes the Windows[®] 7 or Windows[®] 8 compatibility logo. If you are not sure about the compatibility logo, contact your access point/router manufacturer.
- Make sure your computer includes the Windows[®] 7 or Windows[®] 8 compatibility logo. If you are not sure about the compatibility logo, contact your computer manufacturer.
- If you are configuring your wireless network using an external wireless NIC (Network Interface Card), make sure the wireless NIC includes the Windows[®] 7 or Windows[®] 8 compatibility logo. For more information, contact your wireless NIC manufacturer.
- To use a Windows[®] 7 or Windows[®] 8 computer as a Registrar, you need to register it to your network in advance. See the instruction supplied with your WLAN access point/router.
- **1** Turn on your machine.
- 2 Set your machine in WPS mode (PIN Method). For how to configure your machine to use the PIN Method See Configuration using the PIN Method of WPS (Wi-Fi Protected Setup) on page 28.
- 3 Click the 🚳 button and then Devices and Printers.
- 4 Choose Add a device on the Devices and Printers dialog box.
- 5 Choose your machine and input the PIN which your machine has indicated.
- 6 Choose the Infrastructure network that you want to connect to, and then click **Next**.
- When your machine appears in the **Devices and Printers** dialog box, the wireless configuration and the printer driver installation are successfully completed.

Security terms and concepts

Security features

Security terms

■ CA (Certificate Authority)

A CA is an entity that issues digital certificates (especially X.509 certificates) and vouches for the binding between the data items in a certificate.

CSR (Certificate Signing Request)

A CSR is a message sent from an applicant to a CA in order to apply for issue of a certificate. The CSR contains information identifying the applicant, the public key generated by the applicant and the digital signature of the applicant.

Certificate

A Certificate is the information that binds together a public key with an identity. The certificate can be used to verify that a public key belongs to an individual. The format is defined by the x.509 standard.

CA Certificate

A CA Certificate is the certification that identifies the CA (Certificate Authority) itself and owns its private key. It verifies a certificate issued by the CA.

Digital signature

A Digital signature is a value computed with a cryptographic algorithm and appended to a data object in such a way that any recipient of the data can use the signature to verify the data's origin and integrity.

Public key cryptosystem

A Public key cryptosystem is a modern branch of cryptography in which the algorithms employ a pair of keys (a public key and a private key) and use a different component of the pair for different steps of the algorithm.

Shared key cryptosystem

A Shared key cryptosystem is a branch of cryptography involving algorithms that use the same key for two different steps of the algorithm (such as encryption and decryption).

Security protocols

SSL (Secure Socket Layer) / TLS (Transport Layer Security)

These security communication protocols encrypt data to prevent security threats.

HTTPS

The version of the internet protocol Hyper text Transfer Protocol (HTTP) that uses SSL.

IPPS

The version of the printing protocol Internet Printing Protocol that uses SSL.

SNMPv3

The Simple Network Management Protocol version 3 (SNMPv3) provides user authentication and data encryption to manage network devices securely.

Security methods for E-mail Sending

NOTE

You can configure the security methods settings using Web Based Management (web browser). For the details, see *How to configure the machine settings using Web Based Management (web browser)* on page 44.

POP before SMTP (PbS)

The user authentication method for sending E-mail from a client. The client is given permission to use the SMTP server by accessing the POP3 server before sending the E-mail.

SMTP-AUTH (SMTP Authentication)

SMTP-AUTH expands SMTP (the Internet E-mail sending protocol) to include an authentication method that ensures the true identity of the sender is known.

APOP (Authenticated Post Office Protocol)

APOP expands POP3 (the Internet receiving protocol) to include an authentication method that encrypts the password when the client receives E-mail.

SMTP over SSL

SMTP over SSL feature enables sending encrypted E-mail using SSL.

POP over SSL

POP over SSL feature enables receiving encrypted E-mail using SSL.
Section III



Appendixes

Appendix A	104
Appendix B	105

Appendix A

A

Supported protocols and security features

Interface	Ethernet	10BASE-T, 100BASE-TX
	Wireless	IEEE 802.11b/g/n (Infrastructure Mode/Ad-hoc Mode)
		IEEE 802.11g/n (Wi-Fi Direct)
Network (common)	Protocol (IPv4)	ARP, RARP, BOOTP, DHCP, APIPA (Auto IP), WINS/NetBIOS name resolution, DNS Resolver, mDNS, LLMNR responder, LPR/LPD, Custom Raw Port/Port9100, IPP/IPPS, FTP Server, TELNET Server, HTTP/HTTPS server, TFTP client and server, SMTP Client, SNMPv1/v2c/v3, ICMP, Web Services (Print), CIFS client, SNTP client
	Protocol (IPv6)	NDP, RA, DNS resolver, mDNS, LLMNR responder, LPR/LPD, Custom Raw Port/Port9100, IPP/IPPS, FTP Server, TELNET Server, HTTP/HTTPS server, TFTP client and server, SMTP Client, SNMPv1/v2c/v3, ICMPv6, Web Services (Print), CIFS Client, SNTP Client
Network (Security)	Wired	SSL/TLS (IPPS, HTTPS), SNMP v3, 802.1x (EAP-MD5, EAP-FAST, PEAP, EAP-TLS, EAP-TTLS), Kerberos
	Wireless	WEP 64/128 bit, WPA-PSK (TKIP/AES), WPA2-PSK (AES), SSL/TLS (IPPS, HTTPS), SNMP v3, 802.1x (LEAP, EAP-FAST, PEAP, EAP-TLS, EAP-TTLS), Kerberos
E-mail (Security)	Wired and Wireless	APOP, POP before SMTP, SMTP-AUTH, SSL/TLS (SMTP/POP)
Network (Wireless)	Wireless Certification	Wi-Fi Certification Mark License (WPA™/WPA2™ - Enterprise, Personal), Wi-Fi Protected Setup™ (WPS) Identifier Mark License, AOSS Logo, Wi-Fi CERTIFIED™ Wi-Fi Direct™

Appendix B

Using services

B

A service is a resource that can be accessed by computers that wish to print to the Brother print server. The Brother print server provides the following predefined services (do a SHOW SERVICE command in the Brother print server remote console to see a list of available services): Enter HELP at the command prompt for a list of supported commands.

Service (Example)	Definition
BINARY_P1	TCP/IP binary
TEXT_P1	TCP/IP text service (adds carriage return after each line feed)
PCL_P1	PCL service (switches PJL-compatible machine to PCL mode)
BRNxxxxxxxxxx	TCP/IP binary
BRNxxxxxxxxxx_AT	PostScript [®] service for Macintosh
POSTSCRIPT_P1	PostScript [®] service (switches PJL-compatible machine to PostScript [®] mode)

Where "xxxxxxxxxxx is your machine's MAC Address (Ethernet Address).

Other ways to set the IP address (for advanced users and administrators)

Using DHCP to configure the IP address

The Dynamic Host Configuration Protocol (DHCP) is one of several automated mechanisms for IP address allocation. If you have a DHCP server on your network, the print server will automatically obtain its IP address from the DHCP server and register its name with any RFC 1001 and 1002-compliant dynamic name services.

NOTE

If you do not want your print server configured via DHCP, you must set the Boot Method to static so that the print server has a static IP address. This will prevent the print server from trying to obtain an IP address from any of these systems. To change the Boot Method, use the machine's control panel Network menu, BRAdmin applications, or Web Based Management (web browser).

Using RARP to configure the IP address

Before you configure the IP address using RARP, you must set the machine's Boot Method to RARP. To change the Boot Method, use the machine's control panel Network menu, BRAdmin applications, or Web Based Management (web browser).

The Brother print server's IP address can be configured using the Reverse ARP (RARP) facility on your host computer. This is done by editing the /etc/ethers file (if this file does not exist, you can create it) with an entry similar to the following:

00:80:77:31:01:07 BRN008077310107 (or BRW008077310107 for a wireless network)

Where the first entry is the MAC Address (Ethernet Address) of the print server and the second entry is the name of the print server (the name must be the same as the one you put in the /etc/hosts file).

If the RARP daemon is not already running, start it (depending on the system the command can be rarpd, rarpd -a, in.rarpd -a, or another command; type man rarpd or refer to your system documentation for additional information). To verify that the RARP daemon is running on a Berkeley UNIX based system, type the following command:

ps -ax | grep -v grep | grep rarpd

For AT&T UNIX-based systems, type:

ps -ef | grep -v grep | grep rarpd

The Brother print server will get the IP address from the RARP daemon when the machine is powered on.

Using BOOTP to configure the IP address

Before you configure the IP address using BOOTP, you must set the machine's Boot Method to BOOTP. To change the Boot Method, use the machine's control panel Network menu, BRAdmin applications, or Web Based Management (web browser).

BOOTP is an alternative to RARP that has the advantage of allowing configuration of the subnet mask and gateway. In order to use BOOTP to configure the IP address make sure that BOOTP is installed and running on your host computer (it should appear in the /etc/services file on your host as a real service; type man bootpd or refer to your system documentation for information). BOOTP is usually started up via the /etc/inetd.conf file, so you may need to enable it by removing the "#" in front of the bootp entry in that file. For example, a typical bootp entry in the /etc/inetd.conf file would be:

#bootp dgram udp wait /usr/etc/bootpd bootpd -i

Depending on the system, this entry might be called "bootps" instead of "bootp".

NOTE

In order to enable BOOTP, simply use an editor to delete the "#" (if there is no "#", then BOOTP is already enabled). Then edit the BOOTP configuration file (usually /etc/bootptab) and enter the name, network type (1 for Ethernet), MAC Address (Ethernet Address) and the IP address, subnet mask and gateway of the print server. Unfortunately, the exact format for doing this is not standardized, so you will need to refer to your system documentation to determine how to enter this information (many UNIX systems also have template examples in the bootptab file that you can use for reference). Some examples of typical /etc/bootptab entries include: ("BRN" below is "BRW" for a wireless network.)

BRN310107 1 00:80:77:31:01:07 192.168.1.2

and:

BRN310107:ht=ethernet:ha=008077310107:\ip=192.168.1.2:

Certain BOOTP host software implementations will not respond to BOOTP requests if you have not included a download filename in the configuration file. If this is the case, simply create a null file on the host and specify the name of this file and its path in the configuration file.

As with RARP, the print server will load its IP address from the BOOTP server when the machine is powered on.

Using APIPA to configure the IP address

The Brother print server supports the Automatic Private IP Addressing (APIPA) protocol. With APIPA, DHCP clients automatically configure an IP address and subnet mask when a DHCP server is not available. The device chooses it's own IP address in the range 169.254.1.0 through to 169.254.254.255. The subnet mask is automatically set to 255.255.0.0 and the gateway address is set to 0.0.0.0.

By default, the APIPA protocol is enabled. If you want to disable the APIPA protocol, you can disable it using the control panel of the machine, BRAdmin Light, or Web Based Management (web browser).

Using ARP to configure the IP address

If you are unable to use the BRAdmin application and your network does not use a DHCP server, you can also use the ARP command. The ARP command is available on Windows[®] systems that have TCP/IP installed as well as UNIX systems. To use ARP enter the following command at the command prompt:

arp -s ipaddress ethernetaddress

ping ipaddress

Where ethernetaddress is the MAC Address (Ethernet Address) of the print server and ipaddress is the IP address of the print server. For example:

■ Windows[®] systems

Windows[®] systems require the dash "-" character between each digit of the MAC Address (Ethernet Address).

arp -s 192.168.1.2 00-80-77-31-01-07

ping 192.168.1.2

UNIX/Linux systems

Typically, UNIX and Linux systems require the colon ":" character between each digit of the MAC Address (Ethernet Address).

arp -s 192.168.1.2 00:80:77:31:01:07

ping 192.168.1.2

NOTE

You must be on the same Ethernet segment (that is, there cannot be a router between the print server and operating system) to use the arp -s command.

If there is a router, you may use BOOTP or other methods described in this chapter to enter the IP address. If your administrator has configured the system to deliver IP addresses using BOOTP, DHCP, or RARP your Brother print server can receive an IP address from any one of these IP address allocation systems. In which case, you will not need to use the ARP command. The ARP command only works once. For security reasons, once you have successfully configured the IP address of a Brother print server using the ARP command again to change the address. The print server will ignore any attempts to do this. If you wish to change the IP address again, use a Web Based Management (web browser), TELNET (using the SET IP ADDRESS command) or factory reset the print server (which will then allow you to use the ARP command again).

Using the TELNET console to configure the IP address

You can also use the TELNET command to change the IP address.

TELNET is an effective method to change the machine's IP address. But a valid IP address must already be programmed into the print server.

Type TELNET <command line> at the command prompt of the system prompt, where <command line> is the IP address of the print server. When you are connected, push the Return or Enter key to get the "#" prompt. Enter the password "access" (the password will not appear on the screen).

You will be prompted for a user name. Enter anything in response to this prompt.

You will then get the Local > prompt. Type SET IP ADDRESS ipaddress, where ipaddress is the desired IP address you wish to assign to the print server (check with your network administrator for the IP address to use). For example:

Local> SET IP ADDRESS 192.168.1.3

You will now need to set the subnet mask by typing SET IP SUBNET subnet mask, where subnet mask is the desired subnet mask you wish to assign to the print server (check with your network administrator for the subnet mask to use). For example:

Local> SET IP SUBNET 255.255.255.0

If you do not have any subnets, use one of the following default subnet masks:

255.0.0.0 for class A networks

255.255.0.0 for class B networks

255.255.255.0 for class C networks

The leftmost group of digits in your IP address can identify the type of network you have. The value of this group ranges from 1 through 127 for Class A networks (e.g. 13.27.7.1), 128 through 191 for Class B networks (e.g. 128.10.1.30), and 192 through 255 for Class C networks (e.g. 192.168.1.4).

If you have a gateway (router), enter its address with the command SET IP ROUTER routeraddress, where routeraddress is the desired IP address of the gateway you wish to assign to the print server. For example:

Local> SET IP ROUTER 192.168.1.4

Type SET IP METHOD STATIC to set the method of IP access configuration to static.

To verify that you have entered the IP information correctly, type SHOW IP.

Type EXIT or Ctrl-D (i.e. hold down the control key and type "D") to end the remote console session.

C Index

Α

36, 85, 107
102
85, 108

B

BINARY_P1	105
BOOTP	85, 107
BRAdmin Light	2, 4
BRAdmin Professional 3	2, 7, 68
BRNxxxxxxxxxx	105
BRNxxxxxxxxxAT	
BRPrint Auditor	8

С

CA	
CA Certificate	
Certificate	
Channels	
CIFS	
CKIP	
Control Panel	
CSR	
Custom Raw Port	

D

DHCP85	, 105
Digital signature	. 100
DNS client	86
Driver Deployment Wizard	2

E

EAP-FAST	
EAP-MD5	
EAP-TLS	
EAP-TTLS	
Encryption	
Ethernet	

F

Factory default	
-----------------	--

G

Gateway	
	••••

Н

HTTP	44, 87	7
HTTPS	66, [′] 101	1

IEEE 802.1x	
Infrastructure mode	
IP address	
IP Boot Tries	
IPP	
IPPS	
IPv6	

L

LEAP	
LLMNR	
LPR/LPD	

Μ

MAC A	ddress	 	5, 6,	7, 3	8, 39	, 98,	105,
		 			. 106	, 107	, 108
mDNS		 					86

Ν

NetBIOS name resolution	
Network Configuration Report	
Network Connection Repair Tool	
Network Key	
Network shared printing	

0

റ.	200	avatam	<u>^ </u>
UЛ)en	system	 94
~ r			 • •

C

Index

Ρ

PBC	
PCL P1	
PEAP	91
Peer-to-Peer	
PIN Method	
POP before SMTP	
POP over SSL	
Port 9100	
POSTSCRIPT_P1	
Protocol	
Public key cryptosystem	

R

RARP85,	106
Reset the network settings	39
RFC 1001	105

S

Service	105
Shared key	94
Shared key cryptosystem	100
SMTP client	86
SMTP over SSL	102
SMTP-AUTH	70, 102
SNMP	87
SNMPv3	66, 101
SNTP	88
SSID	
SSL/TLS	54, 101
Status Monitor	2
Subnet mask	36, 90
Supported protocols and security features	104

Т

TCP/IP	
TELNET	
TEXT_P1	
TKIP	

V _____

Vertical Pairing		2,9	97
------------------	--	-----	----

W

Web Based Management (web brow	ser) 2, 7, 66
Web Services	
WEP	
WINS	
Wireless network	
WLAN report	
WPA-PSK/WPA2-PSK	
WPS (Wi-Fi Protected Setup)	