


Replacing the drum unit HL-XXXX


Auswechseln der Trommeleinheit / Remplacement de l'unité tambour / De drumeenheid vervangen / Sostituire l'unità tamburo / Sustitución de la unidad de tambor / Substituição da unidade do tambor / Substituindo a unidade de cilindro / Utskifting av trommelenheten / Byta ut trumman / Udsiktning af tromleenhed / Rumpuysikön vaihtaminen

Version 0


1 Keep the machine powered ON. *1

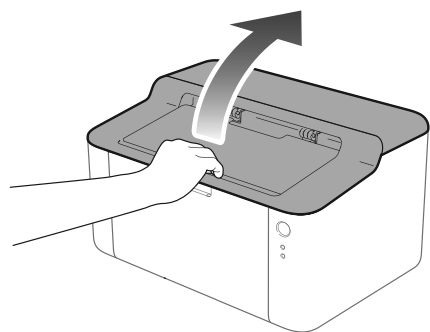


2

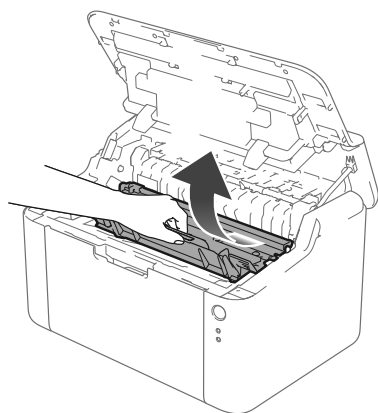



3

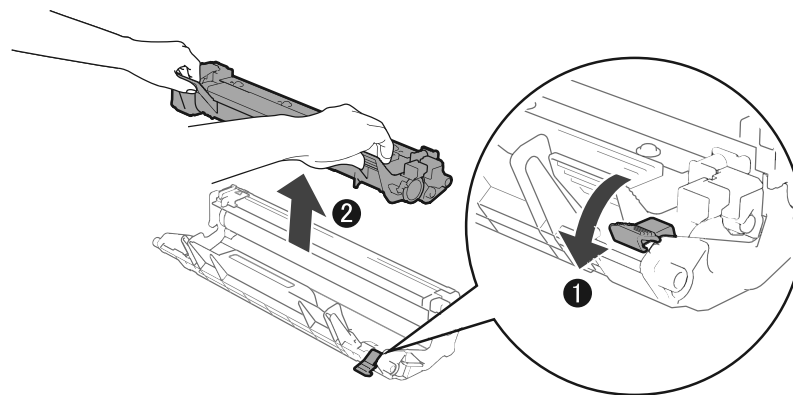


4

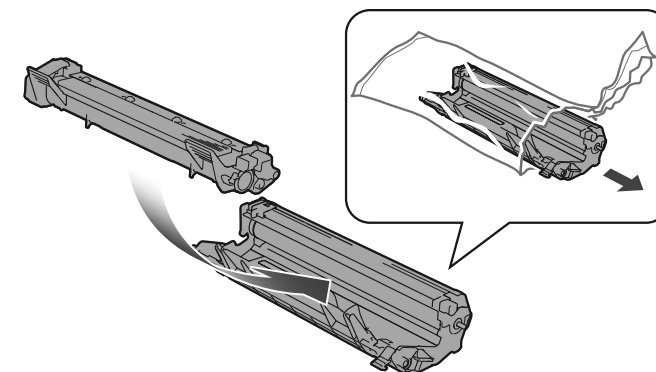


5

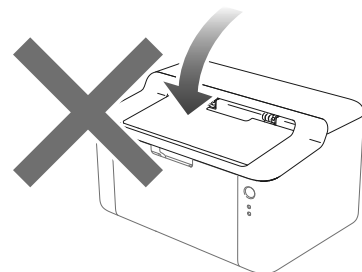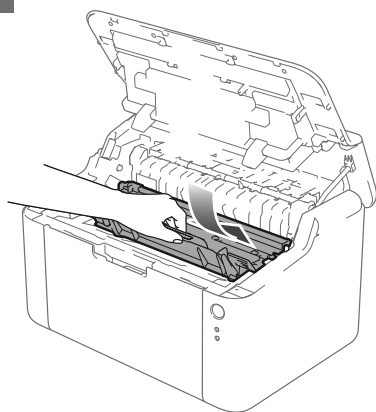

6

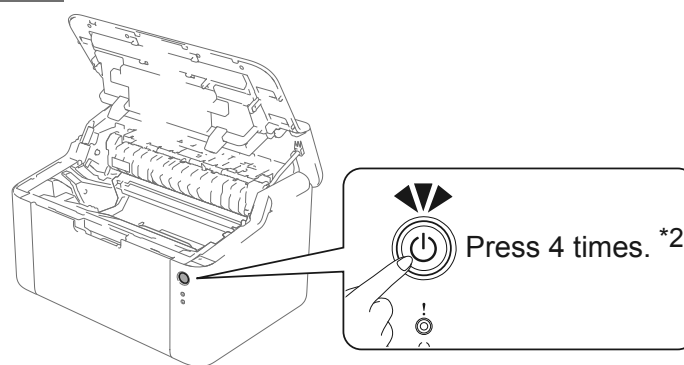

7

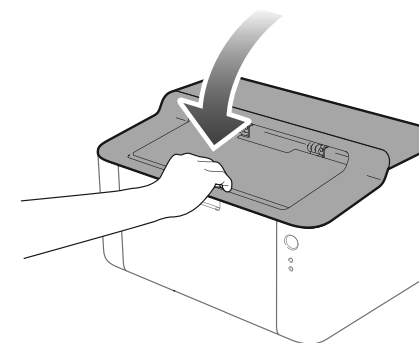


*1 Lassen Sie das Gerät eingeschaltet. / Laissez l'appareil sous tension. / Zorg dat de machine AAN blijft staan. / Mantenere la macchina ACCESA. / Mantenga el equipo encendido. / Mantenha o equipamento com a alimentação ligada. / Mantenha o aparelho ligado. / La maskinen stå PÅ. / Låt strömmen till skrivaren vara PÅ. / Sørg for, at strømmen til maskinen er TÆNDT. / Pidä laitteen virta kytkettynä.

*2 4-mal drücken. / Appuyez 4 fois sur ce bouton. / Druk 4 keer. / Premere 4 volte. / Pulse 4 veces. / Prima 4 vezes. / Pressione 4 vezes. / Trykk 4 ganger. / Tryck 4 gånger. / Tryk 4 gange. / Paina 4 kertaa.


Replacing the drum unit
MFC-XXXX / DCP-XXXX

Auswechseln der Trommeleinheit / Remplacement de l'unité tambour / De drumeenheid vervangen / Sostituire l'unità tamburo / Sustitución de la unidad de tambor /
Substituição da unidade do tambor / Substituindo a unidade de cilindro / Utskifting av trommelenheten / Byta ut trumman / Udskiftning af tromleenhed / Rumpuysikön vaihtaminen


1 Keep the machine powered ON. *1

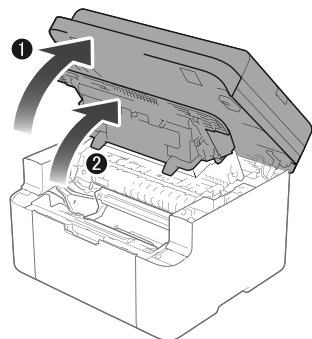


2

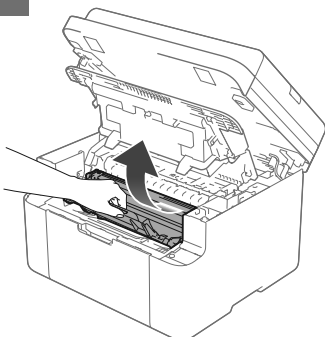


3

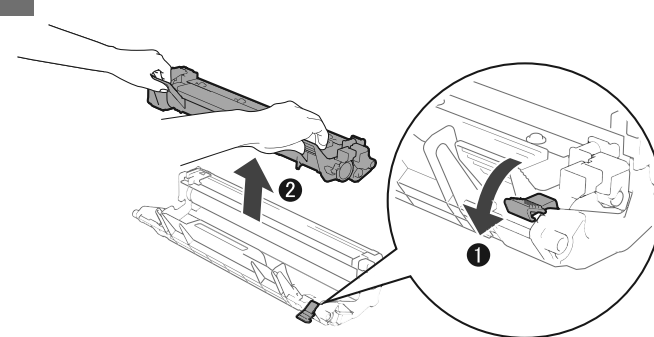


4

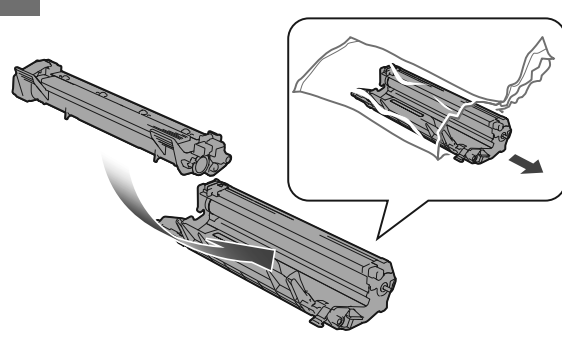


5

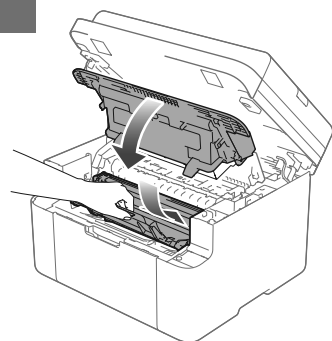

6

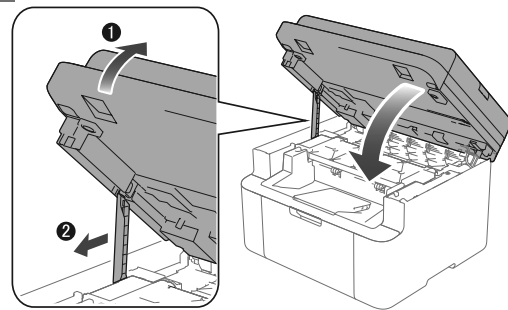

7

 

8



Select ▲▼ or OK
Machine Info.



9



Machine Info.
Reset Drum



For 3 sec.

Reset Drum
▲ Reset ▼ Exit



Reset Drum
Accepted

*1 Lassen Sie das Gerät eingeschaltet. / Laissez l'appareil sous tension. / Zorg dat de machine AAN blijft staan. / Mantenere la macchina ACCESA. / Mantenga el equipo encendido. / Mantenha o equipamento com a alimentação ligada. / Mantenha o aparelho ligado. / La maskinen stå PÅ. / Låt strömmen till skrivaren vara PÅ. / Sørg for, at strømmen til maskinen er TÆNDT. / Pidä laitteen virta kytkettynä.

*2 Menü

*3 ▲▼ oder OK / Sélection. ▲▼ ou OK / Select. ▲▼ of OK / Sel. ▲▼ o OK / Seleccion. ▲▼ u OK / Seleccion. ▲▼ ou OK / Seleccion. ▲▼ ou OK / Velg ▲▼ eller OK / Välj ▲▼ eller OK / Velg ▲▼ eller OK / Valit. ▲▼ tai OK / Geräte-Info / Info. appareil / Machine-info / Info. macchina / Info. equipo / Info. aparelho / Info. Aparelho / Maskin Info / Maskininform. / Maskin-info / Laitetiedot

*4 Geräte-Info / Info. appareil / Machine-info / Machine-info / Info. macchina / Info. equipo / Info. aparelho / Info. Aparelho / Maskin Info / Maskininform. / Maskin-info / Laitetiedot / Trommel rücks. / Réin. tambour / Drum resetten / Drumreset / Reset tamb / Reajus. tambor / Repor tambor / Redef. Cilin. / Nullst.trommel / Återst. trymma / Nulstil tromle / Nollaa laskuri

*5 Für 3 Sek. / Maintenez ce bouton enfoncé pendant 3 s. / Gedurende 3 sec. / Per 3 sec. / Durante 3 s. / Durante 3 segundos. / Por 3 seg. / I 3 sek. / 3 s ajan.

*6 Trommel rücks. / Réin. tambour / Drum resetten / Drumreset / Reset tamb / Reajus. tambor / Repor tambor / Redef. Cilin. / Nullst.trommel / Återst. trymma / Nulstil tromle / Nollaa laskuri / ▲ Reset ▼ Nein / ▲ Init. ▼ Quit. / ▲ Herstel ▼ Stop / ▲ Herstel ▼ Stop / ▲ Reset ▼ Esci / ▲ Reconf ▼ Salir / ▲ Repor ▼ Sair / ▲ Reset ▼ Sair / ▲ Reset ▼ Stopp / ▲ Reset ▼ Angra / ▲ Nulst ▼ Exit / ▲ Alust ▼ Poistu

*7 Trommel rücks. / Réin. tambour / Réin. tambour / Drum resetten / Drumreset / Reset tamb / Reajus. tambor / Repor tambor / Redef. Cilin. / Nullst.trommel / Återst. trymma / Nulstil tromle / Nollaa laskuri / Ausgeführt! / Confirmé / Confirmé! / Geaccepteerd / Geaccepteerd / Accettato / Aceptado / Aceite / Aceito / Godkjent / Acceptorat / Acceptorat / Hyväksytty