

 
 
 
 

 
 
 

Thank you for choosing Brother. Your support is important to us and we value your business. Before using your machine, read this Quick Setup Guide for the correct setup and installation.

NOTE

- For **DSmobile 720D** users: This guide uses **DSmobile 620** screen images.

1

Unpack the machine and check the components

| | | | | |
|-----------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
|  DSmobile 620 or DSmobile 720D |  Micro USB Cable |  Quick Setup Guide |  Carrier Sheet |  Calibration Sheet |
|  DVD-ROM |  Product Registration Sheet / Warranty Card |  Cleaning Cloth |  Soft Carrying Bag | |

* If your computer does not have a DVD-ROM drive, the supplied DVD-ROM does not contain drivers for your operating system, or you want to download manuals and utilities, visit your model page at <http://support.brother.com>

- a** Remove the packing material.
- b** Make sure you have all the components.

2

Install scanner drivers and scanning software

NOTE

- Make sure that your computer is ON and you are logged on with Administrator rights.
- DO NOT connect the USB cable yet.
- If your computer does not have a DVD-ROM drive, download the scanner driver from Brother Solutions Center at <http://support.brother.com>

For Windows® users

a Driver installation

Insert the DVD-ROM.

When the **Top Menu** appears, click **Install Scanner Driver** and follow the on-screen instructions.

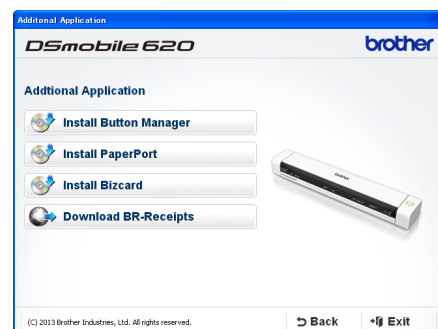 

NOTE

- When you install the scanner driver, **DSmobileCapture** (a scanning application) will be installed at the same time. For more information on using **DSmobileCapture**, see *Using DSmobileCapture (for Windows®)* in the *User's Guide*.

b Software installation

Click **Additional Applications** on the **Top Menu**, and then you can install these applications:

- **Button Manager V2**: document browsing and storing
- **PaperPort™ 12SE**: document scanning, editing and management
- **Presto! BizCard 6**: business card scanning, editing and management
- **BR-Receipts**: receipt scanning, editing and management



NOTE

- For more information on which scanning application will work best for you, see *Choosing your scanning software* in the *User's Guide*.
- To register your product and download **BR-Receipts**, click **Download BR-Receipts** to access the Brother Online site at <http://www.brother.com/product/brotheronline/>. **BR-Receipts** is included with the **DS-720D** and available for purchase with the **DS-620**.

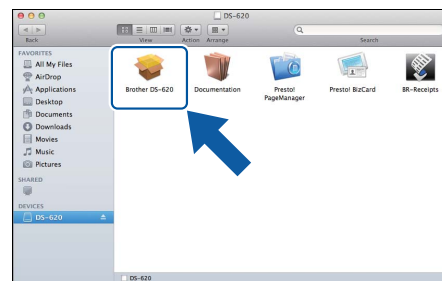 
For Macintosh users

a Driver installation

Insert the DVD-ROM.

Double-click the DVD icon, and then double-click the **DS-620 (DS-720D)** folder to open it.

Double-click **Brother DS-620 (DS-720D)**, and follow the on-screen instructions.



NOTE

- When you install the scanner driver, **DSmobileCapture** (a scanning application) will be installed at the same time. For more information on using **DSmobileCapture**, see *Using DSmobileCapture (for Macintosh)* in the *User's Guide*.

b Software installation

You can install these applications during the setup:






- **Presto! PageManager 9**: document scanning, editing and management
- **Presto! BizCard 6**: business card scanning, editing and management
- **BR-Receipts**: receipt scanning, editing and management

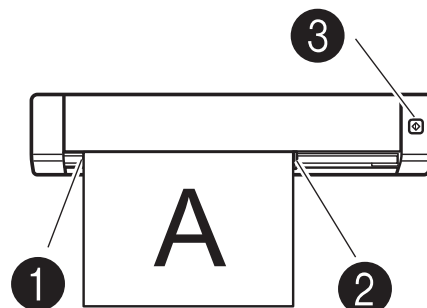 
NOTE

- For more information on which scanning application will work best for you, see *Choosing your scanning software* in the *User's Guide*.
- Double-clicking **Presto! PageManager** or **Presto! BizCard** will bring you to NewSoft Technology Corporation's website. Download the application from this website.
- To register your product and download **BR-Receipts**, double-click **BR-Receipts** to access the Brother Online site at <http://www.brother.com/product/brotheronline/>. **BR-Receipts** is included with the **DS-720D** and available for purchase with the **DS-620**.

3

Scan a document

- a** Connect the supplied Micro USB Cable to the micro USB port  on your scanner. Connect the other end of the cable to the USB port  on your computer.
- b** Insert your document, face up, into the feeder slot.
Align the document with the left edge ❶ of the feeder slot.
Slide the document guide ❷ until it touches the right side of the document.
For **DSmobile 720D**: When you perform duplex scanning, insert the first page face up into the feeder slot.
- c** (Windows®)
Double-click the **DSmobileCapture** shortcut  on your desktop.
Click **Scan** .
- (Macintosh)
Double-click the **DSmobileCapture** shortcut  on your desktop.
Click **Scan** or press the **Start** button ❸.



4

User's Guide and FAQs

This machine's User's Guide is located on the supplied DVD-ROM.

If your computer does not have a DVD-ROM drive, you can download manuals by visiting your model page at <http://support.brother.com>

For Windows® users

Insert the DVD-ROM.

When the **Top Menu** appears, click **User's Guides**.

For Macintosh users

Insert the DVD-ROM. Double-click the DVD icon, and then double-click **DS-620 (DS-720D)**.

Double-click **Documentation**, and then find your language folder.

FAQs

For FAQs (Frequently Asked Questions), Product Support and Technical Questions, Driver Updates and Utilities, and User's Guides, go to your model page at: <http://support.brother.com>

Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a registered trademark of Brother Industries, Ltd.

Windows is registered trademark of Microsoft Corporation in the United States and/or other countries.

Macintosh and Mac OS are trademarks of Apple Inc., registered in the United States and other countries.

Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

Compilation and Publication

Under the supervision of Brother Industries, Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.






Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.





















Copyright and License











© 2015 Brother Industries, Ltd. All rights reserved.









Product Safety Guide

Symbols and conventions used in this documentation

| | |
|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
|  WARNING | WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries. |
|  CAUTION | CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries. |
| IMPORTANT | IMPORTANT indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product function. |
|  | Hazard notice: "Be careful." |
|  | Restricted conduct. |
|  | Proper conduct: "What you have to do." |

|  WARNING | |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | ■ Store the USB cable bundled out of the reach of children to avoid the risk of injury. |
|    | ■ Do not disassemble or modify the unit. This may result in a fire, electric shock, or device failure. Contact the store where this unit was purchased to inspect, adjust, and repair the internal components of the unit. (There will be a charge for repairs even when conducted within the warranty period if the unit fails due to the disassembly or modifications by the customer.) |
|    | ■ Do not use the device in abnormal conditions, i.e. appearance of smoke, strange smell, odd noise, etc. This may result in a fire, burns, or device failure. Remove the USB cable from the outlet. Contact the store where this unit was purchased. |
|    | ■ In the event that foreign material enters the unit, remove the USB cable. Contact the store where this unit was purchased. This may result in a fire, electric shock, or device failure. |
|    | ■ Do not spill drinks, i.e. coffee, juice, etc., or water on the device. Do not use the device in places where water may splash the device. This may result in igniting a fire, electric shock, or device failure. In such a event, remove the USB cable from the outlet. Contact the store where this unit was purchased. |
|   | ■ Keep plastic bags bundled out of the reach of children or throw them away to avoid the danger of suffocation. |
|   | ■ Do not place near open flames or heater. This may result in a fire or device failure. |

|  CAUTION | |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | ■ Strong jolts, i.e. drop, being stepped on, etc., may damage the unit. This may result in injury. In the event that the unit is damaged, remove the USB cable from the outlet. Contact the store where this unit was purchased. |
|   | ■ Do not locate the device on rickety or asloped tables. Do not locate the device on unstable surface. The device may fall down and this may result in injury. |
|  | ■ Do not place heavy objects on the unit. It may cause unbalance and the device may fall down. This may result in injury. |
|   | ■ Do not use an organic solvent, i.e. flammable gas, alcohol, etc., when cleaning the device. Do not use them near the device. This may result in a fire or device failure. |
|  | ■ Be cautious when you handle paper. Edges of paper may cut your hands. |

| IMPORTANT | |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | ■ Do not leave the device at places exposed to direct sunlight and places near open flames or heater with extremely high or low temperature. Do not use and store the device in locations of much humidity and dust. |
|  | ■ Do not conduct any operations not instructed in this guide. This may result in injury or device failure. |
|    | ■ Do not use an organic solvents, i.e. paint thinner, benzene, alcohol, etc., when cleaning the unit. This may damage the finish on the surface or may peel the paint resulting in damage. Wipe away any dirt on the unit using a soft, dry cloth. |
|  | ■ Do not use any USB cables except the USB cable bundled. |
|   | ■ Do not use the device in locations where temperature changes are extreme. The resulting condensation may result in device failure or malfunction. In the event of condensation, use only after drying the device naturally. |

Federal Communications Commission (FCC) Declaration of Conformity (USA only)

Responsible Party: Brother International Corporation
200 Crossing Boulevard
Bridgewater, NJ 08807-0911 USA
TEL: (908) 704-1700

declares, that the products

Product Name: DSmobile 620 / DSmobile 720D

Model Numbers: DS-620 / DS-720D

comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Call the dealer or an experienced radio/TV technician for help.

IMPORTANT

- Changes or modifications not expressly approved by Brother Industries, Ltd. could void the user's authority to operate the equipment.
- A shielded interface cable should be used to ensure compliance with the limits for a Class B digital device.



Brother
Earth

www.brotherearth.com

brother