


Basic User's Guide

MFC-J2310
MFC-J4410DW
MFC-J4610DW

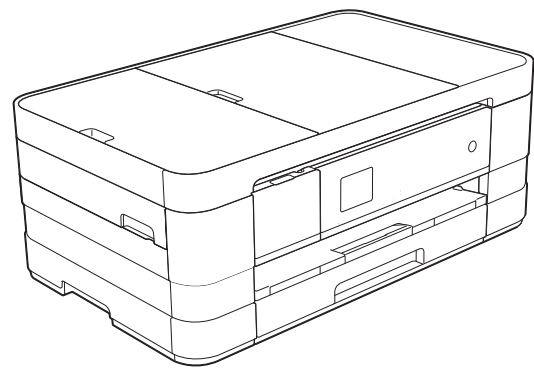

If you need to call Customer Service

Complete the following information for future reference:

**Model Number: MFC-J2310, MFC-J4410DW and
MFC-J4610DW (Circle your model number)**

Serial Number: ¹ _____

Date of Purchase: _____

Place of Purchase: _____

¹ **The serial number is on the back of the unit. Retain this User's Guide with your sales receipt as a permanent record of your purchase, in the event of theft, fire or warranty service.**

Register your product on-line at

<http://www.brother.com/registration/>

User's Guides and where do I find them?

Which Guide?	What's in it?	Where is it?
Product Safety Guide	Read this Guide first. Read the Safety Instructions before you set up your machine. See this Guide for trademarks and legal limitations.	Printed / In the box
Quick Setup Guide	Follow the instructions for setting up your machine, and installing the drivers and software for the operating system and connection type you are using.	Printed / In the box
Basic User's Guide	Learn the basic Fax, Copy, Scan and PhotoCapture Center™ operations and how to replace consumables. See troubleshooting tips.	Printed / In the box
Advanced User's Guide	Learn more advanced operations: Fax, Copy, security features, printing reports and performing routine maintenance.	PDF file / CD-ROM
Software User's Guide	Follow these instructions for Printing, Scanning, Network Scanning, PhotoCapture Center™, Remote Setup, PC-Fax, Web Services (Scan), and using the Brother ControlCenter utility.	PDF file / CD-ROM
Network User's Guide	This Guide provides useful information about wired and wireless network settings and security settings using the Brother machine. You can also find supported protocol information for your machine and detailed troubleshooting tips.	PDF file / CD-ROM
Web Connect Guide	This Guide provides useful information about accessing Internet services from the Brother machine, as well as downloading images, printing data and uploading files directly to Internet services.	PDF file / Brother Solutions Center ¹
AirPrint Guide	This Guide provides information for using AirPrint to print from Mac OS X v10.7.x and your iPhone, iPod touch, iPad, or other iOS device to your Brother machine without installing a printer driver.	PDF file / Brother Solutions Center ¹
Google Cloud Print Guide	This Guide provides information about how to use Google Cloud Print™ services for printing over the Internet.	PDF file / Brother Solutions Center ¹
Wi-Fi Direct™ Guide	This Guide provides information about how to configure and use your Brother machine for wireless printing directly from a mobile device supporting the Wi-Fi Direct™ standard.	PDF file / Brother Solutions Center ¹
Mobile Print/Scan Guide for Brother iPrint&Scan	This Guide provides useful information about printing from your mobile device and scanning from your Brother machine to your mobile device when connected to a Wi-Fi network.	PDF file / Brother Solutions Center ¹

¹ Visit us at <http://solutions.brother.com/>.

Table of Contents

(Basic User's Guide)

1	General information	1
	Using the documentation	1
	Symbols and conventions used in the documentation	1
	Accessing the Advanced User's Guide, Software User's Guide and Network User's Guide	2
	Viewing User's Guides	2
	Accessing Brother Support (Windows®)	4
	Accessing Brother Support (Macintosh)	5
	Control panel overview	6
	1.8" Touchscreen LCD	8
	Basic Operations	9
	Shortcut Settings	10
	Adding Shortcuts	10
	Changing Shortcuts	11
	Deleting Shortcuts	12
	Using Shortcuts	12
	Volume Settings	12
	Ring Volume	12
	Beeper Volume	13
	Speaker Volume	13
	Touchscreen LCD	14
	Setting the backlight brightness	14
2	Loading paper	15
	Loading paper and other print media	15
	Loading paper in paper tray #1	15
	Loading smaller paper (Photo, Photo L and envelopes)	18
	Loading paper in paper tray #2 (MFC-J4610DW)	21
	Loading paper in the manual feed slot	24
	Unprintable area	28
	Paper settings	29
	Paper Size and Type (MFC-J2310 and MFC-J4410DW)	29
	Paper Size and Type (MFC-J4610DW)	30
	Tray use in Copy mode (MFC-J4610DW)	30
	Tray use in Fax mode (MFC-J4610DW)	31
	Acceptable paper and other print media	31
	Recommended print media	32
	Handling and using print media	32
	Choosing the right print media	33
3	Loading documents	36
	How to load documents	36
	Using the ADF (MFC-J4410DW and MFC-J4610DW)	36
	Using the scanner glass	37
	Unscannable area	38

4	Sending a fax	39
	How to send a fax.....	39
	Stop faxing.....	40
	Setting scanner glass size for faxing.....	40
	Colour fax transmission.....	41
	Cancelling a fax in progress.....	41
	Transmission Verification Report.....	41
5	Receiving a fax	42
	Receive Modes.....	42
	Choose the Receive Mode.....	42
	Using Receive Modes.....	44
	Fax Only.....	44
	Fax/Tel.....	44
	Manual.....	44
	External TAD.....	44
	Receive Mode settings.....	45
	Ring Delay.....	45
	F/T Ring Time (Fax/Tel mode only).....	45
	Fax Detect.....	46
6	Telephone and external devices	47
	Voice operations.....	47
	Tone or Pulse (Not Available for New Zealand).....	47
	Fax/Tel mode.....	47
	Telephone Service for Australia.....	47
	Distinctive Ring.....	47
	Caller ID.....	49
	How Does the Caller ID Work?.....	49
	The Caller ID is Stored in Your Machine Memory.....	49
	Telephone Service for New Zealand.....	50
	FaxAbility.....	50
	Caller ID.....	51
	How Does the Caller ID Work?.....	52
	Telephone Service for Some Countries.....	52
	Distinctive Ring (For Singapore and Hong Kong).....	52
	Caller ID (For Singapore, Hong Kong and Taiwan).....	53
	Connecting an external TAD (telephone answering device).....	54
	Connections settings.....	55
	Recording an outgoing message (OGM) on an external TAD.....	56
	Multi-line connections (PABX).....	56
	External and extension telephones.....	56
	Connecting an external or extension telephone.....	56
	Operation from external and extension telephones.....	57
	Using a cordless external telephone.....	57
	Using remote codes.....	57

7	Dialling and storing numbers	59
	How to dial	59
	Manual dialling.....	59
	Speed Dialling	59
	Fax Redial	59
	Additional Dialling Operations.....	60
	Outgoing Call history	60
	Caller ID history	60
	Storing numbers	61
	Storing a pause	61
	Storing Speed Dial numbers.....	61
	Changing Speed Dial names or numbers.....	63
8	Making copies	64
	How to copy	64
	Stop copying.....	64
	Copy options.....	64
	Paper Type	65
	Paper Size	65
	Tray Select (MFC-J4610DW)	65
9	Printing photos from a memory card or USB Flash memory drive	66
	PhotoCapture Center™ operations (PHOTO mode)	66
	Using a memory card or USB Flash memory drive	66
	Getting started	67
	Print Images.....	69
	View Photos.....	69
	PhotoCapture Center™ print settings.....	69
	How to scan to a memory card or USB Flash memory drive.....	70
10	How to print from a computer	71
	Printing a document.....	71
11	How to scan to a computer	72
	Before scanning	72
	Scanning a document as a PDF file using ControlCenter4 (Windows®)	73
	How to change the machine's Scan mode settings for PDF scanning	76
	How to scan a document as a PDF file using the Touchscreen	78

A	Routine maintenance	79
	Replacing the ink cartridges	79
	Cleaning and checking the machine	82
	Cleaning the scanner glass	82
	Cleaning the print head	83
	Checking the print quality	83
	Checking the print alignment	85
B	Troubleshooting	86
	Identifying your problem	86
	Error and Maintenance messages	88
	Error animations display	98
	Transferring your faxes or Fax Journal report	98
	Document jam (MFC-J4410DW and MFC-J4610DW)	99
	Printer jam or paper jam	101
	If you are having difficulty with your machine	108
	Dial Tone detection	119
	Telephone line interference / VoIP	119
	Machine Information	120
	Checking the serial number	120
	Reset functions	120
	How to reset the machine	120
C	Settings and features tables	121
	Using the Settings Tables	121
	Settings tables	122
	Features tables	138
	Entering Text	155
	Inserting spaces	155
	Making corrections	155
	Repeating letters	155
D	Specifications	156
	General	156
	Print media	159
	Fax	161
	Copy	162
	PhotoCapture Center™	163
	PictBridge	164
	Scanner	165
	Printer	166
	Interfaces	167
	Network	168
	Computer requirements	169
	Consumable items	170
E	Index	171

Table of Contents

(Advanced User's Guide)

The Advanced User's Guide explains the following features and operations.

You can view the Advanced User's Guide on the CD-ROM.

1 General setup

IMPORTANT NOTE

Memory Storage

*Setting Daylight Saving Time
(MFC models)*

Sleep Mode

Auto Power Off (DCP-J4110DW)

Touchscreen LCD

Dial Prefix

2 Security features

Secure Function Lock 2.0

3 Sending a fax (MFC models only)

Additional sending options

Additional sending operations

Polling overview

4 Receiving a fax (MFC models only)

Memory Receive (Monochrome only)

Remote Retrieval

Additional receiving operations

Polling overview

5 Dialling and storing numbers (MFC models only)

Additional dialling operations

Additional ways to store numbers

6 Printing reports

Fax reports (MFC models only)

Reports

7 Making copies

Copy options

8 Printing photos from a memory card or USB Flash memory drive

PhotoCapture Center™ operations

Print Images

PhotoCapture Center™ print settings

*Scan to a memory card or USB Flash
memory drive*

9 Printing photos from a camera

Printing photos directly from a

PictBridge camera

*Printing photos directly from a digital
camera (without PictBridge)*

A Routine maintenance

Cleaning and checking the machine

Packing and shipping the machine

B Glossary

C Index

Using the documentation

Thank you for buying a Brother machine! Reading the documentation will help you make the most of your machine.

Symbols and conventions used in the documentation

The following symbols and conventions are used throughout the documentation.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.

CAUTION


CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.

IMPORTANT

IMPORTANT indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product functionality.

NOTE

Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.

 Electrical Hazard icons alert you to possible electrical shocks.

Bold Bold typeface identifies the dial pad numbers of the Touchpanel and buttons on your computer screen.

Italics Italicized typeface emphasizes an important point or refers you to a related topic.


Courier New Text in the Courier New font identifies messages on the Touchscreen of the machine.

Accessing the Advanced User's Guide, Software User's Guide and Network User's Guide

This Basic User's Guide does not contain all the information about the machine, such as how to use the advanced features for Fax, Copy, PhotoCapture Center™, Printer, Scanner, PC-Fax, and Network. When you are ready to learn detailed information about these operations, you can read the **Advanced User's Guide**, **Software User's Guide** and **Network User's Guide** that are on the CD-ROM.

Viewing User's Guides

(Windows®)

To view the documentation, from , **All Programs**, select **Brother, MFC-XXXX** (where XXXX is your model name) from the programs list, and then choose **User's Guides**.

If you have not installed the software, you can find the documentation on the CD-ROM by following the instructions below:


- 1 Turn on your PC. Insert the Brother CD-ROM into your CD-ROM drive.

NOTE

If the Brother screen does not appear automatically, go to **My Computer** or **Computer**, double-click the CD-ROM icon, and then double-click **start.exe**.

- 2 If the model name screen appears, click your model name.

- 3 If the language screen appears, click your language. The CD-ROM **Top Menu** will appear.

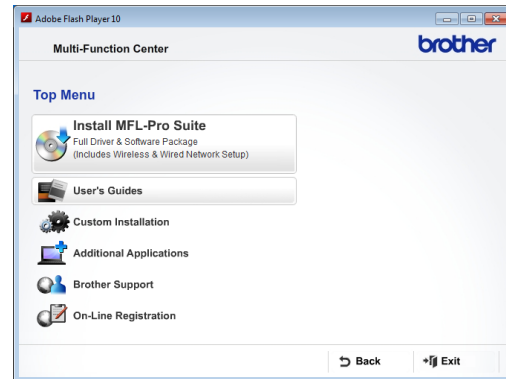

- 4 Click **User's Guides**.
- 5 Click **PDF documents**. If the country screen appears, choose your country. After the list of User's Guides appears, choose the guide you want to read.

(Macintosh)

- 1 Turn on your Macintosh. Insert the Brother CD-ROM into your CD-ROM drive. The following window will appear.



- 2 Double-click the **User's Guides** icon.
- 3 Choose your language.
- 4 Click **User's Guides**. If the country screen appears, choose your country.
- 5 After the list of User's Guides appears, choose the Guide you want to read.

How to find Scanning instructions

There are several ways you can scan documents. You can find the instructions as follows:

Software User's Guide

- *Scanning*
- *ControlCenter*
- *Network Scanning*

**Nuance™ PaperPort™ 12SE
How-to-Guides****(Windows®)****(Not available in Hong Kong and Taiwan)**

- The complete Nuance™ PaperPort™ 12SE How-to-Guides can be viewed from the Help section in the PaperPort™ 12SE application.

Presto! PageManager User's Guide**(Windows®)****(Hong Kong and Taiwan only)**

- Instructions for scanning directly from Presto! PageManager. The complete Presto! PageManager User's Guide can be viewed from the Help selection in the Presto! PageManager application.

**Presto! PageManager User's Guide
(Macintosh)****NOTE**

Presto! PageManager must be downloaded and installed before use. For more information, see *Accessing Brother Support (Macintosh)* on page 5.

- The complete Presto! PageManager User's Guide can be viewed from the Help section in the Presto! PageManager application.

How to find Network setup instructions


Your machine can be connected to a wireless or wired network.

- Basic setup instructions
(See Quick Setup Guide.)
- The wireless access point or router supports Wi-Fi Protected Setup™ or AOSS™
(See Quick Setup Guide.)
- More information about network setup
(See Network User's Guide.)

Accessing Brother Support (Windows®)

You can find all the contacts you will need, such as Web support (Brother Solutions Center) on the CD-ROM.

- Click **Brother Support** on the **Top Menu**. The following screen will appear:

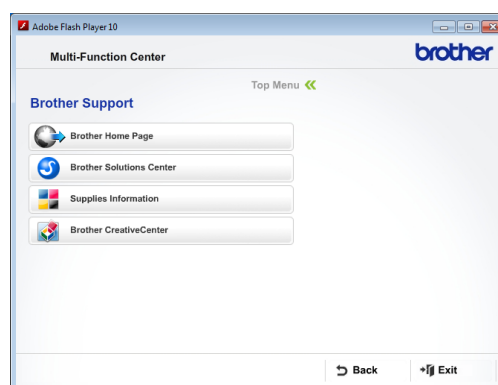

- To access our website (<http://www.brother.com/>), click **Brother Home Page**.
- For the latest news and product support information (<http://solutions.brother.com/>), click **Brother Solutions Center**.
- To visit our website for original Brother Supplies (<http://www.brother.com/original/>), click **Supplies Information**.
- To access the Brother CreativeCenter (<http://www.brother.com/creativecenter/>) for FREE photo projects and printable downloads, click **Brother CreativeCenter**.
- To return to the top menu, click **Back** or if you have finished, click **Exit**.

Accessing Brother Support (Macintosh)

You can find all the contacts you will need, such as Web support (Brother Solutions Center) on the CD-ROM.

- Double-click the **Brother Support** icon. The following screen will appear:



- To download and install Presto! PageManager, click **Presto! PageManager**.
- To access the Brother Web Connect page, click **Brother Web Connect**.
- To register your machine from the Brother Product Registration Page (<http://www.brother.com/registration/>), click **On-Line Registration**.
- For the latest news and product support information (<http://solutions.brother.com/>), click **Brother Solutions Center**.
- To visit our website for original Brother Supplies (<http://www.brother.com/original/>), click **Supplies Information**.

Control panel overview

MFC-J2310, MFC-J4410DW and MFC-J4610DW have the same 1.8" Touchscreen LCD and Touchpanel.




NOTE


Most of the illustrations in this User's Guide show the MFC-J4410DW.

1 1.8" Touchscreen LCD (Liquid Crystal Display)

This is a Touchscreen LCD. You can access the menus and options by pressing them as they are displayed on this screen.

You can adjust the angle of the Touchscreen LCD and Touchpanel by lifting it. To lower this control panel, push the release button that is located behind the mark, as shown in the illustration.

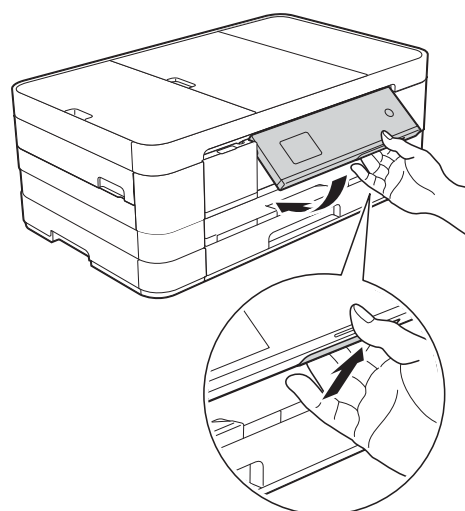

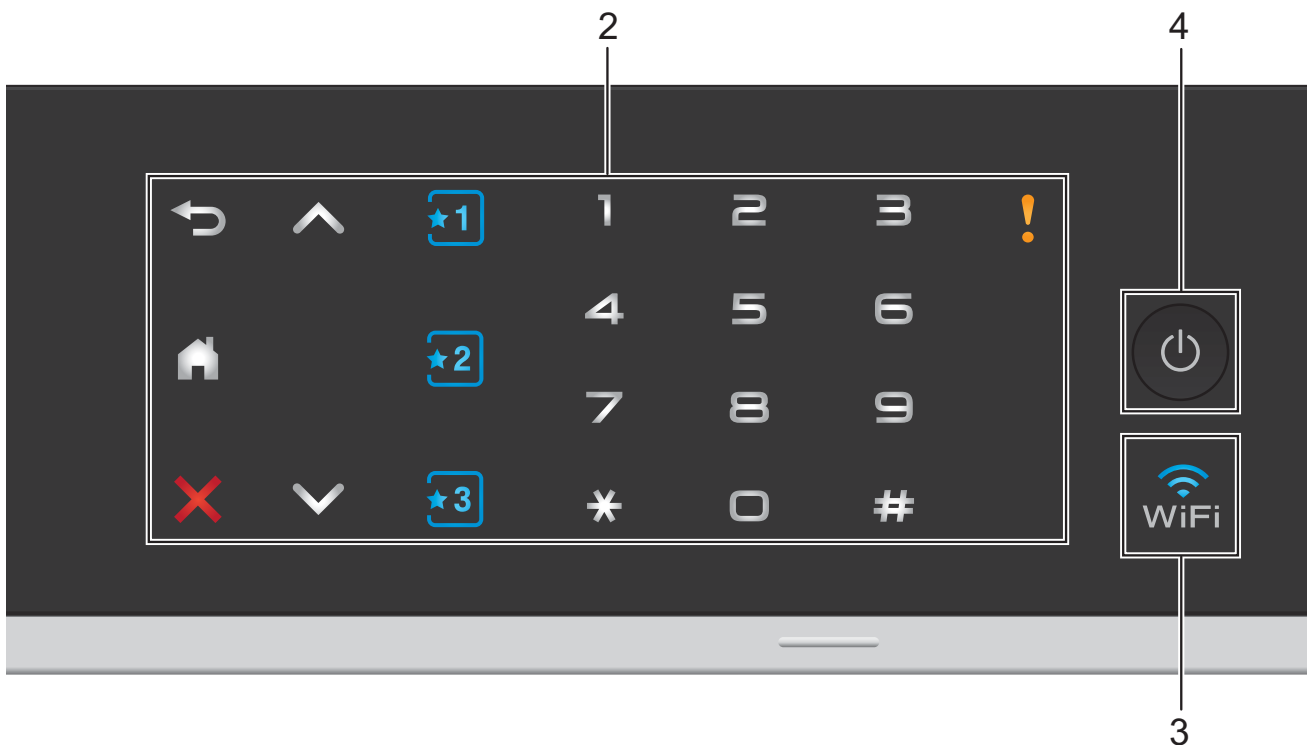

2 Touchpanel:

The LEDs on the Touchpanel only light up when they are available for use.

- **Back**
Press to go back to the previous menu level.
- **Home**
Press to return to the Home screen.
- **Cancel**
Press to cancel an operation when lit.
- **Up or Down**
Press to display the previous or next page. The Up and Down arrows do not light up when there is only one page.
- **Shortcut**
Press to use preset Shortcut settings. These are always lit, even when you have not yet added your Shortcut settings. Press to display instructions about how to set up a Shortcut.

■ Dial Pad

Press the numbers on the Touchpanel to dial telephone or fax numbers and to enter the number of copies.


■ Warning icon


The warning icon lights up when there is an error or maintenance message. Press to view the instruction on the Touchscreen. For information about error messages, see *Error and Maintenance messages* on page 88.

3


The WiFi light is on when the network interface is set to WLAN.

4 Power On/Off

Press  to turn the machine on.

Press and hold down  to turn the machine off. The Touchscreen LCD will show *Shutting Down* and will stay on for a few seconds before turning off.

If you have connected an external telephone or TAD, it is always available.

If you turn the machine off using , it will still periodically clean the print head to maintain print quality. To prolong the life of the print head, provide better ink efficiency and maintain print quality, you should keep your machine connected to the power at all times.


1.8" Touchscreen LCD

The Touchscreen LCD shows the machine's status when the machine is idle.



1 Ink

Lets you see the available ink volume. Also, lets you access the *Ink* menu.

 will not appear if received faxes are in the memory.

2 Fax

Lets you access the Fax mode.

3 Copy

Lets you access the Copy mode.


4 Settings

Lets you access the full Settings menu.

5 Scan

Lets you access the Scan mode.

6 Web



Lets you connect the Brother machine to an Internet service when you press , and then

press .

For more information, see the Web Connect Guide.

7 Photo

Lets you access Photo mode when you press

, and then press .

8 **Receive Mode**

Lets you see the current Receive Mode.

- Fax (Fax Only)
- F/T (Fax/Tel)
- TAD (External TAD)
- Mn1 (Manual)

NOTE

(For Australia, Singapore and Hong Kong)
When the Distinctive Ring feature is turned on, the Touchscreen shows D/R. For details, *Distinctive Ring* on page 47 and 52 for your relevant country.

(For New Zealand)

When the FaxAbility feature is turned on, the Touchscreen shows D/R. For details, *FaxAbility* on page 50.

9 Wireless Status


A four-level indicator on the Ready mode screen shows the current wireless signal strength if you are using a wireless connection.





If you see **WiFi** at the top on the screen, you can easily configure the wireless settings by pressing it. For more information, see Quick Setup Guide.

10 Faxes in memory

Shows how many received faxes are in the memory.



The warning icon  appears when there is an error or maintenance message. For information about error messages, see *Error and Maintenance messages* on page 88.


Basic Operations

To operate the Touchscreen LCD, use your finger to press directly on the Touchscreen. To display and access all the settings and features tables and the available options, press  or  on the Touchpanel to scroll through them.



The following steps show how to change a setting in the machine. In this example the Receive Mode setting is changed from Fax Only to Fax/Tel.

1 Press  (Settings).

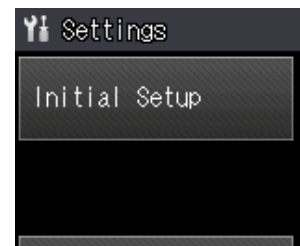2 Press  or  on the Touchpanel to display Initial Setup.





3 Press Initial Setup.

4 Press  or  to display Receive Mode.




5 Press Receive Mode.

6 Press  or  to display Fax/Tel.

7 Press Fax/Tel.

**NOTE**

Press  if you want to go back to the previous level.

8 Press .

Shortcut Settings

You can add the fax, copy and scan settings you use most frequently by setting them as your Shortcuts. Later you can recall and apply these settings quickly and easily. You can add three Shortcuts.

The following settings can be included in a fax, copy or scan Shortcut:

Copy

- Quality
- Paper Type
- Paper Size
- Tray Select ¹
- Enlarge/Reduce
- Density
- Stack/Sort
- Page Layout
- 2-sided Copy
- Advanced Settings

Fax

- Address
- Fax Resolution
- Contrast
- Colour Setting
- Batch TX
- Real Time TX
- Overseas Mode
- Glass Scan Size

Scan (Scan to Media)


- Scan Type
- Resolution
- File Type
- File Name
- Remove Background

Scan (Scan to Network)

Scan (Scan to FTP)

¹ MFC-J4610DW only


Adding Shortcuts

- 1 Press  (Settings).
- 2 Press **^** or **v** on the Touchpanel to display `Shortcut Settings`. Press `Shortcut Settings`.
- 3 Press ***1**, ***2** or ***3** where you have not added a Shortcut.

NOTE

-Blank- will appear as the name of available Shortcuts.

- 4 Read the information on the Touchscreen, and then press `Next` to display the modes `Copy`, `Fax` and `Scan`.
- 5 Press `Copy`, `Fax` or `Scan` for the mode of your new Shortcut. If you press `Scan`, press **^** or **v** to display `Scan to Media`, `Scan to Network` or `Scan to FTP`, and then press the type of scan you want to set. Do one of the following.
 - If you press `Scan to Media`, go to step 6.
 - If you press `Scan to Network` or `Scan to FTP`, press **^** or **v** to display the Profile Name, and then press it. Go to step 9.
- 6 Press **^** or **v** to display the available settings for the mode you chose in step 5, and then press the setting you want to change.
- 7 Press **^** or **v** to display the available options for the setting, and then press the new option you want to set. Repeat steps 6 and 7 until you have chosen all the settings for this Shortcut.
- 8 When you have finished choosing settings, press `OK`.





- 9 Enter a name for the Shortcut using the keyboard on the Touchscreen. (To help you enter letters, see *Entering Text* on page 155.)
Press **OK**.
- 10 Press **^** or **v** to review and confirm the displayed list of settings you have chosen.
Do one of the following:
 - Press **Yes** to save your Shortcut. Go to step 11.
 - Press **No** to return to step 6.
- 11 Read the information on the Touchscreen, and then confirm it by pressing **OK**.
- 12 Press .

NOTE

-Blank- appears when accessing through Settings.



Changing Shortcuts

You can change the settings in a Shortcut.

- 1 Press  (Settings).
- 2 Press **^** or **v** on the Touchpanel to display **Shortcut Settings**.
Press **Shortcut Settings**.
- 3 Press the Shortcut ,  or  that you want to change.
- 4 Press **Change**.
- 5 Read the information on the Touchscreen, and then press **Yes** to confirm.
- 6 Press **^** or **v** to display the current settings for this Shortcut, and then press the setting you want to change.

- 7 Press **^** or **v** to display the available options for the setting, and then press the new option you want to set.

Repeat steps 6 and 7 to change other settings as needed.






- 8 When you have finished changing settings, press **OK**.
- 9 To edit the name, hold down  to delete the current name, and then enter a new name using the keyboard on the Touchscreen. (To help you enter letters, see *Entering Text* on page 155.)
Press **OK**.
- 10 Press **^** or **v** to review and confirm the displayed list of settings for this Shortcut, and then press **Yes** to save your changes.
- 11 Read the information on the Touchscreen, and then confirm it by pressing **OK**.
- 12 Press .

NOTE

-Blank- appears when accessing through Settings.

Deleting Shortcuts

You can delete a Shortcut.

- 1 Press  (Settings).
- 2 Press **^** or **v** on the Touchpanel to display `Shortcut Settings`. Press `Shortcut Settings`.
- 3 Press the Shortcut (,  or ) that you want to delete.
- 4 Press `Delete` to delete the Shortcut that you chose in step 3. Press `Yes` to confirm.
- 5 Press .

NOTE

-Blank- appears when accessing through Settings.

Using Shortcuts



The Shortcuts ,   are always displayed on the Touchpanel. To use a Shortcut, simply press it on the Touchpanel.

Volume Settings

Ring Volume

You can choose a range of ring volume levels, from `High` to `Off`. The machine will keep your new setting until you change it.



Setting the Ring Volume

- 1 Press  (Settings).
- 2 Press **^** or **v** on the Touchpanel to display `General Setup`.
- 3 Press `General Setup`.
- 4 Press **^** or **v** to display `Volume`.
- 5 Press `Volume`.
- 6 Press **^** or **v** to display `Ring`.
- 7 Press `Ring`.
- 8 Press **^** or **v** to display `Low`, `Med`, `High` or `Off`, and then press the option you want to set.
- 9 Press .

Beeper Volume



When the beeper is on, the machine will beep when you press a key, make a mistake, or after you send or receive a fax.

You can choose a range of beeper volume levels, from *High* to *Off*.








- 1 Press  (Settings).
- 2 Press **▲** or **▼** on the Touchpanel to display *General Setup*.
- 3 Press *General Setup*.
- 4 Press **▲** or **▼** to display *Volume*.
- 5 Press *Volume*.
- 6 Press **▲** or **▼** to display *Beep*.
- 7 Press *Beep*.
- 8 Press **▲** or **▼** to display *Low*, *Med*, *High* or *Off*, and then press the option you want to set.
- 9 Press .

Speaker Volume

You can choose a range of speaker volume levels, from *High* to *Off*.

- 1 Press  (Settings).
- 2 Press **▲** or **▼** on the Touchpanel to display *General Setup*.
- 3 Press *General Setup*.
- 4 Press **▲** or **▼** to display *Volume*.
- 5 Press *Volume*.
- 6 Press **▲** or **▼** to display *Speaker*.
- 7 Press *Speaker*.
- 8 Press **▲** or **▼** to display *Low*, *Med*, *High* or *Off*, and then press the option you want to set.
- 9 Press .


You can also adjust the speaker volume by pressing *Hook*.

- 1 Press  (Fax).
- 2 Press *Hook*.
- 3 Press  or  on the Touchpanel.
- 4 Press .
- 5 Press  or  on the Touchscreen.
Each press changes the volume to the next setting.
- 6 Press .
- 7 Press *Hook*.

Touchscreen LCD

Setting the backlight brightness

If you are having difficulty reading the Touchscreen LCD, try changing the brightness setting.

- 1 Press  (Settings).
- 2 Press **^** or **v** on the Touchpanel to display `General Setup`.
- 3 Press `General Setup`.
- 4 Press **^** or **v** to display `LCD Settings`.
- 5 Press `LCD Settings`.
- 6 Press `Backlight`.
- 7 Press **^** or **v** to display `Light`, `Med` or `Dark`, and then press the option you want to set.
- 8 Press .

2

Loading paper

Loading paper and other print media

⚠ CAUTION

DO NOT carry the machine by holding the scanner cover, the Jam Clear Cover, the manual feed slot cover, or the control panel. Doing this may cause the machine to slip out of your hands. Carry the machine by sliding your hands into the handhold indentations located on each side of the machine.

For detailed information, see Product Safety Guide.

NOTE


(For MFC-J4610DW)

For tray #2 (lower tray), see *Loading paper in paper tray #2 (MFC-J4610DW)* on page 21.

Loading paper in paper tray #1


Load only one size of paper and one type of paper in the paper tray at any time.

- 1 Pull the paper tray completely out of the machine.

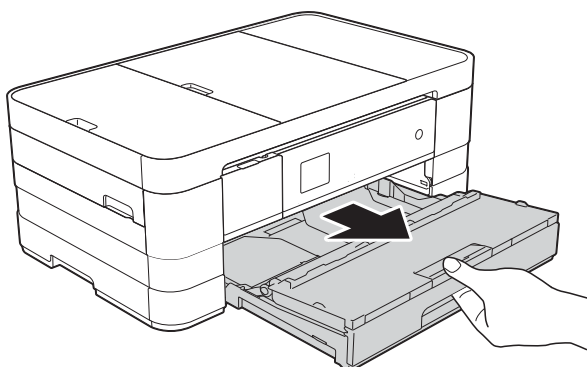

NOTE

- If the paper support flap (1) is open, close it, and then slide the paper support (2) into the output paper tray cover.

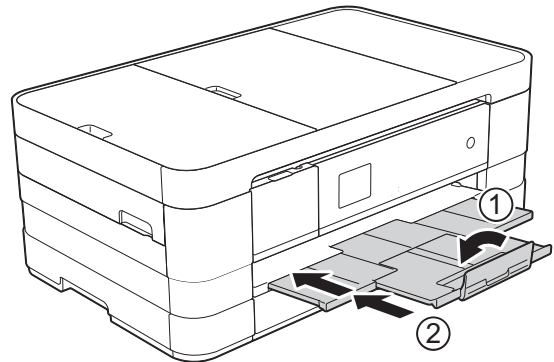


- When you load a different paper size in the tray, you will need to change the paper size setting in the machine at the same time.


(MFC-J2310 and MFC-J4410DW: See *Paper Size* on page 29.)

(MFC-J4610DW: See *Paper Size and Type (MFC-J4610DW)* on page 30.)


- 2 Open the output paper tray cover (1).

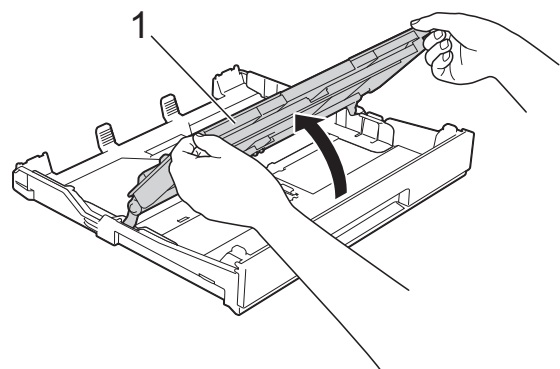

- 3 Gently press and slide the paper guides (1) to fit the paper size. Make sure that the triangular mark (2) on the paper guide (1) lines up with the mark for the paper size you are using.

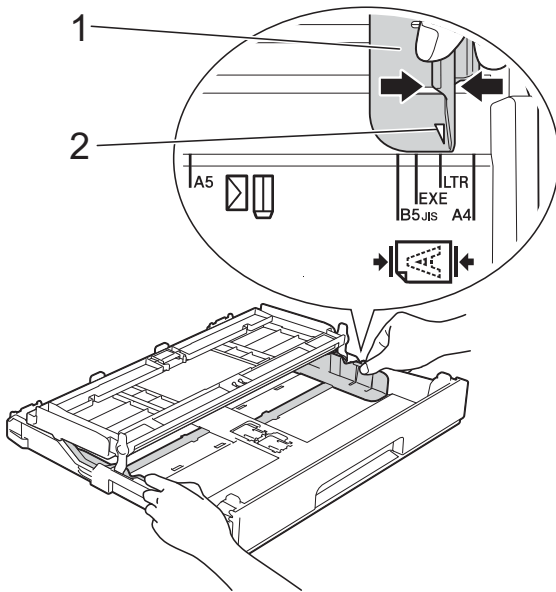

- 4 Fan the stack of paper well to avoid paper jams and misfeeds.

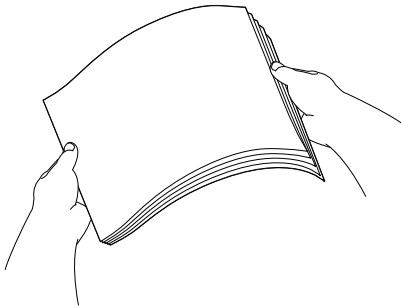


NOTE

Always make sure that the paper is not curled or wrinkled.

- 5 Gently put the paper into the paper tray print side down. Check that the paper is flat in the tray.

- Using A4, Letter or Executive

Landscape orientation

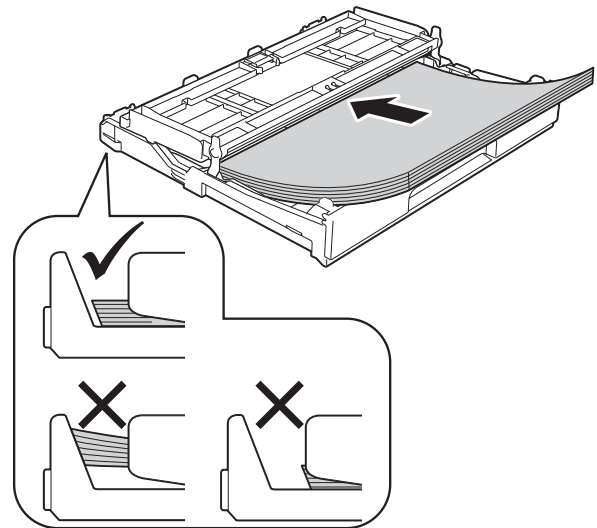


IMPORTANT

Be careful not to push the paper in too far; it may lift at the back of the tray and cause paper feed problems.


NOTE

- A5 or smaller size paper should be loaded into the tray in portrait orientation. For more information, see *Loading smaller paper (Photo, Photo L and envelopes)* on page 18.
- If you want to add paper before the tray is empty, remove the paper from the tray and combine it with the paper you are adding. Always fan the stack of paper well before loading it in the tray. If you add paper without fanning the stack, the machine may feed multiple pages.
- For more information about paper orientation, see *Paper orientation and capacity of the paper trays* on page 34.


- 6** Gently adjust the paper guides (1) to fit the paper. Make sure the paper guides touch the sides of the paper.

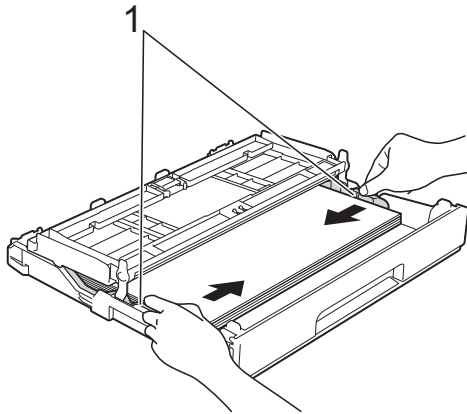


- 7** Check that the paper is flat in the tray and below the maximum paper mark (1). Overfilling the paper tray may cause paper jams.

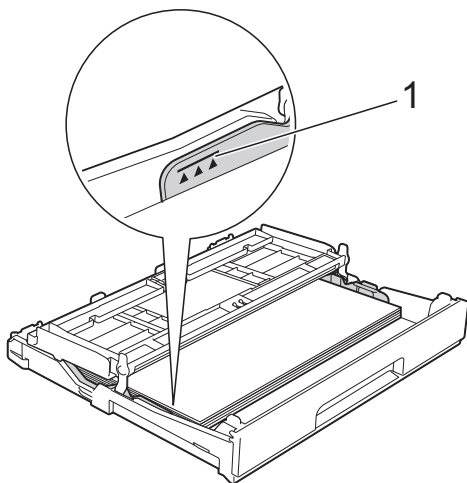


- 8** Close the output paper tray cover.

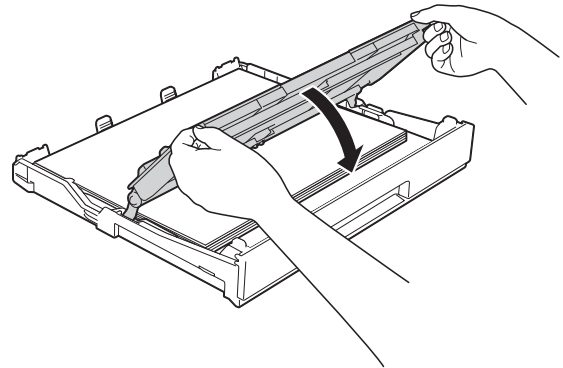

- 9** Slowly push the paper tray completely into the machine.

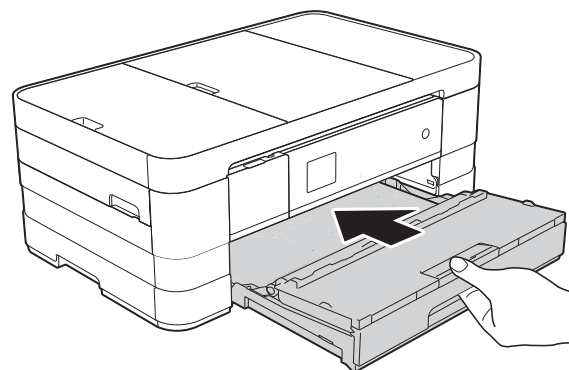


- 10** While holding the paper tray in place, pull out the paper support (1) until it clicks and unfold the paper support flap (2).

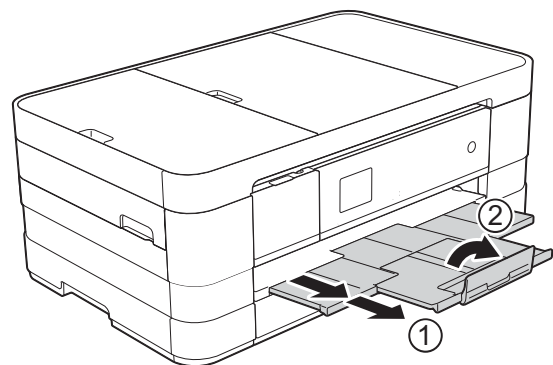

NOTE


If you are using paper that is longer than A4, Letter size paper or envelopes with the flap on the short edge, close the paper support flap.

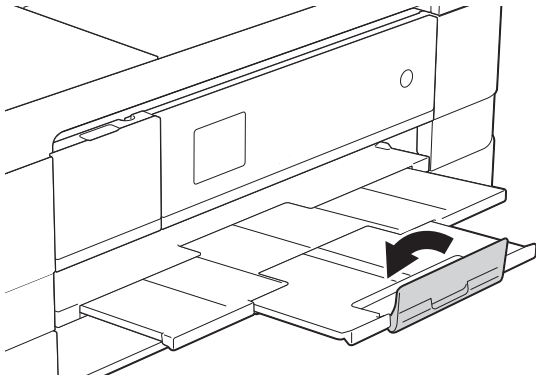

Loading smaller paper (Photo, Photo L and envelopes)

Portrait orientation

(A5 or smaller size paper)

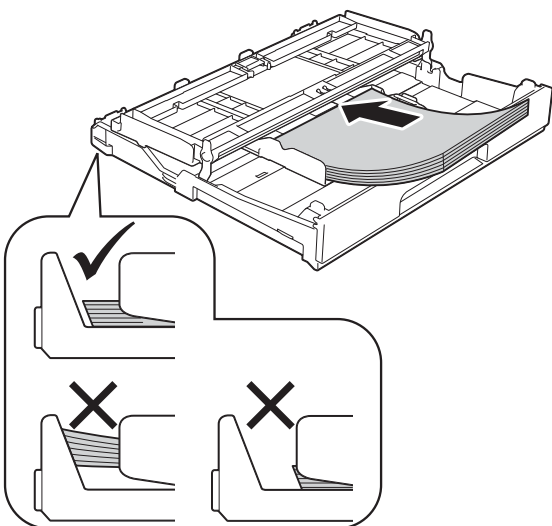

IMPORTANT

Be careful not to push the paper in too far; it may lift at the back of the tray and cause paper feed problems.

About envelopes

- Use envelopes that weigh between 80 to 95 gsm.
- Some envelopes need margin settings to be set in the application. Make sure you do a test print first before printing many envelopes.

IMPORTANT

DO NOT use the following types of envelopes, as they will not feed correctly:

- That are of a baggy construction.
- That have windows.
- That are embossed (have raised writing on them).
- That have clasps or staples.
- That are pre-printed on the inside.

Glue	Double flaps


Occasionally you may experience paper feed problems caused by the thickness, size and flap shape of the envelopes you are using.

Loading envelopes


- 1 Before loading, press the corners and sides of the envelopes to make them as flat as possible.

IMPORTANT

If envelopes are “double-feeding”, put one envelope in the paper tray at a time.

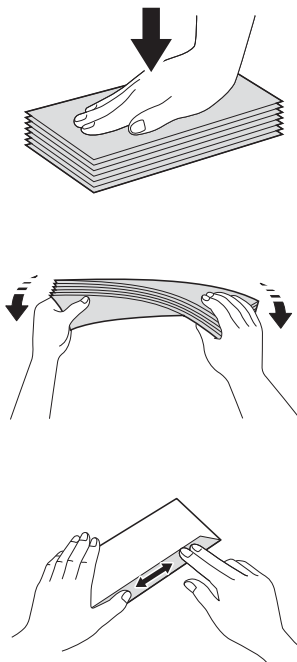


- 2 Put envelopes in the paper tray with the address side down. If the envelope flaps are on the long edge, load the envelopes with the flap on the left, as shown in the illustration. Gently press and slide the paper guides (1) to fit the size of the envelopes.

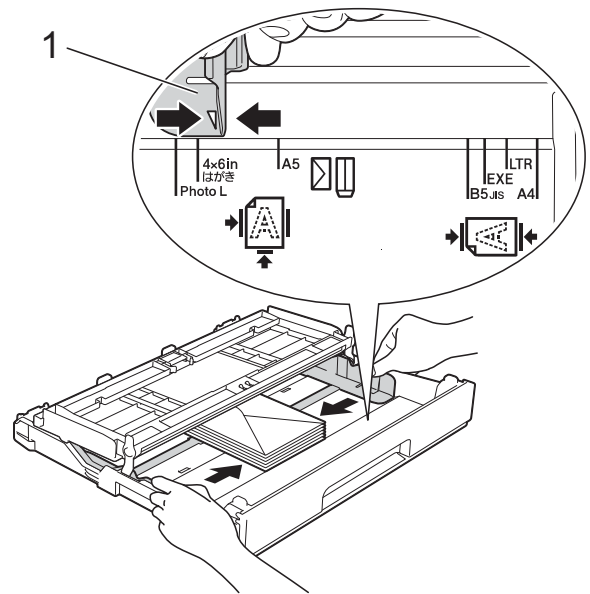


NOTE

- If you are using envelopes with the flap on the short edge, insert envelopes in the paper tray as shown in the illustration.

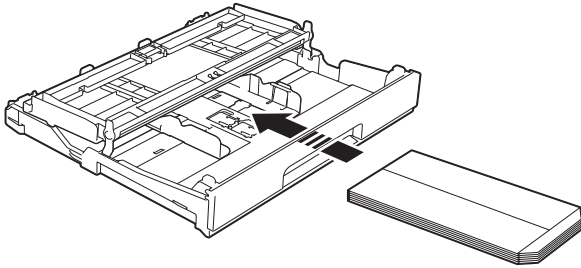


- If you are using envelopes with the flap on the short edge, close the paper support flap.

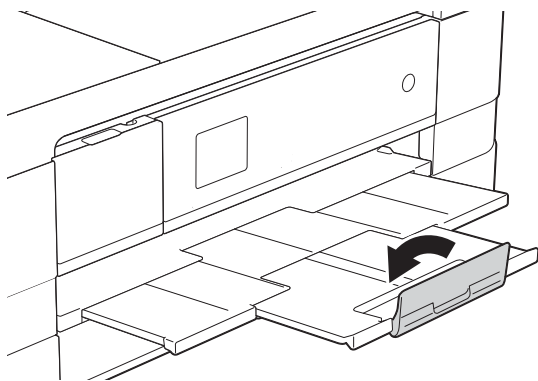

If you have problems printing on envelopes with the flap on the short edge, try the following:

- 1 Open the envelope flap.
- 2 Put the envelope into the paper tray with the address side down and the flap positioned as shown in the illustration.

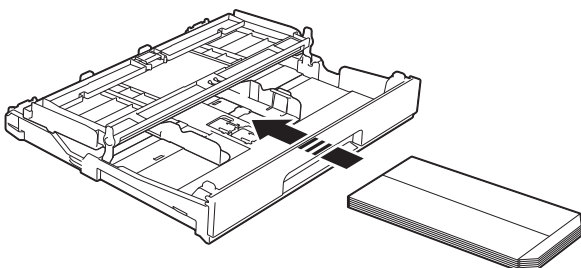

- 3 Select **Reverse Print** (Windows®) or **Reverse page orientation** (Macintosh) in the printer driver's dialog box, and then adjust the size and margin in your application.
(See Software User's Guide: *Printing* (Windows®).)
(See Software User's Guide: *Printing and Faxing* (Macintosh).)

Loading Photo and Photo L paper


- 1 Before loading, press the corners and sides of the Photo and Photo L paper to make them as flat as possible.

IMPORTANT


If Photo (10 × 15 cm) or Photo L (89 × 127 mm) paper is “double-feeding”, put one piece of the Photo paper in the tray at a time.

- 2 Do one of the following:
 - If you put Photo L (89 × 127 mm) in the paper tray, lift up the Photo L stopper (1).
 - If you put Photo (10 × 15 cm) in the paper tray, lift up the Photo stopper (2).


Gently press and slide the paper guides (3) to fit the paper size.

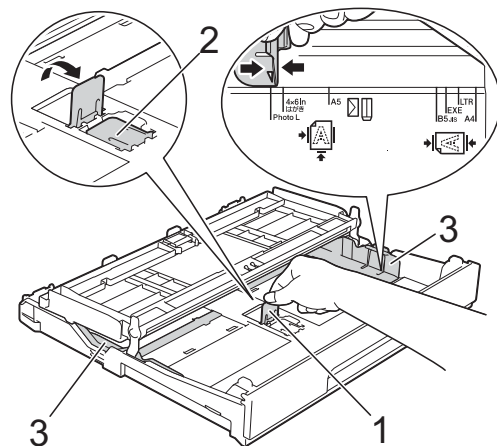


- 3 Close the output paper tray cover.

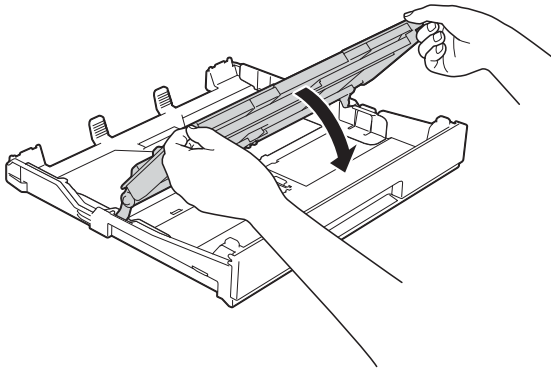


- 4 Put Photo or Photo L paper in the paper tray print side down.

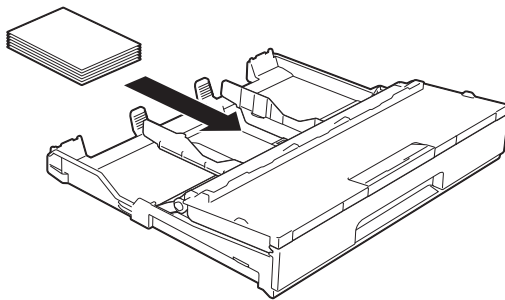

- 5 Open the output paper tray cover (1).

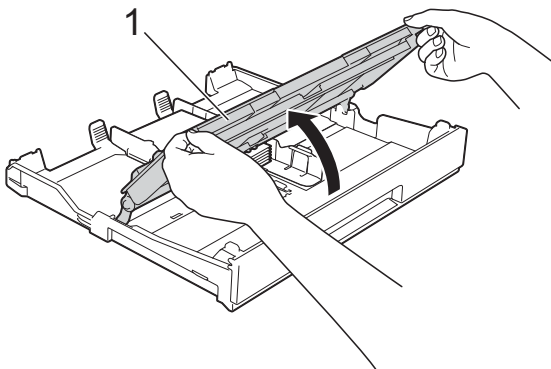

- 6 Gently adjust the paper guides (1) to fit the paper. Make sure the paper guides touch the sides of the paper.

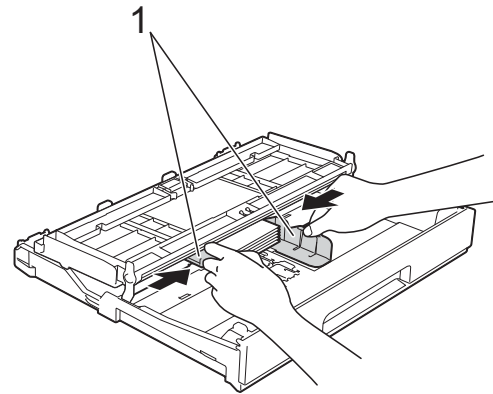


- 7 Close the output paper tray cover.

Loading paper in paper tray #2 (MFC-J4610DW)


NOTE

- You can only use plain paper sizes A4 or Letter in Tray #2.
- For more information about paper orientation, see *Paper orientation and capacity of the paper trays* on page 34.

- 1 Pull the paper tray completely out of the machine.

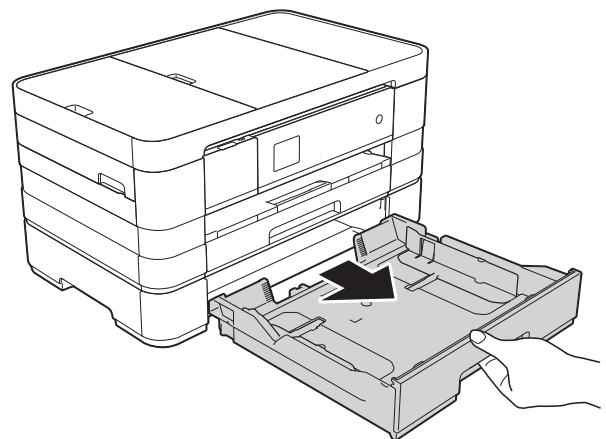

- 2 Gently press and slide the paper guides (1) to fit the paper size. Make sure that the triangular mark (2) on the paper guide (1) lines up with the mark for the paper size you are using.

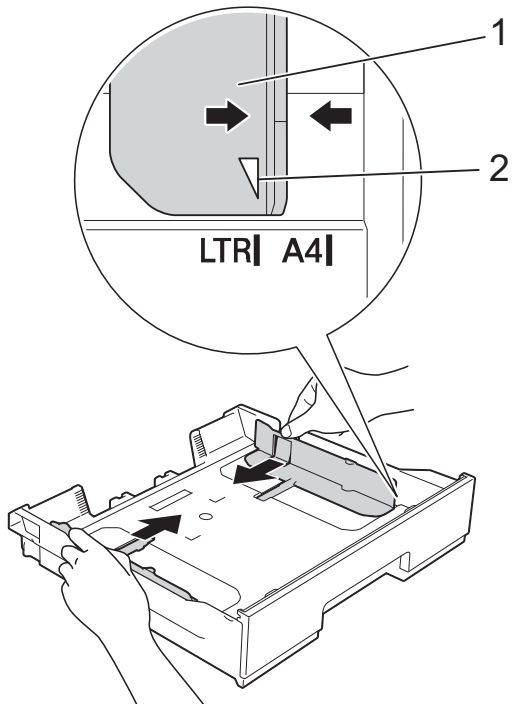


- 3 Fan the stack of paper well to avoid paper jams and misfeeds.

NOTE

Always make sure that the paper is not curled.

- 4 Gently put the paper into the paper tray print side down. Check that the paper is flat in the tray.

Landscape orientation

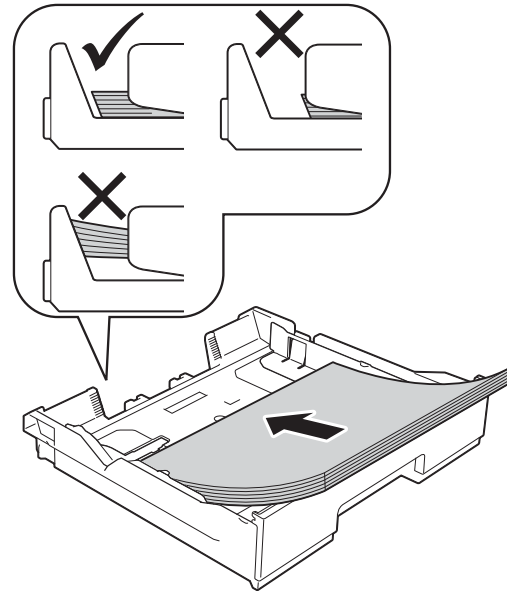


IMPORTANT

Be careful not to push the paper in too far; it may lift at the back of the tray and cause paper feed problems.


NOTE

If you want to add paper before the tray is empty, remove the paper from the tray and combine it with the paper you are adding. Always fan the stack of paper well before loading it in the tray. If you add paper without fanning the stack, the machine may feed multiple pages.


- 5** Gently adjust the paper guides (1) to fit the paper. Make sure the paper guides touch the sides of the paper.

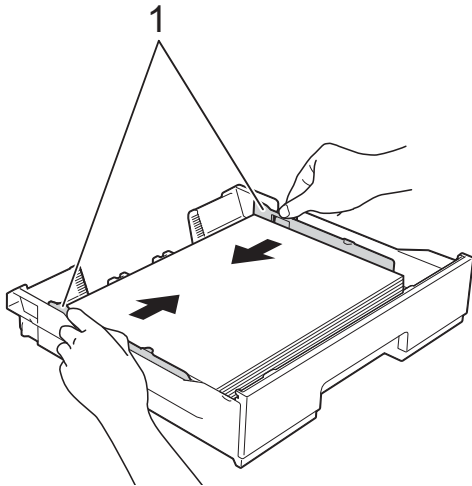


- 6** Check that the paper is flat in the tray and below the maximum paper mark (1). Overfilling the paper tray may cause paper jams.

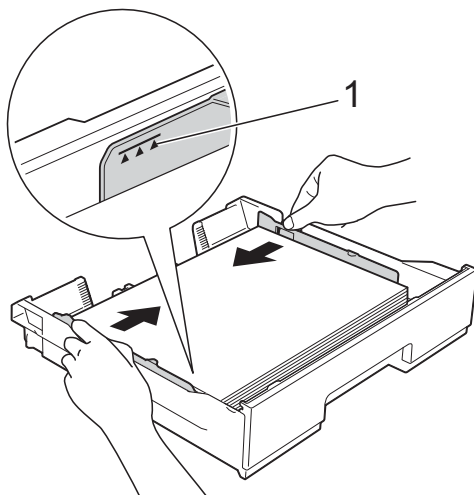

- 7** Slowly push the paper tray completely into the machine.

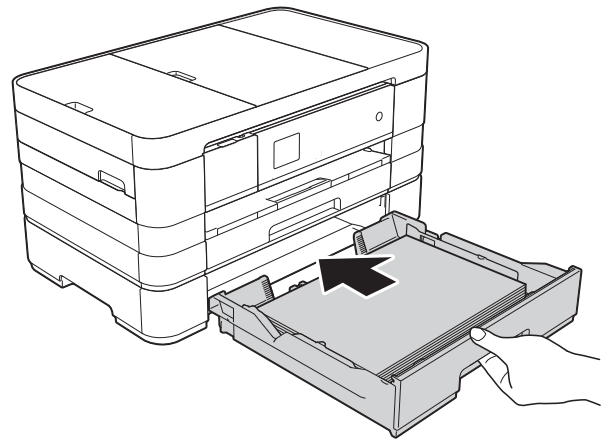

- 8** Pull out the paper support (1) until it clicks and unfold the paper support flap (2).

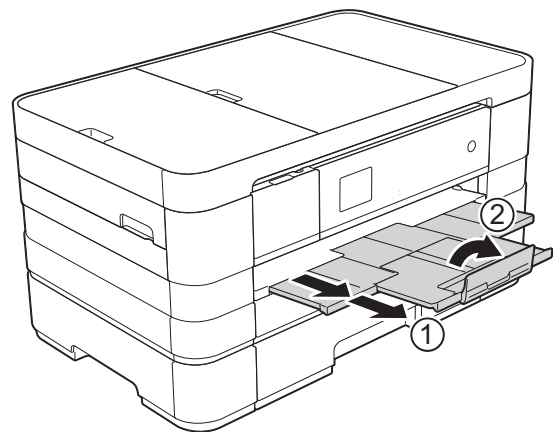


Loading paper in the manual feed slot



You can load special print media into this slot one sheet at a time. Use the manual feed slot to print or copy on A3, Ledger, Legal, A4, Letter, Executive, A5, A6, envelopes, Photo (10 × 15 cm), Photo L (89 × 127 mm), Photo 2L (13 × 18 cm) and Index Card (127 × 203 mm).

NOTE


- The machine automatically turns on Manual Feed mode when you put paper in the manual feed slot.
- If you are using paper that is longer than A4, Letter size paper or envelopes with the flap on the short edge, close the paper support flap.

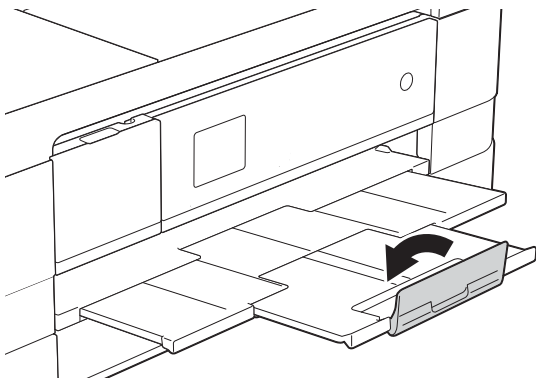

- 1 Open the manual feed slot cover located at the back of the machine.

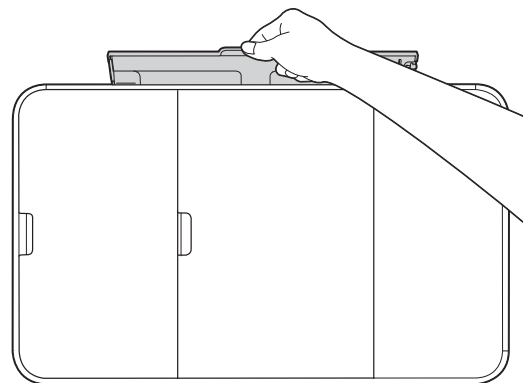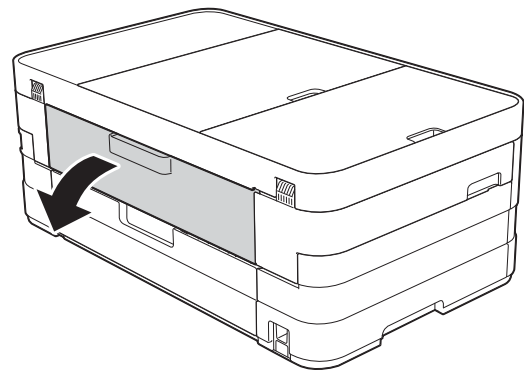

- 2 Slide the manual feed slot paper guides to fit the paper width that you are going to use.

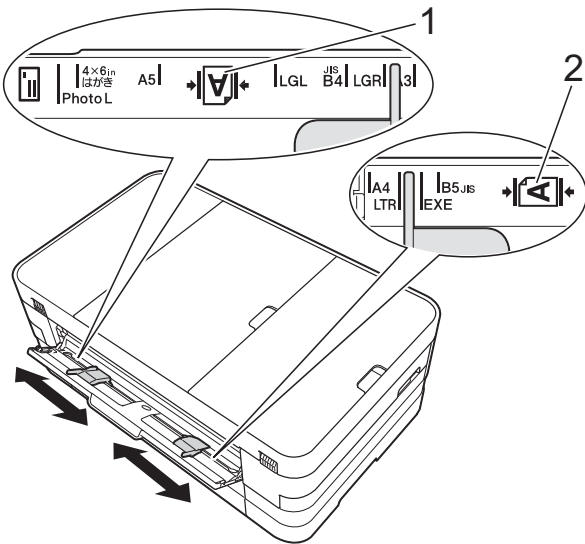

NOTE


The paper mark (1) in portrait orientation is on the right side of the manual feed slot, and the mark (2) in landscape orientation is on the left side of it.

When you slide the paper guides, confirm that they are in these positions.

- 3 Put *only* one sheet of paper in the manual feed slot with the side to be printed on *face up*.


- Using A3, Ledger, Legal, A5, A6, envelopes, Photo, Photo L, Photo 2L or Index Card

Portrait orientation

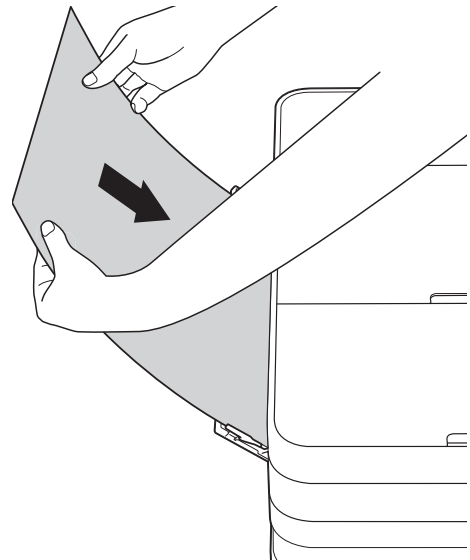

- Using A4, Letter or Executive

Landscape orientation

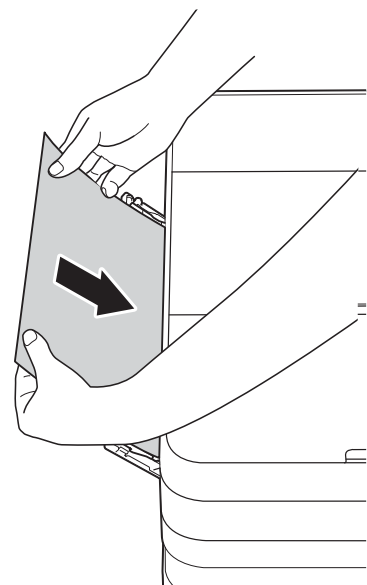


IMPORTANT

- DO NOT put more than one sheet of paper in the manual feed slot at any one time. Doing this may cause a paper jam. Even if you are printing multiple pages, do not feed the next sheet of paper until the Touchscreen shows a message instructing you to feed the next sheet.



- DO NOT put paper in the manual feed slot when you are printing from the paper tray. Doing this may cause a paper jam.
- For more information about paper orientation, see *Paper orientation and capacity of the paper trays* on page 34.


- 4 Using both hands, gently adjust the manual feed slot paper guides to fit the paper.

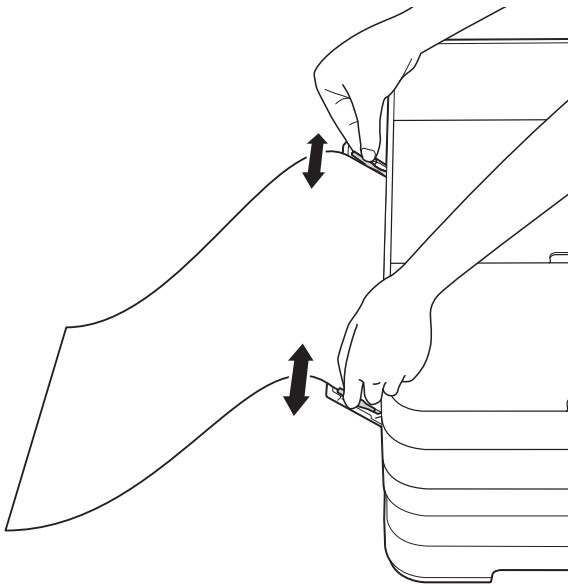

NOTE

- DO NOT press the paper guides too tightly against the paper. Doing this may cause the paper to fold.
- Place the paper in the centre of the manual feed slot between the paper guides. If the paper is not centred, pull it out and insert it again at the centre position.

- 5 Using both hands, put one sheet of paper in the manual feed slot until the front edge touches the paper feed roller. Let go of the paper when you hear the machine pull it in a short distance. The Touchscreen will show `Manual Feed Slot ready.`

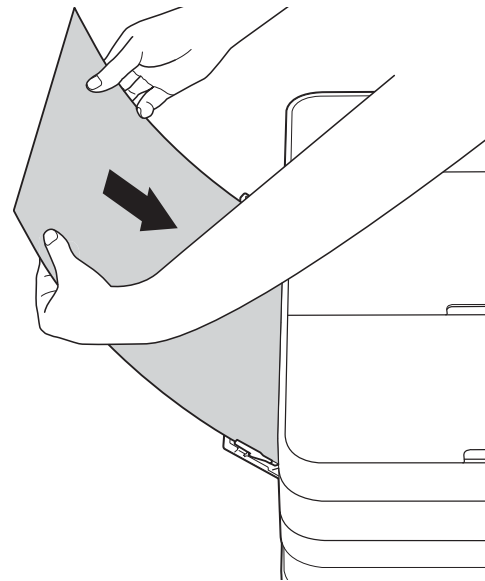

NOTE

- When loading an envelope or a sheet of thick paper, push the envelope into the manual feed slot until you feel it grab the envelope.
- When you are feeding A3, Legal or Ledger size paper in the manual feed slot, the machine holds the printed page after printing so that the page does not fall. Once printing is complete, pull out the printed page and press `OK`.

- 6 If the data does not fit on one sheet, the Touchscreen will prompt you to load another sheet of paper. Place another sheet of paper in the manual feed slot, and then press **OK** on the Touchscreen.

NOTE

- Make sure printing has finished before you close the manual feed slot cover.
 - When paper is placed in the manual feed slot, the machine will always print from the manual feed slot.
 - Paper inserted in the manual feed slot while a test page, fax or report is being printed will be ejected.
 - During the machine's cleaning process, paper you place in the manual feed slot will be ejected. Wait until the machine finishes its cleaning, and then place the paper in the manual feed slot again.
-


Unprintable area

The printable area depends on the settings in the application you are using. The figures below show the unprintable areas on cut-sheet paper and envelopes. The machine can print in the shaded areas of cut-sheet paper when the Borderless print feature is available and turned on.


(See Software User's Guide: *Printing* (Windows®).)

(See Software User's Guide: *Printing and Faxing* (Macintosh).)

Cut-Sheet Paper

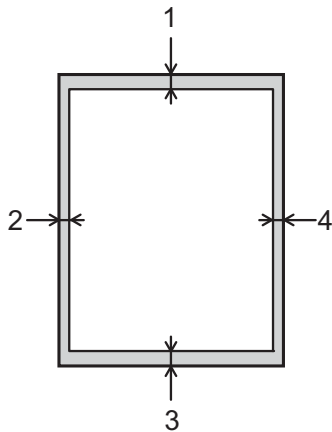

Envelopes

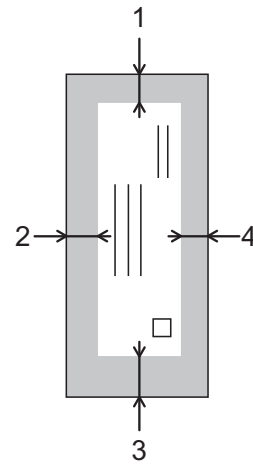

	Top (1)	Left (2)	Bottom (3)	Right (4)
Cut-Sheet	3 mm	3 mm	3 mm	3 mm
Envelopes	22 mm	3 mm	22 mm	3 mm

NOTE



The Borderless feature is not available for envelopes and 2-sided printing.

Paper settings

Paper Size and Type (MFC-J2310 and MFC-J4410DW)

Paper Type

To get the best print quality, set the machine for the type of paper you are using.



- 1 Press  (Settings).
- 2 Press **▲** or **▼** on the Touchpanel to display `General Setup`.
- 3 Press `General Setup`.
- 4 Press **▲** or **▼** to display `Paper Type`.
- 5 Press `Paper Type`.
- 6 Press **▲** or **▼** to display `Plain Paper`, `Inkjet Paper`, `Brother BP71`, `Other Glossy` or `Transparency`, and then press the option you want to set.
- 7 Press .

NOTE

The machine ejects paper with printed surfaces face up onto the paper tray at the front of the machine. When you use transparencies or glossy paper, remove each sheet at once to prevent smudging or paper jams.

Paper Size

You can use the following sizes of paper for printing copies: A4, A5, A3, 10 × 15 cm, Letter, Legal and Ledger and two sizes for printing faxes: A4 or Letter. When you change the size of paper you load in the machine, you will need to change the paper size setting at the same time so your machine can fit an incoming fax on the page.

- 1 Press  (Settings).
- 2 Press **▲** or **▼** on the Touchpanel to display `General Setup`.
- 3 Press `General Setup`.
- 4 Press **▲** or **▼** to display `Paper Size`.
- 5 Press `Paper Size`.
- 6 Press **▲** or **▼** to display `A4`, `A5`, `10x15cm` or `Letter` and then press the option you want to set.
- 7 Press .


NOTE

When you copy using A3, Legal or Ledger size paper, set the paper size option while in Copy mode.

Paper Size and Type (MFC-J4610DW)

To get the best print quality, set the machine for the type of paper you are using.

You can use the following sizes of paper for printing copies: A4, A5, A3, 10 × 15 cm, Letter, Legal and Ledger and two sizes for printing faxes: A4 or Letter. When you load a different size of paper in the machine, you will need to change the paper size setting at the same time so your machine can fit an incoming fax on the page.

- 1 Press  (Settings).
- 2 Press **▲** or **▼** on the Touchpanel to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **Tray Setting**.
- 5 Press **Tray Setting**.
- 6 Press **Tray #1** or **Tray #2**.
- 7 Do one of the following:
 - If you press **Tray #1**, set the paper size and type you want to set.
 - Press **Paper Size**.
 - Press **▲** or **▼** to display the paper size options, **A4**, **A5**, **10x15cm** or **Letter** and press the size you want to set.
 - Press **Paper Type**.
 - Press **▲** or **▼** to display the paper type options, **Plain Paper**, **Inkjet Paper**, **Brother BP71**, **Other Glossy** or **Transparency** and press the type you want to set.
 - If you press **Tray #2**, set the paper size you want to set.
 - Press **Paper Size**.
 - Press the paper size **A4** or **Letter** you want to set.

- 8 Press .

NOTE


- You can use only plain paper in **Tray #2**.
- The machine ejects paper with printed surfaces face up onto the paper tray in front of the machine. When you use transparencies or glossy paper, remove each sheet at once to prevent smudging or paper jams.
- When you copy using **A3**, **Legal** or **Ledger** size paper, set the paper size option in **Copy mode**.

Tray use in Copy mode (MFC-J4610DW)

You can change the default tray the machine will use for copies.

Auto Tray Select will allow your machine to feed paper from either **Tray #1** or **Tray #2**, using the paper type and size settings from the **Copy Settings** table.

To change the default setting follow the instructions below:

- 1 Press  (Settings).
- 2 Press **▲** or **▼** on the Touchpanel to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **Tray Setting**.
- 5 Press **Tray Setting**.
- 6 Press **▲** or **▼** to display **Tray Use: Copy**.
- 7 Press **Tray Use: Copy**.
- 8 Press **Tray #1**, **Tray #2** or **Auto Tray Select**.

9 Press .

NOTE

You can change the paper size and tray selection temporarily for the next copy. (See *Paper Size* on page 65 and *Tray Select (MFC-J4610DW)* on page 65.)



Tray use in Fax mode (MFC-J4610DW)

You can change the default tray the machine will use for printing received faxes.



Auto Tray Select will allow your machine to take paper from Tray #1 first, or from Tray #2 if:

- Tray #2 is set to a different paper size that is more suitable for the received faxes.
- Both trays are using the same size paper and Tray #1 is not set to use plain paper.



1 Press  (Settings).

2 Press  or  on the Touchpanel to display General Setup.

3 Press General Setup.

4 Press  or  to display Tray Setting.

5 Press Tray Setting.

6 Press  or  to display Tray Use: Fax.

7 Press Tray Use: Fax.

8 Press Tray #1, Tray #2 or Auto Tray Select.

9 Press .

Acceptable paper and other print media

The print quality can be affected by the type of paper you use in the machine.

To get the best print quality for the settings you have chosen, always set the Paper Type to match the type of paper that is loaded in the tray.

You can use plain paper, inkjet paper (coated paper), glossy paper, transparencies and envelopes.

We recommend testing various paper types before buying large quantities.

For best results, use Brother paper.

- When you print on inkjet paper (coated paper), transparencies and glossy paper, be sure to choose the correct print media in the **Basic** tab of the printer driver or in the Paper Type setting of the machine's menu.

(MFC-J2310 and MFC-J4410DW: See *Paper Type* on page 29.)

(MFC-J4610DW: See *Paper Size and Type (MFC-J4610DW)* on page 30.)

- When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
- When you use transparencies or photo paper, remove each sheet at once to prevent smudging or paper jams.
- Avoid touching the printed surface of the paper immediately after printing; the surface may not be completely dry and may stain your fingers.

Recommended print media

To get the best print quality, we suggest using Brother paper. (See the table below.)

If Brother paper is not available in your country, we recommend testing various papers before purchasing large quantities.

We recommend using “3M Transparency Film” when you print on transparencies.

Brother paper

Paper Type	Item
A3 Plain	BP60PA3
A3 Glossy Photo	BP71GA3
A3 Inkjet (Matte)	BP60MA3
A4 Plain	BP60PA
A4 Glossy Photo	BP71GA4
A4 Inkjet (Matte)	BP60MA
10 × 15 cm Glossy Photo	BP71GP


Handling and using print media

- Store paper in its original packaging and keep it sealed. Keep the paper flat and away from moisture, direct sunlight and heat.
- Avoid touching the shiny (coated) side of the photo paper.
- Avoid touching either side of the transparency paper because they absorb water and perspiration easily, and this may cause decreased output quality. Transparencies designed for laser printers/copiers may stain your next document. Use only transparencies recommended for inkjet printing.

IMPORTANT

DO NOT use the following kinds of paper:

- Damaged, curled, wrinkled, or irregularly shaped paper

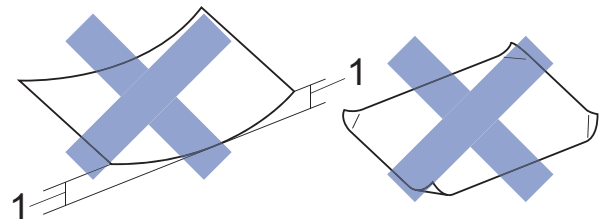

1 2 mm or greater curl may cause jams to occur.

- Extremely shiny or highly textured paper
- Paper that cannot be arranged uniformly when stacked
- Short grain paper

Paper capacity of the output paper tray cover

Up to 50 sheets of 80 gsm A4 paper.

- Transparencies and photo paper must be picked up from the output paper tray cover one page at a time to avoid smudging.

Choosing the right print media

Paper type and size for each operation

Paper Type	Paper Size		Usage			
			Fax	Copy	Photo Capture	Printer
Cut-Sheet	A3	297 × 420 mm (11.7 × 16.5 in.)	–	Yes ¹	Yes ¹	Yes ¹
	A4	210 × 297 mm (8.3 × 11.7 in.)	Yes	Yes	Yes	Yes
	Ledger	279.4 × 431.8 mm (11 × 17 in.)	–	Yes ¹	Yes ¹	Yes ¹
	Letter	215.9 × 279.4 mm (8 1/2 × 11 in.)	Yes	Yes	Yes	Yes
	Legal	215.9 × 355.6 mm (8 1/2 × 14 in.)	–	Yes ¹	–	Yes ¹
	Executive	184 × 267 mm (7 1/4 × 10 1/2 in.)	–	–	–	Yes
	JIS B4	257 × 364 mm (10.1 × 14.3 in.)	–	–	–	Yes ^{1 2}
	JIS B5	182 × 257 mm (7.2 × 10.1 in.)	–	–	–	Yes ²
	A5	148 × 210 mm (5.8 × 8.3 in.)	–	Yes	–	Yes
A6	105 × 148 mm (4.1 × 5.8 in.)	–	–	–	Yes	
Cards	Photo	10 × 15 cm (4 × 6 in.)	–	Yes	Yes	Yes
	Photo L	89 × 127 mm (3 1/2 × 5 in.)	–	–	–	Yes
	Photo 2L	13 × 18 cm (5 × 7 in.)	–	–	Yes	Yes
	Index Card	127 × 203 mm (5 × 8 in.)	–	–	–	Yes
	Postcard 1	100 × 148 mm (3.9 × 5.8 in.)	–	–	–	User Defined
	Postcard 2 (Double)	148 × 200 mm (5.8 × 7.9 in.)	–	–	–	User Defined
Envelopes	C5 Envelope	162 × 229 mm (6.4 × 9 in.)	–	–	–	Yes ¹
	DL Envelope	110 × 220 mm (4.3 × 8.7 in.)	–	–	–	Yes
	Com-10	105 × 241 mm (4 1/8 × 9 1/2 in.)	–	–	–	Yes
	Monarch	98 × 191 mm (3 7/8 × 7 1/2 in.)	–	–	–	Yes
Transparencies	A4	210 × 297 mm (8.3 × 11.7 in.)	–	Yes	–	Yes
	Letter	215.9 × 279.4 mm (8 1/2 × 11 in.)	–	Yes	–	Yes
	Legal	215.9 × 355.6 mm (8 1/2 × 14 in.)	–	Yes	–	Yes
	A5	148 × 210 mm (5.8 × 8.3 in.)	–	Yes	–	Yes

¹ Manual Feed Slot only

² Only available for some countries.

Paper orientation and capacity of the paper trays

	Paper size	Paper types	No. of sheets
Paper Tray #1	<Landscape> A4, Letter, Executive, JIS B5 ² <Portrait> A5, A6, Photo, Photo L, Photo 2L, Index card, Envelopes (Com-10, DL, Monarch)	Plain Paper	150 ¹
		Inkjet Paper	20
		Glossy Paper, Photo	20
		Index Card, Postcard	30
		Envelopes, Transparencies	10
Paper Tray #2 (MFC-J4610DW)	<Landscape> A4, Letter	Plain Paper	250 ¹
Manual Feed Slot	<Landscape> A4, Letter, Executive, JIS B5 ² <Portrait> A3, JIS B4 ² , Ledger, Legal, A5, A6, Photo, Photo L, Photo 2L, Index card, Envelopes (C5, Com-10, DL, Monarch)	Plain Paper, Inkjet Paper, Glossy Paper, Photo, Envelopes and Transparencies	1

¹ When using 80 gsm paper.

² Only available for some countries.

NOTE

When you choose User Defined in the Paper Size drop-down list of the printer driver, the paper orientation will differ depending on the size and thickness of the paper.

(For more information, see *Paper orientation using User Defined as the Paper Size in the printer driver* on page 35.)

Paper orientation using User Defined as the Paper Size in the printer driver

User Defined Size	Paper Orientation
When both of the following conditions are satisfied: <ul style="list-style-type: none"> ■ Width: 127.0 mm – 215.9 mm ■ Height: 216.0 mm – 297.0 mm 	Landscape
When any one of the following conditions is satisfied: <ul style="list-style-type: none"> ■ Width: less than 127.0 mm ■ Width: greater than 215.9 mm ■ Height: less than 216.0 mm ■ Height: greater than 297.0 mm 	Portrait

NOTE

When choosing Envelope in the Paper Thickness drop-down list, you must load the envelopes in Portrait orientation.

Paper weight and thickness

Paper Type	Weight	Thickness
Cut-Sheet	Plain Paper	64 to 120 gsm
	(Tray #2) Plain Paper	64 to 105 gsm
	Inkjet Paper	64 to 200 gsm
	Glossy Paper ¹	Up to 220 gsm
Cards	Photo Card ¹	Up to 220 gsm
	Index Card	Up to 120 gsm
	Postcard 1	Up to 200 gsm
	Postcard 2	
Envelopes	80 to 95 gsm	Up to 0.52 mm
Transparencies	–	–

¹ BP71 (260 gsm) paper is especially designed for Brother inkjet machines.

3

Loading documents

How to load documents

You can send a fax, make copies or scan from the ADF ¹ (automatic document feeder) and from the scanner glass.

¹ MFC-J4410DW and MFC-J4610DW only.

Using the ADF (MFC-J4410DW and MFC-J4610DW)

The ADF can hold up to 20 pages and feeds each sheet individually. Use paper that is within the sizes and weights shown in the table below. Always fan the edges of the pages before placing them in the ADF.

Document Sizes and Weights

Length:	148 to 355.6 mm
Width:	148 to 215.9 mm
Weight:	64 to 90 gsm


How to load documents

IMPORTANT

- DO NOT pull on the document while it is feeding.
- DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, glued or taped.
- DO NOT use cardboard, newspaper or fabric with the ADF. Instead use the scanner glass.


Make sure documents written with ink or modified with correction fluid are completely dry.

- 1 Lift up and unfold the ADF document support (1).

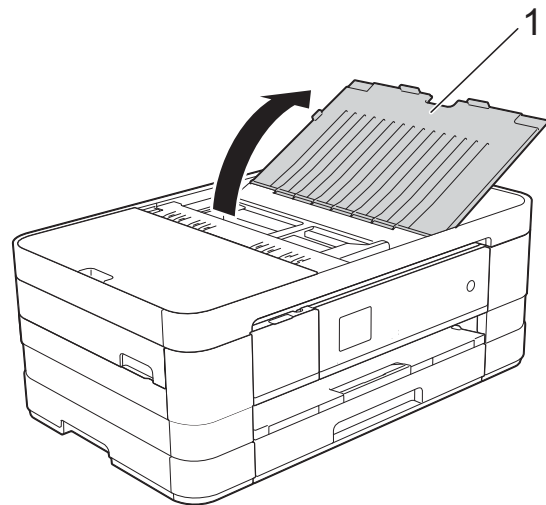

- 2 Fan the pages well.

- 3 Adjust the paper guides (1) to fit the width of your documents.

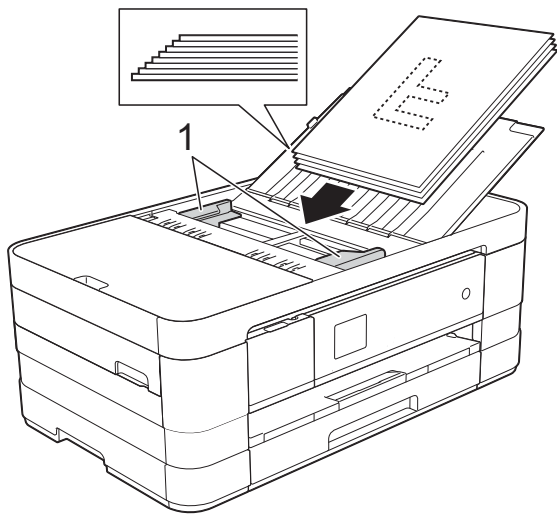

- 4 Place your documents **face down, top edge first** in the ADF underneath the guides until you feel them touch the feed rollers.
The Touchscreen will display ADF Ready.

IMPORTANT

DO NOT leave thick documents on the scanner glass. If you do this, the ADF may jam.

Using the scanner glass

You can use the scanner glass to fax, copy or scan single pages or pages of a book.

Document Sizes Supported


Length:	Up to 297 mm
Width:	Up to 215.9 mm
Weight:	Up to 2 kg

How to load documents


NOTE

(MFC-J4410DW and MFC-J4610DW)
To use the scanner glass, the ADF must be empty.

- 1 Lift the document cover.
- 2 Using the document guidelines on the left and top, place the document **face down** in the upper left corner of the scanner glass.

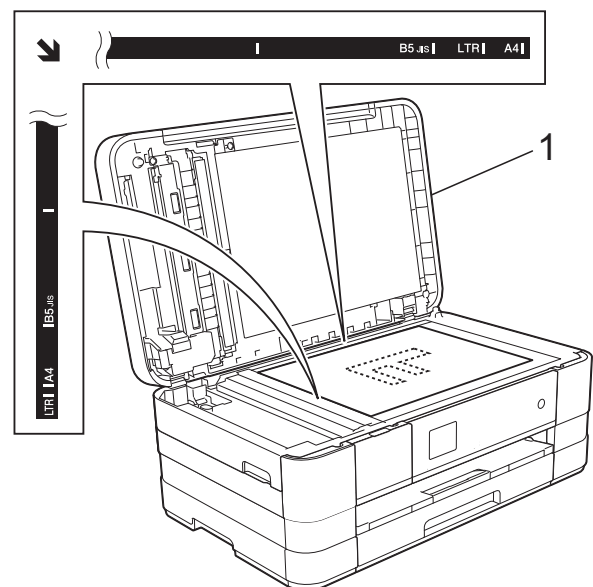

1 document cover

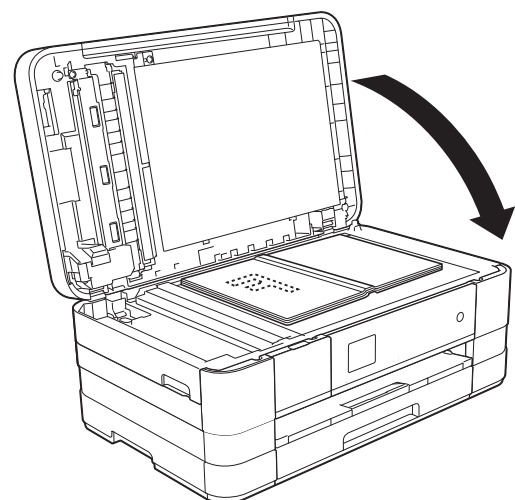


- 3 Close the document cover.

IMPORTANT

If you are scanning a book or thick document, DO NOT slam the cover down or press on it.

Unscannable area

The scannable area depends on the settings in the application you are using. The figures below show unscannable areas.

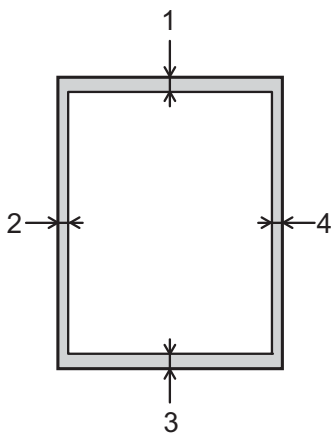

Usage	Document Size	Top (1) Bottom (3)	Left (2) Right (4)
Fax	A4	3 mm	3 mm ¹
	Letter		4 mm
	Legal		
Copy	All paper sizes		3 mm
Scan		1 mm	1 mm

¹ (MFC-J4410DW and MFC-J4610DW)
The unscannable area is 1 mm when you use the ADF.

How to send a fax

The following steps show how to send a fax.

- 1 Do one of the following to load your document:
 - (MFC-J4410DW and MFC-J4610DW)
Place the document *face down* in the ADF. (See *Using the ADF (MFC-J4410DW and MFC-J4610DW)* on page 36.)
 - Load your document *face down* on the scanner glass. (See *Using the scanner glass* on page 37.)

NOTE


- To send colour faxes with multiple pages, use the ADF ¹.
- If you send a mono fax from the ADF ¹ when the memory is full, it will be sent in real time.
- You can use the scanner glass to fax pages of a book one at a time. The documents can be up to A4 or Letter size.
- Since you can only scan one page at a time using the scanner glass, it is easier to use the ADF ¹ if you are sending a multiple-page document.

¹ MFC-J4410DW and MFC-J4610DW only.

- 2 When you want to send a fax or change the settings for sending or receiving

faxes, press  (Fax).

- The Touchscreen shows:

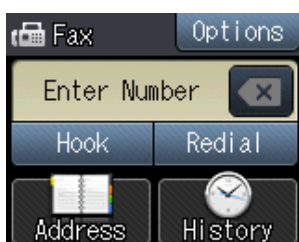

- 3 You can change the following fax-sending settings. Press **Options**. Press **▲** or **▼** to scroll through the fax settings. When the setting you want is displayed, press it and choose your new option. When you have finished changing options, press **OK**.

(Basic User's Guide)

For information about changing the following fax-sending settings, see pages 40 to 41.

- Glass ScanSize
- Colour Fax Transmission
- Transmission Verification Report (Setup)


(Advanced User's Guide)

For more advanced fax-sending operations and settings (See *Advanced User's Guide: Sending a fax.*)

- Contrast
- Fax Resolution
- Set New Defaults
- Factory Reset
- Faxing at the end of a call
- Broadcasting
- Real Time Transmission
- Overseas Mode
- Delayed Fax
- Batch Transmission
- Cancelling Waiting Jobs
- Polled Transmit

- 4 Enter the fax number.

Using the dial pad

Using  (Address)

- Address Book

Using  (History)

- Outgoing
- Incoming

- 5 Press `Fax Start`.

Faxing from the ADF (MFC-J4410DW and MFC-J4610DW)

- The machine starts scanning the document to be sent.

Faxing from the scanner glass

- If you choose `Mono` in the `Colour Setting` (default setting), the machine starts scanning the first page. Go to step 6.
- If you choose `Colour` in the `Colour Setting`, the Touchscreen asks if you want to send a colour fax. Press `Colour Fax` to confirm. The machine starts dialling and sending the document.

- 6 When the Touchscreen asks you `Next Page?`, do one of the following:

- To send a single page, press `No (Send)`.
The machine starts sending the document.
- To send more than one page, press `Yes` and go to step 7.


- 7 Place the next page on the scanner glass.
Press `OK`.
The machine starts scanning the page. (Repeat steps 6 and 7 for each additional page.)

Stop faxing

To stop faxing, press .

Setting scanner glass size for faxing

When documents are Letter size, you need to set the `Scan Size` to `Letter`. If you do not, the side portion of the faxes will be missing.

- 1 Load your document.
- 2 Press  (`Fax`).
- 3 Press `Options`.
- 4 Press `^` or `v` on the Touchpanel to display `Glass Scan Size`.
- 5 Press `Glass Scan Size`.
- 6 Press `Letter` (or `A4`).
- 7 Press `OK`.
- 8 Enter the fax number.
- 9 Press `Fax Start`.


NOTE

- You can save the setting you use most often by setting it as the default setting. (See *Advanced User's Guide: Setting your changes as a new default.*)
- This setting is only available for sending documents from the scanner glass.


Colour fax transmission

Your machine can send a colour fax to machines that support this feature.

Colour faxes cannot be stored in the machine's memory. When you send a colour fax, the machine will send it in real time (even if *Real Time TX* is set to *Off*).

- 1 Load your document.
- 2 Press  (Fax).
- 3 Press *Options*.
- 4 Press \wedge or \vee on the Touchpanel to display *Colour Setting*.
- 5 Press *Colour Setting*.
- 6 Press *Colour*.
- 7 Press *OK*.
- 8 Enter the fax number.
- 9 Press *Fax Start*.
- 10 Read the information on the Touchscreen, and then press *Colour Fax*.

Cancelling a fax in progress



If you want to cancel a fax while the machine is scanning, dialling or sending, press .

Transmission Verification Report

You can use the Transmission Verification Report as proof that you sent a fax. This report lists the sender's name or fax number, the time and date of the transmission, duration of the transmission, number of pages sent, and whether or not the transmission was successful.

There are several settings available for the Transmission Verification Report:

- **On:** Prints a report after every fax you send.
- **On+Image:** Prints a report after every fax you send. A portion of the fax's first page appears on the report.
- **Off:** Prints a report if your fax is unsuccessful due to a transmission error. *Off* is the default setting.
- **Off+Image:** Prints a report if your fax is unsuccessful due to a transmission error. A portion of the fax's first page appears on the report.

- 1 Press  (*Settings*).
- 2 Press \wedge or \vee on the Touchpanel to display *Fax*.
- 3 Press *Fax*.
- 4 Press \wedge or \vee to display *Report Setting*.
- 5 Press *Report Setting*.
- 6 Press \wedge or \vee to display *Transmission*.
- 7 Press *Transmission*.
- 8 Press \wedge or \vee to display *On*, *On+Image*, *Off* or *Off+Image*, and then press the option you want to set.
- 9 Press .

NOTE

- If you choose *On+Image* or *Off+Image* the image will only appear on the Transmission Verification Report if *Real Time Transmission* is set to *Off*. The image will not appear on the report when you send a colour fax. (See *Advanced User's Guide: Real Time Transmission*.)
- If your transmission is successful, "OK" will appear next to "RESULT" on the Transmission Verification Report. If the transmission is not successful, "ERROR" will appear next to "RESULT".

5

Receiving a fax


Receive Modes

You must choose a Receive Mode depending on the external devices and telephone services you have on your line.


Choose the Receive Mode

By default, your machine will automatically receive any faxes that are sent to it. The diagram below will help you choose the correct receive mode.

For more detailed information on the Receive Modes, see *Using Receive Modes* on page 44.

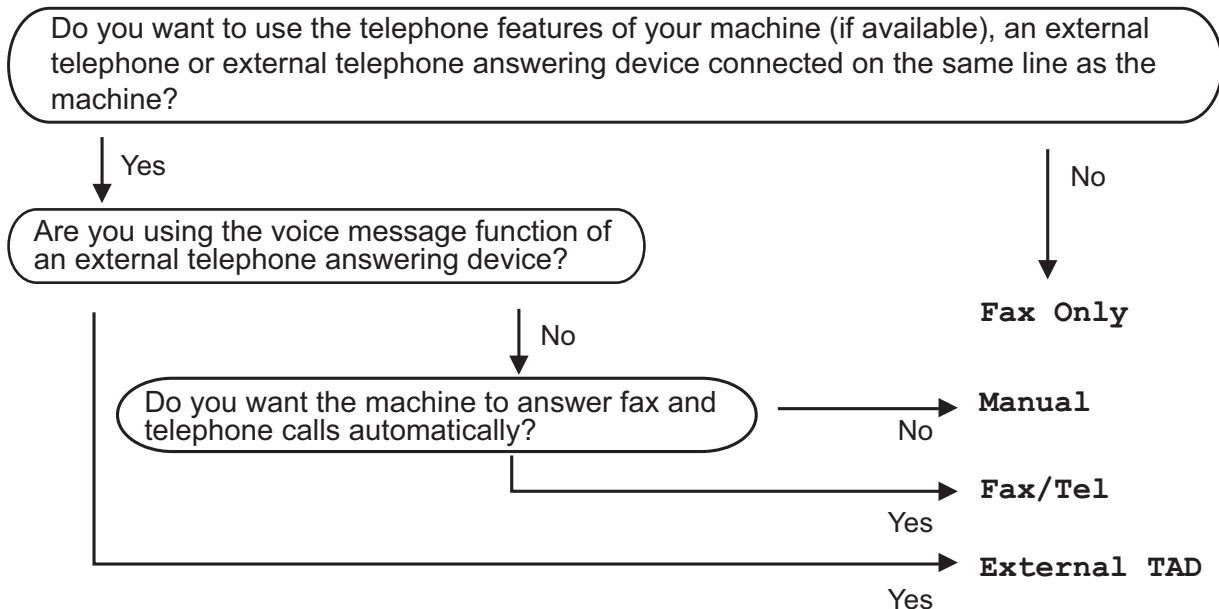

To set the Receive Mode follow the instructions below:

- 1 Press  (Settings).
- 2 Press **^** or **v** to display Initial Setup.
- 3 Press Initial Setup.
- 4 Press **^** or **v** to display Receive Mode.

- 5 Press `Receive Mode`.


NOTE

(For Australia, Singapore and Hong Kong)

If you cannot change the Receive Mode, make sure the Distinctive Ring feature is set to `Off`.
(See *Turning off Distinctive Ring* on page 48 and 53 for your relevant country.)

(For New Zealand)

If you cannot change the Receive Mode, make sure the FaxAbility feature is set to `Off`.
(See *How to Turn FaxAbility OFF or ON* on page 51.)

- 6 Press `▲` or `▼` to display `Fax Only`, `Fax/Tel`, `External TAD` or `Manual`, and then press the option you want to set.
- 7 Press .
The Touchscreen will display the current receive mode.

Using Receive Modes

Some Receive Modes answer automatically (*Fax Only* and *Fax/Tel*). You may want to change the *Ring Delay* before using these modes. (See *Ring Delay* on page 45.)

Fax Only

Fax Only mode will automatically answer every call as a fax call.

Fax/Tel

Fax/Tel mode helps you automatically manage incoming calls by recognising whether they are fax or voice calls and dealing with them in one of the following ways:

- Faxes will be automatically received.
- Voice calls will start the F/T Ring to tell you to pick up the line. The F/T Ring is a fast double-ring made by your machine.

(For more information, see *F/T Ring Time (Fax/Tel mode only)* on page 45 and *Ring Delay* on page 45.)

Manual

To receive a fax in Manual mode, lift the handset of an external telephone or press *Hook*. When you hear fax tones (short repeating beeps), press *Fax Start* and choose *Receive*. You can also use the *Fax Detect* feature to receive faxes by lifting a handset on the same line as the machine.

(For more information, see *Fax Detect* on page 46.)

External TAD

External TAD mode lets an external answering device manage your incoming calls. Incoming calls will be dealt with in one of the following ways:

- Faxes will be automatically received.
- Voice callers can record a message on the external TAD.



(For more information, see *Connecting an external TAD (telephone answering device)* on page 54.)

Receive Mode settings

Ring Delay

The Ring Delay sets the number of times the machine rings before it answers in **Fax Only** or **Fax/Tel** mode. If you have external or extension telephones on the same line as the machine, choose the maximum number of rings.

(See *Operation from external and extension telephones* on page 57 and *Fax Detect* on page 46.)



- 1 Press  (Settings).
- 2 Press **▲** or **▼** on the Touchpanel to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Setup Receive**.
- 5 Press **Setup Receive**.
- 6 Press **▲** or **▼** to display **Ring Delay**.
- 7 Press **Ring Delay**.
- 8 Press **▲** or **▼** to display the options, and then press the number of times the machine will ring before it answers (2-10 for Australia, 1-10 for New Zealand, 0-2 for Taiwan, 0-10 for some countries).
If you choose 0, the machine will answer immediately and the line will not ring at all.
- 9 Press .

F/T Ring Time (Fax/Tel mode only)

When somebody calls your machine, you and your caller will hear the normal telephone ring. The number of rings is set by the ring delay setting.

If the call is a fax, then your machine will receive it. However, if it is a voice call then the machine will sound the F/T Ring (a fast double-ring) for the time you have set in the F/T Ring Time setting. If you hear the F/T Ring, it means that you have a voice caller on the line.

Because the F/T Ring is made by the machine, extension and external telephones will not ring. However, you can still answer the call on any telephone by using a remote code. (For more information, see *Using remote codes* on page 57.)

- 1 Press  (Settings).
- 2 Press **▲** or **▼** on the Touchpanel to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Setup Receive**.
- 5 Press **Setup Receive**.
- 6 Press **▲** or **▼** to display **F/T Ring Time**.
- 7 Press **F/T Ring Time**.
- 8 Press **▲** or **▼** to display the options, and then press how long the machine will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds for Australia and some countries, 20, 30, 40 or 55 seconds for New Zealand).
- 9 Press .

NOTE

Even if the caller hangs up during the fast double-ring, the machine will continue to ring for the set time.

Fax Detect**If Fax Detect is On:**

Fax Detect is turned **On** as default.

The machine receives a fax automatically, even if you answer the call. When you see **Receiving** on the Touchscreen or when you hear “chirps” through the handset you are using, just replace the handset. Your machine will do the rest.

If Fax Detect is Off:

If you are at the machine and answer a fax call by lifting the handset, press **Fax Start**, then press **Receive** to receive the fax.

If you answered at an extension or external telephone, press * **5 1** (* **9 1** for New Zealand). (See *Operation from external and extension telephones* on page 57.)

NOTE

- If this feature is set to **On**, but your machine does not connect a fax call when you lift an extension or external telephone handset, press the remote activation code * **5 1** (* **9 1** for New Zealand).
- If you send faxes from a computer on the same telephone line and the machine intercepts them, set Fax Detect to **Off**.

1 Press  (Settings).

2 Press **^** or **v** on the Touchpanel to display **Fax**.

3 Press **Fax**.

4 Press **^** or **v** to display **Setup Receive**.

5 Press **Setup Receive**.

6 Press **^** or **v** to display **Fax Detect**.

7 Press **Fax Detect**.

8 Press **On** (or **Off**).

9 Press .

Voice operations

Tone or Pulse (Not Available for New Zealand)

If you have a Pulse dialling service, but need to send tone signals (for example, for telephone banking), follow the instructions below:

- 1 Press **Hook**.
- 2 Press **#** on the machine's Touchpanel. Any digits dialled after this will send tone signals.

When you have finished with the call, the machine will return to the Pulse dialling service.

Fax/Tel mode

When the machine is in Fax/Tel mode, it will use the F/T Ring (fast double-ring) to alert you to pick up a voice call.

If you are at an external telephone, lift the handset of the external telephone, and then press **Pickup** to answer.

If you are at an extension telephone, you'll need to lift the handset during the F/T Ring Time and then press **# 5 1** (**# 9 1** for New Zealand) between the fast double-rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing *** 5 1** (*** 9 1** for New Zealand).

Telephone Service for Australia

Distinctive Ring

Distinctive Ring ¹ is a function of your Brother machine that allows a person with one line to receive fax and voice calls through two different phone numbers on that one line.

Brother uses the term "Distinctive Ring", but telephone companies market the service under a variety of names. This service establishes a second telephone number on the same line as your existing telephone number, and each number has its own ring pattern. Typically, the original number rings with the standard ring pattern and is used for receiving voice calls, and the second number rings with a different ring pattern and is used for receiving faxes. Only one call can be answered (or made) at any one time and while this call is in progress, incoming calls to either number will be presented with a busy tone.

NOTE


¹ Contact your Telephone Service Provider to determine availability and any other related details.

After you have set the Distinctive Ring feature to **On**, the receive mode is set to **Manual** automatically. Your Distinctive Ring Number does not allow Voice calls - only Faxes. You can not change the receive mode from **Manual** mode while the Distinctive Ring is set to **on**.

How does your telephone company's "Distinctive Ring" service work?

Using "Distinctive Ring" service of your telephone company is the most efficient way to receive both fax and telephone calls on the same line. When the voice call comes in, all phones (extension and external) and the fax machine will ring to alert you to pick it up. If a fax call comes in, the fax machine will answer automatically without ringing, whereas the extension and external phones will ring twice with a Distinctive Ring pattern. It is also a more efficient way of operating a Fax machine with an extension phone as you do not have to use the remote activation codes. It gives you two independent numbers without the higher cost of a second line.

Flowchart Sequence of Incoming call

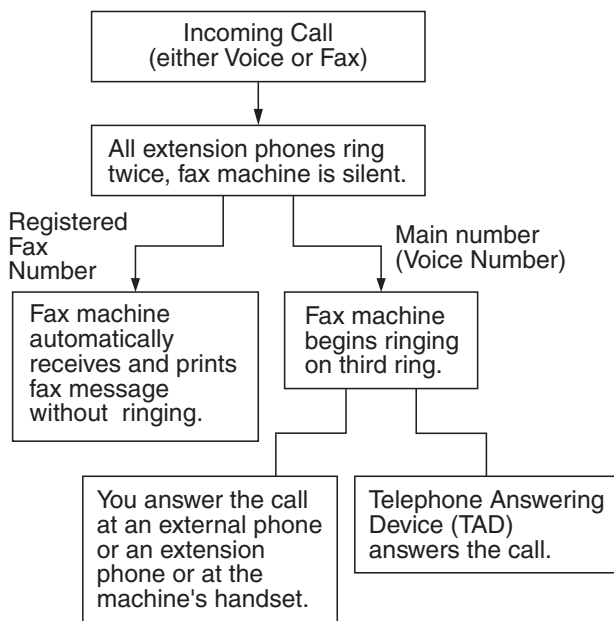







What does Brother's "Distinctive Ring" do?

The Brother machine has a Distinctive Ring feature that allows you to use your machine to take full advantage of the telephone company's Distinctive Ring service. The new telephone number on your line can just receive faxes.






Turning on Distinctive Ring

Very Important!

After you have set the Distinctive Ring feature to on, the receive mode is set to `Manual` automatically. Your Distinctive Ring Number does not allow Voice calls - only Faxes. You cannot change the receive mode to another mode while the Distinctive Ring is set to on. When Distinctive Ring is on, the LCD will show `D/R` as the Receive Mode.

- 1 Press  (Settings).
- 2 Press  or  on the Touchpanel to display `Fax`.
- 3 Press `Fax`.
- 4 Press  or  to display `Miscellaneous`.
- 5 Press `Miscellaneous`.
- 6 Press `Distinctive`.
- 7 Press `On`.
- 8 Press . Distinctive Ring is now set to `On`.

Turning off Distinctive Ring

- 1 Press  (Settings).
- 2 Press  or  on the Touchpanel to display `Fax`.
- 3 Press `Fax`.
- 4 Press  or  to display `Miscellaneous`.
- 5 Press `Miscellaneous`.
- 6 Press `Distinctive`.
- 7 Press `Off`.

8 Press .

NOTE

If you turn off Distinctive Ring, the machine will stay in **Manual** receive mode. You will need to set the **Receive Mode** again. (*Choose the Receive Mode* on page 42.)

Caller ID

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number or name as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because Caller IDs are received and stored in your machine memory.

NOTE

To get the Caller ID Service: apply for the Caller ID service at your local telephone company, if available.

Advantages of Caller ID

For Business

All businesses profit from a quicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

At Home

Residential customers can protect themselves from unwanted calls.

How Does the Caller ID Work?

The Caller ID Appears on the Display When Your Telephone Rings

As your telephone rings, the display shows you the caller's phone number or name if the name has been stored as Speed Dial. Once you answer the call, the caller's ID disappears.

NOTE

- If **ID Unknown** appears on the display, it means that the call came from outside your caller ID service area or a public phone.¹
- If **ID Withheld** appears on the display, it means the caller intentionally blocked the transmission of his/her ID.¹

¹ Depends on network function.

The Caller ID is Stored in Your Machine Memory

The machine can store a maximum of the last 30 incoming caller IDs in the memory, along with the time and date of reception. The 31st call will cause the oldest ID to be erased.

The Caller ID information stored in the memory can be used for the following.

■ Printing the Caller ID List.

You can review calls you received by checking the Caller IDs in memory. This report will list the Date, Time, Phone Number (Caller ID) name, and type of Call (Comment) if available.

See *Advanced User's Guide: How to print a report.*

Telephone Service for New Zealand

FaxAbility

FaxAbility is a service offered by Telecom that allows you to have an additional number on one phone line, with its own distinctive ring pattern. This way, when you get an incoming call, you can identify the number being called by its ring.

How Will the Fax Machine Treat All Other Numbers?


FaxAbility mode ensures that the machine will answer calls to the FaxAbility (secondary) number. When a call comes in to your main number, all the phones will ring. You can set an external answering device (TAD) to answer calls on the other number(s). (See the chart in this page.)

What is the Advantage of Using the FaxAbility Function?

Using FaxAbility is the most efficient way to receive both fax and telephone calls on the same line. It is much easier for your callers who dial manually. The fax machine will answer with receiving tones so they will not have to press an activation code. And the people who call to talk on your main number will not have to talk to your fax machine. Basically, it gives you two independent numbers without the higher cost of a second line.

How Does FaxAbility Work?

Your telephone number will have the standard ring pattern of long, long tone, while the new number will have a ring pattern of long, silence, long, etc. When FaxAbility is On, you will not hear the first ring of all incoming calls on the fax machine. Extension phones will ring as usual. If the fax machine recognises the ring pattern, all ringing will stop and the fax machine will answer and automatically receive the fax message. Otherwise, you will hear the extension phones and the fax machine continue to ring. The fax machine always listens to the ring pattern before it answers, so do not pick up the phone during that time. You will quickly learn to recognise the ring pattern for faxes, so you will not be tempted to answer that number. Either you or a telephone answering device can answer the main number(s).

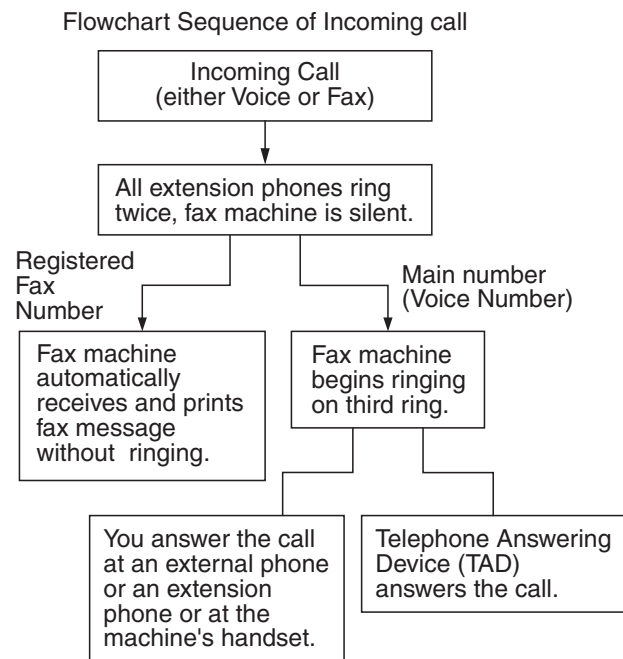


NOTE

After you have set the FaxAbility feature to **On**, the receive mode is set to **Manual** automatically. Unless you have a TAD or Voice Mail set up on the FaxAbility number, **Manual** mode means you must answer all the call yourself. You can not change the receive mode to the other mode while the FaxAbility is set to **on**. When FaxAbility is **on**, the LCD will show **D/R** as the Receive Mode.

How to Turn FaxAbility OFF or ON

The FaxAbility function is designed to accommodate the FaxAbility service provided by Telecom. To change the setting, repeat steps ①-⑨; Step ⑦ is where you can choose either **On** or **Off**.

Call Waiting beeps caused by incoming calls on your main number can affect fax transmissions. If you have FaxAbility Service but don't have Call Waiting, you need do nothing at this stage. If you do have Call Waiting as well as FaxAbility, set the Call Waiting menu option to **On**. See below.

- ① Press  (**Settings**).
- ② Press **▲** or **▼** on the Touchpanel to display **Fax**.
- ③ Press **Fax**.
- ④ Press **▲** or **▼** to display **Miscellaneous**.
- ⑤ Press **Miscellaneous**.
- ⑥ Press **FaxAbility**.
- ⑦ Press **On** (or **Off**) to set FaxAbility. If you have FaxAbility service, press **On**.
- ⑧ Press **Call Waiting**.

- ⑨ Press **On** to set Call Waiting. If you have Call Waiting service, press **On** to avoid the trouble caused by Call Waiting.

- ⑩ Press .

Caller ID

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number and name if available as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because Caller IDs are received and stored in your machine memory.

NOTE

To get the Caller ID Service, apply for the Caller ID service at your local telephone company, if available.

Advantages of Caller ID**For Business**

All businesses profit from a quicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

At Home

Residential customers can protect themselves from unwanted calls.

How Does the Caller ID Work?

The Caller ID Appears on the Display When Your Telephone Rings

As your telephone rings, the display shows you the caller's phone number or name if available. Once you answer the call, the caller's ID disappears. You can print a list of the Caller ID information received by your machine.

See *Advanced User's Guide: How to print a report*.

NOTE

- If `ID Unknown` appears on the display, it means that the call came from outside your caller ID service area.¹
- If `ID Withheld` appears on the display, it means the caller intentionally blocked the transmission of his/her ID.¹

¹ Depends on network function.

Telephone Service for Some Countries

Distinctive Ring (For Singapore and Hong Kong)

This machine feature lets you use the Distinctive Ring subscriber service offered by some telephone companies, which allows you to have several telephone numbers on one phone line. Each phone number has its own Distinctive Ring pattern, so you will know which phone number is ringing. This is one way you can have a separate phone number for your machine.

Your machine has a Distinctive Ring function, allowing you to dedicate one phone number just for receiving faxes. You will need to set Distinctive Ring to `On`.

NOTE

You can switch it off temporarily, then turn it back on. When you get a new fax number, make sure you reset this function.




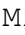

- The machine will answer only calls to the Distinctive Ring number.

Turning on Distinctive Ring







Very Important!

After you have set the Distinctive Ring feature to `on`, the receive mode is set to `Manual` automatically. Unless you have a TAD or Voice Mail set up on the Distinctive Ring number, `Manual` mode means you must answer all the calls yourself. You cannot change the receive mode to another mode while the Distinctive Ring is set to `on`. When Distinctive Ring is `on`, the LCD will show `D/R` as the Receive Mode.

1 Press  (Settings).

- 2 Press  or  on the Touchpanel to display Fax.
- 3 Press Fax.
- 4 Press  or  to display Miscellaneous.
- 5 Press Miscellaneous.
- 6 Press Distinctive.
- 7 Press On.
- 8 Press .
Distinctive Ring is now set to On.

Turning off Distinctive Ring

- 1 Press  (Settings).
- 2 Press  or  on the Touchpanel to display Fax.
- 3 Press Fax.
- 4 Press  or  to display Miscellaneous.
- 5 Press Miscellaneous.
- 6 Press Distinctive.
- 7 Press Off.
- 8 Press .

NOTE

If you turn off Distinctive Ring, the machine will stay in **Manual receive** mode. You will need to set the Receive Mode again. (*Choose the Receive Mode* on page 42.)

Caller ID (For Singapore, Hong Kong and Taiwan)

The Caller ID feature of this machine lets you use the Caller ID subscriber service offered by many local phone companies. Call your telephone company for details. This service provides you, by means of the screen display, the telephone number (or name) of your caller as the line rings.

After a few rings, the screen displays the telephone number of your caller (or name, if available). Once you answer the call, the Caller ID information disappears from the screen, but the call information remains stored in the Caller ID memory.

- ID Unknown display means call originates outside your Caller ID service area.
- ID Withheld display means the caller has intentionally blocked transmission of information.

NOTE







You can print a list of Caller ID information received by your machine.

See *Advanced User's Guide: How to print a report.*

Caller ID service varies with different carriers. Call your local phone company to determine the kind of service available in your area.

Setting the Caller ID to On (For Taiwan)

If you have Caller ID on your line, then this function should be set to **On** to display the caller's telephone number on the Touchscreen as the telephone rings.

- 1 Press  (Settings).
- 2 Press  or  to display **Fax**.
- 3 Press **Fax**.
- 4 Press  or  to display **Miscellaneous**.
- 5 Press **Miscellaneous**.
- 6 Press **Caller ID**.
- 7 Press **On** (or **Off**).
- 8 Press .

NOTE

(For Taiwan)

Please note that Brother machines support DTMF in Taiwan market instead of FSK-US & FSK-UK.


Connecting an external TAD (telephone answering device)

You may choose to connect an external answering device. However, when you have an **external** TAD on the same telephone line as the machine, the TAD answers all calls and the machine “listens” for fax calling (CNG) tones. If it hears them, the machine takes over the call and receives the fax. If it does not hear CNG tones, the machine lets the TAD continue playing your outgoing message so your caller can leave a voice message.

The TAD must answer within two rings (the recommended setting is two rings). The machine cannot hear CNG tones until the TAD has answered the call, and with four rings, there are only 8 to 10 seconds of CNG tones left for the fax “handshake”. Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.

NOTE

If you do not receive all your faxes, shorten the Ring Delay setting on your external TAD.

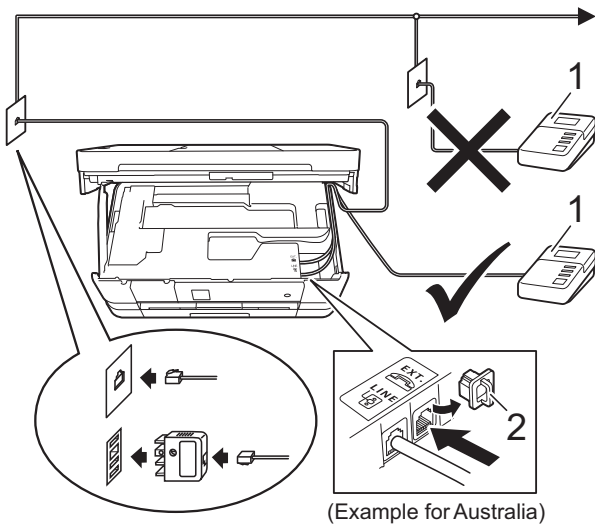

1 TAD

2 Protective Cap

When the TAD answers a call, the Touchscreen shows `Telephone`.

IMPORTANT

DO NOT connect a TAD elsewhere on the same telephone line.

Connections settings

The external TAD must be connected as shown in the previous illustration.

- 1 Using both hands, use the finger holds on each side of the machine to lift the scanner cover into the open position.
- 2 Carefully guide the telephone line cord into the cable channel and out the back of the machine.
- 3 Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover using both hands.
- 4 Set your external TAD to one or two rings. (The machine's Ring Delay setting does not apply.)
- 5 Record the outgoing message on your external TAD.
- 6 Set the TAD to answer calls.
- 7 Set the Receive Mode to `External TAD`. (See *Choose the Receive Mode* on page 42.)

Recording an outgoing message (OGM) on an external TAD

Timing is important in recording this message.

- 1 Record 5 seconds of silence at the beginning of your message. (This allows your machine time to listen for the fax CNG tones of automatic transmissions before they stop.)
- 2 Limit your speaking to 20 seconds.

NOTE

We recommend beginning your OGM with an initial 5 second silence because the machine may not hear the fax tones over a voice. You may try omitting this pause, but if your machine has trouble receiving, then you must re-record the OGM to include it.

Multi-line connections (PABX)

Most offices use a central telephone system. Brother recommends that all our machines be connected to a discreet (dedicated) line. Although a particular PABX may appear to work with a particular model of fax machine, we cannot guarantee that the unit will operate correctly.


While it is often relatively simple to connect a fax machine to a PABX, (Private Automatic Branch Exchange), we suggest that you contact the company that installed your telephone system and ask them to connect the fax machine for you.

Brother does not recommend the use of a PABX line. PABX limitations in general can cause some functions of the fax machine not to work correctly.

External and extension telephones

Connecting an external or extension telephone

You can connect a separate telephone to your machine as shown in the diagram below.

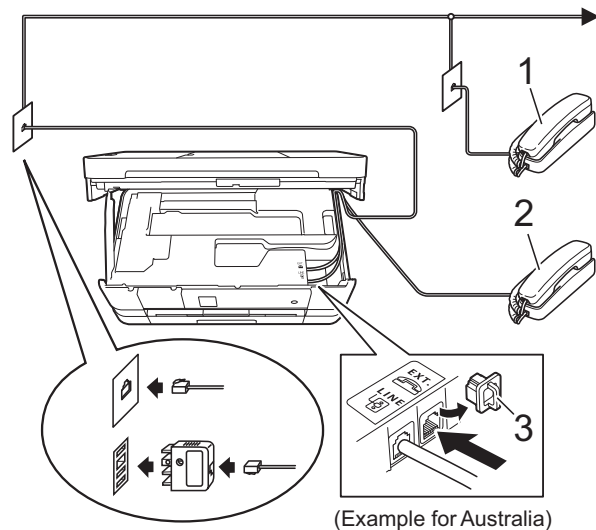

- 1 Extension telephone
- 2 External telephone
- 3 Protective Cap

Operation from external and extension telephones

If you answer a fax call on an extension or an external telephone, you can make your machine take the call by using the Remote Activation Code. When you press the Remote Activation Code * 5 1 (* 9 1 for New Zealand), the machine starts to receive the fax.

If the machine answers a voice call and fast double-rings for you to take over, use the Remote Deactivation Code # 5 1 (# 9 1 for New Zealand) to take the call at an extension telephone. (See *F/T Ring Time (Fax/Tel mode only)* on page 45.)

If you answer a call and no one is on the line:

You should assume that you're receiving a manual fax.

Press * 5 1 (* 9 1 for New Zealand) and wait for the chirp or until the Touchscreen shows *Receiving*, and then hang up.

NOTE

You can also use the Fax Detect feature to make your machine automatically take the call. (See *Fax Detect* on page 46.)

Using a cordless external telephone

Once the base unit of the cordless telephone has been connected to the same telephone line as the machine (See *External and extension telephones* on page 56.), you can answer calls on the cordless handset during the Ring Delay.

If you let the machine answer first, you will have to go to the machine and press *Pickup* to send the call to the cordless handset.

Using remote codes

Remote Activation Code

If you answer a fax call on an extension or external telephone, you can tell your machine to receive it by dialling the Remote Activation Code * 5 1 (* 9 1 for New Zealand). Wait for the chirping sounds and then replace the handset. (See *Fax Detect* on page 46.)

If you answer a fax call at the external telephone, you can make the machine receive the fax by pressing *Fax Start* and choose *Receive*.


Remote Deactivation Code


If you receive a voice call and the machine is in Fax/Tel mode, it will start to sound the F/T Ring (fast double-ring) after the initial ring delay. If you pick up the call on an extension telephone, you can turn the F/T Ring off by pressing # 5 1 (# 9 1 for New Zealand) (make sure you press this *between* the rings).

If the machine answers a voice call and fast double-rings for you to take over, you can take the call at the external telephone by pressing *Pickup*.

Changing the remote codes

If you want to use Remote Activation, you have to turn on the remote codes. The preset Remote Activation Code is * 5 1 (* 9 1 for New Zealand). The preset Remote Deactivation Code is # 5 1 (# 9 1 for New Zealand). If you want to, you can replace them with your own codes.

- 1 Press  (Settings).
- 2 Press \wedge or \vee on the Touchpanel to display *Fax*.
- 3 Press *Fax*.
- 4 Press \wedge or \vee to display *Setup Receive*.


- 5 Press **Setup Receive**.
- 6 Press **▲** or **▼** to display **Remote Codes**.
- 7 Press **Remote Codes**.
- 8 Press **On**.
- 9 Do one of the following.
 - If you want to change the **Remote Activation Code (Act.Code)**, enter the new code.
Press **OK**, go to step 10.
 - If you do not want to change the **Remote Activation Code**, press **OK**, go to step 10.
- 10 Do one of the following.
 - If you want to change the **Remote Deactivation Code (Deact.Code)**, enter the new code.
Press **OK**, go to step 11.
 - If you do not want to change the **Remote Deactivation Code**, press **OK**, go to step 11.
- 11 Press .


NOTE

- If you are always disconnected when accessing your external TAD remotely, try changing the **Remote Activation Code** and **Remote Deactivation Code** to another three-digit code using the numbers **0-9**, *****, **#**.
 - **Remote Codes** might not work with some telephone systems.
-

How to dial



Manual dialling

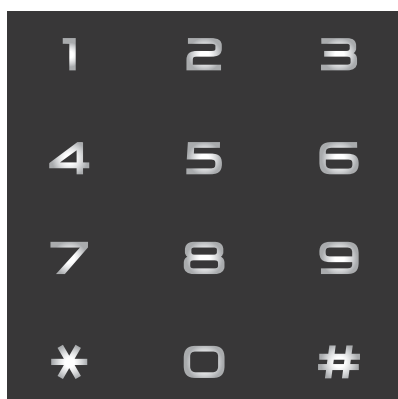- 1 Load your document.
- 2 Press  (Fax).
- 3 Press all of the digits of the fax number.



- 4 Press **Fax Start**.

Speed Dialling

- 1 Load your document.
- 2 Press  (Fax).
- 3 Press  (Address).
- 4 Do one of the following:
 - Press **Alphabetical** or **Numerical**, and then press the number you want to dial.
 - Press the 2-digit Speed Dial number using the dial pad.

NOTE


If the Touchscreen shows **Not Registered** when you enter or search a Speed Dial number, it means a number has not been stored at this location.

- 5 To send a fax, press **Send a fax** and go to step 6.
- 6 Press **Fax Start**.
The machine scans and sends the fax.

Fax Redial

If you are sending a fax automatically and the line is busy, the machine will automatically redial up to three times at five minute intervals.

Redial only works if you dialled from the machine.

- 1 Load your document.
- 2 Press  (Fax).
- 3 Press **Redial**.
- 4 Press **Fax Start**.




NOTE

- In Real Time Transmission the automatic redial feature does not work when you are using the scanner glass.
- If you are sending a fax manually and the line is busy, press **Hook** before performing step 3 above.
- Redial will change to **Pause** when you enter a fax number.

Additional Dialling Operations

Outgoing Call history

The last 30 numbers you sent a fax to will be stored in the outgoing call history. You can choose one of these numbers to fax to, add to the Address Book or delete from the history.

- 1 Press  (Fax).
- 2 Press  (History).
- 3 Press the number you want.
- 4 Do one of the following:
 - To send a fax, press **Send a fax**. Press **Fax Start**.
 - If you want to store the number, press **More** and then press **Add to Address Book**.
(See *Advanced User's Guide: Storing Speed Dial numbers from Outgoing Calls*.)
 - If you want to delete the number from the Outgoing Call history list, press **More** and then press **Delete**.
Press **Yes** to confirm.
Press .





Caller ID history

This feature requires the Caller ID subscriber service offered by many local telephone companies. (See *Caller ID* on page 49, 51 and 53 for your relevant country.)

The numbers, or names if available, from the last 30 faxes and telephone calls you received will be stored in the Caller ID history. You can view the list or choose one of these numbers to fax to, add to Address Book, or delete from the history. When the thirty-first call comes into the machine, it replaces information about the first call.

NOTE

If you are not a Caller ID subscriber, you can still view call dates from the Caller ID history and delete entries from the list.

- 1 Press  (Fax).
- 2 Press  (History).
- 3 Press  (Incoming).
- 4 Press the number or the name you want.
- 5 Do one of the following:
 - To send a fax, press **Send a fax**. Press **Fax Start**.
 - If you want to store the number, press **More** and then press **Add to Address Book**.
(See *Advanced User's Guide: Storing Speed Dial numbers from the Caller ID history*.)
 - If you want to delete the number from the Caller ID history list, press **More** and then press **Delete**.
Press **Yes** to confirm.
Press .

NOTE

You can print the Caller ID list.
(See Advanced User's Guide: *How to print a report.*)

Storing numbers

You can set up your machine to do the following types of easy dialling: Speed Dial and Groups for broadcasting faxes. When you dial a Speed Dial number, the Touchscreen shows the number.

NOTE

If you lose electrical power, the Speed Dial numbers that are in the memory will not be lost.

Storing a pause

When you are storing Speed Dial numbers, you can insert one or more 3.5 second pauses by pressing PAUSE on the Touchscreen.

Storing Speed Dial numbers

You can store up to 100 names and numbers in two-digit Speed Dial locations. You can store two numbers to each name. When you dial you will only have to press a few buttons on the Touchscreen (for example: press




(Address), the number you want to call and Send a fax).

- 1 Press (Fax).
- 2 Press (Address).
- 3 If Speed Dial numbers have already been stored, press **Alphabetical** or **Numerical**.
- 4 Press **More**.
- 5 Press **^** or **v** on the Touchpanel to display **Set Speed Dial**.
- 6 Press **Set Speed Dial**.


- 7 Do one of the following:
- Enter the name (up to 16 characters) using the keyboard on the Touchscreen.
Press **OK**.
(To help you enter letters, see *Entering Text* on page 155.)
 - To store the number without a name, press **OK**.

- 8 Enter the first fax or telephone number (□□1 :) using the keyboard on the Touchscreen (up to 20 digits).
Press **OK**.

NOTE


- Be sure to include the area code when entering a fax or telephone number. Depending on the country, the Caller ID names and history may not be displayed correctly if the area code is not registered with the fax or telephone number.
- *If you downloaded Internet Fax:*
If you want to store an E-mail address to use with Internet Fax or Scan to E-mail Server, press  and enter the E-mail address then press **OK**. (See *Entering Text* on page 155.)

- 9 Do one of the following:
- Enter the second fax or telephone number (□□2 :) using the keyboard on the Touchscreen (up to 20 digits).
Press **OK**.
 - If you do not want to store a second number, press **OK**.

- 10 To choose where the number will be stored, do one of the following:
- To accept the displayed next available Speed Dial location, press **OK**.
 - To enter a different Speed Dial location, press  and then enter a 2-digit number using the keyboard on the Touchscreen.
Press **OK**.



NOTE

If the 2-digit Speed Dial location you choose is already taken, the **OK** button on the Touchscreen will not work. Choose a different location.

- 11 When the Touchscreen displays your settings, press **OK** to confirm.
- 12 Do one of the following:
- To store another Speed Dial number, repeat steps 4 to 11.
 - To finish storing numbers, press .

Changing Speed Dial names or numbers


You can change the name or number of a Speed Dial that has already been stored, or delete it by deleting all of its numbers.


- 1 Press  (Fax).
- 2 Press  (Address).
- 3 Press **Alphabetical** or **Numerical**.
- 4 Press **More**.
- 5 Do one of the following:
 - Press **▲** or **▼** to display **Change**. Press **Change** to edit the names or numbers.
 - Press **▲** or **▼** to display **Delete**. Press **Delete**.
Choose the numbers you want to delete by pressing them to display a red check mark.
Press **OK**.
Press **Yes** to confirm.
Go to step 10.
- 6 Press **▲** or **▼** to display the number you want to change.
- 7 Press the number you want to change.


- 8 Do one of the following:
 - If you want to change the name, press **Name**.
Enter the new name (up to 16 characters) using the keyboard on the Touchscreen. (See *Entering Text* on page 155.)
Press **OK**.
 - If you want to change the first fax or telephone number, press **☐☐1:**.
Enter the new fax or telephone number (up to 20 digits) using the keyboard on the Touchscreen.
Press **OK**.
 - If you want to change the second Fax/Tel number, press **☐☐2:**.
Enter the new fax or telephone number (up to 20 digits) using the keyboard on the Touchscreen.
Press **OK**.

NOTE

How to change the stored name or number:

If you want to change a character, press **◀** or **▶** to position the cursor underneath the character you want to change, and then press . Enter the new character.

If you want to change a stored number, press  repeatedly to delete the number. Enter the new number.

- 9 The Touchscreen will display your settings.
Do one of the following:
 - Press **OK** to finish.
To change another Speed Dial location, repeat steps 6 to 9.
 - To change more information, return to 8.
- 10 Press .

8

Making copies

How to copy

The following steps show the basic copy operation.

- 1 Do one of the following to load your document:
 - (MFC-J4410DW and MFC-J4610DW)
Place the document *face down* in the ADF.
(See Using the ADF (MFC-J4410DW and MFC-J4610DW) on page 36.)
 - Place the document *face down* on the scanner glass.
(See Using the scanner glass on page 37.)

- 2 Press  (Copy).

- The Touchscreen shows:



1 No. of Copies

You can enter the number of copies by pressing - or + on the Touchscreen (as shown above) or by using the dial pad.

- 3 If you want more than one copy, enter the number (up to 99).
- 4 Press **Mono Start** or **Colour Start**.

Stop copying

To stop copying, press .

Copy options

You can change the following copy settings. Press **Copy** and then press **Options**. Press **^** or **v** on the Touchpanel to scroll through the copy settings. When the setting you want is displayed, press it and choose your option. When you have finished changing options, press **OK**.

(Basic User's Guide)

For information about changing the following copy settings, see page 65.

- Paper Type
- Paper Size
- Tray Select¹

¹ MFC-J4610DW only.

(Advanced User's Guide)

For information about changing the following copy settings, see Advanced User's Guide: *Copy options*.


- Quality
- Enlarge/Reduce
- Page Layout
- 2in1 (ID)
- Stack/Sort
- Density
- 2-sided Copy
- Ink Save Mode
- Thin Paper Copy
- Book Copy
- Remove Background
- Set New Default
- Factory Reset

NOTE

(MFC-J4410DW and MFC-J4610DW)
If you want to sort copies, use the ADF.


Paper Type

If you are copying on a special type of paper, set the machine for the type of paper you are using to get the best print quality.

- 1 Press  (Copy).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **^** or **v** on the Touchpanel to display **Paper Type**.
- 6 Press **Paper Type**.
- 7 Press **^** or **v** to display **Plain Paper**, **Inkjet Paper**, **Brother BP71**, **Other Glossy** or **Transparency**, and then press the option you want to set.
- 8 If you do not want to change more settings, press **OK**.
- 9 Press **Mono Start** or **Colour Start**.

Paper Size

If you are copying on paper other than A4 size, you will need to change the Paper Size setting. You can copy only on A4, A5, A3, Photo (10 × 15 cm), Letter, Legal or Ledger paper.

- 1 Load your document.
- 2 Press  (Copy).
- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **^** or **v** on the Touchpanel to display **Paper Size**.
- 6 Press **Paper Size**.

- 7 Press **^** or **v** to display **A4**, **A5**, **A3**, **10x15cm**, **Letter**, **Legal** or **Ledger**, and then press the option you want to set.


NOTE

- If you choose **A3**, **Legal** or **Ledger**, the precautions for loading paper will be displayed. Read the information on the Touchscreen and then confirm by pressing **OK**.
- If you are using the manual feed slot insert only one sheet of paper at a time. (See *Loading paper in the manual feed slot* on page 24.)

- 8 If you do not want to change further settings, press **OK**.
- 9 Press **Mono Start** or **Colour Start**.

Tray Select (MFC-J4610DW)

You can change the tray temporarily for the next copy. To change the default tray setting see *Tray use in Copy mode (MFC-J4610DW)* on page 30.

- 1 Load your document.
- 2 Press  (Copy).
- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **^** or **v** on the Touchpanel to display **Tray Select**.
- 6 Press **Tray Select**.
- 7 Press **Tray #1**, **Tray #2** or **Auto Tray Select**.
- 8 If you do not want to change additional settings, press **OK**.
- 9 Press **Mono Start** or **Colour Start**.

PhotoCapture Center™ operations (PHOTO mode)

Even if your machine is *not* connected to your computer, you can print photos directly from digital camera media or a USB Flash memory drive. (See *Print Images* on page 69.)

You can scan documents and save them directly to a memory card or USB Flash memory drive. (See *How to scan to a memory card or USB Flash memory drive* on page 70.)

If your machine is connected to a computer, you can use your computer to access a memory card or USB Flash memory drive that is inserted in the front of the machine.

(See Software User's Guide: *PhotoCapture Center™* (Windows®).)

(See Software User's Guide: *Remote Setup & PhotoCapture Center™* (Macintosh).)


Using a memory card or USB Flash memory drive

Your Brother machine has media drives (slots) for use with the following popular digital camera media: Memory Stick Duo™, Memory Stick PRO Duo™, SD Memory Card, SDHC Memory Card, SDXC Memory Card, MultiMedia Card, MultiMedia Card plus and USB Flash memory drives.

 
The PhotoCapture Center™ feature lets you print digital photos from your digital camera at high resolution to get photo quality printing.

Getting started

- 1 Open the media slot cover.
- 2 Firmly put a memory card or USB Flash memory drive into the correct slot.

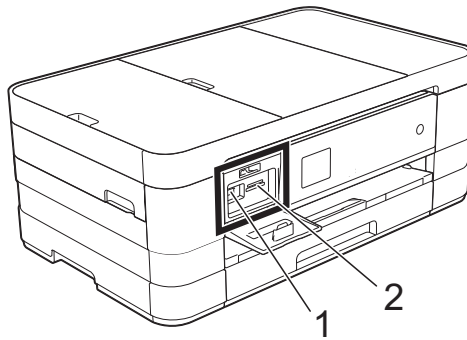







1 USB Flash memory drive



IMPORTANT

The USB direct interface supports only a USB Flash memory drive, a PictBridge-compatible camera, or a digital camera that uses the USB mass storage standard. Any other USB devices are not supported.

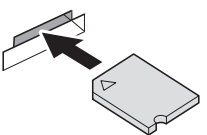2 Memory card slot

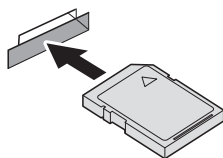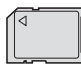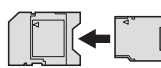Slot	Compatible memory cards	
Upper slot 		Memory Stick Duo™ Memory Stick PRO Duo™
		Memory Stick Micro™ (Adapter required)
Lower slot 		SD Memory Card SDHC Memory Card SDXC Memory Card MultiMedia Card MultiMedia Card plus
		miniSD (Adapter required) miniSDHC (Adapter required) microSD (Adapter required) microSDHC (Adapter required) MultiMedia Card mobile (Adapter required)



IMPORTANT

- DO NOT insert a Memory Stick Duo™ into the lower SD slot, this may cause damage to the machine.
 - DO NOT insert more than one media card in the machine at the same time. Doing this may cause damage to the machine.
 - DO NOT unplug the power cord or remove the memory card or USB Flash memory drive from the media drive (slot) or USB direct interface while the machine is reading or writing to the memory card or USB Flash memory drive. **You will lose your data or damage the card.**
-

The machine can only read one device at a time.

Print Images

View Photos

You can preview your photos on the Touchscreen before you print them. If your photos are large files there may be a delay before each photo is displayed.

- 1 Open the media slot cover.
- 2 Put the memory card or USB Flash memory drive in the correct slot.
- 3 Press `View Photos`.
- 4 Press `^` or `v` on the Touchpanel to display the photo you want to print.
- 5 Press `+` or `-` to select the number of copies you want to print.
- 6 Repeat step 4 and 5 until you have chosen all the photos you want to print. Press `OK`.
- 7 Read and confirm the displayed list of options and do one of the following:
 - If you want to change the print settings, press `Options`. (See Advanced User's Guide: *PhotoCapture Center™ print settings*.)
 - If you do not want to change any settings, go to step 8.
- 8 Press `Start` to print.

PhotoCapture Center™ print settings

You can change the print settings temporarily for the next print.

The machine returns to its default settings after one minute.



NOTE

You can save the print settings you use most often by setting them as the default. (See Advanced User's Guide: *Setting your changes as a new default*.)



How to scan to a memory card or USB Flash memory drive

You can scan monochrome and colour documents onto a memory card or USB Flash memory drive. Monochrome documents will be stored in PDF (*.PDF) or TIFF (*.TIF) file formats. Colour documents may be stored in PDF (*.PDF) or JPEG (*.JPG) file formats. The factory setting is Colour, 200 dpi and the default file format is PDF. The machine automatically creates file names based on the current date. (See Quick Setup Guide.) For example, the fifth image scanned on July 1, 2012 would be named 01071205.PDF. You can change the colour and resolution.

- 1 Load your document.
- 2 Open the media slot cover.
- 3 Put the memory card or USB Flash memory drive in the correct slot.
- 4 Press .
- 5 Press  (Scan).
- 6 Press \wedge or \vee on the Touchpanel to display Scan to Media.
- 7 Press Scan to Media.

IMPORTANT

DO NOT take out the memory card or USB Flash memory drive while the machine is reading or writing to it to avoid damaging the card, USB Flash memory drive, or the data stored on them.

- 8 Press Options.
Do one or more of the following:
 - To change the scan type, press \wedge or \vee to display Scan Type. Press Scan Type and choose Colour or Black and White.
 - To change the resolution, press \wedge or \vee to display Resolution. Press Resolution and choose 100 dpi, 200 dpi, 300 dpi, 600 dpi or Auto.
 - To change the file type, press \wedge or \vee to display File Type. Press File Type and choose PDF, JPEG or TIFF.
 - If you want to change the file name, press \wedge or \vee to display File Name. Press File Name and enter the file name.
You can only change the first 6 characters.
Press OK.
 - To remove background colour, press \wedge or \vee to display Remove Background.
Press Remove Background and choose Low, Medium, High or Off.

NOTE

Remove Background removes the base colour of documents to make the scanned data more recognisable.

- 9 When you have finished choosing settings, press OK.

NOTE

- If you chose colour in the Scan Type setting, you cannot choose the file type TIFF.
- If you chose monochrome in the Scan Type setting, you cannot choose the file type JPEG.

- 10 Press Start.

Printing a document

The machine can receive data from your computer and print it. To print from a computer, you must install the printer driver.

(See Software User's Guide: *Printing* (Windows®).)

(See Software User's Guide: *Printing and Faxing* (Macintosh).)

- 1 Install the Brother printer driver from the CD-ROM. (See Quick Setup Guide.)
- 2 From your application, choose the Print command.
- 3 Choose the name of your machine in the **Print** dialog box and click **Properties** or **Preferences**, depending on the application you are using.
- 4 Choose the settings you want to change in the Properties dialog box.
 - **Media Type**
 - **Print Quality**
 - **Paper Size**
 - **Orientation**
 - **Colour / Greyscale**
 - **Ink Save Mode**
 - **Scaling**
 - **2-sided / Booklet**
- 5 Click **OK**.
- 6 Click **Print** (or **OK** depending on the application you are using) to begin printing.

Before scanning

To use the machine as a scanner, install a scanner driver. If the machine is on a network, configure it with a TCP/IP address.

- Install the scanner drivers from the CD-ROM. (See Quick Setup Guide: *Install MFL-Pro Suite*.)
- Configure the machine with a TCP/IP address if network scanning does not work. (See Software User's Guide: *Configuring Network Scanning for Windows*[®].)


Scanning a document as a PDF file using ControlCenter4 (Windows®)


(For detailed information, see Software User's Guide: *Scanning*.)

NOTE

- The screens on your PC may vary depending on your model.
- This section is based on using the Advanced Mode of ControlCenter4.

ControlCenter4 is a software utility that lets you quickly and easily access the applications you use most often. Using ControlCenter4 eliminates the need to manually launch specific applications.

- 1 Load your document. (See *How to load documents* on page 36.)
- 2 Open ControlCenter4 by clicking /All Programs/Brother/MFC-XXXX (where XXXX is your model name)/ControlCenter4. The ControlCenter4 application will open.
- 3 If the ControlCenter4 Mode screen appears, choose the **Advanced Mode** and then click **OK**.

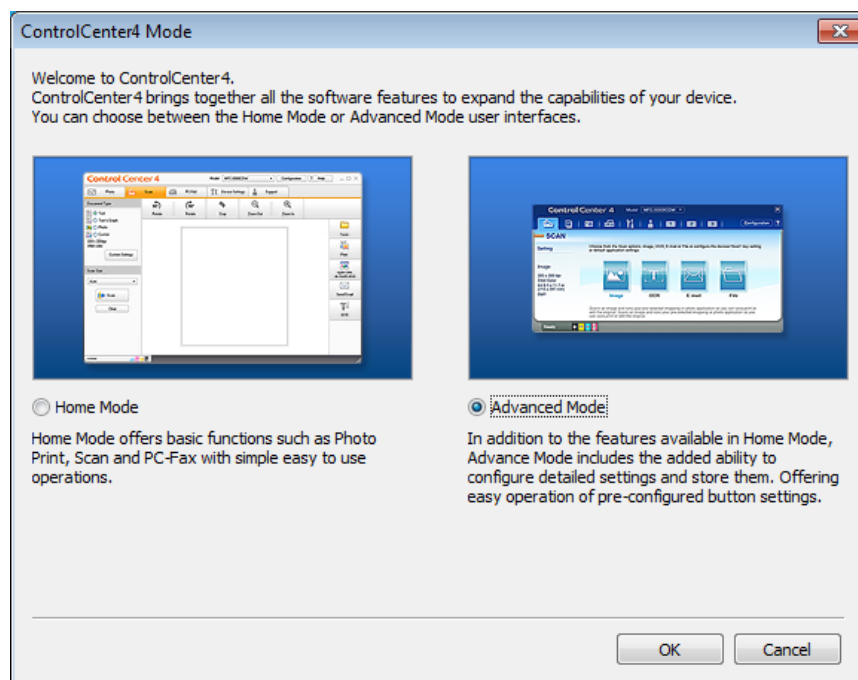



- 4 Make sure the machine you want to use is selected from the **Model** pull-down list.

- 5 Set the scanning configuration.
Click **Configuration**, and then select **Button settings**, **Scan** and **File**.



The configuration dialog box appears. You can change the default settings.

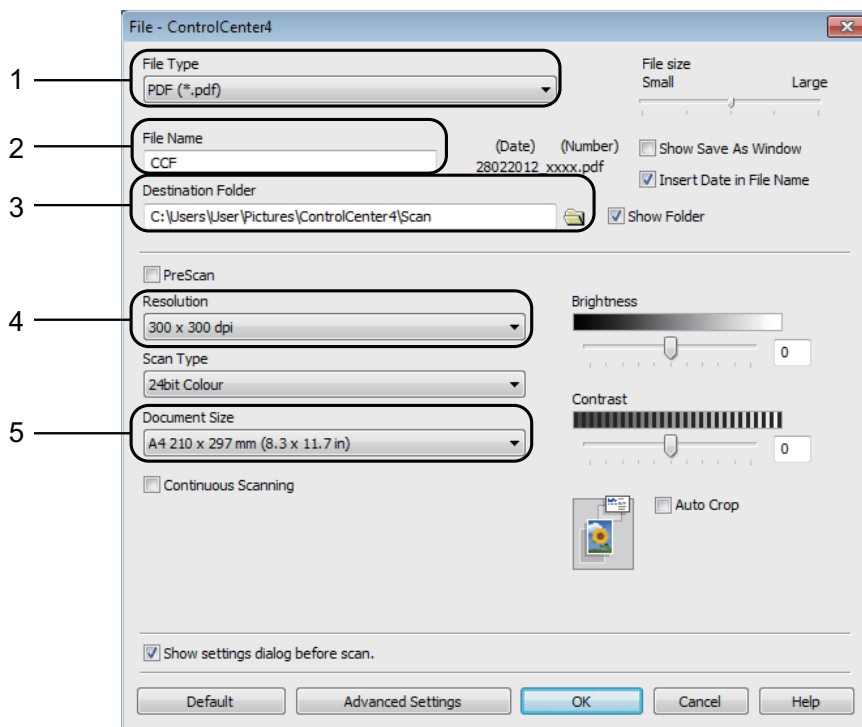

- 1 Choose **PDF (*.pdf)** from the **File Type** pull-down list.
- 2 You can enter the file name you want to use for the document.
- 3 You can save the file to the default folder, or choose your preferred folder by clicking the  (**Browse**) button.
- 4 You can choose a scanning resolution from the **Resolution** pull-down list.
- 5 You can choose the document size from the **Document Size** pull-down list.


- 6 Click **OK**.

7 Click **File**.




8 Press **Scan**.

The machine starts the scanning process. The folder where the scanned data is saved will open automatically.

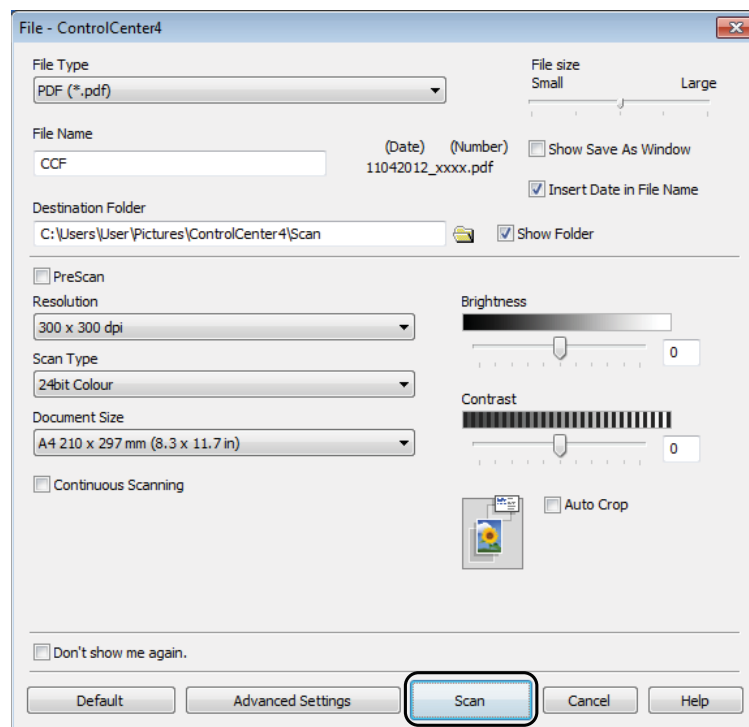


How to change the machine's Scan mode settings for PDF scanning


You can change your machine's *Scan* mode settings using ControlCenter4. (Windows®)

- 1 Open ControlCenter4 by clicking /All Programs/Brother/MFC-XXXX (where XXXX is your model name)/ControlCenter4. The ControlCenter4 application will open.
- 2 Make sure the machine you want to use is selected from the **Model** pull-down list.
- 3 Click the **Device Settings** tab.
- 4 Click **Device Scan Settings**.




- 5 Choose the **File** tab. You can change the default settings.

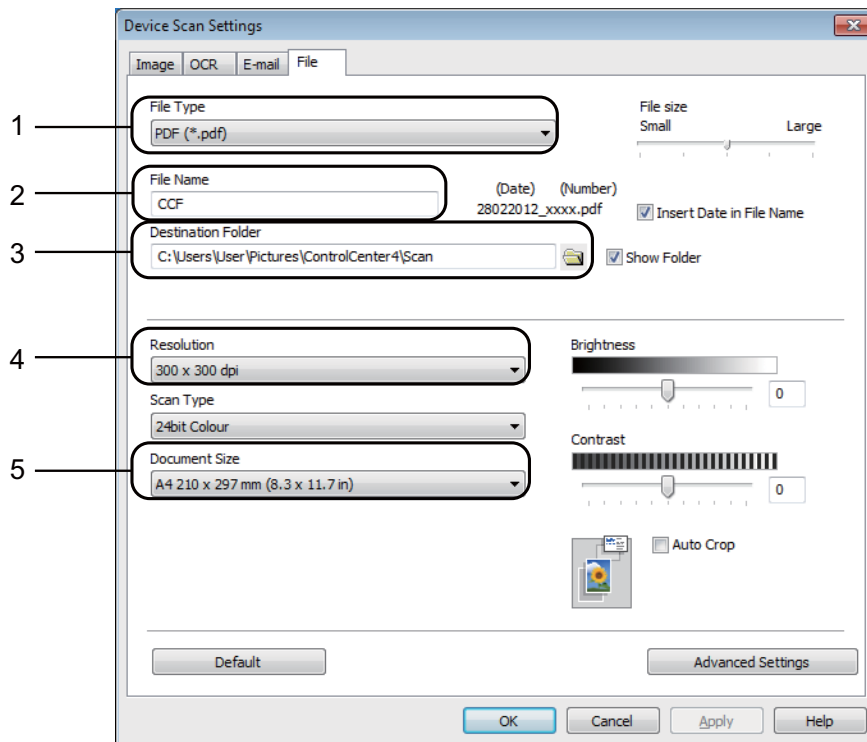

- 1 Choose **PDF (*.pdf)** from the **File Type** pull-down list.
- 2 You can enter the file name you want to use for the document.
- 3 You can save the file to the default folder, or choose your preferred folder by clicking the  (**Browse**) button.
- 4 You can choose a scanning resolution from the **Resolution** pull-down list.
- 5 You can choose the document size from the **Document Size** pull-down list.

- 6 Click **OK**.

How to scan a document as a PDF file using the Touchscreen

- 1 Load your document. (See *How to load documents* on page 36.)
- 2 Press  (Scan).
- 3 Press **^** or **v** on the Touchpanel to display `Scan to File`.
- 4 Press `Scan to File`.
- 5 When the machine is connected to a network, press the PC Name.
Do one of the following:
 - If you want to use the default settings, go to step 10.
 - If you want to change the default settings, go to step 6.
- 6 Press `Options`.
- 7 Press `Set with TouchPanel`.
Press `On`.
- 8 Choose the settings for `Scan Type`, `Resolution`, `File Type` and `Remove Background` as needed.
- 9 Press `OK`.
- 10 Press `Start`.
The machine starts the scanning process.

NOTE

The following scan modes are available.

- Scan to OCR
- Scan to File
- Scan to Image
- Scan to Media
- Scan to email
- Scan to E-mail Server
- Scan to FTP
- Scan to Network
- Web Service¹

¹ Windows® users only. (Windows Vista® SP2 or later and Windows® 7)
(See Software User's Guide: *Using Web Services for scanning on your network (Windows Vista® SP2 or later and Windows® 7)*.)

Replacing the ink cartridges

Your machine is equipped with an ink dot counter. The ink dot counter automatically monitors the level of ink in each of the four cartridges. When the machine detects an ink cartridge is running out of ink, the machine will display a message.

NOTE

For example, when one of the ink cartridges is nearly empty, the Touchscreen will display `Ink low` (name of colour).

You should purchase a replacement cartridge in preparation for when the machine indicates the colour is completely empty.

When one of the ink cartridges is empty, the Touchscreen will display `Cannot Print` or `B&W Print Only`.

You should only replace the actual ink cartridge when this message `Cannot Print` or `B&W Print Only` appears on the Touchscreen.

The Touchscreen will show which ink cartridge is low or needs replacing. Be sure to follow the Touchscreen prompts to replace the ink cartridges in the correct order.

Even though the machine tells you to replace an ink cartridge, there will be a small amount of ink left in the ink cartridge. It is necessary to keep some ink in the ink cartridge to prevent air from drying out and damaging the print head assembly.

⚠ CAUTION



If ink gets in your eyes, wash it out with water at once and call a doctor if you are concerned.

IMPORTANT

Brother multifunction machines are designed to work with ink of a particular specification and will work to a level of optimum performance and reliability when used with Brother Original ink cartridges. Brother cannot guarantee this optimum performance and reliability if ink or ink cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than Brother Original cartridges or the refilling of used cartridges with ink from other sources. Damage to the product caused by the use of consumables manufactured by third parties may not be covered by the product warranty. See the terms of the product warranty.



- 1 Open the ink cartridge cover. If one or more of the ink cartridges have reached the end of their life, the Touchscreen shows `B&W Print Only` or `Cannot Print`.

- 2 Press the lock release lever as shown to release the cartridge indicated on the Touchscreen. Remove the cartridge from the machine.

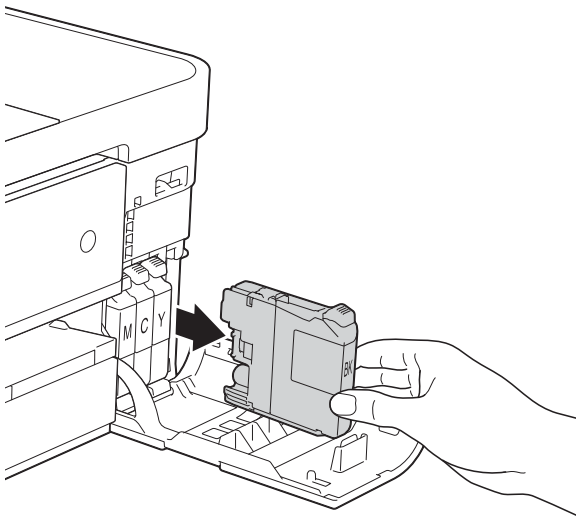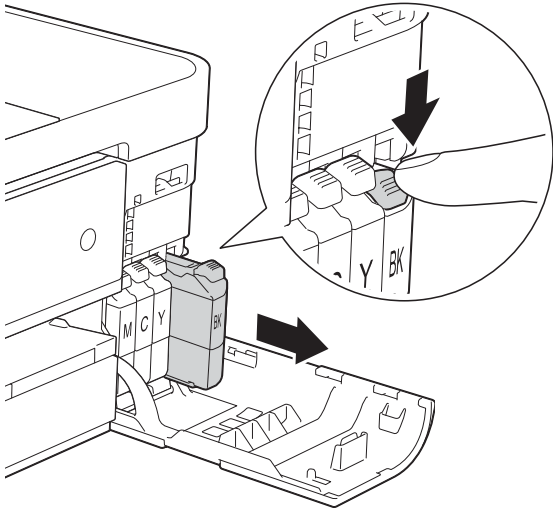

- 3 Open the new ink cartridge bag for the colour indicated on the Touchscreen, and then take out the ink cartridge.


- 4 Turn the green release lever on the orange protective packing (1) counterclockwise until it clicks to release the vacuum seal. Then remove the orange protective packing as shown.

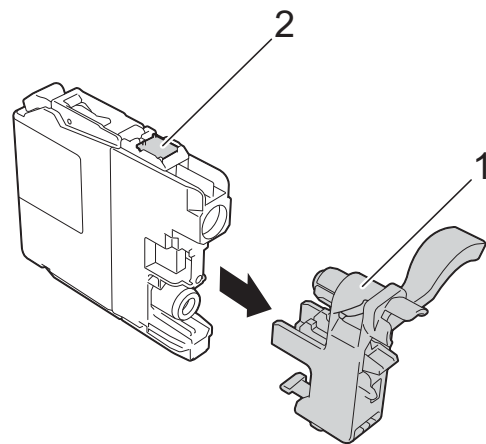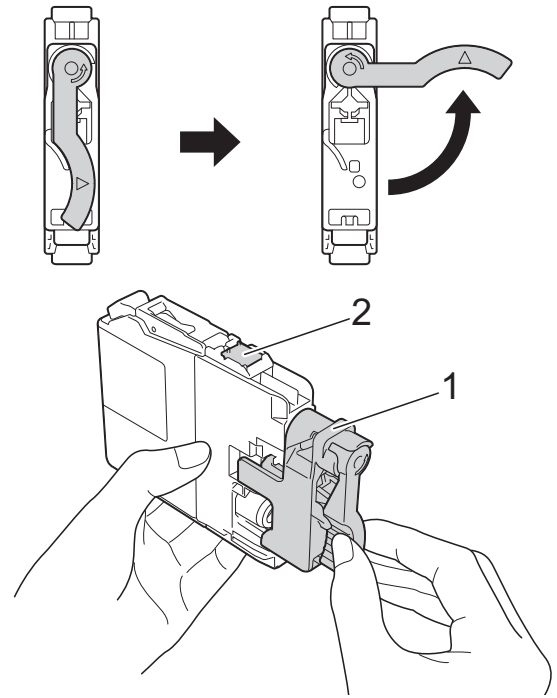


IMPORTANT

DO NOT touch the area of the cartridge indicated (2); this can prevent the machine from detecting the cartridge.

- 5 Each colour has its own correct position. Insert the ink cartridge in the direction of the arrow on the label.

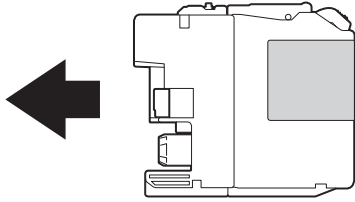

- 6 Gently push the back of the ink cartridge marked "PUSH" until the cartridge lever lifts, and then close the ink cartridge cover.

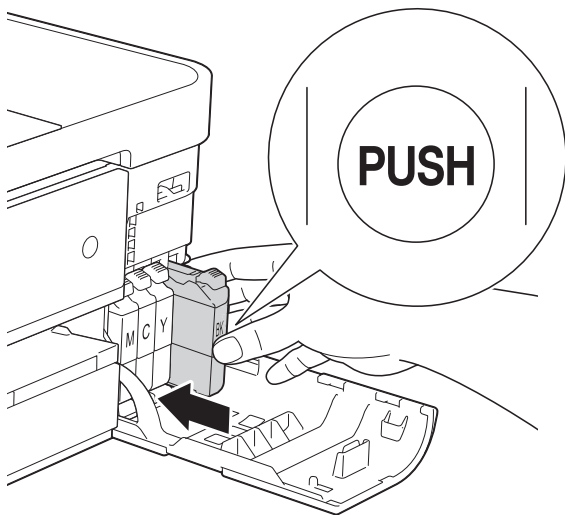

- 7 The machine will automatically reset the ink dot counter.

NOTE

- If you replaced an ink cartridge, for example Black, the Touchscreen may ask you to verify that it was a brand new one (for example, Did You Change **BK** Black). For each new cartridge you installed, press **Yes** to reset the ink dot counter for that colour. If the ink cartridge you installed is not a brand new one, be sure to press **No**.
- If the Touchscreen shows **No Ink Cartridge or Cannot Detect** after you install the ink cartridge check that the ink cartridge is a brand new Brother Original cartridge and that it is installed correctly. Remove the ink cartridge and reinstall it slowly until the cartridge lever lifts.


IMPORTANT

- DO NOT take out ink cartridges if you do not need to replace them. If you do so, it may reduce the ink quantity and the machine will not know the quantity of ink left in the cartridge.
- DO NOT touch the cartridge insertion slots. If you do so, the ink may stain your skin.
- If ink gets on your skin or clothing immediately wash it off with soap or detergent.
- If you mix the colours by installing an ink cartridge in the wrong position, the Touchscreen shows **Wrong Ink Colour**. Check which ink cartridges are not matched by colours to their ink cartridge positions and move them to their correct positions.
- Once you open an ink cartridge, install it in the machine and use it up within six months of installation. Use unopened ink cartridges by the expiration date written on the cartridge package.
- DO NOT dismantle or tamper with the ink cartridge; this can cause the ink to leak out of the cartridge.


Cleaning and checking the machine

Cleaning the scanner glass

- 1 Unplug the machine from the electrical socket.
- 2 Lift the document cover (1). Clean the scanner glass (2) and the white plastic (3) with a soft lint-free cloth moistened with a non-flammable glass cleaner.

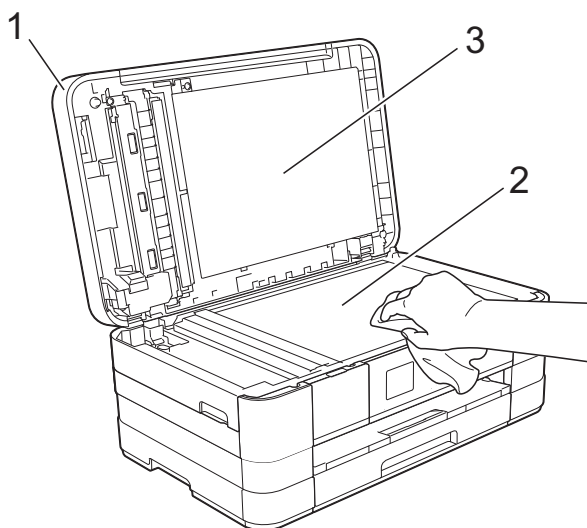

- 3 (MFC-J4410DW and MFC-J4610DW) In the ADF unit, clean the white bar (1) and the glass strip (2) with a lint-free cloth moistened with a non-flammable glass cleaner.

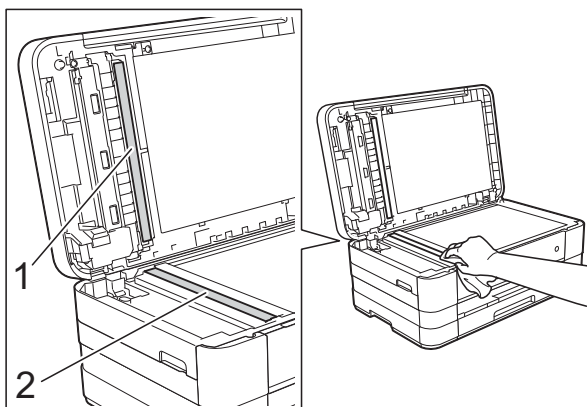

NOTE

In addition to cleaning the glass strip with a non-flammable glass cleaner, run your finger tip over the glass strip to see if you can feel anything on it. If you feel dirt or debris, clean the glass strip again concentrating on that area. You may need to repeat the cleaning process three or four times. To test, make a copy after each cleaning attempt.



When there is a spot of dirt or correction fluid on the glass strip the printed sample shows a vertical line.



After the glass strip is cleaned the vertical line is gone.

Cleaning the print head

To maintain good print quality, the machine will automatically clean the print head when needed. You can start the cleaning process manually if there is a print quality problem.

Clean the print head if you get horizontal lines in the text or graphics, or blank text on your printed pages. You can clean Black only, three colours at a time (Yellow/Cyan/Magenta), or all four colours at once.


Cleaning the print head consumes ink. Cleaning too often uses ink unnecessarily.

IMPORTANT

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

- 1 Press  (Settings).

NOTE

If  is on the Touchscreen, you can press it, and then go to step 5.

- 2 Press **▲** or **▼** on the Touchpanel to display `General Setup`.
- 3 Press `General Setup`.
- 4 Press `Ink`.
- 5 Press **▲** or **▼** to display `Cleaning`.
- 6 Press `Cleaning`.
- 7 Press **▲** or **▼** to display `Black`, `Colour` or `All`, and then press the option you want to clean. The machine cleans the print head. When cleaning is finished, the Touchscreen will return to the Home screen.

NOTE

- If you clean the print head at least five times and the print has not improved, try installing a new Brother Original Innobella™ ink cartridge for each problem colour. Try cleaning the print head again up to five more times. If the print has not improved call Brother customer service or your local Brother dealer.
- You can also clean the print head from your PC.


(See Software User's Guide: *Maintenance tab* (Windows®).)

Checking the print quality

If faded or streaked colours and text appear on your printouts, some of the print head nozzles may be clogged. You can check this by printing the Print Quality Check Sheet and looking at the nozzle check pattern.

- 1 Press  (Settings).

NOTE

If  is on the Touchscreen, you can press it, and then go to step 5.

- 2 Press **▲** or **▼** on the Touchpanel to display `General Setup`.
- 3 Press `General Setup`.
- 4 Press `Ink`.
- 5 Press `Test Print`.
- 6 Press `Print Quality`.
- 7 Press `Start`. The machine begins printing the Print Quality Check Sheet.
- 8 Check the quality of the four colour blocks on the sheet.



9 The Touchscreen asks you if the print quality is OK.

Do one of the following:

- If all lines are clear and visible, press **Yes** to finish the Print Quality check and go to step 13.
- If you can see missing short lines as shown below, press **No**.

OK

Poor

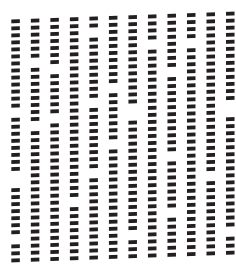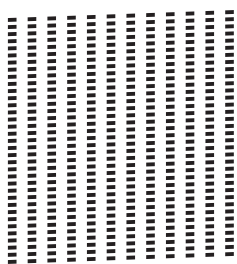

10 The Touchscreen asks you if the print quality is OK for black and then the three colours.

Press **Yes** or **No**.

11 The Touchscreen asks you if you want to start cleaning.

Press **Yes**.

The machine starts cleaning the print head.

12 After the cleaning procedure is finished, press **Start**.

The machine starts printing the Print Quality Check Sheet again. Return to step 9.

13 Press .

If you clean the print head at least five times and the print has not improved, try installing a new Genuine Brother Brand replacement ink cartridge for each problem colour. Try cleaning the print head again up to five more times. If the print has not improved, call your Brother customer service or your local Brother dealer.

IMPORTANT

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

NOTE

When a print head nozzle is clogged, the printed sample looks like this.



A4, Letter and Executive



A3, Ledger, Legal, A5, A6, envelopes, Photo (10 × 15 cm), Photo L (89 × 127 mm), Photo 2L (13 × 18 cm) and Index Card (127 × 203 mm)

After the print head nozzle is cleaned, the horizontal lines are gone.








Checking the print alignment


If your printed text becomes blurred or images become faded, you may need to adjust the print alignment after transporting the machine.

- 1 Press  (Settings).


NOTE

If  is on the Touchscreen, you can press it, and then go to step 5.

- 2 Press  or  on the Touchpanel to display `General Setup`.
- 3 Press `General Setup`.
- 4 Press `Ink`.
- 5 Press  or  to display `Test Print`.
- 6 Press `Test Print`.
- 7 Press `Alignment`.
- 8 Press `Start`.
The machine starts printing the Alignment Check Sheet.

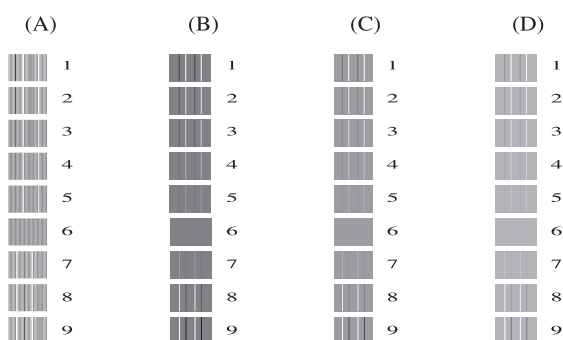

- 9 For the “A” pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 10 For the “B” pattern, press the number of the test print that has the least visible vertical stripes (1-9).

- 11 For the “C” pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 12 For the “D” pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 13 Press .

B

Troubleshooting

If you think there is a problem with your machine, check each of the items below first and follow the troubleshooting tips.

You can correct most problems by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at <http://solutions.brother.com/>.

Identifying your problem

First, check the following.

- The machine's power cord is connected correctly and the machine's power switch is turned on.
- All of the protective parts have been removed.
- Paper is inserted correctly in the paper tray.
- The interface cables are securely connected to the machine and the computer, or the wireless connection is set up on both the machine and your computer.
- Touchscreen Messages

(See *Error and Maintenance messages* on page 88.)

If you did not solve your problem with the above checks, identify your problem and then go to the page suggested below.

Paper handling and Printing problems:

- *Printing Difficulties* on page 109
- *Print Quality Difficulties* on page 110
- *Paper Handling Difficulties* on page 113
- *Printing Received Faxes* on page 114

Telephone and Fax problems:

- *Telephone Line or Connections* on page 114
- *Handling Incoming Calls* on page 115
- *Sending Faxes* on page 114

Copying problems:

- *Copying Difficulties* on page 116

Scanning problems:

- *Scanning Difficulties* on page 116
- *PhotoCapture Center™ Difficulties* on page 117

Software and Network problems:

- *Software Difficulties* on page 117
- *Network Difficulties* on page 117
- *Difficulties when entering data* on page 118



Error and Maintenance messages

As with any sophisticated office product, errors may occur and consumable items may need to be replaced. If this happens, your machine identifies the error or required routine maintenance and shows the appropriate message. The most common error and maintenance messages are shown below.

You can clear most errors and perform routine maintenance by yourself. If you need more help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips:


Visit us at <http://solutions.brother.com/>.

NOTE

 lights up when there is an error or maintenance message. Press  to display the error message on the Touchscreen.

Error Message	Cause	Action
<p>B&W Print Only Replace Ink</p>	<p>One or more of the colour ink cartridges have reached the end of their life.</p> <p>You can use the machine in monochrome mode for approximately four weeks depending on the number of pages you print.</p> <p>While this message appears on the Touchscreen, each operation works in the following way:</p> <ul style="list-style-type: none"> ■ Printing If you choose Greyscale in the Advanced tab of the printer driver, you can use the machine as a monochrome printer. 2-sided print is not available when this message appears. ■ Copying If the paper type is set to Plain Paper you can make copies in monochrome. 2-sided copy is not available when this message appears. ■ Faxing If the paper type is set to Plain Paper or Inkjet Paper, the machine will receive and print the faxes in monochrome. If a sending machine has a colour fax, the machine's "handshake" will ask that the fax be sent as monochrome. 	<p>Replace the ink cartridges. (See <i>Replacing the ink cartridges</i> on page 79.)</p> <p>NOTE</p> <p>The machine will stop all print operations, you cannot use the machine until a new ink cartridge is installed in the following cases:</p> <ul style="list-style-type: none"> • If you unplug the machine or take out the ink cartridge. • If the paper type is set to anything except Plain Paper or Inkjet Paper. • (Windows®) If you check Slow Drying Paper in the Basic tab of the printer driver. (Macintosh) If you check Slow Drying Paper in the Print Settings of the printer driver.
<p>Cannot Detect</p>	<p>You installed a new ink cartridge too quickly and the machine did not detect it.</p> <p>An ink cartridge is not installed correctly.</p> <p>If you are using non Brother Original ink the machine may not detect the ink cartridge.</p>	<p>Take out the new ink cartridge and re-install it slowly until the cartridge lever lifts. (See <i>Replacing the ink cartridges</i> on page 79.)</p> <p>Replace the cartridge with a Brother Original ink cartridge. If the error message remains, contact Brother customer service or your local Brother dealer.</p>





Error Message	Cause	Action
Cannot Detect Ink	If you are using non Brother Original ink, the machine may not detect the ink volume.	Replace the cartridge with a Brother Original ink cartridge. If the error message remains, contact Brother customer service or your local Brother dealer.
Cannot Print Replace Ink	One or more of the ink cartridges have reached the end of their life. The machine will stop all print operations. While memory is available, monochrome faxes will be stored in the memory. If a sending machine has a colour fax, the machine's "handshake" will ask that the fax be sent as monochrome.	Replace the ink cartridges. (See <i>Replacing the ink cartridges</i> on page 79.)
Comm.Error	Poor telephone line quality caused a communication error.	If the problem continues, call the telephone company and ask them to check your telephone line.
Connection Fail	You tried to poll a fax machine that is not in Polled Waiting mode.	Check the other fax machine's polling setup.
Cover is Open	The scanner cover is not completely closed.	Lift the scanner cover and then close it again. Make sure the telephone line cord and USB cable (if used) have been guided correctly through the cable channel and out the back of the machine.
	The ink cartridge cover is not completely closed.	Firmly close the ink cartridge cover until it clicks.
Data Remaining	Print data is left in the machine's memory.	Press  . The machine will cancel the job and clear it from the memory. Try to print again.
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again. If calls are stopped repeatedly and you are using a VoIP (Voice over IP) system, try changing the Compatibility to Basic (for VoIP). (See <i>Telephone line interference / VoIP</i> on page 119.)
Document Jam (MFC-J4410DW and MFC-J4610DW)	The document was not inserted or fed correctly, or the document scanned from the ADF was too long.	(See <i>Using the ADF (MFC-J4410DW and MFC-J4610DW)</i> on page 36.) (See <i>Document jam (MFC-J4410DW and MFC-J4610DW)</i> on page 99.)


Error Message	Cause	Action
<p>DR Mode in Use (For Australia, Singapore and Hong Kong)</p> <p>FaxAbility On (For New Zealand)</p>	<p>(For Australia, Singapore and Hong Kong) The machine is in Distinctive Ring mode. You cannot change the Receive Mode from Manual to another mode.</p> <p>(For New Zealand) The machine is in FaxAbility mode. You cannot change the Receive Mode from Manual to another mode.</p>	<p>(For Australia, Singapore and Hong Kong) Set Distinctive Ring to Off. (See <i>Turning off Distinctive Ring</i> on page 48 and 53.)</p> <p>(For New Zealand) Set FaxAbility to Off. (See <i>How to Turn FaxAbility OFF or ON</i> on page 51.)</p>
<p>High Temperature</p>	<p>The print head is too warm.</p>	<p>Allow the machine to cool down.</p>
<p>Hub is Unusable.</p>	<p>A hub or USB Flash memory drive with hub has been connected to the USB direct interface.</p>	<p>Hubs, including USB Flash memory drives that have a built-in hub, are not supported. Unplug the device from the USB direct interface.</p>

Error Message	Cause	Action
Ink Absorber Full	<p>The ink absorber box or flushing box is full. These components are periodic maintenance items that may require replacement after a period of time to ensure optimum performance from your Brother machine. Because these components are periodic maintenance items, the replacement is not covered under the warranty. The need to replace these items and the time period before replacement is dependent on the number of purges and flushes required to clean the ink system. These boxes acquire amounts of ink during the different purging and flushing operations. The number of times a machine purges and flushes for cleaning varies depending on different situations. For example, frequently powering the machine on and off will cause numerous cleaning cycles since the machine automatically cleans upon power up. The use of non-Brother ink may cause frequent cleanings because non-Brother ink could cause poor print quality which is resolved by cleaning. The more cleaning the machine requires, the faster these boxes will fill up.</p> <p>NOTE</p> <p><i>Repairs resulting from the use of non-Brother supplies may not be covered under the stated product warranty.</i></p>	<p>The ink absorber box or flushing box will need to be replaced. Contact Brother Customer Service or your local Brother Authorised Service Centre to have your machine serviced.</p> <p>Other reasons for cleaning are:</p> <ol style="list-style-type: none"> 1 After a paper jam has been cleared, the machine automatically cleans itself before the next received fax is printed. 2 The machine automatically cleans itself after sitting idle for more than 30 days (infrequent use). 3 The machine automatically cleans itself after ink cartridges of the same colour have been replaced 12 times.
InkAbsorberNearFull	The ink absorber box or flushing box is nearly full.	Call Brother customer service or your local Brother dealer.
Ink low	One or more of the ink cartridges are near the end of their life. If one of the colour ink cartridges is near the end of its life and someone is sending you a colour fax, your machine's "handshake" will ask that the fax be sent as monochrome. If the sending machine has the ability to convert it, the colour fax will be printed at your machine as a monochrome fax.	Order a new ink cartridge. You can continue printing until the Touchscreen shows <code>Cannot Print</code> . (See <i>Replacing the ink cartridges</i> on page 79.)
Low Temperature	The print head is too cold.	Allow the machine to warm up.

Error Message	Cause	Action
Media Error	The memory card is either corrupted, incorrectly formatted, or there is a problem with the memory card.	<p>Remove the memory card from the media drive (slot) of the machine and format it correctly.</p> <p>Put the card firmly into the slot again to make sure it is in the correct position. If the error remains, check the media drive (slot) of the machine by putting in another memory card that you know is working.</p>
Media is Full.	The memory card or USB Flash memory drive you are using has no available space or already contains 999 files.	Your machine can only save to your memory card or USB Flash memory drive if it contains fewer than 999 files. Delete unused files to free some space and try again.
No Caller ID	There is no incoming call history. You have not received any calls or you have not subscribed to the Caller ID service from your telephone company.	If you want to use the Caller ID feature, call your telephone company. (See <i>Caller ID</i> on page 49, 51 and 53 for your relevant country.)
No File	The memory card or USB Flash memory drive in the media drive does not contain a .JPG file.	Put the correct memory card or USB Flash memory drive into the slot again.
No Ink Cartridge	An ink cartridge is not installed correctly.	Take out the new ink cartridge and re-install it slowly until the cartridge lever lifts. (See <i>Replacing the ink cartridges</i> on page 79.)

Error Message	Cause	Action
(MFC-J2310 and MFC-J4410DW) No Paper Fed (MFC-J4610DW) No Paper Fed No Paper Fed #1 No Paper Fed #2	The machine is out of paper or the paper is not correctly loaded in the paper tray.	Do one of the following: <ul style="list-style-type: none"> ■ Refill the paper in the paper tray, and then press OK on the Touchscreen. ■ Remove the paper and load it again, and then press OK on the Touchscreen. (See <i>Loading paper and other print media</i> on page 15.)
	The paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Printer jam or paper jam</i> on page 101. If this error occurs often during 2-sided copying or 2-sided printing, the paper feed rollers may be stained with ink. Clean the paper feed rollers. (See Advanced User's Guide: <i>Cleaning the paper feed rollers.</i>)
	Paper dust has accumulated on the surface of the paper pick-up rollers.	Clean the paper pick-up rollers. (See Advanced User's Guide: <i>Cleaning the paper pick-up rollers.</i>)
	The Jam Clear Cover is not closed correctly.	Make sure the Jam Clear Cover is closed evenly at both ends. (See <i>Printer jam or paper jam</i> on page 101.)
	The paper was not inserted in the centre position of the manual feed slot.	Remove the paper and re-insert it in the centre of the manual feed slot, and then press OK on the Touchscreen. (See <i>Loading paper in the manual feed slot</i> on page 24.)
No Response/Busy	The number you dialled has not answered or is busy.	Verify the number and try again.
Not Registered	You tried to access a Speed Dial number that has not been set up in the machine.	Set up the Speed Dial number. (See <i>Storing Speed Dial numbers</i> on page 61.)
Out of Fax Memory	The fax memory is full.	Do one of the following: <ul style="list-style-type: none"> ■ Clear the data in the memory. To gain extra memory, you can turn off Memory Receive. (See Advanced User's Guide: <i>Turning off Memory Receive operations.</i>) ■ Print the faxes that are in the memory. (See Advanced User's Guide: <i>Printing a fax from the memory.</i>)

Error Message	Cause	Action
Out of Memory	The machine's memory is full.	<p>If a copy operation is in process:</p> <p>Press  and wait until the other operations that are in progress finish, and then try again.</p>
	The memory card or USB Flash memory drive you are using does not have enough free space to scan the documents.	<p>Press .</p> <p>Delete unused files from your memory card or USB Flash memory drive to make some free space and then try again.</p>
Paper Jam [Front]	The paper is jammed in the machine.	<p>Remove the jammed paper by following the steps in <i>Paper is jammed in the front of the machine</i> on page 101.</p> <p>Make sure the paper guides are set to the correct paper size.</p>
PaperJam Front,Rear	The paper is jammed in the machine.	<p>Remove the jammed paper by following the steps in <i>Paper is jammed in the front and back of the machine</i> on page 103.</p> <p>Make sure the paper guides are set to the correct paper size.</p>
	<p>More than one sheet of paper was placed in the manual feed slot.</p> <p>—OR—</p> <p>Another sheet of paper was placed in the manual feed slot before the Touchscreen showed</p> <p>Put one piece of paper in Manual Feed Slot, and then press [OK].</p>	<p>Do not put more than one sheet of paper in the manual feed slot at any one time. Wait until the Touchscreen shows</p> <p>Put one piece of paper in Manual Feed Slot, and then press [OK]. before you feed the next sheet of paper in the manual feed slot.</p> <p>Remove the jammed paper by following the steps in <i>Paper is jammed in the front and back of the machine</i> on page 103.</p>
Paper Jam [Rear]	The paper is jammed in the machine.	<p>Remove the jammed paper by following the steps in <i>Paper is jammed in the back of the machine</i> on page 102.</p> <p>Make sure the paper guides are set to the correct paper size.</p>
	Paper dust has accumulated on the surface of the paper pick-up rollers.	<p>Clean the paper pick-up rollers. (See Advanced User's Guide: <i>Cleaning the paper pick-up rollers.</i>)</p>

Error Message	Cause	Action
Paper tray not detected. Please put the paper tray firmly back in the machine.	The paper tray is not completely inserted.	Slowly push the paper tray completely into the machine.
	Paper or a foreign object has prevented the paper tray from being inserted correctly.	Pull the paper tray out of the machine, and remove the jammed paper or foreign object. Slowly push the paper tray completely into the machine.
Screen init. Fail	The Touchscreen was pressed before the power-on initialization was completed.	Make sure that nothing is touching or resting on the Touchscreen.
	Debris may be stuck between the lower part of the Touchscreen and its frame.	Insert a piece of stiff paper between the lower part of the Touchscreen and its frame and slide it back and forth to push out the debris.
Unable to CleanXX Unable to Init.XX Unable to PrintXX Unable to ScanXX	The machine has a mechanical problem. —OR— A foreign object such as a paper clip or a piece of ripped paper is in the machine.	Open the scanner cover and remove any foreign objects and paper scraps from inside the machine. If the error message continues, disconnect the machine from the power for several minutes and reconnect it. (The machine can be turned off for approximately 24 hours without losing faxes stored in the memory. See <i>Transferring your faxes or Fax Journal report</i> on page 98.)
Unusable Device Disconnect device from front connector & turn machine off & then on	A broken device has been connected to the USB direct interface.	Unplug the device from the USB direct interface, then press  to turn the machine off and then on again.
Unusable Device Please Disconnect USB Device.	A USB device or USB Flash memory drive that is not supported has been connected to the USB direct interface. For more information, visit us at http://solutions.brother.com/ .	Unplug the device from the USB direct interface. Turn the machine off and then on again.
Wrong Ink Colour	An ink cartridge has been installed in the wrong position.	Check which ink cartridges are not matched by colour to their ink cartridge positions and move them to their correct positions.

Error Message	Cause	Action
<p>(MFC-J2310 and MFC-J4410DW)</p> <p>Wrong Paper</p> <p>(MFC-J4610DW)</p> <p>Wrong Paper</p> <p>Wrong Paper #1</p> <p>Wrong Paper #2</p>	<p>The paper size setting does not match the size of paper in the tray.</p> <p>The paper orientation is not correct for the paper size.</p> <p>You did not set the paper guides in the tray to the indicators for the paper size you are using.</p>	<p>1 Make sure the paper size you choose matches the size of paper in the tray.</p> <p>(MFC-J2310 and MFC-J4410DW: See <i>Paper Size</i> on page 29.)</p> <p>(MFC-J4610DW: See <i>Paper Size and Type (MFC-J4610DW)</i> on page 30.)</p> <p>2 Make sure you loaded the paper in the correct orientation by setting the paper guides at the indicators for your paper size. (See <i>Loading paper and other print media</i> on page 15.)</p> <p>3 After you have checked the paper size and the paper orientation, press OK on the Touchscreen.</p>
<p>Wrong Tray Setting</p> <p>(MFC-J4610DW)</p>	<p>The machine's Paper Size and Tray Use settings do not match the size of paper in the tray you are using.</p>	<p>Configure the paper size setting for the tray according to the on-screen instructions.</p>

Error animations display

Error animations display step-by-step instructions when paper gets jammed. You can read the steps at your own pace by pressing **▼** to see the next step and **▲** to go back a step.

Transferring your faxes or Fax Journal report

If the Touchscreen shows:



- Unable to CleanXX
- Unable to Init.XX
- Unable to PrintXX
- Unable to ScanXX

we recommend transferring your faxes to another fax machine or to your PC. (See *Transferring faxes to another fax machine* on page 98 or *Transferring faxes to your PC* on page 98.)


You can also transfer the Fax Journal report to see if there are any faxes you need to transfer. (See *Transferring the Fax Journal report to another fax machine* on page 99.)

Transferring faxes to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See Quick Setup Guide: *Enter personal information (Station ID)*.)



- 1 Press  to interrupt the error temporarily.
- 2 Press  (Settings).
- 3 Press **▲** or **▼** on the Touchpanel to display *Service*.
- 4 Press *Service*.
- 5 Press *Data Transfer*.

- 6 Press *Fax Transfer*.
- 7 Do one of the following:
 - If the Touchscreen shows *No Data*, there are no faxes left in the machine's memory.

Press .
 - Enter the fax number to which faxes will be forwarded.
- 8 Press *Fax Start*.




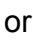
Transferring faxes to your PC

You can transfer the faxes from your machine's memory to your PC.

- 1 Press  to interrupt the error temporarily.
- 2 Make sure you have installed **MFL-Pro Suite** on your PC, and then turn on **PC FAX Receiving** on the PC. (See Software User's Guide: *PC-FAX receiving*.)
- 3 Make sure you have set PC-Fax Receive on the machine. (See Advanced User's Guide: *PC-Fax Receive (Windows® only)*.)
If faxes are in the machine's memory when you set up PC-Fax Receive, the Touchscreen will ask if you want to transfer the faxes to your PC.
- 4 Do one of the following:
 - To transfer all faxes to your PC, press *Yes*. You will be asked if you want to also turn on the backup print option.
 - To exit and leave the faxes in the memory, press *No*.
- 5 Press .

Transferring the Fax Journal report to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See Quick Setup Guide: *Enter personal information (Station ID)*.)


- 1 Press  to interrupt the error temporarily.
- 2 Press  (Settings).
- 3 Press  or  on the Touchpanel to display *Service*.
- 4 Press *Service*.
- 5 Press *Data Transfer*.
- 6 Press *Report Trans.*
- 7 Enter the fax number to which the Fax Journal report will be forwarded.
- 8 Press *Fax Start*.

Document jam (MFC-J4410DW and MFC-J4610DW)


Documents can jam in the ADF unit if they are not inserted or fed correctly, or if they are too long. Follow the steps below to clear a document jam.

Document is jammed in the top of the ADF unit

- 1 Take out any paper from the ADF that is not jammed.
- 2 Open the ADF cover.
- 3 Remove the jammed document by pulling it upward.

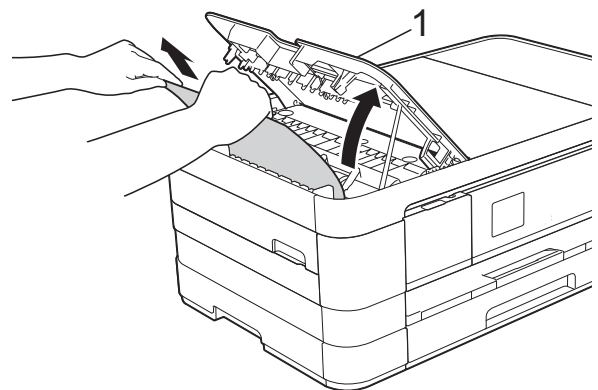

1 ADF cover


- 4 Close the ADF cover.
- 5 Press .

IMPORTANT


To avoid document jams, close the ADF cover correctly by pushing it gently in the centre.

Document is jammed inside the ADF unit

- 1 Take any paper that is not jammed out of the ADF.
- 2 Lift the document cover.
- 3 Pull the jammed document out to the left.

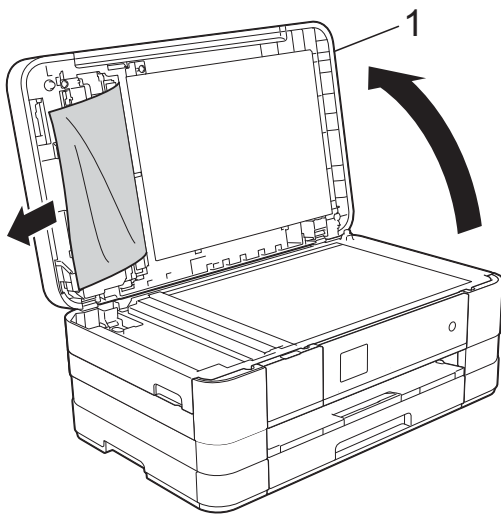


1 document cover


- 4 Close the document cover.
- 5 Press .

Removing small documents jammed in the ADF

- 1 Lift the document cover.
- 2 Insert a piece of stiff paper, such as cardstock, into the ADF to push any small paper scraps through.

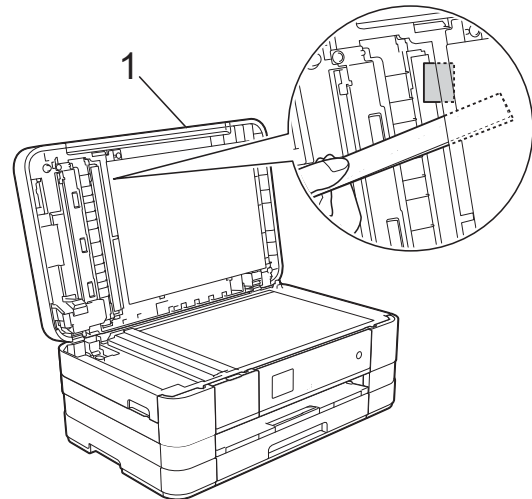

1 document cover

- 3 Close the document cover.
- 4 Press .


Printer jam or paper jam

Take out the jammed paper depending on where it is jammed in the machine.


Paper is jammed in the front of the machine

If the Touchscreen shows Paper Jam [Front], follow these steps:


- 1 Unplug the machine from the electrical socket.
- 2 Pull the paper tray (1) completely out of the machine.

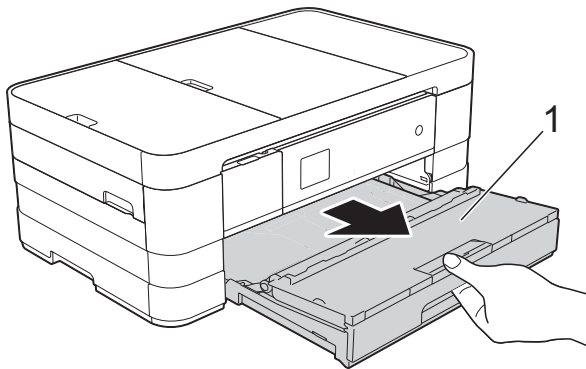


- 3 Pull out the jammed paper (1).

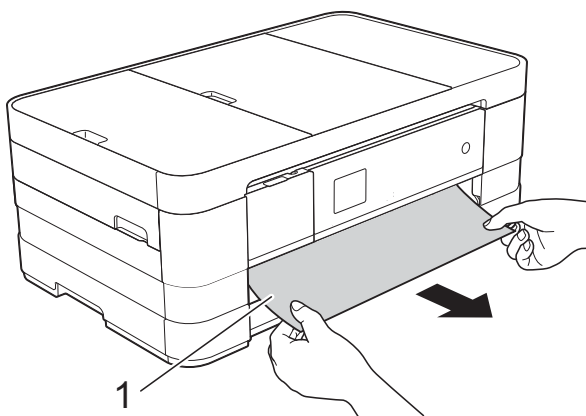


- 4 Lift the Jam Clear Flap and remove the jammed paper.

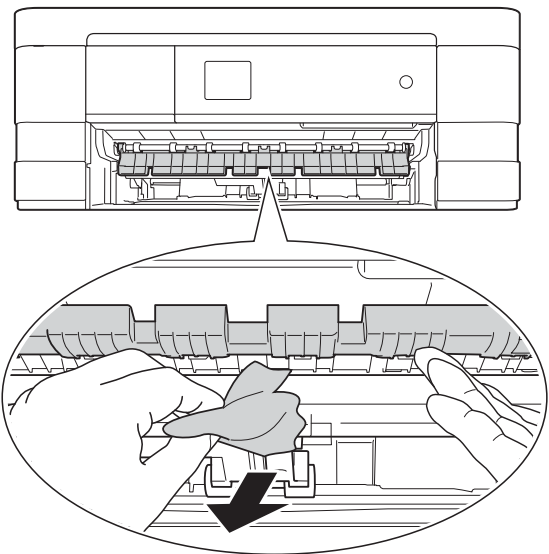

- 5 Make sure you look carefully inside the machine above and below the Jam Clear Flap for any pieces of paper.

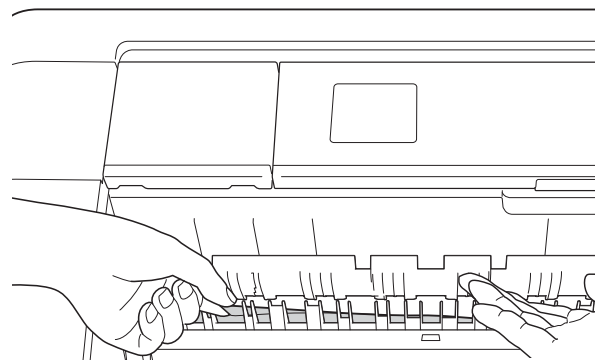

- 6 Put the paper tray firmly back in the machine.

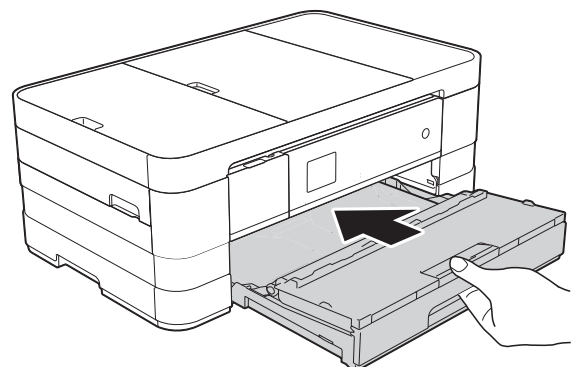

NOTE

Make sure you pull out the paper support until it clicks.

- 7 Re-connect the power cord.


NOTE

If there is a repeat paper jam, a small piece of paper may be stuck in the machine. (See *Additional paper jam clear operations* on page 106.)


Paper is jammed in the back of the machine

If the Touchscreen shows *Paper Jam [Rear]*, follow these steps:


- 1 Unplug the machine from the electrical socket.
- 2 Open the Jam Clear Cover (1) at the back of the machine.

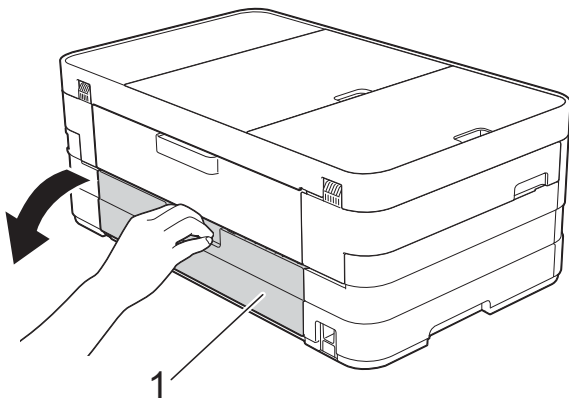


- 3 Open the inside cover (1).

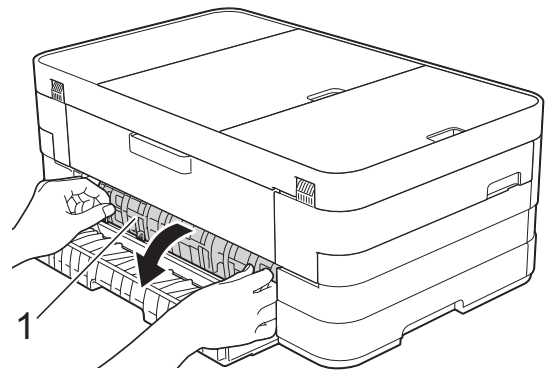

- 4 Pull the jammed paper out of the machine.

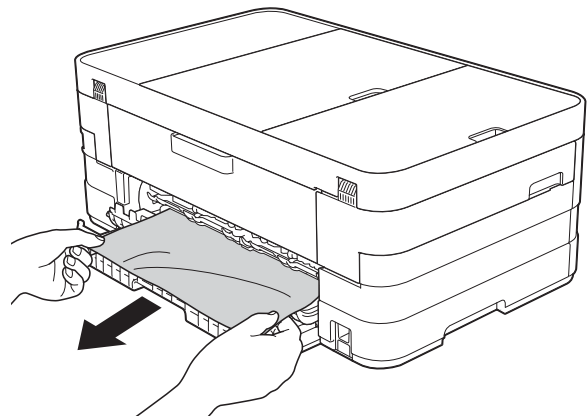

- 5 Close the inside cover and Jam Clear Cover. Make sure the covers are closed correctly.

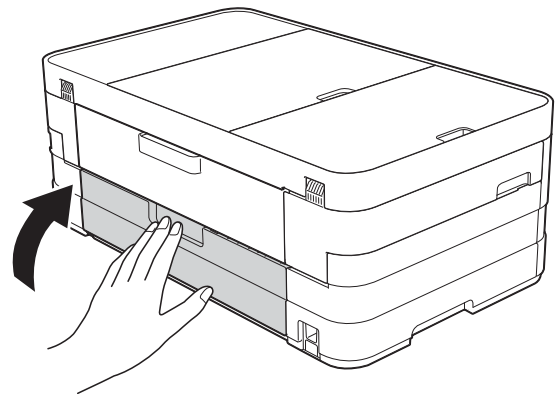


- 6 Re-connect the power cord.


Paper is jammed in the front and back of the machine

If the Touchscreen shows PaperJam Front, Rear, follow these steps:


- 1 Unplug the machine from the electrical socket.
- 2 (MFC-J2310 and MFC-J4410DW)
Pull the paper tray (1) completely out of the machine.

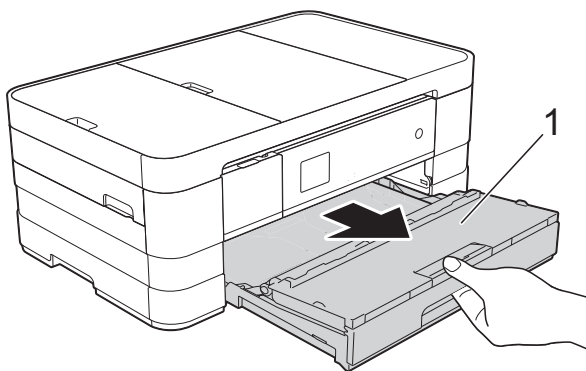


(MFC-J4610DW)
Pull paper tray #1 and then tray #2 completely out of the machine.

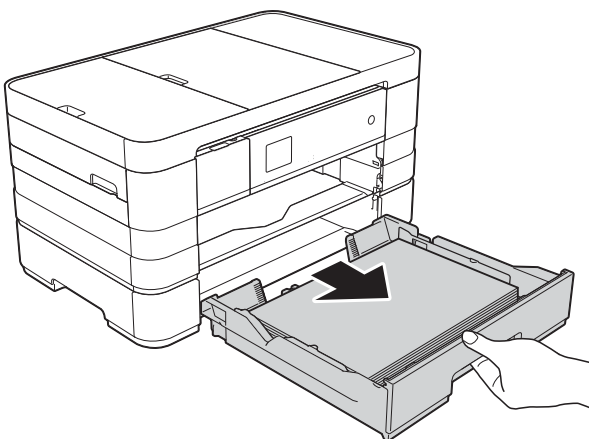



- 3 Pull out the jammed paper (1).
(MFC-J2310 and MFC-J4410DW)

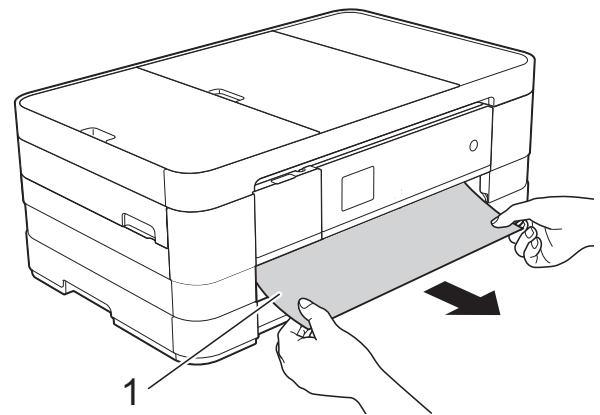


(MFC-J4610DW)

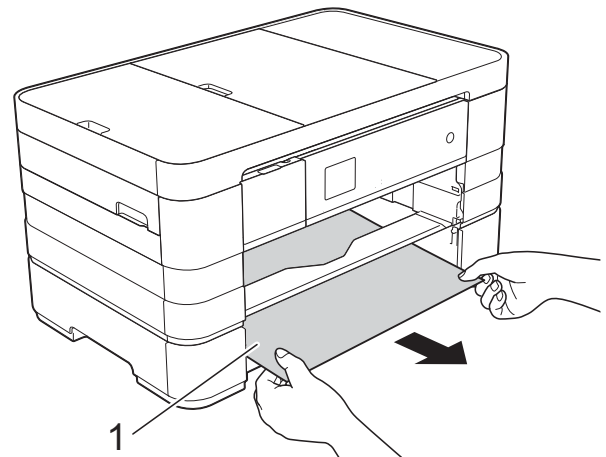


- 4 Lift the Jam Clear Flap, and then remove the jammed paper.

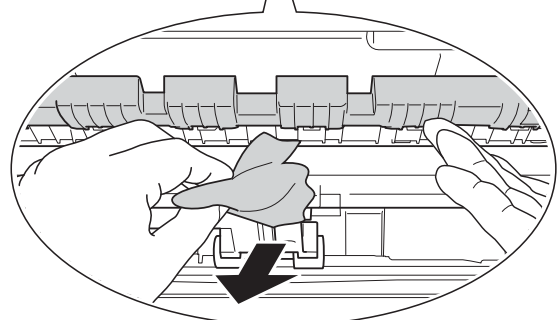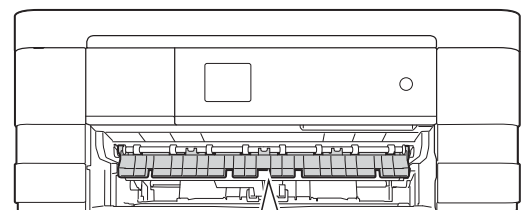


- 5 Make sure you look carefully inside the machine above and below the Jam Clear Flap for any pieces of paper.

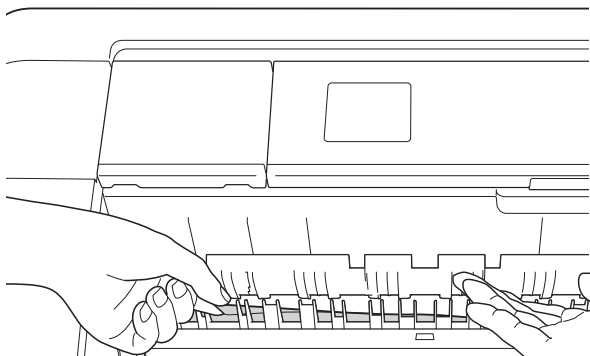


- 6 Using both hands, use the finger holds on each side of the machine to lift the scanner cover (1) into the open position.

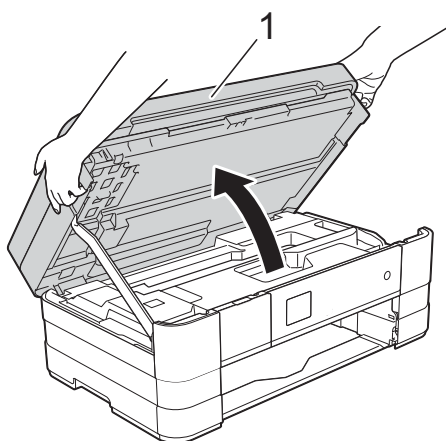


- 7 Slowly pull the jammed paper (1) out of the machine.

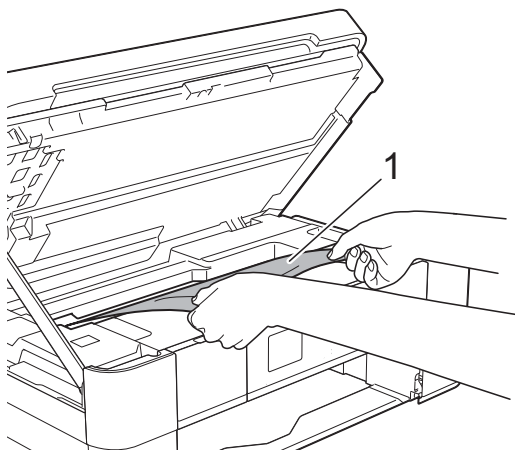


- 8 Move the print head (if necessary) to take out any paper remaining in this area. Make sure that jammed paper is not left in the corners of the machine (1) and (2).

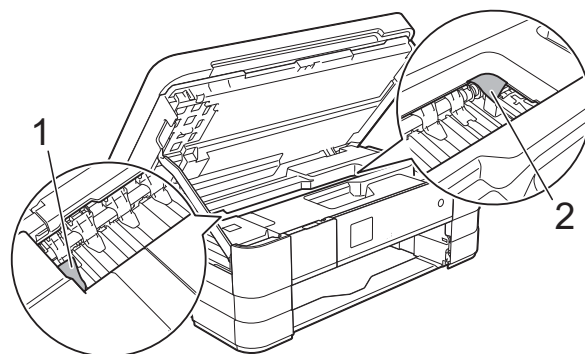


IMPORTANT

- If the paper is jammed under the print head, unplug the machine from the power source, move the print head so it does not touch the paper, and then pull out the paper.
- If the print head is in the right corner as shown in the illustration, you cannot move the print head. Re-connect the power cord. Hold down  until the print head moves to the centre. Then unplug the machine from the power source and take out the paper.

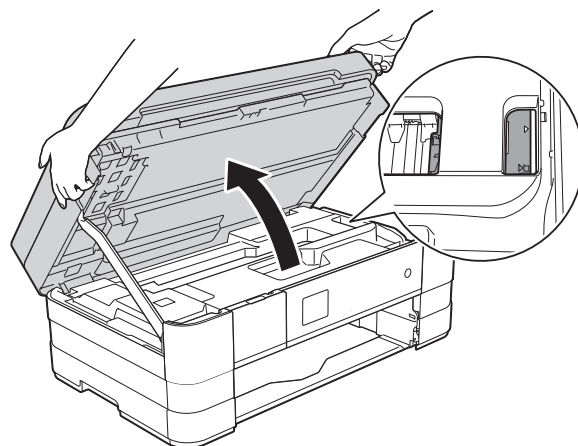


- If ink gets onto your skin, immediately wash with soap and plenty of water.


- 9 Open the Jam Clear Cover (1) at the back of the machine.

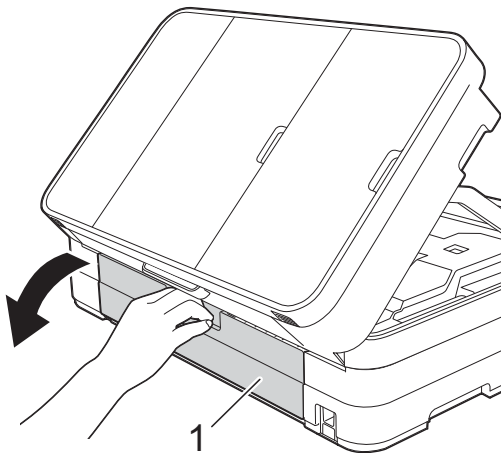


- 10 Open the inside cover (1).

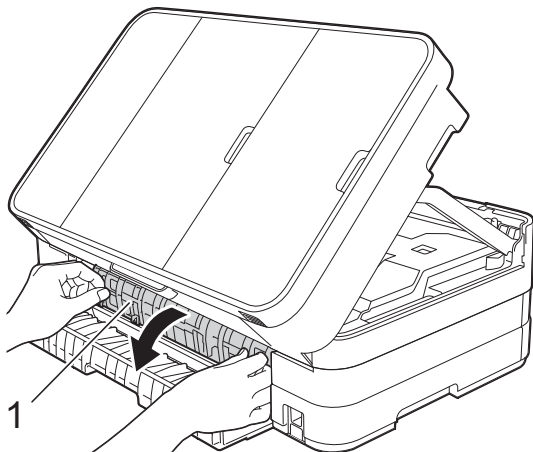


- 11 Make sure you look carefully inside for any jammed paper. If there is any jammed paper, slowly pull it out of the machine.

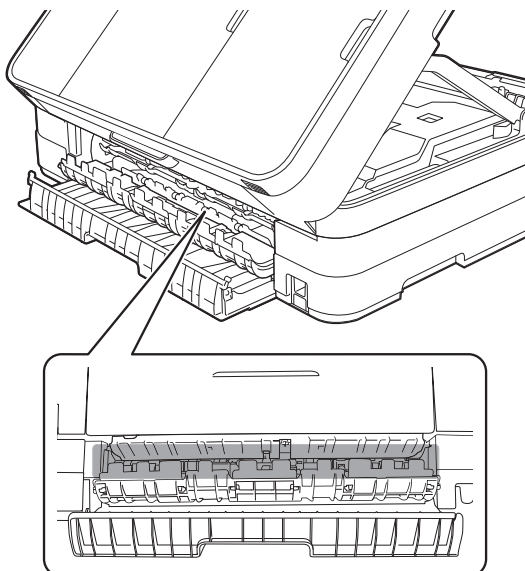


- 12 Close the inside cover and Jam Clear Cover. Make sure the covers are closed correctly.

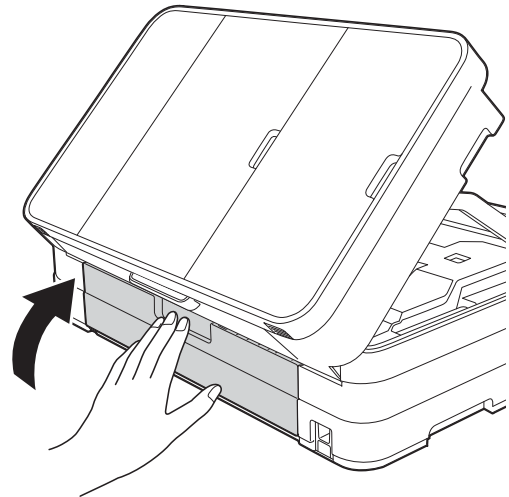


- 13 Lift the scanner cover (1) to release the lock. Gently push the scanner cover support down (2) and close the scanner cover (3) using both hands.

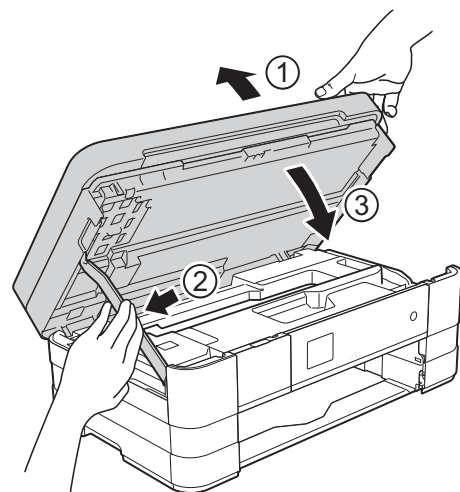

- 14** (MFC-J2310 and MFC-J4410DW)
Put the paper tray firmly back in the machine.

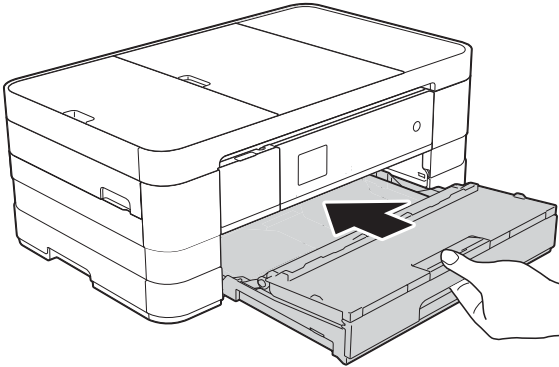

(MFC-J4610DW)
Put paper tray #1 and then tray #2 firmly back in the machine.

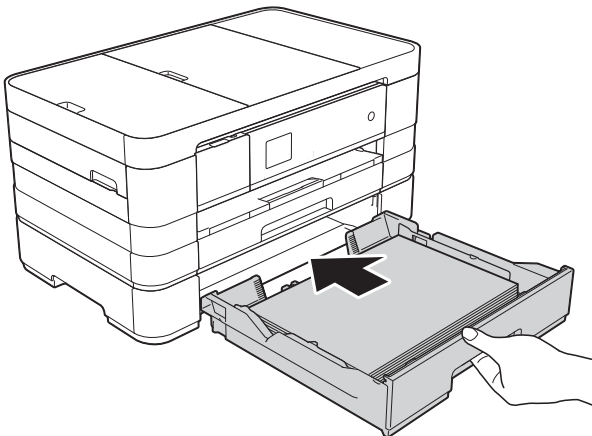

NOTE

Make sure you pull out the paper support until it clicks.

- 15** Re-connect the power cord.


NOTE


If there is a repeat paper jam, a small piece of paper may be stuck in the machine. (See *Additional paper jam clear operations* on page 106.)

Additional paper jam clear operations


- 1** Place your hands in the finger holds on each side of the machine to lift the scanner cover into the open position.

NOTE


If the print head is at the right corner as shown in the illustration, hold down  until the print head moves to the middle.

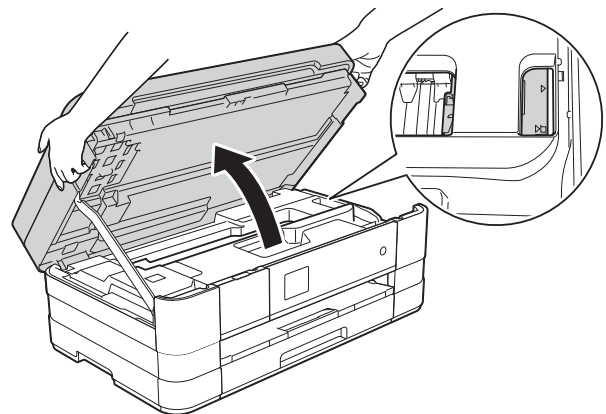


- 2** Unplug the machine from the electrical socket.
- 3** Lift the scanner cover (1) to release the lock. Gently push the scanner cover support down (2) and close the scanner cover (3) using both hands.

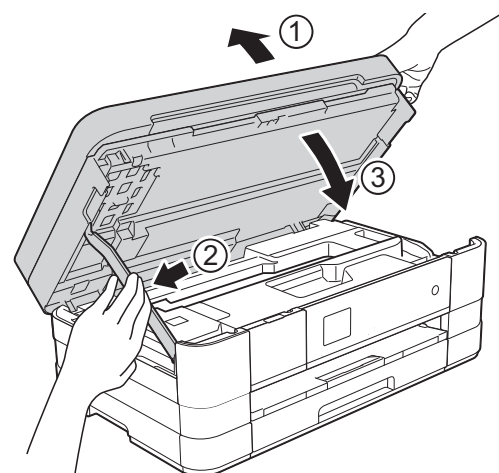

- 4 Open the manual feed slot cover.

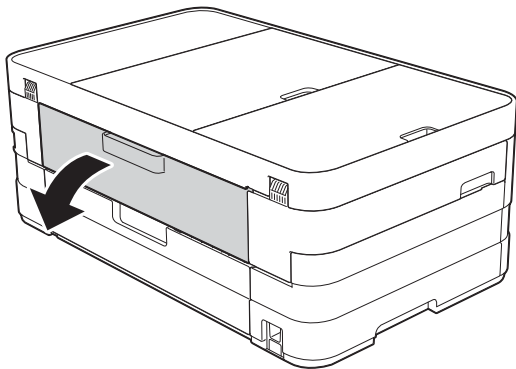

- 5 Put only one sheet of A4 or Letter size thick paper such as glossy paper in a Landscape position in the manual feed slot. Push it into the manual feed slot.

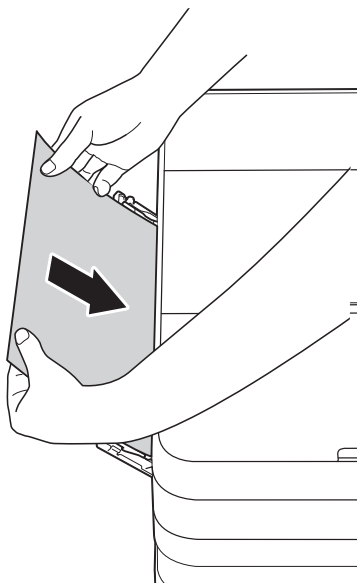

NOTE

- We recommend you use glossy paper.
- If you do not push the paper deep enough into the manual feed slot, the machine will not feed it when you re-connect the power cord.

- 6 Re-connect the power cord. The paper you placed in the manual feed slot will be fed through the machine and ejected.

- 7 Place your hands in the finger holds on each side of the machine to lift the scanner cover into the open position.

Make sure that a piece of paper is not still jammed inside the machine.

Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover using both hands.





If you are having difficulty with your machine

IMPORTANT

- For technical help, you must contact Brother customer support. Contact must be made from within the country where you purchased the machine.
- If you think there is a problem with your machine, check the following chart and follow the troubleshooting tips. You can correct most problems by yourself.
- If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at <http://solutions.brother.com/>.

Printing Difficulties

Difficulty	Suggestions
<p>No printout.</p>	<p>Check that the correct printer driver has been installed and chosen.</p>
	<p>Check to see if the Touchscreen is showing an error message. (See <i>Error and Maintenance messages</i> on page 88.)</p>
	<p>Make sure that the machine is online. (Windows® 7) Click /Devices and Printers. Right-click Brother MFC-XXXXX (where XXXXX is your model name) and choose See what's printing. Click Printer and make sure that Use Printer Offline is unchecked. (Windows Vista®) Click /Control Panel/Hardware and Sound/Printers. Right-click Brother MFC-XXXXX (where XXXXX is your model name). If the printer is offline, it will show Use Printer Online. Select this option to enable the printer. (Windows® XP) Click Start/Control Panel/Printers and Other Hardware/Printers and Faxes. Right-click Brother MFC-XXXXX (where XXXXX is your model name). If the printer is offline, it will show Use Printer Online. Select this option to enable the printer.</p>
	<p>One or more ink cartridges have reached the end of their life. (See <i>Replacing the ink cartridges</i> on page 79.)</p>
	<p>The document will not print if the old, unprinted data remains in the printer driver spooler. Open the printer icon, and then delete all the data. Your printer icon can be found in the following way: (Windows® 7) Click /Devices and Printers/Printers and Faxes. (Windows Vista®) Click /Control Panel/Hardware and Sound/Printers. (Windows® XP) Click Start/Control Panel/Printers and Other Hardware/Printers and Faxes. (Mac OS X v10.7.x) Click System Preferences/Print & Scan. (Mac OS X v10.5.8, 10.6.x) Click System Preferences/Print & Fax.</p>
	<p>The headers or footers appear when the document displays on the screen but they do not show up when it is printed.</p>
<p>Cannot perform "Page Layout" printing.</p>	<p>Check that the paper size setting in the application and in the printer driver are the same.</p>

B







Printing Difficulties (continued)

Difficulty	Suggestions
Print speed is too slow.	Try changing the printer driver setting. The highest resolution needs longer data processing, sending and printing time. Try the other quality settings in the printer driver Advanced tab (Windows®) or Color Settings (Macintosh). Click Colour Settings (Windows®) or Advanced Color Settings (Macintosh) and make sure you uncheck Color Enhancement .
	Turn the Borderless feature off. Borderless printing is slower than normal printing. (See Software User's Guide: <i>Printing</i> (Windows®).) (See Software User's Guide: <i>Printing and Faxing</i> (Macintosh).)
Colour Enhancement is not working correctly.	If the image data is not full colour in your application (such as 256 colour), Colour Enhancement will not work. Use at least 24 bit colour data with the Colour Enhancement feature.
Machine does not print from Adobe® Illustrator®.	Try to reduce the print resolution. (See Software User's Guide: <i>Printing</i> (Windows®).) (See Software User's Guide: <i>Printing and Faxing</i> (Macintosh).)

Print Quality Difficulties

Difficulty	Suggestions
Poor print quality.	Check the print quality. (See <i>Checking the print quality</i> on page 83.)
	Make sure that the Media Type setting in the printer driver or the Paper Type setting in the machine's menu matches the type of paper you are using. (See <i>Paper Type</i> on page 29.) (See Software User's Guide: <i>Printing</i> (Windows®).) (See Software User's Guide: <i>Printing and Faxing</i> (Macintosh).)
	Make sure that your ink cartridges are fresh. The following may cause ink to clog: <ul style="list-style-type: none"> ■ The expiration date written on the cartridge package has passed. (Brother Original cartridges stay usable for up to two years if kept in their original packaging.) ■ The ink cartridge has been in your machine for over six months. ■ The ink cartridge may not have been stored correctly before use.
	Make sure you are using Brother Original Innobella™ ink. Brother does not recommend the use of cartridges other than Brother Original cartridges or the refilling of used cartridges with ink from other sources.
	Make sure you are using one of the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 31.)
	The recommended environment for your machine is between 20 °C to 33 °C.

Print Quality Difficulties (continued)

Difficulty	Suggestions
<p>White horizontal lines appear in text or graphics.</p>  <p>A4, Letter and Executive</p>  <p>A3, Ledger, Legal, A5, A6, envelopes, Photo (10 × 15 cm), Photo L (89 × 127 mm), Photo 2L (13 × 18 cm) and Index Card (127 × 203 mm)</p>	<p>Clean the print head. (See <i>Cleaning the print head</i> on page 83.)</p> <p>Make sure you are using Brother Original Innobella™ ink.</p> <p>Try using the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 31.)</p> <p>To prolong print head life, provide the best ink cartridge economy and maintain print quality, we do not recommend frequently unplugging the machine and/or leaving the machine unplugged for extended periods of time. We recommend using  to power down the machine. Using  allows minimal power to the machine ensuring periodic cleanings of the print head occur.</p>
<p>The machine prints blank pages.</p>	<p>Clean the print head. (See <i>Cleaning the print head</i> on page 83.)</p> <p>Make sure you are using Brother Original Innobella™ ink.</p> <p>To prolong print head life, provide the best ink cartridge economy and maintain print quality, we do not recommend frequently unplugging the machine and/or leaving the machine unplugged for extended periods of time. We recommend using  to power down the machine. Using  allows minimal power to the machine ensuring periodic cleanings of the print head occur.</p>
<p>Characters and lines are blurred.</p>	<p>Check the printing alignment. (See <i>Checking the print alignment</i> on page 85.)</p>
<p>Printed text or images are skewed.</p>	<p>Make sure the paper is loaded correctly in the paper tray and the paper guides are adjusted correctly. (See <i>Loading paper and other print media</i> on page 15.)</p> <p>Make sure the Jam Clear Cover is closed correctly.</p>
<p>Smudge or stain at the top centre of the printed page.</p>	<p>Make sure the paper is not too thick or curled. (See <i>Acceptable paper and other print media</i> on page 31.)</p>
<p>Printing appears dirty or ink seems to run.</p>	<p>Make sure you are using the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 31.) Do not handle the paper until the ink is dry.</p> <p>Make sure you are using Brother Original Innobella™ ink.</p> <p>If you are using photo paper, make sure that you have set the correct paper type. If you are printing a photo from your PC, set the Media Type in the printer driver.</p>

B

Print Quality Difficulties (continued)

Difficulty	Suggestions
Ink is smudged or running when using glossy photo paper.	Be sure to check the front and back of the paper. Place the glossy surface (printing surface) face down. (See <i>Paper Type</i> on page 29.)
	If you use glossy photo paper, make sure that the paper type setting is correct.
Prints appears dirty or the paper jams when using A3 paper.	(PC print for Windows®) Check Slow Drying Paper in the Basic tab of the printer driver.
	(PC print for Macintosh) Select Print Settings from drop-down list and then check Slow Drying Paper in the printer driver.
	(Copy) Adjust the copy density to make copies lighter. (See Advanced User's Guide: <i>Adjusting Density</i> .)
Stains appear on the reverse side or at the bottom of the page.	Make sure the printer platen is not dirty with ink. (See Advanced User's Guide: <i>Cleaning the machine's printer platen</i> .)
	Make sure you are using Brother Original Innobella™ ink.
	Make sure you are using the paper support flap. (See <i>Loading paper and other print media</i> on page 15.)
	Make sure the paper feed rollers are not dirty with ink. (See Advanced User's Guide: <i>Cleaning the paper feed rollers</i> .)
The machine prints dense lines on the page.	(Windows® only) Check Reverse Order in the Basic tab of the printer driver.
The printouts are wrinkled.	(Windows®) In the printer driver Advanced tab, click Colour Settings and uncheck Bi-Directional Printing .
	(Macintosh) In the printer driver, choose Print Settings , click Advanced , choose Other Print Options and uncheck Bi-Directional Printing .
	Make sure you are using Brother Original Innobella™ ink.

Paper Handling Difficulties

Difficulties	Suggestions
The machine does not feed paper.	Make sure the Jam Clear Cover at the back of the machine is closed.
	If the Touchscreen shows the Paper Jam message and you still have a problem, see <i>Error and Maintenance messages</i> on page 88.
	If there is no paper, load a new stack of paper into the paper tray.
	If there is paper in the paper tray, make sure it is straight. If the paper is curled, you should straighten it. Sometimes it is helpful to remove the paper, turn the stack over and put it back into the paper tray.
	Reduce the amount of paper in the paper tray, and then try again.
	Clean the paper pick-up rollers. (See <i>Advanced User's Guide: Cleaning the paper pick-up rollers.</i>)
Photo paper does not feed correctly.	When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
Machine feeds multiple pages.	Do the following: (See <i>Loading paper and other print media</i> on page 15.)
	<ul style="list-style-type: none"> ■ Make sure the paper is loaded correctly in the paper tray. ■ Remove all the paper from the tray and fan the stack of paper well, then put it back in the tray. ■ Make sure you do not push the paper in too far.
	Make sure the Jam Clear Cover is closed correctly. (See <i>Paper is jammed in the back of the machine</i> on page 102.)
	Make sure the Base Pad in the paper tray is not dirty. (See <i>Advanced User's Guide: Cleaning the paper pick-up rollers.</i>)
There is a paper jam.	See <i>Printer jam or paper jam</i> on page 101. Make sure the paper guides are set to the correct paper size.
Paper jam reoccurs.	If there is a repeat paper jam, a small piece of paper may be stuck in the machine. Make sure paper is not still jammed in the machine. (See <i>Additional paper jam clear operations</i> on page 106.)
The paper jams when you use 2-sided copy or 2-sided print.	Use one of the jam prevention settings, 2-sided1 or 2-sided2.
	For copying (See <i>Advanced User's Guide: 2-sided copying.</i>)
	For printing (See <i>Software User's Guide: 2-sided / Booklet (Windows®).</i>) (See <i>Software User's Guide: 2-sided Printing (Macintosh).</i>)
	If paper jams occur often during 2-sided copying or 2-sided printing, the paper feed rollers may be stained with ink. Clean the paper feed rollers. (See <i>Advanced User's Guide: Cleaning the paper feed rollers.</i>)

Printing Received Faxes

Difficulty	Suggestions
<ul style="list-style-type: none"> ■ Condensed print ■ Horizontal streaks ■ Top and bottom sentences are cut off ■ Missing lines 	Usually this is caused by a poor telephone connection. Make a copy; if your copy looks good, you probably had a bad connection, with static or interference on the telephone line. Ask the other party to send the fax again.
Vertical black lines when receiving.	The sender's scanner may be dirty. Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine.
Left and right margins are cut off or a single page is printed on two pages.	If the received faxes are divided and printed on two pages or if you get an extra blank page, your paper size setting may not be correct for the paper you are using. (MFC-J2310 and MFC-J4410DW: See <i>Paper Size</i> on page 29.) (MFC-J4610DW: See <i>Paper Size and Type (MFC-J4610DW)</i> on page 30.)
	Turn on Auto Reduction. (See <i>Advanced User's Guide: Printing a reduced incoming fax.</i>)
Received colour fax prints only in black and white.	Replace the colour ink cartridges that have reached the end of their life, and then ask the other person to send the colour fax again. (See <i>Replacing the ink cartridges</i> on page 79.)

Telephone Line or Connections

Difficulty	Suggestions
Dialling does not work. (No dial tone)	Check the line cord connections.
	(Not available in New Zealand)
	Change the Tone/Pulse setting. (See <i>Quick Setup Guide.</i>)
	If there is no dial tone, connect a known working telephone and telephone line cord to the socket. Then lift the external telephone's handset and listen for a dial tone. If there is still no dial tone, ask your telephone company to check the line and/or wall socket.
The machine does not answer when called.	Make sure the machine is in the correct Receive Mode for your setup. (See <i>Choose the Receive Mode</i> on page 42.) Check for a dial tone. If possible, call your machine to hear it answer. If there is still no answer, check the telephone line cord connection. If there is no ringing when you call your machine, ask your telephone company to check the line.


Sending Faxes

Difficulty	Suggestions
Cannot send a fax.	Check all line cord connections. Make sure the telephone line cord is plugged into the telephone wall socket and the LINE socket inside the machine.
	Print the Transmission Verification Report and check for an error. (See <i>Advanced User's Guide: Reports.</i>)
	Contact your administrator to check your Secure Function Lock Settings.
	Ask the other party to check that the receiving machine has paper.
Poor fax send quality.	Try changing your resolution to <i>Fine</i> or <i>S.Fine</i> . Make a copy to check your machine's scanner operation. If the copy quality is poor, clean the scanner. (See <i>Cleaning the scanner glass</i> on page 82.)

Sending Faxes (continued)

Difficulty	Suggestions
Transmission Verification Report says "RESULT:ERROR".	<p>There is probably temporary noise or static on the line. Try sending the fax again. If you send a PC FAX message and get "RESULT:ERROR" on the Transmission Verification Report, your machine may be out of memory. To gain extra memory, you can turn off Memory Receive (See <i>Advanced User's Guide: Turning off Memory Receive operations.</i>), print fax messages from the machine's memory (See <i>Advanced User's Guide: Printing a fax from the memory.</i>), or cancel a Delayed Fax or Polling Job. (See <i>Cancelling a fax in progress</i> on page 41.) (See <i>Advanced User's Guide: Checking and cancelling waiting jobs.</i>) If the problem continues, ask the telephone company to check your telephone line.</p> <p>If you often get transmission errors due to possible interference on the telephone line, try changing the machine's Compatibility setting to <code>Basic</code> (for VoIP). (See <i>Telephone line interference / VoIP</i> on page 119.)</p>
Vertical black lines when sending. (MFC-J4410DW and MFC-J4610DW)	Black vertical lines on faxes you send are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip. (See <i>Cleaning the scanner glass</i> on page 82.)

Handling Incoming Calls

Difficulty	Suggestions
The machine "hears" a voice as a CNG Tone.	If Fax Detect is set to On, your machine is more sensitive to sounds. It may mistakenly interpret certain voices or music on the line as a fax machine calling and respond with fax receiving tones. Deactivate the machine by pressing  . Try avoiding this problem by turning Fax Detect to Off. (See <i>Fax Detect</i> on page 46.)
Sending a fax call to the machine.	If you answered on an extension or external telephone, press your Remote Activation Code (the factory default is * 5 1 (* 9 1 for New Zealand)). If you answered on an external telephone, press <code>Fax Start</code> , and then press <code>Receive</code> to receive the fax. When your machine answers, hang up.
Custom features on a single line.	<p>If you have Call Waiting, Call Waiting/Caller ID, Voice Mail, an answering machine, an alarm system or other custom feature on a single telephone line with your machine, it may create a problem sending or receiving faxes.</p> <p>For example: If you subscribe to Call Waiting or another custom service and its signal comes through the line while your machine is sending or receiving a fax, the signal can temporarily interrupt the faxes. Brother's ECM (Error Correction Mode) feature should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive information on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, a separate telephone line with no custom features is recommended.</p>



Copying Difficulties

Difficulty	Suggestions
Cannot make a copy.	Contact your administrator to check your Secure Function Lock Settings.
Vertical black lines or streaks appear in copies.	Black vertical lines on copies are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip, scanner glass, white bar and white plastic above them. (See <i>Cleaning the scanner glass</i> on page 82.)
Poor copy results when using the ADF. (MFC-J4410DW and MFC-J4610DW)	Try using the scanner glass. (See <i>Using the scanner glass</i> on page 37.)
Fit to Page does not work correctly.	Make sure your source document is not skewed. Reposition the document and try again.

Scanning Difficulties

Difficulty	Suggestions
TWAIN or WIA errors appear when starting to scan. (Windows®)	(Not available in Hong Kong and Taiwan) Make sure the Brother TWAIN or WIA driver is chosen as the primary source in your scanning application. For example, in Nuance™ PaperPort™ 12SE, click Scan Settings, Select to choose the Brother TWAIN/WIA driver.
	(Hong Kong and Taiwan only) Make sure the Brother TWAIN/WIA driver is chosen as the primary source. In Presto! PageManager with OCR, click File, Select Source and choose the Brother TWAIN/WIA driver.
TWAIN or ICA errors appear when starting to scan. (Macintosh)	Make sure the Brother TWAIN driver is chosen as the primary source. In PageManager, click File, Select Source and choose the Brother TWAIN driver. Mac OS X v10.6.x and 10.7.x users can also scan documents using the ICA Scanner Driver. (See Software User's Guide: <i>Scanning a document using the ICA driver (Mac OS X v10.6.x, 10.7.x).</i>)
OCR does not work.	Try increasing the scanner resolution. (Macintosh) Presto! PageManager must be downloaded and installed before use. For more information, see <i>Accessing Brother Support (Macintosh)</i> on page 5.
Poor scanning results when using the ADF. (MFC-J4410DW and MFC-J4610DW)	Try using the scanner glass. (See <i>Using the scanner glass</i> on page 37.)

PhotoCapture Center™ Difficulties

Difficulty	Suggestions
Removable Disk does not work correctly.	<ol style="list-style-type: none"> 1 Take out the memory card or USB Flash memory drive and put it back in again. 2 If you have tried “Eject” from within Windows®, take out the memory card or USB Flash memory drive before you continue. 3 If an error message appears when you try to eject the memory card or USB Flash memory drive, it means the card is being accessed. Wait a while and then try again. 4 If all of the above do not work, turn off your PC and machine, and then turn them on again.
Cannot access Removable Disk from the computer.	Make sure that you have correctly inserted the memory card or USB Flash memory drive.
Part of my photo is missing when printed.	Make sure that Borderless printing and Cropping are turned off. (See Advanced User’s Guide: <i>Borderless printing</i> and <i>Cropping</i> .)

Software Difficulties


Difficulty	Suggestions
Cannot install software or print.	(Windows® only) Run the Repair MFL-Pro Suite program on the CD-ROM. This program will repair and reinstall the software.
“Device Busy”	Make sure the machine is not showing an error message on the Touchscreen.
Cannot print images from FaceFilter Studio. (Windows®)	To use FaceFilter Studio, you must install the FaceFilter Studio application from the CD-ROM supplied with your machine. (See Quick Setup Guide.) Also, before you start FaceFilter Studio for the first time, you must make sure your Brother machine is turned on and connected to your computer. This will allow you to access all the functions of FaceFilter Studio.

Network Difficulties

Difficulty	Suggestions
Cannot print over the network.	<p>Make sure that your machine is powered on and is online and in the Ready mode. Print a Network Configuration Report (See Advanced User’s Guide: <i>Reports</i>.) and check the current Network settings printed in this list. Reconnect the LAN cable to the hub to verify that the cabling and network connections are good. If possible, try connecting the machine to a different port on your hub using a different cable. If the connections are good, the machine shows LAN Active for 2 seconds.</p> <p>If you are using a wireless connection or are having Network problems, see Network User’s Guide: <i>Troubleshooting</i>.</p>



Network Difficulties (continued)



Difficulty	Suggestions
The network scanning feature does not work.	<p>It is necessary to configure the third-party Security/Firewall Software to allow Network scanning. To add port 54925 for Network scanning, enter the information below:</p> <p>In Name: Enter any description, for example Brother NetScan.</p> <p>In Port number: Enter 54925.</p> <p>In Protocol: UDP is selected.</p> <p>See the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.</p> <p>(Macintosh only)</p> <p>Re-select your network machine in the Device Selector window from the Model pop-up menu in the main screen of ControlCenter2.</p>
The network PC-Fax Receive feature does not work.	<p>(Windows® only)</p> <p>It is necessary to set the third-party Security/Firewall Software to allow PC-FAX Rx. To add port 54926 for Network PC-FAX Rx, enter the information below:</p> <p>In Name: Enter any description, for example Brother PC-FAX Rx.</p> <p>In Port number: Enter 54926.</p> <p>In Protocol: UDP is selected.</p> <p>See the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.</p>
The Brother software cannot be installed.	<p>(Windows®)</p> <p>Allow network access to the following programs if your security software displays an alert message during MFL-Pro Suite installation.</p> <p>(Macintosh)</p> <p>If you are using a firewall function of anti-spyware or antivirus security software, temporarily disable it and then install the Brother software.</p>
Cannot connect to wireless network.	<p>Investigate the problem using the WLAN Report.</p> <p>Press  (Settings), and then press ▲ or ▼ on the Touchpanel to display Print Reports. Press Print Reports. Press ▲ or ▼ to display WLAN Report, and then press WLAN Report. (See Network User's Guide.)</p>

Difficulties when entering data

Difficulty	Suggestions
The dial pad does not work when entering numbers or characters.	Use the keyboard on the Touchscreen to enter information.


Dial Tone detection

When you send a fax automatically, by default your machine will wait for a fixed amount of time before it starts to dial the number. By changing the Dial Tone setting to *Detection*, you can make your machine dial as soon as it detects a dial tone. This setting can save a small amount of time when sending a fax to many different numbers. If you change the setting and start having problems when dialling, you should change it back to the *No Detection* setting.

- 1 Press  (Settings).
- 2 Press **^** or **v** on the Touchpanel to display *Initial Setup*.
- 3 Press *Initial Setup*.
- 4 Press **^** or **v** to display *Dial Tone*.
- 5 Press *Dial Tone*.
- 6 Press *Detection* or *No Detection*.
- 7 Press .

Telephone line interference / VoIP

If you are having problems sending or receiving a fax due to possible interference on the telephone line, you can change the compatibility setting which reduces the modem speed to minimise errors.

- 1 Press  (Settings).
- 2 Press **^** or **v** on the Touchpanel to display *Initial Setup*.
- 3 Press *Initial Setup*.
- 4 Press **^** or **v** to display *Compatibility*.

- 5 Press *Compatibility*.

- 6 Press *High*, *Normal* or *Basic (for VoIP)*.

- *Basic (for VoIP)* cuts the modem speed to 9,600 bps and turns off colour fax receiving and ECM, except for colour fax-sending. Unless interference is a recurring problem on your telephone line, you may prefer to use it only when needed.

To improve compatibility with most VoIP services, Brother recommends changing the compatibility setting to *Basic (for VoIP)*.

- *Normal* sets the modem speed at 14,400 bps.
- *High* increases the modem speed to 33,600 bps. (factory default)

- 7 Press .



NOTE

- VoIP (Voice over IP) is a type of phone system that uses an Internet connection, rather than a traditional phone line.
- Brother does not recommend the use of a VoIP line. VoIP limitations in general can cause some functions of the fax machine not to work correctly.

Machine Information

Checking the serial number

You can see the machine's serial number on the Touchscreen.

- 1 Press  (Settings).
- 2 Press **^** or **v** on the Touchpanel to display `Machine Info`.
- 3 Press `Machine Info`.
- 4 Press `Serial No.`
- 5 Press .

Reset functions

The following reset functions are available:

- 1 `Network`
You can reset the print server back to its default factory settings, such as the password and IP address information.
- 2 `Address&Fax`
Address & Fax resets the following settings:
 - Speed Dial
(Speed-Dial and Setup Groups)
 - Programmed fax jobs in the memory
(Polled Transmit, Delayed Fax and Delayed Batch Transmission)
 - Station ID
(Name and Number)
 - Remote Fax Options
(Fax Forwarding)
 - Report settings
(Transmission Verification Report, Quick Dial List and Fax Journal)

- History
(Caller ID history and Outgoing Call)

- Faxes in memory

3 All Settings


You can restore all settings to their factory defaults.

Brother strongly recommends performing this procedure before handing over or disposing of the machine.

NOTE

Unplug the interface cable before you choose `Network` or `All Settings`.

How to reset the machine

- 1 Press  (Settings).
- 2 Press **^** or **v** on the Touchpanel to display `Initial Setup`.
- 3 Press `Initial Setup`.
- 4 Press **^** or **v** to display `Reset`.
- 5 Press `Reset`.
- 6 Press **^** or **v** to display the `Reset options` `Network`, `Address&Fax` or `All Settings`.
- 7 Press the option you want to reset.
- 8 Press `Yes` to confirm.
- 9 Press `Yes` for 2 seconds to reboot the machine.

Using the Settings Tables

Your machine's Touchscreen LCD is easy to set up and operate. All you have to do is press the settings and options you want to set as they are displayed on the Touchscreen.

We have created step-by-step Settings Tables so you can see at-a-glance all the available choices for each setting and feature. You can use these tables to quickly choose your preferred settings in the machine.

Settings tables

The Settings tables will help you understand the settings selections that are found in the machine's programs. The factory settings are shown in Bold with an asterisk.



(Settings)

Level1	Level2	Level3	Options	Descriptions	Page
Shortcut Settings 	Copy	—	Quality Paper Type Paper Size Tray Select (MFC-J4610DW) Enlarge/Reduce Density Stack/Sort Page Layout 2-sided Copy Advanced Settings (Options) Off Ink Save Mode Thin Paper Copy Book Copy Remove Background	Lets you quickly and easily recall and apply your previously stored preferred settings.	10
		Fax	—		
	Scan	Scan to Media	Scan Type Resolution File Type File Name Remove Background		
		Scan to Network	(Profile Name)		
		Scan to FTP			
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page	
General Setup	Ink	Test Print	Print Quality Alignment	Lets you check the print quality or alignment.	83	
		Cleaning	Black Colour All	Lets you clean the print head.	83	
		Ink Volume	—	Lets you check the available ink volume.	See ◆.	
	Paper Type (MFC-J2310 and MFC-J4410DW)	—	Plain Paper* Inkjet Paper Brother BP71 Other Glossy Transparency	Sets the type of paper in the paper tray.	29	
	Paper Size (MFC-J2310 and MFC-J4410DW)	—	A4* A5 10x15cm Letter	Sets the size of paper in the paper tray.	29	
	Tray Setting (MFC-J4610DW)	Tray #1	Paper Type (Options)	Plain Paper* Inkjet Paper Brother BP71 Other Glossy Transparency	Sets the type of paper in paper tray #1.	30
			Paper Size (Options)	A4* A5 10x15cm Letter	Sets the size of paper in paper tray #1.	
		Tray #2	Paper Size (Options)	A4* Letter	Sets the size of paper in paper tray #2.	30
		Tray Use: Copy	Tray #1 Tray #2 Auto Tray Select*	Choose the tray that will be used for Copy mode.	30	
		Tray Use: Fax	Tray #1 Tray #2 Auto Tray Select*	Choose the tray that will be used for Fax mode.	31	
◆ See Advanced User's Guide.						
The default settings are shown in Bold with an asterisk.						

Level1	Level2	Level3	Options	Descriptions	Page
General Setup (Continued)	Volume	Ring	Off Low Med* High	Adjusts the ring volume.	12
		Beep	Off Low* Med High	Adjusts the volume of the sounds when you press the Touchscreen or Touchpanel.	13
		Speaker	Off Low Med* High	Adjusts the speaker volume.	13
	LCD Settings	Backlight	Light* Med Dark	You can adjust the brightness of the Touchscreen backlight.	14
		Dim Timer	Off 10Secs 20Secs 30Secs*	You can set how long the Touchscreen backlight stays on for after the last finger press.	See ◆ .
	Sleep Mode	—	1Min 2Mins 3Mins 5Mins* 10Mins 30Mins 60Mins	You can choose how long the machine will remain idle before it goes into Sleep mode.	
	Function Lock	Set Password	—	You can restrict selected machine functions for up to 10 restricted users and for all other non-authorized Public users.	
		Lock Off-On	—		

◆ See Advanced User's Guide.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page
Fax	Setup Receive	Ring Delay	2 - 10 (2*) (Example for Australia)	Sets the number of rings before the machine answers in Fax Only or Fax/Tel mode.	45
		F/T Ring Time	20Secs 30Secs* 40Secs 70Secs (For New Zealand) 20Secs 30Secs* 40Secs 55Secs	Sets the length of the fast double-ring time in Fax/Tel mode.	45
		Fax Detect	On* Off	Receives fax messages automatically when you answer a call and hear fax tones.	46
		Remote Codes	On* (*51, #51 (*91, #91 for New Zealand)) Off	Allows you to answer all calls at an extension or external telephone and use codes to turn the machine on or off. You can personalize these codes.	57
		Auto Reduction	On* Off	Cuts the size of incoming faxes to fit the paper size.	See ♦.
		Memory Receive	Off* Fax Forward Fax Storage PC Fax Receive	You can set the machine to either forward fax messages, store incoming faxes in the memory (so you can retrieve them while you are away from your machine) or send faxes to your PC. If you choose Fax Forward or PC-Fax Receive, you can turn on the safety feature Backup Print.	
♦ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
Fax (Continued)	Setup Address Book	Set Speed Dial	Add Number	Stores Speed Dial numbers, so you can dial by pressing only a few buttons on the Touchscreen.	61
			Add Number from History		See ♦.
		Setup Groups	—	You can set up Group numbers for Broadcasting.	
		Change	—	You can change Speed Dial numbers.	63
		Delete	—	You can delete Speed Dial numbers.	
	Report Setting	Transmission	On On+Image Off* Off+Image	Choose the initial setting of the Transmission Verification Report.	41
		Journal Period	Off Every 50 Faxes* Every 6 Hours Every 12 Hours Every 24 Hours Every 2 Days Every 7 Days	Sets the interval for the automatic printing of the Fax Journal. If you have chosen any other option than <i>Off</i> and <i>Every 50 Faxes</i> , you can set the time for the chosen option. If you have chosen <i>Every 7 Days</i> , you can set the day of the week.	See ♦.
	Print Document	—	—	Prints incoming faxes stored in the memory.	
	Remote Access	—	---*	Set your own code for Remote Retrieval.	
	Remaining Jobs	—	—	Check which jobs are in the memory and cancel chosen jobs.	
	♦ See Advanced User's Guide.				
The default settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
Fax (Continued)	Miscellaneous	Distinctive (Not available in New Zealand and Taiwan)	On Off*	Use with phone company distinctive ringing service allows you to have a voice number and fax number on the one phone line.	47 52
		FaxAbility (For New Zealand only)	On Off*	If you have FaxAbility from Telecom, you can use this function to store the ringing pattern of your fax number. And if you set in to On , you should use the registered number only.	50
		Call Waiting (For New Zealand only)	On Off*	If you have Call Waiting as well as FaxAbility, set the Call Waiting to On .	51
		Caller ID (For Taiwan only)	On* Off	View or print a list of the last 30 Caller IDs stored in the memory.	53
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

Network settings

Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network	Wired LAN	TCP/IP	BOOT Method	Auto* Static RARP BOOTP DHCP	Choose the BOOT method that best suits your needs.	See +.
			IP Address	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.	
			Subnet Mask	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.	
			Gateway	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.	
			Node Name	BRNXXXXXXXXXXXX	Enter the Node name.	
			WINS Config	Auto* Static	Chooses the WINS configuration mode.	
			WINS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary WINS server.	
			DNS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary DNS server.	
			APIPA	On* Off	Automatically allocates the IP address from the link-local address range.	

+ See Network User's Guide.

♣ Go to the Brother Solutions Center to download the Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Go to the Brother Solutions Center to download the Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network (Continued)	Wired LAN (Continued)	TCP/IP (Continued)	IPv6	On Off*	Enable or disable the IPv6 protocol. If you want to use the IPv6 protocol, visit http://solutions.brother.com/ for more information.	See +.
		Ethernet	—	Auto* 100B-FD 100B-HD 10B-FD 10B-HD	Chooses the Ethernet link mode.	
		MAC Address	—	—	You can see your machine's MAC address.	
	WLAN	TCP/IP	BOOT Method	Auto* Static RARP BOOTP DHCP	Chooses the BOOT method that best suits your needs.	
			IP Address	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.	
			Subnet Mask	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.	
			Gateway	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.	
			Node Name	BRWXXXXXXXXXXXX	Enter the Node name.	
			WINS Config	Auto* Static	Chooses the WINS configuration mode.	

+ See Network User's Guide.

♣ Go to the Brother Solutions Center to download the Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Go to the Brother Solutions Center to download the Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network (Continued)	WLAN (Continued)	TCP/IP (Continued)	WINS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary WINS server.	See +.
			DNS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary DNS server.	
			APIPA	On* Off	Automatically allocates the IP address from the link-local address range.	
			IPv6	On Off*	Enable or disable IPv6 protocol for a wireless LAN. If you want to use the IPv6 protocol, visit http://solutions.brother.com/ for more information.	
		Setup Wizard	—	—	You can manually configure your print server for a wireless network.	
		WPS/AOSS	—	—	You can easily configure your wireless network settings using the one-button push method.	
		WPS w/PIN Code	—	—	You can easily configure your wireless network settings using WPS with a PIN code.	

+ See Network User's Guide.

♣ Go to the Brother Solutions Center to download the Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Go to the Brother Solutions Center to download the Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions	Page		
Network (Continued)	WLAN (Continued)	WLAN Status	Status	Active (11b) Active (11g) Active (11n) AOSS Active Connection Fail	You can see the current wireless network status.	See +.		
			Signal	—	You can see the current wireless network signal strength.			
			SSID	—	You can see the current SSID.			
			Comm. Mode	—	You can see the current Communication Mode.			
			MAC Address	—	—	You can see your machine's MAC address.		
		Wi-Fi Direct	Push Button	—	—	You can easily configure your Wi-Fi Direct™ network settings using the one-button push method.	See ♣.	
				PIN Code	—	—		You can easily configure your Wi-Fi Direct™ network settings using WPS with a PIN code.
				Manual	—	—		You can manually configure your Wi-Fi Direct™ network settings.
				Group Owner	—	On Off*		Sets your machine as the Group Owner.
	<p>+ See Network User's Guide.</p> <p>♣ Go to the Brother Solutions Center to download the Wi-Fi Direct™ Guide at http://solutions.brother.com/.</p> <p>● Go to the Brother Solutions Center to download the Web Connect Guide at http://solutions.brother.com/.</p> <p>The default settings are shown in Bold with an asterisk.</p>							

Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network (Continued)	Wi-Fi Direct (Continued)	Device Information	Device Name	—	You can see the device name of your machine.	See ♣.
			SSID	—	Shows SSID of Group Owner. When the machine is not connected, Touchscreen shows Not Connected.	
			IP Address	—	You can see the current IP address of your machine.	
		Status Information	Status	G/O Active (**) Client Active Not Connected Off ** = the number of devices	You can see the current Wi-Fi Direct™ network status.	
			Signal	Strong Medium Weak None	You can see the current Wi-Fi Direct™ network signal strength. When your machine acts as Group Owner, the Touchscreen always shows Strong.	
		I/F Enable	—	On Off*	Enable or Disable the Wi-Fi Direct™ connection.	

† See Network User's Guide.

♣ Go to the Brother Solutions Center to download the Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Go to the Brother Solutions Center to download the Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions	Page	
Network (Continued)	Email/IFax (Available after IFAX is downloaded)	Email Address	—	—	—	Enter the mail address. (Up to 60 characters)	See +.
		Setup Server	SMTP Server	Name (Up to 30 characters)	Name (Up to 30 characters) IP Address [000-255]. [000-255]. [000-255]. [000-255]	Enter the SMTP server address.	
				SMTP Port			
			Auth. for SMTP	None*	SMTP-AUTH POP bef.SMTP	Selects the Security method for E-mail notification.	
			POP3 Server	Name (Up to 30 characters)	Name (Up to 30 characters) IP Address [000-255]. [000-255]. [000-255]. [000-255]	Enter the POP3 server address.	
				POP3 Port			
			Mailbox Name	—	Enter the mail box name. (Up to 60 characters)		
			Mailbox Pwd	—	Enter the password to login to the POP3 server. (Up to 32 characters)		
APOP	On Off*	Enables or disables APOP.					

+ See Network User's Guide.

♣ Go to the Brother Solutions Center to download the Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Go to the Brother Solutions Center to download the Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network (Continued)	Email/IFax (Available after IFAX is downloaded) (Continued)	Setup Mail RX	Auto Polling	On*	Automatically checks the POP3 server for new messages.	See +.
				Off		
			(When On chosen)	Sets the interval for checking for new messages on the POP3 server.		
			Poll Frequency			
			(Options)			
			1Min			
		3Mins				
		5Mins				
		10Mins*				
		30Mins				
60Mins						
Header	All	Selects the contents of the mail header to be printed.				
Subject+From+To						
None*						
Del Error Mail	On*	Deletes error mails automatically.				
Off						
Notification	On	Receives notification messages.				
MDN						
Off*						
Setup Mail TX	Sender Subject	—	Displays the subject that is attached to the Internet Fax data.			
Size Limit	On	Limits the size of E-mail documents.				
Off*						
Notification	On	Sends notification messages.				
Off*						

+ See Network User's Guide.

♣ Go to the Brother Solutions Center to download the Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Go to the Brother Solutions Center to download the Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network (Continued)	Email/IFax (Available after IFAX is downloaded) (Continued)	Setup Relay	Rly Broadcast	On Off*	Relays a document to another fax machine over the Internet.	See +.
			Relay Domain	—	Registers the Domain name.	
			Relay Report	On Off*	Prints the Relay Broadcast Report.	
		Manual POP3 Receive	—	Accesses the POP3 server and confirms whether an e-mail has been received.		
	Web Connect Settings	Proxy Settings	Proxy Connection	On Off*	You can change the Web connection settings.	See ●.
			Address	—		
			Port	—		
			User Name	—		
			Password	—		
	Network I/F	—	Wired LAN* WLAN	—	You can choose the network connection type.	See +.
Network Reset	—	—	Yes No	Restore all network settings back to the factory default.		
+ See Network User's Guide.						
♣ Go to the Brother Solutions Center to download the Wi-Fi Direct™ Guide at http://solutions.brother.com/ .						
● Go to the Brother Solutions Center to download the Web Connect Guide at http://solutions.brother.com/ .						
The default settings are shown in Bold with an asterisk.						



(Settings) (continued)

Level1	Level2	Level3	Options	Descriptions	Page	
Print Reports	XMIT Verify	—	—	Prints these lists and reports.	See ◆.	
	Address Book	—	Alphabetical Order Numerical Order			
	Fax Journal	—	—			
	User Settings	—	—			
	Network Config	—	—			
	WLAN Report	—	—			
	Caller ID hist.	—	—			
Machine Info.	Serial No.	—	—	Lets you check the serial number of your machine.	120	
Initial Setup	Receive Mode	—	Fax Only* Fax/Tel External TAD Manual	Choose the Receive Mode that best suits your needs.	42	
	Date & Time	Date & Time	—	—	Sets the date and time on the Touchscreen and in the headings of the faxes you send.	See ‡.
		Daylight Save	—	Forward Hour Backward Hour	Manually changes for Daylight Savings Time.	See ◆.
		Time Zone	—	—	Sets the time zone for your country.	See ‡.
	Station ID	—	Fax: Name:	Enter your name and fax number to appear on each page you fax.		
	Tone/Pulse (Not available in New Zealand)	—	Tone* Pulse	Choose the dialling mode.		
	Dial Tone	—	Detection No Detection*	Turns Dial Tone Detection on or off.	119	
	Dial Prefix	—	On Off*	Sets a prefix number that will always be added before the fax number every time you dial.	See ◆.	
	Compatibility	—	High* Normal Basic(for VoIP)	Adjusts the modem speed to help resolve transmission problems.	119	

◆ See Advanced User's Guide.

‡ See Quick Setup Guide.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page	
Initial Setup (Continued)	Reset	Network	Yes No	Resets the print server back to its factory default settings, such as the password and IP address information.	120	
		Address&Fax	Yes No	Deletes all stored Speed Dial numbers and faxes, restores the Station ID, Speed Dial List, Transmission Verification Report and Fax Journal back to the factory default settings.		
		All Settings	Yes No	Resets all the machine's settings back to the factory default.		
	Miscellaneous	Temporary Fax Backup	Backup (Options)	On Off*	Prints or deletes fax data that is stored in the memory.	See ◆.
			Reprint			
			Delete			
Local Language (Hong Kong and Taiwan only)	—	(Choose the language you want to use)		Allows you to change the LCD language for your country.	See ‡.	
◆ See Advanced User's Guide.						
‡ See Quick Setup Guide.						
The default settings are shown in Bold with an asterisk.						

Features tables



(Fax)

Level1	Level2	Level3	Options	Descriptions	Page	
History	Outgoing	Send a fax	—	You can choose a number from the Outgoing Call history and then send a fax to it, add it to the Address Book, or delete it.	60	
		More	Add to Address Book			
	Incoming	Send a fax	—		You can choose a number from the Caller ID history and then send a fax to it, add it to the Address Book, or delete it.	60
		More	Add to Address Book			
Address	—	Send a fax	—	You can dial a stored number with a few finger presses.	59	
		More	Set Speed Dial	Stores Speed Dial numbers, so you can dial by pressing only a few buttons on the Touchscreen.	61	
			Setup Groups	You can set up Group numbers for Broadcasting.	See ◆.	
			Change	You can change Speed Dial numbers.	63	
			Delete	You can delete Speed Dial numbers.		
Fax Start	—	—	—	Lets you send a fax.	39	
Options	Fax Resolution	—	Standard* Fine S.Fine Photo	Sets the resolution for outgoing faxes.	See ◆.	
	Contrast	—	Auto* Light Dark	Changes the brightness of faxes you send.		
	Broadcasting	Add from Address Book	—	You can send the same fax message to more than one fax number.		
	Colour Setting	—	Mono* Colour	Sets whether faxes are sent in monochrome or colour.	41	

◆ See Advanced User's Guide.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page
Options (Continued)	Delayed Fax	—	On Off*	Sets the time of day in 24-hour format that the delayed faxes will be sent.	See ◆ .
	Batch TX	—	On Off*	Combines delayed faxes to the same fax number at the same time of day into one transmission.	
	Real Time TX	—	On Off*	You can send a fax without using the machine's memory.	
	Polled TX	—	Standard Secure Off*	Sets up the document on your machine to be retrieved by another fax machine.	
	Polling RX	—	Standard Secure Timer Off*	Sets up your machine to poll another fax machine.	
	Overseas Mode	—	On Off*	If you are having difficulty sending faxes overseas, set this to On.	
	Glass Scan Size	—	Letter A4*	Sets the glass scan size for faxes.	40
	History	Outgoing	Send a fax	More (Add to Address Book/Delete)	You can choose a number from the Outgoing Call history and then send a fax to it, add it to the Address Book, or delete it.
Incoming			Send a fax		
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					


Level1	Level2	Level3	Options	Descriptions	Page
Options (Continued)	Address Book	Send a fax	—	You can dial a stored number with a few finger presses.	59
		More	Set Speed Dial	Stores Speed Dial numbers, so you can dial by pressing only a few buttons on the Touchscreen.	61
			Setup Groups	You can set up Group numbers for Broadcasting.	See ♦.
			Change	You can change Speed Dial numbers.	63
			Delete	You can delete Speed Dial numbers.	
	Set New Default	—	Yes No	You can save your fax settings.	See ♦.
	Factory Reset	—	Yes No	You can restore all settings back to the factory default.	

♦ See Advanced User's Guide.

The default settings are shown in Bold with an asterisk.

**(Copy)**

Level1	Level2	Level3	Options	Descriptions	Page
Mono Start	—	—	—	Lets you make a monochrome copy.	64
Colour Start	—	—	—	Lets you make a colour copy.	
Options	Quality	—	Normal* Best	Choose the Copy resolution for the next copy.	See ◆.
	Paper Type	—	Plain Paper* Inkjet Paper Brother BP71 Other Glossy Transparency (For MFC-J4610DW, when Tray #2 is selected in Tray Select.) Plain Paper	Choose the paper type that matches the paper in the tray.	65
	Paper Size	—	A4* A5 A3 10x15cm Letter Legal Ledger (For MFC-J4610DW, when Tray #2 is selected in Tray Select.) A4* A3 Letter Legal Ledger	Choose the paper size that matches the paper in the tray.	65
	Tray Select (MFC-J4610DW)	—	Tray #1 Tray #2 Auto Tray Select*	Choose the tray that will be used for Copy mode.	65
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

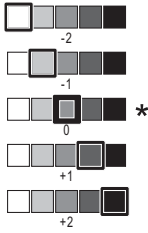Level1	Level2	Level3	Options	Descriptions	Page
Options (Continued)	Enlarge/Reduce	100%*	—	—	See ◆ .
		Enlarge	198% 10x15cm→A4 186% 10x15cm→LTR 141% A4→A3, A5→A4	You can choose the enlargement ratio for the next copy.	
		Reduce	(MFC-J2310) 97% LTR→A4 93% A4→LTR 83% 69% A4→A5 47% A4→10x15cm (MFC-J4410DW and MFC-J4610DW) 97% LTR→A4 93% A4→LTR 83% LGL→A4 69% A4→A5 47% A4→10x15cm	You can choose the reduction ratio for the next copy.	
		Fit to Page	—	Your machine will adjust the size automatically to the paper size you set.	
		Custom(25-400%)	—	You can choose the enlargement or reduction ratio for your type of document.	
	Density	—		Adjusts the density of copies.	
	Stack/Sort	—	Stack* Sort	You can choose to stack or sort multiple copies.	

◆ See Advanced User's Guide.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page
Options (Continued)	Page Layout	—	Off (1in1)* 2in1 (P) 2in1 (L) 2in1 (ID) 4in1 (P) 4in1 (L) Poster (2x1) Poster (2x2) Poster (3x3)	You can make N in 1, 2 in 1 ID, or Poster copies.	See ◆ .
	2-sided Copy	Off*	—	You can choose the 2-sided print settings.	
		Portrait LongEdgeFlip	—		
		Landscape LongEdgeFlip	—		
		Portrait ShortEdgeFlip	—		
		Landscape ShortEdgeFlip	—		
		Advanced	Normal* 2-sided1 2-sided2		
	Advanced Settings	—	Off* Ink Save Mode Thin Paper Copy Book Copy Remove Background	You can choose various copy settings.	
Set New Default	—	Yes No	You can save your copy settings.		
Factory Reset	—	Yes No	You can restore all the settings back to the factory default.		
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

Remove Background

Options1	Options2	Descriptions	Page
Remove Background	Low Medium* High	Change the amount of background colour that is removed.	See ◆ .
◆ See Advanced User's Guide.			
The default settings are shown in Bold with an asterisk.			



(Scan)

Level1	Level2	Level3	Options	Descriptions	Page
Scan to File	PC	Start	—	Start scanning.	See □.
		Options	(For more information, see the <i>Options (for Scan to File, Scan to email and Scan to Image)</i> in the following table.)	Configure the detailed settings.	
Scan to Media (when a memory card or USB Flash memory drive is inserted)	—	Start	—	Start scanning.	70
	—	Options	(For more information, see the <i>Options (for Scan to Media)</i> in the following table.)	Configure the detailed settings.	
Scan to Network	—	Start	—	Start scanning.	See □.
Scan to FTP	—	Start	—	Start scanning.	
Scan to email	PC	Start	—	Start scanning.	
		Options	(For more information, see the <i>Options (for Scan to File, Scan to email and Scan to Image)</i> in the following table.)	Configure the detailed settings.	
Scan to E-mail Server (Available after IFAX is downloaded)	Manual	—	—	Manually enter the address of the recipient.	
	Address Book	—	—	Choose the address of the recipient from the <i>Address Book</i> .	
	—	Start	—	Start scanning.	
	—	Options	(For more information, see the <i>Options (for Scan to E-mail Server)</i> in the following table.)	Configure the detailed settings.	

□ See Software User's Guide.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page
Scan to OCR (Available after Presto! PageManager is downloaded for Macintosh users. See <i>Accessing Brother Support (Macintosh)</i> on page 5.)	PC	Start	—	Start scanning.	See <input type="checkbox"/> .
		Options	(For more information, see the <i>Options (for Scan to OCR)</i> in the following table.)	Configure the detailed settings.	
Scan to Image	PC	Start	—	Start scanning.	
		Options	(For more information, see the <i>Options (for Scan to File, Scan to email and Scan to Image)</i> in the following table.)	Configure the detailed settings.	
Web Service (Appears when you install a Web Services Scanner, which is displayed in your computer's Windows® Explorer.)	Scan	—	—	You can scan data by using the Web Services protocol.	
	Scan for E-mail	—	—		
	Scan for Fax	—	—		
	Scan for Print	—	—		
<input type="checkbox"/> See Software User's Guide.					
The default settings are shown in Bold with an asterisk.					

Options (for Scan to File, Scan to email and Scan to Image)

Level1	Level2	Options1	Descriptions	Page
Options	Set with TouchPanel	Off (Set with Computer)* On	If you want to use the Touchscreen to change the machine's settings, choose On.	See <input type="checkbox"/> .
	The settings below will appear when On is selected in Set with TouchPanel.			
	Scan Type	Colour* Black and White	You can choose the scan type for your document.	
	Resolution	100 dpi 200 dpi* 300 dpi 600 dpi	You can choose the scan resolution for your document.	
	File Type	(If you choose the Colour option in the Scan Type setting) PDF* JPEG (If you choose the Mono option in the Scan Type setting) TIFF PDF*	You can choose the file format for your document.	
	Remove Background	Off* Low Medium High	Change the amount of background colour that is removed.	
<input type="checkbox"/> See Software User's Guide.				
The default settings are shown in Bold with an asterisk.				

Options (for Scan to Media)

Level1	Level2	Options1	Descriptions	Page
Options	Scan Type	Colour* Black and White	You can choose the scan type for your document.	70
	Resolution	100 dpi 200 dpi* 300 dpi 600 dpi Auto	You can choose the scan resolution for your document.	
	File Type	(If you choose the Colour option in the Scan Type setting) PDF* JPEG (If you choose the Mono option in the Scan Type setting) TIFF PDF*	You can choose the file format for your document.	
	File Name	—	You can rename the file.	
	Remove Background	Off* Low Medium High	Change the amount of background colour that is removed.	
	Set New Default	Yes No	You can save your scan settings as the default settings.	
	Factory Reset	Yes No	You can restore all settings back to the original factory default settings.	
♦ See Advanced User's Guide.				
The default settings are shown in Bold with an asterisk.				

Options (for Scan to E-mail Server)

NOTE

This feature is available after IFAX is downloaded.

Level1	Level2	Options1	Descriptions	Page
Options	Scan Type	Colour* Black and White	You can choose the scan type for your document.	See <input type="checkbox"/> .
	Resolution	100 dpi 200 dpi* 300 dpi 600 dpi Auto	You can choose the scan resolution for your document.	
	File Type	(If you choose Colour option in the Scan Type setting) PDF* JPEG (If you choose Mono option in the Scan Type setting) TIFF PDF*	You can choose the file format for your document.	
	Set New Default	Yes No	You can save your scan settings as the default settings.	
	Factory Reset	Yes No	You can restore all settings back to the original factory default settings.	
<input type="checkbox"/> See Software User's Guide.				
The default settings are shown in Bold with an asterisk.				

Options (for Scan to OCR)

Level1	Level2	Options1	Descriptions	Page
Options	Set with TouchPanel	Off (Set with Computer)* On	If you want to use the Touchscreen to change the machine's settings, choose On.	See <input type="checkbox"/> .
	The settings below will appear when On is selected in Set with TouchPanel.			
	Scan Type	Colour Black and White*	You can choose the scan type for your document.	
	Resolution	100 dpi 200 dpi* 300 dpi 600 dpi	You can choose the scan resolution for your document.	
	File Type	Text* HTML RTF	You can choose the file format for your document.	
<input type="checkbox"/> See Software User's Guide.				
The default settings are shown in Bold with an asterisk.				




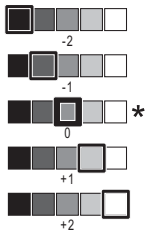
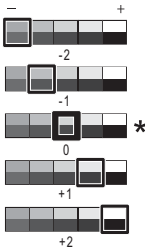
(Photo)




Level1	Level2	Level3	Options	Descriptions	Page
View Photos	OK	Start	—	You can print your chosen photos.	69
		Options	For more information, see the <i>Options</i> in the following table.	You can adjust your photos with the options.	See ♦.
Print All	Start	—	—	You can print all photos in your memory card or USB Flash memory drive.	
	Options	—	For more information, see the <i>Options</i> in the following table.	You can adjust your photos with the options.	
Index Print	Index Sheet	Start	—	You can print a thumbnail page.	
		Options	Paper Type (Options) Plain Paper* Inkjet Paper Brother BP71 Other Glossy	Choose the paper type.	
			Paper Size (Options) Letter A4*	Choose the paper size.	
		Print Photos	Start	—	You can print an individual image.
	Options		For more information, see the <i>Options</i> in the following table.	You can adjust your photos with the options.	

♦ See Advanced User's Guide.

The default settings are shown in Bold with an asterisk.

Options (for Photo)

Option1	Option2	Option3	Option4	Descriptions	Page
Print Quality (Not available for DPOF printing.)	Normal Photo*	—	—	Choose the print quality.	See  .
Paper Type	Plain Paper Inkjet Paper Brother BP71 Other Glossy*	—	—	Choose the paper type.	
Paper Size	10x15cm* 13x18cm A4 A3 Letter Ledger	—	—	Choose the paper size.	
(When A4 or Letter is chosen) Print Size	8x10cm 9x13cm 10x15cm 13x18cm 15x20cm Max. Size*	—	—	Choose the print size if you are using A4 or Letter size paper.	
Brightness		—	—	Adjusts the brightness.	
Contrast		—	—	Adjusts the contrast.	
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

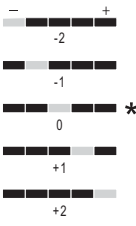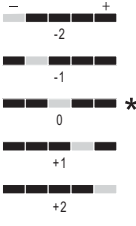Option1	Option2	Option3	Option4	Descriptions	Page
Colour Enhance	On Off*	White Balance		Adjusts the hue of the white areas.	See ◆ .
		Sharpness		Enhances the detail of the image.	
		Colour Density		Adjusts the total amount of colour in the image.	
Cropping	On* Off	—	—	Crops the image around the margin to fit the paper size or print size. Turn this feature off if you want to print whole images or prevent unwanted cropping.	
Borderless	On* Off	—	—	Expands the printable area to fit the edges of the paper.	
Date Print (Not available for DPOF printing.)	On Off*	—	—	Prints the date on your photo.	
Set New Default	Yes No	—	—	You can save your print settings as the default settings.	
Factory Reset	Yes No	—	—	You can restore all the settings back to the factory default.	
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

**(Web)**

Level1	Level2	Level3	Options	Descriptions	Page
Web	PICASA Web Albums™	—	—	Lets you connect the Brother machine to an Internet service.	See ●.
	Google Drive™	—	—		
	FLICKR®	—	—	Web services may have been added and/or service names may have been changed by the provider since this document was published.	
	Facebook™	—	—		
	EVERNOTE	—	—		
	Dropbox	—	—		
● Go to the Brother Solutions Center to download Web Connect Guide at http://solutions.brother.com/ .					
The default settings are shown in Bold with an asterisk.					

**(Ink)****NOTE**

will not appear if received faxes are in the memory.

Level1	Level2	Level3	Options	Descriptions	Page
(Ink)	Test Print	—	Print Quality Alignment	Lets you check the print quality or alignment.	83 85
	Cleaning	—	Black Colour All	Lets you clean the print head.	83
	Ink Volume	—	—	Lets you check the available ink volume.	See ◆.
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					


WiFi (Wi-Fi Setup)

NOTE

After the Wi-Fi® is set up, you cannot change the settings from your Home screen. Change any settings for the Wi-Fi connection in the Settings screen.





Level1	Level2	Level3	Options	Descriptions	Page
WiFi (Wi-Fi Setup)	Setup Wizard	—	—	You can manually configure your print server for a wireless network.	See ‡.
	Setup with PC	—	—	You can configure the Wi-Fi settings using a PC.	
	WPS/AOSS	—	—	You can easily configure your wireless network settings using the one-button push method.	
	WPS w/PIN Code	—	—	You can easily configure your wireless network settings using WPS with a PIN code.	See †.
‡ See Quick Setup Guide.					
† See Network User's Guide.					
The default settings are shown in Bold with an asterisk.					

Entering Text

When you need to enter text into the machine the keyboard will appear on the Touchscreen. Press  to cycle between letters, numbers and special characters.





Inserting spaces

To enter a space, press  to choose special characters, then press the space button  or . Or, you can press  twice to move the cursor.

NOTE


The characters that are available may differ depending on your country.

Making corrections

If you entered an incorrect character and want to change it, press  to move the cursor under the incorrect character, and then press . Enter the correct character. You can also use the cursor to go back and insert letters.

If the Touchscreen does not show , press  repeatedly until you have erased the incorrect character. Enter the correct characters.

Repeating letters

If you need to enter a letter that is on the same button as the letter before it, press  to move the cursor to the right before you press the same button again.

General

NOTE

This chapter provides a summary of the machines' specifications. For additional specifications visit <http://www.brother.com/>.

Printer Type	Inkjet
Print Head	Mono: Piezo with 420 nozzles × 1 Colour: Piezo with 420 nozzles × 3
Memory Capacity	128 MB
LCD (Liquid Crystal Display)	1.8 in. (44.9 mm) TFT Colour Touchscreen LCD and Touchpanel
Power Source	(Taiwan) AC 100 to 120 V 50/60 Hz (For Australia and other countries) AC 220 to 240 V 50/60 Hz
Power Consumption ¹	(Taiwan) Copying Mode: Approx. 21 W ² Ready Mode: Approx. 5 W ³ Sleep Mode: Approx. 1.5 W ³ Off: Approx. 0.04 W ^{3 4} (For Australia and other countries) Copying Mode: Approx. 21 W ² Ready Mode: Approx. 6.0 W ³ Sleep Mode: Approx. 1.5 W ³ Off: Approx. 0.04 W ^{3 4}

¹ Measured when the machine is connected to the USB interface. Power consumption varies slightly depending on the usage environment or part wear.


² (MFC-J4410DW and MFC-J4610DW) When using ADF, single-sided printing, resolution: standard / document: ISO/IEC 24712 printed pattern.

(MFC-J2310) When single-sided printing, resolution: standard / document: ISO/IEC 24712 printed pattern.

³ Measured according to IEC 62301 Edition 2.0.

⁴ Even when the machine is turned off, it will automatically turn itself on periodically for print head maintenance, and then turn itself off.

Dimensions

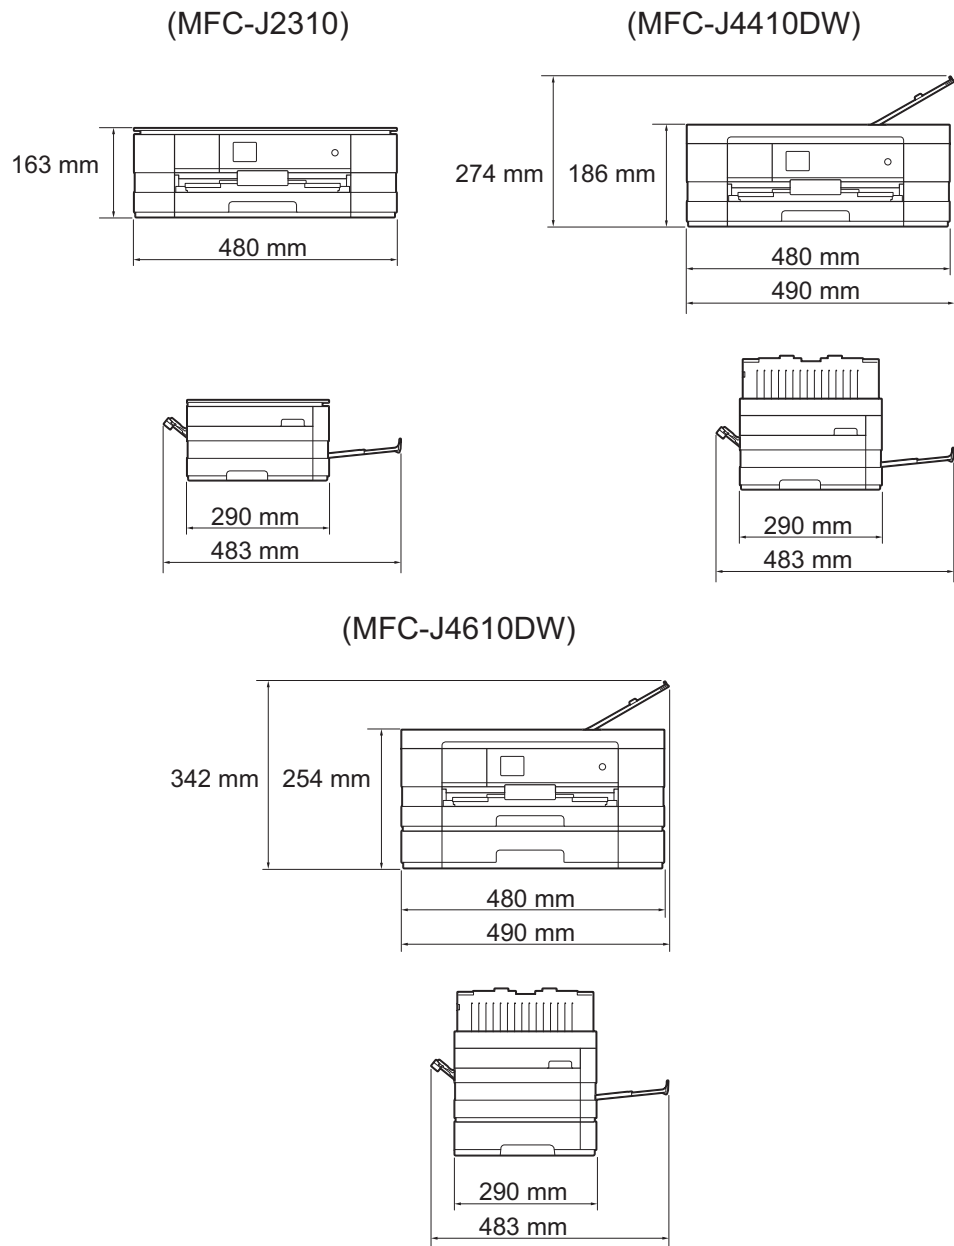

Weight	(MFC-J2310) 8.0 kg (MFC-J4410DW) 9.2 kg (MFC-J4610DW) 10.8 kg
Noise	Operating: 50 dB(A) (Average) ¹
Temperature	Operating: 10 to 35 °C Best Print Quality: 20 to 33 °C
Humidity	Operating: 20 to 80% (without condensation) Best Print Quality: 20 to 80% (without condensation)



**ADF (automatic document feeder)
(MFC-J4410DW and MFC-J4610DW)**

Up to 20 pages

Paper: 80 gsm A4 or Letter size

Document Size

ADF Width: 148 mm to 215.9 mm (MFC-J4410DW and MFC-J4610DW)

ADF Length: 148 mm to 355.6 mm (MFC-J4410DW and MFC-J4610DW)

Scanner Glass Width: Max. 215.9 mm

Scanner Glass Length: Max. 297 mm

¹ Noise depends on printing conditions.

Print media

Paper Input

Paper Tray #1

- Paper type:

Plain paper, inkjet paper (coated paper), glossy paper¹ and transparency^{1 2}

- Paper size³:

(Landscape)

A4, Letter, Executive, JIS B5⁴

(Portrait)

A5, A6, Envelopes (Com-10, DL, Monarch), Photo 10 × 15 cm, Photo L 89 × 127 mm, Photo 2L 13 × 18 cm and Index card 127 × 203 mm

Width: 89 mm - 215.9 mm

Length: 127 mm - 297 mm

For more information, see *Paper weight and thickness* on page 35.

- Maximum paper tray capacity:

Approx. 150 sheets of 80 gsm plain paper

Paper Tray #2 (MFC-J4610DW)

- Paper Type:

Plain Paper

- Paper Size:

(Landscape)

A4, Letter

Width: 210 mm - 215.9 mm

Length: 279.4 mm - 297 mm

For more information, see *Paper weight and thickness* on page 35.

- Maximum paper tray capacity:

Approx. 250 sheets of 80 gsm plain paper

¹ For glossy paper or transparencies, remove printed pages from the output paper tray immediately after they exit the machine to avoid smudging.

² Use only transparencies recommended for inkjet printing.

³ See *Paper type and size for each operation* on page 33.

⁴ Only available for some countries.

Paper Input

(Continued)

Manual Feed Slot

■ Paper Type:

Plain paper, inkjet paper (coated paper),
glossy paper¹ and transparency^{1 2}

■ Paper Size³:

(Landscape)

A4, Letter, Executive, JIS B5⁴

(Portrait)

A3, JIS B4⁴, Ledger, Legal, A5, A6, Envelopes (Com-10, DL,
Monarch, C5), Photo 10 × 15 cm, Photo L 89 × 127 mm,
Photo 2L 13 × 18 cm and Index card 127 × 203 mm

Width: 89 mm - 297 mm

Length: 127 mm - 431.8 mm

For more information, see *Paper weight and thickness* on page 35.

■ Maximum paper tray capacity:

1 sheet of special print media

Paper Output

Up to 50 sheets of 80 gsm plain paper (face up print delivery to the output paper tray)¹

¹ For glossy paper or transparencies, remove printed pages from the output paper tray immediately after they exit the machine to avoid smudging.

² Use only transparencies recommended for inkjet printing.

³ See *Paper type and size for each operation* on page 33.

⁴ Only available for some countries.

Fax

Compatibility	ITU-T Super Group 3
Modem Speed	Automatic Fallback 33,600 bps
Scanning Width	ADF: 208 mm (A4) (MFC-J4410DW and MFC-J4610DW) Scanner Glass: 204 mm (A4)
Printing Width	■ (Paper Tray) 204 mm (A4)
Greyscale	Monochrome: 8 bit (256 levels) Colour: 24 bit (8 bit per colour/ 256 levels)
Resolution	Standard 203 × 98 dpi (Mono) 203 × 196 dpi (Colour) Fine 203 × 196 dpi (Mono/Colour) Superfine 203 × 392 dpi (Mono) Photo 203 × 196 dpi (Mono)
Speed Dial	100 stations × 2 numbers or E-mail addresses ¹
Groups	Up to 6
Broadcasting	200 (200 Speed Dial)
Automatic Redial	3 times at 5 minute intervals
Memory Transmission	Up to 200 ² pages
Out of Paper Reception	Up to 200 ² pages

¹ E-mail addresses are available after IFAX is downloaded.

² "Pages" refers to the "ITU-T Test Chart #1" (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

Copy

Colour/Monochrome	Yes/Yes
Copy Width ¹	204 mm
Multiple Copies	Stacks/Sorts up to 99 pages
Enlarge/Reduce	25% to 400% (in increments of 1%)
Resolution	Prints up to 1200 × 1200 dpi
2-sided	Yes
	■ Paper type: Plain paper
	■ Paper size: A4, Letter, A5

¹ When copying on A4 size paper.

PhotoCapture Center™

Compatible Media ¹	Memory Stick Duo™ (16 MB - 128 MB) Memory Stick PRO Duo™ (256 MB - 32 GB) Memory Stick Micro™ (M2™) with Adapter (256 MB - 32 GB) MultiMedia Card (32 MB - 2 GB) MultiMedia Card plus (128 MB - 4 GB) MultiMedia Card mobile with Adapter (64 MB - 1 GB) SD Memory Card (16 MB - 2 GB) miniSD with Adapter (16 MB - 2 GB) microSD with Adapter (16 MB - 2 GB) SDHC Memory Card (4 GB - 32 GB) miniSDHC with Adapter (4 GB - 32 GB) microSDHC with Adapter (4 GB - 32 GB) SDXC Memory Card (48 GB - 128 GB) USB Flash memory drive ²
Resolution	Up to 1200 × 4800 dpi
File Extension (Media Format) (Image Format)	DPOF (ver. 1.0, ver. 1.1), Exif DCF (up to ver. 2.1) Photo Print: JPEG ³ , AVI ⁴ , MOV ⁴ Scan to Media: JPEG, PDF (Colour) TIFF, PDF (Monochrome)
Number of Files	Up to 999 files (The folder inside memory cards or USB Flash memory drive is also counted.)
Folder	File must be stored in the 4th folder level of the memory card or USB Flash memory drive.
Borderless	A4, Letter, A3, Ledger, Photo 10 × 15 cm, Photo 2L 13 × 18 cm ⁵

¹ Memory cards, adapters and USB Flash memory drive are not included.

² USB 2.0 Standard
USB Mass Storage standard up to 32 GB
Support format: FAT12/FAT16/FAT32/exFAT

³ Progressive JPEG format is not supported.

⁴ Motion JPEG only.

⁵ See *Paper type and size for each operation* on page 33.

PictBridge

Compatibility

Supports the Camera & Imaging Products Association PictBridge standard CIPA DC-001.

Visit <http://www.cipa.jp/pictbridge/> for more information.

Interface

USB direct interface

Scanner

Colour/Monochrome	Yes/Yes
TWAIN Compliant	Yes (Windows® XP ¹ /Windows Vista®/Windows® 7) (Mac OS X v10.5.8, 10.6.x, 10.7.x ²)
WIA Compliant	Yes (Windows® XP ¹ /Windows Vista®/Windows® 7)
ICA Compliant	Yes (Mac OS X v10.6.x, 10.7.x)
Colour Depth	48 bit colour Processing (Input) 24 bit colour Processing (Output) / 256 levels per colour
Greyscale	16 bit colour Processing (Input) 8 bit colour Processing (Output) / 256 levels
Resolution	Up to 19200 × 19200 dpi (interpolated) ³ Up to 2400 × 2400 dpi (optical) (Scanner Glass) Up to 2400 × 1200 dpi (optical) (ADF) (MFC-J4410DW and MFC-J4610DW)
Scanning Width and Length	(Scanner Glass) Width: Up to 213.9 mm Length: Up to 295 mm (ADF) (MFC-J4410DW and MFC-J4610DW) Width: Up to 213.9 mm Length: Up to 353.6 mm

¹ Windows® XP in this User's Guide includes Windows® XP Home Edition, Windows® XP Professional, and Windows® XP Professional x64 Edition.

² For the latest driver updates for the Mac OS X you are using, visit us at <http://solutions.brother.com/>.

³ Maximum 1200 × 1200 dpi scanning when using the WIA Driver for Windows® XP, Windows Vista® and Windows® 7 (resolution up to 19200 × 19200 dpi can be selected by using the Brother scanner utility).

Printer

Resolution

Up to 1200 × 6000 dpi

Printing Width ³

291 mm [297 mm (borderless) ¹]

Borderless ²

A4, Letter, A3, Ledger, A6, Photo 10 × 15 cm, Photo L
89 × 127 mm, Photo 2L 13 × 18 cm

2-sided**■ Paper type:**

Plain paper

■ Paper size:

A4, Letter, A5, Executive, JIS B5 ⁵

Print Speed ⁴

¹ When the Borderless feature is set to On.

² See *Paper type and size for each operation* on page 33.

³ When printing on A3 size paper.

⁴ For detailed specifications visit <http://www.brother.com/>.

⁵ Only available for some countries.

Interfaces

USB ^{1 2}	A USB 2.0 interface cable that is no longer than 2 m.
LAN cable ³	Ethernet UTP cable category 5 or greater.
Wireless LAN	IEEE 802.11b/g/n (Infrastructure Mode/Ad-hoc Mode) IEEE 802.11g/n (Wi-Fi Direct™)

¹ Your machine has a Hi-Speed USB 2.0 interface. The machine can also be connected to a computer that has a USB 1.1 interface.

² Third party USB ports are not supported.

³ See *Network* on page 168.
See Network User's Guide: *Supported protocols and security features*.

Network

NOTE

For more information about the Network specifications, see the Network User's Guide.

You can connect your machine to a network for Network Printing, Network Scanning, PC Fax Send, PC Fax Receive (Windows[®] only), Remote Setup, and access photos from PhotoCapture Center[™] ¹. Also included is Brother BRAdmin Light ² Network Management software.

Wireless Network Security	SSID (32 characters), WEP 64/128 bit, WPA-PSK (TKIP/AES), WPA2-PSK (AES)
Wireless Setup Support Utility	AOSS[™] Yes WPS Yes

¹ See the Computer Requirements chart on page 169.

² (Windows[®]) If you require more advanced printer management, use the latest Brother BRAdmin Professional utility version that is available as a download from <http://solutions.brother.com/>.

Computer requirements

SUPPORTED OPERATING SYSTEMS AND SOFTWARE FUNCTIONS								
Computer Platform & Operating System Version		PC Interface			Processor	Hard Disk Space to install		
		USB ²	10/100 Base-TX (Ethernet)	Wireless 802.11b/g/n		For Drivers	For Applications	
Windows [®] Operating System	Windows [®] XP Home ^{1 4}	Printing PC Fax ³ Scanning Removable Disk ⁵			32bit (x86) or 64bit (x64) processor	150 MB	1 GB	
	Windows [®] XP Professional ^{1 4}							
	Windows Vista [®] ^{1 4}					500 MB	1.3 GB	
	Windows [®] 7 ^{1 4}					650 MB		
	Windows Server [®] 2003	N/A	Printing				50 MB	N/A
	Windows Server [®] 2003 R2							
	Windows Server [®] 2008							
	Windows Server [®] 2008 R2				64bit (x64) processor			
Macintosh Operating System	Mac OS X v10.5.8	Printing PC Fax (Send) ³ Scanning			PowerPC G4/G5 or Intel [®] Processor	80 MB	550 MB	
	Mac OS X v10.6.x							
	Mac OS X v10.7.x	Removable Disk ⁵			Intel [®] Processor			

Conditions:

- ¹ For WIA, 1200 × 1200 resolution. Brother Scanner Utility enables to enhance up to 19200 × 19200 dpi.
- ² Third party USB ports are not supported.
- ³ PC Fax supports black and white only.
- ⁴ PaperPort™ 12SE supports Windows[®] XP Home (SP3 or greater), XP Professional (SP3 or greater), XP Professional x64 Edition (SP2 or greater), Windows Vista[®] (SP2 or greater) and Windows[®] 7.
- ⁵ Removable disk is a function of PhotoCapture Center™.

For the latest driver updates, visit us at <http://solutions.brother.com/>.

All trademarks, brand and product names are the property of their respective companies.

Consumable items

Ink The machine uses individual Black, Yellow, Cyan and Magenta ink cartridges that are separate from the print head assembly.

Service Life of Ink Cartridge The first time you install a set of ink cartridges the machine will use an amount of ink to fill the ink delivery tubes for high quality printouts. This process will only happen once. After this process is complete the cartridges provided with your machine will have a lower yield than standard cartridges (65%). With all following ink cartridges you can print the specified number of pages.

Replacement Consumables

	(For Australia and other Oceania countries)	(For other countries)
Super High Yield Black	LC137XLBK	LC567XLBK
Super High Yield Yellow	LC135XLY	LC565XLY
Super High Yield Cyan	LC135XLC	LC565XLC
Super High Yield Magenta	LC135XLM	LC565XLM

Black, Yellow, Cyan and Magenta - Approximately 1,200 pages ¹

	(For Australia and other Oceania countries)	(For other countries)
High Yield Black	LC133BK	LC563BK
High Yield Yellow	LC133Y	LC563Y
High Yield Cyan	LC133C	LC563C
High Yield Magenta	LC133M	LC563M

Black, Yellow, Cyan and Magenta - Approximately 600 pages ¹

¹ Approx. cartridge yield is declared in accordance with ISO/IEC 24711.

For more information about the replacement consumables, visit us at <http://www.brother.com/pageyield/>.

What is Innobella™?

Innobella™ is a range of genuine consumables offered by Brother. The name "Innobella™" derives from the words "Innovation" and "Bella" (meaning "Beautiful" in Italian) and is a representation of the "innovative" technology providing you with "beautiful" and "long lasting" print results.



When you print photo images, Brother recommends Innobella™ glossy photo paper (BP71 series) for high quality. Brilliant prints are made easier with Innobella™ Ink and paper.

A

Address Book	
Groups	
changing	63
Speed Dial	
changing	63
deleting	63
setting up	61
using	59
ADF (automatic document feeder)	36
Answering machine (TAD)	54
connecting	55
Apple Macintosh	
See Software User's Guide.	
Automatic	
fax receive	42
Fax Detect	46

B

Brother	
CreativeCenter	4

C

Caller ID	49, 51, 53
Caller ID history	60
Add to Address Book	60
Delete	60
Send a fax	60
Cleaning	
print head	83
scanner	82
Connecting	
external TAD	
(answering machine)	54, 55
external telephone	56
Consumable items	170
Control panel overview	6
ControlCenter	
See Software User's Guide.	
Copy	
paper size	65
paper type	65
Shortcuts	10, 12
tray use	30
using scanner glass	37

Cordless telephone	57
Custom telephone features on a single line	115

D

Dialling	
a pause	61
Caller ID history	60
manual	59
Outgoing Call	60
Speed Dial	59
Distinctive Ring	
turning off	48, 53
turning on	48, 52
Document	
loading	36, 37

E

Envelopes	18, 19, 24, 33, 35
Error messages on Touchscreen	88
B&W Print Only	89
Cannot Detect	89
Cannot Print	90
Comm. Error	90
Cover is Open	90
Data Remaining	90
Document Jam	90
Ink Absorber Full	92
Ink low	92
InkAbsorberNearFull	92
No Ink Cartridge	93
No Paper Fed	94
Not Registered	59, 94
Out of Fax Memory	94
Out of Memory	95
Paper Jam	95
Unable to Clean	96
Unable to Init.	96
Unable to Print	96
Unable to Scan	96
Wrong Paper	97
Wrong Tray Setting	97
Extension telephone, using	57
External telephone, connecting	56

F

Fax codes	
changing	57
Remote Activation Code	46, 57
Remote Deactivation Code	57
using	57
Fax Detect	46
Fax, from PC	
See Software User's Guide.	
Fax, stand-alone	
receiving	42
difficulties	114
F/T Ring Time, setting	45
Fax Detect	46
from extension telephone	57
Ring Delay, setting	45
telephone line interference / VoIP	119
tray use	31
sending	39
change scanner glass size	40
colour fax	41
difficulties	114
Shortcuts	10, 12
telephone line interference / VoIP	119
Transmission Verification Report	41
Fax/Tel mode	
answering at extension telephones	57
Remote Activation Code	57
Remote Deactivation Code	57
Ring Delay	45

G

Greyscale	161, 165
-----------------	----------

H

Help	
Features tables	138
Settings tables	122
Touchscreen messages	121

I

Ink cartridges	
ink dot counter	79
replacing	79
Innobella™	170

J

Jams	
document	99
paper	101

M

Macintosh	
See Software User's Guide.	
Maintenance, routine	
replacing ink cartridges	79
Manual	
dialling	59
receive	42
Manual feed slot	24
Multi-line connections (PABX)	56

N

Network	
Printing	
See Network User's Guide.	
Scanning	
See Software User's Guide.	
Nuance™ PaperPort™ 12SE	
See Software User's Guide. Also see Help in the PaperPort™ 12SE application.	

O

Outgoing Call	
Add to Address Book	60
Delete	60
Send a fax	60

P

Paper	31, 159, 160
capacity	34, 35
loading	15, 18, 21
loading envelopes and postcard	18
loading Photo and	
Photo L paper	20, 24
printable area	28
size	29
size of document	36
type	29, 30, 33
Photo and Photo L paper	18, 20, 33, 34
PhotoCapture Center™	
from PC	
See Software User's Guide.	
MultiMedia Card	66
Preview photos	69
Print settings	
Quality	69
Scan to Media	
change file name	70
SD Memory Card	66
SDHC Memory Card	66
SDXC Memory Card	66
specifications	163
Presto! PageManager	
See Software User's Guide. Also see Help	
in the Presto! PageManager application.	
Print	
difficulties	109
paper jams	101
printable area	28
resolution	166
specifications	166
Printing	
See Software User's Guide.	

R

Receive Mode	
External TAD	42
Fax Only	42
Fax/Tel	42
Manual	42
Redial/Pause	59
Remote Setup	
See Software User's Guide.	
Resolution	
copy	162
fax	161
print	166
scan	165
Ring Delay, setting	45

S

Scanning	
See Software User's Guide.	
Serial Number	
how to find	See inside front cover
Shortcuts	10
adding	10
changing	
Shortcut name	11
Copy	10
deleting	12
Fax	10
Scan	10
using	12
Sockets	
EXT	
External telephone	56
Speed Dial	
changing	63
deleting	63
setting up	61
using	59
Step-by-step Settings Tables	121

T

TAD (telephone answering device), external	42, 54
connecting	54, 55
Receive Mode	42
recording OGM	56
Telephone line	
connections	55
difficulties	114
interference / VoIP	119
multi-line (PABX)	56
Text, entering	155
Touchscreen LCD	121
brightness	14
Transferring your faxes or Fax Journal report	98
Transparencies	31, 32, 34, 35, 159, 160
Tray Select	65
Troubleshooting	
document jam	99
error messages on Touchscreen	88
if you are having difficulty	
copying	116
document jam	99
entering data	118
incoming calls	115
Network	117
paper handling	113
PhotoCapture Center™	117
print quality	110
printing	109
printing received faxes	114
scanning	116
software	117
telephone line or connections	114
maintenance messages on Touchscreen	88
paper jam	101

U

Unscannable area	38
------------------------	----

V

Volume, setting	
beeper	13
ring	12
speaker	13

W

Windows®	
See Software User's Guide.	
Wireless Network	
See Quick Setup Guide and Network User's Guide.	

For Australia Only:

Support – For technical support of your Brother Product other than what you can resolve through the User's Guide, please visit our Web Site or Solutions Web Site (see below) to find an answer to FAQs/Troubleshooting, locating Drivers & Software.

Alternatively, please contact the Product Support Centre for any customer care/technical support enquiry.

To contact Brother International (Aust) Pty Ltd for support on a Brother product please see the details listed below:

Product Support Centre: **Australia**

Brother International (Aust) Pty Ltd

Phone: 02 8875 6000

Fax: 02 9870 7223

Solutions Site: <http://solutions.brother.com/>

Web Site: www.brother.com.au

Email: To submit an e-mail enquiry, visit www.brother.com.au go to **Service and Support** area and follow the prompts.

Our Technical Support Consultants are available 5 days a week by phone during the hours of 8.30am to 5.00pm (EST/EDST) Monday to Friday.

For New Zealand Only:

To contact Brother International (NZ) Limited for support with a Brother product please use the following methods.

Phone:

Premium End User Assistance 0900 552 152

Auto Attendant Self Help 0800 652 152

Brother Recycle Assistance 0800 632 467

Fax Assistance 0800 837 822

Email Assistance Please visit www.brother.co.nz and submit a helpdesk enquiry from Online Help.

Web Assistance Please visit www.brother.co.nz under Online Help for Frequently Asked Questions, Driver downloads, Warranty information and Service Centres.

Our Technical Support Consultants are available 7 days a week by phone during the hours of 8.30am to 5pm Monday to Friday and 9am to 5pm Saturday and Sunday.

Outside of these hours you can find assistance from our Auto Attendant Self Help and our Website www.brother.co.nz under Online Help.

brother®

Visit us on the World Wide Web
<http://www.brother.com/>

These machines are approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.



www.brotherearth.com