


Unpack the machine and check the components

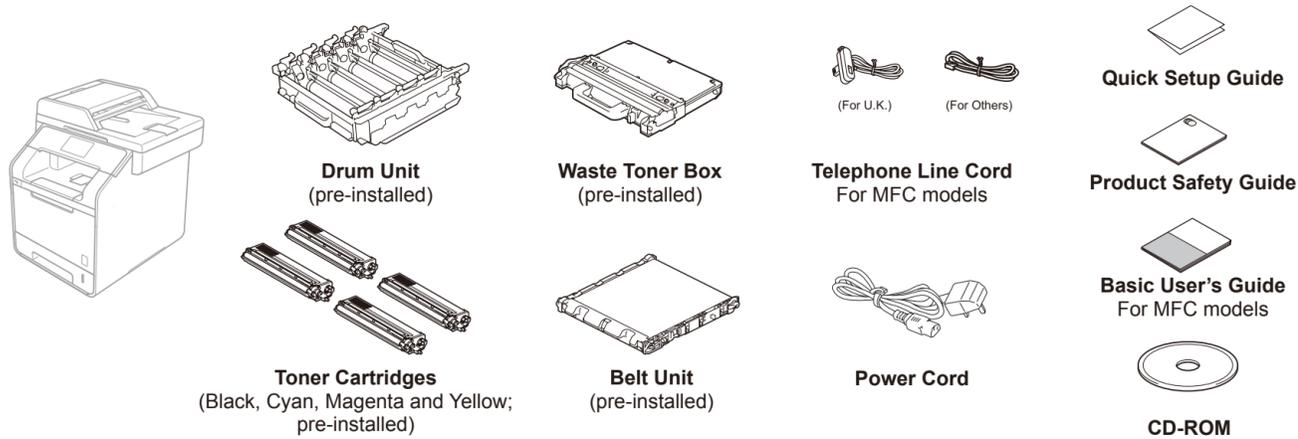


Read the Product Safety Guide first, and then read this Quick Setup Guide for the correct installation procedure.


NOTE:

- The components included in the box and the AC power plug connection may differ depending on your country.
- The illustrations in this Quick Setup Guide are based on the MFC-L8850CDW.
- You must purchase the correct interface cable for the interface you want to use:
USB cable
We recommend using a USB 2.0 cable (Type A/B) that is no more than 6 feet (2 metres) long.
Network cable
Use a straight-through Category 5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.


1 Remove the packing material from the machine

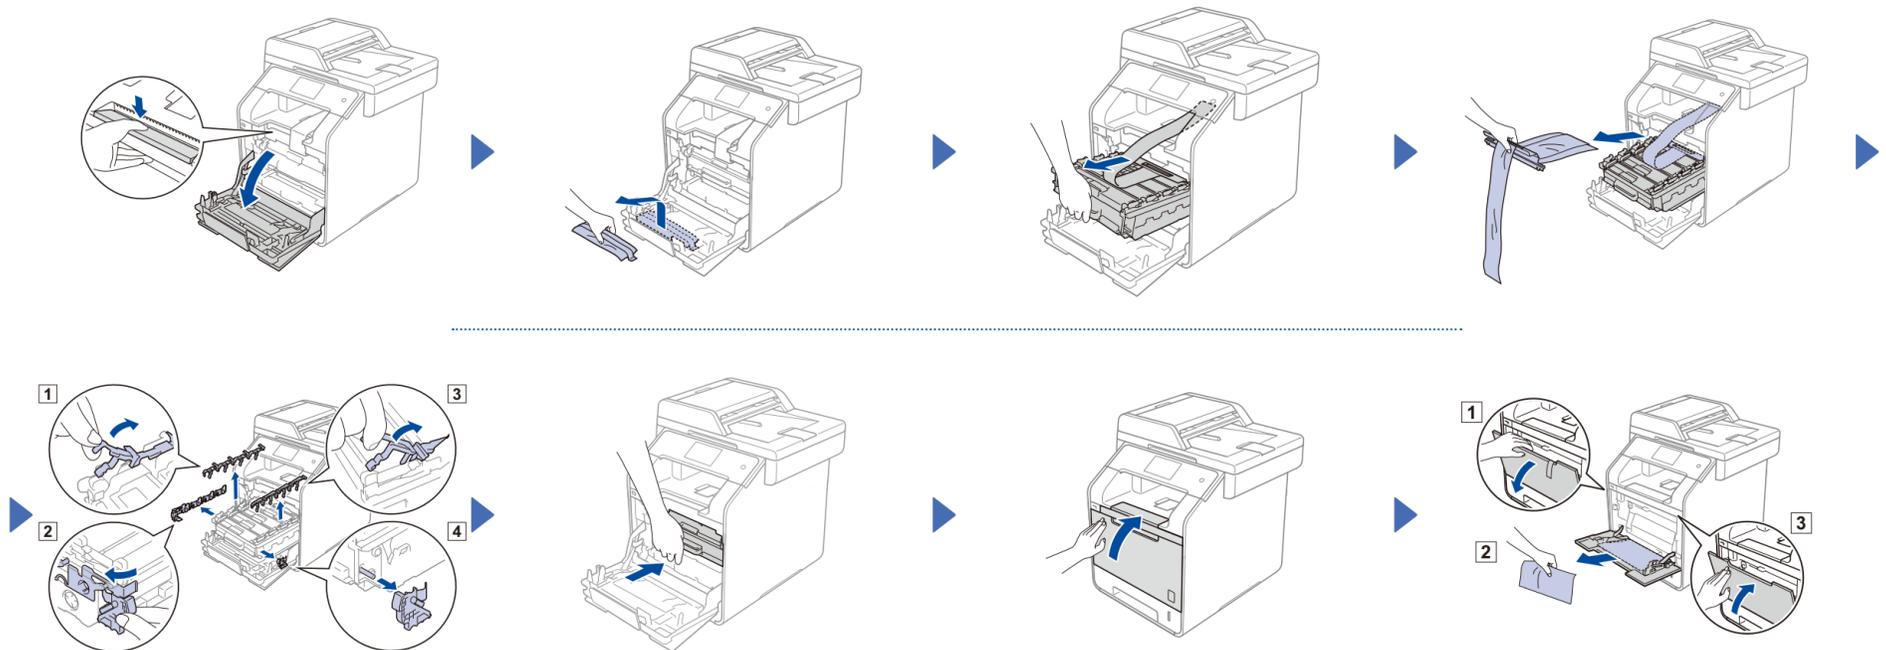

2 Load paper in the paper tray

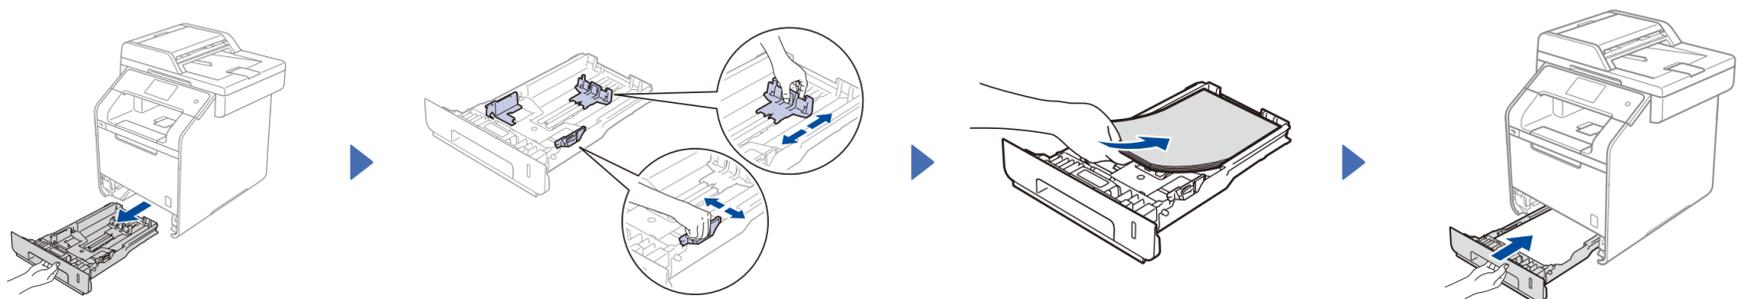

3 Connect the power cord and turn on the machine

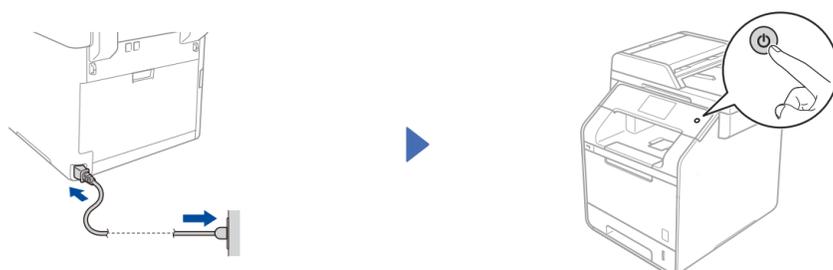

For DCP models ▶ Go to step **4**
For MFC models ▶ Go to step **5**


4 Select your language (for DCP models)

1. After turning on the machine, the Touchscreen displays the list of languages you can select. Swipe up or down, or press ▲ or ▼ to display your language, and press your language. Press OK.
2. The Touchscreen prompts you to confirm your selection. If the Touchscreen shows the correct language, press Yes.
—OR—
Press No to go back to step 1 to choose the language again.


NOTE:

If you have set the wrong language, you can change the language from the **⏏** button on the Touchscreen.
(**⏏**, All Settings, Initial Setup, Local Language)



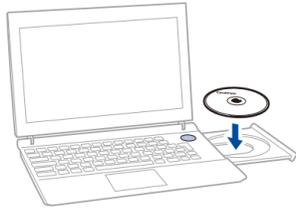

Follow the on-screen instructions until the **Connection Type** screen appears.

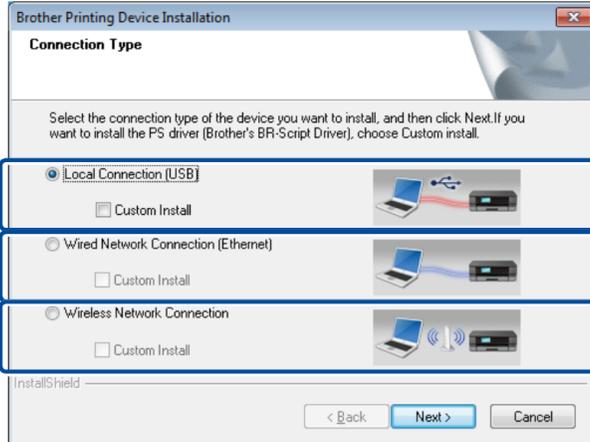

For USB Connection

For Wired Network Connection
Connect a network cable first.

For Wireless Network Connection

Follow the on-screen instructions to continue the installation.


Finish

NOTE:

If connection is unsuccessful, repeat this step.



Wireless Network Connection

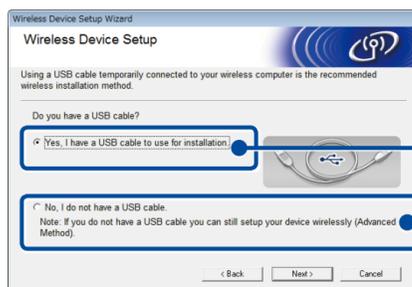

[Recommended]
Temporarily use a USB cable
for easy setup.

[Option]
Select if you do not have a USB cable.

Follow the on-screen instructions to continue the installation.

Finish

NOTE:

If connection is unsuccessful, repeat this step.



Configuration without using the CD-ROM (Windows® without CD-ROM drive or Macintosh)

 
Download the full driver and software package from the Brother Solutions Center.
(For Windows®) solutions.brother.com/windows
(For Macintosh) solutions.brother.com/mac



Print using your mobile device

Print from your mobile devices using our free application "Brother iPrint&Scan".

1. Connect the machine and wireless LAN access point/router from the machine's Touchscreen.



Press **WiFi**.

Press **Setup Wizard**.

Press **Yes** to enable WLAN.

Select the specified SSID,
and then enter the Network key.

2. Download "Brother iPrint&Scan" to start using your machine with mobile devices.
solutions.brother.com/ips

Finish