


## Unpack the machine and check the components

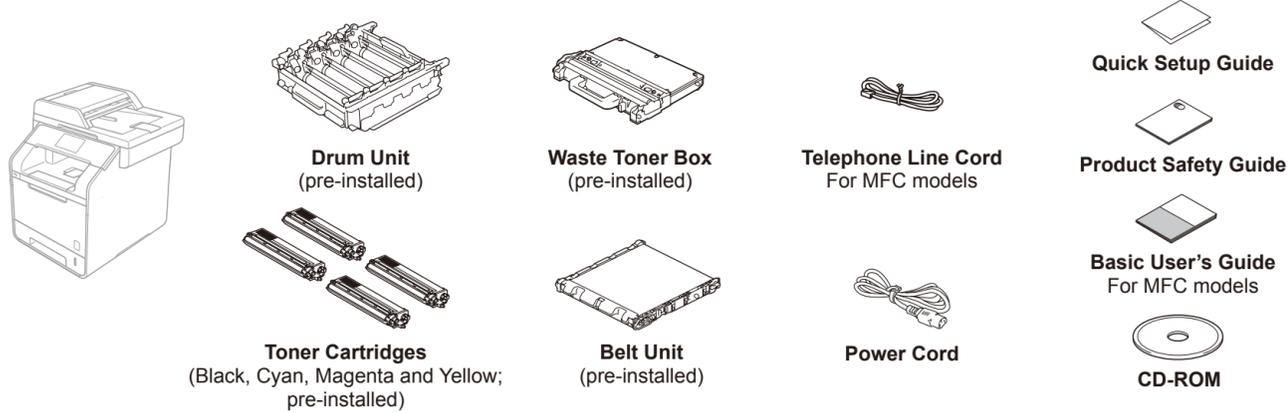


Read the Product Safety Guide first, and then read this Quick Setup Guide for the correct installation procedure.


**NOTE:**

- The components included in the box and the AC power plug connection may differ depending on your country.
- The illustrations in this Quick Setup Guide are based on the MFC-L8850CDW.
- You must purchase the correct interface cable for the interface you want to use:
  - USB cable**  
We recommend using a USB 2.0 cable (Type A/B) that is no more than 6 feet (2 meters) long.
  - Network cable**  
Use a straight-through Category 5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.


### 1 Remove the packing material from the machine

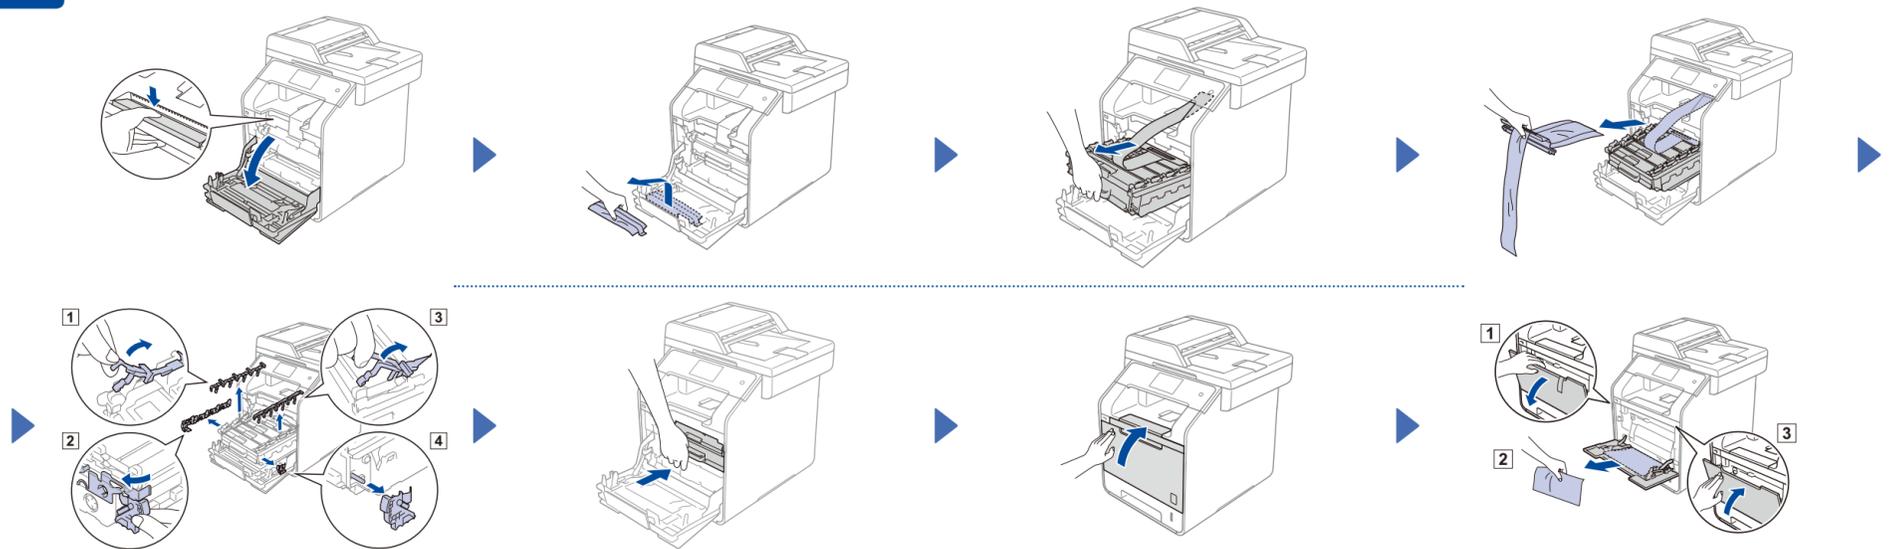

### 2 Load paper in the paper tray

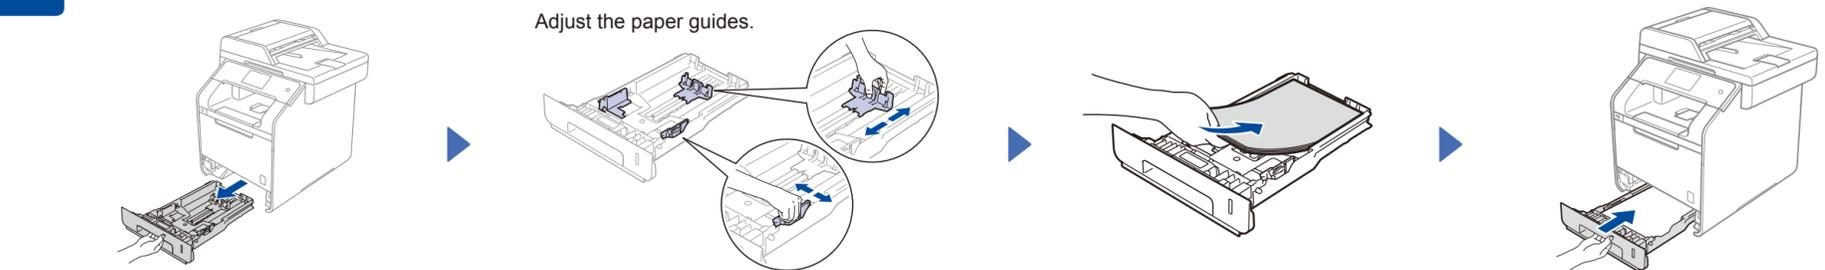


### 3 Connect the power cord and turn on the machine

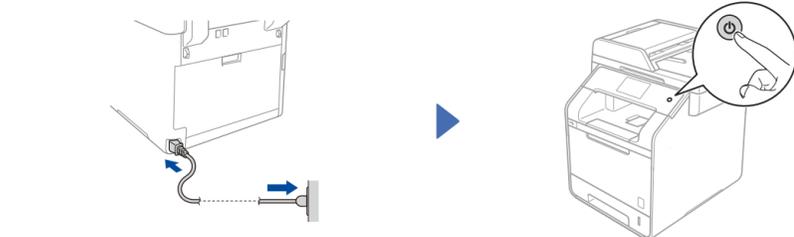

### 4 Select your language


1. Press > All Settings > Initial Setup > Local Language
2. Press your language.
3. Press .

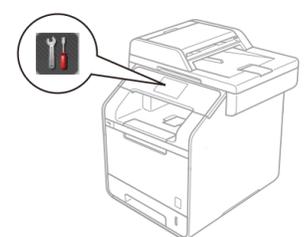

### 5 Configure the machine for faxing (for MFC models)

If you do not plan to use the fax feature on this machine, go to step 6.

#### Connect the telephone line cord

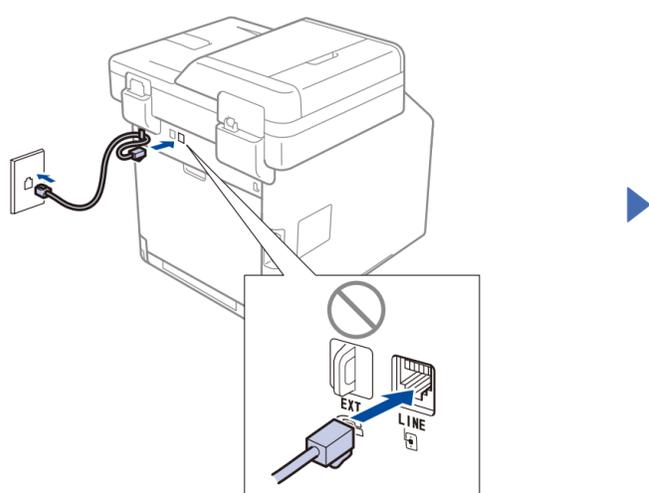


#### Set the date and time

- Press >
- Date**
1. Press Date.
  2. Enter the last two digits of the year using the numbers on the Touchscreen, and then press OK.
  3. Enter the two digits for the month using the Touchscreen, and then press OK.
  4. Enter the two digits for the day using the Touchscreen, and then press OK.
- Clock Type**
1. Press Clock Type.
  2. Press 12h Clock or 24h Clock.
- Time**
1. Press Time.
  2. Enter the two digits for the time using the Touchscreen. (12h Clock only)  
Press to select AM or PM.
  3. Press OK.
  4. Press .


**NOTE:**

- To configure the machine for faxing, see the *Basic User's Guide*.
- Your machine is programmed to automatically receive faxes. To change this default mode, see the *Basic User's Guide*.



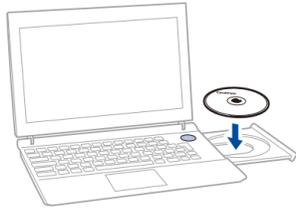

Follow the on-screen instructions until the **Connection Type** screen appears.

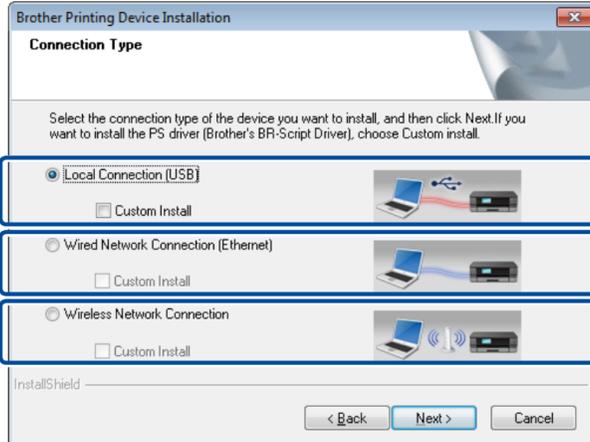

For USB Connection

For Wired Network Connection  
Connect a network cable first.

For Wireless Network Connection

Follow the on-screen instructions to continue the installation.


**Finish**

**NOTE:**

If connection is unsuccessful, repeat this step.



### Wireless Network Connection

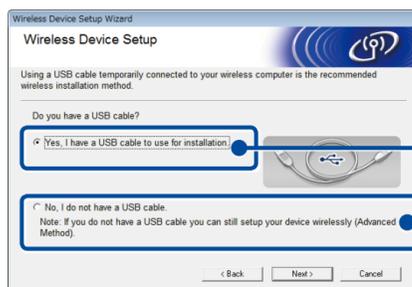

**[Recommended]**  
Temporarily use a USB cable  
for easy setup.

**[Option]**  
Select if you do not have a USB cable.

Follow the on-screen instructions to continue the installation.

**Finish**

**NOTE:**

If connection is unsuccessful, repeat this step.



## Configuration without using the CD-ROM (Windows® without CD-ROM drive or Macintosh)

 
Download the full driver and software package from the Brother Solutions Center.  
(For Windows®) [solutions.brother.com/windows](http://solutions.brother.com/windows)  
(For Macintosh) [solutions.brother.com/mac](http://solutions.brother.com/mac)



## Print using your mobile device

Print from your mobile devices using our free application "Brother iPrint&Scan".

1. Connect the machine and wireless LAN access point/router from the machine's Touchscreen.



Press **WiFi**.

Press **Setup Wizard**.

Press **Yes** to enable WLAN.

Select the specified SSID,  
and then enter the Network key.

2. Download "Brother iPrint&Scan" to start using your machine with mobile devices.  
[solutions.brother.com/ips](http://solutions.brother.com/ips)

**Finish**