 
Quick Setup Guide

The latest manuals are available at the Brother





Not all models are available in all countries.



Unpack the machine and check the components





(Pre-installed)



Inbox/Starter Toner Cartridge



AC Power Cord (only for certain models)



CD-ROM



Quick Setup Guide



Product Safety Guide

Read the Product Safety Guide first, then read this Quick Setup Guide for the correct installation procedure.

Manuals in Spanish for this model are available on the enclosed CD-ROM. (USA only) Manuales en Español para este modelo están disponibles en el CD-ROM incluido. (sólo en

NOTE:


- The components included in the box and the AC power plug may differ depending on your
- · You must purchase the correct interface cable for the interface you want to use. **USB** cable

We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 meters (6 feet).


Remove the packing materials and install the toner cartridge



Load paper in the paper tray

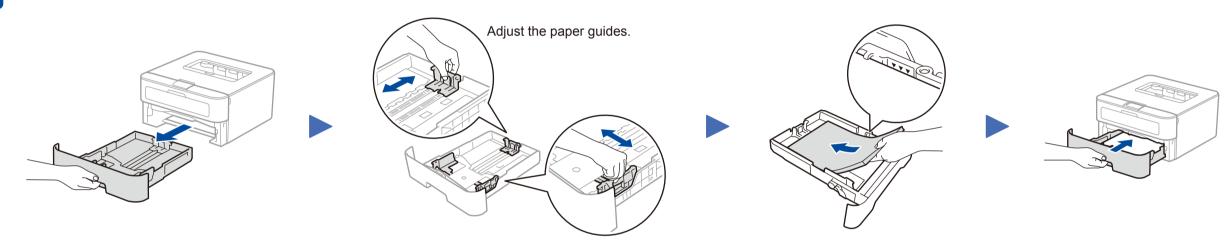

Connect the power cord and turn on the machine

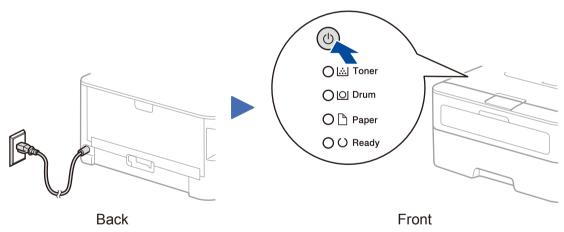


	ter LED Indications					Blinking: <mark>├</mark> ON: ● or ● OFF:		
	Toner Low ¹	Replace Toner	Drum End Soon ¹	Replace Drum	Drum! ²	Paper Jam / Cover is Open ²	No Pape	
Toner	- \.	•	0	0	0	0	0	
Drum	0	0	- ×-	•	- \ \.	0	0	
Paper	0	0	0	0	0	- ×-	0	
Ready		0			0	0	0	

2 The LED will blink ON and OFF at 0.5 second intervals.





Configuration using the CD-ROM (Windows®)

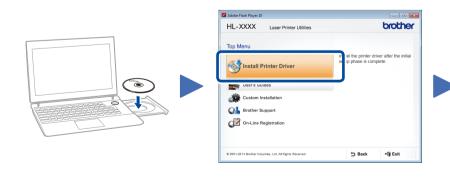


Follow the on-screen instructions until the Connect the machine screen appears.

NOTE:

start.exe.

If the Brother screen does not appear automatically, go to Computer (My Computer). (For Windows® 8: click the 🌅 (File Explorer) icon on the taskbar, and then go to Computer.) Double-click the CD-ROM icon, and then double-click

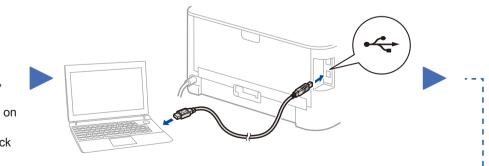



Follow the on-screen instructions to continue installation.



NOTE:

If connection is unsuccessful, repeat this step.





Configuration without using the CD-ROM (Windows® without CD-ROM drive or Macintosh)