Quick Setup Guide

A WARNING

<u>WARNING</u> indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.

 $\underline{\text{NOTE}}$ specifies the operating environment, conditions for installation, or special conditions of use. NOTE

Unpack the machine and check the components

- 1. Remove the protective tape and film covering the machine, and also from the Touchscreen.
- Make sure you have all components. The components included in the box may differ depending on your country.





Introductory Ink Cartridges [x4] Black Yellow



Paper Stopper



Quick Setup Guide Product Safety Guide



CD-ROM

USB Interface Cable



Maintenance Sheet



Telephone Line Cord

A WARNING

Plastic bags are used in the packing of your machine. To avoid the danger of suffocation, keep these plastic bags away from babies and children. Plastic bags are not toys.

- Save all packing materials and the box in case for any reason you must ship
- your machine.

 For a network connection you must purchase a network interface cable. Please use the supplied USB cable for a USB connection.

USB cable
We recommend using a USB 2.0 cable that is no more than 2 metres long.

Network cable
A network interface cable is not included. If you want to use a network interface cable, please purchase one separately.
Use a straight-through Category 5 (or greater) thisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.

Load plain A4 paper



Pull the paper tray completely



Fan the paper well and load it in the tray.



 


Pull out the paper support . and unfold the paper support flap 2




Connect power cord and telephone line cord

If you are not using your machine as a fax, connect the power cord and go to 3




Connect the power cord. Lift the scanner cover

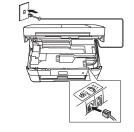


Connect the telephone line cord. Use the socket marked **LINE** and guide the cord out the back of the machine

NOTE

 If you are sharing one telephone line with an external telephone, connect it as shown below.



Extension telephoneExternal telephone

 


Close the scanner cover.




Install introductory ink cartridges



 You can adjust the angle of the control panel by lifting it.



Open the ink cartridge cover 1

 

Follow the Touchscreen instructions to install the ink cartridges. The machine will prepare the ink tube system for printing.



Machine Settings

When the machine has finished the initial cleaning process, follow the Touchscreen instructions to configure the machine

- · Check print quality
- Set date and time
 Print the installation sheet




Choose your language (if needed)


- 1. Press 🖺 (Settings).
- 2. Press All Settings
- Press ▲ or ▼ to display Initial Setup.
- Press ▲ or ▼ to display Local Language.
- 5. Press your language.
- 6. Press .




Choose your method

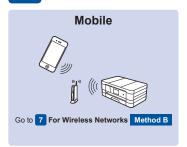



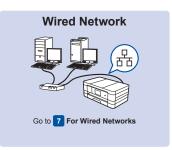

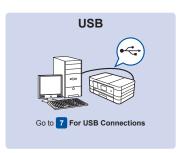





Connect to your device and install software



For Wireless Networks

To connect additional computers, repeat Method A for each computer

Method A Setup from the computer

Make sure that you are logged on with Administrator rights.



Put the CD-ROM into your CD-ROM drive. If you do not have a CD-ROM drive, download the www.95105369.com

(Windows®)



Follow the on-screen instructions to continue installation.

 
A USB cable may be needed in some cases.



Method B Manual setup using the Setup Wizard

■ Set up your machine

 Write your wireless access point/router information in the area below. This information may be hidden on the bottom of the wireless access point/router. If you cannot find it, ask your network administrator or wireless access point/router manufacturer



2. Press WiFi on your Brother machine's Touchscreen, and then press

 
When Switch Network interface to wireless? is displayed, press Yes.

- 3. Select the SSID you wrote down in 1. Press OK.
- If the machine prompts you to enter a Network Key, enter the key you wrote down in 1. Press ${\tt o}{\tt K}.$
- Press Yes to apply your settings

■ Install Brother iPrint&Scan



You can print from and scan to mobile devices using our free application





Make sure that you are logged on with Administrator riahts.



Put the CD-ROM into your CD-ROM drive. If you do not have a CD-ROM drive, download the software at: www.95105369.com





Macintosh

Finish

Finish

Follow the on-screen instructions to continue installation.

口 白白

For Wired Networks

To connect additional computers, repeat this procedure for each computer.

■ Connect the network cable

■ Install MFL-Pro Suite





Make sure that you are logged on with Administrator rights.

Put the CD-ROM into your CD-ROM drive. If you do not have a CD-ROM drive, download the software at:

www.95105369.com





Macintosh

Finish

Follow the on-screen instructions to continue installation.



For USB Connections

■ Install MFI -Pro Suite



Make sure that you are logged on with Administrator rights.

Put the CD-ROM into your CD-ROM drive. If you do not have a CD-ROM drive, download the software at: www.95105369.com



Follow the on-screen

Connect the USB cable

 


Follow the on-screen installation.



Finish

■ Connect the USB cable



■ Install MFL-Pro Suite



Make sure that you are logged on with Administrator rights.

Put the CD-ROM into your CD-ROM drive. If you do not have a CD-ROM drive, download the software at: www.95105369.com



to continue installation

Internet access is required.
Follow the on-screen instructions