



Unpack the machine and check the components

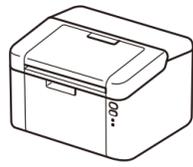

Watch our FAQ Videos for help with setting up your Brother machine:
solutions.brother.com/videos.



 Inbox/Starter Toner Cartridge



A5 Long Edge Paper Input Support



CD-ROM

Read the Product Safety Guide first, then read this Quick Setup Guide for the correct installation procedure.

NOTE:

- The components included in the box and the AC power plug may differ depending on your country.
- The available connection interfaces vary depending on the model.
- The illustrations in this Quick Setup Guide are based on the HL-1210W or HL-1212W.
- You must purchase the correct interface cable for the interface you want to use.


USB cable

We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 metres (6 feet) long.


Secure Network Access

Your machine's default password is on the label on the back of the machine (preceded by "Pwd"). We strongly recommend you change it to protect your machine from unauthorised access.


1 Remove the packing materials and install the toner cartridge

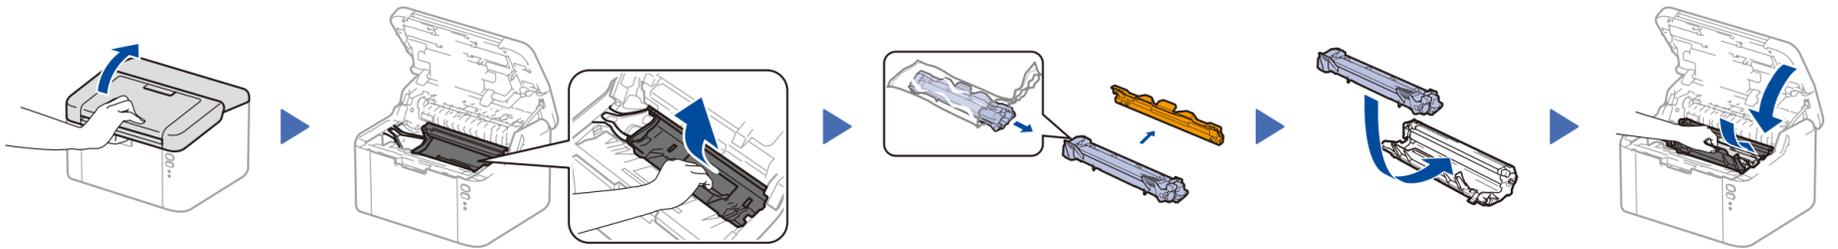

2 Load paper in the paper tray

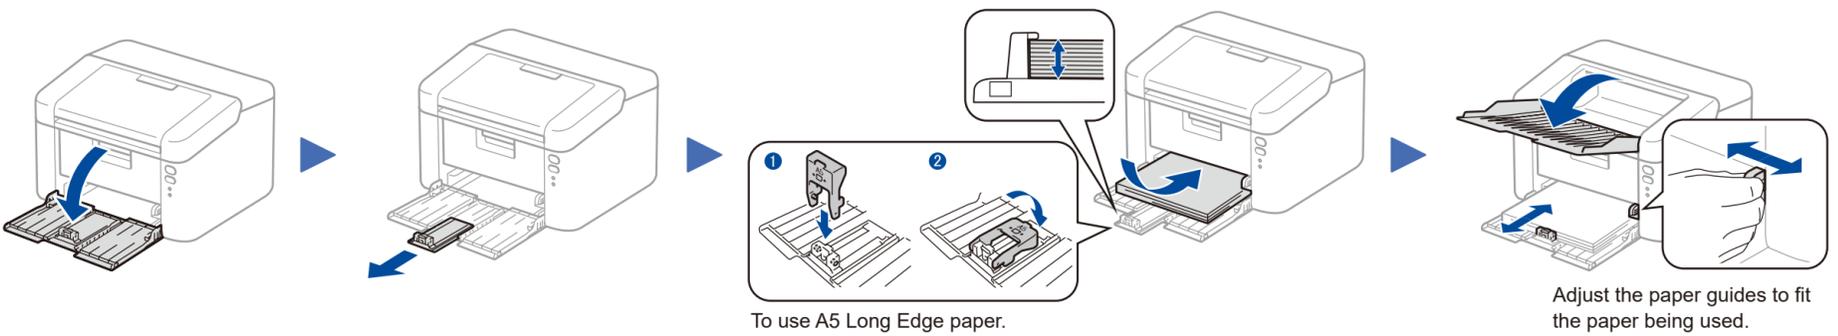

3 Connect the power cord and turn on the machine

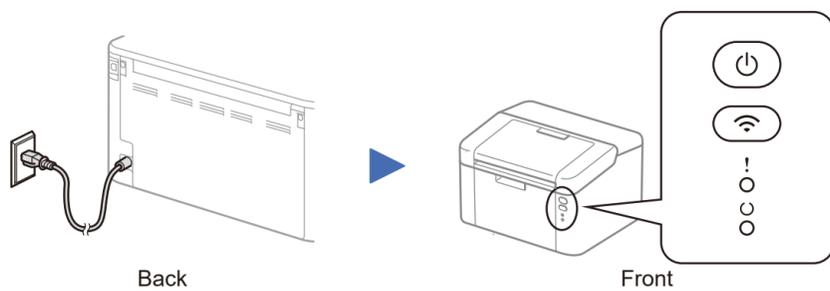

Printer LED Indications


Blinking: ☀ or 🌱 ON: ● OFF: ○

	POWER OFF	READY	SLEEP DEEP SLEEP	WARMING UP COOLING DOWN	RECEIVING DATA DATA REMAINING	TONER LOW	REPLACE TONER	PAPER JAM	DRUM END SOON REPLACE DRUM
!	○	○	○	○	○	☀ ○	☀ ○	☀ ☀ ○	☀ ☀ ☀ ○
○	○	●	● Dimmed	🌱 1 second interval	🌱 0.5 second interval	●	○	○	●


4 Connect the machine to your computer/mobile device

- Windows® PC with a CD-ROM drive, go to step **4A**
- Windows® PC without a CD-ROM drive, go to step **4B**
- Macintosh, go to step **4B**
- Mobile device users with a WPS/AOSS™-supported access point/router, go to step **4C**

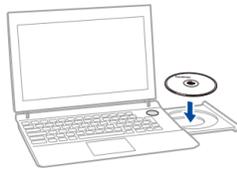


**NOTE:**

If the Brother screen does not appear automatically, go to **Computer (My Computer)**.
(For Windows® 8: click the (File Explorer) icon on the taskbar, and then go to **Computer**.)
Double-click the CD-ROM icon, and then double-click **start.exe**.

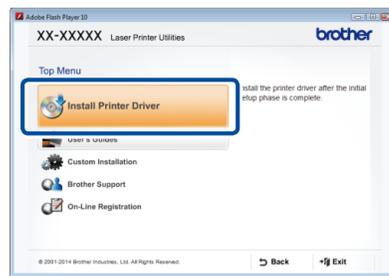

Follow the on-screen instructions until the **Connection Type** screen appears.

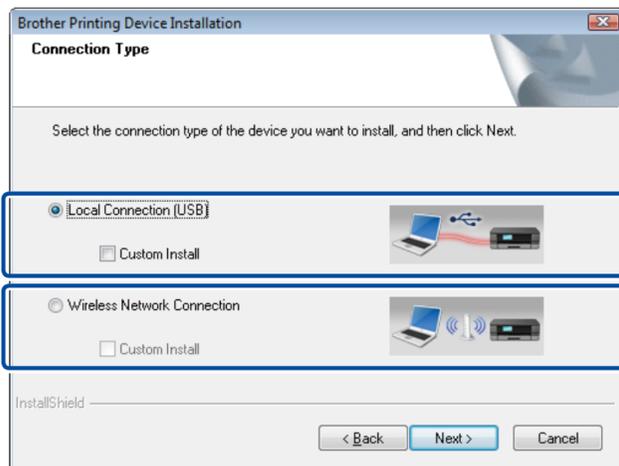Connection Type


For USB Connection

For Wireless Network Connection
We recommend preparing a USB cable to use temporarily during the wireless setup.

Follow the on-screen instructions to continue installation.

Finish**NOTE:**

If connection is unsuccessful, repeat this step.

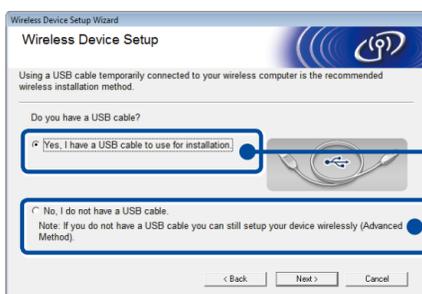**Wireless Network Connection****[Recommended]**

Select this option if you have a USB cable to use temporarily for wireless setup.

Select this option if you do not have a USB cable.

Follow the on-screen instructions to continue installation.

Finish**NOTE:**

If connection is unsuccessful, repeat this step.



Download the full driver and software package from the Brother Solutions Center.

(For Windows®) solutions.brother.com/windows

(For Macintosh) solutions.brother.com/mac


After you download the driver and software package, follow the on-screen instructions until the **Connection Type** screen appears. Refer to **4A Configuration using the CD-ROM (Windows®)**.



If your wireless LAN access point/router supports automatic wireless (one-push) setup (WPS/AOSS™), you can set up your machine without using a computer.



Press the WPS or AOSS™ button on your wireless LAN access point/router.

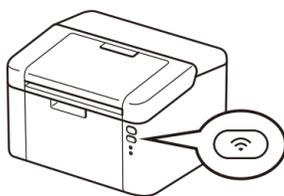

Press and hold the WiFi button on your machine for about 2 seconds. The WiFi button will light up when connected.

Wireless setup is now complete.

NOTE:

Before you can use your machine with your mobile device, download "Brother iPrint&Scan."

**Print using your mobile device**

Download "Brother iPrint&Scan" to start using your machine with mobile devices.



solutions.brother.com/ips