 



Quick Setup Guide



Unpack the machine and check the components



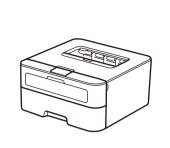

Inbox Toner Cartridge





Quick Setup Guide



CD-ROM

USB Interface Cable



Read the Product Safety Guide first, then read this Quick Setup Guide for the correct installation procedure.

NOTE:

USB cable

We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 meters.

Network cab

Use a straight-through Category 5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.

Secure Network Access


Your machine's default password is on the label on the back of the machine (preceded by "Pwd")

We strongly recommend you change it to protect your machine from unauthorised access.


1 Remove the packing materials and install the toner cartridge



2 Load paper in the paper tray

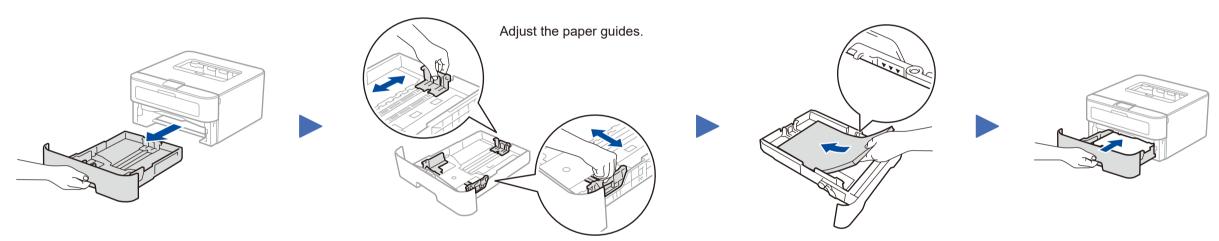

3 Connect the power cord and turn on the machine

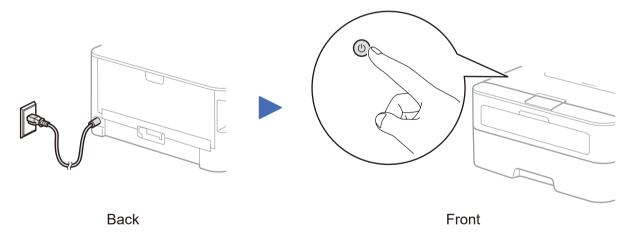




Connect the machine to your computer/mobile device

- Windows® PC with a CD-ROM drive, go to step 4A
- Windows® PC without a CD-ROM drive, go to step 4B
- Macintosh, go to step 4B





Configuration using the CD-ROM (Windows®)

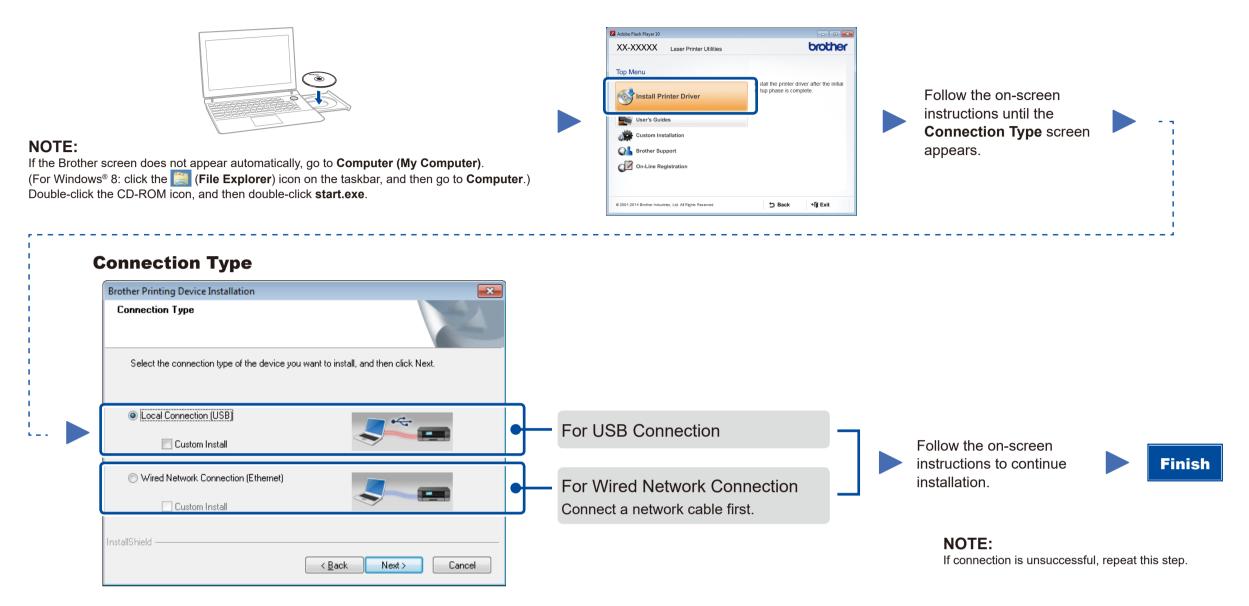





Configuration without using the CD-ROM (Windows® without CD-ROM drive or Macintosh)

Download the full driver and software package from the Brother Solutions Center. (For Windows®) solutions.brother.com/windows (For Macintosh) solutions.brother.com/mac

After you download the driver and software package, follow the on-screen instructions until the **Connection Type** screen appears. Refer to **4A** *Configuration using the CD-ROM* (Windows®).



Print using your mobile device

Download "Brother iPrint&Scan" to start using your machine with mobile devices.



solutions.brother.com/ips