


Unpack the machine and check the components

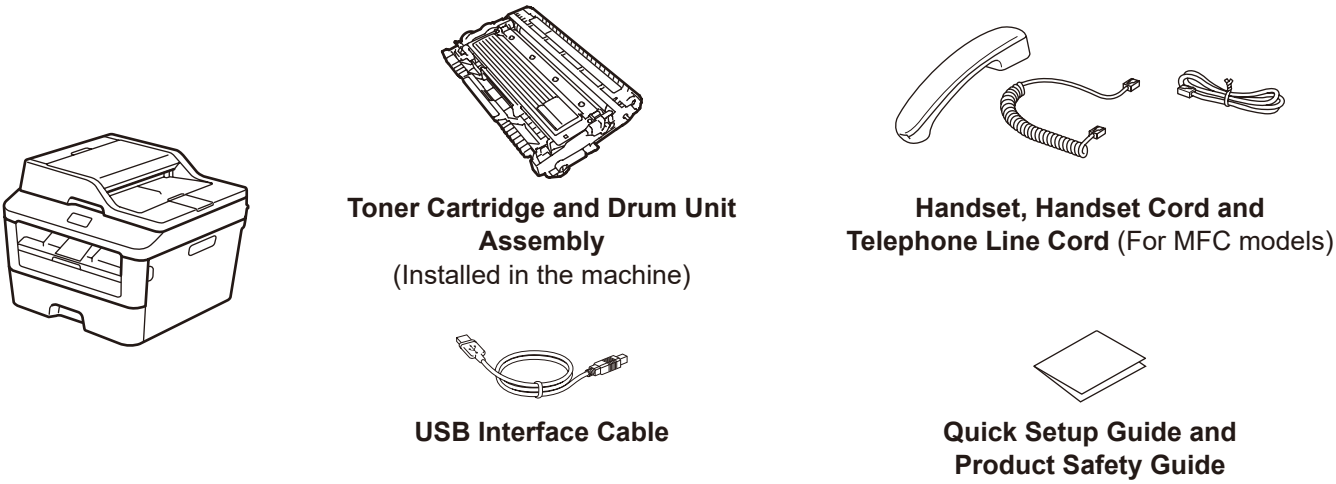

Read the Product Safety Guide first, then read this Quick Setup Guide for the correct installation procedure.

NOTE:

- The available connection interfaces vary depending on the model.
- The illustrations in this Quick Setup Guide are based on the MFC-7880DN.

USB cable

We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 meters long.


Network cable (DCP-7180DN / MFC-7880DN)

Use a straight-through Category 5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.


Secure Network Access

Your machine's default password is on the label on the back of the machine (preceded by "Pwd").
We strongly recommend you change it to protect your machine from unauthorised access.


1 Remove the packing materials and install the toner cartridge

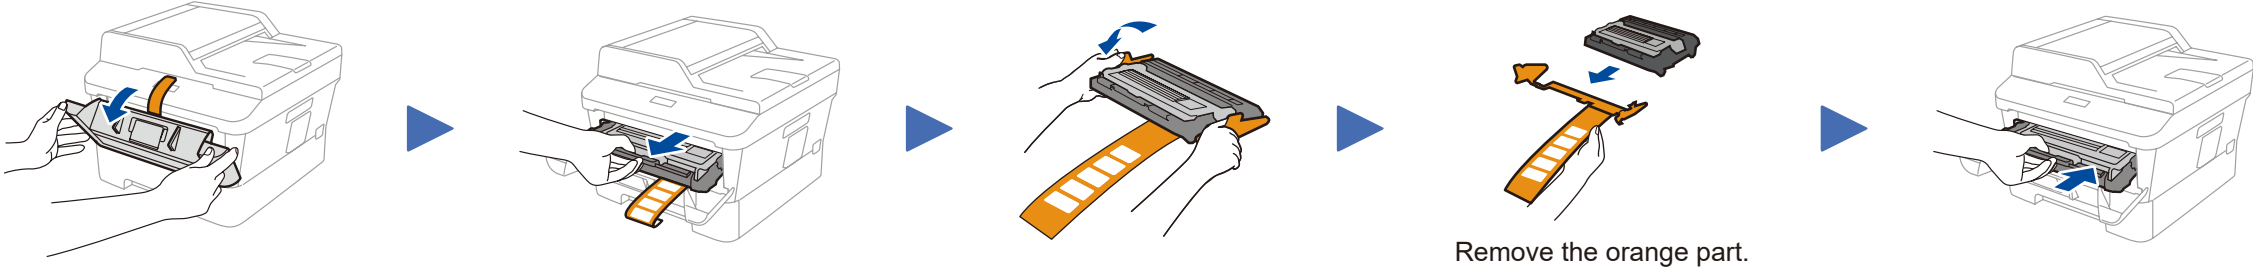

2 Load paper in the paper tray

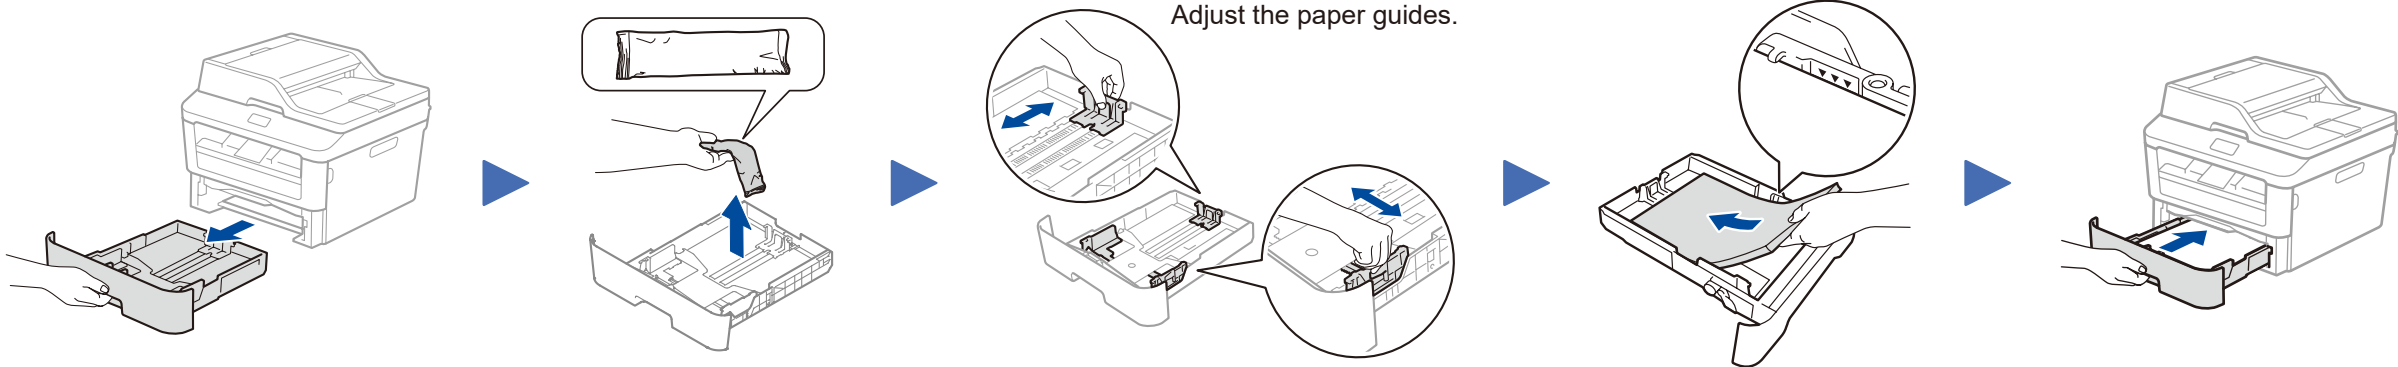


3 Connect the power cord and turn on the machine

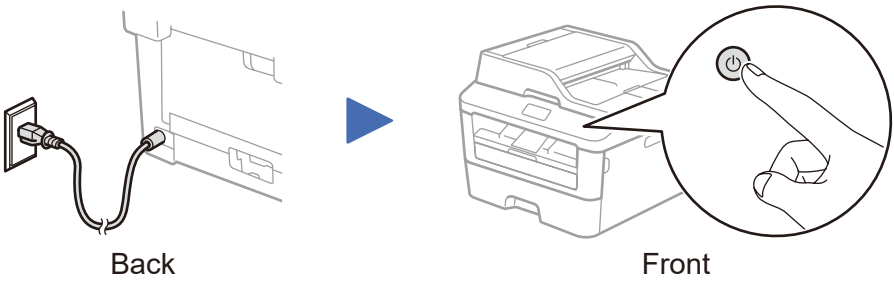

4 Configure the machine for faxing (for MFC models only)

If you do not plan to use the fax feature on this machine, go to step 5.

Connect the telephone line cord

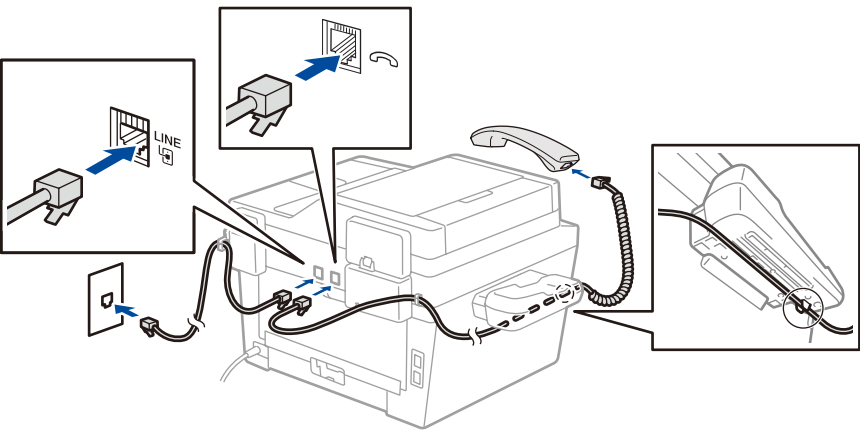

5

Connect the machine to your computer/mobile device

Download the full driver and software package from the Brother Solutions Center.
(For Windows®) solutions.brother.com/windows
(For Macintosh) solutions.brother.com/mac

Follow the on-screen instructions and prompts.



Setup Finished

You can now print and scan using your machine.

Important Notice for Network Security:
We recommend immediately changing the default password to protect your machine from unauthorized access. (For DCP-7180DN/MFC-7880DN only)