

Information for compliance with Commission Regulation 801/2013

Model Name: DCP-L8450CDW

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	1.7W	N/A	9min	N/A
USB	1.7W	0.0W	9min	69min
Wi-Fi	7.3W	N/A	9min	N/A
All network ports activated and connected	7.4W	N/A	9min	N/A

Model Name: MFC-L8650CDW, MFC-L8600CDW

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	1.8W	N/A	9min	N/A
USB	1.7W	N/A	9min	N/A
Wi-Fi	7.7W	N/A	9min	N/A
Telecom(FAX)	1.6W	N/A	9min	N/A
All network ports activated and connected	7.9W	N/A	9min	N/A

Model Name: MFC-L8850CDW


Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	2.0W	N/A	9min	N/A
USB	1.9W	N/A	9min	N/A
Wi-Fi	7.8W	N/A	9min	N/A
Telecom(FAX)	1.7W	N/A	9min	N/A
All network ports activated and connected	8.0W	N/A	9min	N/A

Model Name: MFC-L9550CDW

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	2.0W	N/A	9min	N/A
USB	1.9W	N/A	9min	N/A
Wi-Fi	7.8W	N/A	9min	N/A
NFC	1.8W	N/A	9min	N/A
Telecom(FAX)	1.7W	N/A	9min	N/A
All network ports activated and connected	8.0W	N/A	9min	N/A

How to enable/disable Wireless LAN

To turn on or off the wireless network connection, press the following buttons on your control panel or LCD.

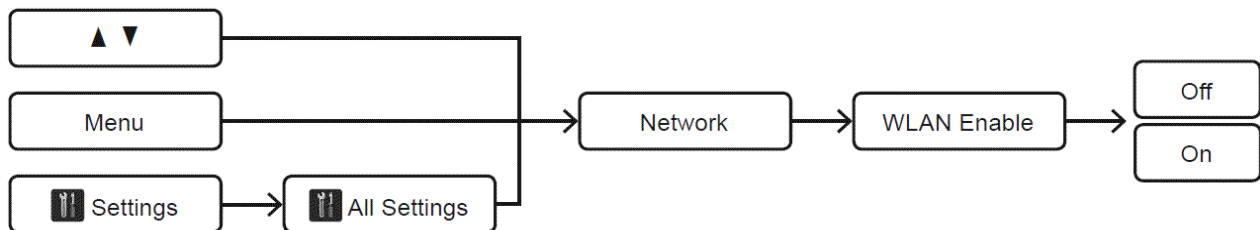

Note:

Depending on your machine, you may need to press the **OK** button to select the option. The message above may be slightly different from the actual message displayed.