

Information for compliance with Commission Regulation 801/2013

Model Name: DCP-J152W, DCP-J132W, DCP-J105, DCP-T500W, DCP-T700W

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
USB	0.7W	0.2W	5min	60min
Wi-Fi	1.3W	N/A	5min	N/A
All network ports activated and connected	1.4W	N/A	5min	N/A

Model Name: MFC-J200, MFC-T800W

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
USB	1.1W	0.2W	5min	60min
Wi-Fi	1.7W	N/A	5min	N/A
Telecom(FAX)	1.1W	N/A	5min	N/A
All network ports activated and connected	1.8W	N/A	5min	N/A

Model Name: MFC-J470DW

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
USB	1.1W	N/A	5min	N/A
Wi-Fi	1.7W	N/A	5min	N/A
Telecom(FAX)	1.1W	N/A	5min	N/A
All network ports activated and connected	1.8W	N/A	5min	N/A

How to enable/disable Wireless LAN

To turn on or off the wireless network connection, press **Menu > Network > WLAN Enable > On or Off**.

Note:

You need to press ▲ or ▼ and the **OK** button to select the option.

The message above may be slightly different from the actual message displayed.