

Information for compliance with Commission Regulation 801/2013

Model Name: HL-3140CW, HL-3142CW


Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
USB	0.6W	0.1W	9min	69min
Wi-Fi	0.9W	N/A	9min	N/A
All network ports activated and connected	1.0W	N/A	9min	N/A

Model Name: HL-3170CDW, HL-3172CDW, HL-3150CDW, HL-3152CDW

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	0.5W	N/A	9min	N/A
USB	0.6W	0.1W	9min	69min
Wi-Fi	0.9W	N/A	9min	N/A
All network ports activated and connected	1.0W	N/A	9min	N/A

How to enable/disable Wireless LAN

To turn on or off the wireless network connection, press the following buttons on your control panel or LCD.

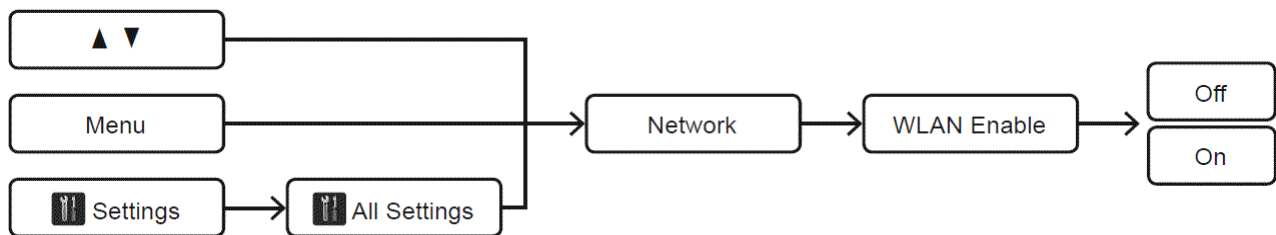

Note:

Depending on your machine, you may need to press the **OK** button to select the option. The message above may be slightly different from the actual message displayed.