
brother

Basic User's Guide

MFC-T800W

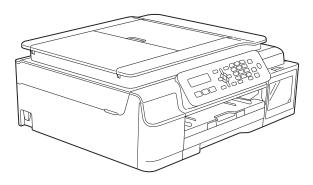



If you need to contact Customer Service
Please complete the following information for future reference:
Model Number: MFC-T800W
Serial Number: ¹
Date of Purchase:
Place of Purchase:
¹ The serial number is on the back of the unit. Retain this User's Guide with your sales receipt as a permanent record of your purchase, in the event of theft, fire or warranty service.

Register your product online at

http://www.brother.com/registration

User's Guides and where do I find them?

Which Guide?	What's in it?	Where is it?
Product Safety Guide	Read this Guide first. Please read the Safety Instructions before you set up your machine. See this Guide for trademarks and legal limitations.	Printed / In the box
Quick Setup Guide	Follow the instructions for setting up your machine and installing the drivers and software for the operating system and connection type you are using.	Printed / In the box
Basic User's Guide	Learn the basic Fax, Copy and Scan operations and how to replace supplies. See troubleshooting tips.	PDF file / CD-ROM (Windows [®]) / Brother Solutions Center ¹ (Macintosh)
Advanced User's Guide	Learn more advanced operations: Fax, Copy, security features, printing reports and performing routine maintenance.	PDF file / CD-ROM (Windows [®]) / Brother Solutions Center ¹ (Macintosh)
Software and Network User's Guide	This Guide provides instructions for Scanning, Printing, PC-Fax and other operations that can be performed by connecting your Brother machine to a computer. You can also find useful information about using the Brother ControlCenter utility, using your machine in a network environment, and frequently used terms.	HTML / CD-ROM (Windows [®]) / Brother Solutions Center ¹ (Macintosh)
Google Cloud Print Guide	This Guide provides details on how to use Google Cloud Print™ services for printing over the Internet.	PDF file / Brother Solutions Center ¹
Mobile Print/Scan Guide for Brother iPrint&Scan	This Guide provides useful information about printing from your mobile device and scanning from your Brother machine to your mobile device when connected to a Wi-Fi network.	PDF file / Brother Solutions Center ¹

¹ Visit us at <u>solutions.brother.com/manuals</u>.

Table of Contents (Basic User's Guide)

1 General information

Using the documentation	1
Symbols and conventions used in the documentation	
About Brother Utilities (Windows [®])	2
Accessing the Advanced User's Guide and Software and	
Network User's Guide	3
Viewing User's Guides	3
How to access Guides for Advanced Features	4
Accessing Brother Support (Windows [®])	5
Accessing Brother Support (Macintosh)	5
Control panel overview	6
Basic Operations	8
Volume Settings	
Ring Volume	
Beep Volume	
Speaker Volume	9
LCD display	10
LCD Contrast	

2 Loading paper

adilig paper	11
Loading paper and other print media	
Loading envelopes	
Unprintable area	
Paper settings	
Paper Type	
Paper Size	
Acceptable paper and other print media	

1

11

20

23

3 Loading documents

How to load documents	
Using the ADF	20
Using the scanner glass	21
Unscannable area	

Recommended print media18Handling and using print media18Choosing the right print media19

4 Sending a fax

How to send a fax	
Stop faxing	
Setting scanner glass size for faxing	
Cancelling a fax in progress	
Transmission Verification Report	25

5 Receiving a fax

26
26
27
27
27
27
27
28
28
28
29

6 Telephone and external devices

Voice operations	
Tone or Pulse (Not Available for New Zealand and South Africa)	
Fax/Tel mode	30
Telephone Service for Australia	
Distinctive Ring	
Caller ID	31
How Does the Caller ID Work?	32
The Caller ID is Stored in Your Machine Memory	32
Telephone Service for New Zealand	33
FaxAbility	33
Caller ID.	34
How Does the Caller ID Work?	35
Telephone services for South Africa	
Setting the Telephone Line Type	
Telephone Service for Some Countries	37
Distinctive Ring (For Singapore and Hong Kong)	37
Caller ID (For Singapore and Hong Kong)	
(Not available for Taiwan and some countries)	
Voice over Internet Protocol (VoIP)	39
Connecting an external TAD (telephone answering device)	40
Connection settings	41
Recording an outgoing message (OGM) on an external TAD	41
Multi-line connections (PABX)	41
External and extension telephones	42
Connecting an external or extension telephone	42
Operation from external and extension telephones	42
Using a cordless external telephone	42
Using remote codes	43

26

30

7	Dialling and storing numbers	44
	How to dial	44
	Manual dialling	44
	Speed Dialling	44
	Fax Redial	
	Storing numbers	
	Storing a pause	
	Storing Speed Dial numbers	
	Changing and deleting Speed Dial numbers	46
8	Making copies	47
	How to copy	47
	Stop copying	47
	Copy options	48
	Paper Type	48
	Paper Size	48
9	How to print from a computer	49
	Printing a document	49
10	How to scan to a computer	50
	Before scanning	50
	Scanning a document as a PDF file using ControlCenter4 (Windows [®])	
	How to change the machine's SCAN mode settings for PDF scanning using	
	ControlCenter4 (Windows [®])	54
	How to scan a document as a PDF file using the control panel	
	(Windows [®] and Macintosh)	56
Α	Routine maintenance	57
	Refilling the ink tanks	57
	Cleaning and checking the machine	
	Cleaning the scanner glass	
	Cleaning the print head	61
	Checking the print quality	61
	Checking the print alignment	
	Setting the date and time	63

B Troubleshooting

Identifying your problem	64
Error and maintenance messages	
Transferring your faxes or Fax Journal report	74
Document jam	75
Printer jam or paper jam	76
If you are having difficulty with your machine	
Dial Tone detection	
Telephone line interference / VoIP	
Machine Information	97
Checking the serial number	97
Checking the firmware version	97
Reset functions	97
How to reset the machine	97

C Settings and features tables

Using the Settings tables	
Menu keys	
Menu table	
Entering Text	
Inserting spaces	
Making corrections	
Repeating letters	
Special characters and symbols	117

D Specifications

98

General Print media	-
Fax	
Сору	122
Scanner	123
Printer	124
Interfaces	125
Network	-
Computer requirements	
Supply Specifications	

E Index

64

V

Table of Contents (Advanced User's Guide)

The Advanced User's Guide explains the following features and operations.

You can view the Advanced User's Guide on the CD-ROM.

1 General setup

Memory Storage Setting Daylight Saving Time (MFC models only) (Not available in South Africa) Automatic Daylight Saving Time (MFC models only) (For South Africa only) Sleep Mode LCD Mode Timer (MFC models only)

2 Security features (MFC models only)

TX Lock

3 Sending a fax (MFC models only)

Additional sending options Additional sending operations

4 Receiving a fax (MFC models only)

Memory Receive Additional receiving operations

5 Dialling and storing numbers (MFC models only)

Additional dialling operations Additional ways to store numbers

6 Printing reports

Fax reports (MFC models only) Reports

7 Making copies

Copy options

A Routine maintenance

Cleaning and checking the machine Packing and shipping the machine

B Glossary

C Index

1

General information

Using the documentation

Thank you for buying a Brother machine! Reading the documentation will help you make the most of your machine.

Symbols and conventions used in the documentation

The following symbols and conventions are used throughout the documentation.

- **Bold** Bold typeface identifies specific buttons on the machine's control panel, or on the computer screen.
- Italics Italicized typeface emphasizes an important point or refers you to a related topic.
- CourierText in the Courier New fontNewidentifies messages on theLCD of the machine.

<u>CAUTION</u> indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.

IMPORTANT

<u>IMPORTANT</u> indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product functionality.

NOTE

<u>NOTE</u> specifies the operating environment, conditions for installation, or special conditions of use.

About Brother Utilities (Windows[®])

Brother Utilities is an application launcher that offers convenient access to all Brother applications installed on your device.

T (Windows[®] XP, Windows Vista[®], Windows[®] 7, Windows Server[®] 2003 and Windows Server[®] 2008)

Click 🚱 (Start) / All Programs /

Brother, and **Retain (Brother Utilities)**.

(Windows[®] 8 and Windows Server[®] 2012)

- Tap or click 72 (Brother Utilities) either on the Start screen or the desktop.
- (Windows[®] 8.1 and Windows Server[®] 2012 R2)

Move your mouse to the lower left

corner of the Start screen and click ((if you are using a touch-based device, swipe up from the bottom of the Start screen to bring up the Apps screen). When the Apps screen appears, tap or



click **[]]** (Brother Utilities).

Select your machine. 2



Choose the function you want to use.

Accessing the Advanced User's Guide and Software and Network User's Guide

This Basic User's Guide does not contain all the information about the machine, such as how to use the advanced Fax, Copy, Printer, Scanner, PC-Fax, and Network features. When you are ready to learn detailed information about these operations, you can read the **Advanced User's Guide** and **Software and Network User's Guide** in HTML format.

Viewing User's Guides

(Windows[®])

Launch **The Import In the Import In the Import Impo**

If you have not installed the software, you can find the documentation on the CD-ROM by following these instructions:

Turn on your PC. Insert the Brother CD-ROM into your CD-ROM drive.

NOTE

If the Brother screen does not appear, go to **Computer** or **My Computer**. (For

Windows[®] 8 / Windows Server[®] 2012 / Windows Server[®] 2012 R2: Click

(File Explorer) on the taskbar, and

then go to **Computer** (**This PC**).) Double-click the CD-ROM icon, and then double-click **start.exe**.

2

If the model name screen appears, click your model name.

If the language screen appears, click your language. The CD-ROM **Top Menu** will appear.

Adobe Flash Player 10	
Multi-Function Center	brothe
Top Menu	
Install MFL-Pro Suite Ful Driver & Software Package (Includes Wireless Network Selup)	
User's Guides	
Custom Installation	
GA Brother Support	
On-Line Registration	
8 2001-2014 Brother Industries, Ltd. A8 Rights Reserved.	5 Back +

- Click User's Guides.
- 5 Click **User's guides on the CD-ROM**. If the country screen appears, choose your country. After the list of User's Guides appears, choose the guide you want to read.

(Macintosh)

Visit Brother Solutions Center: solutions.brother.com/manuals.

How to find Scanning instructions

There are several ways you can scan documents. You can find the instructions as follows:

Software and Network User's Guide

- Scan
- ControlCenter

Nuance™ PaperPort™ 12SE How-to-Guides (Windows[®]) (Not available in Taiwan)

■ The complete Nuance[™] PaperPort[™] 12SE How-to-Guides can be viewed from the Help section in the PaperPort[™] 12SE application.

Presto! PageManager User's Guide (Windows[®]) (Taiwan only)

Instructions for scanning directly from Presto! PageManager. The complete Presto! PageManager User's Guide can be viewed from the Help selection in the Presto! PageManager application.

Presto! PageManager User's Guide (Macintosh)

NOTE

Presto! PageManager must be downloaded and installed before use. For more information, see *Accessing Brother Support (Macintosh)* on page 5.

The complete Presto! PageManager User's Guide can be viewed from the Help section in the Presto! PageManager application.

How to find Network setup instructions

Your machine can be connected to a wireless network.

- Basic setup instructions (See Quick Setup Guide.)
- The wireless access point or router supports Wi-Fi Protected Setup™ or AOSS™ (See Quick Setup Guide.)
- More information about network setup (See Software and Network User's Guide.)

How to access Guides for Advanced Features

You can view and download these Guides from the Brother Solutions Center at: solutions.brother.com/manuals.

Click **Manuals** on your model's page to download the documentation.

Google Cloud Print Guide

This Guide provides details on how to use Google Cloud Print[™] services for printing over the Internet.

Mobile Print/Scan Guide for Brother iPrint&Scan

This Guide provides useful information about printing from your mobile device and scanning from your Brother machine to your mobile device when connected to a Wi-Fi[®] network.

Accessing Brother Support (Windows[®])

You can find all the contacts you will need, such as web support (Brother Solutions Center) on the CD-ROM.

Click Brother Support on the Top Menu. The following screen will appear:

Multi-Function Center	brother
Top Menu ≪	
Brother Support	
Brother Home Page	
Brother Solutions Center	
Supplies Information	
Brother CreativeCenter	

- To access our website (<u>http://www.brother.com</u>), click
 Brother Home Page.
- For the latest news and product support information (<u>http://support.brother.com</u>), click Brother Solutions Center.
- To visit our website for original Brother Supplies (<u>http://www.brother.com/original</u>), click Supplies Information.
- To access the Brother CreativeCenter (<u>http://www.brother.com/creativecenter</u>) for FREE photo projects and printable downloads, click Brother CreativeCenter.
- To return to the top menu, click Back or if you have finished, click Exit.

Accessing Brother Support (Macintosh)


You can find all the contacts you will need, such as web support (Brother Solutions Center) on the CD-ROM.

Double-click the Brother Support icon. The following screen will appear:

Brother Support	
	Presto! PageManager
	On-Line Registration
	Brother Solutions Center
	Supplies Information

- To download and install Presto! PageManager, click
 Presto! PageManager.
- To register your machine from the Brother Product Registration Page (<u>http://www.brother.com/registration</u>), click **On-Line Registration**.
- For the latest news and product support information (<u>http://support.brother.com</u>), click Brother Solutions Center.
- To visit our website for original Brother Supplies (<u>http://www.brother.com/original</u>), click Supplies Information.

Control panel overview

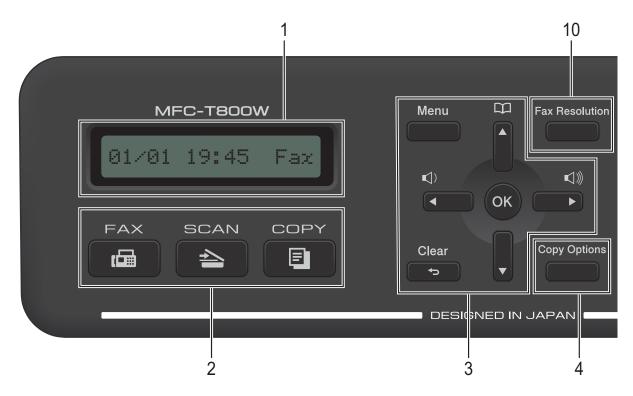

1 LCD (Liquid Crystal Display)

Displays messages on the screen to help you set up and use your machine.

2 Mode keys:

FAX

Lets you access the Fax mode.

SCAN

Lets you access the Scan mode.

COPY

Lets you access the Copy mode.

3 Menu keys:

 $\blacksquare (\mathbf{a}) (\mathbf{a}$

While the machine is idle, you can press these keys to adjust the ring volume.

Lets you store, look up, and dial numbers that are stored in the memory.

■ < or >

Press \triangleleft or \triangleright to move the selected area left or right on the LCD.

■ ▲ or ▼

Press \blacktriangle or \blacktriangledown to scroll through the menus and options.

Menu

Access the main menu.

Clear


Press to delete characters or to go back to the previous menu level.

OK

Lets you choose a setting.

4 Copy Options

Lets you temporarily change the copy settings when in copy mode.

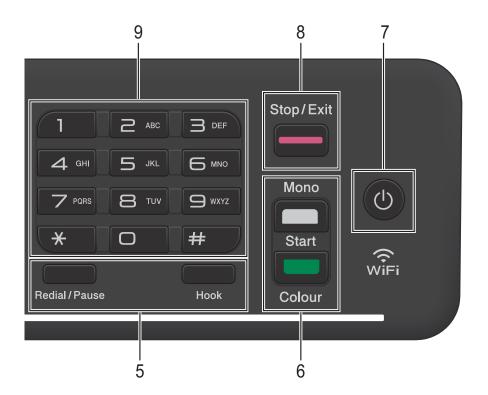

5 Telephone keys:

Redial/Pause

- Redials the last number called. It also inserts a pause when dialling.
- **Hook** (Not available for South Africa) Press before dialling when you want to listen to make sure a fax machine has answered, and then press Mono Start. Also, press this key after picking up the handset of the external telephone during the F/T pseudo/double-ring.
- Tel/R (For South Africa only) This key is used to have a telephone conversation after picking up the external handset during the F/T Ring (fast double-ring).

Also, when connected to a PBX, you can use this key to gain access to an outside line or to transfer a call to another extension.

6 Start keys:

Mono Start

Lets you start sending faxes or making copies in monochrome. Also lets you start a scanning operation (in colour or mono depending on the scan setting in the ControlCenter software).

Colour Start

Lets you start making copies in full colour. Also lets you start a scanning operation (in colour or mono, depending on the scan setting in the ControlCenter software).

7 **Power On/Off**



to turn on the machine.

Press and hold down () to turn off the

machine. The LCD will show Shutting Down and will stay on for a few seconds before turning off.

If you have connected an external telephone or TAD, it is always available.

If you turn off the machine using (), it will still



periodically clean the print head to maintain print quality. To prolong the life of the print head, provide better ink efficiency and maintain print quality, you should keep your machine connected to the power at all times.

Stop/Exit

8

Stops an operation or exits the menu.

9 Dial Pad

Use these keys to dial telephone and fax numbers and as a keyboard for entering information into the machine.

10 Fax Resolution

Lets you temporarily change the resolution when sending a fax.

Basic Operations

The following steps show how to change a setting in the machine. In this example, the Receive Mode setting is changed from Fax Only to Fax/Tel.

1	Press (FAX).
2	Press Menu, 3, 1, 1.
	(Fax Only
	Select AV & OK
3	Press ▲ or ▼ to choose Fax/Tel.
	(Fax/Tel
4	Press OK.
	Accepted
NO	те
	Press Clear if you want to go back to the previous level.
5	Press Stop/Exit.

Volume Settings

Ring Volume

You can choose from a range of ring volume levels, from High to Off.

While the machine is idle, press $\triangleleft 4$ or $\blacktriangleright \triangleleft 3$ to adjust the volume level. The LCD shows the current setting, and each key press will change the volume to the next level. The machine will keep the new setting until you change it.

You can also change the volume through the menu, by following the instructions below:

Setting the Ring Volume

Press Menu, 2, 4, 1.

2 Press ▲ or ▼ to choose Low, Med, High or Off. Press OK.

3 Press Stop/Exit.

Beep Volume

When the beep is on, the machine will make a sound when you press a key, make a mistake, or after you send or receive a fax.

You can choose from a range of sound volume levels.



Press Menu, 2, 4, 2.

Press ▲ or ▼ to choose Low, Med, High or Off. Press OK.



Press Stop/Exit.

Speaker Volume

You can choose from a range of speaker volume levels.

1 Press Menu, 2, 4, 3.

Press ▲ or ▼ to choose Low, Med, High or Off.

Press **OK**.

3 Press Stop/Exit.

(Not available for South Africa) You can also adjust the speaker volume by pressing **Hook**.



Press Hook.

Press (() ◀ or ► (())).

Each key press changes the volume to the next setting. This setting will stay until you change it again.



LCD display

LCD Contrast

You can adjust the LCD contrast for a sharper and more vivid display. If you are having difficulty reading the LCD, try changing the contrast setting.



1 Press Menu, 2, 5.

2 Press ▲ or ▼ to choose Light or Dark. Press OK.

3 Press Stop/Exit.

2

Loading paper


Loading paper and other print media

Load only one size of paper and one type of paper in the paper tray at any time.

(For more information about paper size, weight and thickness, see *Choosing the right print media* on page 19.)




Pull the paper tray completely out of the machine.

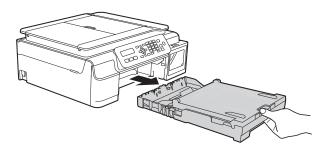

NOTE


• If the paper support flap (1) is open, close it, and then close the paper support (2).

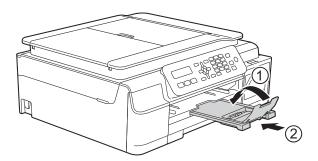


• When you load a different paper size in the tray, you will need to change the Paper Size setting in the menu of the machine at the same time.

(See Paper Size on page 17.)

2 Lift the output paper tray cover (1).

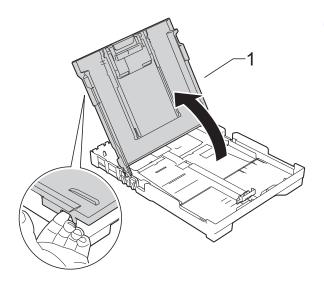


Gently press and slide the paper width guides (1) and then the paper length guide (2) to fit the paper size. Make sure that the triangular marks (3) on the paper width guides (1) and paper length guide (2) line up with the marks for the paper size you are using.

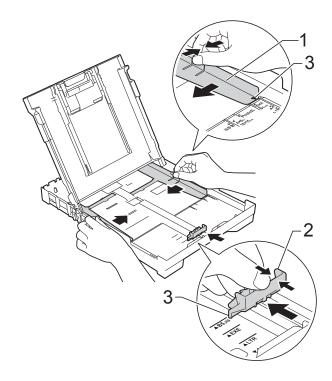


NOTE

When you are using Legal size paper, press and hold the universal guide release button (1) as you slide out the front of the paper tray. (Only available for some countries.)

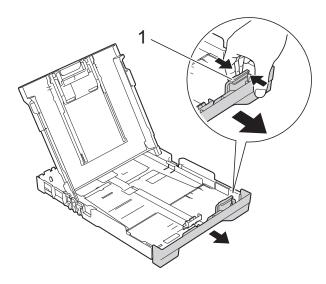


4 Fan the stack of paper well to avoid paper jams and misfeeds.

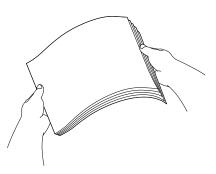

NOTE

Always make sure that the paper is not curled or wrinkled.

5 Gently put the paper into the paper tray print side down and top edge in first. Check that the paper is flat in the tray.

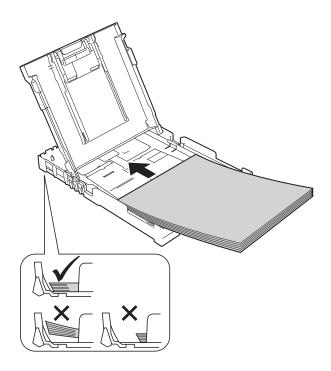


IMPORTANT

Be careful not to push the paper in too far; it may lift at the back of the tray and cause paper feed problems.

NOTE


If you want to add paper before the tray is empty, remove the paper from the tray and combine it with the paper you are adding. Always fan the stack of paper well before loading it in the tray. If you add paper without fanning the stack, the machine may feed multiple pages. 6 Gently adjust the paper width guides (1) to fit the paper.

Make sure the paper width guides lightly touch the sides of the paper.

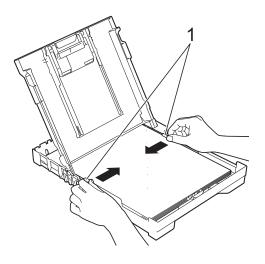





Close the output paper tray cover.

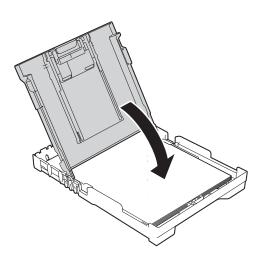

8 Slowly and firmly push the paper tray completely into the machine.

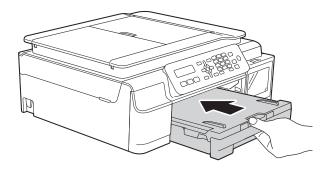

9 While holding the paper tray in place, pull out the paper support (1) until it locks into place, and then unfold the paper support flap (2).

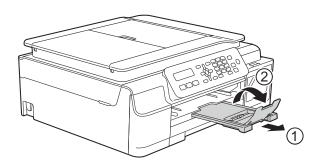

IMPORTANT

DO NOT use the paper support flap for Legal size paper. (Only available for some countries.)

Loading envelopes

About envelopes

- Use envelopes that weigh between 80 to 95 gsm.
- Some envelopes need margin settings to be set in the application. Make sure you do a test print first before printing multiple envelopes.

IMPORTANT

DO NOT use the following types of envelopes, as they will not feed correctly:

- That are of a baggy construction.
- · That have windows.
- That are embossed (have raised writing on them).
- That have clasps or staples.
- That are pre-printed on the inside.

Glue	Double flaps


Occasionally you may experience paper feed problems caused by the thickness, size and flap shape of the envelopes you are using.


Loading envelopes


Before loading, press the corners and sides of envelopes to make them as flat as possible.

IMPORTANT


If envelopes are "double-feeding", put one envelope in the paper tray at a time.

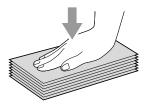

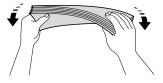

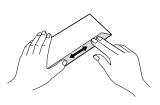

2 Put envelopes in the paper tray with the address side down. If the envelope flaps are on the long edge, load the envelopes in the tray with the flap on the left, as shown in the illustration. Gently press and slide the paper width guides (1) and paper length guide (2) to fit the size of the envelopes.

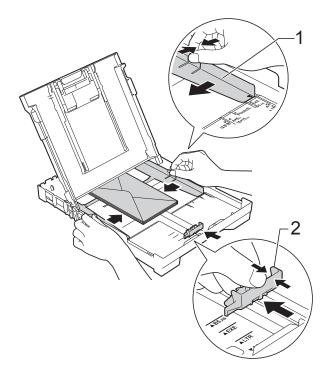


3 Select **Reverse Print** (Windows[®]) or **Reverse page orientation** (Macintosh) in the printer driver's dialog box, and then adjust the size and margins in your application.

(See Software and Network User's Guide.)

If you have problems printing on envelopes with the flap on the short edge, try the following:

- 1 Open the envelope flap.
- Put the envelope into the paper tray with the address side down and the flap positioned as shown in the illustration.

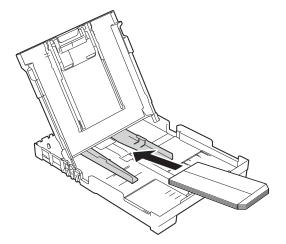

3 Select **Reverse Print** (Windows[®]) or **Reverse page orientation** (Macintosh) in the printer driver's dialog box, and then adjust the size and margins in your application.

(See Software and Network User's Guide.)

2


Unprintable area


The printable area depends on the settings in the application you are using. The figures show the unprintable areas on cut-sheet paper and envelopes. The machine can print in the shaded areas of cut-sheet paper when the Borderless print feature is available and turned on.

Envelopes

(See Software and Network User's Guide.)

Cut-Sheet Paper

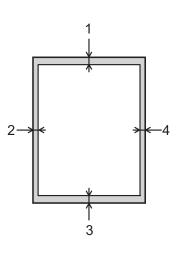

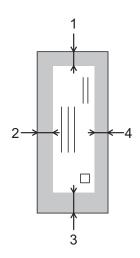

	Тор (1)	Left (2)	Bottom (3)	Right (4)
Cut-Sheet	3 mm	3 mm	3 mm	3 mm
Envelopes	22 mm	3 mm	22 mm	3 mm

NOTE

The Borderless print feature is not available for envelopes and 2-sided printing.

Paper settings

Paper Type

To get the best print quality, set the machine for the type of paper you are using.

Press Menu, 2, 2.

Press ▲ or ▼ to choose Plain Paper, Inkjet Paper, Brother BP71or Other Glossy.
Press OK.

Press Stop/Exit.

NOTE

The machine ejects paper with the printed surface face up onto the paper tray at the front of the machine. When you use glossy paper, remove each sheet at once to prevent smudging or paper jams.

Paper Size

You can use the following sizes of paper for copies: A4, A5, Photo $(10 \times 15 \text{ cm})$, Letter and Legal ¹. You can use the following sizes of paper for printing faxes: A4, Letter and Legal ¹. When you change the size of paper you load in the machine, you will need to change the Paper Size setting at the same time so your machine can fit an incoming fax on the page.



Press Menu, 2, 3.

Press ▲ or ▼ to choose A4, A5, 10x15cm, Letter or Legal¹. Press OK.



Press Stop/Exit.

¹ Only available for some countries.

Acceptable paper and other print media

The print quality can be affected by the type of paper you use in the machine.

To get the best print quality for the settings you have chosen, always set the Paper Type to match the type of paper that is loaded in the tray.

You can use plain paper, inkjet paper (coated paper), glossy paper and envelopes.

We recommend testing various paper types before buying large quantities.

For best results, use Brother paper.

When you print on inkjet paper (coated paper) and glossy paper, be sure to choose the correct print media in the printer driver's **Basic** tab or the machine's Paper Type setting.

(See Paper Type on page 17.)

- When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
- When using photo paper, remove each sheet at once to prevent smudging or paper jams.
- Avoid touching the printed surface of the paper immediately after printing; the surface may not be completely dry and may stain your fingers.

Recommended print media

To get the best print quality, we suggest using the Brother paper in the table.

If Brother paper is not available in your country, we recommend testing various papers before purchasing large quantities.

Brother paper

Paper Type	Item
A4 Plain	BP60PA
A4 Glossy Photo	BP71GA4
A4 Inkjet (Matte)	BP60MA
10 × 15 cm Glossy Photo	BP71GP


Handling and using print media

- Store paper in its original packaging and keep it sealed. Keep the paper flat and away from moisture, direct sunlight and heat.
- Avoid touching the shiny (coated) side of the photo paper. Load photo paper with the shiny side facing down.

IMPORTANT

DO NOT use the following kinds of paper:

• Damaged, curled, wrinkled, or irregularly shaped paper

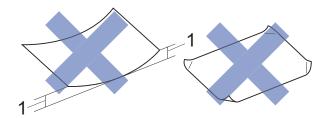

- 1 2 mm or greater curl may cause jams to occur.
- Extremely shiny or highly textured paper
- Paper that cannot be arranged uniformly when stacked
- Short grain paper

Paper capacity of the output paper tray cover

Up to 50 sheets of 80 gsm A4 paper.

Photo paper must be picked up from the output paper tray cover one page at a time to avoid smudging.

Choosing the right print media

Paper type and size for each operation

Paper Type Paper Size			Usage		
			Fax	Сору	Printer
Cut-Sheet	A4	210 \times 297 mm (8.3 \times 11.7 in.)	Yes	Yes	Yes
	Letter	215.9 \times 279.4 mm (8 1/2 \times 11 in.)	Yes	Yes	Yes
	Legal ¹	215.9 \times 355.6 mm (8 1/2 \times 14 in.)	Yes	Yes	Yes
	Executive	184 \times 267 mm (7 1/4 \times 10 1/2 in.)	-	-	Yes
	JIS B5 ¹	182×257 mm (7.2 \times 10.1 in.)	-	-	Yes
	A5	148 \times 210 mm (5.8 \times 8.3 in.)	_	Yes	Yes
	A6	105 \times 148 mm (4.1 \times 5.8 in.)	-	-	Yes
Cards	Photo	10×15 cm (4 \times 6 in.)	-	Yes	Yes
	Photo 2L	13×18 cm (5 \times 7 in.)	-	-	Yes
	Index Card	127 \times 203 mm (5 \times 8 in.)	-	-	Yes
Envelopes	C5 Envelope	162 \times 229 mm (6.4 \times 9 in.)	-	-	Yes
	DL Envelope	110 \times 220 mm (4.3 \times 8.7 in.)	-	-	Yes
	Com-10	105 \times 241 mm (4 1/8 \times 9 1/2 in.)	-	-	Yes
	Monarch	98×191 mm (3 7/8 \times 7 1/2 in.)	_	-	Yes

¹ Only available for some countries.

Paper weight, thickness and capacity

Paper Type	9	Weight	Thickness	No. of sheets	
Cut-Sheet	Plain Paper	64 to 120 gsm	0.08 to 0.15 mm	100 ¹	
	Inkjet Paper	64 to 200 gsm	0.08 to 0.25 mm	20	
	Glossy Paper	Up to 220 gsm	Up to 0.25 mm	20 ²	
Cards	Photo Card	Up to 220 gsm	Up to 0.25 mm	20 ²	
	Index Card	Up to 120 gsm	Up to 0.15 mm	30	
Envelopes	•	80 to 95 gsm	Up to 0.52 mm	10	

¹ Up to 100 sheets of 80 gsm paper.

² BP71 (260 gsm) paper is especially designed for Brother inkjet machines.

3

Loading documents

How to load documents

You can send a fax, make copies, or scan from the ADF (automatic document feeder) and from the scanner glass.

Using the ADF

The ADF can hold up to 20 pages and feeds each sheet individually. Use paper that is within the sizes and weights shown in the table. Always fan the edges of the pages before placing them in the ADF.

Document Sizes and Weights

Length:	148 to 355.6 mm
Width:	148 to 215.9 mm
Paper weight:	64 to 90 gsm


How to load documents

IMPORTANT

- DO NOT pull on the document while it is feeding.
- DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, glued or taped.
- DO NOT use cardboard, newspaper or fabric with the ADF. Instead use the scanner glass.

Make sure documents written with ink or modified with correction fluid are completely dry.

Unfold the ADF Document Support (1).

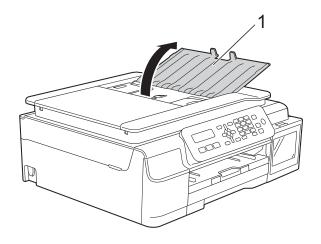




Fan the pages well.

3

Adjust the paper guides (1) to fit the width of your documents.

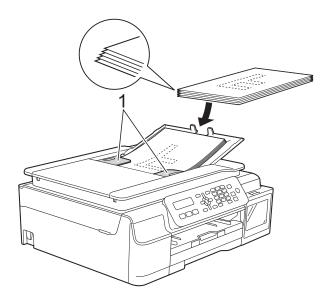


4 Place your documents **face down, top edge first** in the ADF underneath the guides until you feel them touch the feed rollers.

The screen will display ADF Ready.

IMPORTANT

DO NOT leave thick documents on the scanner glass. If you do this, the ADF may jam.

5 After using the ADF, close the ADF Document Support. Push down on the upper-left portion of the ADF Document Support to close it completely.

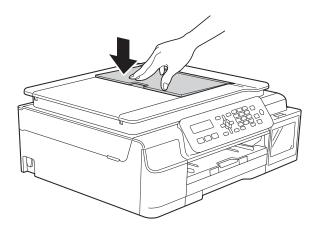

Using the scanner glass

You can use the scanner glass to fax, copy, or scan single pages or pages of a book.

Document sizes supported

Length:	Up to 297 mm
Width:	Up to 215.9 mm
Weight:	Up to 2 kg

How to load documents


NOTE

To use the scanner glass, the ADF must be empty.




Lift the document cover.

2 Using the document guidelines on the left and top, place the document **face down** in the upper left corner of the scanner glass.

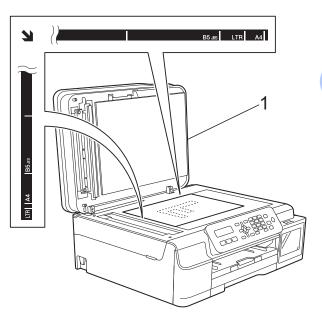

1 document cover

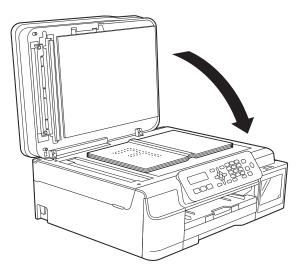




Close the document cover.

IMPORTANT

If you are scanning a book or thick document, DO NOT slam the cover down or press on it. Chapter 3

Unscannable area

The scannable area depends on the settings in the application you are using. The figures show the unscannable areas.

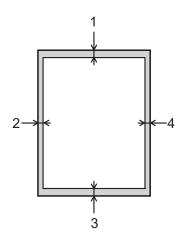

Usage	Document	Тор (1)	Left (2)
	Size	Bottom (3)	Right (4)
Fax	A4	3 mm	3 mm ¹
	Letter		4 mm
	Legal		
Сору	All paper	3 mm	3 mm
Scan	sizes	1 mm	1 mm

¹ The unscannable area is 1 mm when you use the ADF.

4

Sending a fax

How to send a fax

The following steps show how to send a fax.

- Do one of the following to load your document:
 - Place the document face down in the ADF. (See Using the ADF on page 20.)
 - Load your document face down on the scanner glass. (See Using the scanner glass on page 21.)

NOTE

- · You can send only mono faxes.
- To send faxes with multiple pages, use the ADF.
- If you send a fax from the ADF when the memory is full, it will be sent in real time.
- You can use the scanner glass to fax pages of a book one at a time. The documents can be up to A4 or Letter size.
- Since you can only scan one page at a time, it is easier to use the ADF if you are sending a multiple-page document.



You can change the following fax-sending settings.

(Basic User's Guide)

For information about changing the following fax-sending settings, see pages 24 to 25.

- Glass Scan Size
- Transmission Verification Report (Setup)

(Advanced User's Guide)

For more advanced fax-sending operations and settings (See Advanced User's Guide: Sending a fax (MFC models only).)

- Contrast
- Fax Resolution
- Faxing at the end of a call
- Broadcasting
- Real Time Transmission
- Overseas Mode
- Cancelling Waiting Jobs
- 4 Enter the fax number using the dial pad, Speed Dial or Search.
 - Press Mono Start.

Faxing from the ADF

The machine starts scanning the document to be sent.

Faxing from the scanner glass

The machine starts scanning the first page. Go to step 6.

Chapter 4

6 When the LCD asks you Next Page?, do one of the following:

> To send a single page, press 2 to choose No (Dial) (or press Mono Start again).

The machine starts sending the document.

- To send more than one page, press
 1 to choose Yes and go to step .
- Place the next page on the scanner glass.

Press OK.

The machine starts scanning the page. (Repeat steps (6) and (7) for each additional page.)

8 After all the pages have been scanned, press 2 or Mono Start to start.

Stop faxing

To stop faxing, press Stop/Exit.

Setting scanner glass size for faxing

When documents are Letter size, you need to set the Scan Size to Letter. If you do not, the side portion of the faxes will be missing.

 Load your document.
 Press (FAX).
 Press Menu, 3, 2, 0.
 Press ▲ or ▼ to choose Letter (or A4). Press OK.
 Press Stop/Exit.
 Enter the fax number.
 Press Mono Start.
 NOTE This setting is only available for sending documents from the scanner glass.

Cancelling a fax in progress

If you want to cancel a fax while the machine is scanning, dialling or sending, press **Stop/Exit**.

Transmission Verification Report

You can use the Transmission Verification Report as proof that you sent a fax. This report lists the sender's name or fax number, the time and date of the transmission, duration of the transmission, the number of pages sent, and whether or not the transmission was successful.

There are several settings available for the Transmission Verification Report:

- On: Prints a report after every fax you send.
- On+Image: Prints a report after every fax you send. A portion of the fax's first page appears on the report.
- Off: Prints a report if your fax is unsuccessful due to a transmission error. Off is the default setting.
- Off+Image: Prints a report if your fax is unsuccessful due to a transmission error. A portion of the fax's first page appears on the report.

Press Menu, 3, 3, 1.

- **Press ▲ or ▼ to choose** Off+Image, On, On+Image **or** Off. Press OK.
- 3 Press Stop/Exit.

NOTE

- If you choose On+Image or Off+Image the image will only appear on the Transmission Verification Report if Real Time Transmission is set to Off. (See Advanced User's Guide: Real Time Transmission.)
- If your transmission is successful, OK will appear next to RESULT on the Transmission Verification Report. If the transmission is not successful, ERROR will appear next to RESULT.

5

Receiving a fax


Receive Modes

You must choose a Receive Mode depending on the external devices and telephone services you have on your line.

Choose the Receive Mode

By default, your machine will automatically receive any faxes that are sent to it. The diagram below will help you choose the correct receive mode.

For more detailed information on the Receive Modes, see Using Receive Modes on page 27.

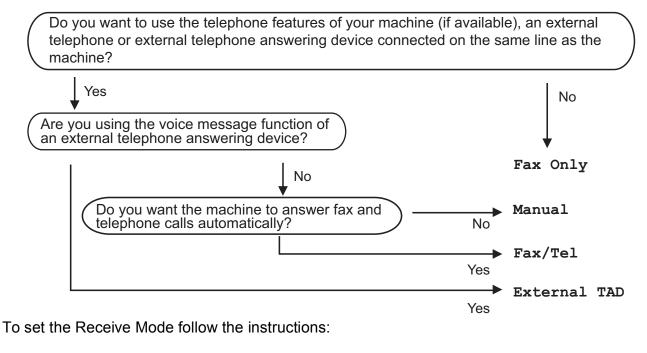



2 Press Menu, 3, 1, 1.


NOTE

(For Australia, Singapore and Hong Kong)

If you cannot change the Receive Mode, make sure the Distinctive Ring feature is set to Off. (See *Turning off Distinctive Ring* on page 31 and 37 for your relevant country.)

(For New Zealand)

If you cannot change the Receive Mode, make sure the FaxAbility feature is set to Off. (See *How to Turn FaxAbility OFF or ON* on page 34.)

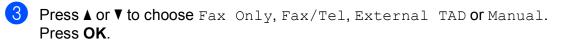

Press Stop/Exit.

Using Receive Modes

Some Receive Modes answer automatically (Fax Only and Fax/Tel). You may want to change the Ring Delay before using these modes. (See *Ring Delay* on page 28.)

Fax Only

Fax Only mode will automatically answer every call as a fax call.

Fax/Tel

Fax/Tel mode helps you manage incoming calls by recognising whether they are fax or voice calls and dealing with them in one of the following ways:

- Faxes will be automatically received.
- Voice calls will start the F/T Ring to tell you to pick up the line. The F/T Ring is a fast double-ring made by your machine.

If you use Fax/Tel mode, see *F/T Ring Time* (*Fax/Tel mode only*) on page 28 and *Ring Delay* on page 28.

Manual

To receive a fax in Manual mode, lift the handset of an external telephone or press

Hook¹. When you hear fax tones (short repeating beeps), press **Mono Start**, and then press **2** to choose Receive. You can also use the Fax Detect feature to receive faxes by lifting a handset on the same line as the machine.

(See Fax Detect on page 29.)

¹ Not Available for South Africa

External TAD

External TAD mode lets an external answering device manage your incoming calls. Incoming calls will be dealt with in one of the following ways:

- Faxes will be automatically received.
- Voice callers can record a message on the external TAD.

To connect your External TAD, see Connecting an external TAD (telephone answering device) on page 40.

Receive Mode settings

Ring Delay

The Ring Delay sets the number of times the machine rings before it answers in Fax Only or Fax/Tel mode. If you have external or extension telephones on the same line as the machine, choose the maximum number of rings.

(See Operation from external and extension telephones on page 42 and Fax Detect on page 29.)





Press ▲ or ▼ to choose how many times you want the machine to ring before it answers (2-10 for Australia, 1-10 for New Zealand, 0-2 for Taiwan, 2-8 for South Africa, 0-10 for some countries). Press OK.

Because the restriction of Taiwan's Telecommunication law, the products sold in this area cannot be set to more than 3 cycle rings.

If you choose 00, the machine will answer immediately and the line will not ring at all.

Press Stop/Exit.

F/T Ring Time (Fax/Tel mode only)

When somebody calls your machine, you and your caller will hear the normal telephone ring. The number of rings is set by the ring delay setting.

If the call is a fax, then your machine will receive it. However, if it is a voice call then the machine will sound the F/T Ring (a fast double-ring) for the time you have set in the F/T Ring Time setting. If you hear the F/T Ring, it means that you have a voice caller on the line.

Because the F/T Ring is made by the machine, extension and external telephones will not ring. However, you can still answer the call on any telephone by using a remote code.

(For more information, see *Using remote codes* on page 43.)



- 2) Press Menu, 3, 1, 3.
- Press ▲ or ▼ to choose how long the machine will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds for Australia and some countries, 20, 30, 40 or 55 seconds for New Zealand). Press OK.

4 Press Stop/Exit.

NOTE

Even if the caller hangs up during the fast double-ring, the machine will continue to ring for the set time.

Fax Detect

If Fax Detect is On:

Fax Detect is turned On as default.

The machine receives a fax call automatically, even if you answer the call. When you see Receiving on the LCD or when you hear "chirps" through the handset you are using, just replace the handset. Your machine will do the rest.

If Fax Detect is Off:

If you are at the machine and answer a fax call by lifting the handset, press **Mono Start**, then press **2** to receive the fax.

If you answered at an extension or external telephone, press * **5 1** (* **9 1** for New Zealand). (See *Operation from external and extension telephones* on page 42.)

NOTE

- If this feature is set to On, but your machine does not connect a fax call when you lift an extension or external telephone handset, press the remote activation code * 5 1 (* 9 1 for New Zealand).
- If you send faxes from a computer on the same telephone line and the machine intercepts them, set Fax Detect to Off.



- 2 Press Menu, 3, 1, 4.
- Oress ▲ or ▼ to choose On (or Off). Press OK.
- 4 Press **Stop/Exit**.

6

Telephone and external devices

Voice operations

Tone or Pulse (Not Available for New Zealand and South Africa)

If you have a Pulse dialling service, but need to send tone signals (for example, for telephone banking), follow the instructions:

1 F

Press Hook.

2 Press **#** on the machine's control panel. Any digits dialled after this will send tone signals.

When you are finished with the call, the machine will return to the Pulse dialling service.

Fax/Tel mode

When the machine is in Fax/Tel mode, it will use the F/T Ring (fast double-ring) to alert you to pick up a voice call.

If you are at an external telephone, lift the handset of the external telephone, and then press **Hook** (**Tel/R** for South Africa) to answer.

If you are at an extension telephone, you'll need to lift the handset during the F/T Ring Time and then press **# 5 1** (**# 9 1** for New Zealand) between the fast double-rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing * **5 1** (* **9 1** for New Zealand).

Telephone Service for Australia

Distinctive Ring

Distinctive Ring ¹ is a function of your Brother machine that allows a person with one line to receive fax and voice calls through two different phone numbers on that one line.

Brother uses the term "Distinctive Ring", but telephone companies market the service under a variety of names. This service establishes a second telephone number on the same line as your existing telephone number, and each number has its own ring pattern. Typically, the original number rings with the standard ring pattern and is used for receiving voice calls, and the second number rings with a different ring pattern and is used for receiving faxes. Only one call can be answered (or made) at any one time and while this call is in progress, incoming calls to either number will be presented with a busy tone.


NOTE

¹ Contact your Telephone Service Provider to determine availability and any other related details.

After you have set the Distinctive Ring feature to On, the receive mode is set to Manual automatically. Your Distinctive Ring Number does not allow Voice calls - only Faxes. You can not change the receive mode from Manual mode while the Distinctive Ring is set to on.

How does your telephone company's "Distinctive Ring" service work?

Using "Distinctive Ring" service of your telephone company is the most efficient way to receive both fax and telephone calls on the same line. When the voice call comes in, all phones (extension and external) and the fax machine will ring to alert you to pick it up. If a fax call comes in, the fax machine will answer automatically without ringing, whereas the extension and external phones will ring twice with a Distinctive Ring pattern. It is also a more efficient way of operating a Fax machine with an extension phone as you do not have to use the remote activation codes. It gives you two independent numbers without the higher cost of a second line.

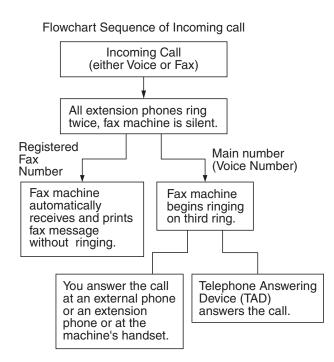

What does Brother's "Distinctive Ring" do?

The Brother machine has a Distinctive Ring feature that allows you to use your machine to take full advantage of the telephone company's Distinctive Ring service. The new telephone number on your line can just receive faxes.

Turning on Distinctive Ring

Very Important!

After you have set the Distinctive Ring feature to on, the receive mode is set to Manual automatically. Your Distinctive Ring Number does not allow Voice calls - only Faxes. You cannot change the receive mode to another mode while the Distinctive Ring is set to on. When Distinctive Ring is on, the LCD will show D/R as the Receive Mode.

- 1 Press Menu, 3, 0, 2.
 - Press ▲ or ▼ to choose on. Press OK.
- OPRESS Stop/Exit. Distinctive Ring is now set to on.

Turning off Distinctive Ring



- Press Menu, 3, 0, 2.
- You can see the current setting. Press ▲ or ▼ to choose Off. Press OK.

3 Press Stop/Exit.

NOTE

If you turn off Distinctive Ring, the machine will stay in Manual receive mode. You will need to set the Receive Mode again. (*Choose the Receive Mode* on page 26.)

Caller ID

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number or name as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because Caller IDs are received and stored in your machine memory.

NOTE

To get the Caller ID Service: apply for the Caller ID service at your local telephone company, if available.

Advantages of Caller ID

For Business

All businesses profit from a quicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

At Home

Residential customers can protect themselves from unwanted calls.

How Does the Caller ID Work?

The Caller ID Appears on the Display When Your Telephone Rings

As your telephone rings, the display shows you the caller's phone number or name if the name has been stored in the Address Book. Once you answer the call, the caller's ID disappears.

NOTE

- If ID Unknown appears on the display, it means that the call came from outside your caller ID service area or a public phone.¹
- If ID Withheld appears on the display, it means the caller intentionally blocked the transmission of his/her ID.¹
- ¹ Depends on network function.

The Caller ID is Stored in Your Machine Memory

The machine can store a maximum of the last 30 incoming caller IDs in the memory, along with the time and date of reception. The 31st call will cause the oldest ID to be erased.

The Caller ID information stored in the memory can be used for the following.

Viewing the Caller ID List



2 Press OK.

The Caller ID of the last call will appear on the LCD display. If no ID is stored, the beeper sounds and No Caller ID appears on the LCD.

3 Press ▲ or ▼ to scroll through the Caller ID memory to choose the Caller ID you want to view, and then press OK. The LCD displays the caller's number and the date and time of the call.

NOTE

To delete the Caller ID from the list, press **Clear**. Press **1** to confirm.

4 To finish viewing, press **Stop/Exit**.

Printing Caller ID List

- 1 Press Menu, 5, 5.
- If no ID is stored, the beeper will sound and No Caller ID will appear on the LCD.



Press Mono Start.

After printing has finished, press **Stop/Exit**.

Telephone Service for New Zealand

FaxAbility

FaxAbility is a service offered by Telecom that allows you to have an additional number on one phone line, with its own distinctive ring pattern. This way, when you get an incoming call, you can identify the number being called by its ring.

How Will the Fax Machine Treat All Other Numbers?

FaxAbility mode ensures that the machine will answer calls to the FaxAbility (secondary) number. When a call comes in to your main number, all the phones will ring. You can set an external answering device (TAD) to answer calls on the other number(s). (See the chart in this page.)


What is the Advantage of Using the FaxAbility Function?

Using FaxAbility is the most efficient way to receive both fax and telephone calls on the same line. It is much easier for your callers who dial manually. The fax machine will answer with receiving tones so they will not have to press an activation code. And the people who call to talk on your main number will not have to talk to your fax machine. Basically, it gives you two independent numbers without the higher cost of a second line.

How Does FaxAbility Work?

Your telephone number will have the standard ring pattern of long, long tone, while the new number will have a ring pattern of long, silence, long, etc. When FaxAbility is On, you will not hear the first ring of all incoming calls on the fax machine. Extension phones will ring as usual. If the fax machine recognises the ring pattern, all ringing will stop and the fax machine will answer and automatically receive the fax message. Otherwise, you will hear the extension phones and the fax machine continue to ring. The fax machine always listens to the ring pattern before it answers, so do not pick up the phone during that time. You will guickly learn to recognise the ring pattern for faxes, so you will not be tempted to answer that number. Either you or a telephone answering device can answer the main number(s).

Flowchart Sequence of Incoming call

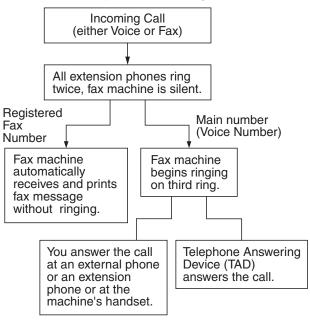

6

NOTE

After you have set the FaxAbility feature to On, the receive mode is set to Manual automatically. Unless you have a TAD or Voice Mail set up on the FaxAbility number, Manual mode means you must answer all the call yourself. You can not change the receive mode to the other mode while the FaxAbility is set to on. When FaxAbility is on, the LCD will show D/R as the Receive Mode.

How to Turn FaxAbility OFF or ON

The FaxAbility function is designed to accommodate the FaxAbility service provided by Telecom. To change the setting, repeat steps (1-3); Step (2) is where you can choose either On or Off.

Call Waiting beeps caused by incoming calls on your main number can affect fax transmissions. If you have FaxAbility Service but don't have Call Waiting, you need do nothing at this stage. If you do have Call Waiting as well as FaxAbility, set the Call Waiting menu option to On. See below.

- 1 Press Menu, 3, 0, 2.
- Press ▲ or V to choose On (or Off). If you have FaxAbility service, choose On. Press OK.
- Press ▲ or ▼ to choose On (or Off). If you have Call Waiting service, choose On to avoid the trouble caused by Call Waiting. Press OK.

Press Stop/Exit.

Caller ID

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number and name if available as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because Caller IDs are received and stored in your machine memory.

NOTE

To get the Caller ID Service, apply for the Caller ID service at your local telephone company, if available.

Advantages of Caller ID

For Business

All businesses profit from a quicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

At Home

Residential customers can protect themselves from unwanted calls.

How Does the Caller ID Work?

The Caller ID Appears on the Display When Your Telephone Rings

As your telephone rings, the display shows you the caller's phone number or name if available. Once you answer the call, the caller's ID disappears. You can view and print a list of the Caller ID information received by your machine.

NOTE

- If ID Unknown appears on the display, it means that the call came from outside your caller ID service area.¹
- If ID Withheld appears on the display, it means the caller intentionally blocked the transmission of his/her ID.¹
- ¹ Depends on network function.

Viewing the Caller ID List

Your machine stores information for the last thirty calls in the Caller ID list. When the thirty-first call comes into the machine, it replaces information about the first call. You can view or print this list.



Press Menu, 3, 0, 3.

Press OK.

The Caller ID of the last call will appear on the LCD display. If no ID is stored, the beeper sounds and No Caller ID appears on the LCD.

3 Press ▲ or ▼ to scroll through the Caller ID memory to choose the Caller ID you want to view, and then press OK. The LCD displays the caller's number and the date and time of the call.

NOTE

To delete the Caller ID from the list, press **Clear**. Press **1** to confirm.

4 To finish viewing, press **Stop/Exit**.

Printing Caller ID List

- 1 Press Menu, 5, 5.
- If no ID is stored, the beeper will sound and No Caller ID will appear on the LCD.
- 3 Press Mono Start.
- 4 After printing has finished, press **Stop/Exit**.

Telephone services for South Africa

Setting the Telephone Line Type

If you are connecting the machine to a line that features PBX or ISDN to send and receive faxes, it is also necessary to change the Telephone Line Type accordingly by completing the following steps.



1 Press Menu, 0, 5.

Press ▲ or ▼ to choose Normal, PBX or ISDN. Press OK.

3 Press Stop/Exit.

PBX and TRANSFER

The machine is initially set to Normal, which lets the machine connect to a standard PSTN (Public Switched Telephone Network) line. However, many offices use a central telephone system or Private Branch Exchange (PBX). Your machine can be connected to most types of PBX. The machine's recall feature supports timed break recall only (TBR). TBR will work with most PBX systems allowing you to gain access to an outside line, or transfer calls to another extension. The feature works when the Tel/R key on the control panel is pressed.

NOTE

You can program a press of the Tel/R key as part of a number stored in a Speed Dial location. When programming the Speed Dial number, press Tel/R first (the LCD shows '!'), then enter the telephone number. If you do this, you do not need to press Tel/R each time before you dial using a Speed Dial location. (See Storing numbers on page 45.) However, if your Telephone Line Type is not set to PBX on the machine, you cannot use the Speed Dial location that the Tel/R is programmed into.

Telephone Service for Some Countries

Distinctive Ring (For Singapore and Hong Kong)

This machine feature lets you use the Distinctive Ring subscriber service offered by some telephone companies, which allows you to have several telephone numbers on one phone line. Each phone number has its own Distinctive Ring pattern, so you will know which phone number is ringing. This is one way you can have a separate phone number for your machine.

Your machine has a Distinctive Ring function, allowing you to dedicate one phone number just for receiving faxes. You will need to set Distinctive Ring to On.

NOTE

You can switch it off temporarily, then turn it back on. When you get a new fax number, make sure you reset this function.

 The machine will answer only calls to the Distinctive Ring number.

Turning on Distinctive Ring

Very Important!

After you have set the Distinctive Ring feature to on, the receive mode is set to Manual automatically. Unless you have a TAD or Voice Mail set up on the Distinctive Ring number, Manual mode means you must answer all the calls yourself. You cannot change the receive mode to another mode while the Distinctive Ring is set to on. When Distinctive Ring is on, the LCD will show D/R as the Receive Mode.

- Press Menu, 3, 0, 2.
- 2 Press ▲ or ▼ to choose On. Press OK.
- 3 Press Stop/Exit. Distinctive Ring is now set to on.

Turning off Distinctive Ring

- 1 Press Menu, 3, 0, 2.
 - Press ▲ or V to choose Off. Press OK.
- 3 Press Stop/Exit.

NOTE

If you turn off Distinctive Ring, the machine will stay in Manual receive mode. You will need to set the Receive Mode again. (Choose the Receive Mode on page 26.)

Caller ID (For Singapore and Hong Kong) (Not available for Taiwan and some countries)

The Caller ID feature of this machine lets you use the Caller ID subscriber service offered by many local phone companies. Call your telephone company for details. This service provides you, by means of the screen display, the telephone number (or name) of your caller as the line rings.

After a few rings, the screen displays the telephone number of your caller (or name, if available). Once you answer the call, the Caller ID information disappears from the screen, but the call information remains stored in the Caller ID memory.

- ID Unknown display means call originates outside your Caller ID service area.
- ID Withheld display means the caller has intentionally blocked transmission of information.

NOTE

Caller ID service varies with different carriers. Call your local phone company to determine the kind of service available in your area.

Viewing the Caller ID List

Your machine stores information for the last thirty calls in the Caller ID list. When the thirty-first call comes into the machine, it replaces information about the first call. You can view or print this list.

1 Press Menu, 3, 0, 3.



The Caller ID of the last call will appear on the LCD display. If no ID is stored, the beeper sounds and No Caller ID appears on the LCD.

3 Press ▲ or ▼ to scroll through the Caller ID memory to choose the Caller ID you want to view, and then press OK. The LCD displays the caller's number and the date and time of the call.

NOTE

To delete the Caller ID from the list, press **Clear**. Press **1** to confirm.

4 To finish viewing, press **Stop/Exit**.

Printing Caller ID List

- Press Menu, 6, 7.
- 2 If no ID is stored, the beeper will sound and No Caller ID will appear on the LCD.


Press Mono Start.

After printing has finished, press **Stop/Exit**.

Voice over Internet Protocol (VoIP)

VoIP is a type of phone system that uses an Internet connection instead of a traditional telephone line. Telephone providers frequently bundle VoIP together with Internet and cable services.

Your machine may not work with some VoIP systems. If you want to use your machine to send and receive faxes on a VoIP system, make sure that one end of your telephone cord is connected to the socket labelled **LINE** on your machine. The other end of the telephone cord may be connected to a modem, phone adapter, splitter, or other such device.

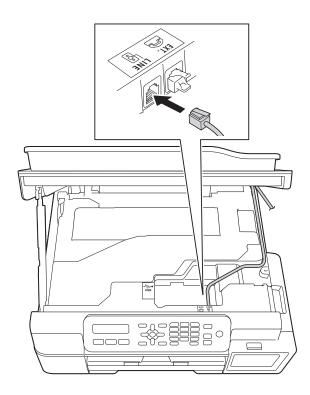

If you have questions about how to connect your machine to the VoIP system, contact your VoIP provider.

After you have connected your machine to the VoIP system, check for a dial tone. Lift the external telephone's handset and listen for a dial tone. If there is no dial tone, call your VoIP provider.

If you are having problems sending or receiving faxes over a VoIP system, we recommend changing the machine's modem speed to the Basic (for VoIP) setting (see *Telephone line interference / VoIP* on page 96).

NOTE

- VoIP (Voice over IP) is a type of phone system that uses an Internet connection, rather than a traditional phone line.
- Brother does not recommend the use of a VoIP line. VoIP limitations in general can cause some functions of the fax machine not to work correctly.


Connecting an external TAD (telephone answering device)

You may choose to connect an external answering device. However, when you have an **external** TAD on the same telephone line as the machine, the TAD answers all calls and the machine "listens" for fax-calling (CNG) tones. If it hears them, the machine takes over the call and receives the fax. If it does not hear CNG tones, the machine lets the TAD continue playing your outgoing message so your caller can leave a voice message.

The TAD must answer within two rings (the recommended setting is two rings). The machine cannot hear CNG tones until the TAD has answered the call, and with four rings, there are only 8 to 10 seconds of CNG tones left for the fax "handshake". Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.

NOTE

If you do not receive all your faxes, shorten the Ring Delay setting on your external TAD.

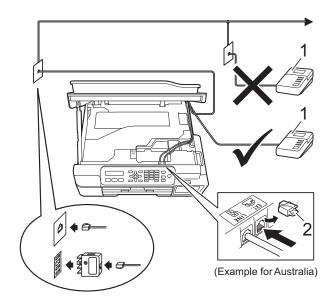

- 1 TAD
- 2 Protective Cap


When the TAD answers a call, the LCD shows Telephone.

IMPORTANT

DO NOT connect a TAD elsewhere on the same telephone line.

Connection settings

The external TAD must be connected as shown in the previous illustration.

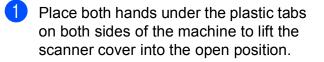

- 2 Carefully guide the telephone line cord into the cable channel and out the back of the machine.
- 3 Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover using both hands.
- 4 Set your external TAD to one or two rings. (The machine's Ring Delay setting does not apply.)
- 5 Record the outgoing message on your external TAD.
- 6

Set the TAD to answer calls.

Set the Receive Mode to External TAD. (See Choose the Receive Mode on page 26.)

Recording an outgoing message (OGM) on an external TAD

Timing is important in recording this message.

- Record 5 seconds of silence at the beginning of your message. (This allows your machine time to listen for the fax CNG tones of automatic transmissions before they stop.)
- 2 Limit your speaking to 20 seconds.

NOTE

We recommend beginning your OGM with an initial 5 second silence because the machine may not hear the fax tones over a voice. You may try omitting this pause, but if your machine has trouble receiving, then you must re-record the OGM to include it.

Multi-line connections (PABX)

Most offices use a central telephone system.

Brother recommends that all our machines be connected to a discreet (dedicated) line. Although a particular PABX may appear to work with a particular model of fax machine, we cannot guarantee that the unit will operate correctly.

While it is often relatively simple to connect a fax machine to a PABX, (Private Automatic Branch Exchange), we suggest that you contact the company that installed your telephone system and ask them to connect the fax machine for you.


Brother does not recommend the use of a PABX line. PABX limitations in general can cause some functions of the fax machine not to work correctly.

External and extension telephones

Connecting an external or extension telephone

You can connect a separate telephone (2) to your machine as shown in the diagram.

Carefully guide the telephone line cord into the cable channel and out the back of the machine.

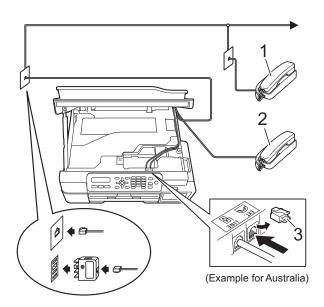

- 1 Extension telephone
- 2 External telephone
- 3 Protective Cap

Operation from external and extension telephones

If you answer a fax call on an extension or an external telephone, you can make your machine take the call by using the Remote Activation Code. When you press the Remote Activation Code * **5 1** (* **9 1** for New Zealand), the machine starts to receive the fax.

If the machine answers a voice call and fast double-rings for you to take over, use the Remote Deactivation Code **# 5 1** (**# 9 1** for New Zealand) to take the call at an extension telephone. (See *F/T Ring Time (Fax/Tel mode only)* on page 28.)

If you answer a call and no one is on the line:

Assume you are receiving a manual fax.

Press * **5 1** (* **9 1** for New Zealand) and wait for the chirp or until the LCD shows Receiving, and then hang up.

NOTE

You can also use the Fax Detect feature to make your machine automatically take the call. (See *Fax Detect* on page 29.)

Using a cordless external telephone

Once the base unit of the cordless telephone has been connected to the same telephone line as the machine (See *External and extension telephones* on page 42.), you can answer calls on the cordless handset during the Ring Delay.

If you let the machine answer first, you will have to go to the machine and press **Hook** (**Tel/R** for South Africa) to send the call to the cordless handset.

Using remote codes

Remote Activation Code

If you answer a fax call on an extension or external telephone, you can tell your machine to receive it by dialling the Remote Activation Code \times **5 1** (\times **9 1** for New Zealand). Wait for the chirping sounds and then replace the handset. (See *Fax Detect* on page 29.)

If you answer a fax call at the external telephone, you can make the machine receive the fax by pressing **Mono Start** and **2** to choose Receive.

Remote Deactivation Code

If you receive a voice call and the machine is in Fax/Tel mode, it will start to sound the F/T Ring (fast double-ring) after the initial ring delay. If you pick up the call on an extension telephone, you can turn the F/T Ring off by pressing **# 5 1** (**# 9 1** for New Zealand) (make sure you press this *between* the rings).

If the machine answers a voice call and fast double-rings for you to take over, you can take the call at the external telephone by pressing **Hook** (**Tel/R** for South Africa).

Changing the remote codes

If you want to use Remote Activation, you have to turn on the remote codes. The preset Remote Activation Code is *** 5 1** (*** 9 1** for New Zealand). The preset Remote Deactivation Code is **# 5 1** (**# 9 1** for New Zealand). If you want to, you can replace them with your own codes.



- 2 Press Menu, 3, 1, 5.
- Press ▲ or ▼ to choose On (or Off). Press OK.
- 4 Enter the new Remote Activation Code. Press **OK**.

5 Enter the new Remote Deactivation Code. Press **OK**.

6 Press Stop/Exit.

NOTE

- If you are always disconnected when accessing your external TAD remotely, try changing the Remote Activation Code and Remote Deactivation Code to another three-digit code using the numbers 0-9, *, #.
- Remote Codes might not work with some telephone systems.

Dialling and storing numbers

How to dial

Manual dialling

Load your document.

ı، (**FAX**). Press

Press all of the digits of the fax number.




Press Mono Start.

Speed Dialling



- Load your document.
- 2 Press 🏪 (Address Book).
- 3 Press ▲ or ▼ to choose Search. Press OK

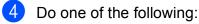

- To search numerically, press ▲ or ▼ to choose the number, and then press OK.
- To search alphabetically, enter the first letter of the name using the dial pad, then press ◀ or ► to choose the name, and then press OK.


Press Mono Start.

The machine scans and sends the fax.

Fax Redial

If you are sending a fax automatically and the line is busy, the machine will redial up to three times at five minute intervals.

Redial only works if you dialled from the control panel.

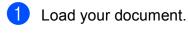



- Press Redial/Pause.
- Press Mono Start.

NOTE

- In Real Time Transmission the automatic redial feature does not work when you are using the scanner glass.
- (Not available for South Africa)

If you are sending a fax manually and the line is busy, press Hook before performing step (3) above.

5

Storing numbers

You can set up your machine to do the following types of easy dialling: Speed Dial and Groups for broadcasting faxes.

(See Advanced User's Guide: Setting up Groups for Broadcasting and Broadcasting.)

NOTE

If you lose electrical power, the Speed Dial numbers that are in the memory will not be lost.

Storing a pause

Press **Redial/Pause** to put a 3.5-second (2.5-second for South Africa) pause between numbers. If you are dialling overseas, you can press **Redial/Pause** as many times as needed to increase the length of the pause.

Storing Speed Dial numbers

You can store up to 40 two-digit Speed Dial numbers, and each number has a name. When you dial, you will only have to press a few keys (for example: $\bigcap_{\mathbf{A}}$ (Address Book), OK, #, the two-digit number, and Mono Start).

- Press [™] (Address Book) and ▲ or ▼ to choose Set Speed Dial. Press OK.
- 2 Use the dial pad to enter a two-digit Speed Dial location number (01-40). Press **OK**.
- 3 Enter the fax or telephone number (up to 20 digits). Press **OK**.
- Do one of the following:
 - Enter the name (up to 16 characters) using the dial pad.

Press **OK**. (For help entering letters, see *Entering Text* on page 116.)

- To store the number without a name, press OK.
- Do one of the following:
 - To store another Speed Dial number, go to step 2.
 - To finish the setting, press Stop/Exit.

Changing and deleting **Speed Dial numbers**

If you try to store a Speed Dial number where a number has already been stored, the LCD will show the name or number that has been stored there, and will ask you to do one of the following:

#05:MIKE	
(1.Change	2.Exit

- Press 1 to change or delete the stored number.
- Press 2 to exit without making a change.

If you choose 1, you will be able to change the stored number and name, or enter a new one. You can delete the Speed Dial number by deleting the fax number.

Follow the instructions below:



Do one of the following:

To change the stored number, use ✓ or ► to position the cursor under the digit you want to change, then press Clear. Re-enter the number.

Press OK. Go to step 2.

To delete the Speed Dial number, press Clear to delete each digit of the fax number.

Press OK. Go to step 6.

Enter a new name if needed. Press OK.

NOTE

To change a character, press ◀ or ► to position the cursor under the character you want to change, then press Clear. Re-enter the character.

(For help entering letters, see Entering Text on page 116.)

3 If you are finished making changes, press Stop/Exit.

8

Making copies

How to copy

The following steps show the basic copy operation.

- Do one of the following to load your document:
 - Place the document *face down* in the ADF.

(See Using the ADF on page 20.)


Place the document face down on the scanner glass.

(See Using the scanner glass on page 21.)



(COPY).

The LCD shows the default copy settings:

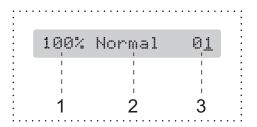

- 1 Copy Ratio
- 2 Quality

3 No. of Copies

Use the dial pad to enter the number of copies.

NOTE

The default setting is FAX mode. You can change the amount of time that the machine stays in COPY mode after the last copy operation. (See Advanced User's Guide: *Mode*

Timer (MFC models only).)

3 If you want more than one copy, enter the number (up to 99).



Press Mono Start or Colour Start.

Stop copying

To stop copying, press Stop/Exit.

Copy options

When you want to quickly change the copy settings temporarily for the next copy, use the Copy Options key.

Copy Options



The machine returns to its default settings one minute after it finishes copying, or if the mode timer returns the machine to Fax mode.

(See Advanced User's Guide: Mode Timer (MFC models only).)

(Basic User's Guide)

For information about changing the following copy settings, see page 48.

- Paper Type
- Paper Size

(Advanced User's Guide)

For information about changing the following copy settings, see Advanced User's Guide: Copy options.

- Quality
- Enlarge/Reduce
- Layout (2in1 ID)
- 2in1(ID)
- Stack/Sort
- Density
- Remove Bkg. Clr

NOTE

If you want to sort copies, we recommend using the ADF.

Paper Type

If you are copying on a special type of paper, set the machine for the type of paper you are using to get the best print quality.

Load your document.



- - Enter the number of copies you want.
- Press Copy Options and ▲ or V to choose Paper Type. Press OK.
- 5 Press ▲ or ▼ to choose Plain Paper, Inkjet Paper, Brother BP71 or Other Glossy. Press OK.
- 6 If you do not want to change any further settings, press Mono Start or Colour Start.

Paper Size

If you are copying on paper other than A4 size, you will need to change the Paper Size setting. You can copy only on A4, A5,

Photo (10 \times 15 cm), Letter or Legal ¹ paper.

- Load your document.
- Press
- Enter the number of copies you want.
- 4 Press Copy Options and ▲ or ▼ to choose Paper Size. Press OK.
- 5 Press ▲ or ▼ to choose A4, A5, 10 (W) x15 (H) cm, Letter **Or** Legal 1 . Press OK.
- 6 If you do not want to change any further settings, press Mono Start or Colour Start.

Only available for some countries.

How to print from a computer

Printing a document

The machine can receive and print data from your computer. To print from a computer, you must install the printer driver.

(For more information, see Software and Network User's Guide.)

 Install the Brother printer driver. (See Quick Setup Guide.)

- 2 From your application, choose the Print command.
- 3 Choose the name of your machine in the Print dialog box and click Properties or Preferences, depending on the application you are using.
- 4 Choose the settings you want to change in the Properties dialog box. Commonly used settings include:
 - Media Type
 - Print Quality
 - Paper Size
 - Orientation
 - Colour / Greyscale
 - Ink Save Mode
 - Scaling
 - 2-sided / Booklet
- 5 Click OK.
- 6 Click Print (or OK depending on the application you are using) to begin printing.

10 How to scan to a computer

Before scanning

To use the machine as a scanner, install a scanner driver. If the machine is on a network, configure it with a TCP/IP address.

- Install the scanner drivers. (See Quick Setup Guide: Install MFL-Pro Suite.)
- Configure the machine with a TCP/IP address if network scanning does not work. (See Software and Network User's Guide.)

Scanning a document as a PDF file using ControlCenter4 (Windows[®])

ControlCenter4 is a software utility that lets you quickly and easily access the applications you use most often. Using ControlCenter4 eliminates the need to manually launch specific applications.

(For more information, see Software and Network User's Guide.)

NOTE

- The screens on your PC may vary depending on your model.
- This section is based on using the Advanced Mode of ControlCenter4.

Load your document. (See How to load documents on page 20.)

2 Click the **controlCenter4**) icon in the task tray, and then click **Open**.

If the ControlCenter4 Mode screen appears, choose the Advanced Mode, and then click OK.

Control Co Control Co Description Description		 1 m] =0 Y		4 mar (m)
		a state of the sta		
) Home Mode	2		Advanced Mode	
ome Mode of rint, Scan an perations.			Advance Mode inclu configure detailed s	eatures available in Home Mode, ides the added ability to ettings and store them. Offerin re-configured button settings.

4 Make sure the machine you want to use is selected from the **Model** drop-down list.

Chapter 10

5 Set the scanning configuration.

Click Configuration, and then select Button settings, Scan and File.



The configuration dialog box appears. You can change the default settings.


File - ControlCenter4	
 File Type	File size
PDF (*.pdf)	
File Name (Date)	(Number)
CCF 17072014	
Scan Location	✓ Insert Date in File Name
Folder SharePoint	
C: \Users \User \Pictures \ControlCenter4\Scan	Show Folder
PreScan	
Resolution	Brightness
300 x 300 dpi 🔹	
Scan Type	0
24bit Colour 👻	Contrast
Document Size	
A4 210 x 297 mm (8.3 x 11.7 in)	· · · · · · · · · · · · · · · · · · ·
	Continuous Scanning
	Auto Crop
	ID Card Scan
Show settings dialog before scan.	

- 1 Choose PDF (*.pdf) from the File Type drop-down list.
- 2 You can enter the file name you want to use for the document.
- 3 You can save the file to the default folder, or choose your preferred folder by clicking the (Browse) button.
- 4 You can choose a scanning resolution from the **Resolution** drop-down list.
- 5 You can choose the document size from the Document Size drop-down list.
- 6 Click OK.



Click the Scan tab.

8 Click File.

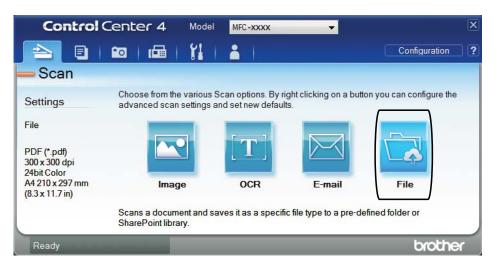

9 Click Scan.

The machine starts the scanning process. The folder where the scanned data is saved will open automatically.

File Type		File size
PDF (*.pdf)	.	Small Large
File Name		
CCF	(Date) (Number) 17072014_xxxx.pdf	Show Save As Window
© Folder	1/0/2011_XXXXIP01	Insert Date in File Name
C:\Users\User\Pictures\ControlCenter4\Scan	<u></u>	Show Folder
PreScan		
Resolution	Brightne	ess
300 x 300 dpi		
Scan Type		0
24bit Colour	 Contras 	
Document Size		
A4 210 x 297 mm (8.3 x 11.7 in)	-	• • • • • • • • • •
		tinuous Scanning
		Auto Crop
		ard Scan
Don't show me again.		

10

How to change the machine's SCAN mode settings for PDF scanning using ControlCenter4 (Windows[®])

You can change your machine's SCAN mode settings using ControlCenter4. (Windows®)

- 1 Click the 🚾 (ControlCenter4) icon in the task tray, and then click Open.
- 2 Make sure the machine you want to use is selected from the **Model** drop-down list.
- Click the **Device Settings** tab.
- 4 Click Device Scan Settings.



	Device Scan Settings
	Image OCR E-mail File
1	File Type File size PDF (*,pdf) V
2	File Name (Date) (Number) CCF 07172014_xxxx.pdf
3 ——	Destination Folder C: \Users \User \Pictures \ControlCenter4\scan Image: Show Folder
4 ——	Resolution Brightness 300 x 300 dpi 0
5 ——	24bit Color Contrast Document Size
	Auto Crop
	D Card Scan
	Default Advanced Settings
	OK Cancel Apply Help


5 Choose the **File** tab. You can change the default settings.

- 1 Choose PDF (*.pdf) from the File Type drop-down list.
- 2 You can enter the file name you want to use for the document.
- 3 You can save the file to the default folder, or choose your preferred folder by clicking the (Browse) button.
- 4 You can choose a scanning resolution from the **Resolution** drop-down list.
- 5 You can choose the document size from the **Document Size** drop-down list.
- 6 Click **OK**.

How to scan a document as a PDF file using the control panel (Windows[®] and Macintosh)

1 Load your document. (See *How to load documents* on page 20.)



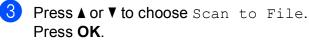

4 If the machine is connected to a network, press ▲ or ▼ to select the PC Name. Press OK.

Do one of the following:

■ If you want to use the default settings, press ▲ or ▼ to choose Off.

```
Press OK.
```

Go to step 7.

- If you want to change the default settings, go to step 6.
- 5 Press ▲ or ▼ to choose On. Press OK.
- 6 Choose the settings for Scan Type as required. Press OK. Repeat this step for the settings for Resolution, File Type, Scan Size and Remove Bkg. Clr.

Press Mono Start or Colour Start.

The machine starts the scanning process.

NOTE

The following scan modes are available.

- Scan to E-mail
- Scan to Image
- Scan to OCR
- Scan to File
- Web Service¹
- Windows[®] users only. (Windows Vista[®] SP2 or later, Windows[®] 7 and Windows[®] 8) (See Software and Network User's Guide.)

A


Routine maintenance

Refilling the ink tanks

When the machine detects it is running out of ink, the machine will display a message.

The LCD will show which ink tank is low or needs refilling. Be sure to follow the LCD prompts to refill the ink tanks in the correct order.

You can assess the actual amount of remaining ink visually by looking through the see-through cover (1) of the ink tank. If the remaining ink level is at or below the lower line (2) under the triangle mark, refill the ink tank.

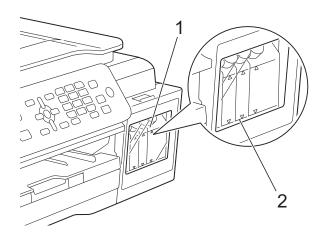

To prevent print head assembly from drying out and getting damaged, it is necessary to keep the ink above the lower line in the tank.


Refill the ink tank when the remaining ink level is at or below the lower line.

If ink gets in your eyes, wash it out with water at once and call a doctor if you are concerned.


IMPORTANT

Brother multifunction machines are designed to work with ink of a particular specification and will work to a level of optimum performance and reliability when used with Brother Original ink. Brother cannot guarantee this optimum performance and reliability if ink of other specifications is used. Brother does not therefore recommend the use of ink from other sources. Damage to the product caused by the use of consumables manufactured by third parties may not be covered by the product warranty. Please refer to the terms of the product warranty.



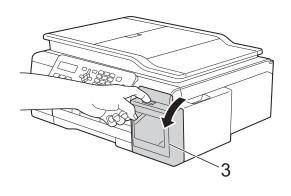


2 Remove the cap of the ink tank for the colour you want to refill.

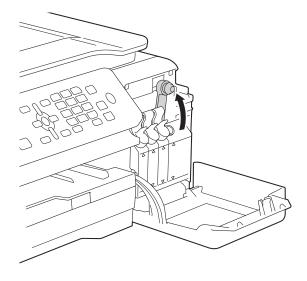

NOTE

Be careful to avoid touching any ink when handling the cap of the ink tank.

3 Remove the cap of the ink bottle, remove the film from the ink bottle, and then replace the cap.

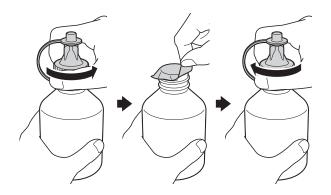

IMPORTANT

- Tighten the cap securely onto the ink bottle. Otherwise ink may leak.
- DO NOT shake the ink bottles. If ink stains your skin or clothing, wash with soap or detergent at once.

4 Rem


Remove the cap tip of the ink bottle.



5 Make sure that the colour of the ink tank cap matches the ink colour you want to refill.

Insert the nozzle of the ink bottle firmly so that the ink will not be spilled.

Refill the ink by squeezing the middle of the bottle gently as shown.

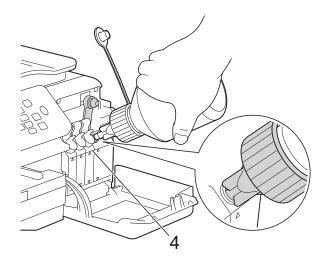


IMPORTANT

Be careful to avoid filling the ink past the upper line (4) above the triangle mark.

NOTE

- Be careful to avoid spilling any ink when refilling the ink tank.
- Refill with all of the ink in the bottle, if it does not exceed the upper line.


6 Point the nozzle upward so that the ink will not be spilled, and then remove the nozzle from the ink tank.

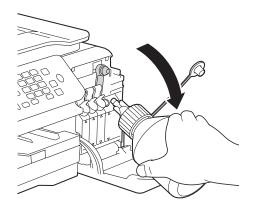

NOTE

If some ink remains in the bottle, tighten the cap securely onto the ink bottle, and store the ink bottle on a level surface in a cool, dark place.

Push down to tighten the cap securely onto the ink tank.

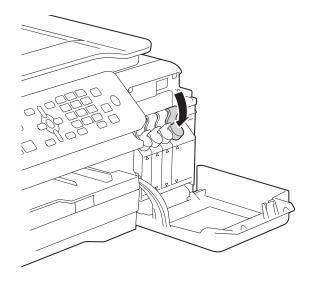

8 Repeat steps **2** to **7** for each ink tank you want to refill.

9

Close the ink tank cover.

When you open and close the ink tank cover, a message may appear on the LCD to verify whether the ink tanks were refilled.

If you have refilled the ink tanks, press 1 (Yes).

If you have not refilled the ink tank, be sure to press 2 (No).

If you pressed **1** (Yes), you are asked which colour ink tanks you have refilled. (For example,

Did You Refill [BK]? 1.Yes 2.No may be displayed for the black ink tank.) Press 1 (Yes) to reset the ink dot counter for the refilled colours. Press 2 (No) for the non-refilled colours.

IMPORTANT


- If you accidentally mix the colours by filling the wrong ink tank, contact Brother customer service or your local Brother dealer.
- Once you open an ink bottle, use it up within six months. Use unopened ink bottles by the expiration date written on the bottle package.

A


Cleaning and checking the machine

Cleaning the scanner glass

- Unplug the machine from the electrical socket.
- 2 Lift the document cover (1). Clean the scanner glass (2) and the white plastic (3) with a soft lint-free cloth moistened with a non-flammable glass cleaner.

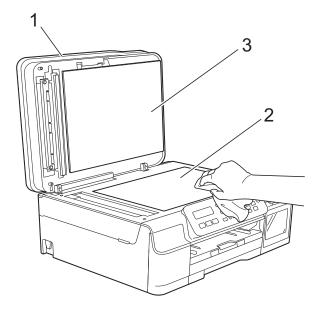

3 In the ADF unit, clean the white bar (1) and the glass strip (2) with a lint-free cloth moistened with a non-flammable glass cleaner.

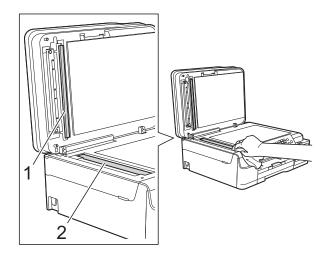

NOTE

In addition to cleaning the glass strip with a non-flammable glass cleaner, run your finger tip over the glass strip to see if you can feel anything on it. If you feel dirt or debris, clean the glass strip again concentrating on that area. You may need to repeat the cleaning process three or four times. To test, make a copy after each cleaning attempt.



When there is a spot of dirt or correction fluid on the glass strip, the printed sample shows a vertical line.



After the glass strip is cleaned, the vertical line is gone.

Cleaning the print head

To maintain good print quality, the machine will automatically clean the print head when needed. You can start the cleaning process manually if there is a print quality problem.

Clean the print head if you get a horizontal line in the text or graphics, or blank text on your printed pages. You can clean Black only; Yellow, Cyan, and Magenta at once; or all four colours at once.

Cleaning the print head consumes ink. Cleaning too often uses ink unnecessarily.

IMPORTANT

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

1 Press Menu, 1, 2.

Press ▲ or ▼ to choose Black, Colour or All.

Press OK.

The machine cleans the print head. When cleaning is finished, the machine will go back to the FAX mode.

NOTE

- If you clean the print head at least five times and the print has not improved, try cleaning the print head again up to three more times. If the print has not improved, contact Brother customer service or your local Brother dealer.
- You can also clean the print head from your PC.

(See Software and Network User's Guide.)

Checking the print quality

If faded or streaked colours and text appear on your printouts, some of the print head nozzles may be clogged. You can check this by printing the Print Quality Check Sheet and looking at the nozzle check pattern.



- Press Menu, 1, 1.

Press ▲ or ▼ to choose Print Quality. Press OK.

3 Press Colour Start.

The machine starts printing the Print Quality Check Sheet.

- 4 Check the quality of the four colour blocks on the sheet.
- 5 The LCD asks you if the print quality is OK.

Do one of the following:

- If all lines are clear and visible, press
 1 (Yes) to finish the Print Quality check and go to step ⁽¹⁾
- If you can see missing short lines as shown below, press 2 to choose No.

Poor

=	

- The LCD asks you if the print quality is OK for black and the three colours. Press **1** (Yes) or **2** (No).
- 7 The LCD asks you if you want to start cleaning. Press 1 (Yes).

The machine starts cleaning the print head.

8 After the cleaning procedure is finished, press **Colour Start**. The machine prints the Print Quality

Check Sheet again. Return to step 4.

9 Press Stop/Exit.

If you clean the print head at least five times and the print has not improved, try cleaning the print head again up to three more times. If the print has not improved, contact Brother customer service or your local Brother dealer.

IMPORTANT

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

NOTE



When a print head nozzle is clogged the printed sample looks like this.



After the print head nozzle is cleaned, the horizontal lines are gone.

Checking the print alignment

If your printed text becomes blurred or images become faded, you may need to adjust the print alignment after transporting the machine.

1 Press Menu, 1, 1.

2

Press ▲ or ▼ to choose Alignment. Press OK.

3 Press **Mono Start** or **Colour Start**. The machine starts printing the Alignment Check Sheet.

(A) 1 2 3 4 5 6 7 8 9	(B) 1 2 3 4 5 6 7 8 9	(C) 1 1 2 1 3 4 5 6 6 7 8 9
(D) 1 2 3	(E) 2 3	

5

6

7

8



5

6


8

7


For the "A" pattern, press the number of the test print that has the least visible vertical stripes (1-9). Repeat this step for the B, C, D and E patterns. In the example number 6 is the best choice for A, B, C, D and E.

Press Stop/Exit.

NOTE

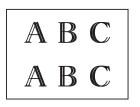

When the print alignment is not adjusted correctly, text looks blurry like this.

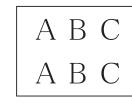

After the print alignment is adjusted correctly, text looks like this.

Setting the date and time

The LCD shows the date and time. If it is not correct, follow these instructions to re-enter it.

You can add the date and time to each fax you send by setting your Station ID.



- Press Menu, 0, 1, 1.
- Enter the last two digits of the year using the dial pad, and then press OK.
- 3 Enter the two digits for the month using the dial pad, and then press **OK**.
- 4 Enter the two digits for the day using the dial pad, and then press **OK**.
- 5 Press ▲ or ▼ to choose 12h Clock or 24h Clock, and then press OK.
- 6 To enter the time, do one of the following:
 - If you chose 12h Clock in step 6, enter the time (in 12-hour format) using the dial pad, and then press OK.

Press ▲ or ▼ to choose AM or PM, and then press **OK**.

If you chose 24h Clock in step 6, enter the time (in 24-hour format) using the dial pad, and then press OK.

(For example, enter 19:45 for 7:45 PM.)





Troubleshooting

If you think there is a problem with your machine, check each of the items below first and follow the troubleshooting tips.

You can correct most problems by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at <u>http://support.brother.com</u>.

Identifying your problem

First, check the following:

- The machine's power cord is connected correctly and the machine's power switch is turned on.
- All of the protective parts have been removed.
- Paper is inserted correctly in the paper tray.
- The interface cables are securely connected to the machine and the computer, or the wireless connection is set up on both the machine and your computer.
- LCD messages

(See Error and maintenance messages on page 66.)

If you did not solve your problem with the above checks, identify your problem and then go to the suggested page.

Paper handling and Printing problems:

- Printing Difficulties on page 85
- Print Quality Difficulties on page 87
- Paper Handling Difficulties on page 89
- Printing Received Faxes on page 90

Telephone and Fax problems:

- *Telephone Line or Connections* on page 90
- Handling Incoming Calls on page 93
- Receiving Faxes on page 91
- Sending Faxes on page 93

Copying problems:

Copying Difficulties on page 94

Scanning problems:

Scanning Difficulties on page 94

Software and Network problems:

- Software Difficulties on page 94
- Network Difficulties on page 95

Error and maintenance messages

As with any sophisticated office product, errors may occur and supply items may need to be replaced. If this happens, your machine identifies the error or required routine maintenance and shows the appropriate message. The most common error and maintenance messages are shown in the table.

You can clear most errors and perform routine maintenance by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips:

Visit us at http://support.brother.com.

Error Message	Cause	Action
B&W Print Only	The amount of remaining ink in one or	Refill the ink tank.
Refill [XX] Ink	more of the ink tanks (except black) is low.	When you refill the ink tank, fill the ink up to the upper line, or fill with all of
	This error message may appear if the ink dot counter is incorrect even if	the ink in the bottle if it does not exceed the upper line.
	some ink remains. While this message appears on the	A message may appear on the LCD to verify whether the ink tanks were
	LCD, each operation works in the following way:	refilled. Press 1 (Yes) to reset the ink dot
	Printing If you choose Greyscale in the	counter if ink tank has been refill. Press 2 (NO) if ink tank has not been refilled.
	Advanced tab of the printer driver, you can use the machine as a monochrome printer.	(See <i>Refilling the ink tanks</i> on page 57.)
	2-sided printing is not available when this message appears.	NOTE The machine will stop all print
	Copying	operations, you cannot use the machine until you refill the ink tank in
	If the paper type is set to Plain Paper you can make	the following cases:
	copies in monochrome.	 If you unplug the machine.
		• If the paper type is set to anything except Plain Paper or Inkjet Paper.
		 (Windows[®]) If you check Slow Drying Paper in the Basic tab of the printer driver.
		(Macintosh) If you check Slow Drying Paper in the Print Settings of the printer driver.

Error Message	Cause	Action
Cannot Print Refill [XX] Ink	The amount of remaining ink in one or more of the ink tanks is low. The machine will stop all print operations. This error message may appear if the ink dot counter is incorrect even if some ink remains.	Refill the ink tank. When you refill the ink tank, fill the ink up to the upper line, or fill with all of the ink in the bottle if it does not exceed the upper line. A message may appear on the LCD to verify whether the ink tanks were refilled. Press 1 (Yes) to reset the ink dot counter if ink tank has been refill. Press 2 (No) if ink tank has not been refilled.
	The machine has a machanical	(See Refilling the ink tanks on page 57.)
Clean Unable XX Init Unable XX Print Unable XX	The machine has a mechanical problem. A foreign object, such as a paper clip or a piece of ripped paper, is in the	Open the scanner cover and remove any foreign objects and paper scraps from inside the machine. If the error message continues, do the following.
Scan Unable XX	machine.	See Transferring your faxes or Fax Journal report on page 74 before disconnecting the machine so you will not lose any important messages. Then disconnect the machine from the power for several minutes and reconnect it.
Close Ink Cover	The ink tank cover is not locked in the closed position.	Firmly close the ink tank cover until it locks into place.
Comm.Error	Poor telephone line quality caused a communication error.	If the problem continues, call the telephone company and ask them to check your telephone line.
Cover is Open	The scanner cover is not locked in the closed position.	Lift the scanner cover, and then close it again.
		Make sure the telephone line cord and USB cable (if used) has been guided correctly through the cable channel and out the back of the machine.
Data Remaining	Print data is left in the machine's memory.	Press Stop/Exit . The machine will cancel the job and clear it from the memory. Try to print again.
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again. If calls are stopped repeatedly and you are using a VoIP (Voice over IP) system, try changing the Compatibility to Basic (for VoIP). (See <i>Telephone line interference / VoIP</i> on page 96.)

Error Message	Cause	Action
Document Jam	The document was not inserted or fed correctly, or the document scanned from the ADF was too long.	(See Using the ADF on page 20.) (See Document jam on page 75.)
DR Mode in Use (For Australia, Singapore and Hong Kong) FaxAbility On (For New Zealand)	 (For Australia, Singapore and Hong Kong) The machine is in Distinctive Ring mode. You cannot change the Receive Mode from Manual to another mode. (For New Zealand) The machine is in FaxAbility mode. You cannot change the Receive Mode from Manual to another mode. 	(For Australia, Singapore and Hong Kong) Set Distinctive Ring to Off. (See <i>Turning off Distinctive Ring</i> on page 31 and 37.) (For New Zealand) Set FaxAbility to Off. (See <i>How to Turn FaxAbility OFF or</i> <i>ON</i> on page 34.)
High Temperature	The room temperature is too high.	After lowering the room temperature, allow the machine to cool down to room temperature and then try again.

Error Message	Cause	Action
Ink Low XXXXXXX	The amount of remaining ink in one or more of the ink tanks is low. This error message may appear if the ink dot counter is incorrect even if a lot of ink remains.	Look through the see-through cover of the ink tank to assess the actual amount of remaining ink. If the remaining ink level is at or below the lower line under the triangle mark, refill the ink tank. A message may appear on the LCD to verify whether the ink tanks were refilled. Press 1 (Yes) to reset the ink dot counter if ink tank has been refill. Press 2 (No) if ink tank has not been refilled. (See <i>Refilling the ink tanks</i> on page 57.)
Low Temperature	The room temperature is too low.	After increasing the room temperature, allow the machine to warm up to room temperature and then try again.
No Caller ID (Only available for some countries)	There is no incoming call history. You did not receive calls or you have not subscribed to the Caller ID service from your telephone company.	If you want to use the Caller ID feature, call your telephone company. (See <i>Caller ID</i> on page 31, 34 and 38 for your relevant country.)

Error Message	Cause	Action
No Paper Fed	The machine is out of paper or paper is not correctly loaded in the paper tray.	Do one of the following:
		 Refill the paper in the paper tray, and then press Mono Start or Colour Start.
		Remove and reload the paper, then press Mono Start or Colour Start. (See Loading paper and other print media on page 11.)
	The paper tray was not fully inserted.	Remove the paper tray and re-install it until it locks into place, and then press Mono Start or Colour Start on the control panel.
	Paper dust has accumulated on the surface of the paper pick-up rollers.	Clean the paper pick-up rollers. (See Advanced User's Guide: <i>Cleaning the paper pick-up rollers</i> .)
	The Jam Clear Cover is not closed correctly.	Make sure the Jam Clear Cover is closed evenly at both ends. (See <i>Printer jam or paper jam</i> on page 76.)
	The paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Printer jam or paper jam</i> on page 76.
		If this error occurs often during 2-sided printing, the paper feed rollers may be stained with ink. Clean the paper feed rollers. (See Advanced User's Guide: <i>Cleaning the paper feed rollers</i> .)
No Response/Busy	The number you dialled has not answered or is busy.	Verify the number and try again.
Not Registered	You tried to access a Speed Dial number that has not been stored in the machine.	Set up the Speed Dial number. (See Storing Speed Dial numbers on page 45.)

Error Message	Cause	Action
Out of Memory	The machine's memory is full.	If a fax-sending or copy operation is in process:
		Press Stop/Exit and wait until the other operations that are in process finish, and then try again.
		Press Mono Start to send the pages scanned so far.
		Press Mono Start or Colour Start to print the pages scanned so far.
		 Clear the data in the memory. To gain extra memory, you can turn off Memory Receive. (See Advanced User's Guide: <i>Turning off Memory Receive operation.</i>)
		Print the faxes that are in the memory. (See Advanced User's Guide: Printing a fax from the memory.)
Paper Jam	The paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Printer jam or paper jam</i> on page 76.
		Make sure the paper length guide is set to the correct paper size.
		DO NOT extend the paper tray when you load A5 or smaller size paper. (The extendable tray is only available for some countries.)
		If there is a repeat paper jam, a small piece of paper may be stuck in the machine. Make sure paper is not still jammed in the machine. (See <i>Additional paper jam clear operations</i> on page 79.)
	Paper dust has accumulated on the surface of the paper pick-up rollers.	Clean the paper pick-up rollers. (See Advanced User's Guide: <i>Cleaning the paper pick-up rollers</i> .)

Error Message	Cause	Action
Wrong Paper Size	The Paper Size setting does not match the size of paper in the tray. Or, you did not set the paper guides in the tray to the indicators for the paper size you are using.	 Check that the Paper Size you choose matches the size of paper in the tray. (See Paper Size on page 17.) Make sure you loaded the paper in a Portrait position, by setting the paper guides to the indicators for your paper size. (See Loading paper and other print media on page 11.)
		3 After you have checked the paper size and the paper position, press Mono Start or Colour Start .
		If you are printing from your computer, make sure the paper size you choose in the printer driver matches the size of paper in the tray.
		(See Software and Network User's Guide.)

Transferring your faxes or Fax Journal report

If the LCD shows:

- Clean Unable XX
- Init Unable XX
- Print Unable XX
- Scan Unable XX

We recommend transferring your faxes to another fax machine or to your PC. (See Transferring faxes to another fax machine on page 74 or Transferring faxes to your PC on page 74.)

You can also transfer the Fax Journal report to see if there are any faxes you need to transfer. (See Transferring the Fax Journal report to another fax machine on page 75.)

Transferring faxes to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See Quick Setup Guide: Enter personal information (Station ID).)

Press Menu, 9, 0, 1.

- Do one of the following:
 - If the LCD shows No Data, there are no faxes left in the machine's memory.

Press Stop/Exit.

- If the LCD shows Enter Fax No., enter the fax number to which faxes will be forwarded.
- Press Mono Start.

Transferring faxes to your PC

You can transfer the faxes from your machine's memory to your PC.

1 Make sure you have installed MFL-Pro Suite on your PC, and then turn on PC-FAX Receive on the PC. Do one of the following:

(Windows[®] XP, Windows Vista[®] and Windows[®] 7)

From (Start), select All Programs, Brother, and Brother Utilities.

Click the drop-down list and select your model name (if not already selected). Click PC-FAX Receive in the left navigation bar, and then click Receive. (Windows[®] 8)

(Brother Utilities), and then

click the drop-down list and select your model name (if not already selected). Click PC-FAX Receive in the left navigation bar, and then click **Receive**.

- 2 Make sure you have set PC-Fax Receive on the machine. (See Advanced User's Guide: PC-Fax Receive (Windows[®]).) If faxes are in the machine's memory when you set up PC-Fax Receive, the LCD will ask if you want to transfer the faxes to your PC.

3 Do one of the following:

> To transfer all faxes to your PC, press 1 (Yes).

Press ▲ or ▼ to choose Backup Print:On or Backup Print:Off.

Press OK.

To exit and leave the faxes in the memory, press 2 (No).

Press Stop/Exit.

Transferring the Fax Journal report to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See Quick Setup Guide: Enter personal information (Station ID).)



1 Press Menu, 9, 0, 2.

Enter the fax number to which the Fax Journal report will be forwarded.

Press Mono Start.

Document jam

Documents can jam in the ADF unit if they are not inserted or fed correctly, or if they are too long. Follow these steps to clear a document jam.


Document is jammed in the top of the ADF unit

1 Take out any paper from the ADF that is not jammed.



Open the ADF cover.

3 Remove the jammed document by pulling it upward.

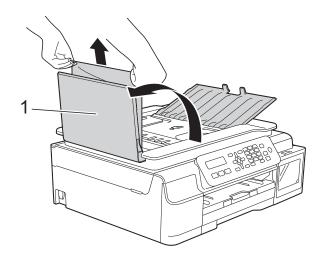





Close the ADF cover.





IMPORTANT

To avoid document jams, close the ADF cover correctly by pushing it gently in the centre.

Document is jammed inside the ADF unit

- 1 Take any paper that is not jammed out of the ADF.
- 2 Lift the Document Cover.
- 3 Pull the jammed document out to the left.

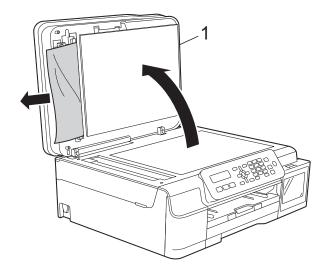

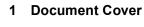

Close the document cover.

Press Stop/Exit.


B

Removing small scraps of paper jammed in the ADF



Lift the Document Cover.

2 Insert a piece of stiff paper, such as cardstock, into the ADF to push any small paper scraps through.

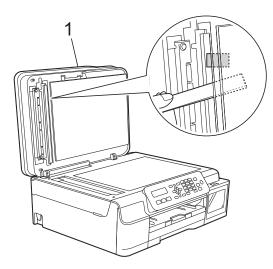

- 1 Document Cover
- 3 Close the document cover.
- 4 Press Stop/Exit.


Printer jam or paper jam

Locate and remove the jammed paper by following these steps:


Unplug the machine from the electrical socket.

IMPORTANT


Before you unplug the machine from the power source, you can transfer your faxes that are stored in the memory to your PC or another fax machine so you will not lose any important messages. (See *Transferring your faxes or Fax Journal report* on page 74.) 2 Pull the paper tray (1) completely out of the machine.

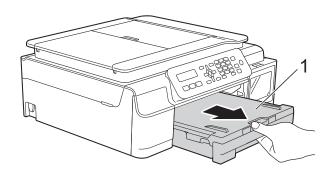


Pull the two green levers inside the machine towards you to release the jammed paper.

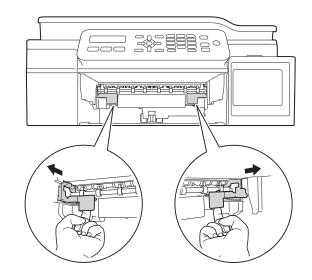


Place both hands under the plastic tabs on both sides of the machine and lift the scanner cover into the open position.

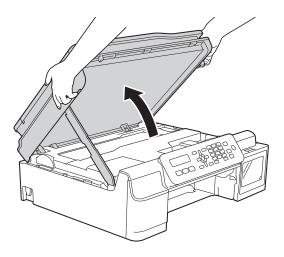

5 Pull the jammed paper (1) out of the machine.

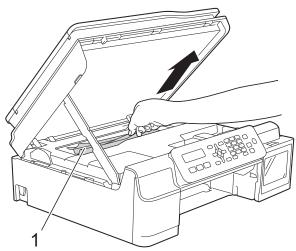


6 Move the print head (if necessary) to take out any paper remaining in this area. Make sure that jammed paper is not left in the corners of the machine (1) and (2).

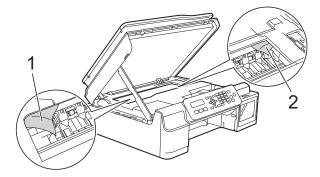


IMPORTANT

• DO NOT touch the encoder strip (1). Doing this may cause damage to the machine.

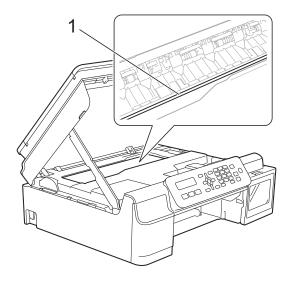

- If the print head is in the right corner as shown in the illustration (2), you cannot move it. Re-connect the power cord. Hold down Stop/Exit until the print head moves to the centre. Then unplug the machine from the power source and take out the paper.
- If the paper is jammed under the print head, unplug the machine from the power source, and then move the print head to take out the paper.


Hold the concave areas with the triangle marks shown in the illustration (3) to move the print head.

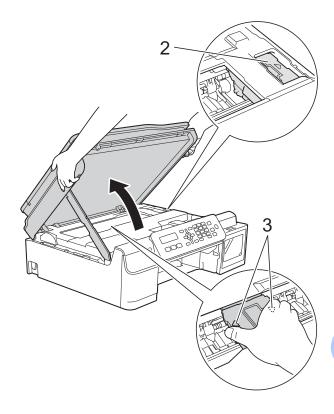


• If ink gets onto your skin, immediately wash with soap and plenty of water.

B


7 Be sure to look carefully inside the machine (1) for any pieces of paper.

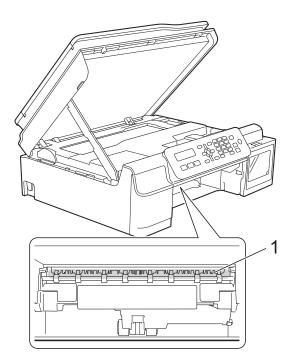

8 Look inside the machine from a lower angle, and make sure there are no pieces of paper remaining.

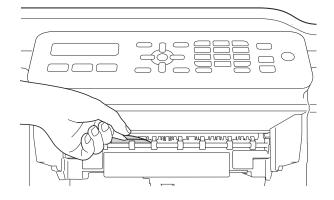


9 Open the Jam Clear Cover (1) at the back of the machine.

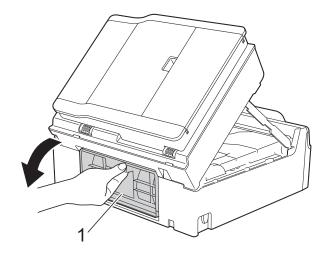




10 Remove the jammed paper.

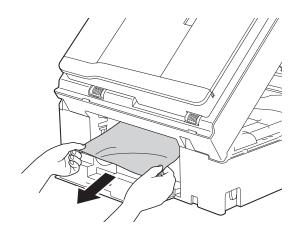


1 Close the Jam Clear Cover.


Make sure the cover is closed correctly.

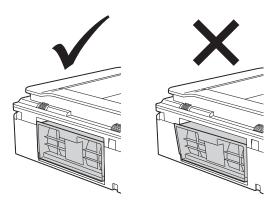

12 Put the paper tray firmly back in the machine.

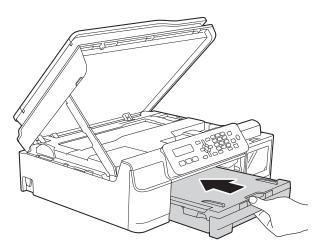

Lift the scanner cover (1) to release the lock. Gently push the scanner cover support down (2) and close the scanner cover (3) using both hands.

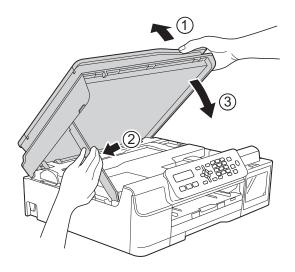

A CAUTION

Be careful not to pinch your fingers when you close the scanner cover.

4 While holding the paper tray in place, pull out the paper support until it locks in the open position, and then unfold the paper support flap. Make sure you pull out the paper support until it locks into place.

IMPORTANT

DO NOT use the paper support flap for Legal size paper. (Only available for some countries.)

15 Re-connect the power cord.

NOTE


If there is a repeat paper jam, a small piece of paper may be stuck in the machine. (See *Additional paper jam clear operations* on page 79.)

Additional paper jam clear operations


- 1 Unplug the machine from the electrical socket.
- Pull the paper tray (1) completely out of the machine.




3 Pull the two green levers inside the machine towards you to release the jammed paper.

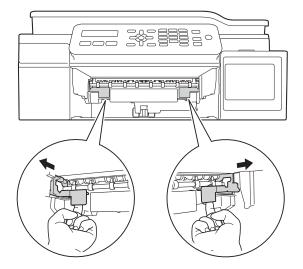



4 Place both hands under the plastic tabs on both sides of the machine and lift the scanner cover into the open position.

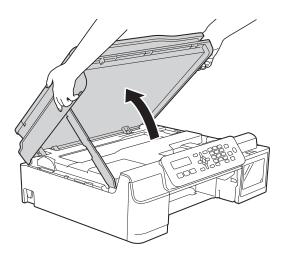


5 Load one sheet of thick A4 or Letter sized paper, such as glossy paper, deep into the machine as shown in the illustration.

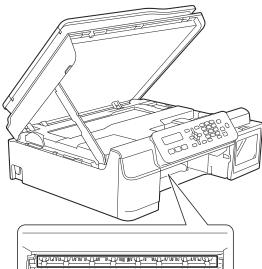

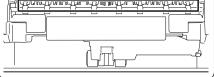

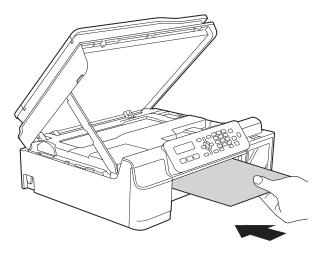


6 If the thick paper is pushing any jammed paper out, remove the jammed paper.

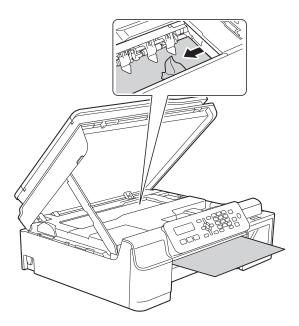


IMPORTANT

DO NOT touch the encoder strip (1). Doing this may cause damage to the machine.

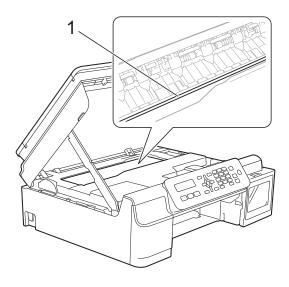


7 Pull the thick paper out of the machine.


8 Open the Jam Clear Cover (1) at the back of the machine.

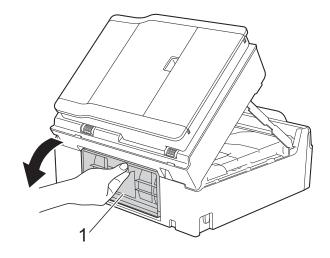

9 Load one sheet of thick A4 or Letter sized paper, such as glossy paper, deep into the machine as shown in the illustration.

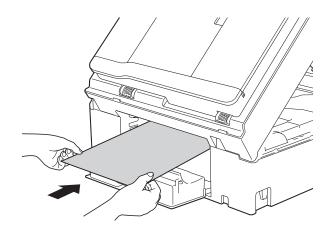


10 If the thick paper is pushing any jammed paper out, remove the jammed paper.

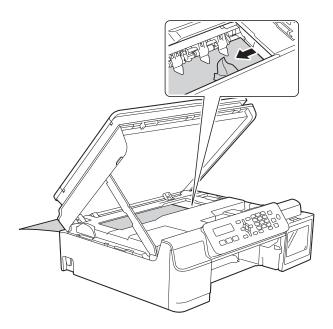


IMPORTANT

DO NOT touch the encoder strip (1). Doing this may cause damage to the machine.

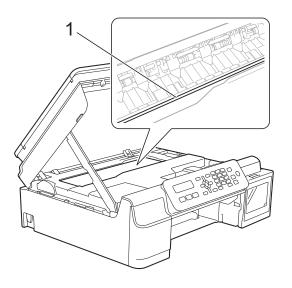


1 Pull the thick paper out of the machine.

 Close the Jam Clear Cover. Make sure the cover is closed correctly.

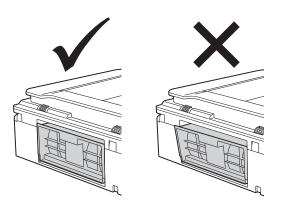

Lift the scanner cover (1) to release the lock. Gently push the scanner cover support down (2) and close the scanner cover (3) using both hands.

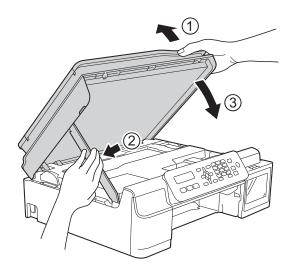


A CAUTION

Be careful not to pinch your fingers when you close the scanner cover.

Troubleshooting



14 Put the paper tray firmly back in the machine.

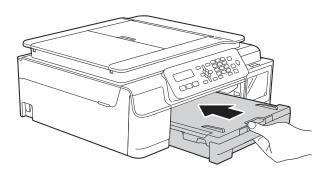

15 Re-connect the power cord.

If you are having difficulty with your machine

IMPORTANT

Using non-Brother supplies may affect the print quality, hardware performance, and machine reliability.

If you think there is a problem with your machine, check the following chart and follow the troubleshooting tips. You can correct most problems by yourself.

If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at http://support.brother.com.

NOTE

For technical help, you must contact Brother customer support.

Printing Difficulties

Difficulty	Suggestions
No printout.	Check that the correct printer driver has been installed and chosen.
	Check to see if the LCD is showing an error message. (See <i>Error and maintenance messages</i> on page 66.)
	Make sure that the machine is online.
	(Windows [®] XP and Windows Server [®] 2003) Click Start/Printers and Faxes . Right-click Brother MFC-XXXX Printer (where XXXX is your model name). If the printer is offline, it will show Use Printer Online . Select this option to enable the printer.
	(Windows Vista [®] and Windows Server [®] 2008)
	Click Click Control Panel/Hardware and Sound/Printers. Right-click
	Brother MFC-XXXX Printer (where XXXX is your model name). If the printer is offline, it will show Use Printer Online. Select this option to enable the printer.
	(Windows [®] 7 and Windows Server [®] 2008 R2)
	Click Over Click C
	XXXX is your model name) and choose See what's printing . Click Printer and make sure that Use Printer Offline is not selected.
	(Windows [®] 8 and Windows Server [®] 2012) Move your mouse to the lower right corner of your desktop. When the menu bar appears, click Settings, and then click Control Panel. In the Hardware and Sound (Hardware) group, click View devices and printers. Right-click Brother MFC-XXXX Printer (where XXXX is your model name) and select See what's printing. If printer driver options appear, select your printer driver. Click Printer in the menu bar and make sure that Use Printer Offline is not selected.
	 (Windows Server[®] 2012 R2) Click Control Panel on the Start screen. In the Hardware group, click View devices and printers. Right-click Brother MFC-XXXX Printer (where XXXX is your model name) and select See what's printing. If printer driver options appear, select your printer driver. Click Printer in the menu bar and make sure that Use Printer Offline is not selected.
	Look through the window of the ink tank to confirm the actual amount of remaining ink.
	If the remaining ink level is at or below the lower line under the triangle mark, refill the ink tank.
	A message may appear on the LCD to verify whether the ink tanks were refilled. Press 1 (Yes) to reset the ink dot counter for the refilled colour. Press 2 (No) for the non-refilled colours.
	(See Refilling the ink tanks on page 57.)

Printing Difficulties (continued)

Difficulty	Suggestions
No printout. (continued)	The document will not print if the old, unprinted data remains in the printer driver spooler. Open the printer icon, and then delete all the data. Your printer icon can be found in the following way:
	(Windows [®] XP and Windows Server [®] 2003) Click Start/Printers and Faxes .
	(Windows Vista $^{ m I\!B}$ and Windows Server $^{ m I\!B}$ 2008)
	Click 🚱/Control Panel/Hardware and Sound/Printers.
	(Windows [®] 7 and Windows Server [®] 2008 R2)
	Click 😨 / Devices and Printers / Printers and Faxes.
	(Windows [®] 8 and Windows Server [®] 2012) Move your mouse to the lower right corner of your desktop. When the menu bar appears, click Settings/Control Panel/Hardware and Sound (Hardware) group/ View devices and printers/Printers .
	(Windows Server [®] 2012 R2) Click Control Panel on the Start screen. In the Hardware group, click View devices and printers/Printers .
	(OS X v10.7.5, 10.8.x) Click System Preferences/Print & Scan .
	(OS X v10.9.x) Click the System Preferences/Printers & Scanners .
The headers or footers appear when the document displays on the	There is an unprintable area on the top and bottom of the page. Adjust the top and bottom margins in your document to allow for this.
screen but they do not show up when it is printed.	(See <i>Unprintable area</i> on page 16.)
Cannot perform "Page Layout" printing.	Check that the paper size setting in the application and in the printer driver are the same.
Print speed is too slow.	Try changing the printer driver setting. The highest resolution needs longer data processing, sending and printing time. Try the other quality settings in the printer driver as follows:
	(Windows [®]) Click Colour Settings on the Advanced tab, and make sure you uncheck Colour Enhancement .
	(Macintosh) Choose Color Settings , click Advanced Color Settings , and make sure you uncheck Color Enhancement .
	Turn the Borderless feature off. Borderless printing is slower than normal printing.
	(See Software and Network User's Guide.)
Colour Enhancement is not working correctly.	If the image data is not full colour in your application (such as 256 colour), Colour Enhancement will not work. Use at least 24 bit colour data with the Colour Enhancement feature.
Machine does not print from	Try to reduce the print resolution.
Adobe [®] Illustrator [®] .	(See Software and Network User's Guide.)

Print Quality Difficulties

Difficulty	Suggestions
Poor print quality.	Check the print quality. (See <i>Checking the print quality</i> on page 61.)
	Make sure that the Media Type setting in the printer driver or the Paper Type setting in the machine's menu matches the type of paper you are using. (See <i>Paper Type</i> on page 17.)
	(See Software and Network User's Guide.)
	Make sure that your ink is fresh. The following may cause ink to clog:
	The expiration date written on the bottle package has passed.
	The ink has been in your machine for over six months.
	The ink bottle may not have been stored correctly before use. Store the ink bottle on a level surface in a cool, dark place.
	Make sure you are using Brother Original ink. Brother does not recommend using or refilling with any kind of ink other than Brother Original ink.
	Make sure you are using one of the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 17.)
	The recommended environment for your machine is between 20 °C to 33 °C.
The printout is faint, even after refilling with Brother Original ink.	The refilled ink may not have reached the print head. Perform the following special cleaning operation:
	Press Menu and then press ▲ or ▼ and the OK button to select 1. Ink > 2.Cleaning. Press and hold down Menu, while pressing OK. The machine will begin its cleaning procedure.
	NOTE This cleaning method requires enough ink to fill the ink delivery tubes. Before cleaning, refill all ink tank colours.
White horizontal lines appear in text	Clean the print head. (See Cleaning the print head on page 61.)
or graphics.	Make sure you are using Brother Original ink.
A stre	Try using the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 17.)
	To prolong print head life, provide the best ink economy and maintain print quality, we do not recommend frequently unplugging the machine and/or leaving the
	machine unplugged for extended periods of time. We recommend using (b) to
Transferrar and a state of the	power down the machine. Using 🕐 allows minimal power to the machine
Sector Contraction of	ensuring periodic cleanings of the print head occur.
The machine prints blank pages.	Clean the print head. (See <i>Cleaning the print head</i> on page 61.)
	Make sure you are using Brother Original ink.
	To prolong print head life, provide the best ink economy and maintain print quality, we do not recommend frequently unplugging the machine and/or leaving the
	machine unplugged for extended periods of time. We recommend using (1) to
	power down the machine. Using 🕐 allows minimal power to the machine
	ensuring periodic cleanings of the print head occur.

Print Quality Difficulties (continued)

Difficulty	Suggestions
Characters and lines are blurred.	Check the printing alignment. (See Checking the print alignment on page 62.)
Printed text or images are skewed.	Make sure the paper is loaded correctly in the paper tray and the paper guides are adjusted correctly. (See <i>Loading paper and other print media</i> on page 11.)
	Make sure the Jam Clear Cover is closed correctly.
Smudge or stain at the top centre of the printed page.	Make sure the paper is not too thick or curled. (See <i>Acceptable paper and other print media</i> on page 17.)
Printing appears dirty or ink seems to run.	Make sure you are using the recommended types of paper. (See Acceptable paper and other print media on page 17.) Don't handle the paper until the ink is dry.
	Make sure the print side is face down in the paper tray.
	Make sure you are using Brother Original ink.
	If you are using photo paper, make sure that you have set the correct paper type. If you are printing a photo from your PC, set the Media Type in the printer driver.
Ink is smudged or wet when using glossy photo paper.	Be sure to check the front and back of the paper. Place the glossy surface (printing surface) face down. (See <i>Paper Type</i> on page 17.)
	If you use glossy photo paper, make sure that the paper type setting is correct.
Stains appear on the reverse side or at the bottom of the page.	Make sure the printer platen is not dirty with ink. (See Advanced User's Guide: <i>Cleaning the machine's printer platen</i> .)
	Make sure you are using Brother Original ink.
	Make sure you are using the paper support flap. (See <i>Loading paper and other print media</i> on page 11.)
	Make sure the paper feed rollers are not dirty with ink. (See Advanced User's Guide: <i>Cleaning the paper feed rollers</i> .)
The machine prints dense lines on the page.	(Windows [®]) Check Reverse Order in the Basic tab of the printer driver.
The printouts are wrinkled.	(Windows [®]) In the printer driver Advanced tab, click Colour Settings and uncheck Bi-Directional Printing .
	(Macintosh) In the printer driver, choose Print Settings , click Advanced , choose Other Print Options and uncheck Bi-Directional Printing .
	Make sure you are using Brother Original ink.

Paper Handling Difficulties

Difficulties	Suggestions
The machine does not feed paper.	Make sure the paper tray is pushed in all the way until it clicks into place.
	Make sure the Jam Clear Cover at the back of the machine is closed.
	If the LCD shows the Paper Jam message and you still have a problem, see <i>Error</i> and maintenance messages on page 66.
	If there is no paper, load a new stack of paper into the paper tray.
	If there is paper in the paper tray, make sure it is straight. If the paper is curled, straighten it. Sometimes it is helpful to remove the paper, turn the stack over and put it back into the paper tray.
	Reduce the amount of paper in the paper tray, and then try again.
	Clean the paper pick-up rollers.
	(See Advanced User's Guide: Cleaning the paper pick-up rollers.)
Photo paper does not feed correctly.	When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
Machine feeds multiple pages.	Do the following:
	Make sure the paper is loaded correctly in the paper tray.
	Remove all the paper from the tray and fan the stack of paper well, then put it back in the tray.
	Make sure you do not push the paper in too far.
	(See Loading paper and other print media on page 11.)
	Make sure the Jam Clear Cover is closed correctly. (See <i>Printer jam or paper jam</i> on page 76.)
	Make sure the Base Pad in the paper tray is not dirty. (See Advanced User's Guide: <i>Cleaning the paper pick-up rollers</i> .)
There is a paper jam.	See <i>Printer jam or paper jam</i> on page 76. Make sure the paper guides are set to the correct paper size. Do not extend the paper tray when you load A5 or smaller size paper. (The extendable tray is only available for some countries.)
Paper jam reoccurs.	If there is a repeat paper jam, a small piece of paper may be stuck in the machine. Make sure paper is not still jammed in the machine. (See <i>Additional paper jam clear operations</i> on page 79.)
The paper jams when you use	Use one of the jam prevention settings, 2-sided1 or 2-sided2.
2-sided print.	(For more information, see Software and Network User's Guide.)
	If paper jams occur often during 2-sided printing, the paper feed rollers may be stained with ink. Clean the paper feed rollers. (See Advanced User's Guide: <i>Cleaning the paper feed rollers</i> .)

Printing Received Faxes

Difficulty	Suggestions
Condensed print	Usually this is caused by a poor telephone connection. Make a copy; if your copy
Horizontal streaks	looks good, you probably had a bad connection, with static or interference on the telephone line. Ask the other party to send the fax again.
Top and bottom sentences are cut off	
Missing lines	
Vertical black lines when receiving.	The sender's scanner may be dirty. Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine.
Left and right margins are cut off or a single page is printed on two pages.	If the received faxes are divided and printed on two pages or if you get an extra blank page, your Paper Size setting may not be correct for the paper you are using.
	(See <i>Paper Size</i> on page 17.)
	Turn on Auto Reduction. (See Advanced User's Guide: <i>Printing a reduced incoming fax</i> .)

Telephone Line or Connections

Difficulty	Suggestions
Dialling does not work.	Check the line cord connections.
(No dial tone)	(Not available in New Zealand)
	Change the Tone/Pulse setting. (See Quick Setup Guide.)
	If there is no dial tone, connect a known-working telephone and telephone line cord to the socket. Then lift the external telephone's handset and listen for a dial tone. If there is still no dial tone, ask your telephone company to check the line and/or wall socket.
The machine does not answer when called.	Make sure the machine is in the correct Receive Mode for your setup. (See <i>Choose the Receive Mode</i> on page 26.) Check for a dial tone. If possible, call your machine to hear whether it answers. If there is still no answer, check the telephone line cord connection. If there is no ringing when you call your machine, ask your telephone company to check the line.

Receiving Faxes

Difficulty	Suggestions
Cannot receive a fax.	(Not available for South Africa)
	Press Hook in Fax mode to make sure your machine has a dial tone. If you hear static or interference on your fax line, call your local telephone provider.
	Check all line cord connections. Make sure the telephone line cord is plugged into the telephone wall socket and the LINE socket inside the machine. If you subscribe to DSL or VoIP services, call your service provider for connection instructions. To lower the modem speed and turn off ECM (error correction mode), see <i>Telephone line interference / VoIP</i> on page 96.
	Make sure the machine is in the correct Receive Mode. This is determined by the external devices and telephone subscriber services you have on the same line as the Brother machine. (See <i>Choose the Receive Mode</i> on page 26.)
	If you have a dedicated fax line and want your Brother machine to automatically answer all incoming faxes, select Fax Only mode.
	If your Brother machine shares a line with an external answering machine, select External TAD mode. In External TAD mode, your Brother machine will automatically receive incoming faxes and voice callers will be able to leave a message on your answering machine.
	If your Brother machine shares a line with other telephones and you want it to automatically answer all incoming faxes, select Fax/Tel mode. In Fax/Tel mode, your Brother machine will automatically receive faxes and produce a fast double-ring to alert you to answer voice calls.
	If you do not want your Brother machine to automatically answer incoming faxes, select Manual mode. In Manual mode, you must answer every incoming call and activate the machine to receive faxes.
	Another device or service at your location may be answering the call before your Brother machine answers. To test this, lower the Ring Delay setting:
	If the Receive Mode is set to Fax Only or Fax/Tel, reduce the Ring Delay to 1 ring. (See Ring Delay on page 28.)
	If the Receive Mode is set to External TAD, reduce the number of rings programmed on your answering machine to 2.
	■ If the Receive Mode is set to Manual, DO NOT adjust the Ring Delay setting.
	Have someone send you a test fax:
	If you received the test fax successfully, your machine is operating correctly. Remember to reset your Ring Delay or answering machine setting back to your original setting. If receiving problems recur after resetting the Ring Delay, then a person, device, or subscriber service is answering the fax call before the machine has a chance to answer.
	If you were not able to receive the fax, then another device or subscriber service may be interfering with your fax reception or there may be a problem with your fax line.

Receiving Faxes (continued)

Difficulty	Suggestions
(continued)	If you are using a telephone answering machine (External TAD mode) on the same line as the Brother machine, make sure your answering machine is set up correctly. (See <i>Connecting an external TAD (telephone answering device)</i> on page 40.)
	1 Connect the external TAD as shown in the illustration on page 40.
	2 Set your answering machine to answer in one or two rings.
	3 Record the outgoing message on your answering machine.
	Record five seconds of silence at the beginning of your outgoing message.
	Limit your speaking to 20 seconds.
	End your outgoing message with your Remote Activation Code for people sending manual faxes. For example: "After the beep, leave a message or press * 5 1 (* 9 1 for New Zealand) and Start to send a fax."
	4 Set your answering machine to answer calls.
	5 Set your Brother machine's Receive Mode to External TAD. (See Choose the Receive Mode on page 26.)
	Make sure your Brother machine's Fax Detect feature is set to On . Fax Detect is a feature that allows you to receive a fax even if you have answered the call on an external or extension telephone. (See <i>Fax Detect</i> on page 29.)
	If you often get transmission errors due to possible interference on the telephone line, try changing the Compatibility setting to <code>Basic(for VoIP)</code> . (See <i>Telephone line interference / VoIP</i> on page 96.)
	(South Africa only)
	If you connect your machine to a PBX or ISDN line, set the menu setting of Telephone Line Type to your telephone line type. (See <i>Setting the Telephone Line Type</i> on page 36.)

Sending Faxes

Difficulty	Suggestions
Cannot send a fax.	Check all line cord connections. Make sure the telephone line cord is plugged into the telephone wall socket and the LINE socket inside the machine.
	Print the Transmission Verification Report and check for an error. (See Advanced User's Guide: <i>Reports</i> .)
	Ask the other party to check that the receiving machine has paper.
Poor fax send quality.	Try changing your resolution to Fine or S.Fine. Make a copy to check your machine's scanner operation. If the copy quality is poor, clean the scanner. (See <i>Cleaning the scanner glass</i> on page 60.)
Transmission Verification Report shows RESULT:ERROR.	There is probably temporary noise or static on the line. Try sending the fax again. If you send a PC FAX message and see RESULT:ERROR on the Transmission Verification Report, your machine may be out of memory. To gain extra memory, you can print fax messages from the machine's memory. (See Advanced User's Guide: <i>Printing a fax from the memory</i> .) If the problem continues, ask the telephone company to check your telephone line.
	If you often get transmission errors due to possible interference on the telephone line, try changing the machine's Compatibility setting to Basic(for VoIP). (See Telephone line interference / VoIP on page 96.)
	(South Africa only)
	If you connect your machine to PBX or ISDN, set the menu setting of Telephone Line Type to your telephone line type. (See <i>Setting the Telephone Line Type</i> on page 36.)
Vertical black lines when sending.	Black vertical lines on faxes you send are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip. (See <i>Cleaning the scanner glass</i> on page 60.)

Handling Incoming Calls

Difficulty	Suggestions
The machine "hears" a voice as a CNG Tone.	If Fax Detect is set to On, your machine is more sensitive to sounds. It may mistakenly interpret certain voices or music on the line as a fax machine calling and respond with fax-receiving tones. Deactivate the machine by pressing Stop/Exit . Try avoiding this problem by turning Fax Detect to Off. (See <i>Fax Detect</i> on page 29.)
Sending a fax call to the machine.	If you answered on an extension or external telephone, press your Remote Activation Code (the factory default is * 5 1 (* 9 1 for New Zealand)). If you answered on an external telephone, press Mono Start , and press 2 to receive the fax. When your machine answers, hang up.
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, Caller ID, Voice Mail, an answering machine, an alarm system or other custom feature on a single telephone line with your machine, it may create a problem sending or receiving faxes.
	For example: If you subscribe to Call Waiting or another custom service and its signal comes through the line while your machine is sending or receiving a fax, the signal can temporarily interrupt the faxes. Brother's ECM (Error Correction Mode) feature should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive information on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, we recommend using a separate telephone line with no custom features.

Copying Difficulties

Difficulty	Suggestions
Vertical black lines or streaks appear in copies.	Black vertical lines on copies are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip, scanner glass, white bar and white plastic above them. (See <i>Cleaning the scanner glass</i> on page 60.)
Poor copy results when using the ADF.	Try using the scanner glass. (See Using the scanner glass on page 21.)
Fit to Page does not work correctly.	Make sure your source document is not skewed. Reposition the document and try again.

Scanning Difficulties

Difficulty	Suggestions
TWAIN or WIA errors appear when	(Not available in Taiwan)
starting to scan. (Windows [®])	Make sure the Brother TWAIN or WIA driver is chosen as the primary source in your scanning application. For example, in Nuance™ PaperPort™ 12SE, click Scan Settings , Select to choose the Brother TWAIN/WIA driver.
	(Taiwan only)
	Make sure the Brother TWAIN/WIA driver is chosen as the primary source. In Presto! PageManager with OCR, click File , Select Source and choose the Brother TWAIN/WIA driver.
TWAIN or ICA errors appear when starting to scan. (Macintosh)	Make sure the Brother TWAIN driver is chosen as the primary source. In PageManager, click File , Select Source and choose the Brother TWAIN driver. You can also scan documents using the ICA Scanner Driver.
	(See Software and Network User's Guide.)
OCR does not work.	Try increasing the scanner resolution.
	(Macintosh)
	Presto! PageManager must be downloaded and installed before use. For more information, see <i>Accessing Brother Support (Macintosh)</i> on page 5.
Poor scanning results when using	Clean the white bar in the ADF and the glass strip underneath it.
the ADF.	(See Cleaning the scanner glass on page 60.)
Vertical black lines appear in the scanned data.	Try using the scanner glass. (See Using the scanner glass on page 21.)

Software Difficulties

Difficulty	Suggestions
Cannot install software or print.	(Windows [®]) Run the Repair MFL-Pro Suite program on the CD-ROM. This program will repair and reinstall the software.
"Device Busy"	Make sure the machine is not showing an error message on the LCD.

Network Difficulties

Difficulty	Suggestions
Cannot print over the network.	Make sure that your machine is powered on and is online and in the Ready mode. Print a Network Configuration Report (See Advanced User's Guide: <i>Reports.</i>) and check the current Network settings printed in this list.
	If you are using a wireless connection or are having Network problems, see Software and Network User's Guide.
The network scanning feature does	(Windows [®])
not work.	It is necessary to configure the third-party Security/Firewall Software to allow Network scanning. To add port 54925 for Network scanning, enter the information below:
	In Name: Enter any description, for example Brother NetScan.
	In Port number: Enter 54925.
	In Protocol: UDP is selected.
	Please refer to the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.
	(Macintosh)
	Select Other from the Model drop-down list in the main screen of ControlCenter2. The Device Selector window appears. Reselect your network machine, make sure Status is idle , and then click OK .
The network PC-Fax Receive	(Windows [®])
feature does not work.	It is necessary to set the third-party Security/Firewall Software to allow PC-FAX Rx. To add port 54926 for Network PC-FAX Rx, enter the information below:
	In Name: Enter any description, for example Brother PC-FAX Rx.
	In Port number: Enter 54926.
	In Protocol: UDP is selected.
	Please refer to the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.
The Brother software cannot be installed.	(Windows [®])
	Allow network access to the following programs if your security software displays an alert message during MFL-Pro Suite installation.
	(Macintosh)
	If you are using a firewall function of anti-spyware or antivirus security software, temporarily disable it, and then install the Brother software.
Cannot connect to wireless network.	Investigate the problem using the WLAN Report. Press Menu, choose 6.Print Reports, and then press OK. Choose 6.WLAN Report.
	See Software and Network User's Guide.

Dial Tone detection

When you send a fax automatically, by default your machine will wait for a fixed amount of time before it starts to dial the number. By changing the Dial Tone setting to Detection, you can make your machine dial as soon as it detects a dial tone. This setting can save a small amount of time when sending a fax to many different numbers. If you change the setting and start having problems when dialling, you should change it back to the No Detection setting.

Press Menu, 0, 4.

Press ▲ or ▼ to choose Detection or No Detection. Press OK.

Press Stop/Exit.

Telephone line interference / VoIP

If you are having problems sending or receiving a fax due to possible interference on the telephone line or you are using a VoIP system, you can change the compatibility setting which reduces the modem speed to minimise errors.



Press Menu, 0, 5.

Press ▲ or ▼ to choose Normal or Basic(for VoIP). Press OK.

■ Basic(for VoIP) cuts the modem speed to 9,600 bps and turns off ECM. Unless interference is a recurring problem on your telephone line, you may prefer to use it only when needed.

To improve compatibility with most VoIP services, Brother recommends changing the compatibility setting to Basic(for VoIP).

Normal sets the modem speed at 14,400 bps.

Press Stop/Exit.

NOTE

- VoIP (Voice over IP) is a type of phone system that uses an Internet connection, rather than a traditional phone line.
- Brother does not recommend the use of a VoIP line. VoIP limitations in general can cause some functions of the fax machine not to work correctly.

Machine Information

Checking the serial number

You can see the machine's serial number on the LCD.

- Press **Menu**, **7**, **1**. Your machine's serial number will appear on the LCD.
- Press Stop/Exit.

Checking the firmware version

You can see the machine's firmware version on the LCD.

1

Press **Menu**, **7**, **2**. Your machine's firmware version will appear on the LCD.

Press Stop/Exit.

Reset functions

The following reset functions are available:

1 Machine Reset

You can reset the machine's settings, such as the Date and Time and Ring Delay.

2 Network

You can reset the print server back to its factory settings, such as the password and IP address information.

3 Address&Fax

Address & Fax resets the following settings:

Speed Dial

(Speed-Dial and Setup Groups)

Station ID

(Name and Number)

Report settings

(Transmission Verification Report, Speed Dial and Fax Journal)

4 All Settings

You can restore all settings to the factory default.

Brother strongly recommends performing this procedure before handing over or disposing of the machine.

How to reset the machine

1 Press Menu, 0, 6.

Press ▲ or ▼ to choose the reset function you want. Press **OK**.

3 Press 1 to reset the machine or press 2 to exit from the reset function.

Press **1** to reboot the machine.

С


Settings and features tables

Using the Settings tables

Your machine is easy to set up and operate. All you have to do is press the Menu keys to choose the settings and options you want to set as they are displayed on the screen.

We have created step-by-step Settings tables so you can see all the available choices for each setting and feature at-a-glance. You can use these tables to quickly choose your preferred settings in the machine.

Menu keys

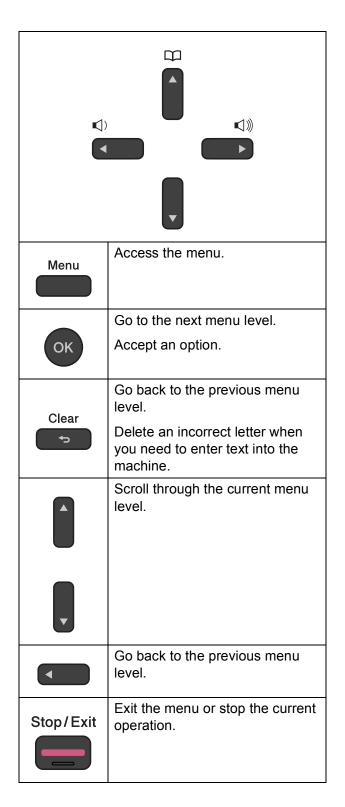


To access the menu mode:



1 Press Menu.

2 Choose an option. You can scroll more quickly through each menu level by pressing \blacktriangle or \blacktriangledown .

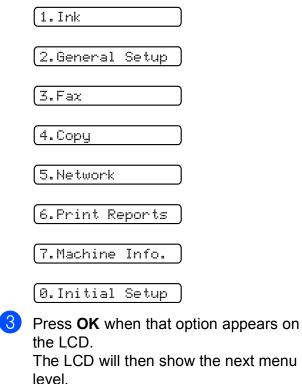

4 Press ▲ or ▼ to scroll to choose the setting you want to change. Press OK.

- 5 Press ▲ or ▼ to choose the option you want. Press OK. The LCD will show Accepted.
- 6 Press Stop/Exit.

Menu table

The menu table will help you understand the menu selections of your machine. The factory settings are shown in bold with an asterisk.

NOTE

Once you learn the order of the options, you can access a setting by pressing **Menu**, pressing the number of the Level 1 option, pressing the number of the Level 2 option, and so on, until you see the setting you want.

Menu (

ality Lets you check the print 61
quality or alignment. 62
Lets you clean the print 61
head.
You can set the machine —
not to display the Ink Low error message
if you do not need the
notification.
Sets the time to return to See \blacklozenge .
Fax mode.
er* Sets the type of paper in 17
aper the paper tray.
BP71
ossy
Sets the size of the paper 17
in the paper tray. (Legal is only available for some
countries.)
-

Level1	Level2	Level3	Options	Descriptions	Page
2.General Setup	4.Volume	1.Ring	Off	Adjusts the ring volume.	9
(Continued)			Low		
			Med*		
			High		
		2.Beeper	Off	Adjusts the volume level	9
			Low*	of the beeper.	
			Med		
			High		
		3.Speaker	Off	Adjusts the speaker	9
			Low	volume.	
			Med*		
			High		
	5.LCD Contrast	—	Light	Adjusts the contrast of the	10
			Dark*	LCD.	
	6.Sleep Mode	—	1 Min	You can choose how long	See ♦.
			2 Mins	the machine will remain idle before it goes into	
			3 Mins	Sleep Mode.	
			5 Mins*		
			10 Mins		
			30 Mins		
			60 Mins		
See Advanced L	Jser's Guide.				
The default setting	s are shown in Bold	with an asterisk.			

Level1	Level2	Level3	Options	Descriptions	Page
.Fax	1.Setup Receive	1.Receive Mode	Fax Only*	Choose the Receive Mode that best suits your	26
			Fax/Tel	needs.	
			External TAD		
			Manual		
		2.Ring Delay	2 - 10 (2*)	Sets the number of rings	28
			(Example for Australia)	before the machine answers in Fax Only or Fax/Tel mode.	
		3.F/T Ring Time	20Secs	Sets the length of the fast	28
			30Secs*	double-ring time in Fax/Tel mode.	
			40Secs		
			70Secs		
			(For New Zealand)		
			20Secs		
			30Secs*		
			40Secs		
		55Secs			
		4.Fax Detect	On*	Receives fax messages	29
			Off	automatically when you answer a call and hear fax tones.	
		5.Remote Codes	Remote Codes:	Allows you to answer all	43
			(Options)	calls at an extension or external telephone and	
			On*	use codes to turn the	
			Off	machine on or off. You	
			Act.Code:	can personalize these codes.	
			(*51 (*91 for New Zealand))		
			Deact.Code: (#51(#91forNew Zealand))		
		6.Auto Reduction	On*	Cuts the size of incoming	See 🔶
			Off	faxes to fit the paper size.	
		7.Memory Receive	Off* PC Fax Receive	You can set the machine to send faxes to your PC.	
		IC FAX NECEIVE	If you choose PC-Fax Receive, you can turn on the safety feature Backup Print.		
See Advan	ced User's Guide.		•	•	•
The default se	ettings are shown in Bold	with an asterisk			

Level1	Level2	Level3	Options	Descriptions	Page
3.Fax	2.Setup Send	1.Fax Resolution	Standard*	Sets the default resolution	See 🔶
(Continued)			Fine	for outgoing faxes.	
			S.Fine		
			Photo		
		2.Contrast	Auto*	Changes the lightness or	
			Light	darkness of faxes you send.	
			Dark		
		3.Real Time TX	Next Fax Only	Sends a fax without using	
			On	the memory.	
			Off*		
		4.Overseas Mode	On	If you are having	
			Off*	problems sending faxes overseas, set this to on.	
		0.Glass ScanSize	A4*	Adjusts the scan area of	24
			Letter	the scanner glass to the size of the document.	
	3.Report Setting	1.Transmission	On	Choose the initial setup	25
		(1.XMIT Report	On+Image	for Transmission Verification Report.	
		(For South Africa))	Off*		
			Off+Image		
			Off	Sets the interval for the automatic printing of the Fax Journal.	See 🔶
			Every 50 Faxes*		
			Every 6 Hours	If you have chosen any	
			Every 12 Hours	other option than Off or Every 50 Faxes, you	
			Every 24 Hours	can set the time for the	
			Every 2 Days	chosen option. If you have chosen	
			Every 7 Days	Every 7 Days, you can set the day of the week.	
	4.Print Document	—	—	Prints incoming faxes stored in the memory.	
	5.Remaining Jobs	_	_	Check which jobs are in the memory and cancel chosen jobs.	

The default settings are shown in Bold with an asterisk.

С

0.Miscellaneous	<pre>1.TX Lock 2.Distinctive (For Australia, Singapore and Hong Kong) 2.FaxAbility (For New Zealand only)</pre>	 off* On (FaxAbility) off* On (Call Waiting)	Stops unauthorized users from changing the machine's current settings.Use with phone company distinctive ringing service allows you to have a voice number and fax number on the one phone line.If you have FaxAbility from Telecom, you can use this function to store the ringing pattern of your fax number. And if you set in to On, you should use the registered number only.If you have Call Waiting	See ♦. 30 37 33 33
	(For Australia, Singapore and Hong Kong) 2.FaxAbility (For New	On (FaxAbility) off* On	 distinctive ringing service allows you to have a voice number and fax number on the one phone line. If you have FaxAbility from Telecom, you can use this function to store the ringing pattern of your fax number. And if you set in to On, you should use the registered number only. 	37 33
	- (For New	Off* On	from Telecom, you can use this function to store the ringing pattern of your fax number. And if you set in to on, you should use the registered number only.	
		(Call Waiting)	If you have Call Waiting	34
		Off* On	as well as FaxAbility, set the Call Waiting to on.	
	3.Caller ID (Not available for Taiwan and some countries)	Display#	View the last 30 Caller IDs stored in the memory.	32 35 38
1.Quality	_	Normal* Best	Chooses the Copy resolution for your type of document.	See ♦.
2.Density	_		Adjusts the density of copies.	
2	.Density or's Guide.	countries) .Quality — .Density — or's Guide.	countries) .Quality - Normal* Best .Density	countries) Normal* Chooses the Copy resolution for your type of document. .Quality - - Adjusts the density of copies. .Density - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -

Network menu

Level1	Level2	Level3	Options	Descriptions	Page
5.Network	1.TCP/IP	1.BOOT Method	Auto*	Chooses the BOOT	See +
			Static	method that best suits your needs.	
			RARP	,	
			BOOTP		
			DHCP		
		2.IP Address	[000-255].	Enter the IP address.	
			[000-255].		
			[000-255].		
			[000-255]		
		3.Subnet Mask	[000-255].	Enter the Subnet mask.	
			[000-255].		
			[000-255].		
			[000-255]		
		4.Gateway	[000-255].	Enter the Gateway	
			[000-255].	address.	
			[000-255].		
			[000-255]		
		5.Node Name	BRWXXXXXXXXXXXXX	Lets you check the Node name.	
		6.WINS Config	Auto*	Chooses the WINS	
			Static	configuration mode.	
		7.WINS Server	(Primary)	Specifies the IP address	
			000.000.000.000	of the primary or secondary WINS server.	
			(Secondary) 000.000.000.000		
		8.DNS Server	(Primary)	Specifies the IP address	-
		_	000.000.000.000	of the primary or	
			(Secondary) 000.000.000.000	secondary DNS server.	
		9.APIPA	On*	Automatically allocates	1
			Off	the IP address from the link-local address range.	
	2.WLAN Assistant	_	_	You can configure your wireless network settings using the Brother CD-ROM.	
	3.Setup Wizard	_	_	You can manually configure your print server for a wireless network.	

The default settings are shown in Bold with an asterisk.

С

Level1	Level2	Level3	Options	Descriptions	Page
5.Network (Continued)	4.WPS/AOSS	_	_	You can easily configure your wireless network settings using the one- button push method.	See +.
	5.WPS w/PIN Code	_	_	You can easily configure your wireless network settings using WPS with a PIN code.	
	6.WLAN Status	1.Status	-	You can see the current wireless network status.	
		2.Signal	_	You can see the current wireless network signal strength.	
		3.SSID	_	You can see the current SSID.	
		4.Comm. Mode	—	You can see the current Communication Mode.	
	7.MAC Address		-	You can see your machine's MAC address from the control panel.	
	8.WLAN Enable	—	On Off *	Lets you use the wireless network connection.	
	0.Network Reset	_	_	Restores all network settings to the factory default.	
	and Network User's G		<u> </u>		
The default setting	gs are shown in Bold	with an asterisk.			

Menu (continued)

Level1	Level2	Level3	Options	Descriptions	Page
6.Print Reports	1.XMIT Verify	—	—	Prints these lists and	See ♦.
	2.Address Book	_	—	reports.	
	3.Fax Journal	—	—		
	4.User Settings	—	—		
	5.Network Config	—	—		
	6.WLAN Report	—	—		
	7.Caller ID (Not available for Taiwan and some	_	_		
 See Advanced L \$ See Quick Setup 					
+ See Quick Selu	p Guide.				
The default setting	s are shown in Bold	with an asterisk.			

Level1	Level2	Level3	Options	Descriptions	Page
7.Machine Info.	1.Serial No.	_	_	Lets you check the serial number of your machine.	97
	2.Version	—	—	Lets you check the firmware version of your machine.	
0.Initial Setup	1.Date&Time	1.Date&Time	_	Sets the date and time on the screen and in the headings of the faxes you send.	63
		2.Daylight Save	Forward Hour	Manually changes for	See ♦.
		(Not available in South Africa)	Backward Hour	Daylight Savings Time.	
		2.Auto Daylight	On*	Automatically changes for	
		(For South Africa only)	Off	Daylight Savings Time.	
	2.Station ID	—	Fax:	Enter your name and fax	See ‡.
			Name:	number to appear on each page you fax.	
	3.Tone/Pulse	—	Tone [*]	Choose the dialling mode.	
	(Not available in New Zealand)		Pulse		
	4.Dial Tone	—	Detection	Turns Dial Tone Detection	96
			No Detection*	on or off.	
	5.Phone Line Set	—	Normal*	Choose the telephone	36
	(For South Africa		PBX	line type.	
	only)		ISDN		
	5.Compatibility		Normal*	Adjusts the modem speed	96
	(6.Compatibility (For South Africa))		Basic(for VoIP)	to help resolve transmission problems.	

‡ See Quick Setup Guide.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page
0.Initial Setup (Continued) (7.Reset (For South Africa)) 0.Local Language (depending on your country)	(7.Reset (For	1.Machine Reset	1.Reset 2.Exit	You can reset the machine's settings, such as the Date and Time and Ring Delay.	97
		2.Network	1.Reset 2.Exit	Resets the print server back to the factory defaults, such as the password and IP address information.	*
	3.Address&Fax	1.Reset 2.Exit	Deletes all stored Speed Dial numbers and faxes, restores the Station ID, Speed Dial List, Transmission Verification Report and Fax Journal back to the factory default settings.	*	
		4.All Settings	1.Reset 2.Exit	Resets all the machine's settings back to the factory default.	•
	•	_	(Choose the language you want to use)	Allows you to change the LCD language for your country.	See ♦.

Fax Resolution (



Level1	Level2	Level3	Options	Descriptions	Page				
—	—	—	Standard*	Sets the resolution for	See ♦.				
			Fine	outgoing faxes.					
			S.Fine						
			Photo						
See Advanced U	See Advanced User's Guide.								
The default setting	s are shown in Bold	with an asterisk.							





Level1	Level2	Level3	Options	Descriptions	Page
Layout(2in1 ID)	—	—	Off(lin1)*	You can make N in 1 or	See ♦
			2in1(ID)	Poster copies.	
			2in1(P)		
			2in1(L)		
			4in1(P)		
			4in1(L)		
			Poster(3x3)		
Quality	—	—	Normal*	Choose the Copy	
			Best	resolution for the next copy.	
Enlarge/Reduce	—	—	Fit to Page	You can choose the	
			Custom(25-400%)	enlargement/reduce ratio for the next copy.	
			198% 10x15cm→A4		
		186%10x15cm→LTR			
		141% A5→A4			
			100%*		
			97% LTR→A4		
			93% A4→LTR		
			83% LGL→A4		
			69% A4→A5		
			47% A4→10x15cm		
Paper Type	—	—	Plain Paper*	Choose the paper type that matches the paper in the tray.	48
			Inkjet Paper		
			Brother BP71		
			Other Glossy		
Paper Size	—	—	A4*	Choose the paper size	48
			A5	that matches the paper in the tray. (Legal is only	
			10(W)x15(H)cm	available for some	
			Letter	countries.)	
			Legal		

С

Level1	Level2	Level3	Options	Descriptions	Page
Density	—	—	-=+	Adjusts the density of	See ♦.
			+	copies.	
			+*		
			+		
			+		
Stack/Sort	—	—	Stack*	You can choose to stack or sort multiple copies.	
			Sort		
No. of Copies	—	—	—	You can enter the number	47
				of copies that you want to make.	
Remove Bkg. Clr	_	_	Off*	Change the amount of background colour that is removed.	See ♦.
			Low		
			Medium		
			High		
♦ See Advanced L	Jser's Guide.	•			
The default setting	s are shown in Bold	with an asterisk.			

SCAN (

Onconscience consection consectio				Level2	Level1		
Scan Type - Colour* Black and White You can choose the scan type for your document. Resolution - 100dpi 200dpi* 300dpi 600dpi You can choose the scan resolution for your document. File Type - (If you choose the Colour option in the Scan Type setting) You can choose the file format for your document. PDF* JPEG (If you choose the Mono option in the Scan Type setting) You can choose the scan format for your document. Scan Size - A4* You can choose the scan size for your document. Scan Size - A4* You can choose the scan size for your document. Business Card Letter Letter Capality available for some countries.) Some countries.) Remove Bkg. Clr - Off* Change the amount of background colour that is	the machine's settings,			Set Options	Scan to E-mail		
Image: Note of the section of the	ptions.	The settings below will appear when On is selected in Set Options.					
File Type - 200dpi* 300dpi 600dpi resolution for your document. File Type - (If you choose the Colour option in the Scan Type setting) You can choose the file format for your document. PDF* JPEG (If you choose the Mono option in the Scan Type setting) You can choose the scan ster for your document. Scan Size - A4* You can choose the scan size for your document. Scan Size - A4* You can choose the scan size for your document. Business Card Letter Edgal Change the amount of background colour that is			—	Scan Type			
File Type — (If you choose the Colour option in the Scan Type setting) You can choose the file format for your document. PDF* JPEG (If you choose the Colour option in the Scan Type setting) You can choose the file format for your document. Scan Size — A4* You can choose the scan size for your document. Scan Size — A4* You can choose the scan size for your document. Remove Bkg. Clz — Off* Change the amount of background colour that is	You can choose the scan	100dpi	_	Resolution			
File Type (If you choose the Colour option in the Scan Type setting) You can choose the file format for your document. PDF* JPEG (If you choose the Mono option in the Scan Type setting) PDF* DPDF* JPEG (If you choose the Mono option in the Scan Type setting) PDF* DPDF* JTEF Scan Size A4* Scan Size A4* You can choose the scan size for your document. Letter Legal Letter Legal Remove Ekg. Clr Off* Change the amount of background colour that is	-						
File Type (If you choose the Colour option in the Scan Type setting) You can choose the file format for your document. PDF* JPEG (If you choose the Mono option in the Scan Type setting) You can choose the file format for your document. PDF* JPEG If you choose the Mono option in the Scan Type setting) You can choose the scan size for your document. Scan Size A4* A5 10x15cm Business Card Letter Letter Legal Change the amount of background colour that is	Jocument.	_					
Colour option in the Scan Type setting) format for your document. PDF* JPEG (If you choose the Mono option in the Scan Type setting) PDF* PDF* JPEF Scan Size — A4* You can choose the scan size for your document. Letter Legal Remove Bkg. Clr — Remove Bkg. Clr — Off* Change the amount of background colour that is		_					
JPEG (If you choose the Mono option in the Scan Type setting)JPEF* TIFFScan SizeA4* A5 10x15cm Business Card Letter LegalYou can choose the scan size for your document. (Legal is only available for some countries.)Remove Bkg. ClrOff* LowChange the amount of background colour that is		Colour option in the Scan Type		File Type			
Image: setting		PDF*					
Mono option in the Scan Type setting) PDF* TIFF Scan Size A4* You can choose the scan size for your document. A5 10x15cm Business Card Letter Legal Change the amount of background colour that is		JPEG					
Scan Size A4* You can choose the scan size for your document. A5 10x15cm Legal is only available for some countries.) Business Card Letter Legal Remove Bkg. Clr Off* Change the amount of background colour that is		Mono option in the Scan Type					
Scan Size — A4* You can choose the scan size for your document. A5 10x15cm Some countries.) Business Card Letter Legal Remove Bkg. Clr — Off* Change the amount of background colour that is		PDF*					
Remove Bkg. Clr — A5 size for your document. 10x15cm 10x15cm come countries.) Business Card Letter Legal Legal Change the amount of background colour that is		TIFF					
AS 10x15cm (Legal is only available for some countries.) Business Card Letter Legal Legal Change the amount of background colour that is	You can choose the scan	A4*	_	Scan Size			
Remove Bkg. Clr - Off* Change the amount of background colour that is	size for your document.	A5					
Business Card Letter Legal Remove Bkg. Clr - Off* Low		10x15cm					
Remove Bkg. Clr — Off* Change the amount of background colour that is	Joine Journalos.	Business Card					
Remove Bkg. Clr Off* Change the amount of background colour that is		Letter					
background colour that is		Legal					
$\circ \cap W$	•	Off*	—	Remove Bkg. Clr			
l removea.	background colour that is removed.	Low					
Medium		Medium					
High		High					

Level1	Level2	Level3	Options	Descriptions	Page	
Scan to Image	Set Options	_	Off* On	If you want to use the control panel to change the machine's settings, choose On.	See +.	
	The settings below will appear when On is selected in Set Options.					
	Scan Type	_	Colour* Black and White	You can choose the scan type for your document.		
	Resolution	_	100dpi	You can choose the scan	+	
			200dpi*	resolution for your		
			300dpi	document.		
			600dpi			
	File Type		(If you choose the Colour option in the Scan Type setting)	You can choose the file format for your document.		
			PDF*			
			JPEG			
			(If you choose the Mono option in the Scan Type setting)			
			PDF*			
			TIFF			
	Scan Size	—	A4*	You can choose the scan		
			A5	size for your document.		
			10x15cm	(Legal is only available for some countries.)		
			Business Card	,		
			Letter			
			Legal			
	Remove Bkg. Clr	—	Off*	Change the amount of]	
			Low	background colour that is removed.		
			Medium			
			High			
+ See Software an	nd Network User's G	uide.				
The default setting	s are shown in Bold	with an asterisk.				

Level1	Level2	Level3	Options	Descriptions	Page		
Scan to OCR	Set Options	—	Off*	If you want to use the	See +.		
(Available after			On	control panel to change the machine's settings,			
Presto! PageManager is				choose On.			
downloaded for	The settings below	The settings below will appear when On is selected in Set Options.					
Macintosh users.	Scan Type	_	Colour	You can choose the scan			
See Accessing Brother Support			Black and White*	type for your document.			
(Macintosh)	Resolution	—	100dpi	You can choose the scan resolution for your document.			
on page 5.)			200dpi*				
			300dpi				
			600dpi				
	File Type	—	Text*	You can choose the file format for your document.			
			HTML				
			RTF				
	Scan Size	—	A4*	You can choose the scan			
			A5	size for your document.			
			10x15cm	(Legal is only available for some countries.)			
			Business Card	some countries.			
			Letter				
			Legal				
+ See Software ar	I nd Network User's G	uide.			1		
The default setting	s are shown in Bold	with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page	
Scan to File	Set Options	_	Off* On	If you want to use the control panel to change the machine's settings, choose On.	See +.	
	The settings below will appear when On is selected in Set Options.					
	Scan Type	—	Colour*	You can choose the scan		
			Black and White	type for your document.		
	Resolution	—	100dpi	You can choose the scan		
			200dpi*	resolution for your document.		
			300dpi			
			600dpi			
	File Type	—	(If you choose the Colour option in the Scan Type setting)	You can choose the file format for your document.		
			PDF*			
			JPEG			
			(If you choose the Mono option in the Scan Type setting)			
			PDF*			
			TIFF			
	Scan Size	—	A4*	You can choose the scan		
			A5	size for your document.		
			10x15cm	(Legal is only available for some countries.)		
			Business Card			
			Letter			
			Legal			
	Remove Bkg. Clr	_	Off*	Change the amount of		
			Low	background colour that is removed.		
			Medium			
			High			
Web Service	Scan	—	_	You can scan data by		
(Appears when you install a Web Services Scanner, which is displayed in your computer's Windows [®] Explorer.)	Scan for E-mail	_	—	using the Web Services protocol.		
	Scan for Fax	_	—			
	Scan for Print	—				
+ See Software an	nd Network User's G	uide.				
		with an asterisk.				

Address Book) □

Level1	Level2	Level3	Options	Descriptions	Page
Search	—	—	—	You can set up dial by pressing only a few keys.	44
Set Speed Dial	_	_	_	Stores Speed Dial numbers, so you can dial by pressing only a few keys (and Start).	45
Setup Groups	—	—	—	Sets up Group numbers for broadcasting.	See ♦.
♦ See Advanced L	Jser's Guide.			1	

Entering Text

When you are setting certain menu selections, such as the Station ID, you may need to enter text into the machine. Most dial pad keys have three or four letters printed on keys. The keys for 0, # and * are used for special characters.

Press the appropriate dial pad key the number of times shown in this reference table to access the character you want.

Press Key	one time	two times	three times	four times	five times
2	А	В	С	2	А
3	D	Е	F	3	D
4	G	Н	I	4	G
5	J	К	L	5	J
6	М	Ν	0	6	М
7	Р	Q	R	S	7
8	Т	U	V	8	Т
9	W	Х	Υ	Z	9

Inserting spaces

To enter a space in a fax number, press ► once between numbers. To enter a space in a name, press ► twice between characters.

NOTE

The characters that are available may differ depending on your country.

Making corrections

If you entered an incorrect character and want to change it, press ◀ to move the cursor under the incorrect character, and then press **Clear**. Enter the correct character. You can also use the cursor to go back and insert letters.

Press Clear for each character you want to erase.

Repeating letters

If you need to enter a letter that is on the same key as the letter before, press ► to move the cursor to the right before you press the key again.

Special characters and symbols

Press *, **#** or **0** repeatedly until you see the special character or symbol you want.

 Press *
 for
 (space) ! " # \$ % & '() * + , - . / €

 Press #
 for
 : ; < = > ? @ []^__

 Press 0
 for
 Ä Ë Ö Ü À Ç È É 0



Specifications

General


NOTE

This chapter provides a summary of the machine's specifications. For additional specifications visit <u>http://www.brother.com</u>.

Printer Type	Inkjet	
Print Head	Mono:	Piezo with 210 nozzles \times 1
	Colour:	Piezo with 70 nozzles \times 3
Memory Capacity	64 MB	
LCD (Liquid Crystal Display)	16 characters × 1 lin	e
Power Source	(Taiwan)	
	AC 100 to 120 V 50/	60 Hz
	(For Australia and ot	her countries)
	AC 220 to 240V 50/6	60Hz
Power Consumption ¹	Copying Mode:	Approx. 16 W ²
	Ready Mode:	Approx. 3 W ³
	Sleep Mode:	Approx. 1.1 W ³
	Off:	Approx. 0.2 W ^{3 4}

- ¹ Measured when the machine is connected to the USB interface. Power consumption varies slightly depending on the usage environment or part wear.
- ² When using ADF, resolution: standard / document: ISO/IEC 24712 printed pattern.
- ³ Measured according to IEC 62301 Edition 2.0.
- ⁴ Even when the machine is turned off, it will automatically turn itself on periodically for print head maintenance, and then turn itself off.

Dimension

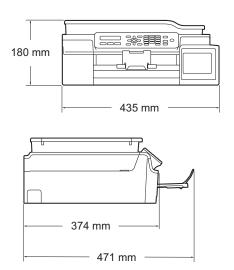

Weight	8.3kg			
Noise Level	Sound Pressure			
	Operating:	50 dB(A) (Maximum) ¹		
Temperature	Operating:	10 to 35 °C		
	Best Print Quality:	20 to 33 °C		
Humidity	Operating:	20 to 80% (without condensation)		
	Best Print Quality:	20 to 80% (without condensation)		
ADF (automatic	Up to 20 pages			
document feeder)	Paper: 80 gsm A4 or Letter size			
Document Size	ADF Width: 148 mm to 215.9 mm			
	ADF Length: 148 mm to 355.6 mm			
	Scanner Glass Width: Max. 215.9 mm			
	Scanner Glass Length: Max. 297 mm			

¹ Noise depends on printing conditions.

Print media

Paper Input	Paper Tray
	Paper type:
	Plain Paper, Inkjet Paper (coated paper) and Glossy Paper ¹
	■ Paper size ² :
	A4, Legal ³ , Executive, Letter, JIS B5 ³ , A5, A6, Envelopes (Com-10, DL, C5, Monarch), Photo (10 \times 15 cm), Photo 2L (13 \times 18 cm) and Index Card (127 \times 203 mm)
	Width: 98 mm - 215.9 mm
	Length: 148 mm - 355.6 mm
	For more details, see <i>Paper weight, thickness and capacity</i> on page 19.
	Maximum paper tray capacity:
	Approx. 100 sheets of 80 gsm plain paper
Paper Output	Up to 50 sheets of 80 gsm plain paper (face up print delivery to the output paper tray) ¹

- ¹ For glossy paper, remove printed pages from the output paper tray immediately after they exit the machine to avoid smudging.
- ² See *Paper type and size for each operation* on page 19.
- ³ Only available for some countries.

Fax

NOTE

You can receive and send only monochrome faxes.

Compatibility	ITU-T Group 3
Modem Speed	Automatic Fallback
	14,400 bps
Scanning Width	ADF: 208 mm (A4)
	Scanner Glass: 204 mm (A4)
Printing Width	204 mm (A4)
Greyscale	8 bit (256 levels)
Resolution	Standard
	203 × 98 dpi
	Fine
	203 × 196 dpi
	Superfine
	203 × 392 dpi
	Photo
	203 × 196 dpi
Speed Dial	40 stations
Groups	Up to 6
Broadcasting	90 (40 Speed Dial/50 Manual Dial)
Automatic Redial	3 times at 5 minute intervals
Memory Transmission	Up to 170 ¹ pages
Out of Paper Reception	Up to 170 ¹ pages

¹ "Pages" refers to the "ITU-T Test Chart #1" (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

Сору

Colour/Monochrome	Yes/Yes
Copy Width	204 mm ¹
Multiple Copies	Stacks/Sorts up to 99 pages
Enlarge/Reduce	25% to 400% (in increments of 1%)
Resolution	Prints up to $1200 \times 2400 \text{ dpi}$

¹ When copying on A4 size paper.

Scanner

Colour/Monochrome	Yes/Yes
TWAIN Compliant	Yes
	(Windows [®] XP ¹ /Windows Vista [®] /Windows [®] 7/Windows [®] 8)
	(OS X v10.7.5 / 10.8.x /10.9.x)
WIA Compliant	Yes
	(Windows [®] XP ¹ /Windows Vista [®] /Windows [®] 7/Windows [®] 8)
ICA Compliant	Yes (OS X v10.7.5 / 10.8.x /10.9.x)
Colour Depth	30 bit colour Processing (Input)
	24 bit colour Processing (Output) / 256 levels per colour
Greyscale	10 bit colour Processing (Input)
	8 bit colour Processing (Output) / 256 levels per colour
Resolution	Up to 19200 \times 19200 dpi (interpolated) 2
	Up to 1200 $ imes$ 2400 dpi (optical) (Scanner Glass)
	Up to 1200 $ imes$ 600 dpi (optical) (ADF)
Scanning Width and Length	(Scanner Glass)
	Width: Up to 213.9 mm
	Length: Up to 295 mm
	(ADF)
	Width: Up to 213.9 mm
	Length: Up to 353.6 mm

¹ Windows[®] XP in this User's Guide includes Windows[®] XP Home Edition, Windows[®] XP Professional, and Windows[®] XP Professional x64 Edition.

² Maximum 1200 × 1200 dpi scanning when using the WIA Driver for Windows[®] XP, Windows Vista[®], Windows[®] 7 and Windows[®] 8 (resolutions up to 19200 × 19200 dpi can be selected by using the Brother scanner utility).

Printer

Resolution

Printing Width ³

Borderless ²

Print Speed⁴

Up to 1200×6000 dpi 204 mm [210 mm (borderless) ¹] A4, Letter, A6, Photo (10 × 15 cm), Index Card (127 × 203 mm), Photo 2L (13 × 18 cm)

- ¹ When the Borderless feature is set to On.
- ² See *Paper type and size for each operation* on page 19.
- ³ When printing on A4 size paper.
- ⁴ For detailed specifications visit <u>http://www.brother.com</u>.

Interfaces

A USB 2.0 interface cable that is no longer than 2 m. USB ^{1 2}

Wireless LAN

IEEE 802.11b/g/n (Infrastructure/Ad-hoc Mode)

- 1 Your machine has a Hi-Speed USB 2.0 interface. The machine can also be connected to a computer that has a USB 1.1 interface.
- ² Third party USB ports are not supported.

Network

NOTE

For more information about the Network specifications, see Software and Network User's Guide.

You can connect your machine to a network for Network Printing, Network Scanning, PC Fax Send, PC Fax Receive (Windows[®] only) and Remote Setup ¹. Also included is Brother BRAdmin Light ² Network Management software.

Wireless Network Security	SSID (32 characters), WEP 64/128 bit, WPA-PSK (TKIP/AES), WPA2-PSK (AES)		
Wireless Setup	AOSS™	Yes	
Support Utility	WPS	Yes	

¹ See *Computer requirements* on page 127.

² (Windows[®]) If you require more advanced printer management, use the latest Brother BRAdmin Professional utility version that is available as a download from <u>http://support.brother.com</u>. (Macintosh) The latest Brother BRAdmin Light is available as a download from http://support.brother.com.

Computer requirements

		PC In			Hard Disk Sp	ace to instal
•	latform & Operating tem Version	USB ²	Wireless 802.11b/g/n	Processor	For Drivers	For Applications (including Drivers)
Windows [®] Operating System	Windows [®] XP Home ^{1 4} Windows [®] XP	Printing PC Fax ³ Scanning		32bit (x86) or 64bit (x64) processor	150 MB	1 GB
	Professional ¹⁴ Windows Vista ^{® 14}				500 MB	1.3 GB
	Windows Vista [®] 7 ¹⁴				650 MB	1.5 00
	Windows [®] 8 ¹⁴					
	Windows [®] 8.1 ¹⁴					
	Windows Server [®] 2003	N/A	Printing		50 MB	N/A
	Windows Server [®] 2003 R2					
	Windows Server [®] 2008					
	Windows Server [®] 2008 R2			64bit (x64) processor		
	Windows Server [®] 2012					
	Windows Server [®] 2012 R2					
Macintosh	OS X v10.7.5	Printing		Intel [®]	80 MB	550 MB
Operating System	OS X v10.8.x	PC Fax (Sen	id) ³	Processor		
-,	OS X v10.9.x	Scanning				
Conditions:						
Brother S	1200×1200 resolution. Using the contrast of the contrast	•	For the latest http://support	driver update .brother.com.	s, visit us at	
19200×19200 dpi. ² Third party USB ports are not supported.		All trademarks, brand and product names are the property of their respective companies.			are the	
	upports black and white o				companies.	
⁴ PaperPort (SP3 or gr	t™ 12SE supports Windo reater), XP Professional (KP Professional x64 Editi	ws [®] XP Home SP3 or				
	Vindows Vista [®] (SP2 or و [©] 7, Windows [®] 8 and Win					

Supply Specifications

Service Life of Ink Bottle	The first time you fill the ink tank the machine will use an amount of ink to fill the ink delivery tubes for high quality printouts. This process will only happen once. After this process is complete the ink bottles provided with your machine will have a lower yield than standard ink bottles (90%). With all following ink bottles you can print the specified number of pages.
Replacement Consumables	<black bottle="" ink=""> BT6000BK <yellow bottle="" ink=""> BT5000Y <cyan bottle="" ink=""> BT5000C <magenta bottle="" ink=""> BT5000M</magenta></cyan></yellow></black>
	Black - Approximately 6,000 pages ¹
	Yellow, Cyan and Magenta - Approximately 5,000 pages ¹
	 Quoted yields are extrapolated based on Brother original methodology using Test Patterns ISO/IEC 24712. Quoted yields are not based on ISO/IEC 24711.

Index

Α

Е

Address Book	
Speed Dial	
changing	46
deleting	46
setting up	45
using	44
ADF (automatic document feeder)	20
Answering machine (TAD)	40
connecting	41
Apple Macintosh	
See Software and Network User's	Guide.
Automatic	
fax receive	26
Fax Detect	29

В

Brother	
CreativeCenter	5

С

8
8
8
8
1
0
1
2
6
8
8
1
2
3

D

Dialling	
a pause	45
Address Book	44
manual	44
Distinctive Ring	
turning off	31, 37
turning on	31, 37
Document	
loading	20, 21

Ε

Envelopes14,	19
Error messages on LCD	
B&W Print Only	
Cannot Print	67
Clean Unable	
Comm. Error	
Cover is Open	
Data Remaining	67
Document Jam	68
Init Unable	67
Ink Box Full	69
Ink Low	70
InkBox NearFull	69
No Paper Fed	71
Not Registered	71
Out of Memory	72
Paper Jam	72
Print Unable	
Scan Unable	67
Wrong Paper Size	73
Extension telephone, using	43
External telephone, connecting	42

F

Fax codes		
Remote Activation Code		
Remote Deactivation Code4		
using		
Fax Detect		29
Fax, from PC		
See Software and Network User's Gu	Jide	Э.
Fax, stand-alone		
receiving		
difficulties		
F/T Ring Time, setting		
Fax Detect		
from extension telephone4		
Ring Delay, setting		
telephone line interference / VoIP .		96
sending		
change scanner glass size		
difficulties		
telephone line interference / VoIP .		
Transmission Verification Report Fax/Tel mode		25
answering at extension		
telephones4	12,	43
Remote Activation Code4	12,	43
Remote Deactivation Code4	12,	43
Ring Delay		

G

Cravaala	101	100
Grevscale	 121.	123

Н

Help	
Menu Table10	0
using menu keys9	8

Ink bottles	
ink dot counter	57
refilling	57

J_____

Jams	
document	. 75
paper	. 76

L

LCD (Liquid Crystal Display)	6
Contrast	10

Μ

Macintosh	
See Software and Network User's	Guide.
Maintenance, routine	
refilling the ink tanks	57
Manual	
dialling	44
receive	26
Multi-line connections (PABX)	41

Ν
Network
Printing
See Software and Network User's Guide. Scanning
See Software and Network User's Guide. Nuance™ PaperPort™ 12SE
See Software and Network User's Guide. Also see Help in the PaperPort™ 12SE application.

Ρ

17, 120
19
11, 14
14
16
17
20
17, 19

See Software and Network User's Guide. Also see Help in the Presto! PageManager application.

Print

difficulties8	5
paper jams7	6
printable area1	
resolution12	4
specifications12	4
Printing	
See Software and Network User's Guide.	

R

Receive Mode External TAD
Fax Only26
Fax/Tel26
Manual26
Redial/Pause44
Remote Setup
See Software and Network User's Guide.
Denerte
Reports
Caller ID List

S

Scanning See Software and Network User's Guide. Serial Number how to findSee inside front cover Sockets FXT
External telephone
changing46
setting up45
Step-by-step Settings Tables
Supply Specifications 128

T

TAD (telephone answering device),	
external	26, 40
connecting	
Receive Mode	
recording OGM	
Telephone line	
connections	41
difficulties	
interference / VoIP	
multi-line (PABX)	
type	
Text, entering	
special characters	
Transferring your faxes or	
Fax Journal report	
Troubleshooting	
document jam	75
error messages on LCD	66
if you are having difficulty	
copying	94
document jam	75
incoming calls	93
Network	95
paper handling	89
print quality	87
printing	85
printing received faxes	90
receiving faxes	91
scanning	94
software	94
telephone line or connections	90
maintenance messages on LCD	66
paper jam	

U

Unscannable area	
Unscannable area	22

V

Volume, setting	
beeper	9
ring	9
speaker	9

W

 $\mathsf{Windows}^{\mathbb{R}}$

See Software and Network User's Guide. Wireless Network

See Quick Setup Guide and Software and Network User's Guide.



Visit us on the World Wide Web http://www.brother.com

This machine is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.



www.brotherearth.com