

Information for compliance with Commission Regulation 801/2013

Model Name: DCP-L6600DW

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	1.8W	N/A	5min	N/A
USB	1.6W	0.0W	5min	65min
Wi-Fi	2.0W	N/A	5min	N/A
NFC	1.5W	N/A	5min	N/A
All network ports activated and connected	3.7W	N/A	5min	N/A

Model Name: MFC-L6700DW, MFC-L5755DW, MFC-L5750DW


Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	1.8W	N/A	5min	N/A
USB	1.6W	0.0W	5min	65min (485min : Turkey only)
Wi-Fi	2.0W	N/A	5min	N/A
Telecom(FAX)	1.4W	N/A	5min	N/A
All network ports activated and connected	3.5W	N/A	5min	N/A

Model Name: MFC-L6900DW, MFC-L6800DW

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	1.8W	N/A	5min	N/A
USB	1.6W	0.0W	5min	65min (485min : Turkey only)
Wi-Fi	2.0W	N/A	5min	N/A
NFC	1.5W	N/A	5min	N/A
Telecom(FAX)	1.4W	N/A	5min	N/A
All network ports activated and connected	3.7W	N/A	5min	N/A

How to enable/disable Wireless LAN

To turn on or off the wireless network connection, press the following buttons on your control panel or LCD.

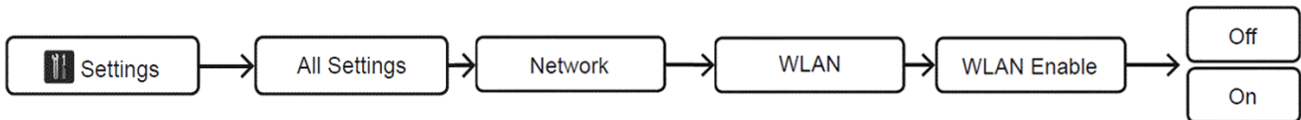

Note:

Depending on your machine, you may need to press the **OK** button to select the option.
The message above may be slightly different from the actual message displayed.