 
 




Unpack the machine and check the components



Drum Unit (pre-installed)



Starter Toner Cartridge



AC Power Cord



Quick Setup Guide



Product Safety Guide



Installation CD-ROM

NOTE:

- Manuals in Spanish for this model are available on the Brother Solutions Center. (USA only): solutions.brother.com/manuals
- Los manuales en español de este modelo están disponibles en el Brother Solutions Center. (Solamente en los Estados Unidos): solutions.brother.com/manuals
- You must purchase the correct interface cable for the interface you want to use.

USB cable

We recommend using a USB 2.0 cable (Type A/B) that is no more than 6 feet (2 meters) long.


Network cable

Use a straight-through Category 5 (or greater) twisted-pair cable.



Watch our Video FAQs for help with setting up your Brother machine: solutions.brother.com/videos.


1 Remove the packing materials and install the drum unit and toner cartridge assembly

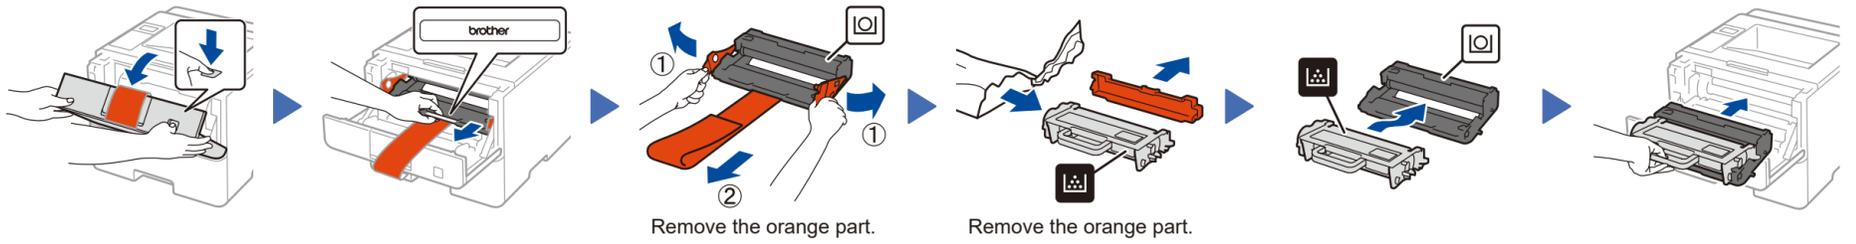

Remove the orange part.


Remove the orange part.

2 Load paper in the paper tray

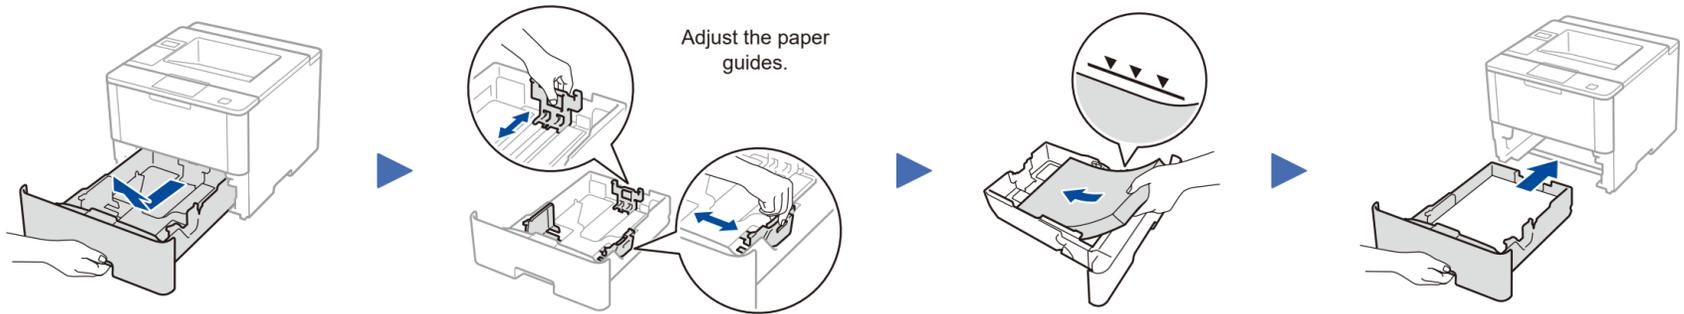

Adjust the paper guides.

3 Connect the power cord and turn on the machine

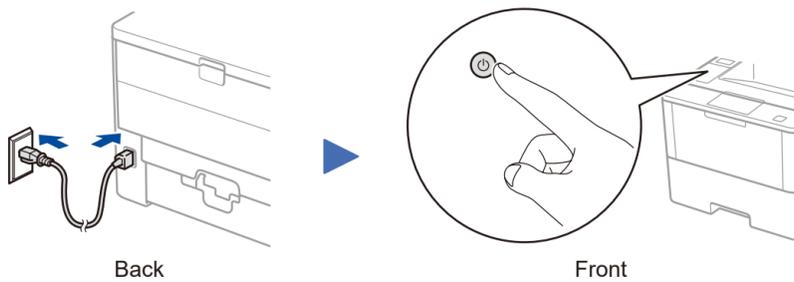

Back

Front

4 Select your language (if needed)


1. Press ▼ or ▲ to select [General Setup], and then press **OK**.
2. Press **OK** to select [Local Language].
3. Press ▼ or ▲ to select your language, and then press **OK**.
4. Press **Cancel**.



5 Connect your machine and install software

Brother regularly updates firmware to add features and fix identified problems. To check for the latest firmware, visit solutions.brother.com/up1.

Windows® computer with CD-ROM drive

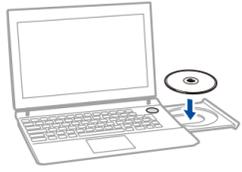


NOTE:
If the Brother screen does not appear automatically, click **Start** > **Computer (My Computer)**. (For Windows® 8: click the **File Explorer** icon on the taskbar, and then go to **Computer (This PC)**.)
Double-click the CD-ROM icon, and then double-click **start.exe**.

Macintosh/Windows® computer without CD-ROM drive



Download the full driver and software package from the Brother Solutions Center.
(Macintosh) solutions.brother.com/mac
(Windows®) solutions.brother.com/windows

Choose your Connection Type:

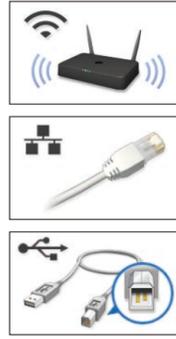

Follow the on-screen instructions to continue installation.


Follow the on-screen instructions to continue installation.

Finish

If using a wireless network connection:
When the **Wireless Device Setup** screen appears, select **Setup without a USB cable (Recommended)**.



When instructed, go to your machine. Press the **WiFi** button.

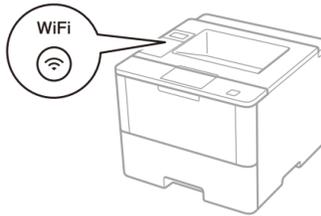

Follow the on-screen instructions to continue installation.

Finish

NOTE:
• When finished, restart your computer.
• If connection is unsuccessful, see **?** *Cannot set up your machine?* below.


WiFi Alternate wireless configuration method (Setup Wizard)

Restart your wireless access point/router.




Find your SSID: XXXXXXXX
Network key: XXXX

If you cannot find this information, ask your network administrator or wireless access point/router manufacturer.

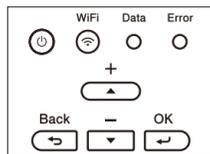


- Press **▲** or **▼** to select the [Network] option, and then press **OK**.
- Press **▲** or **▼** to select the [WLAN] option, and then press **OK**.
- Press **▲** or **▼** to select the [Setup Wizard] option, and then press **OK**.
- When [WLAN Enable?], press **▲** to select [On].

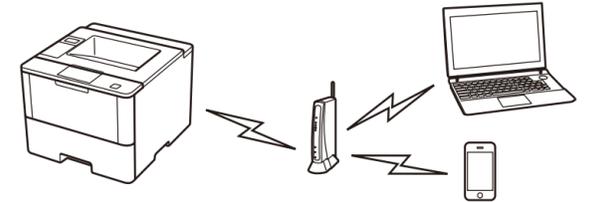


Select the SSID. Enter the Network key.

The LCD displays [Connected].

To use with your computer, follow Step 5 until the **Select Machine** screen appears, listing all machines in your network.

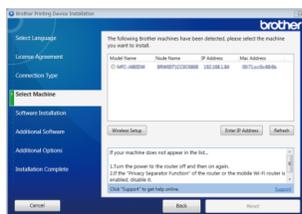

Select your machine.

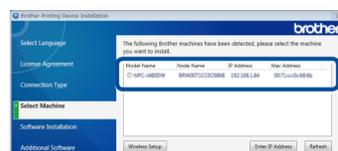

Follow the on-screen instructions to continue installation.

Finish

NOTE:
• When finished, restart your computer.
• If connection is unsuccessful, see **?** *Cannot set up your machine?* below.

For Network Users: Important Notice for Network Security
The default Web Based Management password is located on the back of the machine and marked "Pwd". We recommend immediately changing the default password to use network tools/utilities securely and to protect your machine from unauthorized access.

To use with your mobile device, go to **Print using your mobile device**.


Print using your mobile device

Before printing from your mobile device, your machine must be configured according to step 5 or WiFi Alternate wireless configuration method (Setup Wizard).

Download "Brother iPrint&Scan" to start using your machine with mobile devices.
solutions.brother.com/ips

Works with **Apple AirPrint**
AirPrint is available for OS X and iOS users. For more information, see the **AirPrint Guide** on your model's **Manuals** web page.
solutions.brother.com/manuals

? Cannot set up your machine?

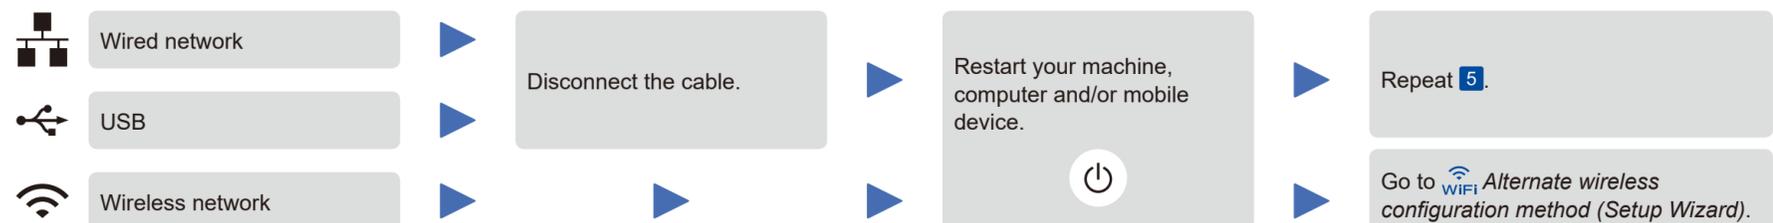

NOTE:
If you repeat these steps and connection is still unsuccessful, please visit the Brother Solutions Center at: <http://support.brother.com>.