



## Unpack the machine and check the components



### Drum Unit and Toner Cartridge Assembly

(pre-installed in models DCP-L5500D / DCP-L5500DN / DCP-L5600DN / DCP-L6600DW / MFC-L5700DN / MFC-L5750DW / MFC-L5755DW / MFC-L5900DW / MFC-L6700DW / MFC-L6800DW / MFC-L6900DW (For Oceania))

### Drum Unit

(pre-installed in model MFC-L6900DW only (Except for Oceania))

### Inbox Toner Cartridge

(model MFC-L6900DW only (Except for Oceania))



### Telephone Line Cord

(For MFC models)

### NOTE:

- The available connection interfaces vary depending on the model.
- You must purchase the correct interface cable for the interface you want to use.

### USB cable

We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 metres long.

### Network cable

(Except for DCP-L5500D)  
Use a straight-through Category 5 (or greater) twisted-pair cable.

- The illustrations in this Quick Setup Guide show the MFC-L6900DW.

### Secure Network Access

Your machine's default password is on the label on the back of the machine (preceded by "Pwd"). We strongly recommend you change it to protect your machine from unauthorised access.



Watch our Video FAQs for help with setting up your Brother machine:  
[solutions.brother.com/videos](http://solutions.brother.com/videos).

### Quick Setup Guide

### Product Safety Guide

### Basic User's Guide or Reference Guide

(only for certain models)


### Installation CD-ROM

### Telephone Line Cord Adapter

(Australia only) (For MFC models)

## 1 Remove the packing materials and install the drum unit and toner cartridge assembly


DCP-L5500D / DCP-L5500DN / DCP-L5600DN / DCP-L6600DW / MFC-L5700DN / MFC-L5750DW / MFC-L5755DW / MFC-L5900DW / MFC-L6700DW / MFC-L6800DW / MFC-L6900DW (For Oceania)

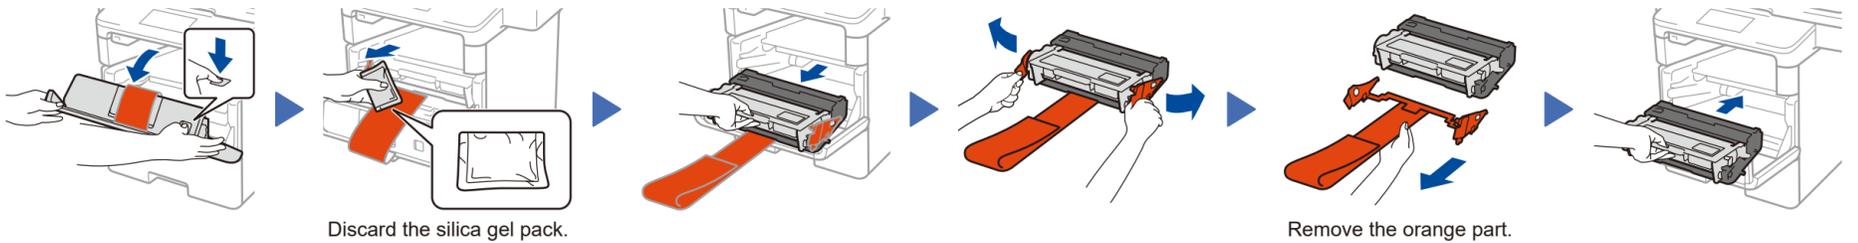

Discard the silica gel pack.

Remove the orange part.


MFC-L6900DW ONLY (Except for Oceania)

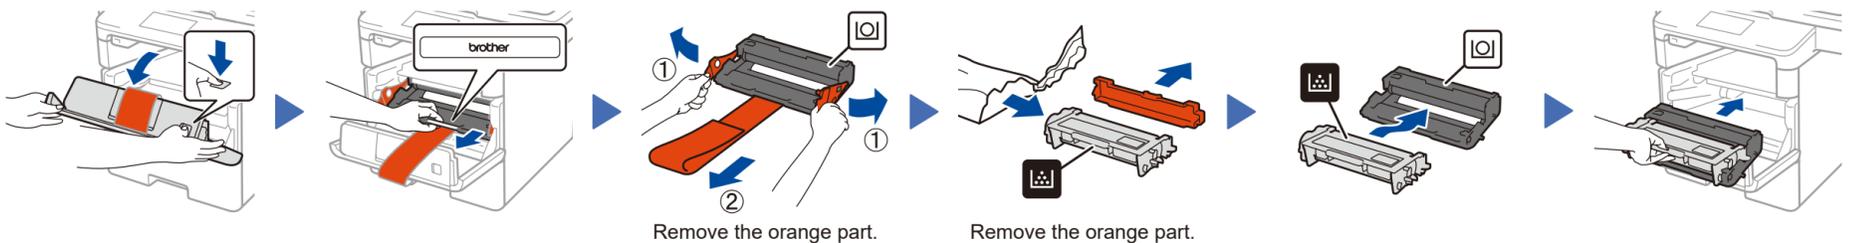

Remove the orange part.


Remove the orange part.

## 2 Load paper in the paper tray

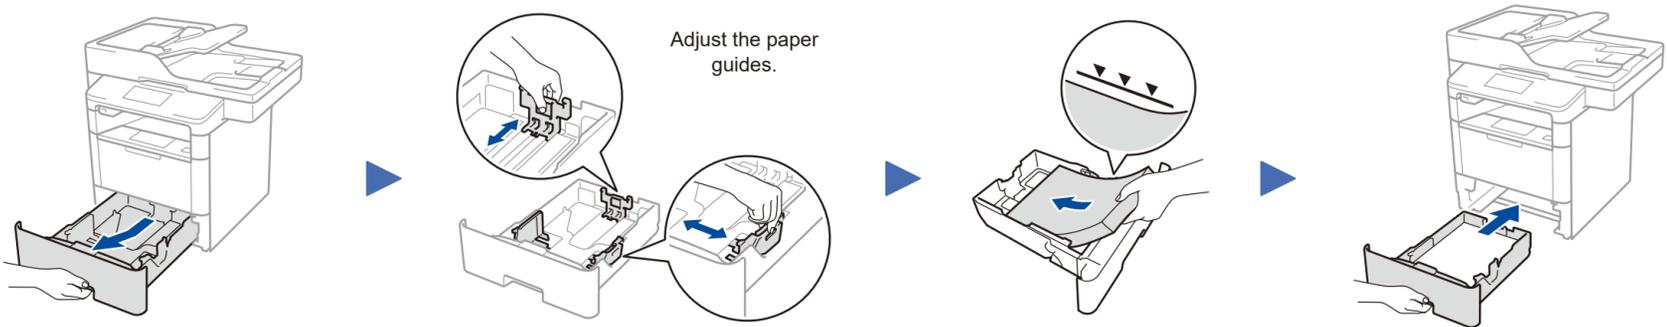

Adjust the paper guides.

## 3 Connect the power cord and turn the machine on

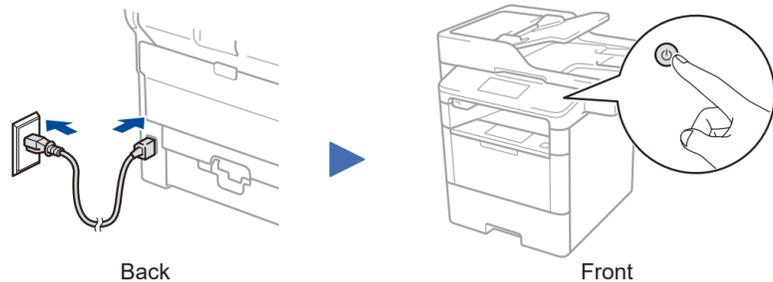

Back


Front

## 4 Select your country/language (Initial setup only)

After turning the machine on, you may be required to set your country or language (depending on your machine). If required, follow the on-screen instructions.

## 5 Select your language (if needed) (Only for certain models)


- On the machine's Touchscreen, press [Settings] > [All Settings] > [Initial Setup] > [Local Language].
- Press your language.
- Press [Home].

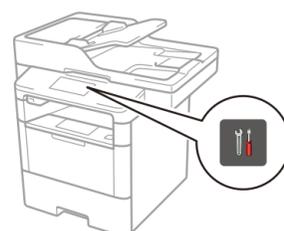

# 6 Connect your machine and install software

Brother regularly updates firmware to add features and fix identified problems. To check for the latest firmware, visit [solutions.brother.com/up1](http://solutions.brother.com/up1).

## Windows® computer with CD-ROM drive

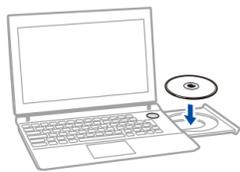


**NOTE:**  
If the Brother screen does not appear automatically, click **(Start) > Computer (My Computer)**.  
(For Windows® 8: click the **(File Explorer)** icon on the taskbar, and then go to **Computer (This PC)**.)  
Double-click the CD-ROM icon, and then double-click **start.exe**.

■ For DCP-L5500D



■ For other models

Choose your Connection Type:

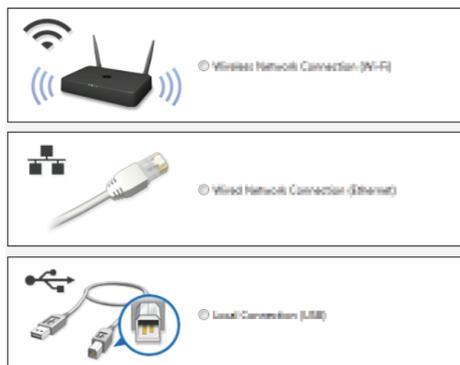

## Macintosh/Windows® computer without CD-ROM drive



Download the full driver and software package from the Brother Solutions Center.  
(Macintosh) [solutions.brother.com/mac](http://solutions.brother.com/mac)  
(Windows®) [solutions.brother.com/windows](http://solutions.brother.com/windows)

Follow the on-screen instructions to continue installation.

**Finish**

**NOTE:**  
If connection is unsuccessful, see **? Cannot set up your machine?** below.

## Print and scan using your mobile device (not available for DCP-L5500D)




Download "Brother iPrint&Scan" to start using your machine with mobile devices.

[solutions.brother.com/ips](http://solutions.brother.com/ips)




AirPrint is available for OS X and iOS users. For more information, see the *AirPrint Guide* on your model's **Manuals** web page.  
[solutions.brother.com/manuals](http://solutions.brother.com/manuals)

## ? Cannot set up your machine?

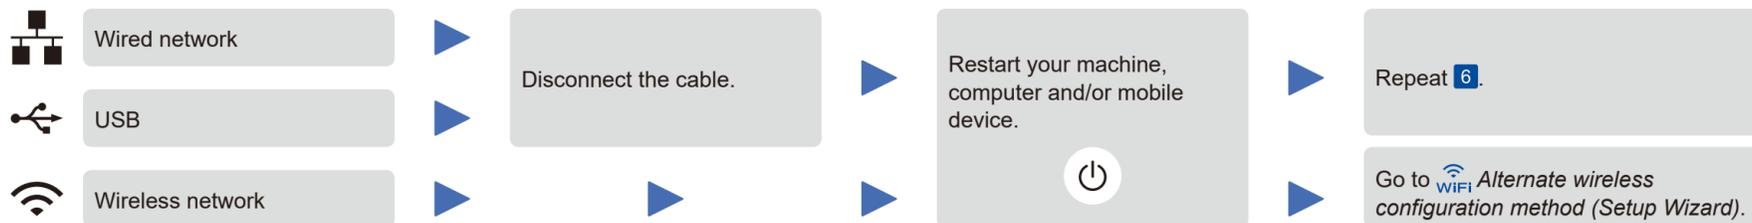

## WiFi Alternate wireless configuration method (Setup Wizard)

- Restart your wireless access point/router.
  - Find the SSID and Network key.
  - Press **WiFi** > [Setup Wizard] > [Yes].
  - Select the SSID.
  - Enter the Network key.
- The LCD displays [Connected].

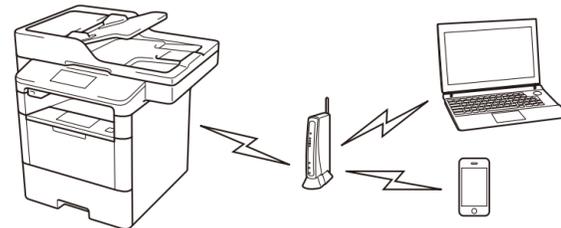

To use with your computer >> Step **6** *Connect your machine and install software*

To use with your mobile device >> *Print and scan using your mobile device (not available for DCP-L5500D)*

