

## Information for compliance with Commission Regulation 801/2013

Model Name: DCP-9020CDW, DCP-9022CDW


Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	1.2W	N/A	9min	N/A
USB	1.3W	0.1W	9min	69min
Wi-Fi	1.7W	N/A	9min	N/A
All network ports activated and connected	1.8W	N/A	9min	N/A

Model Name: MFC-9340CDW, MFC-9342CDW, MFC-9330CDW, MFC-9332CDW

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	1.6W	N/A	9min	N/A
USB	1.7W	0.1W	9min	69min
Wi-Fi	2.2W	N/A	9min	N/A
Telecom(FAX)	1.6W	N/A	9min	N/A
All network ports activated and connected	2.3W	N/A	9min	N/A

### How to enable/disable Wireless LAN

To turn on or off the wireless network connection, press the following buttons on your control panel or LCD.

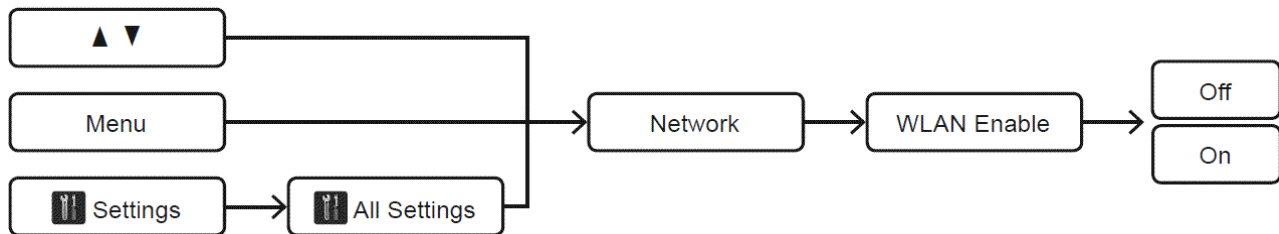

#### Note:

Depending on your machine, you may need to press the **OK** button to select the option. The message above may be slightly different from the actual message displayed.