

## Information for compliance with Commission Regulation 801/2013

Model Name: DCP-1610W, DCP-1610WE, DCP-1612W

| Network Port                              | Power consumption      |          | Default Timer Values      |             |
|---|------------------------|----------|---------------------------|-------------|
|   | Networked Standby mode | Off mode | To Networked Standby mode | To Off mode |
| USB                                       | 0.9W                   | 0.3W     | 1min                      | 61min       |
| Wi-Fi                                     | 1.3W                   | N/A      | 1min                      | N/A         |
| All network ports activated and connected | 1.5W                   | N/A      | 1min                      | N/A         |

Model Name: MFC-1910W, MFC-1910WE

| Network Port                              | Power consumption      |          | Default Timer Values      |             |
|---|------------------------|----------|---------------------------|-------------|
|   | Networked Standby mode | Off mode | To Networked Standby mode | To Off mode |
| USB                                       | 1.4W                   | 0.3W     | 1min                      | 61min       |
| Wi-Fi                                     | 2.2W                   | N/A      | 1min                      | N/A         |
| Telecom(FAX)                              | 1.3W                   | N/A      | 1min                      | N/A         |
| All network ports activated and connected | 2.4W                   | N/A      | 1min                      | N/A         |

### How to enable/disable Wireless LAN

To turn on or off the wireless network connection, press **Menu > Network > WLAN > WLAN Enable > On or Off**.

Note:

You need to press ▲ or ▼ and the **OK** button to select the option.

The message above may be slightly different from the actual message displayed.