 
 
 


## 1 Unpack the machine and check the components

The components included in the box may differ depending on your country. Remove the protective tape and film covering the machine and the touchscreen.



Watch our FAQ videos for help with setting up your Brother machine. [support.brother.com/videos](http://support.brother.com/videos)

### Inbox Ink Cartridges\*

- Black
  - Yellow
  - Cyan
  - Magenta
- \*Ink cartridges contain approximately the same page yield as replacement cartridges (Standard).

### Quick Setup Guide Product Safety Guide



### Brother Installation Disc

### Power Cord



### Telephone Line Cord (MFC models only)

### NOTE

- Most of the illustrations in this *Quick Setup Guide* show the MFC-J890DW.
- Save all packing materials and the box in case for any reason you must ship your machine.
- **You must purchase the correct interface cable for the interface you want to use. A USB cable is included with some models.**

### USB cable

We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 metres long.


### Ethernet (Network) cable (MFC-J890DW/J895DW only)

Use a straight-through Category5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.


### Secure Network Access

Your machine's default password is on the label on the back of the machine (preceded by "Pwd"). We strongly recommend you change it to protect your machine from unauthorised access.


## 2 Load paper in the paper tray

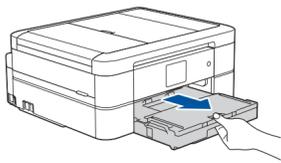

Pull the paper tray completely out of the machine.

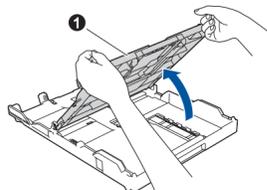


Open the output paper tray cover ①.

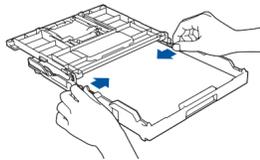


Adjust the paper guides.

Fan the paper well and load it in the tray.

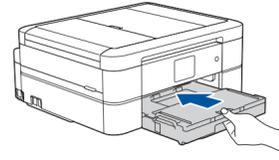


Close the output paper tray cover, and then slowly push the tray completely into the machine.

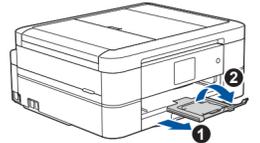

### NOTE

Pull out the paper support ①, and unfold the paper support flap ② so that the printed pages do not fall.

## 3 Connect the power cord

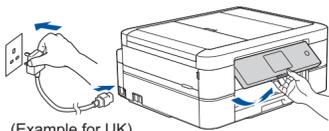

(Example for UK)

Connect the power cord. The machine will power on automatically.

### NOTE

You can adjust the control panel angle to read the touchscreen more easily.


## 4 Select your country or language (Initial setup only)

After turning the machine on, you may need to set your country or language (depending on your machine). If required, follow the touchscreen instructions.

## 5 Set the date and time

Follow the touchscreen instructions to set the date and time.

## 6 Install the inbox ink cartridges

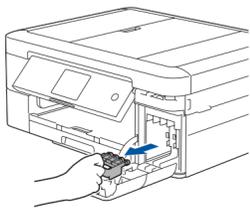

Open the ink cartridge cover, and then remove the orange protective part from the machine.

### NOTE

Do not throw away the orange protective part. You will need it if you transport the machine.

Follow the touchscreen instructions to unpack and install the ink cartridges. The machine will prepare the ink tube system for printing.



Quickly shake just the **black** ink cartridge horizontally 15 times as shown, before inserting it into the machine.

## 7 Machine settings

When the machine has finished the initial cleaning process, follow the touchscreen instructions to configure the machine's settings.


- Check print quality
- Set Brother LCD Message defaults
- Print the installation sheet

## 8 Select your language (if needed and only for certain models)

1. Press [Settings] > [All Settings] > [Initial Setup] > [Local Language].
2. Press your language.
3. Press .

## 9 Connect the telephone line cord (MFC models only)


If you are not using your machine as a fax, go to 10.

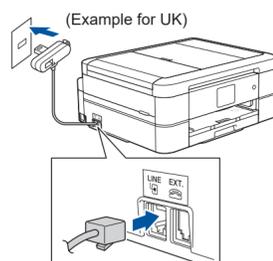

Connect the telephone line cord. Use the socket marked **LINE**.

### NOTE

If you are sharing one telephone line with an external telephone, connect it as shown below.

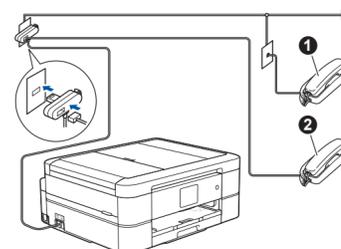

- ① Extension telephone
- ② External telephone



## 10 Select a device to connect to your machine

### Computer



Go to **11** and follow the instructions.


### Mobile Device



Go to **12** and follow the instructions.

## 11 Connect your computer

Brother regularly updates firmware to add features and apply bug fixes. To check for the latest firmware, visit [support.brother.com/up4](http://support.brother.com/up4).

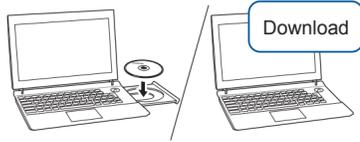

Follow the on-screen instructions and prompts.

Put the installation disc into your CD/DVD drive, or download the Full Driver & Software Package at:


For Windows®: [support.brother.com/windows](http://support.brother.com/windows)  
For Mac: [support.brother.com/mac](http://support.brother.com/mac)

If you are using a recently released operating system on your computer, visit the above websites for updated driver and software information.

For Windows®:  
If the Brother screen does not appear automatically, go to **Computer (My Computer/This PC)**. Double-click the CD/DVD-ROM icon, and then double-click **start.exe**.

For Mac:  
For full driver functionality, we recommend choosing the **CUPS driver** when adding a printer.

For Wired Network Connection\* and USB Connection:  
Locate the correct port (based on the cable you are using) inside the machine as shown.

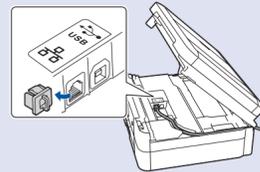

\*MFC-J890DW/J895DW only

Finished

### Can't Connect? Check the following:

Wireless network

Restart your wireless access point/router (if possible).

Wired network (MFC-J890DW/J895DW only)  
USB connection

Disconnect the cable.

Restart your machine and computer, and then go to **11**

If still not successful, go to **12**

If still not successful, visit [support.brother.com](http://support.brother.com) for FAQs and Troubleshooting.


## 12 Alternative wireless setup

Even if you do not have a wireless access point/router, you can connect your device and your machine directly. For additional wireless network support, go to [support.brother.com/wireless-support](http://support.brother.com/wireless-support).

Find your SSID (Network Name) and Network Key (Password) on your wireless access point/router and write them in the table provided below.


SSID (Network Name)	
Network Key (Password)	

SSID: XXXXXXXX  
Network key: XXXX

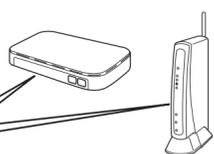

If you cannot find this information, ask your network administrator or wireless access point/router manufacturer.

Go to your machine, and press **WiFi** > [Setup Wizard] > [Yes].

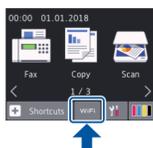

Select the SSID (Network Name) for your access point/router and enter the Network Key (Password).

When the wireless setup is successful, the touchscreen displays [Connected].

If setup is not successful, restart your Brother machine and your wireless access point/router, and repeat **12**

For Computer

Go to **11** to install software.


For Mobile Device

Go to **13** to install apps.

## 13 Print or scan using your mobile device

Your mobile device must be connected to the same wireless network as your Brother machine.

Brother SupportCenter is a mobile app that provides the latest support information for your Brother product. Visit the App Store or Google Play™ to download.

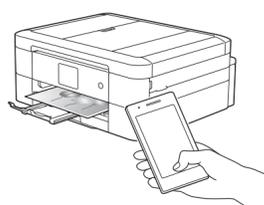

Works with  
**Apple AirPrint**

AirPrint is available for Apple device users. You do not need to download any software to use AirPrint. For more information, see the *Online User's Guide*.



Download and install the Mopria® Print Service app from Google Play™ using your Android™ device.



Download and install our free application **Brother iPrint&Scan** from a mobile application store, such as the App Store, Google Play™ or Microsoft® Store using your mobile device.

#### Optional apps

You can print from and scan to your mobile device using various apps. For instructions, see the *Online User's Guide*.



Additional Wireless Support: [support.brother.com/wireless-support](http://support.brother.com/wireless-support)

For FAQs, Troubleshooting, and to download software and manuals, visit [support.brother.com](http://support.brother.com). For product specifications, see the *Online User's Guide*.

© 2017 Brother Industries, Ltd. All rights reserved.