
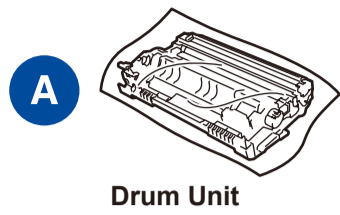


## Unpack the machine and check the components

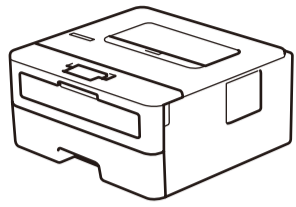

**NOTE:**

- Use the appropriate interface cable for the connection you want to use.

**USB cable**

We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 metres long.

- The *Reference Guide* is available on the provided Brother Installation Disc.


**Operation Videos**

[www.95105369.com](http://www.95105369.com)




**Installation  
& Using  
Videos**


## 1 Remove the packing materials and install the drum unit and toner cartridge assembly

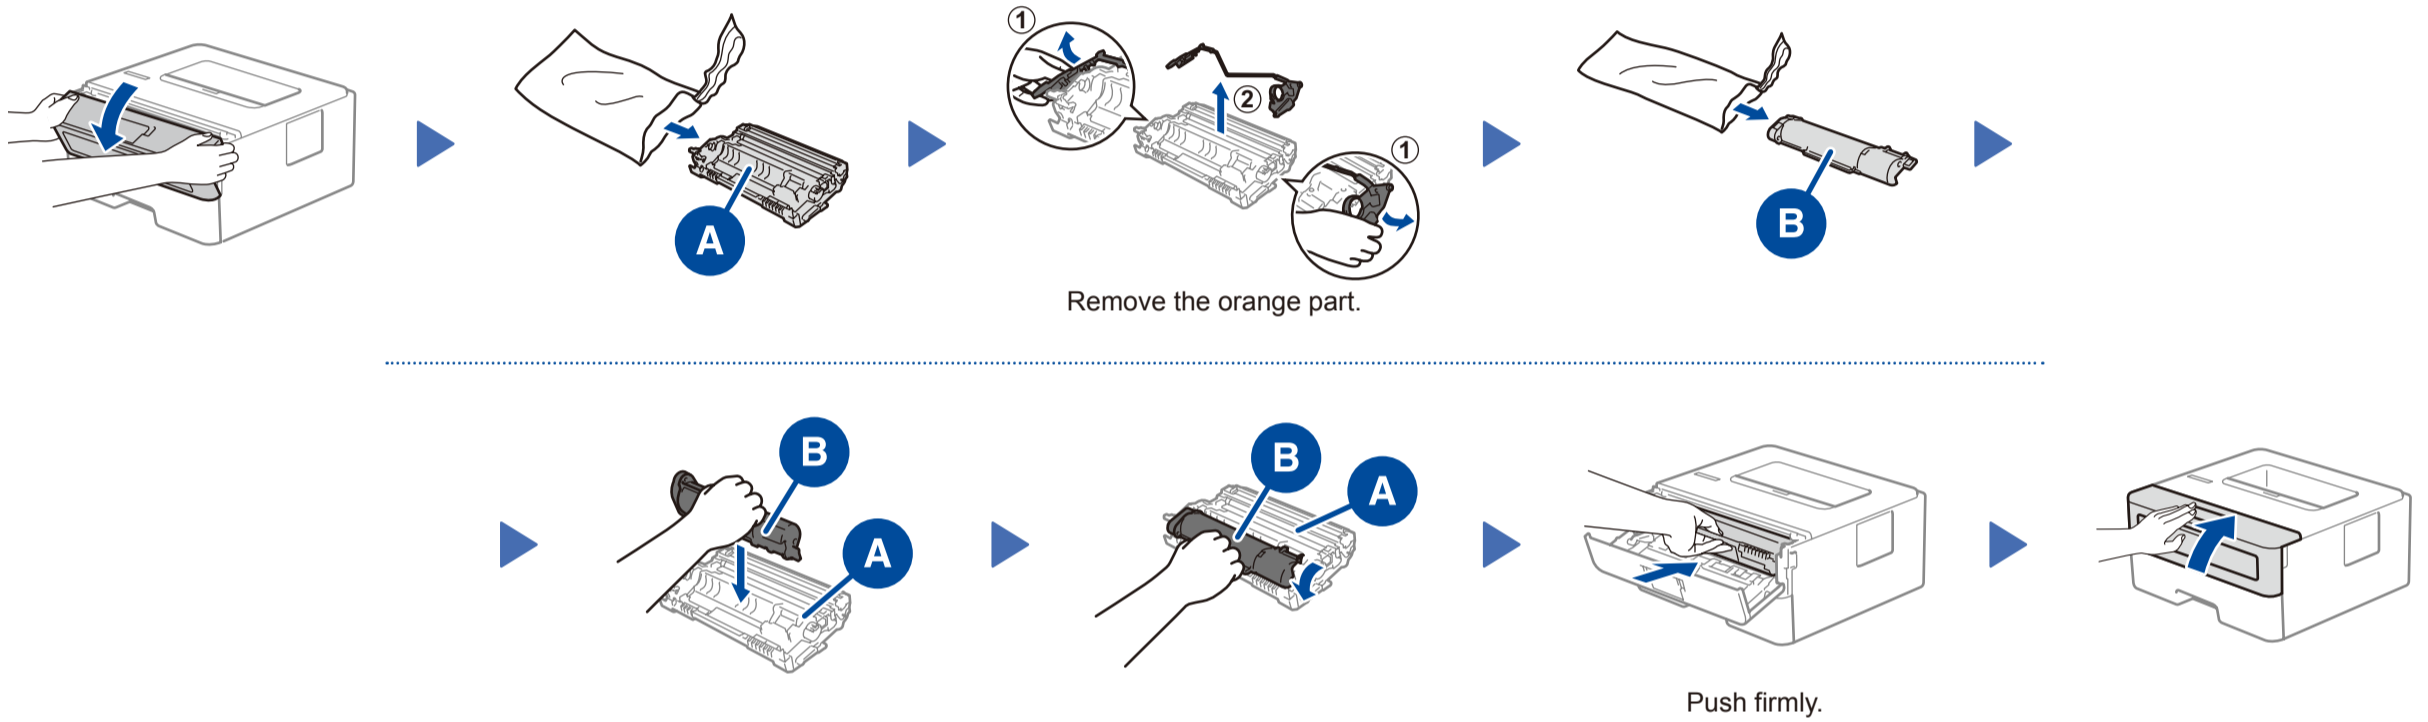

## 2 Load paper in the paper tray

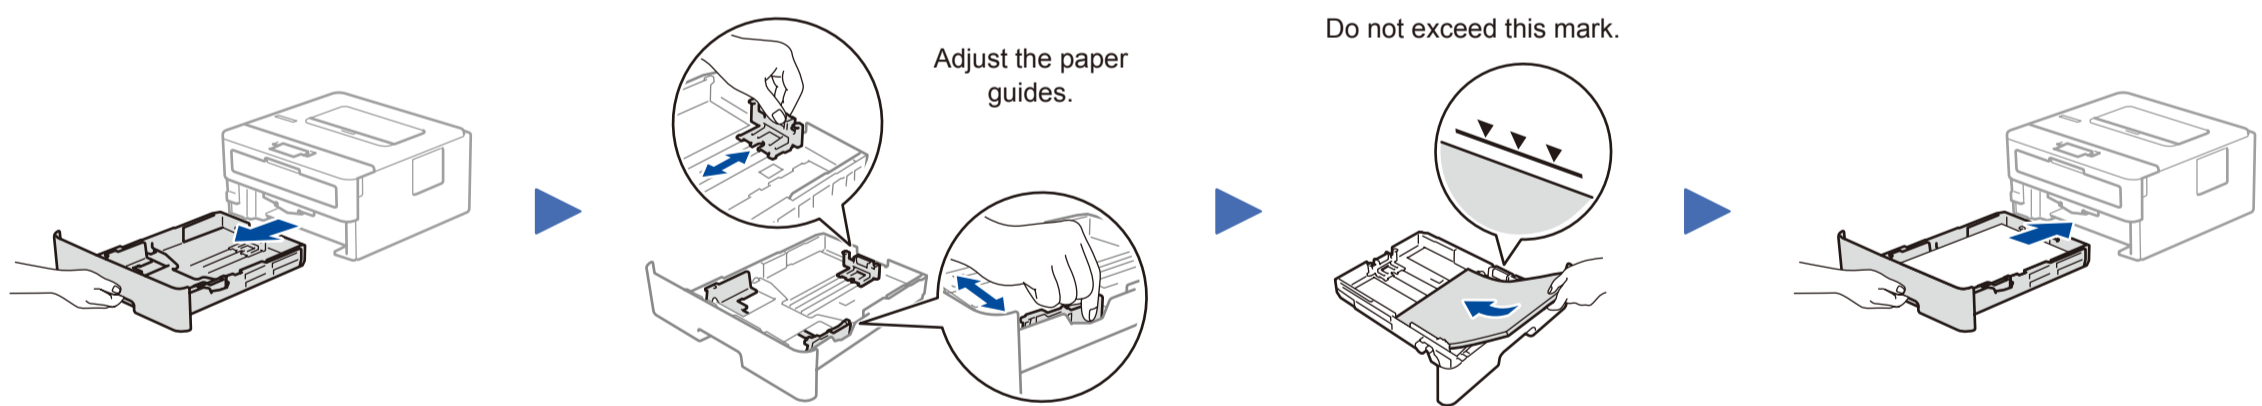

## 3 Connect the power cord and turn the machine on

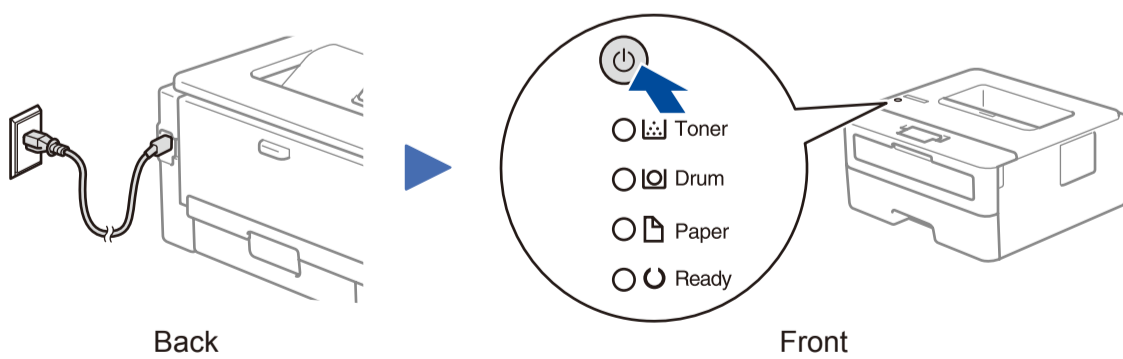


### Printer LED Indications

Blinking: ON: or OFF:

	Toner Low <sup>1</sup>	Replace Toner	Drum End Soon <sup>1</sup>	Replace Drum	Drum ! <sup>2</sup>	Paper Jam / Cover is Open <sup>2</sup>	No Paper
<b>Toner</b>	Yellow/Blinking	Yellow/On	OFF	OFF	OFF	OFF	OFF
<b>Drum</b>	OFF	OFF	Yellow/Blinking	Yellow/On	Yellow/Blinking	OFF	OFF
<b>Paper</b>	OFF	OFF	OFF	OFF	OFF	Yellow/Blinking	Yellow/On
<b>Ready</b>	Green/On	OFF	Green/On	Green/On	OFF	OFF	OFF

<sup>1</sup> The yellow LED will blink in a pattern of ON for 2 seconds and then OFF for 3 seconds.  
<sup>2</sup> The LED will blink ON and OFF at 0.5 second intervals.

## 4 Connect your computer

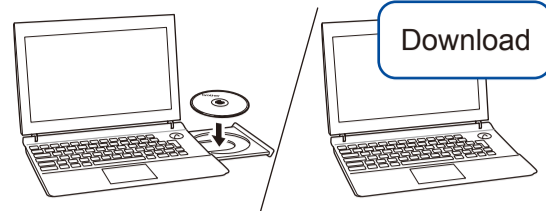

Put the installation disc into your CD/DVD drive, or download the Full Driver & Software Package at:

[www.95105369.com](http://www.95105369.com)

If you are using a recently released operating system on your computer, visit the above websites for updated driver and software information.

Brother regularly updates firmware to add features and apply bug fixes. To check for the latest firmware, visit [support.brother.com/up5](http://support.brother.com/up5).

▶ Follow the on-screen instructions and prompts.

▶ Finished

For Windows®:  
If the Brother screen does not appear automatically, go to **Computer (This PC)**. Double-click the CD/DVD-ROM icon, and then double-click **start.exe**.

For Mac:  
For full driver functionality, we recommend choosing the **CUPS driver** when adding a printer.

### Can't Connect? Check the following:

USB connection

▶ Disconnect the cable.

▶ Restart your machine and computer, and then go to **4**.

▶ If still not successful, visit [www.95105369.com](http://www.95105369.com) for FAQs & Troubleshooting.