

## Important Notice for Network Security: Default Login Password Change

The default password for managing machine settings is either:

- the password located on the back or bottom of the machine and marked "**Pwd**".
- **initpass**

We strongly recommend changing the default login password in order to protect your machine from unauthorized access, and to make the following features and software\* more secure:

- Web Based Management
- BRAdmin Light/BRAdmin Professional
- Remote Setup Software (via a network only)
- Firmware Update Tool

To change the password:

1. Start your web browser.
2. Type "http://machine's IP address" in your browser's address bar (where "machine's IP address" is the IP address of the machine or the print server name).  
*For example:* http://192.168.1.2
3. In the **Login** field, type the default login password: this is either the "**Pwd**" located on the back or bottom of your machine or the word **initpass**.
4. Click the **Administrator** tab.
5. In the **Enter New Password** field, type the password you want to use.  
If necessary, please write down the password and store it in a secure place.
6. In the **Confirm New Password** field, retype the new password.
7. Click **Submit**.

\* Features and software may vary depending on your model.

For more information about your machine's network features and software, visit [support.brother.com](http://support.brother.com), go to your model's **Manuals** page, and view the Network Security section in your model's *Online User's Guide* or *Network User's Guide*.