 



Unpack the machine and check the components



Drum Unit and Toner Cartridge Assemblies*
(Black, Cyan, Magenta, and Yellow)



 Waste Toner Box*



Belt Unit*



Telephone Line Cord
(For MFC models)



AC Power Cord



Brother Installation Disc



Quick Setup Guide



Product Safety Guide



Reference Guide

* Already installed in the machine

NOTE:

- Manuals in Spanish for this model are available on the Brother Solutions Center. (USA only): support.brother.com/manuals. Los manuales en español de este modelo están disponibles en el Brother Solutions Center. (Solamente en los Estados Unidos): support.brother.com/manuals.
- The components included in the box may differ depending on your country.
- The available connection interfaces vary depending on the model.
- Interface cables are not included. You must purchase the correct interface cable if you require one.

USB cable

We recommend using a USB 2.0 cable (Type A/B) that is no more than 6 feet (2 meters) long.

Network cable (DCP-L3551CDW / MFC-L3750CDW / MFC-L3770CDW)

Use a straight-through Category 5 (or greater) twisted-pair cable.

- The illustrations in this *Quick Setup Guide* show the MFC-L3770CDW.




Watch our Video FAQs for help with setting up your Brother machine: support.brother.com/videos.

1 Remove the packing materials and re-install the drum unit and toner cartridge assemblies


Remove all the blue packing tape.

Slide all eight yellow drum locks.

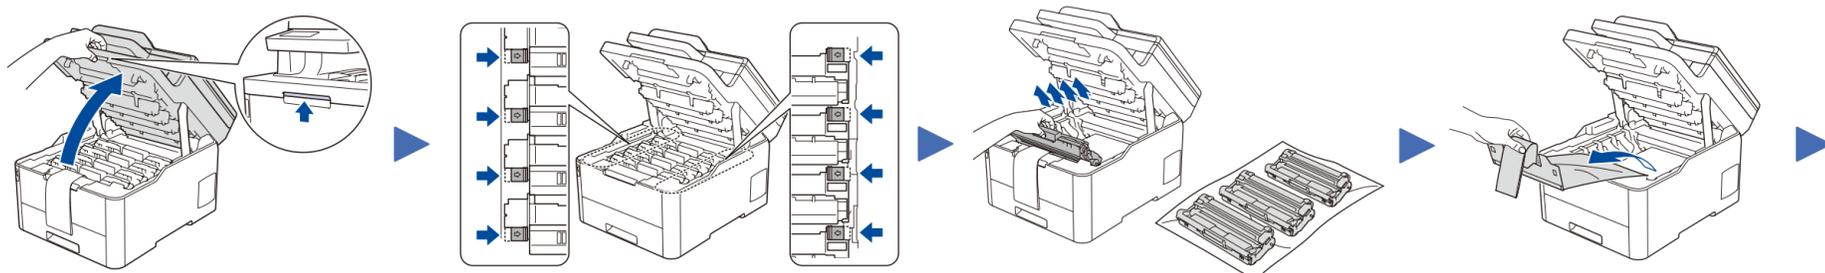


Remove the orange part from each cartridge.


Push firmly.

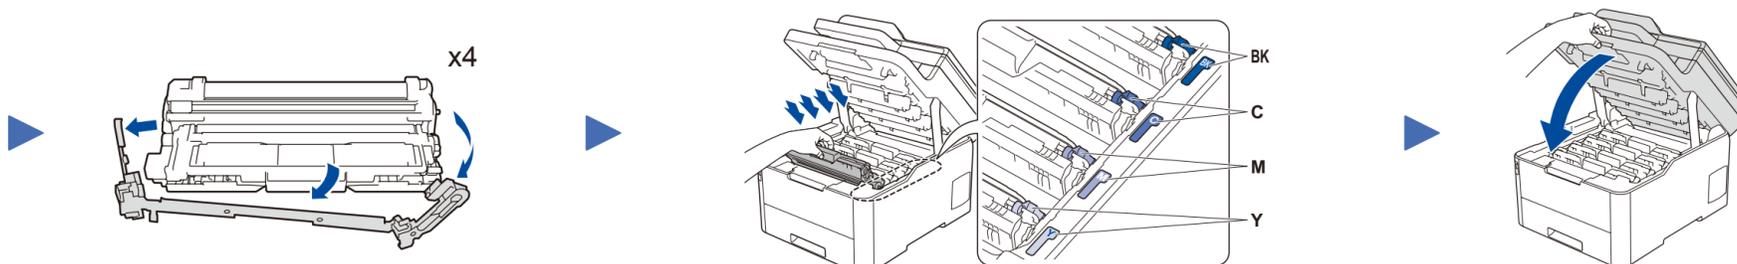

2 Load paper in the paper tray

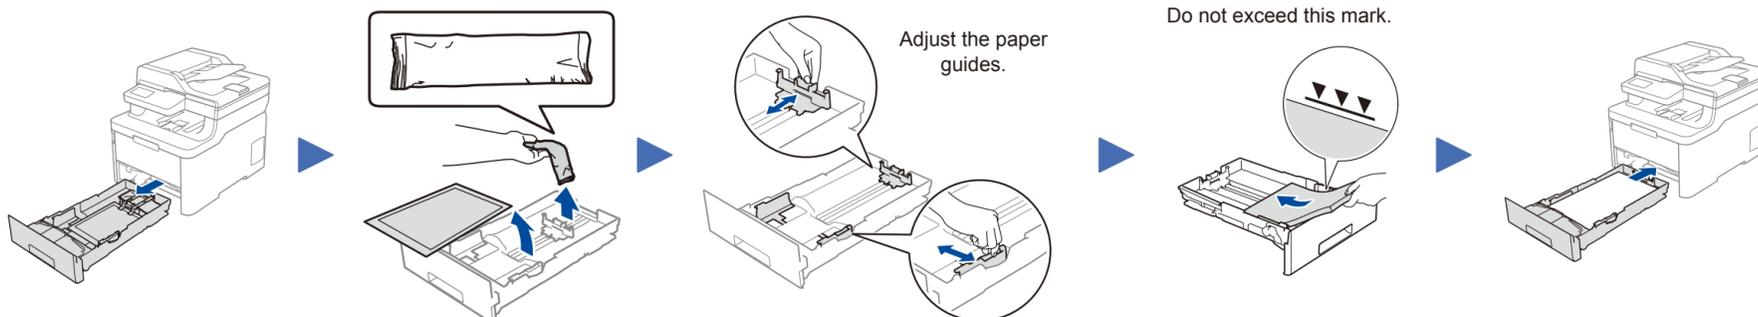

3 Connect the power cord and turn on the machine

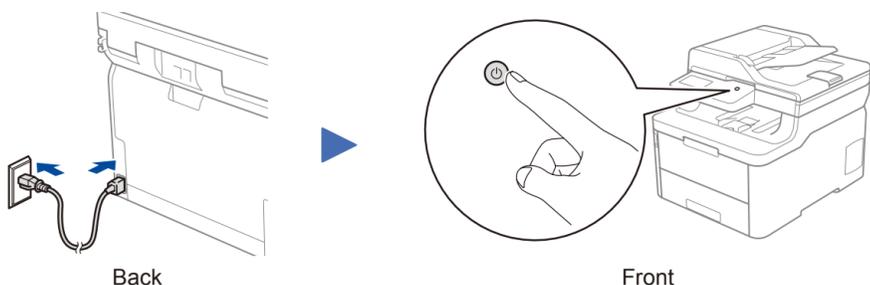

4 Select your language (if needed)

■ For LCD models


1. Press **Menu**.
2. Press **▲** or **▼** to display [Initial Setup], and then press **OK**.
3. Press **▲** or **▼** to display [Local Language], and then press **OK**.
4. Press **▲** or **▼** to select your language, and then press **OK**.
5. Press **Stop/Exit**.

■ For Touchscreen models

1. On the machine's touchscreen, press **[Settings]** > [All Settings] > [Initial Setup] > [Local Language].
2. Press your language.
3. Press **[OK]**.

5 Connect the telephone line cord (For MFC models)

If you do not plan to use the fax feature on this machine, go to step **7**.

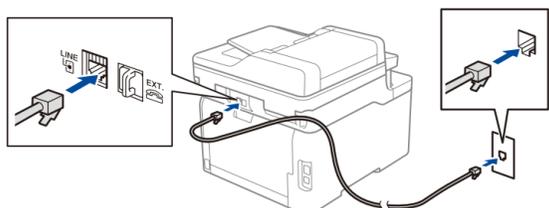

6 Configure the machine for faxing (For MFC models)

If you do not plan to use the fax feature on this machine, go to step **7**.

NOTE:

- For more information on using the fax feature, see the *Online User's Guide*.
- Your machine is programmed to automatically receive faxes. To change this default mode, see the *Online User's Guide*.

A. Set the date and time

Press **[Settings]** > [All Settings] > [Initial Setup] > [Date & Time], and then set the date and time you want.

B. Set the Station ID

Press **[Settings]** > [All Settings] > [Initial Setup] > [Station ID], and then set your fax or telephone number and your name.

7 Select a device to connect to your machine


Computer



Go to **8** and follow the instructions.


NOTE:
(For HL-L3290CDW / DCP-L3551CDW)
We recommend configuring wireless settings from your computer.

Mobile Device

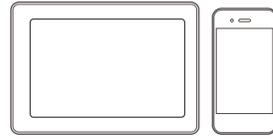

Go to **9** and follow the instructions.

8 Connect your computer

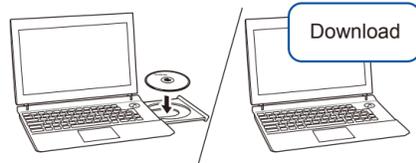

Put the installation disc into your CD/DVD drive, or download the Full Driver & Software Package at:

For Windows®: support.brother.com/windows
For Mac: support.brother.com/mac

If you are using a recently released operating system on your computer, visit the above websites for updated driver and software information.

Follow the on-screen instructions and prompts.

For Windows®:
If the Brother screen does not appear automatically, go to **Computer (This PC)**. Double-click the CD/DVD-ROM icon, and then double-click **start.exe**.

For Mac:
For full driver functionality, we recommend choosing the **CUPS driver** when adding a printer.

Finished

For Network Users: Important Notice for Network Security

The default Web Based Management password is located on the back of the machine and marked "Pwd". We recommend immediately changing the default password to use network tools/utilities securely and to protect your machine from unauthorized access.

Brother regularly updates firmware to add features and apply bug fixes. To check for the latest firmware, visit support.brother.com/up7.

Can't Connect? Check the following:

Wireless network

Restart your wireless access point/router (if possible).

Wired network

USB connection

Disconnect the cable.

Restart your machine and computer, and then go to **8**.

If still not successful, go to **9**.

If still not successful, visit support.brother.com for FAQs & Troubleshooting.

9 Alternative wireless setup

Find your SSID (Network Name) and Network Key (Password) on your wireless access point/router and write them in the table provided below.

SSID (Network Name)	
Network Key (Password)	

SSID: XXXXXXXX
Network key: XXXX

If you cannot find this information, ask your network administrator or wireless access point/router manufacturer.

For LCD models

To select each menu option, press ▲ or ▼, and then press **OK** to confirm. Select [Network] > [WLAN] > [Setup Wizard].

For Touchscreen models

Press **WiFi** > [Setup Wizard] > [Yes].



Even if you do not have a wireless access point/router, you can connect your device and your machine directly. For additional wireless network support, go to support.brother.com/wireless-support.

Select the SSID (Network Name) for your access point/router and enter the Network Key (Password).

When the wireless setup is successful, the touchscreen/LCD displays [Connected].

If setup is not successful, restart your Brother machine and your wireless access point/router, and repeat **9**.

For Computer


Go to **8** to install software.

For Mobile Device

Go to **10** to install apps.

10 Print or scan using your mobile device

Your mobile device must be connected to the same wireless network as your Brother machine.

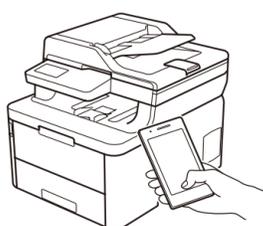

Works with
Apple AirPrint

AirPrint is available for all supported iOS devices including iPhone, iPad and iPod touch. You do not need to download any software to use AirPrint. For more information, see the *Online User's Guide*.



Download and install the Mopria® Print Service app from Google Play™ using your Android™ device.



Download and install our free application **Brother iPrint&Scan** from a mobile application store, such as the App Store, Google Play™ or Microsoft® Store using your mobile device.

Brother SupportCenter is a mobile app that provides the latest support information for your Brother product. Visit the App Store or Google Play™ to download.



Optional apps

You can print from and scan to your mobile device using various apps.

(USA only) For more information on apps, visit www.brother-usa.com/connect. For instructions, see the *Online User's Guide*.



Additional Wireless Support: support.brother.com/wireless-support

For FAQs, Troubleshooting, and to download software and manuals, visit support.brother.com. For product specifications, see the *Online User's Guide*.

© 2018 Brother Industries, Ltd. All rights reserved.