

## Information for compliance with Commission Regulation 801/2013

Model Name: HL-J6100DW, HL-J6000DW

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	0.8W	N/A	5min	N/A
USB	0.8W	0.0W	5min	120min
Wi-Fi	1.0W	N/A	5min	N/A
NFC	0.7W	0.0W	5min	120min
All network ports activated and connected	1.5W	N/A	5min	N/A


Model Name: MFC-J5945DW

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	1.5W	N/A	5min	N/A
USB	1.5W	0.0W	5min	120min
Wi-Fi	1.7W	N/A	5min	N/A
NFC	1.4W	0.0W	5min	120min
Telecom(FAX)	1.4W	N/A	5min	N/A
All network ports activated and connected	2.2W	N/A	5min	N/A

Model Name: MFC-J6947DW, MFC-J6945DW

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	1.5W	N/A	5min	N/A
USB	1.5W	0.0W	5min	120min
Wi-Fi	1.7W	N/A	5min	N/A
NFC	1.4W	0.0W	5min	120min
Telecom(FAX)	1.4W	N/A	5min	N/A
All network ports activated and connected	2.2W	N/A	5min	N/A

## How to enable/disable Wireless LAN

To turn on the wireless network connection, press  **(Settings) > All Settings > Network > Network I/F > WLAN.**

To turn off, press  **(Settings) > All Settings > Network > Network I/F > Wired LAN.**

Note:

The message above may be slightly different from the actual message displayed.