Information for compliance with Commission Regulation 801/2013

| Wodel Name. WFC-J0957DW, WFC-J0955D | W, WFC-J0940DW, WFC | -33940077, 1 | NFC-J5955DW | |
|---|---------------------|--------------|----------------------|-------------|
| Network Port | Power consumption | | Default Timer Values | |
| | Networked Standby | Off mode | To Networked Standby | To Off mode |
| | mode | On mode | mode | |
| Ethernet | 0.9W | N/A | 3min | N/A |
| USB | 0.9W | 0.0W | 3min | 120min |
| Wi-Fi | 1.2W | N/A | 3min | N/A |
| NFC | 0.8W | 0.0W | 3min | 120min |
| Telecom(FAX) | 1.0W | N/A | 3min | N/A |
| All network ports activated and connected | 1.9W | N/A | 3min | N/A |

Model Name: MFC-J6957DW, MFC-J6955DW, MFC-J6940DW, MFC-J3940DW, MFC-J5955DW

How to enable/disable Wireless LAN

To turn on or off the wireless network connection, press Settings > Network > Network I/F > Wired LAN or WLAN (Wi-Fi).