

HL-L5218DN / HL-L5228DW / HL-L6418DW

Read the *Product Safety Guide* first, then read this *Quick Setup Guide* for the correct installation procedure.





Operation Videos:
www.95105369.com



Installation & Using Videos

EN

Unpack the machine and check the components

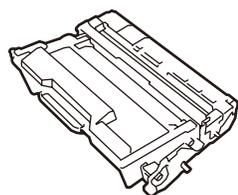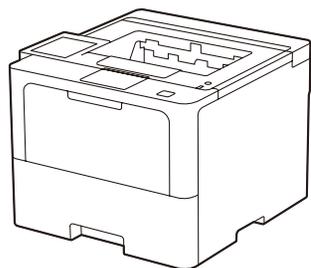

Toner Cartridge and Drum Unit Assembly
(Installed in the machine)



AC Power Cord



USB Port Cover
(Not included in all models)

NOTE:

- The available connection interfaces vary depending on the model. You must purchase the correct interface cable if you require one.
- **USB cable**
We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 metres long.
- **Network cable**
Use a straight-through Category 5 (or greater) twisted-pair cable. (Network cable is not a standard accessory.)
- The illustrations in this *Quick Setup Guide* show the HL-L6418DW.



USB Interface Cable







Quick Setup Guide






Product Safety Guide



1 Remove the packing materials and re-install the toner cartridge and drum unit assembly

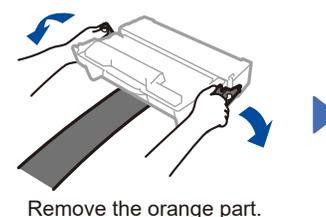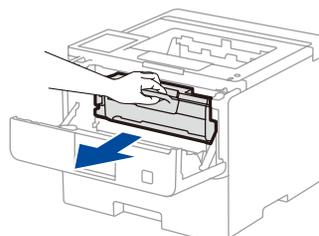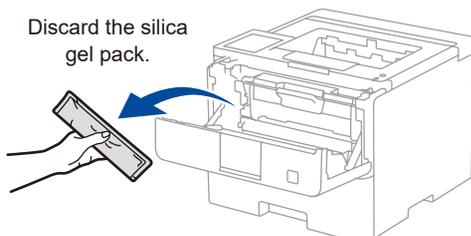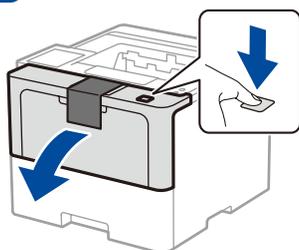


Remove the orange part.

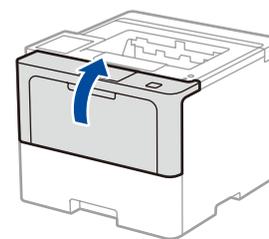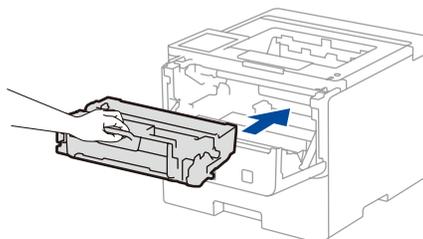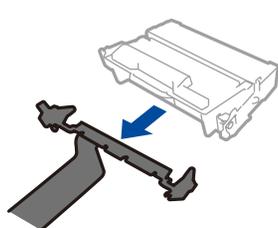


2 Load paper in the paper tray

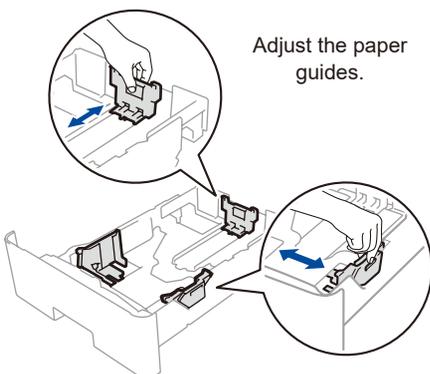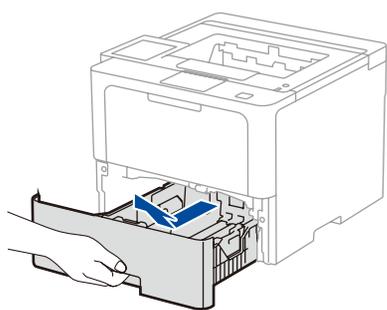


Adjust the paper guides.

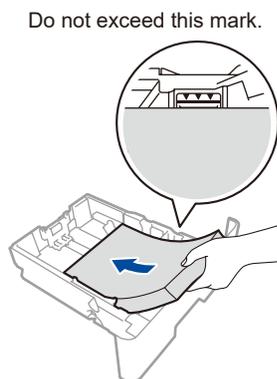


Do not exceed this mark.

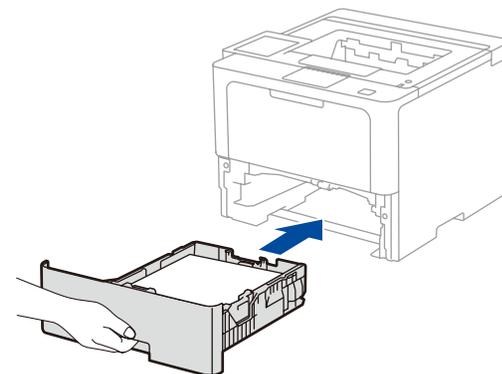

3 Connect the power cord and turn the machine on

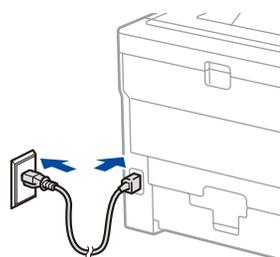

Back

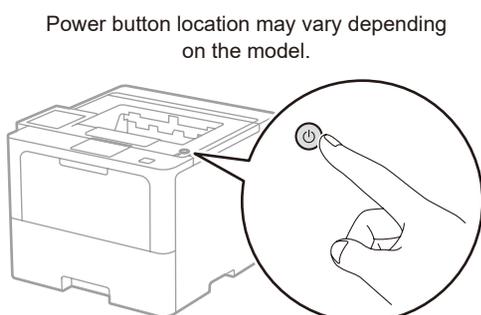

Front

Power button location may vary depending on the model.

4 Connect your computer or mobile device to your machine

Follow these steps to complete the setup using one of the connection types available on your machine.

Visit setup.brother.com to download and install Brother software.



Follow the on-screen instructions and prompts.

Setup Finished


You can now print using your machine.

To check for the latest firmware, visit support.brother.com/up7.

Important Notice for Network Security:

The default password to manage this machine's settings is located on the back of the machine and marked "Pwd". We recommend immediately changing the default password to protect your machine from unauthorised access.

Can't Connect? Check the following:

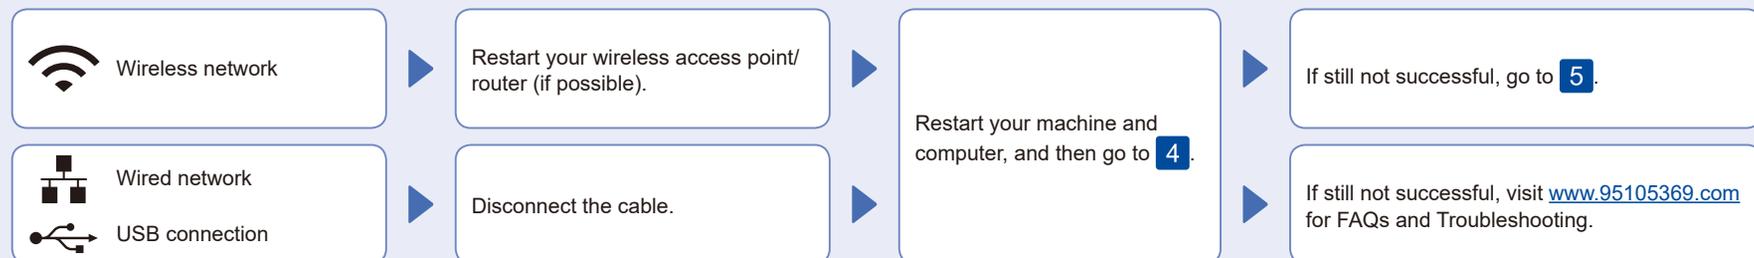


5 Manual wireless setup (Wireless models)

If the wireless setup is not successful, try to set up the connection manually.

Find your SSID (Network Name) and Network Key (Password) on your wireless access point/router and write them in the table provided below.

SSID (Network Name)	
Network Key (Password)	

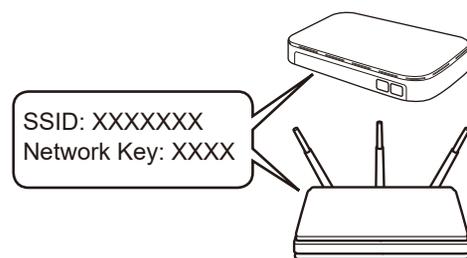


■ For LCD models

To select menu options, press ▲ or ▼, and then press 确定 to confirm.

Select [Network] > [WLAN (Wi-Fi)] > [Find Network]. Follow the LCD instructions.

■ For touchscreen models

Press > [Find Wi-Fi Network]. Follow the LCD instructions.

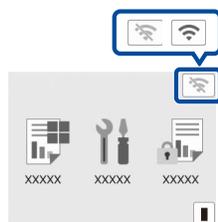

Select the SSID (Network Name) for your access point/router and enter the Network Key (Password).

■ For LCD models

Press and hold (or press repeatedly) ▲/▼ to select one of the following characters: 0123456789abcdefghijklmnopqrstuvwxyz ABCDEFGHIJKLMNOPQRSTUVWXYZ (space)!"#\$%&'()*+,-./:;<=>?@[|^_`{|}~

Go to 4 to install software.

When the wireless setup is successful, the touchscreen/LCD displays [Connected].

If you cannot find this information, ask your network administrator or wireless access point/router manufacturer.

If setup is not successful, restart your Brother machine and your wireless access point/router, and repeat 5. If still not successful, visit www.95105369.com.