

**Information for compliance with Commission Regulation (EU)801/2013 (Great Britain only), (EU)2023/826 (Europe only)**

Model Name: MFC-L2980DW

Network Port	Power consumption		Default Timer Values		Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode	To Networked Standby mode	To Off mode
Ethernet	0.7W	N/A	1min	N/A	0min~20min	N/A
USB	0.6W	N/A	1min	N/A	0min~20min	N/A
Wi-Fi	0.8W	N/A	1min	N/A	0min~20min	N/A
NFC	0.6W	N/A	1min	N/A	0min~20min	N/A
Telecom(FAX)	0.6W	N/A	1min	N/A	0min~20min	N/A
All network ports activated and connected	3.0W		1min		0min~20min	

**How to enable/disable Wireless LAN**

1. Press **Settings > All Settings > Network > WLAN (Wi-Fi)**.
2. Press the **Up** or **Down** arrow key to select the **WLAN Enable** option. Press **WLAN Enable**.
3. Do one of the following:
  - To enable Wi-Fi, select **On**. Press **OK**.
  - To disable Wi-Fi, select **Off**. Press **OK**.
4. Press **Home**.

**How to enable/disable Wi-Fi Direct**

1. Press **Settings > All Settings > Network > Wi-Fi Direct**.
2. Press the **Up** or **Down** arrow key to select the **I/F Enable** option. Press **I/F Enable**.
3. Do one of the following:
  - To enable Wi-Fi Direct, select **On**. Press **OK**.
  - To disable Wi-Fi Direct, select **Off**. Press **OK**.
4. Press **Home**.

**How to enable/disable NFC**

1. Press **Settings > All Settings > Network > NFC**.
2. Do one of the following:
  - To enable NFC, select **On**. Press **OK**.
  - To disable NFC, select **Off**. Press **OK**.
3. Press **Home**.

**Power consumption**

Your machine has a power-saving function. If you deactivate this function or choose to delay its activation, power consumption will increase.