



For detailed machine operation including scanning and troubleshooting tips, see the *Online User's Guide*:

www.95105369.com

**(DCP-T430W / DCP-T435W / DCP-T436W)
兄弟畅享印 (WeChat Mini Program)**

You can print photos and documents using WeChat application "兄弟畅享印", without the need to install an app or a driver. Register your machine before using this feature for the first time. Visit the QR code on the right for the instruction.



Machine Settings

Configure your machine's settings using one of these applications, which you can download from www.95105369.com:


 Brother iPrint&Scan	 (DCP-T430W/DCP-T435W/ DCP-T436W/DCP-T439W)
or Brother Utilities	 Brother Mobile Connect

Important Notice for Network Security: The default password to manage this machine's settings is located on the back of the machine and marked "Pwd". We recommend immediately changing the default password to protect your machine from unauthorized access. For more information, see the *Online User's Guide*.


Control Panel Overview

The illustrations in this guide may not match your model exactly, but the explanations are the same for each model.

DCP-T230/DCP-T236/DCP-T238

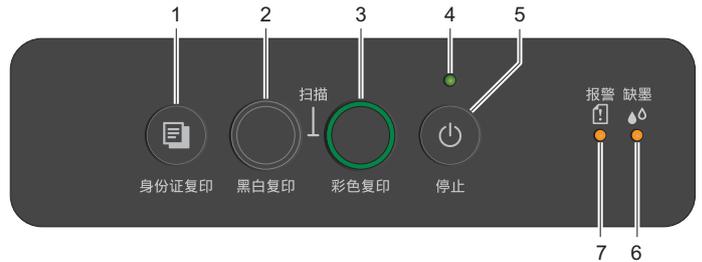

DCP-T430W/DCP-T435W/DCP-T436W/DCP-T439W

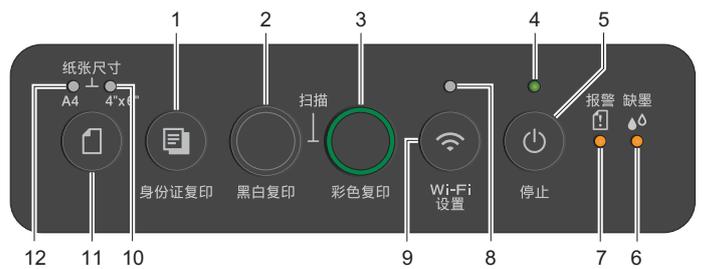

1	<ul style="list-style-type: none"> Copy Shortcut button (DCP-T230/DCP-T236/DCP-T238/DCP-T430W/DCP-T435W/DCP-T436W) Upload button (DCP-T439W) 	7	Paper Warning LED
2	Mono Copy Button	8	Wi-Fi LED
3	Colour Copy Button	9	Wi-Fi Button
4	Power LED	10	Photo LED
5	Power / Stop Button	11	Paper Button
6	Ink LED	12	Document LED

Press to turn the machine on. Press and hold to turn the machine off.


(DCP-T430W/DCP-T435W/DCP-T436W/DCP-T439W)


Change the paper settings from the control panel

You can print or copy using the following paper settings, depending on the number of times you press .

Paper Button	LED Indications	Paper Settings
 (Default)		When printing standard documents: • Paper type: Plain , Paper size: A4
 x 1		When printing photos: • Paper type: Other glossy , Paper size: 4" x 6" (10 cm x 15 cm)
 x 2		Custom - To change these settings, access the Print menu in Web Based Management using either the Brother Mobile Connect app on your mobile device or the Brother iPrint&Scan app on your computer. For details, see the <i>Online User's Guide</i> .

LED Indications

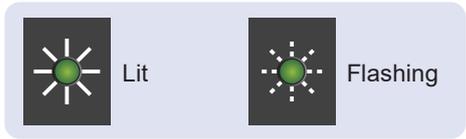

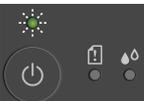-  • Standby
-  • Busy (flashing)
• Sleep (flashing slowly and faintly)
-  • Check ink volume
See *Check Ink Volume* in this guide.
When finished, press **Stop**.
-  (DCP-T430W/DCP-T435W/DCP-T436W/DCP-T439W)
• Ink volume warning
See *Check Ink Volume* in this guide.
When finished, press **Stop**.
-  • Paper jam:
See *Remove Jammed Paper* in this guide.
-  • No paper loaded: Load paper in the tray, and then press **Mono Copy** or **Colour Copy**.
• Tray not detected: Slowly push the paper tray completely into the machine.
-  • Wrong paper size
-  • Out of memory
-  • Machine error

Wi-Fi® (DCP-T430W/DCP-T435W/DCP-T436W/DCP-T439W)



For troubleshooting tips, see the *Online User's Guide*:

www.95105369.com

-   • Network setting error before initial setup:
After completing the setup from your machine, configure the network settings again. For more information, go to your model's FAQs & Troubleshooting page. See the URL below.

www.95105369.com




Copy

- To print a single copy, load your document, and then press **Mono Copy** or **Colour Copy** once.
- To print multiple copies, load your document, and then press **Mono Copy** or **Colour Copy** repeatedly, depending on the number of copies you want.

Scan

To scan a single page, load your document, and then simultaneously press **Mono Copy** and **Colour Copy**. To use this feature, you need to change your machine's settings beforehand. For details, see the *Online User's Guide*.


2 in 1 ID Copy

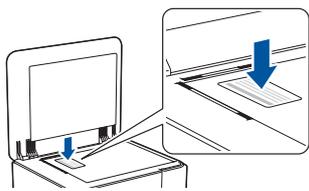


(DCP-T439W:
Upload)



LED flashes slowly after scanning is complete.

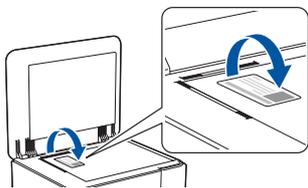


(DCP-T439W:
Upload)

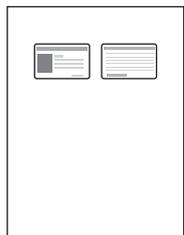

You can set one of the specific copy functions for the **Copy Shortcut** button (see the *Online User's Guide*). The default is 2 in 1 ID Copy.

Check Ink Volume

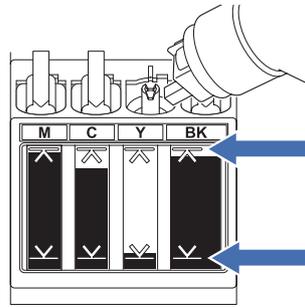


DO NOT fill the ink tank past the maximum fill mark.

When the ink level reaches the lower line, refill the ink tank as soon as possible.

- (DCP-T430W/DCP-T435W/DCP-T436W/DCP-T439W) After refilling the ink, simultaneously press the **Paper** button and **Copy Shortcut (Upload)** button for three seconds.
- If the Ink LED is lit or flashing, press the **Stop** button.

Improve Print Quality

For better print results, clean the Print Head.

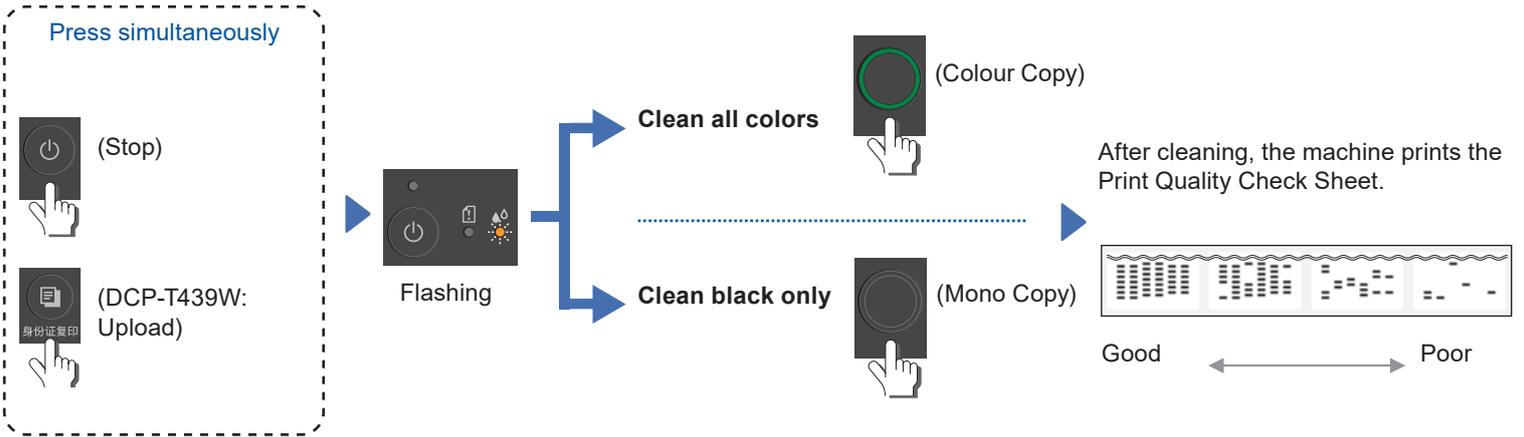

If the print quality does not improve with normal cleaning, try the **Special** cleaning method:

1. Make sure all ink tanks are at least half-full.
2. Use the procedure above, but simultaneously press and hold **Mono Copy** and **Colour Copy** for five seconds while the **Ink LED** is flashing.

Remove Jammed Paper

