

Information for compliance with Commission Regulation (EU) 2023/826

Model Name: HL-L1230W, HL-L1232W

Network Port	Power consumption		Timer Values	
	Networked Standby	Off mode	To Networked Standby	To Off mode
USB	0.9W	N/A	1min	N/A
Wi-Fi	1.3W	N/A	1min	N/A
All network ports activated and connected	1.3W		1min	

How to enable/disable Wireless LAN

- 1. Make sure that the power cord is plugged in and the top cover is closed.
- 2. Press **Power** to turn the machine on and make sure only the **Ready** LED lights up.
- 3. Press the **Wi-Fi** button seven times.

How to enable/disable Wireless Direct

- 1. Make sure that the power cord is plugged in and the top cover is closed.
- 2. Press **Power** to turn the machine on and make sure only the **Ready** LED lights up.
- 3. Press the **Wi-Fi** button five times.

Power consumption  
Your machine has a power-saving function. If you deactivate this function or choose to delay its activation, power consumption will increase.