

Information for compliance with Commission Regulation (EU) 2023/826

Model Name: DCP-L1630W, DCP-L1632W

Network Port	Power consumption		Timer Values	
	Networked Standby	Off mode	To Networked Standby	To Off mode
Ethernet	1.0W	N/A	1min	N/A
USB	1.0W	N/A	1min	N/A
Wi-Fi	1.4W	N/A	1min	N/A
All network ports activated and connected	3.2W		1min	

How to enable/disable Wireless LAN

1. Press **Menu**.
2. Press the **Up** or **Down** arrow key to select **Network** option, and then press **OK**.
3. Press the **Up** or **Down** arrow key to select **WLAN (Wi-Fi)** option, and then press **OK**.
4. Press the **Up** or **Down** arrow key to select **WLAN Enable** option, and then press **OK**.
5. Do one of the following:
 - To enable Wi-Fi, select **On**. Press **OK**.
 - To disable Wi-Fi, select **Off**. Press **OK**.
6. Press **OK**.

How to enable/disable Wi-Fi Direct

1. Press **Menu**.
2. Press the **Up** or **Down** arrow key to select **Network** option, and then press **OK**.
3. Press the **Up** or **Down** arrow key to select **Wi-Fi Direct** option, and then press **OK**.
4. Press the **Up** or **Down** arrow key to select **I/F Enable** option, and then press **OK**.
5. Do one of the following:
 - To enable Wi-Fi Direct, select **On**. Press **OK**.
 - To disable Wi-Fi Direct, select **Off**. Press **OK**.
6. Press **OK**.

Power consumption

Your machine has a power-saving function. If you deactivate this function or choose to delay its activation, power consumption will increase.