## Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)

Model Name:

MFC-L8390CDW, MFC-L3740CDW, MFC-L3740CDWE, MFC-L3760CDW, MFC-L8340CDW MFC-L3720CDW, DCP-L3560CDW, DCP-L3555CDW, DCP-L3520CDW, DCP-L3515CDW DCP-L3520CDWE, DCP-L3527CDW

Network Port	Power consumption		Default Timer Values		Timer Values	
	Networked	I( )tt moda	To Networked	To Off mode	To Networked	To Off mode
	Standby mode		Standby mode		Standby mode	
USB	0.5W	N/A	1min	N/A	0min~20min	N/A
Ethernet	0.7W	N/A	1min	N/A	0min~20min	N/A
Wi-Fi	0.8W	N/A	1min	N/A	0min~20min	N/A
NFC	0.8W	N/A	1min	N/A	0min~20min	N/A
Telecom(FAX)	0.4W	N/A	1min	N/A	0min~20min	N/A
All network ports activated and connected*	5.8W		1min		0min~20min	

<sup>\*</sup>Power consumption is reduced as the number of activated and connected network ports decreases.

#### How to enable/disable wireless LAN (available for certain models)

· LCD models:

Press **Menu** (if available on your machine), and then press **▲** or **▼** to select the following:

- 1. Select [Network]. Press OK.
- 2. Select [WLAN (Wi-Fi) ]. Press  $\mathbf{OK}$ .
- 3. Select [WLAN Enable]. Press OK.
- 4. Select [On] or [Off]. Press OK or Go.
- · Touchscreen models:

### How to enable/disable Wi-Fi Direct (available for certain models)

· LCD models:

Press **Menu** (if available on your machine), and then press **▲** or **▼** to select the following:

- 1. Select [Network]. Press OK.
- 2. Select [Wi-Fi Direct]. Press OK.
- 3. Select [I/F Enable]. Press OK.
- 4. Select [On] or [Off]. Press **OK** or **Go**.
- · Touchscreen models:

### How to enable/disable NFC (available for certain models)

· Touchscreen models:

# Power consumption

Your machine has power-saving functions. If you deactivate this function or choose to delay its activation, power consumption will increase.

### Note

The Auto Power Off function has been updated with the new setting of 20 minutes.