# Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)

Model Name:

HL-L8240CDW, HL-L3240CDW, HL-L3280CDW, HL-L3220CW, HL-L3215CW

HL-L3220CWE, HL-L8230CDW

| Network Port                               | Power consumption |           | Default Timer Values |              | Timer Values |             |
|--|-------------------|-----------|----------------------|--------------|--------------|-------------|
|  | Networked         | IOff mode | To Networked         | LLo Off mode | To Networked | To Off mode |
|  | Standby mode      |           | Standby mode         |              | Standby mode |             |
| USB  | 0.4W              | N/A       | 1min                 | N/A          | 0min~20min   | N/A         |
| Ethernet                                   | 0.5W              | N/A       | 1min                 | N/A          | 0min~20min   | N/A         |
| Wi-Fi                                      | 0.7W              | N/A       | 1min                 | N/A          | 0min~20min   | N/A         |
| NFC  | 0.8W              | N/A       | 1min                 | N/A          | 0min~20min   | N/A         |
| All network ports activated and connected* | 5.8W              |           | 1min                 |              | 0min~20min   |             |

<sup>\*</sup>Power consumption is reduced as the number of activated and connected network ports decreases.

### How to enable/disable wireless LAN (available for certain models)

· LCD models:

Press **Menu** (if available on your machine), and then press **▲** or **▼** to select the following:

- 1. Select [Network]. Press OK.
- 2. Select [WLAN(Wi-Fi)]. Press OK.
- 3. Select [WLAN Enable]. Press OK.
- 4. Select [On] or [Off]. Press OK or Go.
- · Touchscreen models:

```
Press [Settings] > [All Settings] > [Network] > [WLAN(Wi-Fi)] > [WLAN
Enable] > [On] or [Off].
```

# How to enable/disable Wi-Fi Direct (available for certain models)

· LCD models:

Press **Menu** (if available on your machine), and then press **▲** or **▼** to select the following:

- 1. Select [Network]. Press OK.
- 2. Select [Wi-Fi Direct]. Press OK.
- 3. Select [I/F Enable]. Press OK.
- 4. Select [On] or [Off]. Press OK or Go.
- · Touchscreen models:

```
Press | [Settings] > [All Settings] > [Network] > [Wi-Fi Direct] > [I/F
Enable] > [On] or [Off].
```

# How to enable/disable NFC (available for certain models)

· Touchscreen models:

```
Press [Settings] > [All Settings] > [Network] > [NFC] > [On] or [Off].
```

# Power consumption

Your machine has power-saving functions. If you deactivate this function or choose to delay its activation, power consumption will increase.

The Auto Power Off function has been updated with the new setting of 20 minutes.