

**Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)**

Model Name:HL-1210W, HL-1211W, HL-1212W, HL-1212WVB, HL-1222WE, HL-1223WE

Network Port	Power consumption		Default Timer Values		Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode	To Networked Standby mode	To Off mode
USB	0.7W	N/A	1min	N/A	0min~20min	N/A
Wi-Fi	1.2W	N/A	1min	N/A	0min~20min	N/A
All network ports activated and connected*	1.3W		1min		0min~20min	

\*Power consumption is reduced as the number of activated and connected network ports decreases.

**How to enable/disable Wireless LAN**

To deactivate the wireless function, press the WiFi button on the machine 7 times.

To activate the wireless function again, press the WPS or AOSS™ button on your wireless LAN access point/router, and then press and hold the WiFi button on your machine for 2 seconds.

**Power consumption**

Your machine has power-saving functions. If you deactivate this function or choose to delay its activation, power consumption will increase.